


Assembly Instructions

MODEL:AM948

PRODUCT SIZE(LxWxH): 8X16

PLEASE READ CAREFULLY BEFORE ASSEMBLY

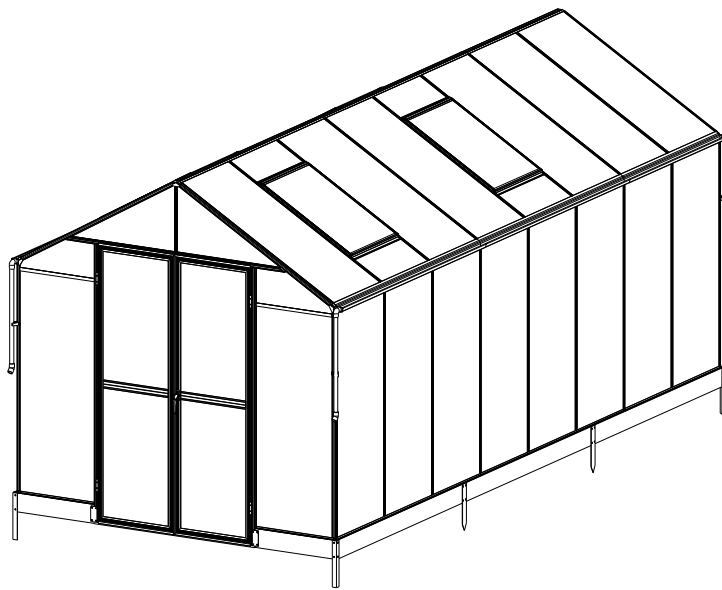

Greenhouse 8x16 FT Assembly Instruction

SKU:

1007040032B(BOX 1)

1007040033B(BOX 2)

Arrive in 2 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.

Email Address:cs@howedirect.com

Tel: 901-347-2181

Service Time: 8 am - 5 pm (central time) Monday- Friday.

If no one picks up, please call several more times

2023/6/21


CONTENTS

1. Assembly Advice	Page 1
2. Product Features	Page 2
3. Parts List	Page 3 -5
4. Door Assembly	Page 6 - 10
5. Roof Vent Assembly	Page 11 - 13
7. Base Assembly	Page 14-15
8. Framework & Glazing Assembly	Page 16 - 38


Assembly and Maintenance Advice

1. For safety purposes, we strongly recommend that this product is assembled by at least two people.
2. Some components have sharp metal edges. Please be careful when handling metal components. Please wear gloves, shoes and safety goggles during assembly.
3. Lay all of the components on a soft carpet or blanket to avoid any scratches or damages.
4. DO NOT climb or stand on the roof. Heavy articles should not be leaned against the greenhouse.
5. Keep the roof and gutter clear of snow, dirt & leaves. Allowing snow to build up on the roof may damage the product.
6. Unlike steel, if the paint finish is scratched this will not harm the aluminium underneath.
7. When your product needs cleaning, use a mild detergent solution and rinse with cold clean water. Do not use acetone, abrasive cleaners or strong detergents to clean the panels.

Tools Provided:

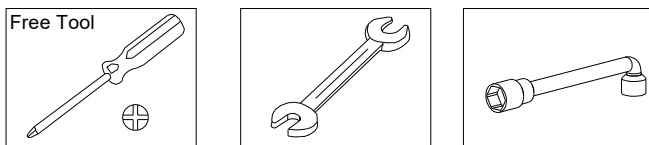

Tools Required when Assembly (Not Provided)

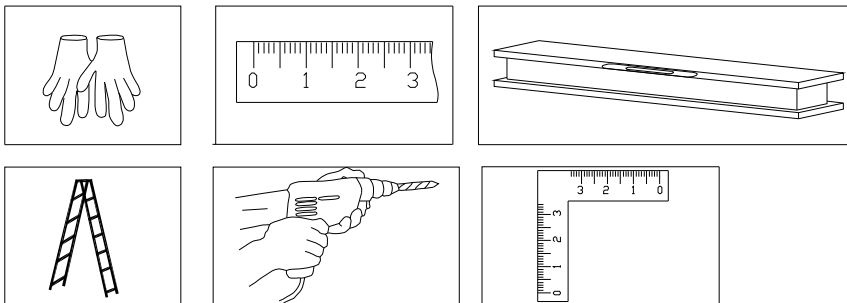

Assembly at least by two Persons




Important:


Rubber is not provided if you choose polycarbonate sheet as glazing panel.

Functions and Features:


1. The strong two part eaves beam includes an integral gutter. Downpipes are also included as standard so you can collect rainwater.

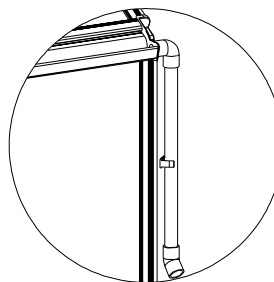

2. Manual window handles are included as standard with the roof vents. If required, automatic roof vent openers are available as an inexpensive optional extra.

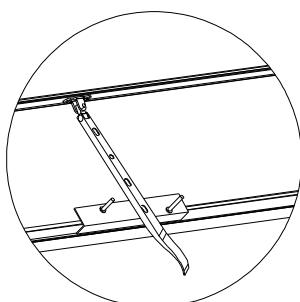


Manual Opener

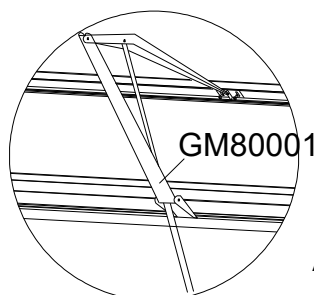



Automatic Opener



GM80001 is sold separately




3. Remove approximately 2 inches of film from all sheet edges before installing and remove all film immediately after the construction is completed. Please ensure that the side with the white film faces outwards.

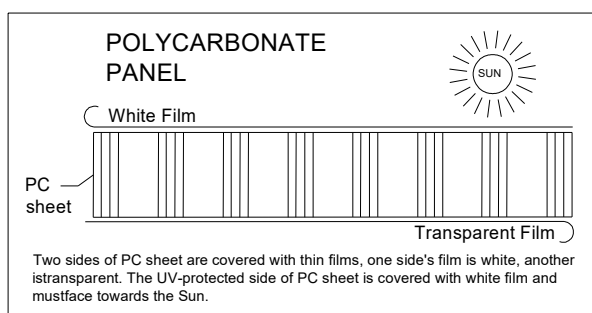

4. This quality greenhouse features self-tapping screws to provide strong joints. As the name suggests, the screws tap their own thread. Driving in self-tapping screws requires more force than conventional screws. A powered screwdriver is therefore recommended.
5. Nuts not to be tightened before the end of assembly! Unless otherwise stated, do not tighten the bolts/nuts/screws until the shed is finally erected!

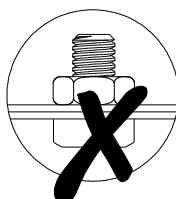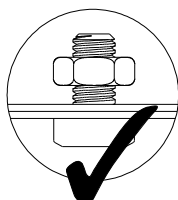

	PART	NO	QTY
1	 1447mm	L01A	1
		L01B	1
2	 420mm	L02C	2
		L04K	4
3	 292mm	L05B	5
4	 1181mm	L06K	1
5	 1772mm	L06L	2
6	 1181mm	L07K	2
7	 1772mm	L07L	4
8	 1181mm	L08K	2
9	 1772mm	L08L	4
10	 550mm	L08E	1
		L08F	1
11	 1182mm	L09K	2
12	 1773mm	L09L	4
13	 A:560 B:1122 C:1143	L10A	2
		L10B	1
		L10C	1

	PART	NO	QTY
14	 B:1102 K:1162	L23B	2
		L23K	4
15	 1753mm	L23L	8
16	 G:541 E:600	L23G	2
		L23E	6
17	 650mm	L25	4
18	 A:1776 H:1610	L26A	1
		L26H	1
19	 B:1776 G:1610	L26B	1
		L26G	1
20	 1656mm	L26C	2
21	 1656mm	L26D	1
22	 540mm	L02D	6

door



	PART	NO	QTY
23	 1760mm	L16A	2
		L17	2
24	 464mm	L17	2
25	 546mm	L18A	2
		L18B	2
26	 1792mm	L18C	1
27	 1792mm	L18D	1


windowsX4



	PART	NO.	QTY.
28	 584mm	L11K	4
		L12K	4
29	 748mm	L19	8
	 584mm	L20K	4
	 584mm	L21K	4

PART	NO	QTY
	A2	2
	B2	2
A2:579 B2:1150	K2	4
K2:1595 K3:1595	K3	2
	D306	4
	D307	5
	D317	2





PART	NO	QTY
	Y1	2
245X558mm		
	Y2	6
1425X558mm		
	Y3	2
448X776mm		
	Y4	2
245X558mm		
	Y16	16
1468X588mm		
	Y17	12
1271X588mm		
	Y8	2
448X776mm		
	Y9	2
243X558mm		
	Y20	4
726X582mm		
	Y11	4
841X484mm		
	Y19	8
243X588mm		


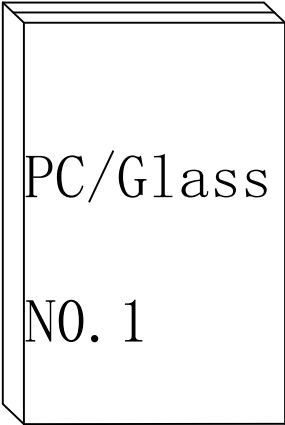


PART	NO	QTY
	J55	2
	J56R	2
	J56L	2
	J94	4
	J93	4
	J165	4
	J166	4
	A01	4
	A03	4
	A51	4
	D17	8
	D25	4
	D26	2
	D45	8
	D309	4

Tools Provided:




PART	NO	QTY
	S01 M6X12	375
	M01 M6	375
	Z02 Ø4X16D	32
	Z04 Ø4X8	8
	Z08 M4.2X16	94
	Z17 M4.8X16	8
	D114	20
	S69 M6X60	20

	PART	NO	QTY
1		L01E	1
		L01F	1
2		L01C	2
		L01D	2
3		L02A	2
		L02A	2
4		L02B	2
		L02B	2
5		L03A	2
		L03A	2
6		L03B	2
		L03B	2


PART	NO	QTY
	Y1	2
	Y2	6
	Y3	2
	Y4	2
	Y8	2
	Y9	2
	Y16	16
	Y17	12
	Y19	8
	Y20	4
	Y11	4

Panel Exploded View


Back Wall

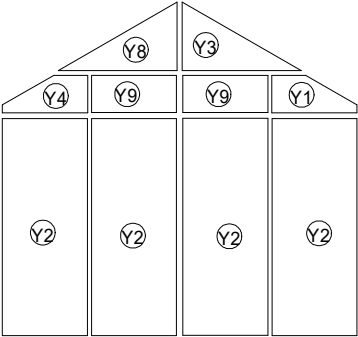



Side Wall

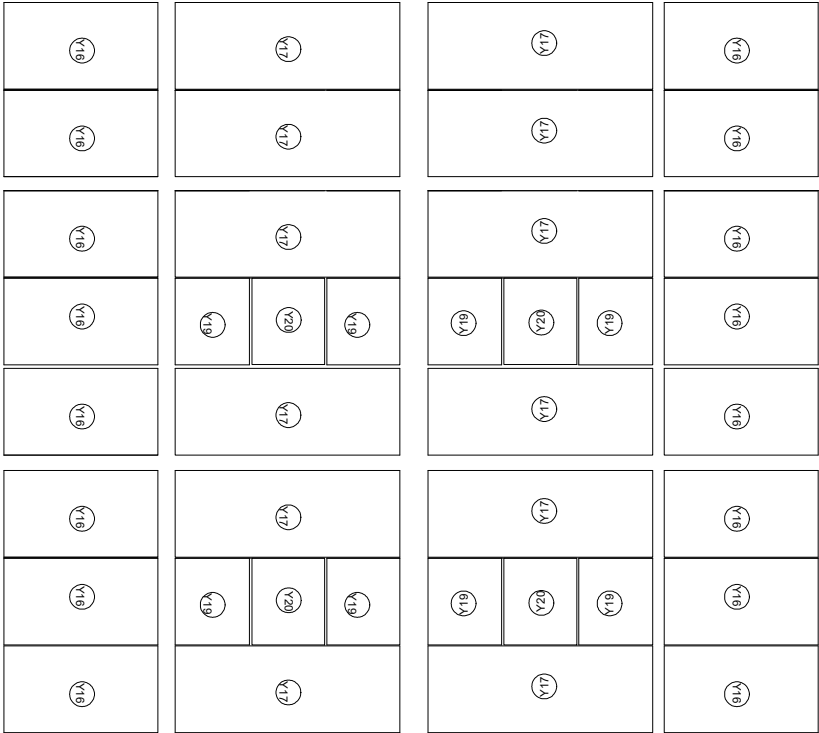

Side Wall

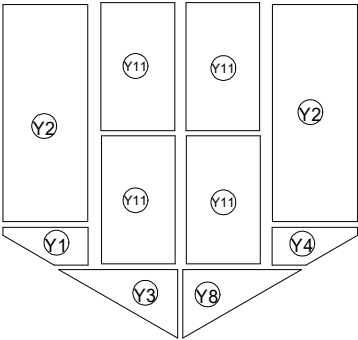


Front Wall



PART	NO	QTY
	L16A	2
	L17	2
	L18A	2
	L18B	2
	L18C	2
	L18D	1
	D45	8
	S26	8
	M5X12	
	Z08	32
	M4.2X16	
	Y11	4

Exploded View


Left Door

Right Door

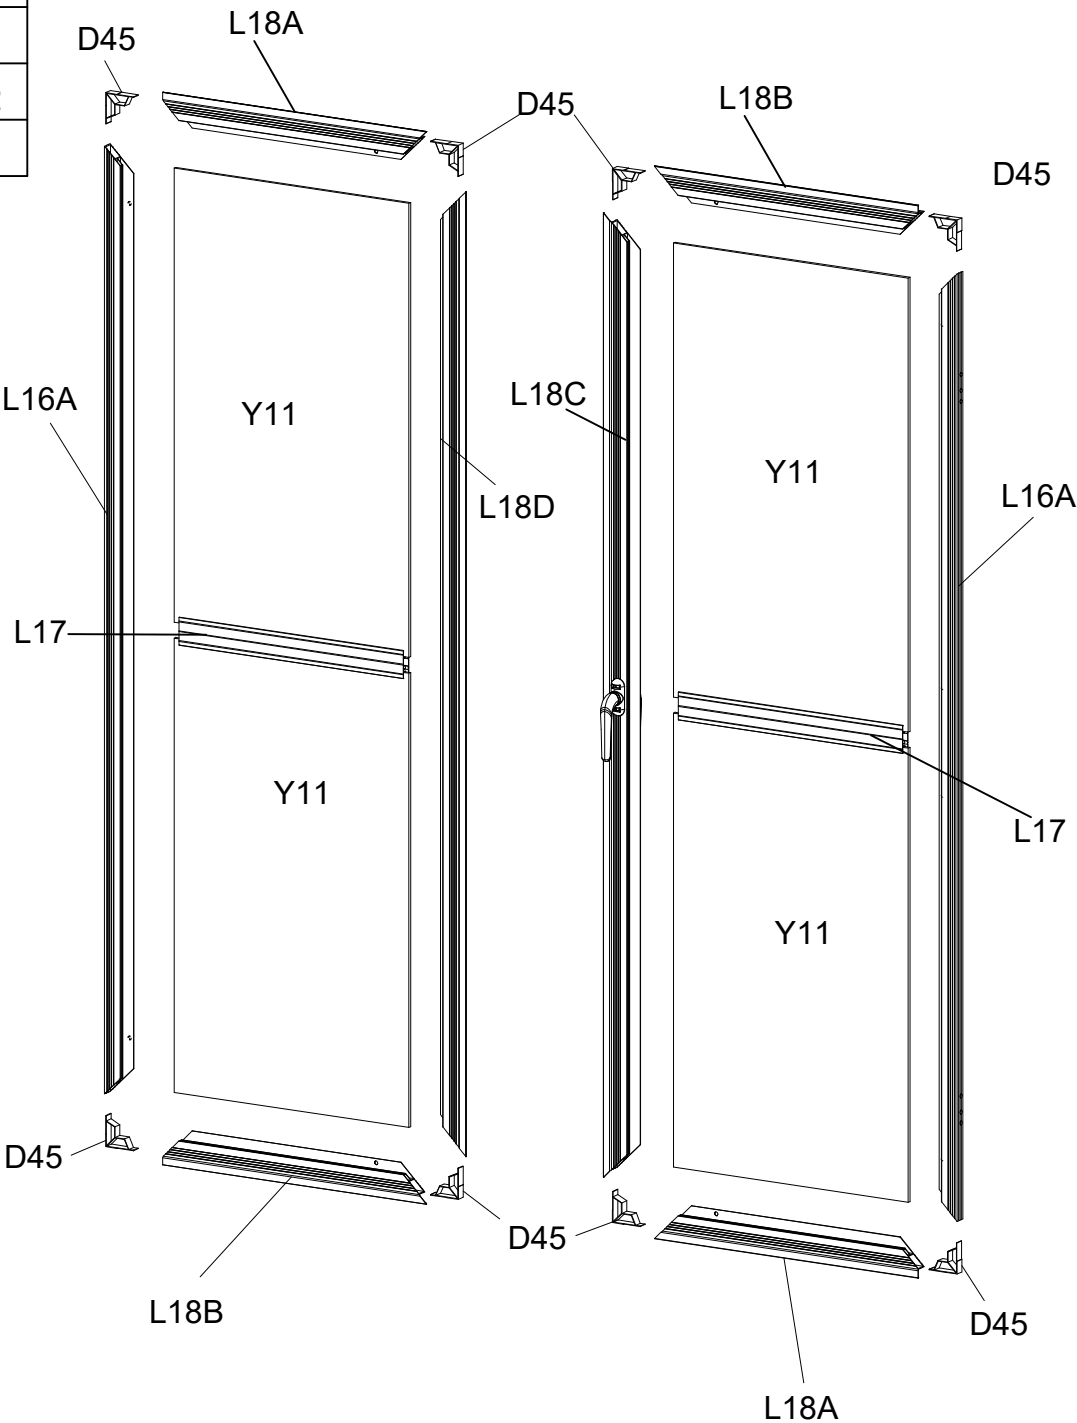


PART	NO	QTY
	L16A	1
	L17	1
	L18A	1
	L18B	1
	L18D	1
	D45	4
	S26	4
	M5X12	
	Z08	16
	M4.2X16	
	Y11	2


Left Door

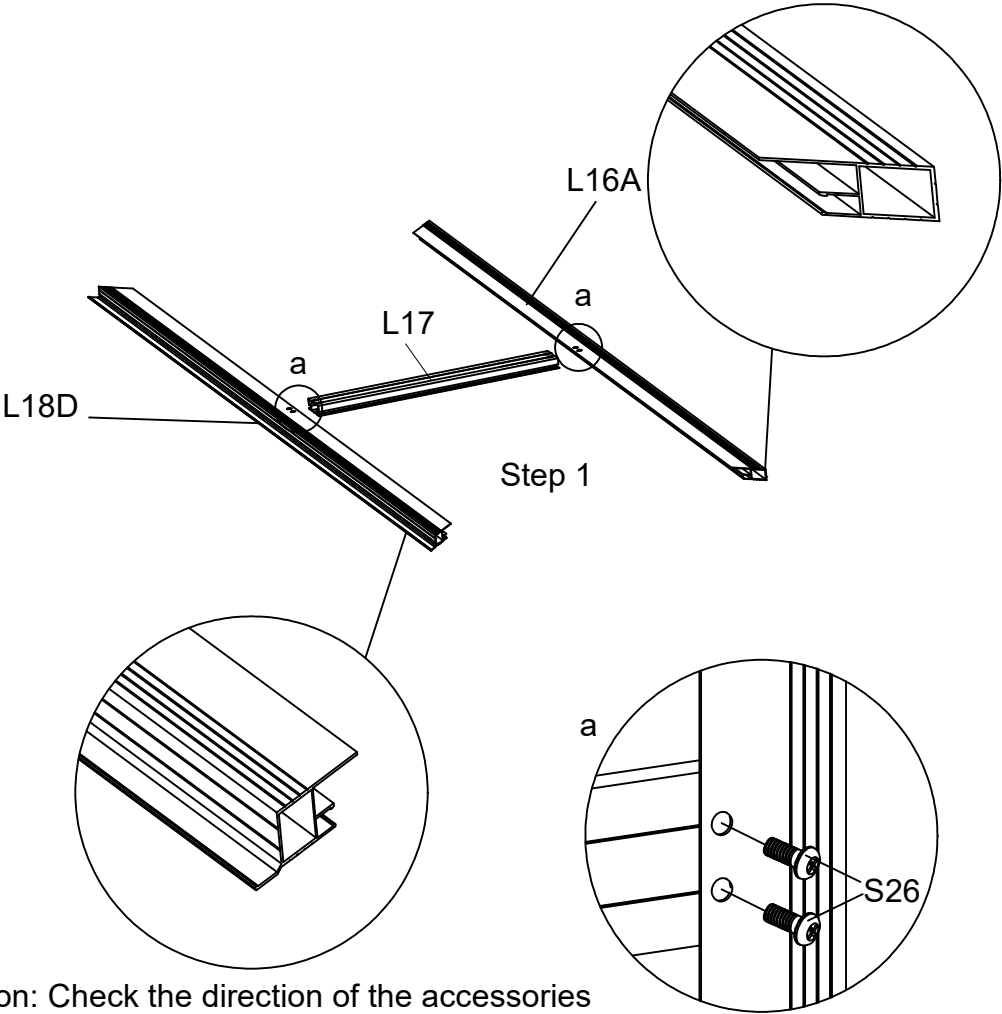


! Attention: Check the direction of the accessories

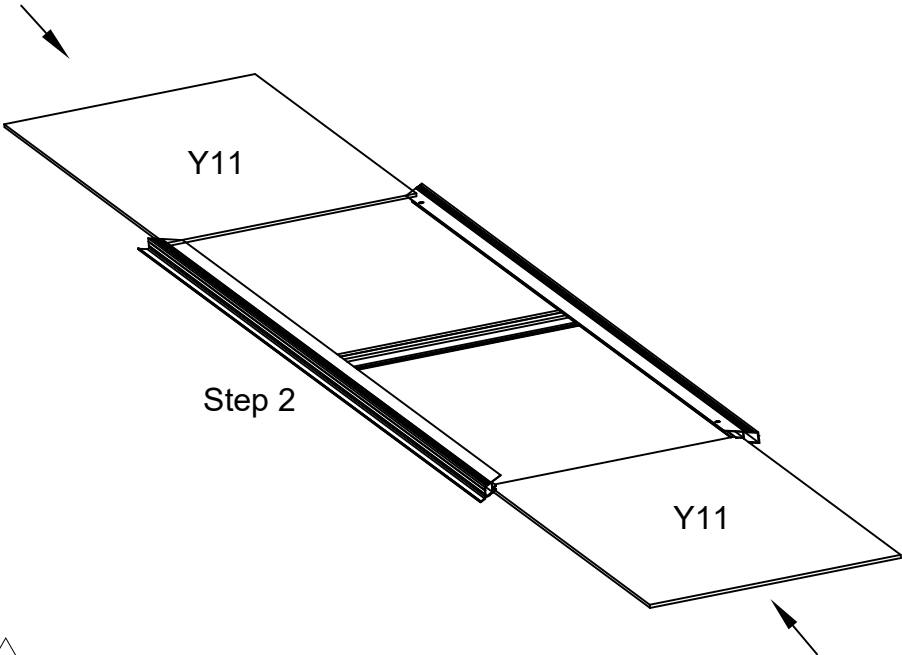


! Attention:Remove the protective films from both sides of each polycarbonate panel, before inserting into aluminum channels. Ensure the milky white film faces towards the Sun.

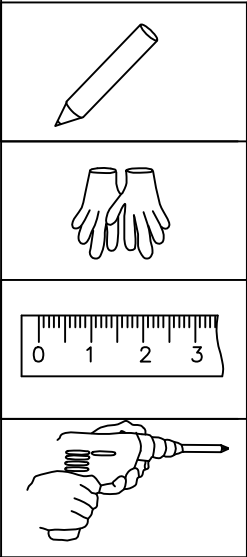


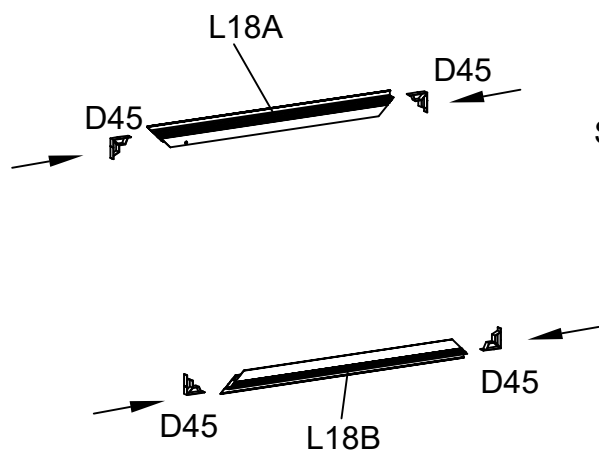



Step 3

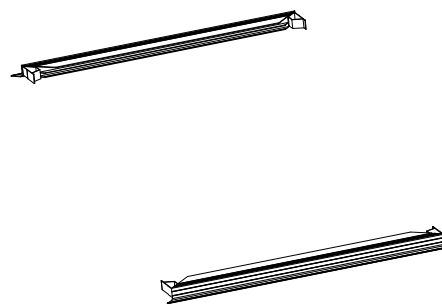



Attention! When installing the D45, you need to use a rubber mallet to lightly tap the snap into.

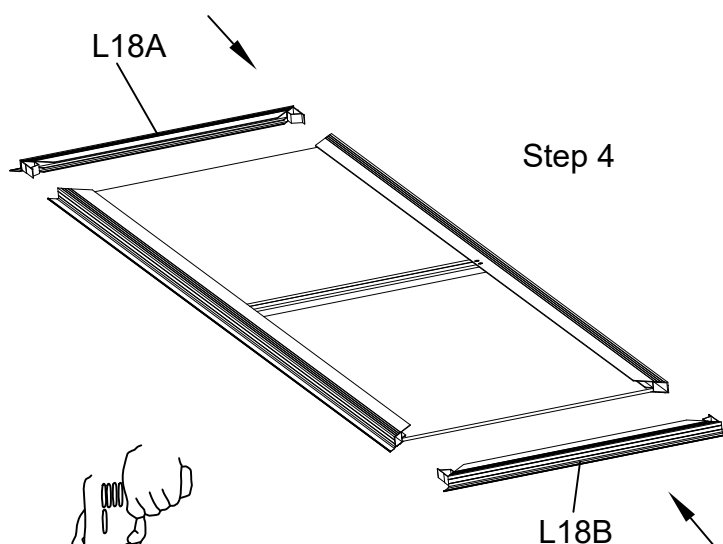


Step 4

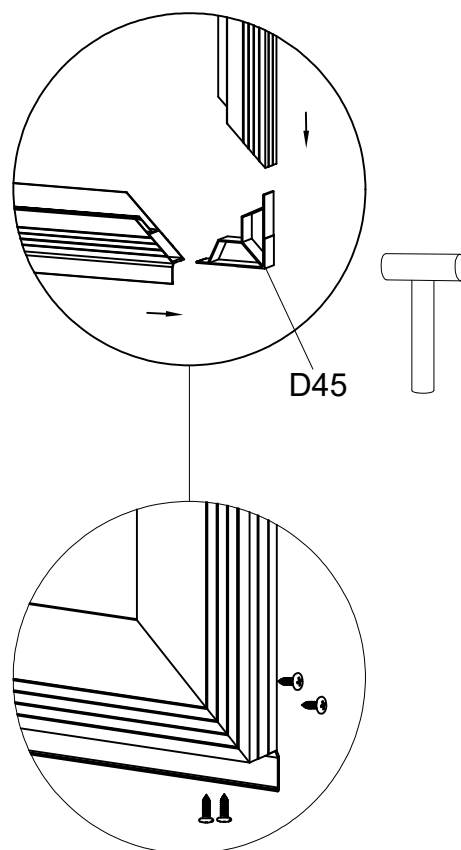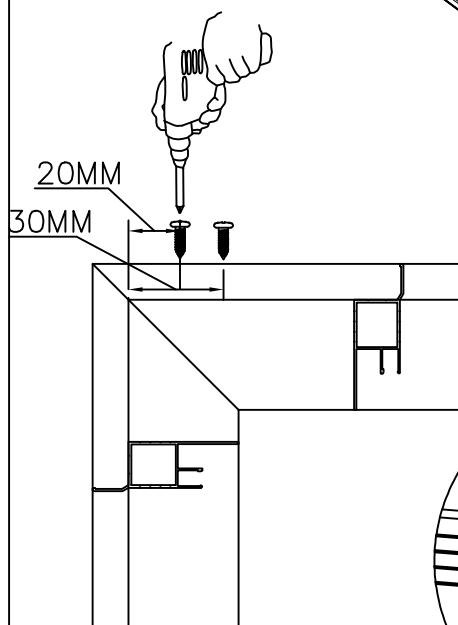



Insert Connector D45 into each end of frame profiles L16B & L18A & L18B & L18D, and then fix them with screws Z08. fixing with screws, and make sure there is no gaps between each profile.

PART	NO	QTY
	L16A	1
	L17	1
	L18A	1
	L18B	1
	L18C	1
	D45	4
	S26	4
	M5X12	
	Z08	16
	M4.2X16	
	Y11	2


Right Door

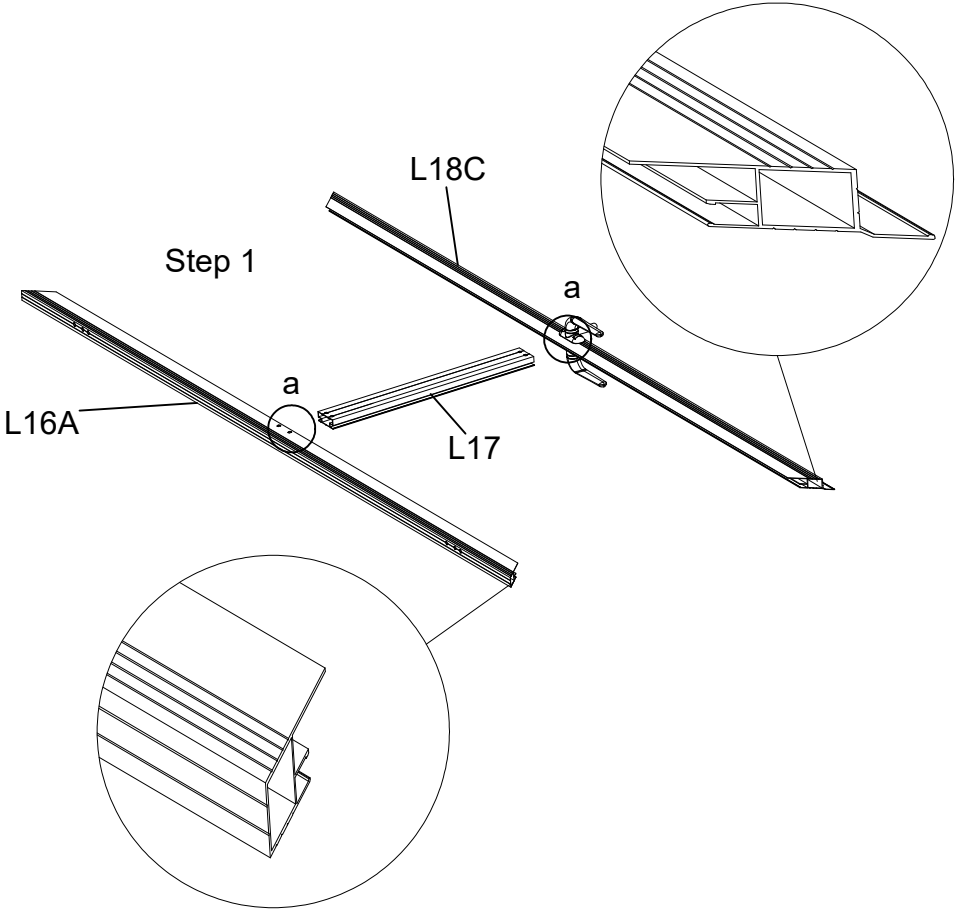





 ! Attention: Check the direction of the accessories

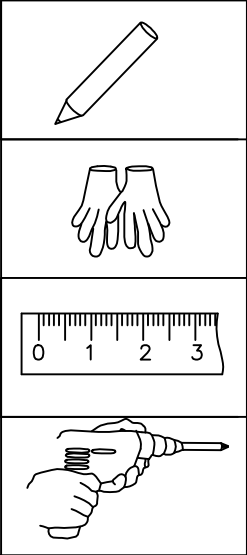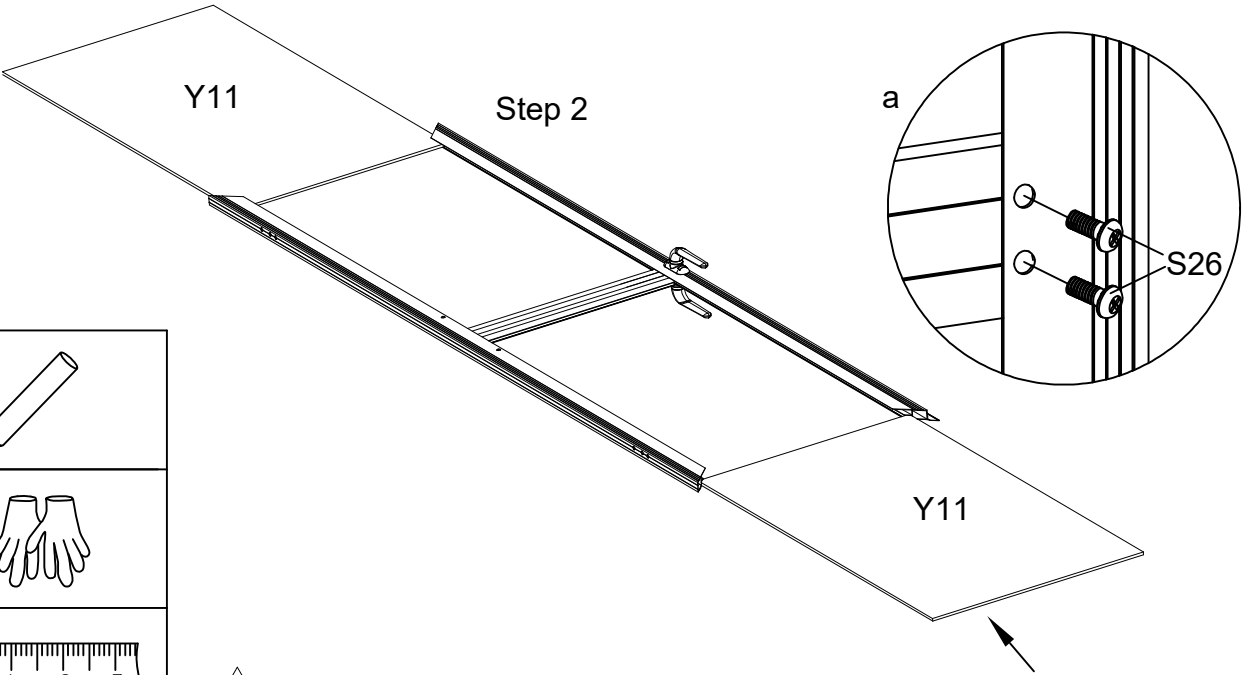





 ! Attention: Remove the protective films from both sides of each polycarbonate panel, before inserting into aluminum channels. Ensure the milky white film faces towards the Sun.

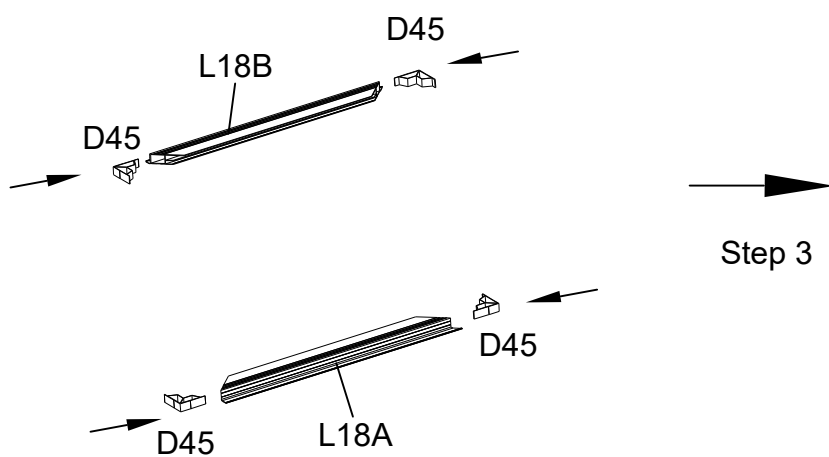

Attention! When installing the D45, you need to use a rubber mallet to lightly tap the snap into.

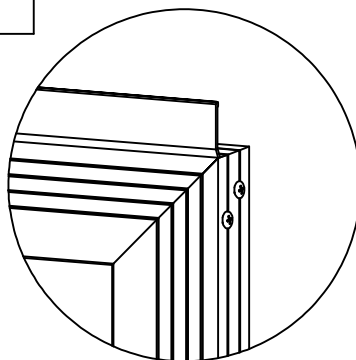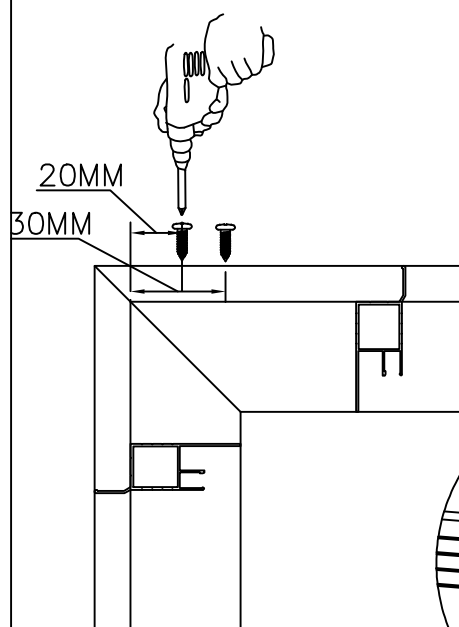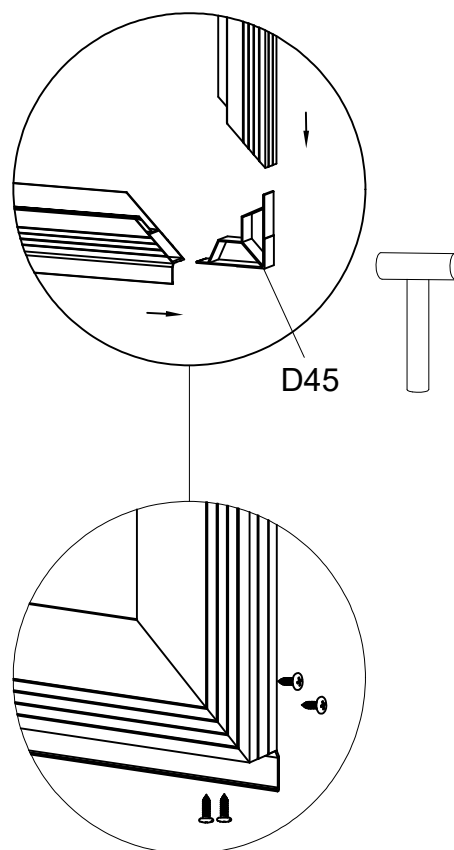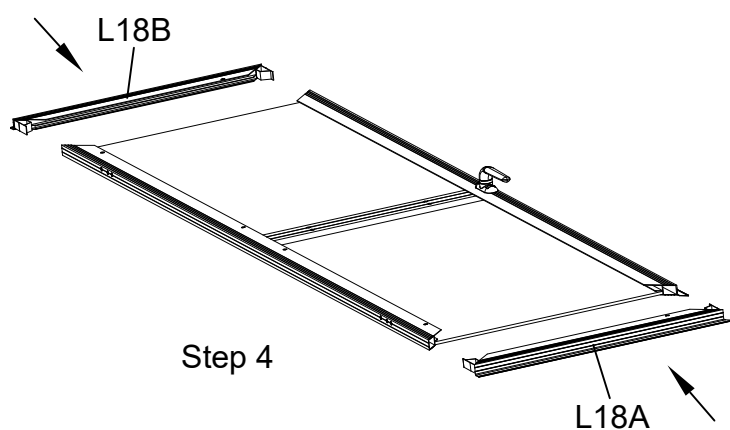





Insert Connector D45 into each end of frame profiles L16B & L18A & L18B & L18D, and then fix them with screws Z08. fixing with screws, and make sure there is no gaps between each profile.

PART	NO.	QTY.
	L11K	4
	L12K	4
	L19	8
	L20K	4
	L21K	4
	Y10	4
	A01	4
	Z02 Ø4X16D	24
	Z04 Ø4X8	8
	Z08 M4.2X16	8


Exploded View

Window X 4

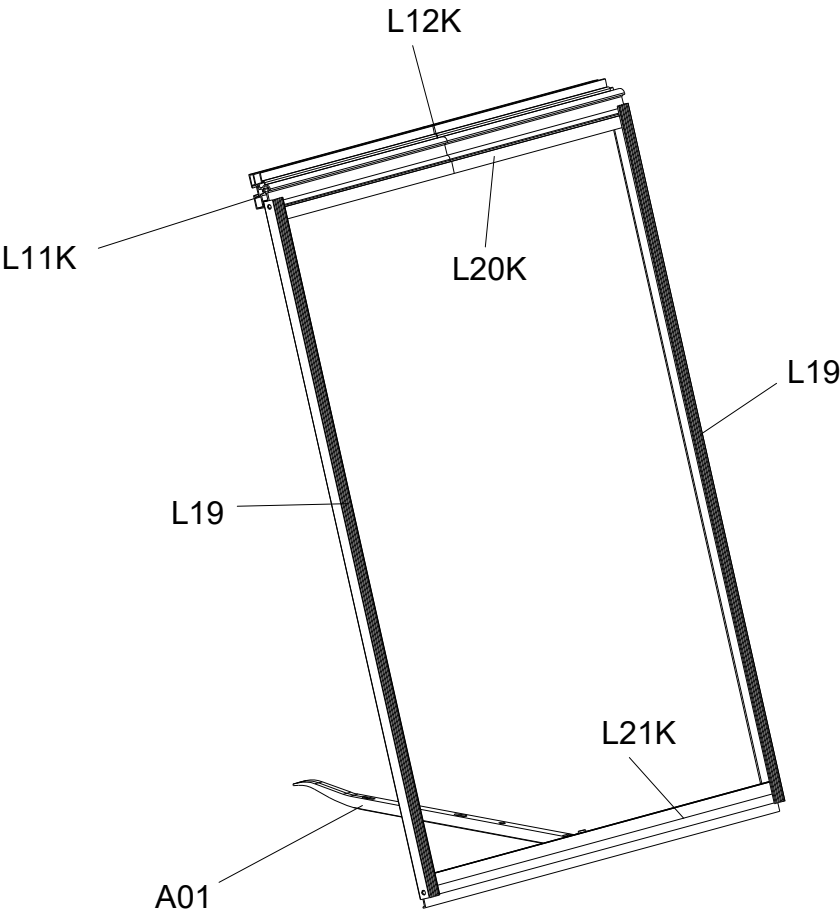


PART	NO.	QTY.
	L11K	1
	L12K	1
	L19	2
	L20K	1
	L21K	1

Part	NO.	QTY.
	Y10	1
	A01	1
	Z02 Ø4X16D	6
	Z04 Ø4X8	2

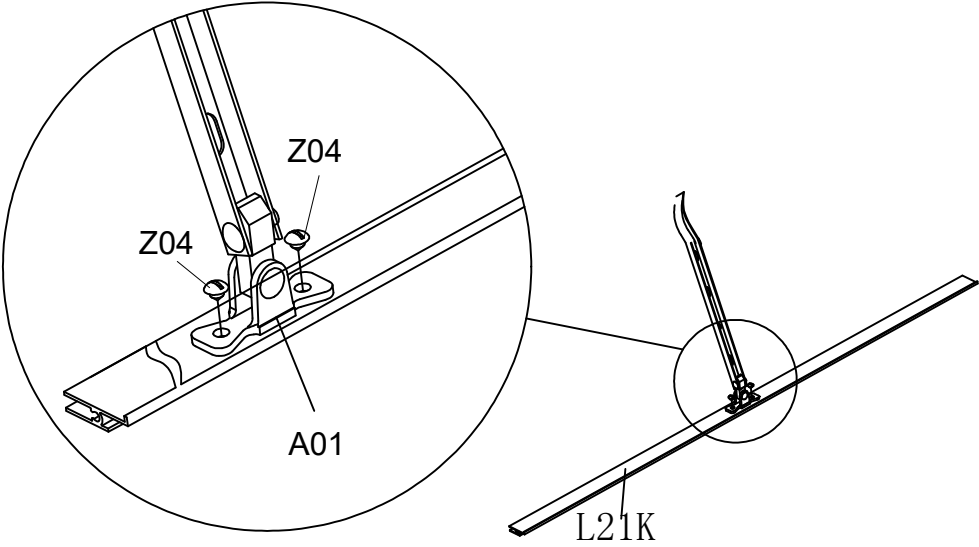




Step 1

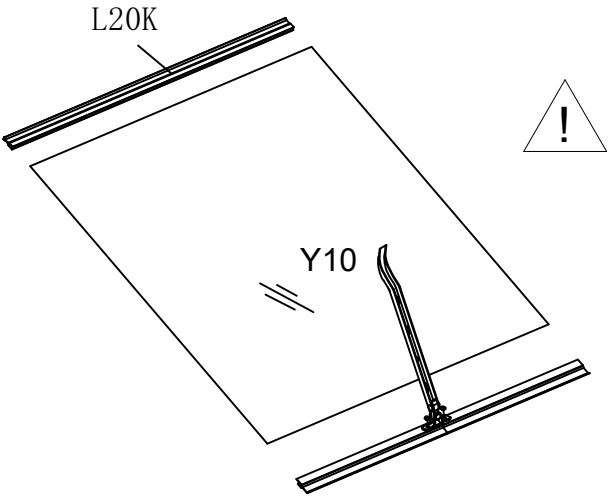

Step 2






! Attention: Remove the protective films from both sides of each polycarbonate panel, before inserting into aluminum channels. Ensure the milky white film faces towards the Sun.

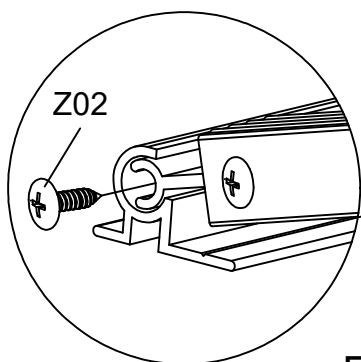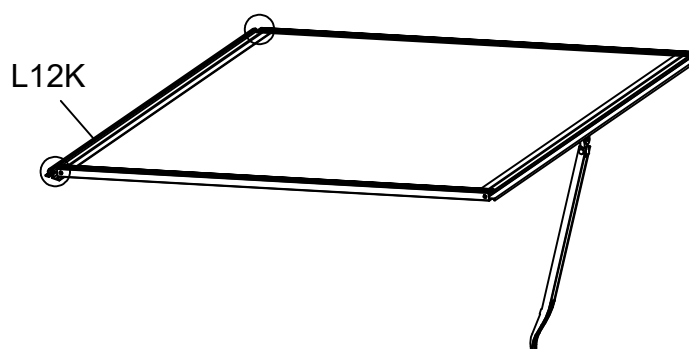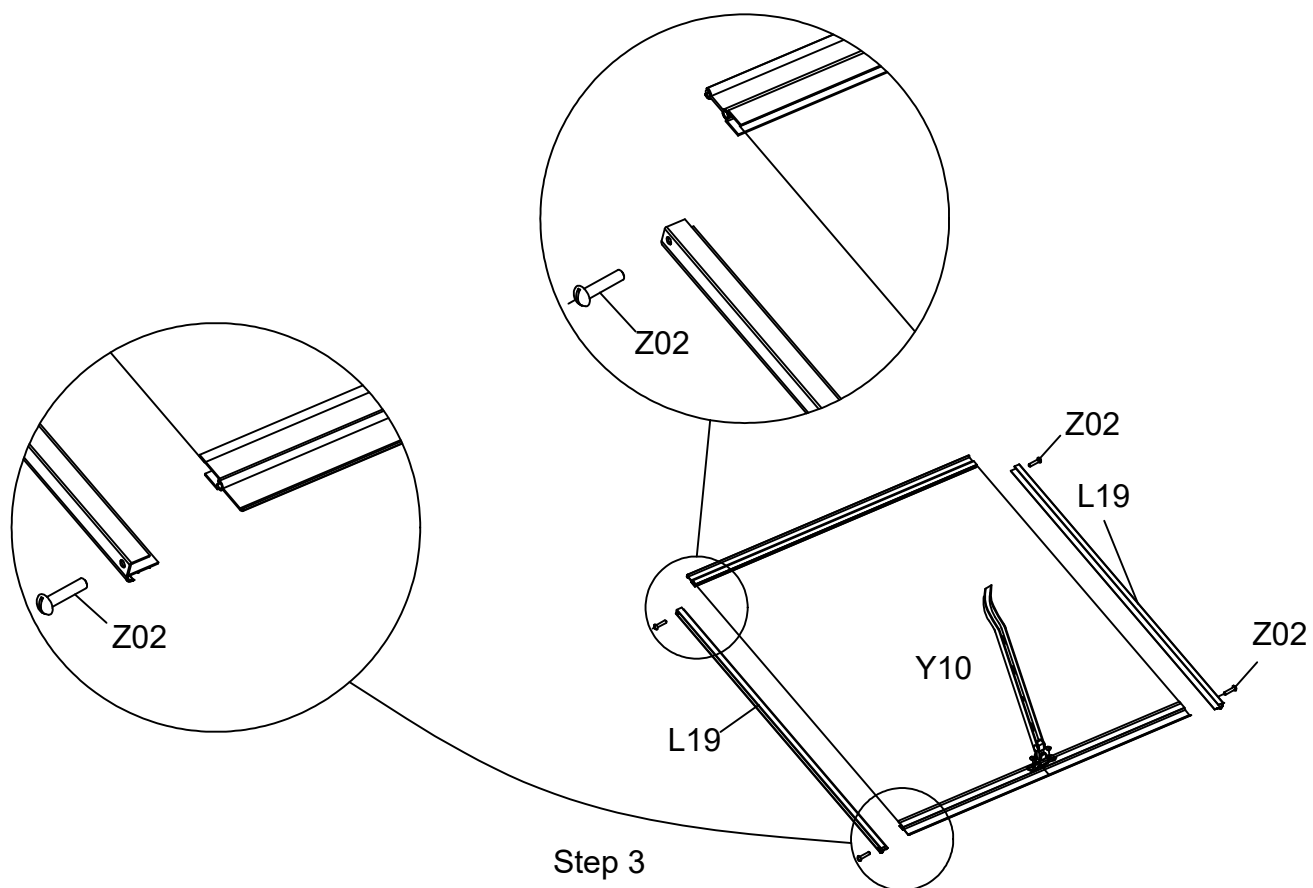

Four windows are standard

PART	NO	QTY
	B2	2
	A2	2
	K2	4
	K3	2
	D306	4
	D307	5
	S01 M6X12	36
	M01 M6	36


Base Assembly

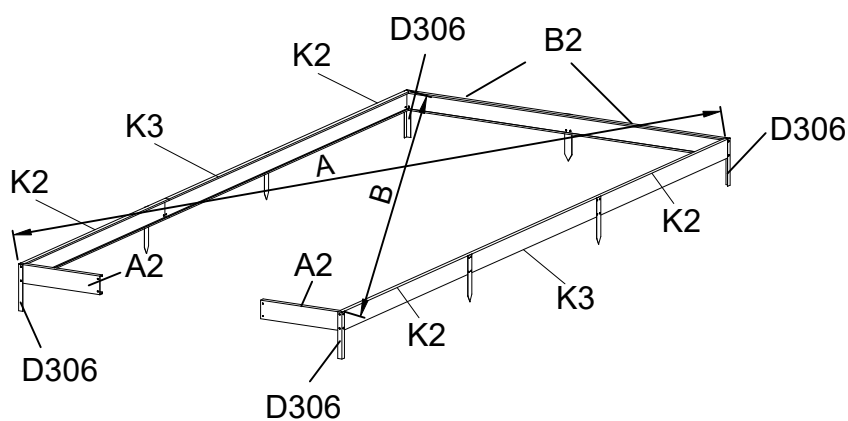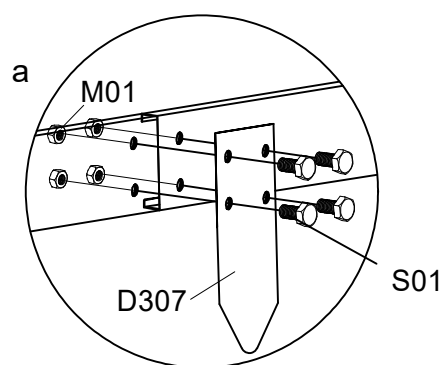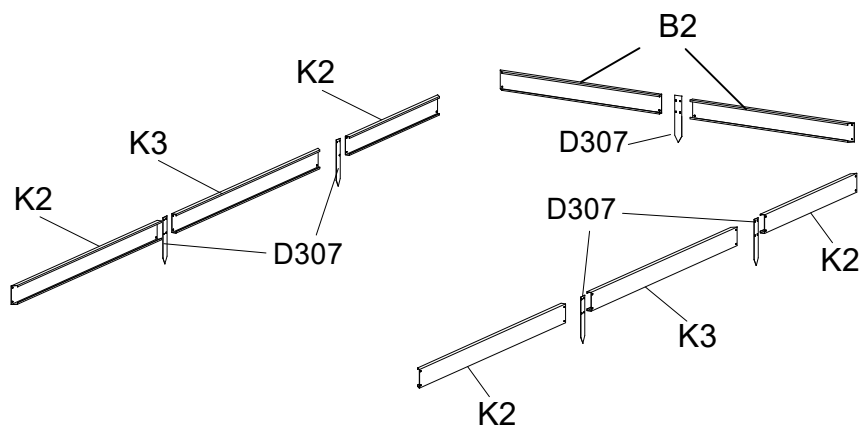

Attention! D306 and D307 must be inserted into the soil or installed in reverse!

Ⓐ = Ⓑ


Fix the base before assembly the greenhouse. This is the way to fix the base.

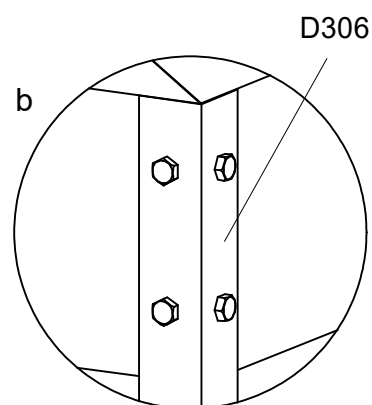

Base Assembly




! Attention: Turn over the steel plinths D306 & D308 to complete the base installation as shown below, when the greenhouse is NOT inserted and secured into the soft soil.






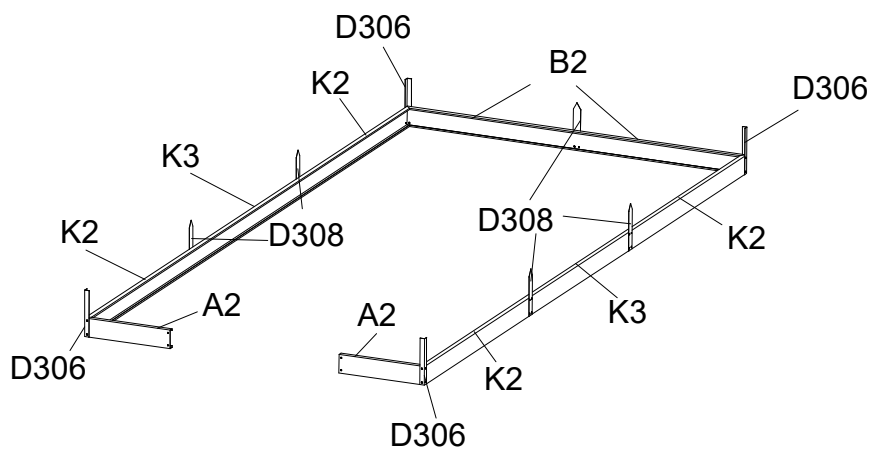




PART	NO	QTY
	D114	20
	S69 M6X60	20

Base Assembly

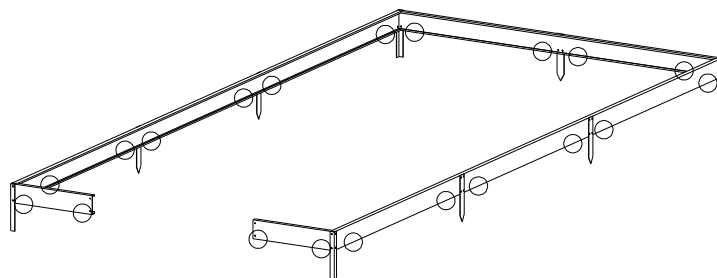


1. Fix the base anchor clip D114 onto each base section with a distance of 5~10CM from each end.
2. Mark the middle of the D114 hole to drill the $\varnothing 8$ hole, then use S69 to fix the D114 to the ground

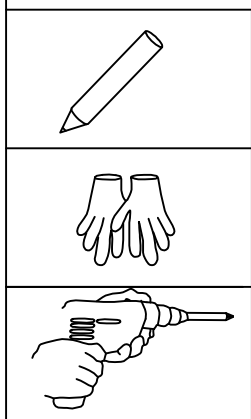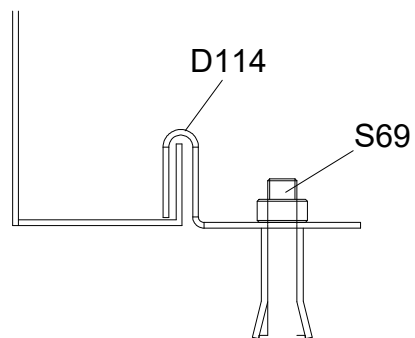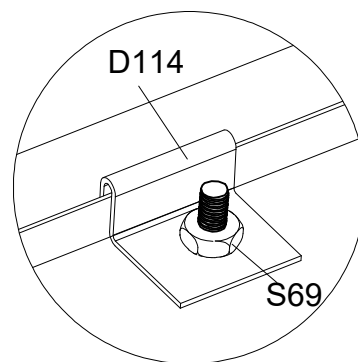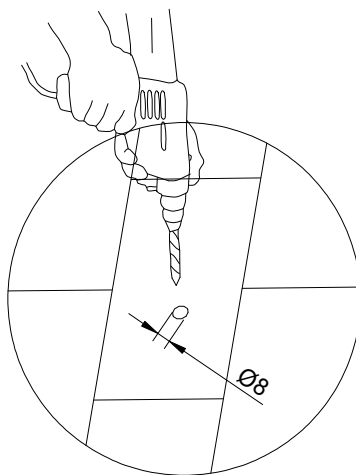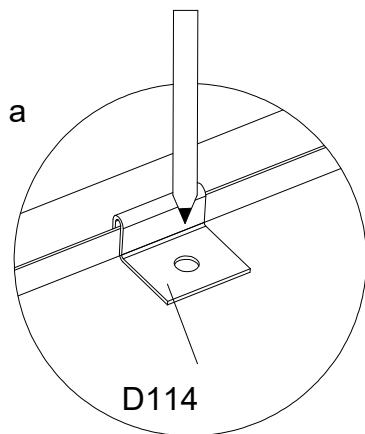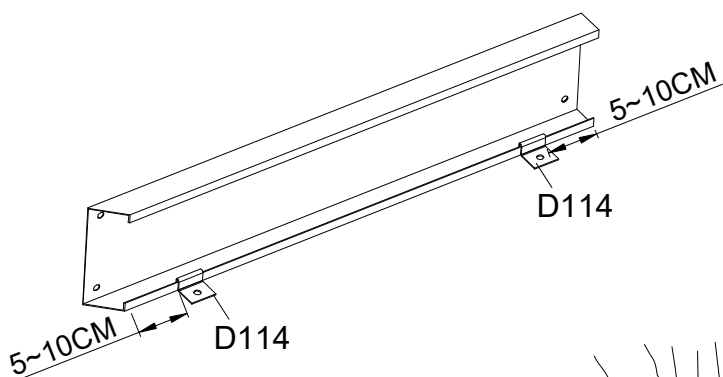


PART	NO	QTY
	L01E	1
	L01F	1
	L08K	2
	L10A	2
	L10B	1
	S01	4
	M6X12	
	M01	4
	M6	
	Z08	8
	M4.2X16	


Wall Assembly

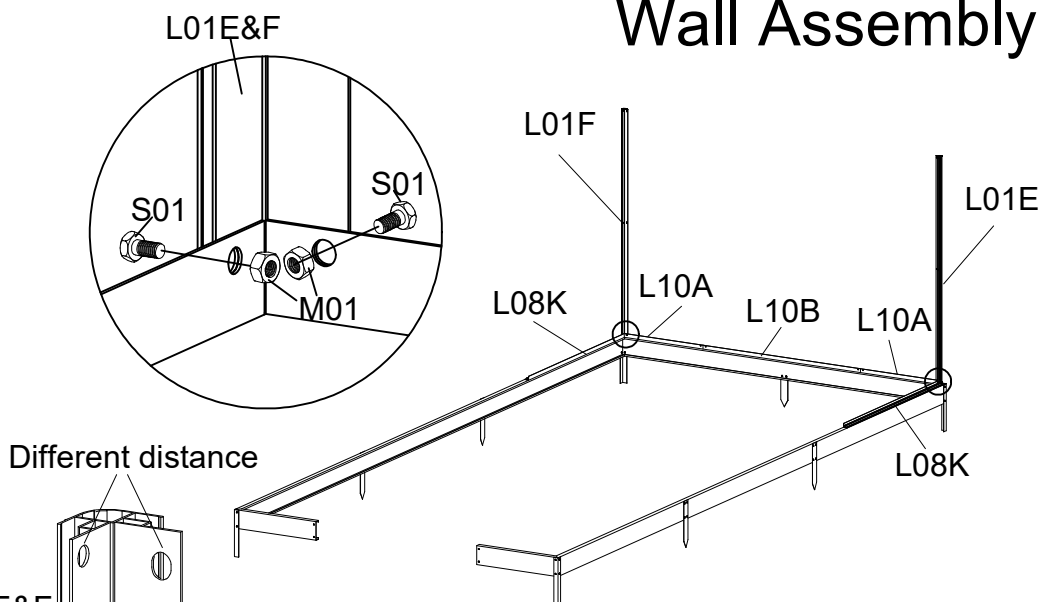

Attention! L01E, L01F holes with different distances should be installed facing upwards.



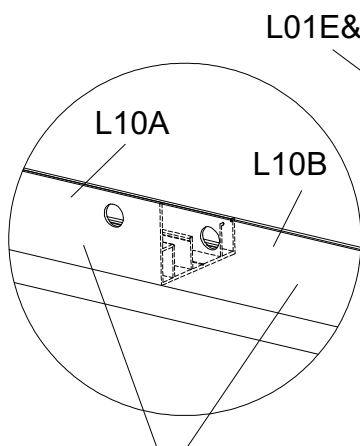


Line up from inside

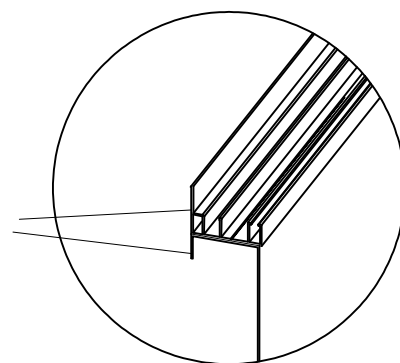



Make sure they line up from inside with the base plinth before fixing them with Z08

1. Place L10A, L10B, L01E, L01F & L08K on the base plinth (B2 & C2), then fix them together using S01 & M01 as shown. Make sure they line up from inside of the base plinth.
2. Use a powered screwdriver to fix the self-tapping screws (Z08) through the cills (L10A, L10B & L08K) and base plinth (B2, C2 and A2). The screws should be evenly spaced to ensure a neat appearance. The recommended spacing of the screws is 460mm. You can mark the painted surfaces with a pencil.

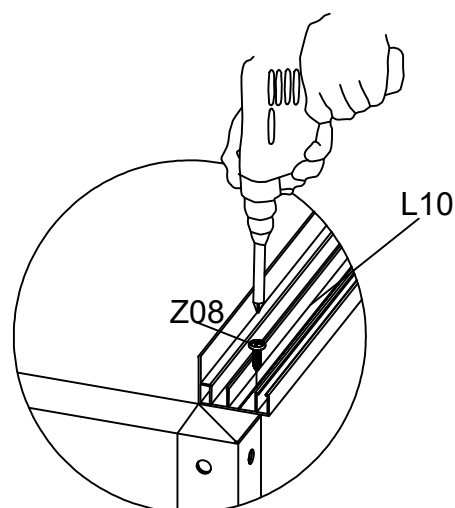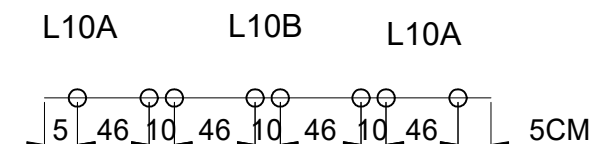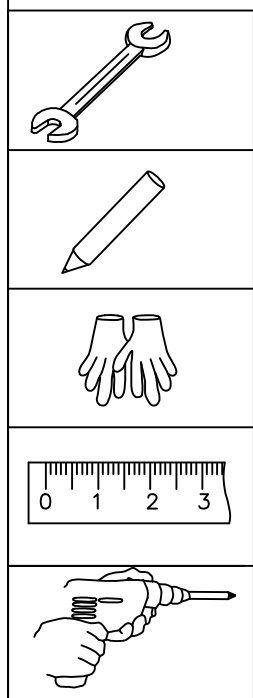



PART	NO	QTY
	L23B	2
	L26D	1
	S01 M6X12	6
	M01 M6	6


Wall Assembly

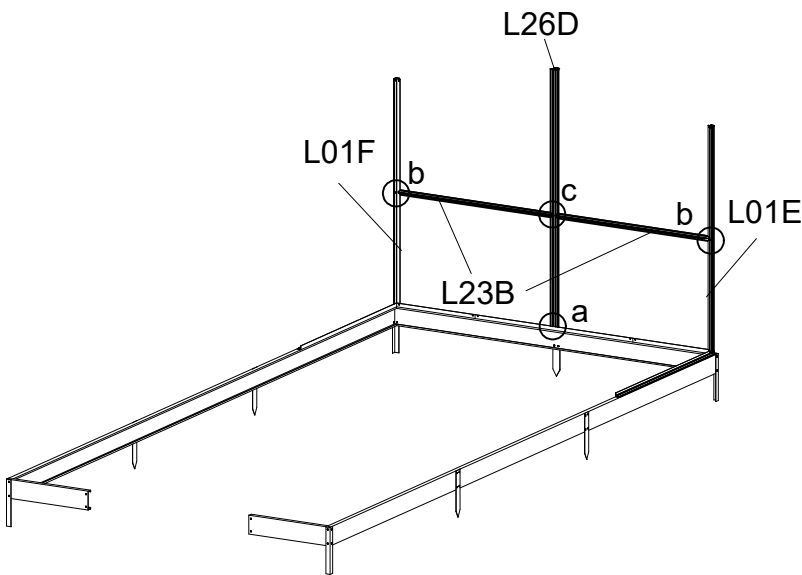


Attention! Put the side with 2 holes of L23B facing upwards.

Fix L26D onto L10B, using S01 & M01.
 Fix L23B * 2PCS to L01E, L01F & L26D,using S01 & M01

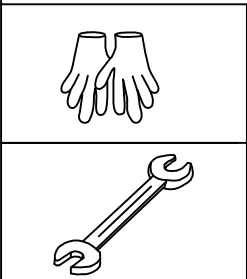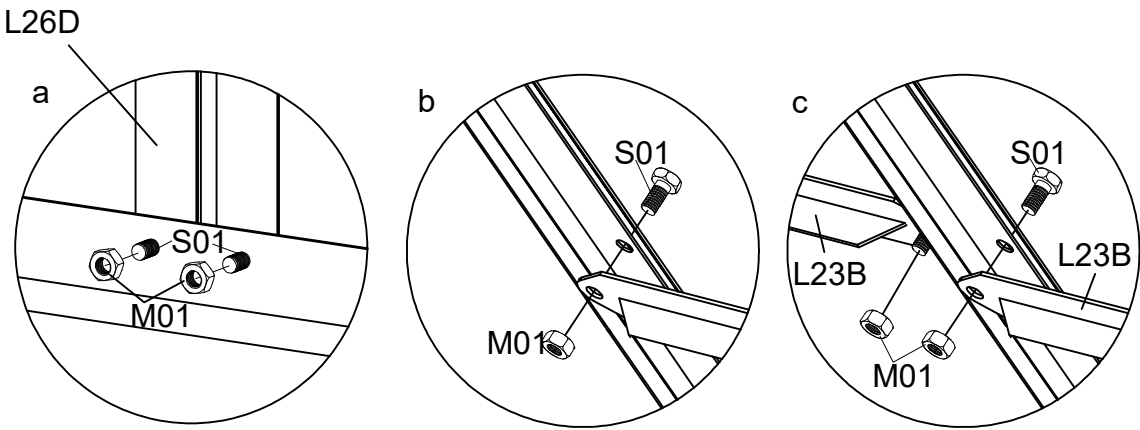


PART	NO	QTY
	L03A	4
	L08L	4
	S01 M6X12	8
	M01 M6	8
	Z08 M4.2X16	20


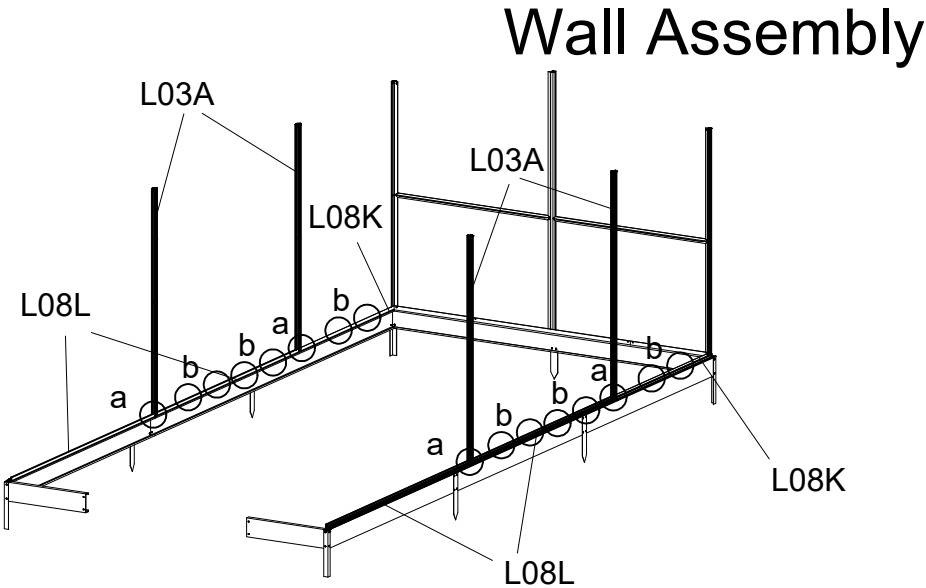



1. Place L08L on the base plinth and fix L03A onto L08L, using S01 & M01.
2. Use a powered screwdriver to fix the self-tapping screws (Z08) through the cills (L08L) and base plinth (C2). The screws should be evenly spaced to ensure a neat appearance. The recommended spacing of the screws is 460mm. You can mark the painted surfaces with a pencil.

Attention! : Install the L03A with the side with the hole facing up!

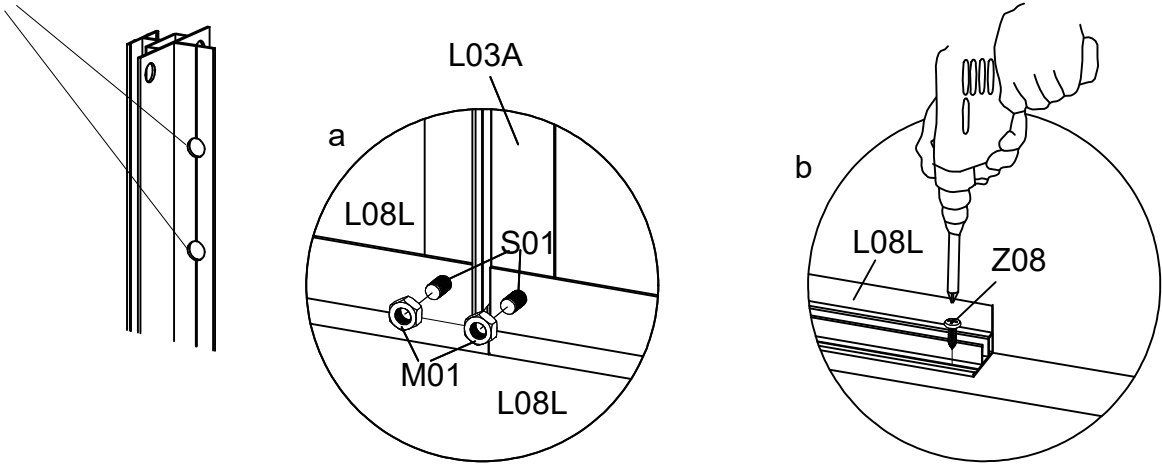


Z08 distances reference



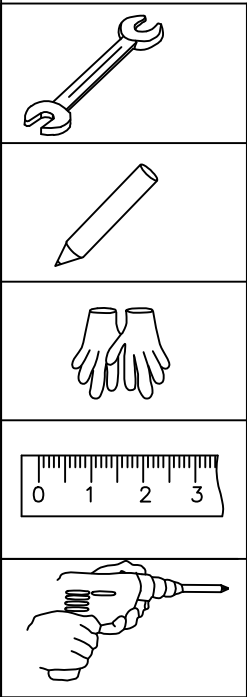
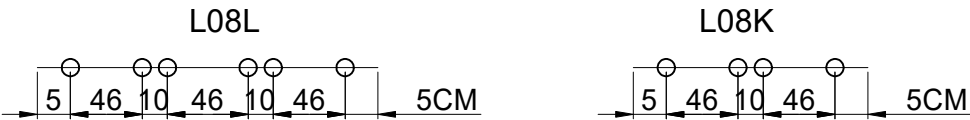


PART	NO	QTY
	L01A	1
	L01B	1
	L08E	1
	L08F	1
	S01 M6X12	4
	M01 M6	4
	Z08 M4.2X16	16

Wall Assembly

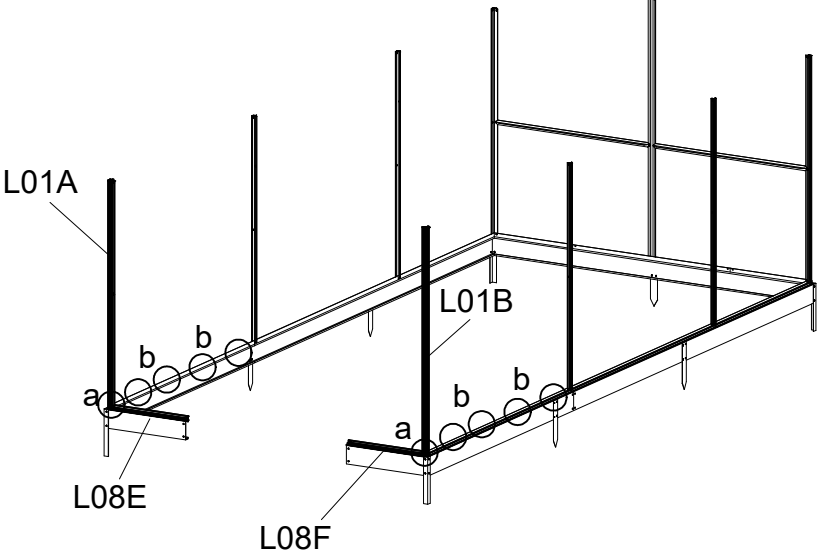


- Place L08E & L08F on the base plinth and fix L01A & L01B onto L08L & L08E/L08F, using S01 & M01.
- Use a powered screwdriver to fix the self-tapping screws (Z08) through the cills (L08L, L08E & L08F) and base plinth (A2 & C2). The screws should be evenly spaced to ensure a neat appearance. The recommended spacing of the screws is 460mm. You can mark the painted surfaces with a pencil.

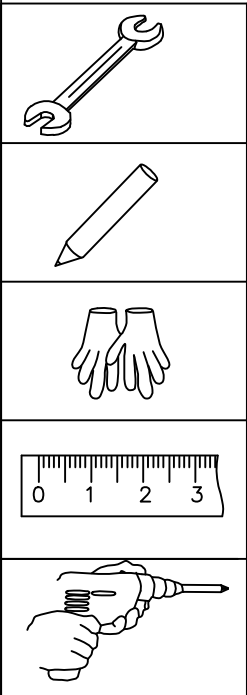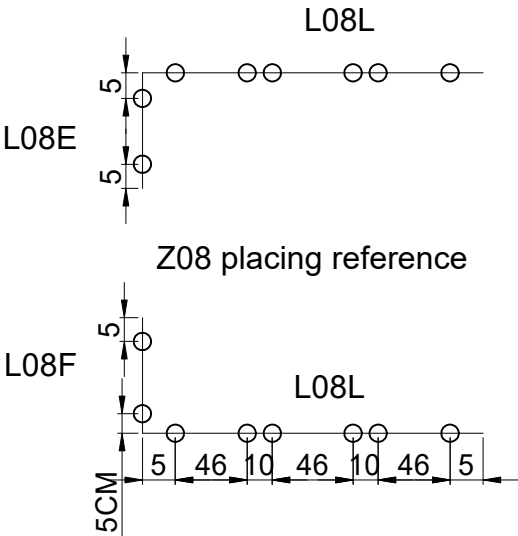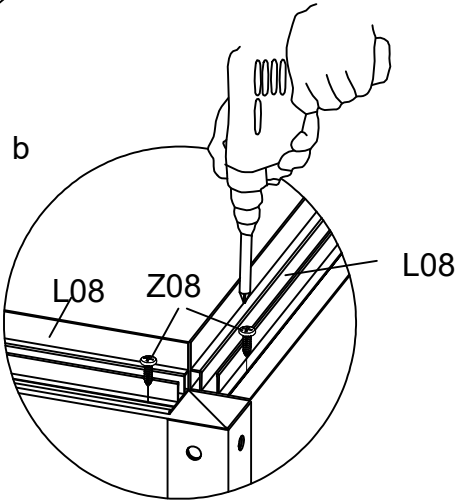
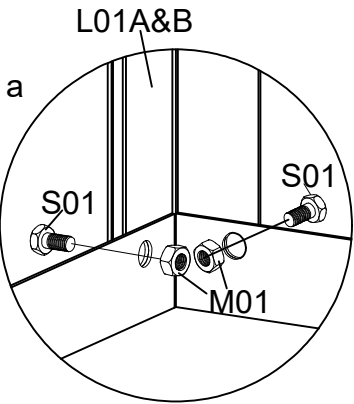



PART	NO	QTY
	L23K	2
	L23L	4
	S01 M6X12	12
	M01 M6	12

Wall Assembly

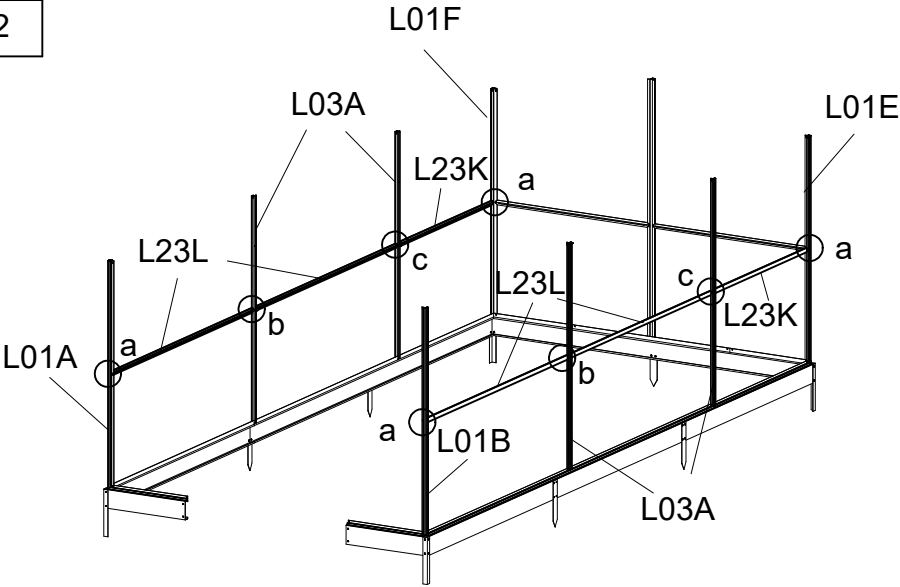


Fix L23L * 4PCS L23K * 2PCS onto L01A, L01B, L03A, L01E & L01F, using S01 & M01

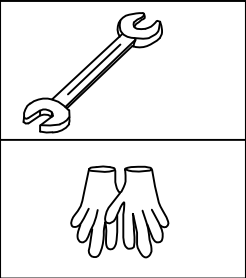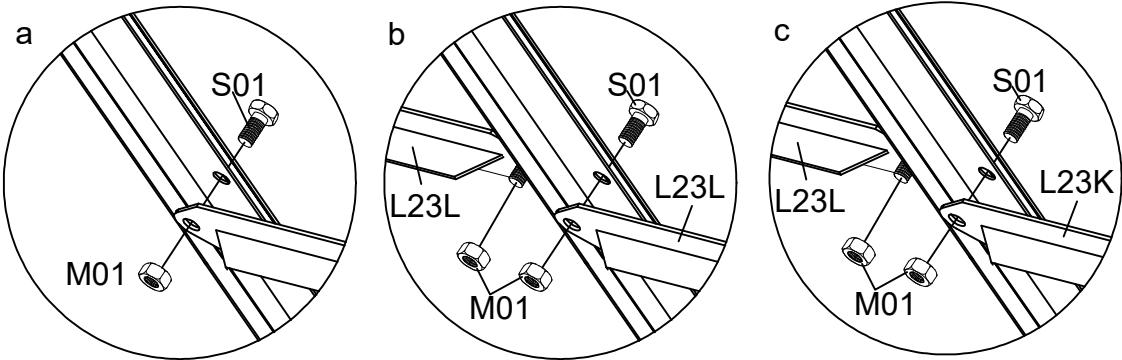


PART	NO	QTY
	L10C	1
	L23G	2
	L26A	1
	L26B	1
	D317	2
	S01 M6X12	12
	M01 M6	12
	S26 M6X12	4


Wall Assembly



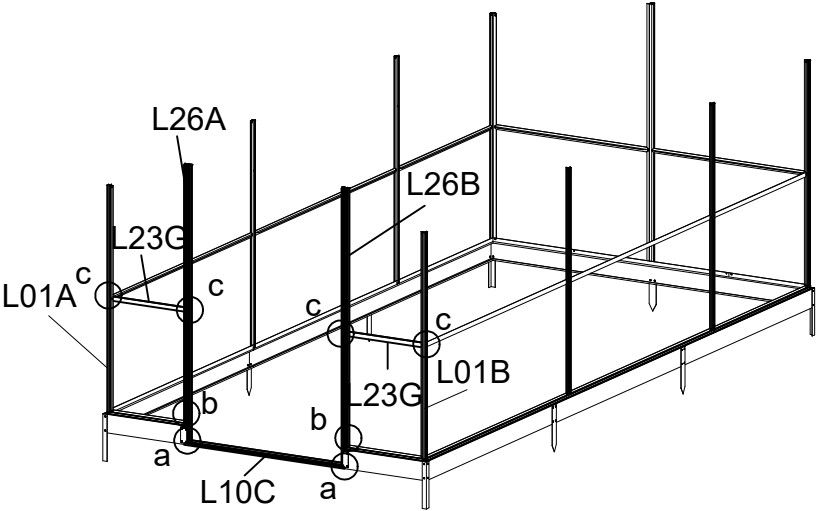


Fix L26A onto L08E,
L26B onto L08F using S01 & M01

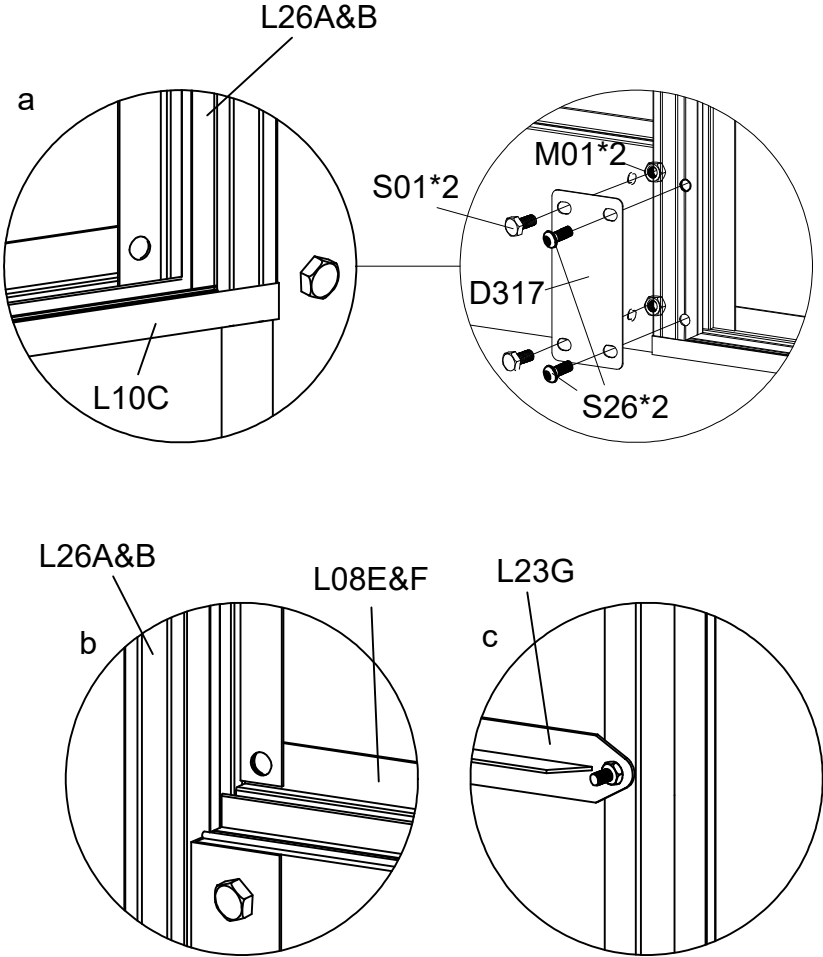





Fix 23G * 2PCS onto L01A & L26A
/L01B & L26B, using S01 & M01.

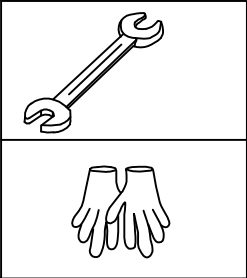




PART	NO	QTY
	L07K	2
	L07L	4
	L26C	2
	S01 M6X12	24
	M01 M6	24

Wall Assembly

Fix L07L * 2PCS and L07K onto L01A, L03A & L01F and L01B, L03A & L01E, using S01 & M01

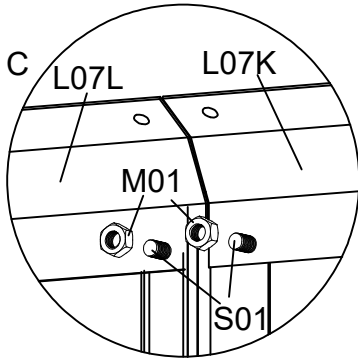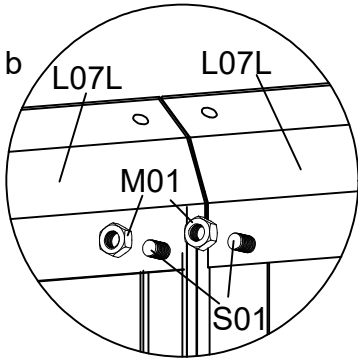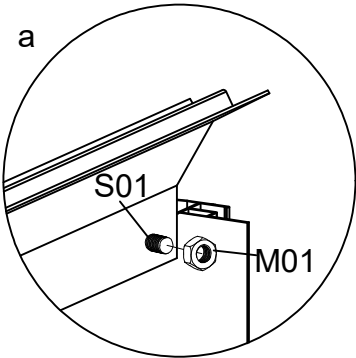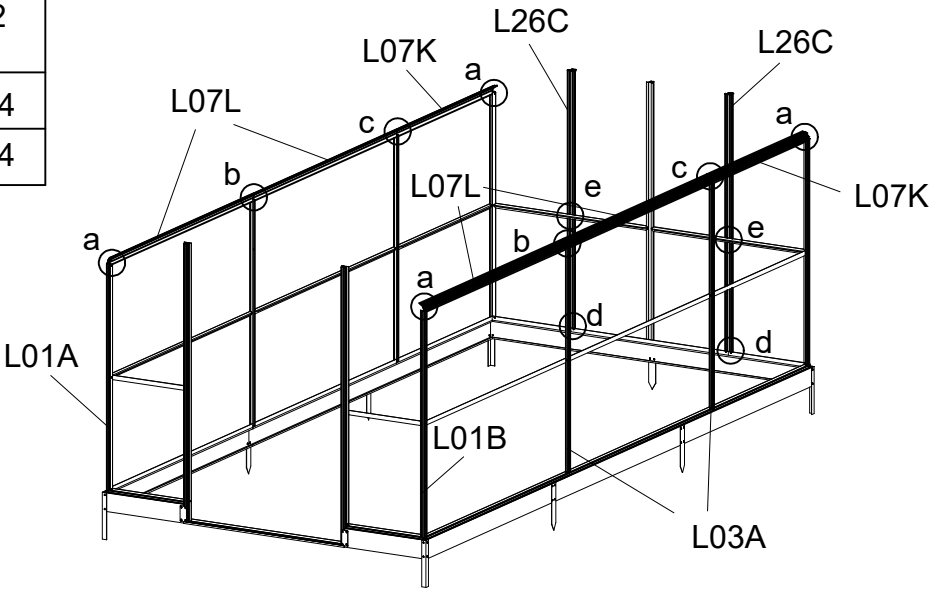


Fix L26C * 2PCS onto L10A, L10B & L23B using S01 & M01

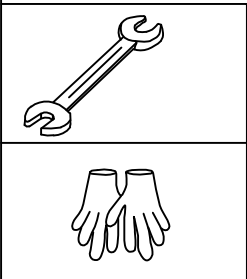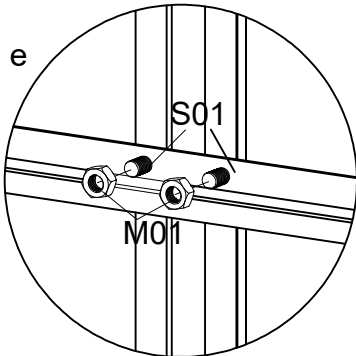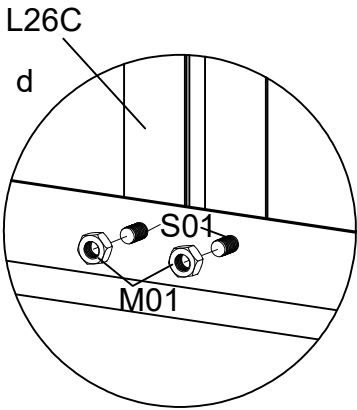


PART	NO	QTY
	L02A	10
	S01 M6X12	50
	M01 M6	50


Wall Assembly

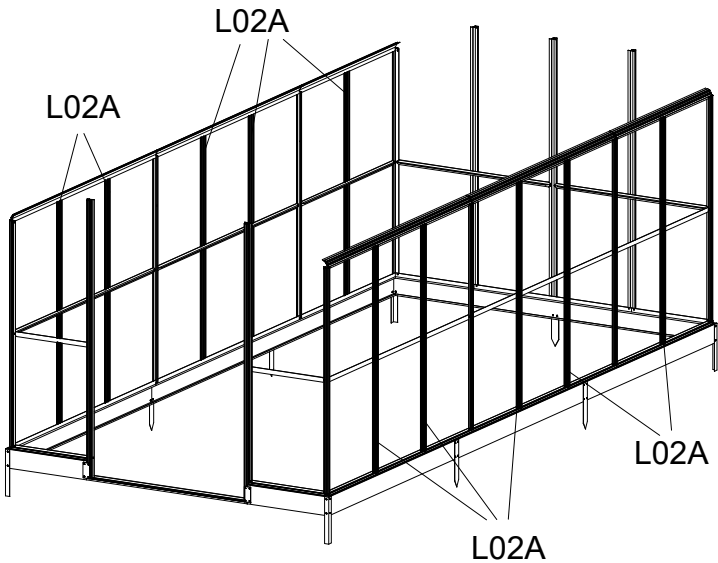

Fix L02A (10pcs) to L08L and L07L using S01 & M01.

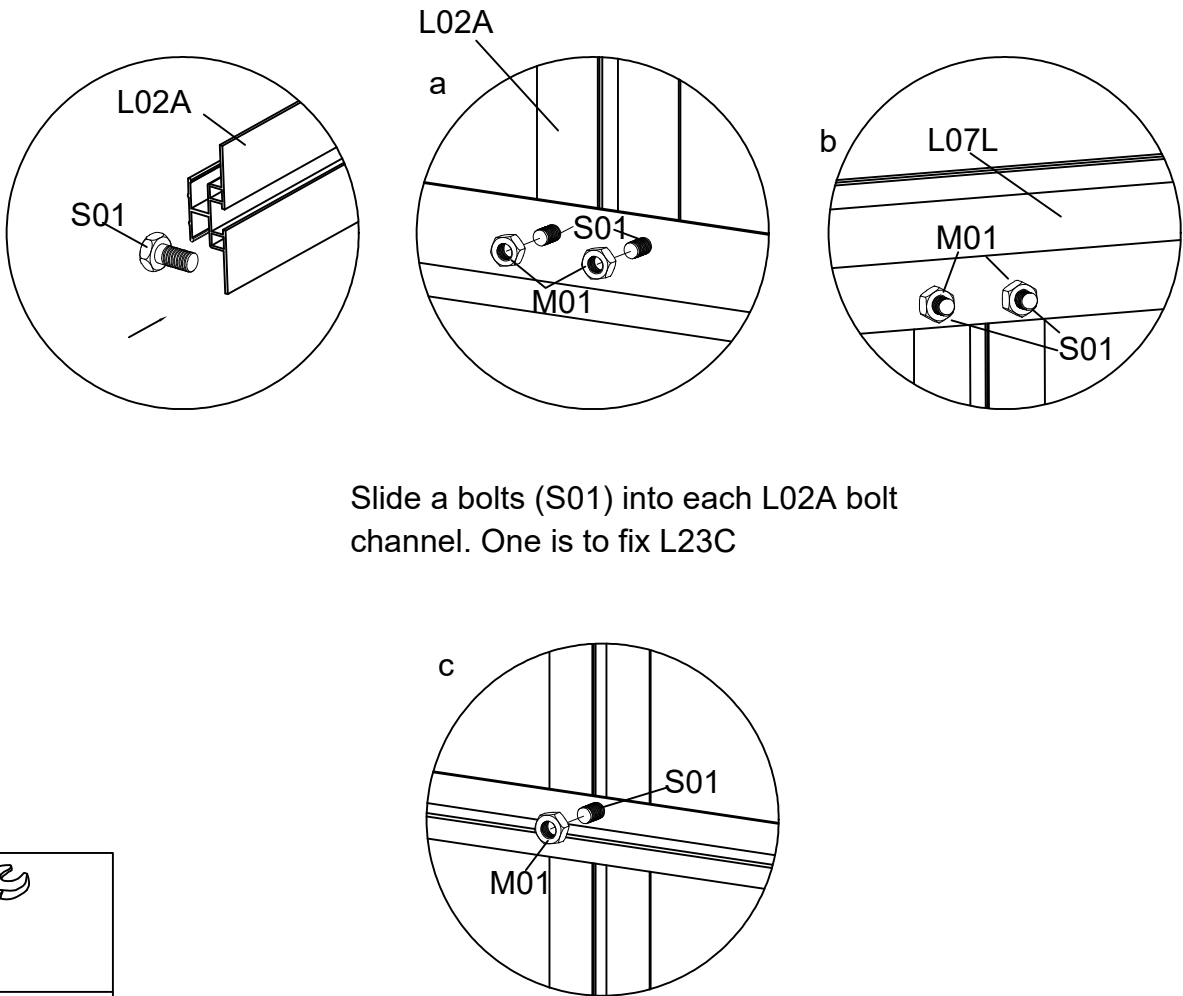


Slide a bolts (S01) into each L02A bolt channel. One is to fix L23C

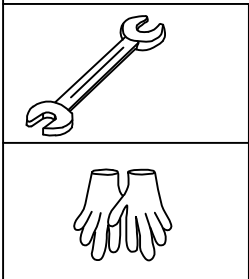


PART	NO	QTY
	Y2	6

Wall Assembly

Put the panels into positions

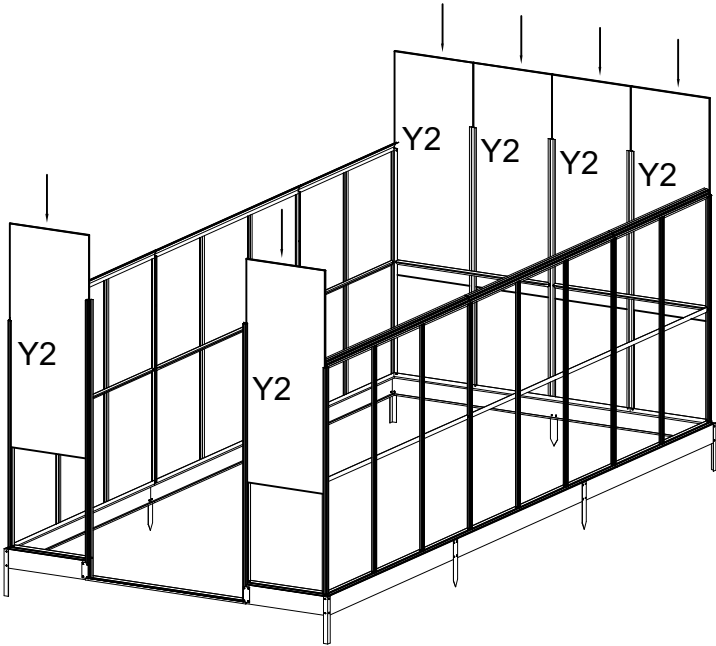


! Attention: Remove the protective films from both sides of each polycarbonate panel, before inserting into aluminum channels. Ensure the milky white film faces towards the Sun.

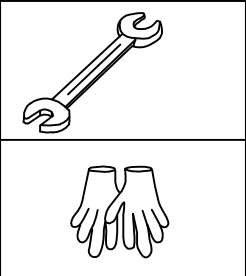


PART	NO	QTY
	L02D	6
	S01 M6X12	22
	M01 M6	22


Wall Assembly

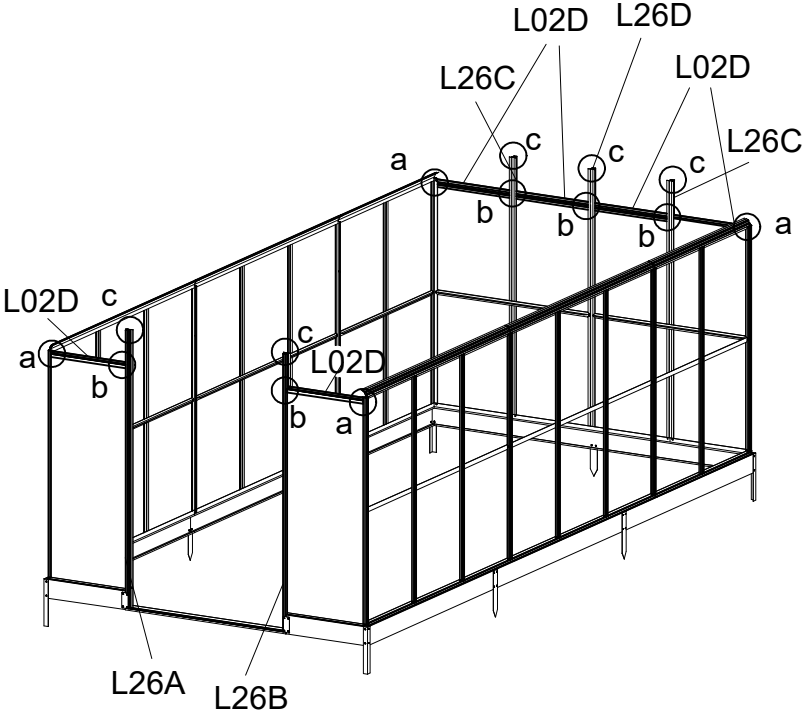


Fix L02D * 6PCS as shown,
using S01 & M01

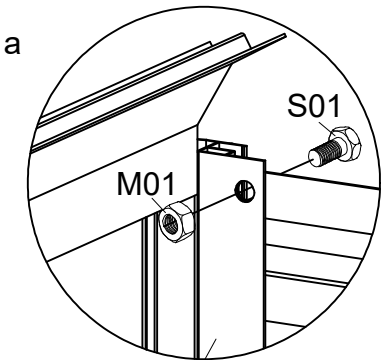

L01A&B&E&F

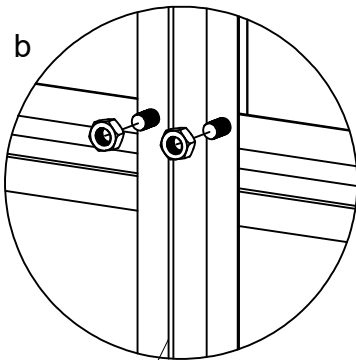

L26A&B&C&D

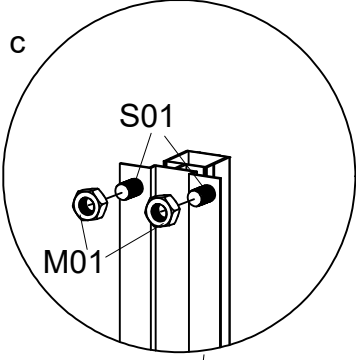



L26A&B&C&D



!Attention:


Please pre-load S01 & M01 on L26A, L26B, L26C and L26D before putting panels Y1, Y4 & Y19 into position.

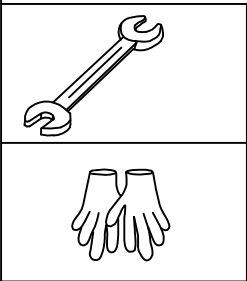

PART	NO	QTY
	L26G	1
	L26H	1
	Y1	2
	Y4	2
	Y16	16
	Y9	2
	S01 M6X12	8
	M01 M6	8

Put the panels into positions

Wall Assembly





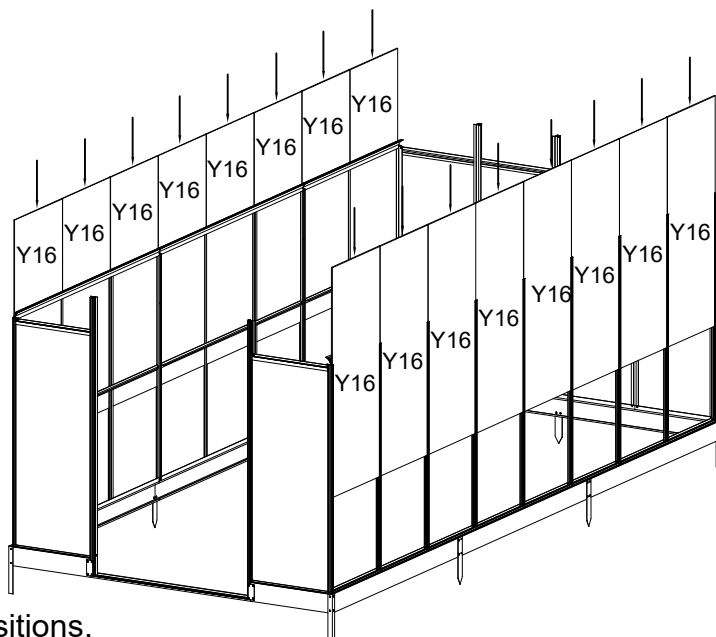


Put the panels Y1, Y4 and Y9 into positions.



!Attention:




Please pre-load S01 & M01 on L26G & L26H before putting panels Y1, Y4 & Y19 into position.

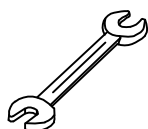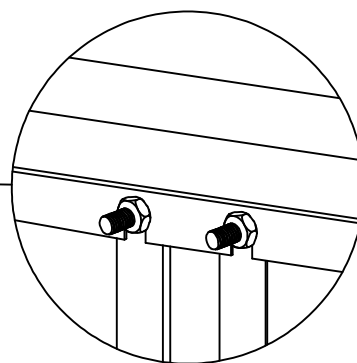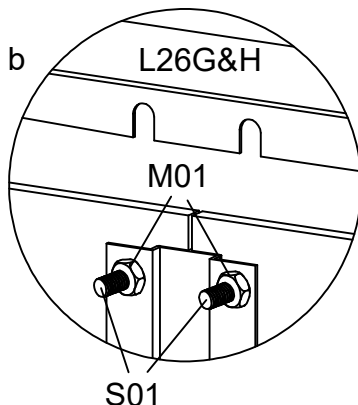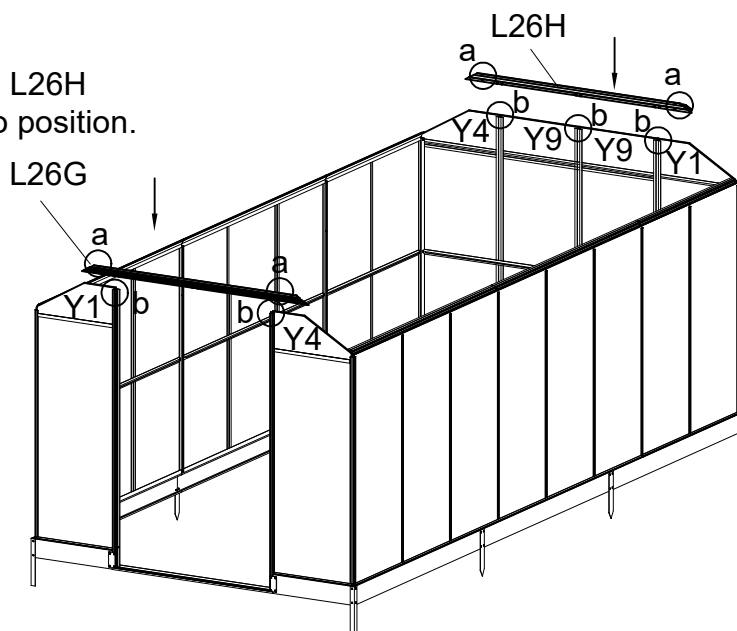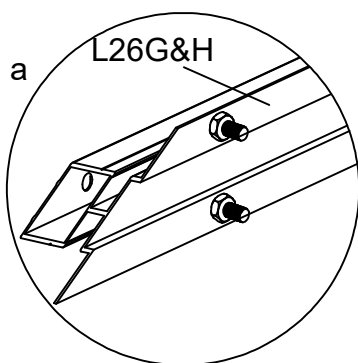


Loose the nuts M01 on L26A, L26B, L26C & L26D to allow L26G & L26H fitted in.
After the screws are inserted into the U-shaped opening, it is necessary to adjust the structure and lock it.

PART	NO	QTY
	L02C	2
	Y3	2
	Y8	2
	S01 M6X12	6
	M01 M6	4


Top Assembly

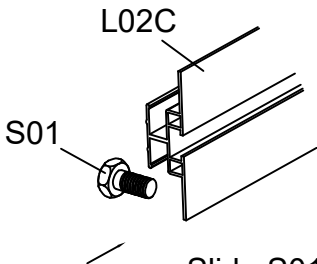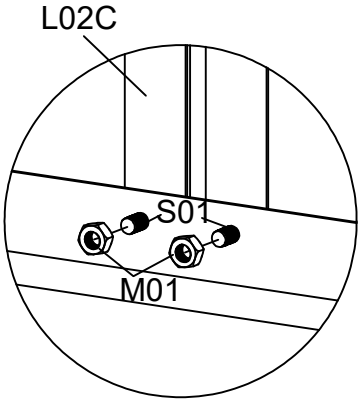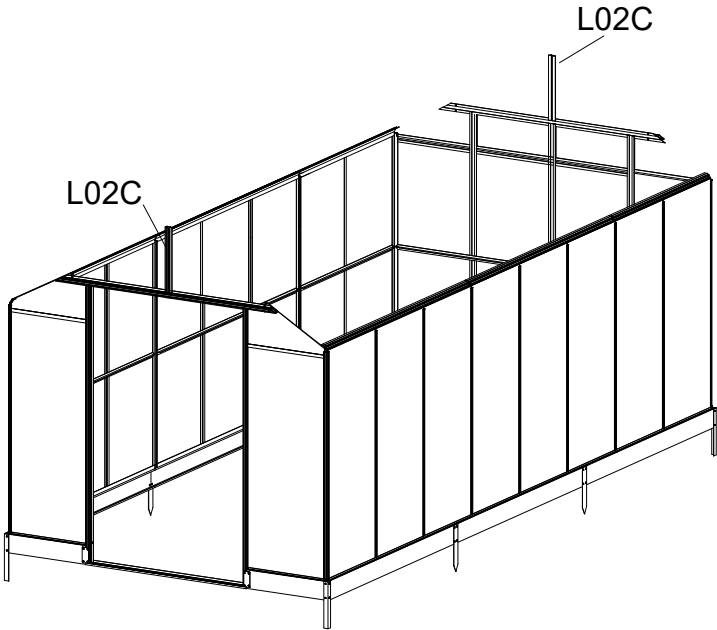


Slide S01 into the channel of L02C



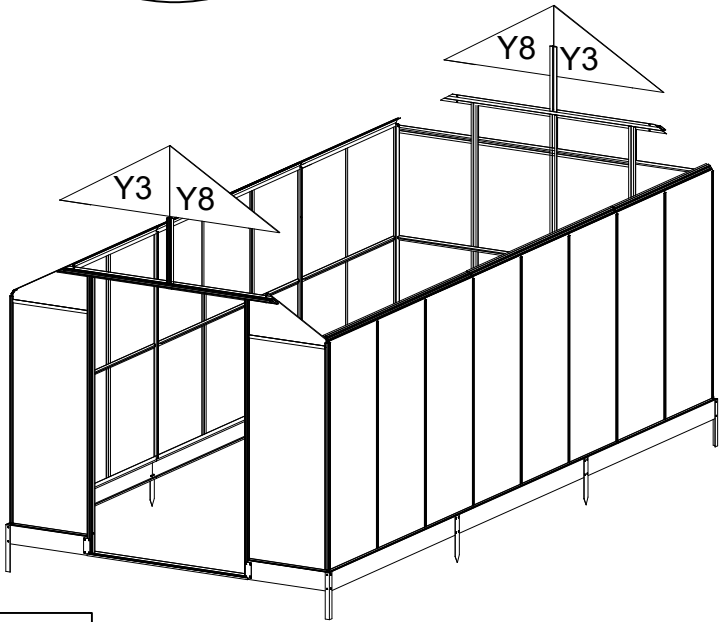


! Attention:Remove the protective films from both sides of each polycarbonate panel, before inserting into aluminum channels. Ensure the milky white film faces towards the Sun.

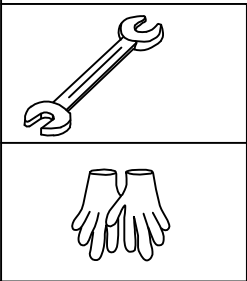


Put the glazing panels Y3 & Y8 into positions.


PART	NO	QTY
	L01C	2
	L01D	2
	D17	2
	D309	4
	S01 M6X12	20
	M01 M6	22

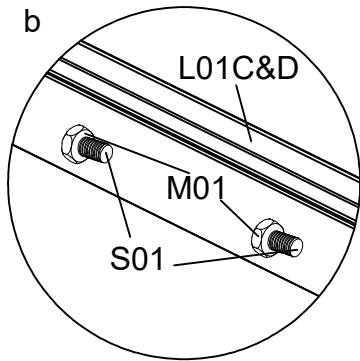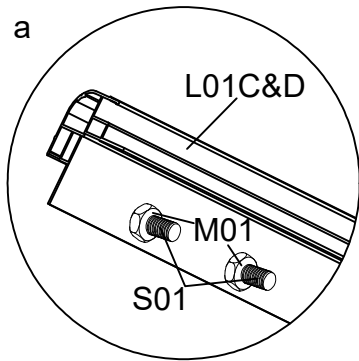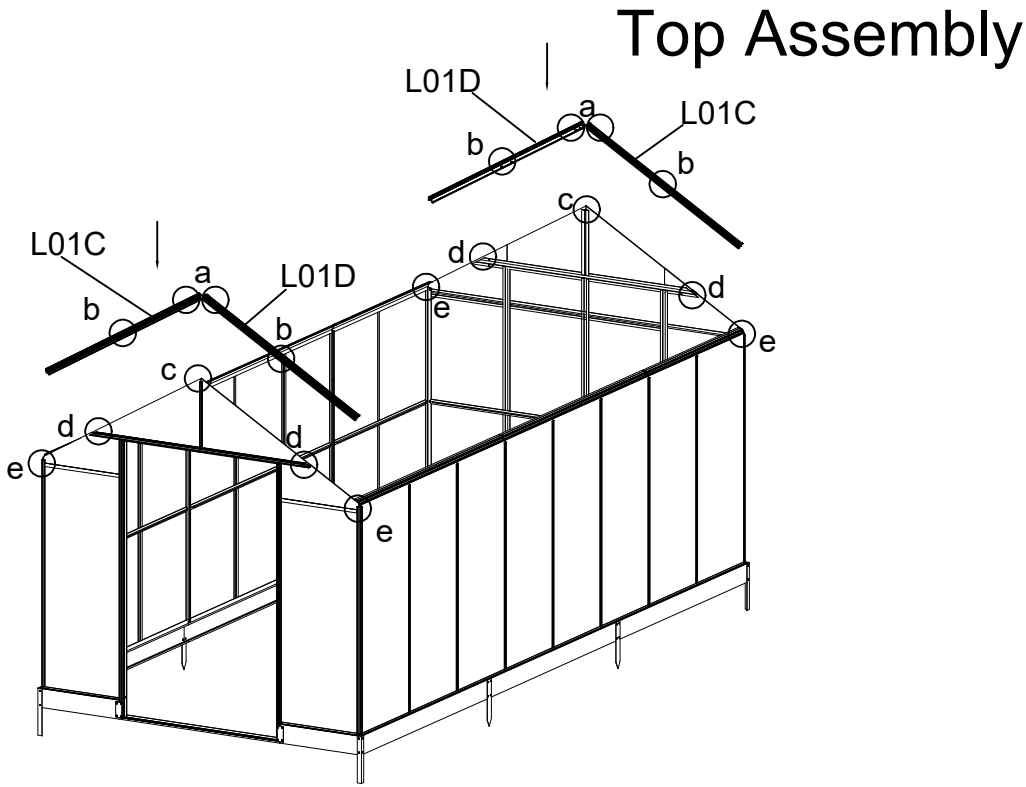



1. Preload S01 & M01 on L01C and L01D before fixing them to L01A/L01B. See figure a & b.

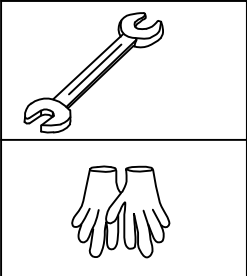


Top Assembly

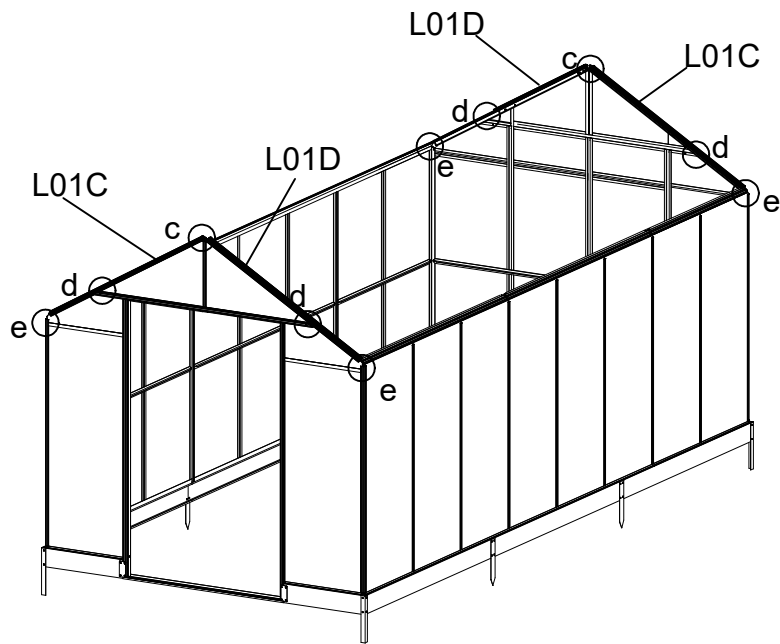


If the holes are not aligned,
it may be due to uneven foundation,
adjust the foundation and frame to
solve the problem

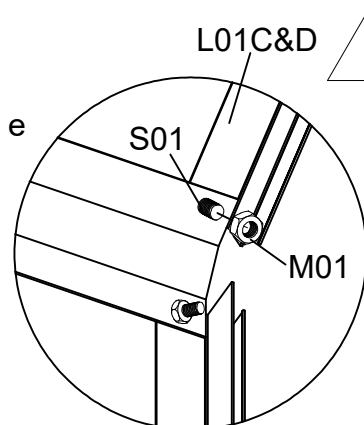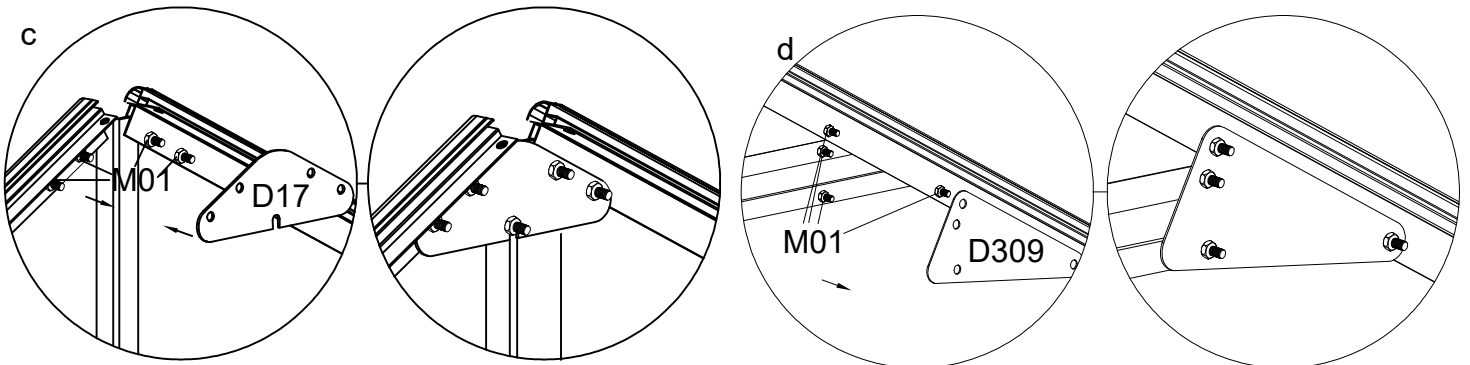


1. Preload S01 & M01 on L01C and L01D before fixing them to L01A/L01B. See figure 1 & 2.
2. Bolt L01C and L01D with plate D17, using S01 & M01 preloaded. And then fix them to L02C, using S01 & M01.
3. Fix L01C & L01D to L26G & L26H with the plate D309, using the S01 and M01 preloaded above.
4. Fix L01C & L01D to L01A & L01B, using S01 & M01.


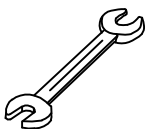


PART	NO	QTY
	L03B	4
	L23E	6
	D17	6
	S01 M6X12	44
	M01 M6	44




Top Assembly

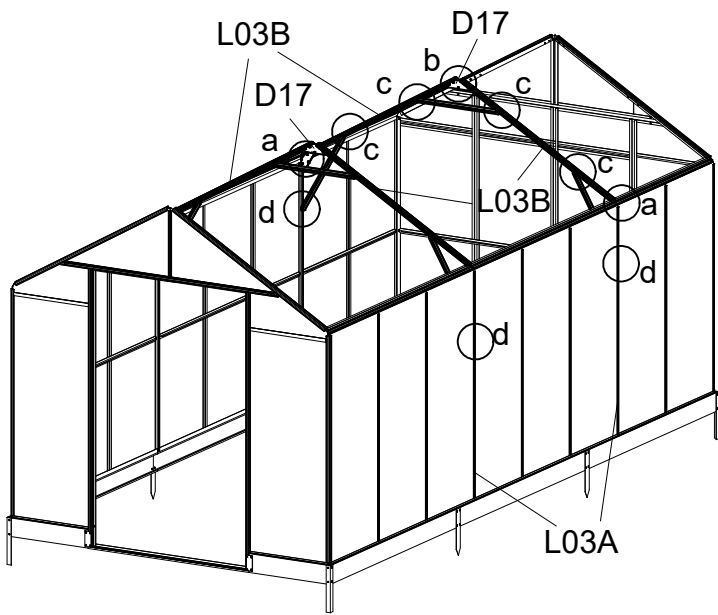

Fix glazing bars L03B to the eaves and the ridge profiles using S01 & M01

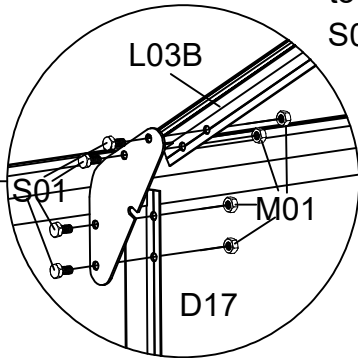
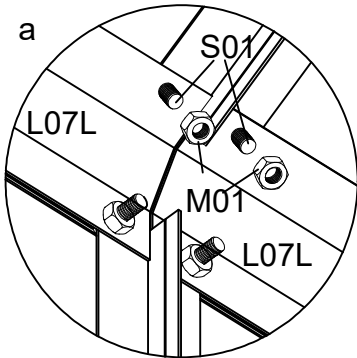




Fix plates D17 to L03A & L03B using S01 & M01.

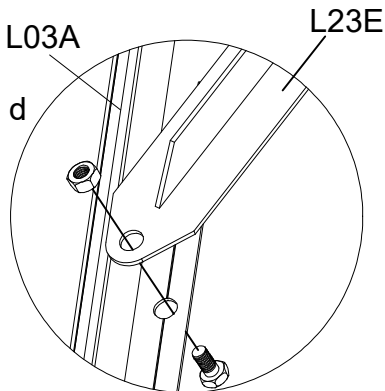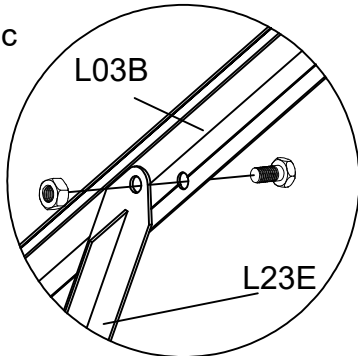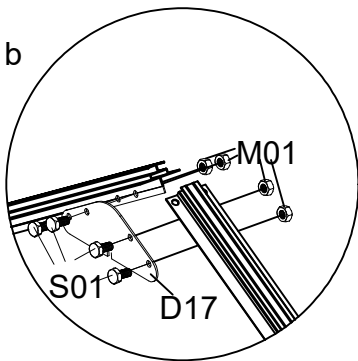


Fix plates D17 to the two L03B using S01 & M01.

Fix L23E to L03A and L03B using S01 & M01.



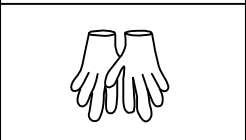
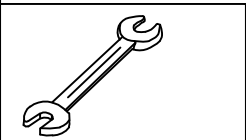



PART	NO	QTY
	L06K	1
	L06L	2
	S01 M6X12	12
	M01 M6	12

Top Assembly


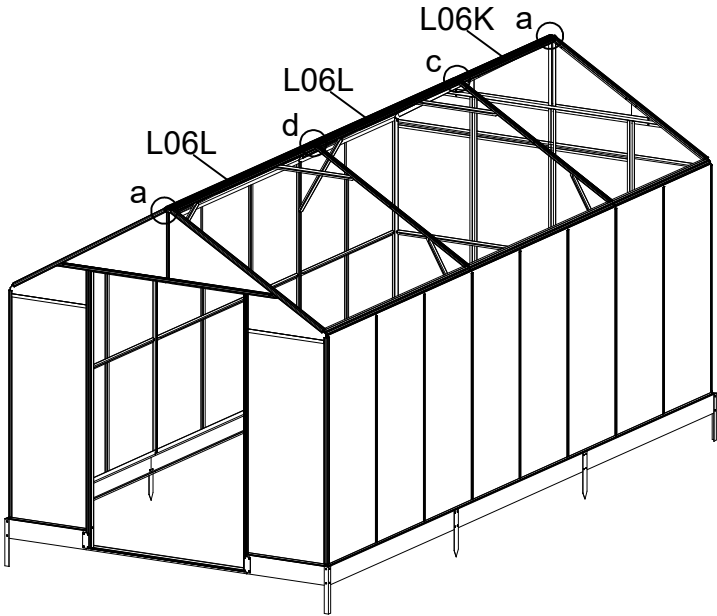


Bolt the ridge L06L (2pcs) and L06K to L01C, L01D and L03B, using S01 & M01.

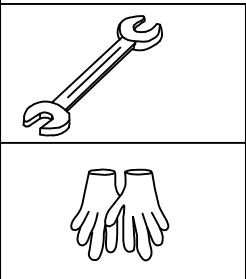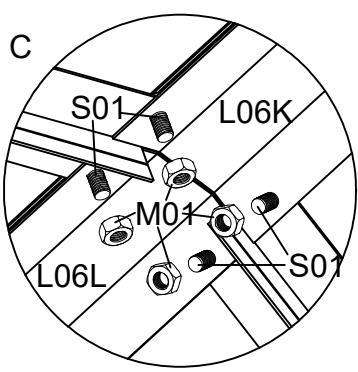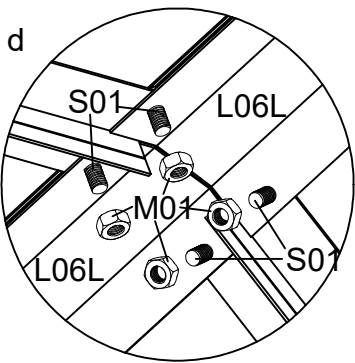
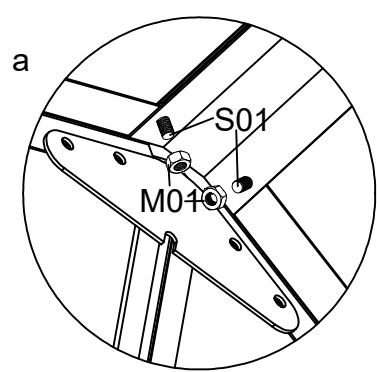


PART	NO	QTY
	L02B	10
	S01 M6X12	60
	M01 M6	40


Top Assembly

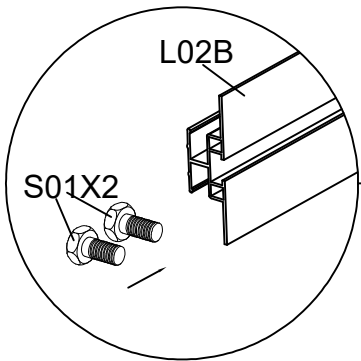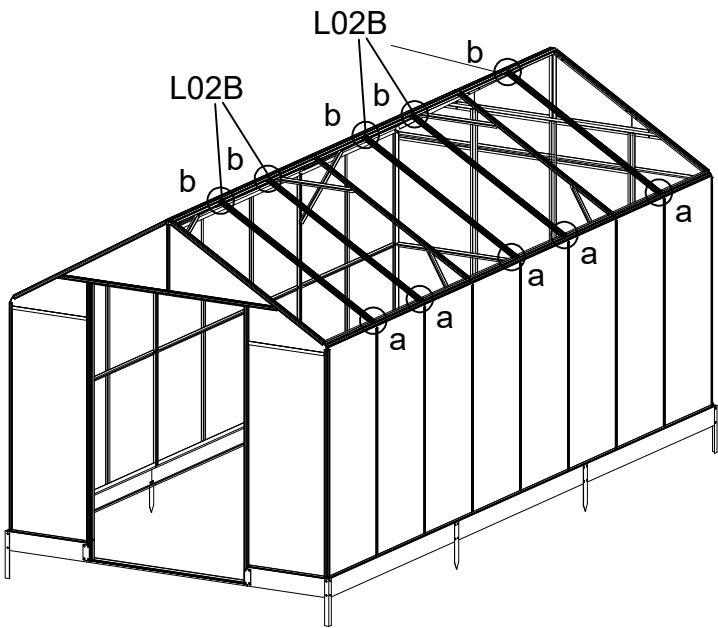


Slide 2 bolts (S01) into each L02B bolt channel to be used later.

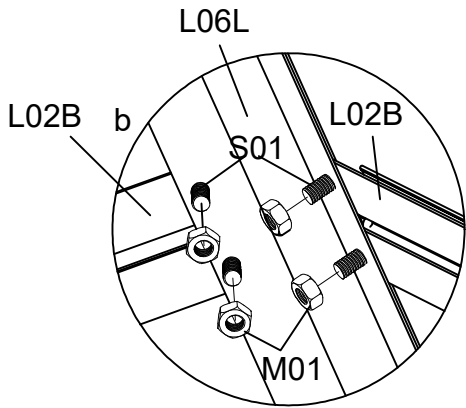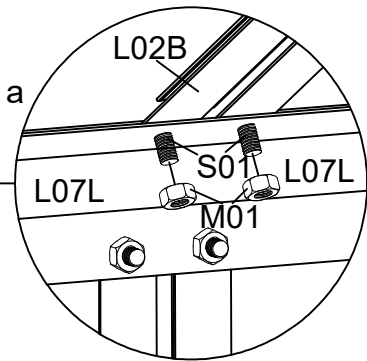


Fix glazing bars L02B (10pcs) to the eaves and the ridge profiles with S01 & M01

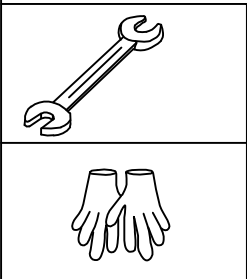


PART	NO	QTY
	L23K	2
	L23L	4
	L05B	5
	D26	2
	S01 M6X12	12
	M01 M6	32
	Z08 M4.2X16	4

Top Assembly

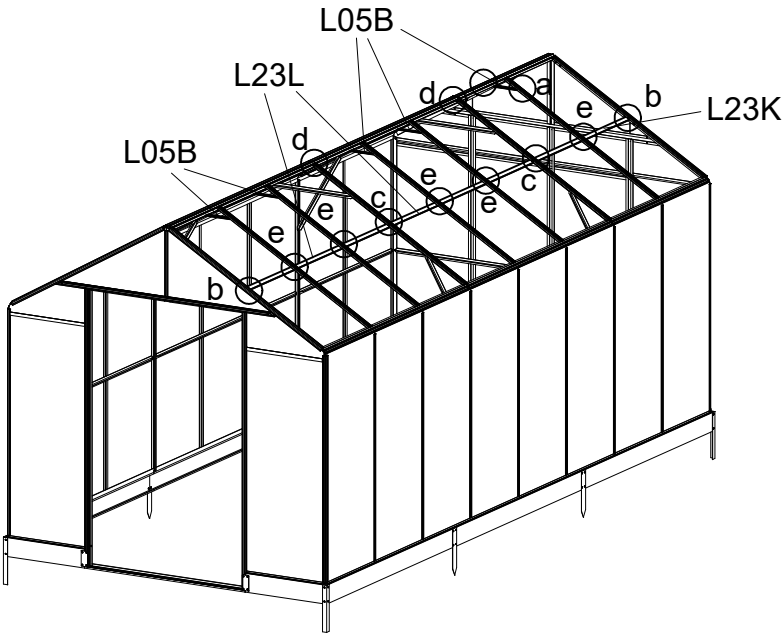


Bolt L05B (d pcs) to L02A & L02B using the S01 bolt placed in the bolt channel earlier.

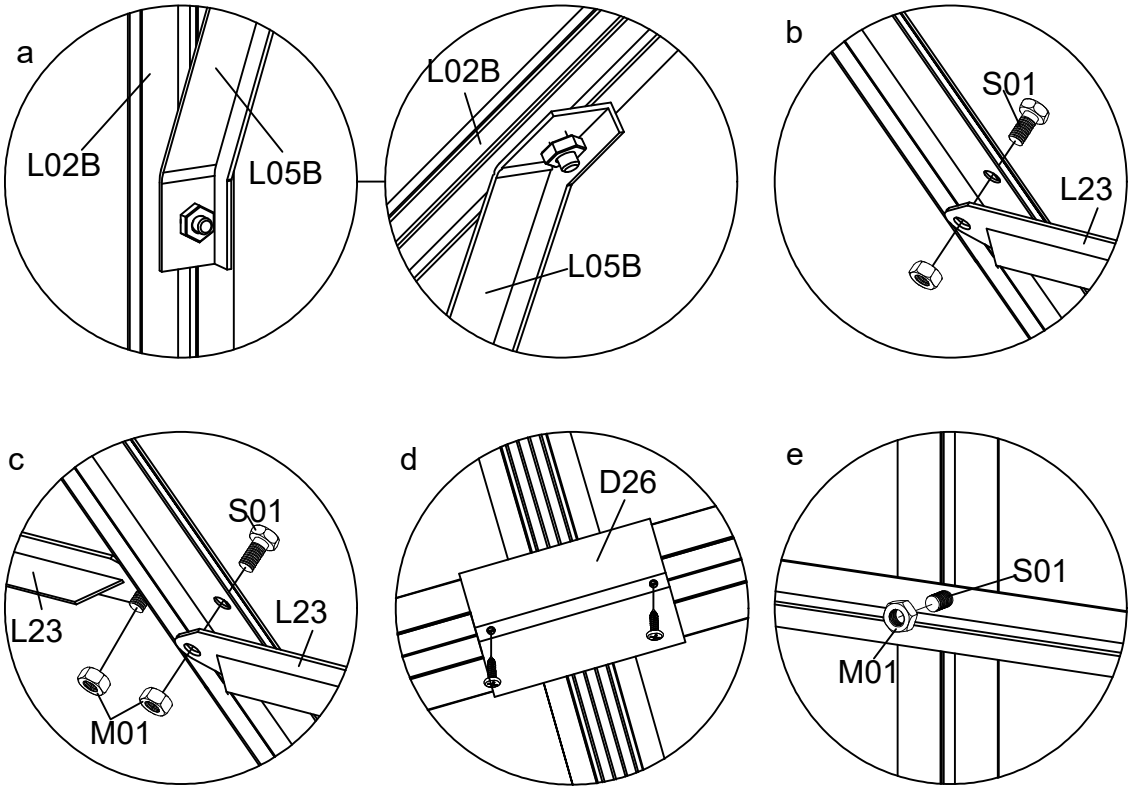



Bolt L23L to L01C/L01D & L03B with S01 & M01.

Fix D26 to L06L from outside with self-tapping screws Z08, using a powered screwdriver.

Bolt L23L to L02B using the S01 bolt placed in the bolt channel earlier.

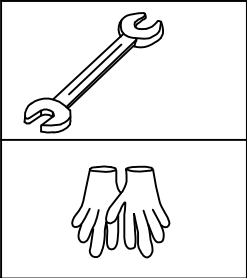


PART	NO	QTY
	L04K	4
	A03	4
	WINDOW	4
	Y17	12
	Y19	8
	S01 M6X12	24
	M01 M6	24

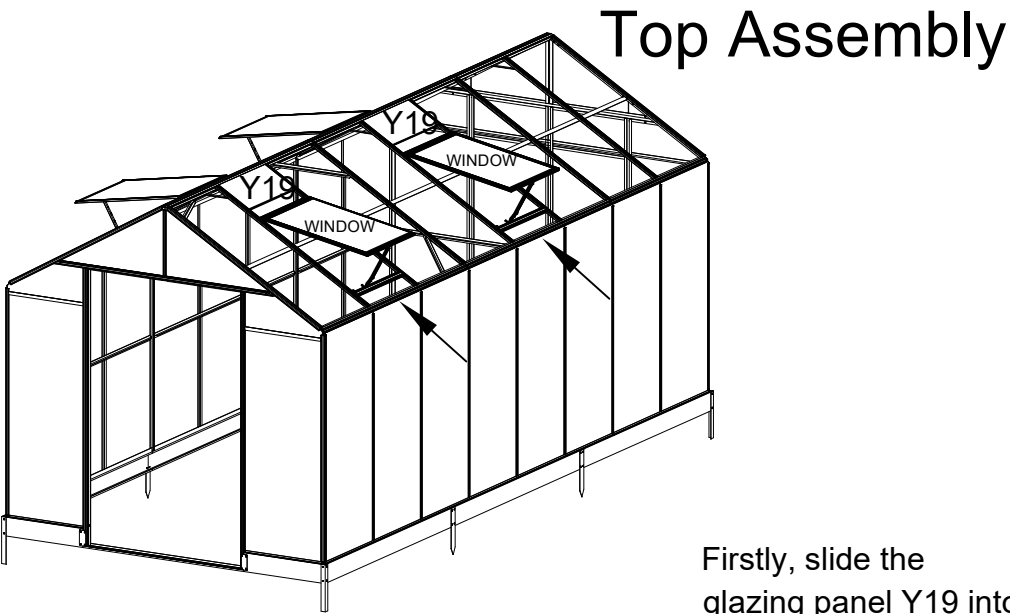


When installing L04A, the window needs to be lifted up to avoid the window not opening after the installation is complete

Firstly, slide the glazing panel Y19 into the channel of L02B/L03B


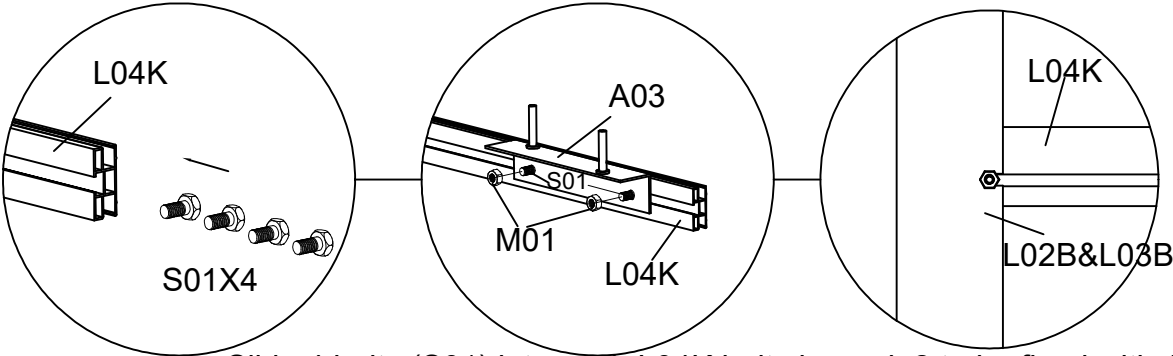




Slide 4 bolts (S01) into each L04K bolt channel. 2 to be fixed with A03, and another 2 to be fixed with L02B/L03B.

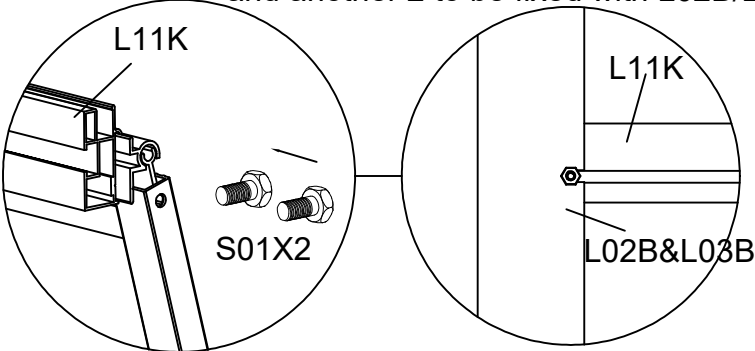

Slide 2 bolts (S01) into each L11K, and bolt it to L02B/L03B, using the S01 & M01.



Slide the glazing panels into positions

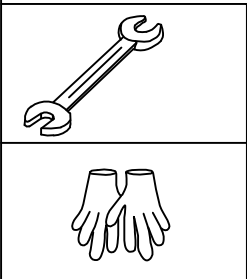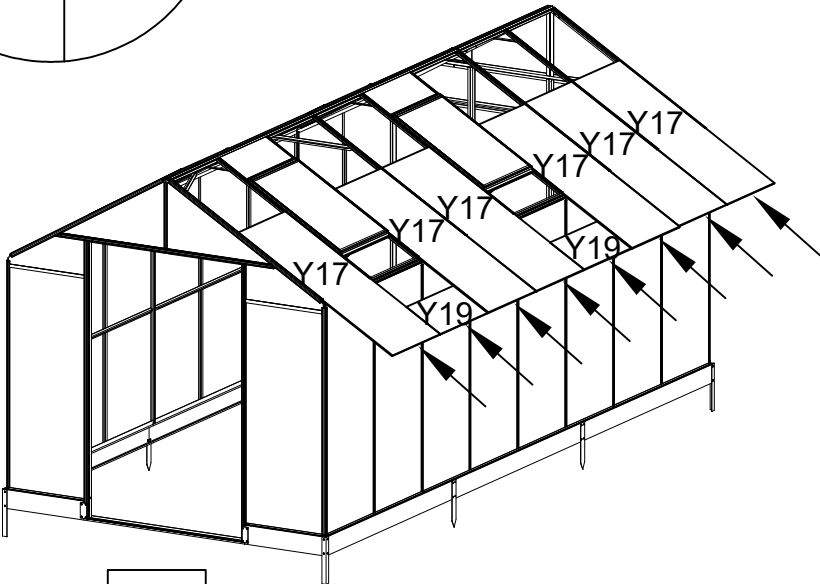


PART	NO	QTY
	L09K	2
	L09L	4
	D25	4
	S01 M6X12	8
	M01 M6	8

Top Assembly


After the panels and windows are in position,
put some silicone sealant around to avoid leaking water.

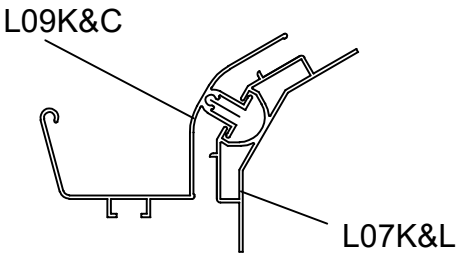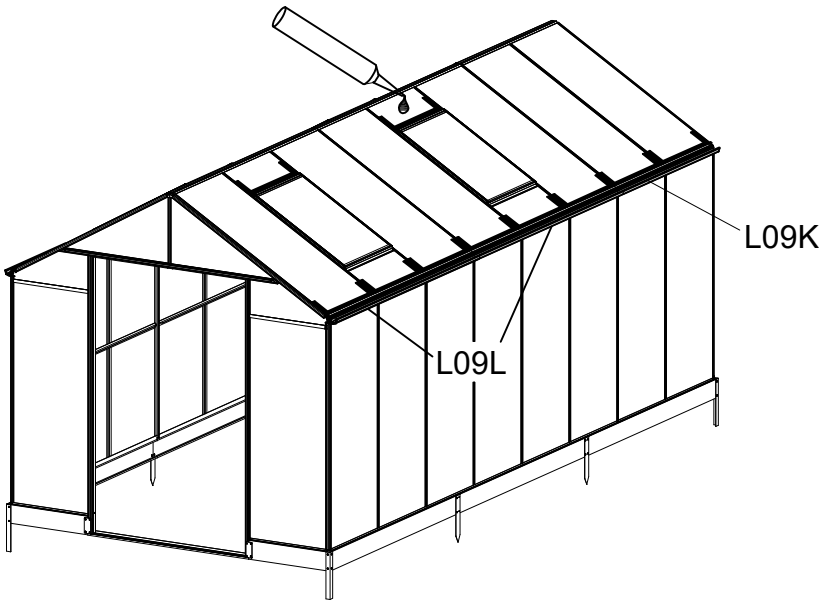

When the panels are completely
inserted, fix gutter profile L09K&L
Tap it gently into position
with a rubber mallet.



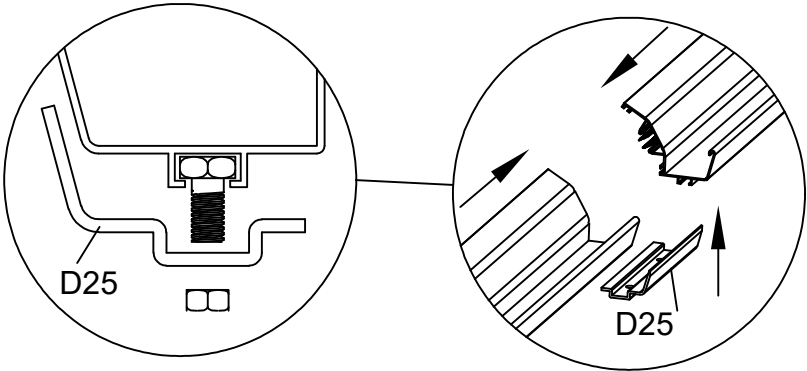


Slide 1*S01 into the bolt channel of both L09K&L,
fix D25 to L09K&L using S01 & M01.

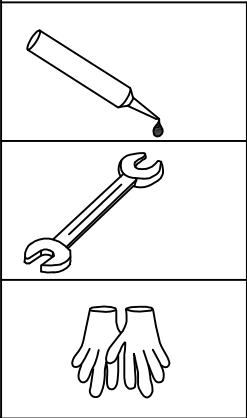

PART	NO	QTY
	D00R-L	1
	D00R-R	1
	A51	4
	Z17 M4.8X16	8
	S27 M5X12	24



Door Assembly

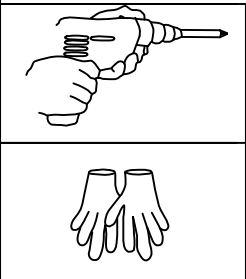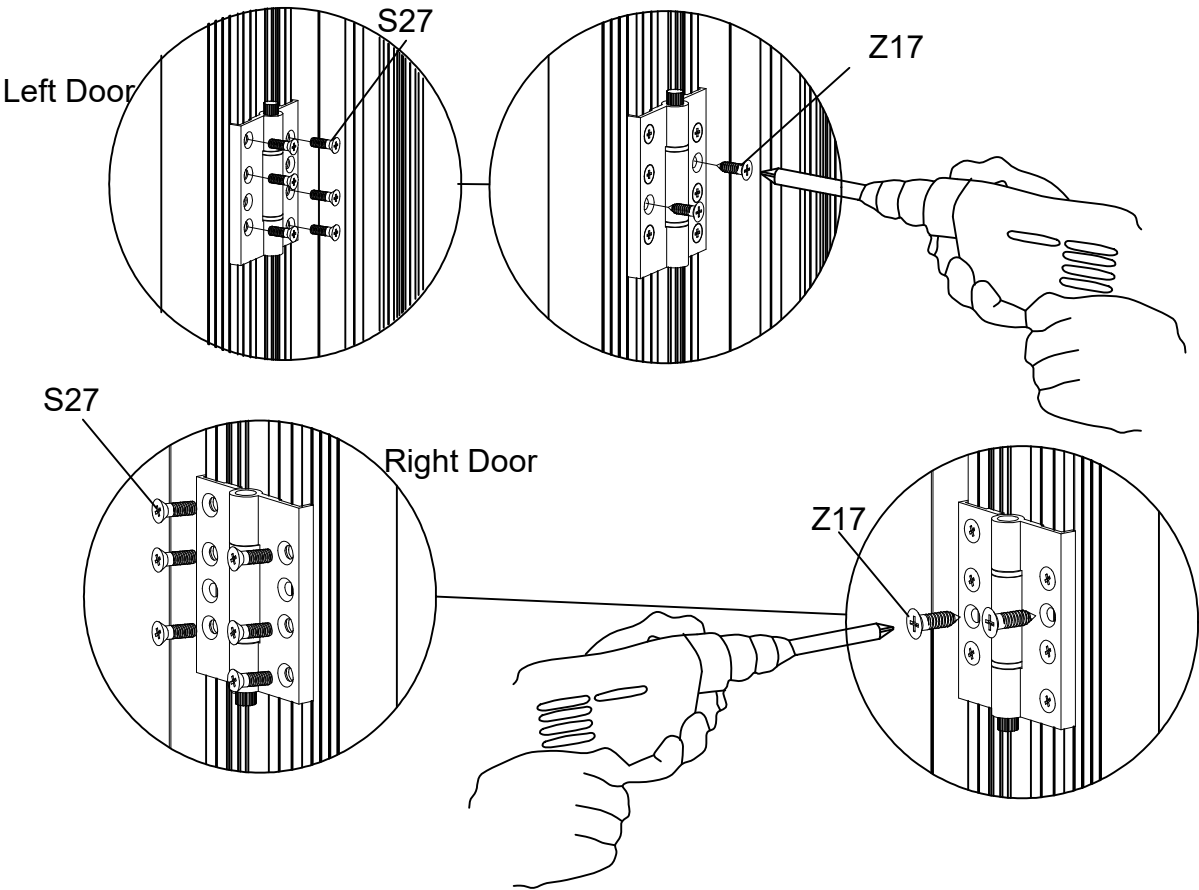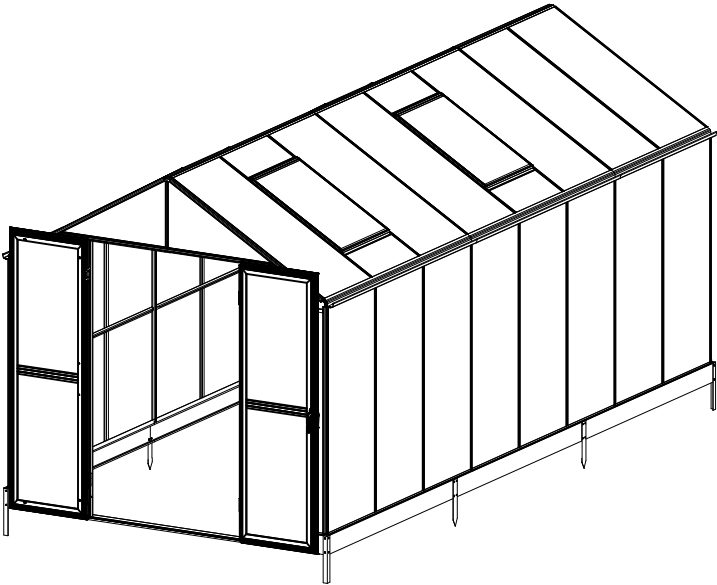


Fix A51(4 PCS) one side on the door profile and the other side to L26A/L26B using S27. Then secure with Z17.

PART	NO	QTY
	J55	2
	J56R	2
	J56L	2
	J94	4
	L25	4
	J93	4
	J165	4
	J166	4
	Z08 M4.2X16	4
	Z02 Ø4X16D	8


Accessories Assembly

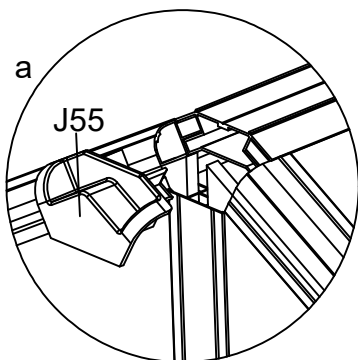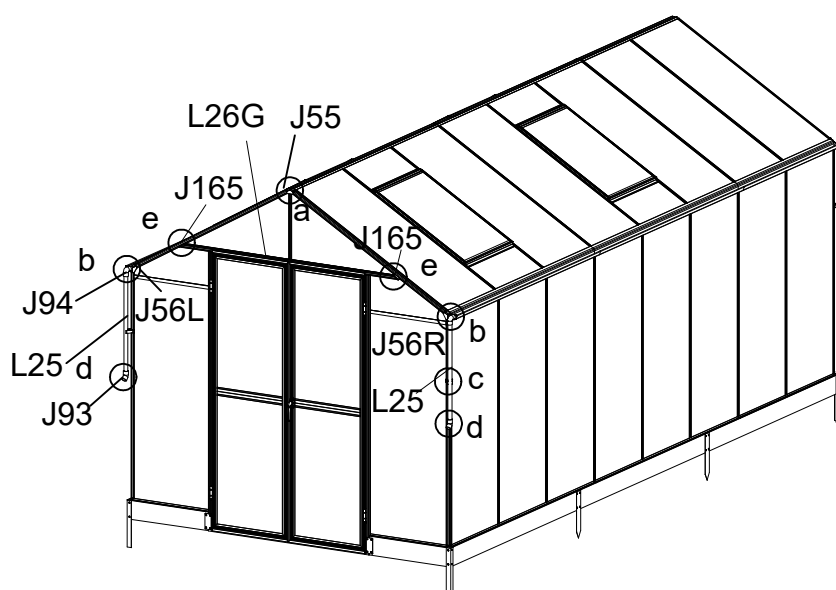


Fix the cover caps J55 into the ridge profile

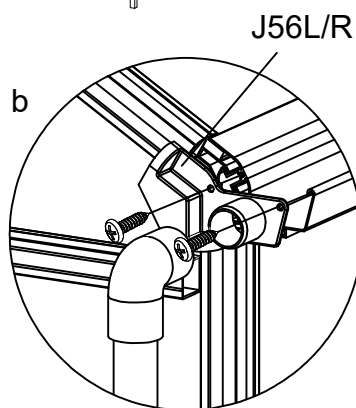


Fix the cover caps (J56L/R) carefully with Z02. Be careful to ensure that the screws are driven in straight and in the correct position (see detail drawings).

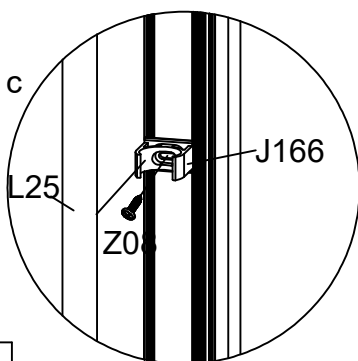

Drill a hole in L01A/L01B, approximately 3mm diameter and 400mm down from the gutter. Fix the J166 downpipe bracket with Z08 screws and then clip the L25 downpipe into the J166 bracket.

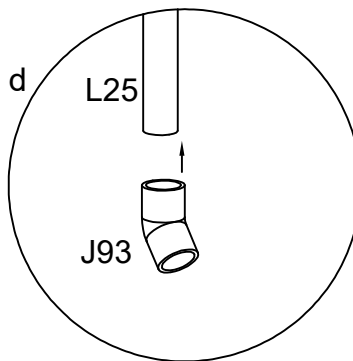

If you wish to eliminate leaks, use glue when fixing the downpipe bends (not provided).

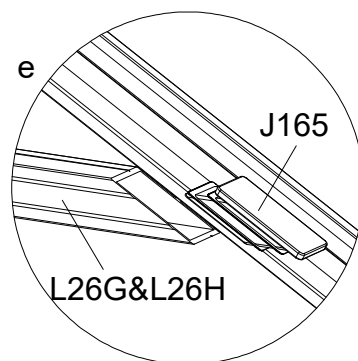

Cover both ends of L26G with cap J165