

KINCAID®

—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com

phone :828-728-3261.

ASSEMBLY INSTRUCTION

489-313 5/0 Kendall Upholstered Bed Headboard

489-316 6/6 Kendall Upholstered Bed Headboard

489-324 5/0 Somerset Bed Headboard


489-326 6/6 Somerset Bed Headboard

HARDWARE LIST

A		Bolt	Ø1/4"*3"	4 PCS
B		Flat Washer	Ø1/4"*19D	8 PCS
C		Lock Washer	Ø1/4"	4 PCS
D		Nut	Ø1/4"	4 PCS

IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials,including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

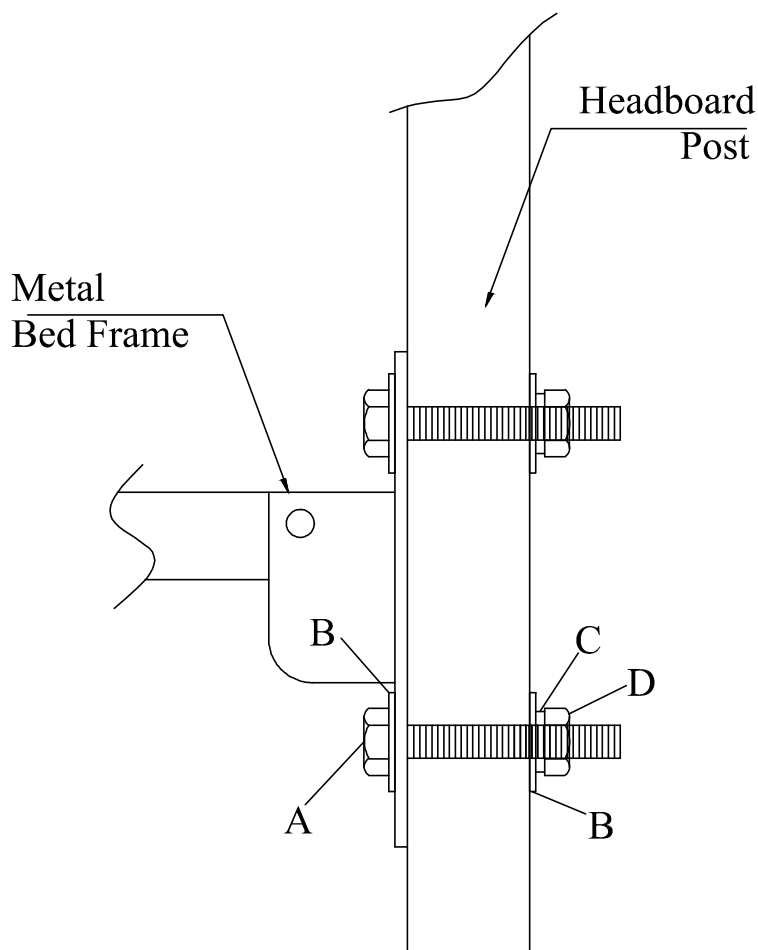

MADE IN VIETNAM