



Storage Shed Owner Manual

& Assemble Guide_SS16329-1

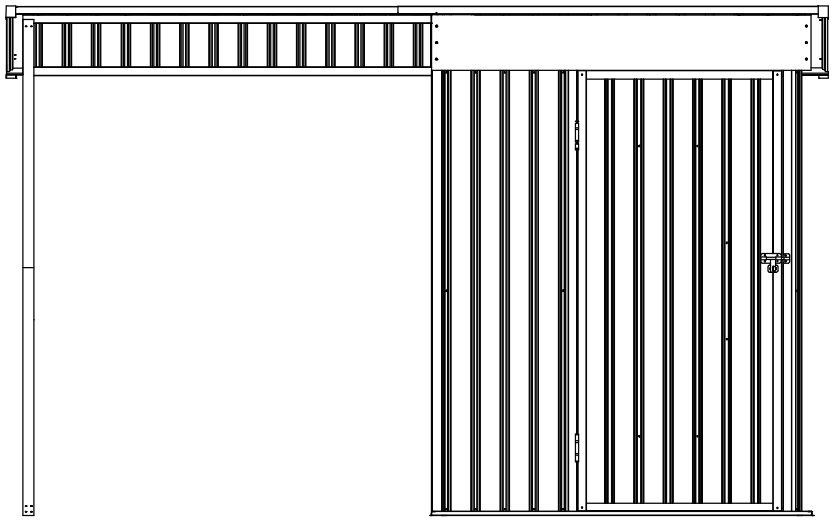

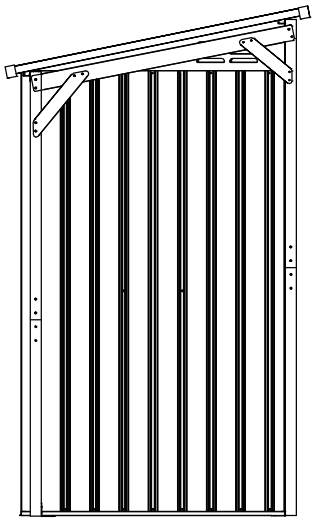

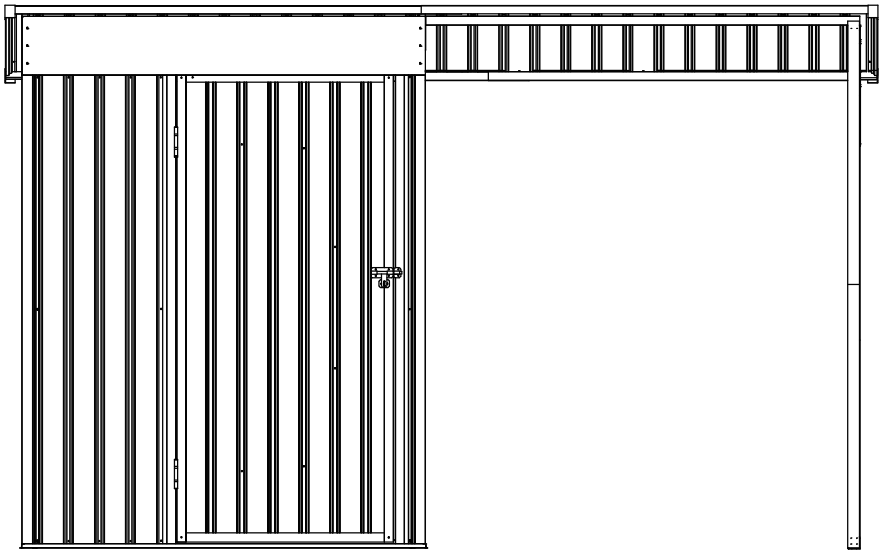

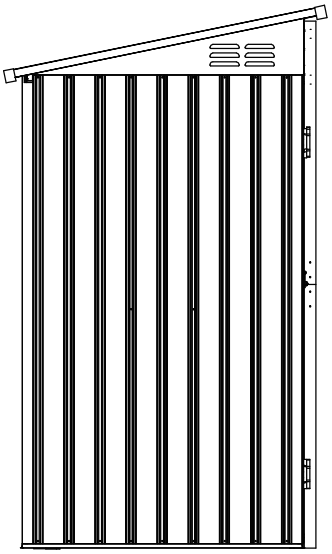


Customer Service:


If you have any problem, please contact us through the online platform.

All parts are packed in a box, please note that refer to the parts list to check if all parts are received.


Please prepare below tools before installation. (Not Included)

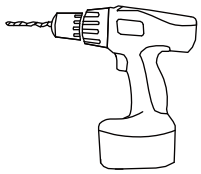

Electric Screwdriver



+ Manual Screwdriver

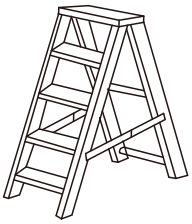


Ladder

Package included Tools



Gloves x 1Pair



Spanner x 1

ATTENTION

Care **MUST** be taken when handing various pieces of your building since many contain sharp edges.

Do NOT attempt to assemble your building before double checking that you have all parts indicated in the parts lists.Any building left partially assembled may be seriously damaged by even light winds.

Do NOT attempt to assemble your building on a windy day, the large panels can catch the wind like a “sail”, making construction difficult and unsafe. **Watch the weather closely.**

Keep children and pets away from the worksite during construction and until the building is completely assembled. This will help avoid distractions and any accidents which may occur.

Never concentrate your weight on the roof of the building.

Before assembling any parts, your base should be constructed and an anchoring system should be ready to use.Your building must be anchored to prevent wind damage.

ASSEMBLY

The best location is a level area with good drainage.

Allow enough space outside the building to be able to access the roof with a ladder.

USE TEAMWORK:Two or more people are required to assemble your building.

CARE & MAINTENANCE

Do NOT use power washing to clean your shed.


Combustibles and corrosives must be stored in air tight containers designed for chemical and/or combustible storage.



Rust Protection Precautions

Avoid nicking or scraping the coating surface,inside and out.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.


Part List

PART	NO.	QTY.
	W5	4
	W3	2
	W5-C	2
	K310W5-C	1
	K310W5-CR	1
	K35-14	2
	K35-14M	5
	W5-X	1
	W3-HX	1
	K34-1	2
	K35-2	2
	K310-4	2
	K34-5	1
	K310-5L/R	1
	K310-5	1
	K310-5M	1
	K310-8	1
	K310-6L	1
	K310-6R	1
	K34-7	1
	K35-15	2
	K310-9L	2
	K310-9R	2
	ULA	1
	URA	1
	DX1	2

PART	NO.	QTY.
	DLA1	1
	DRA1	1
	DD	2
	K310-11	1
	K310-11R	1
	K310-12	1
	K310-13	1
	K310-14	2
	K310-15	1
	K310-16	1
	K310-10	2
	K310-17	2
	K310-18	2
	K310-19	1
	K310-19R	1
	GC	4
	T-F	4
	C2	4
	F1	269
	F2	31
	F3	16
	V2	78
	DH	2
	DCS	1
	M4	1
	ST	2
	PZ1	6


Left Extension

NOTE: This is not the beginning of the installation steps; it is merely to indicate where each component will be installed.

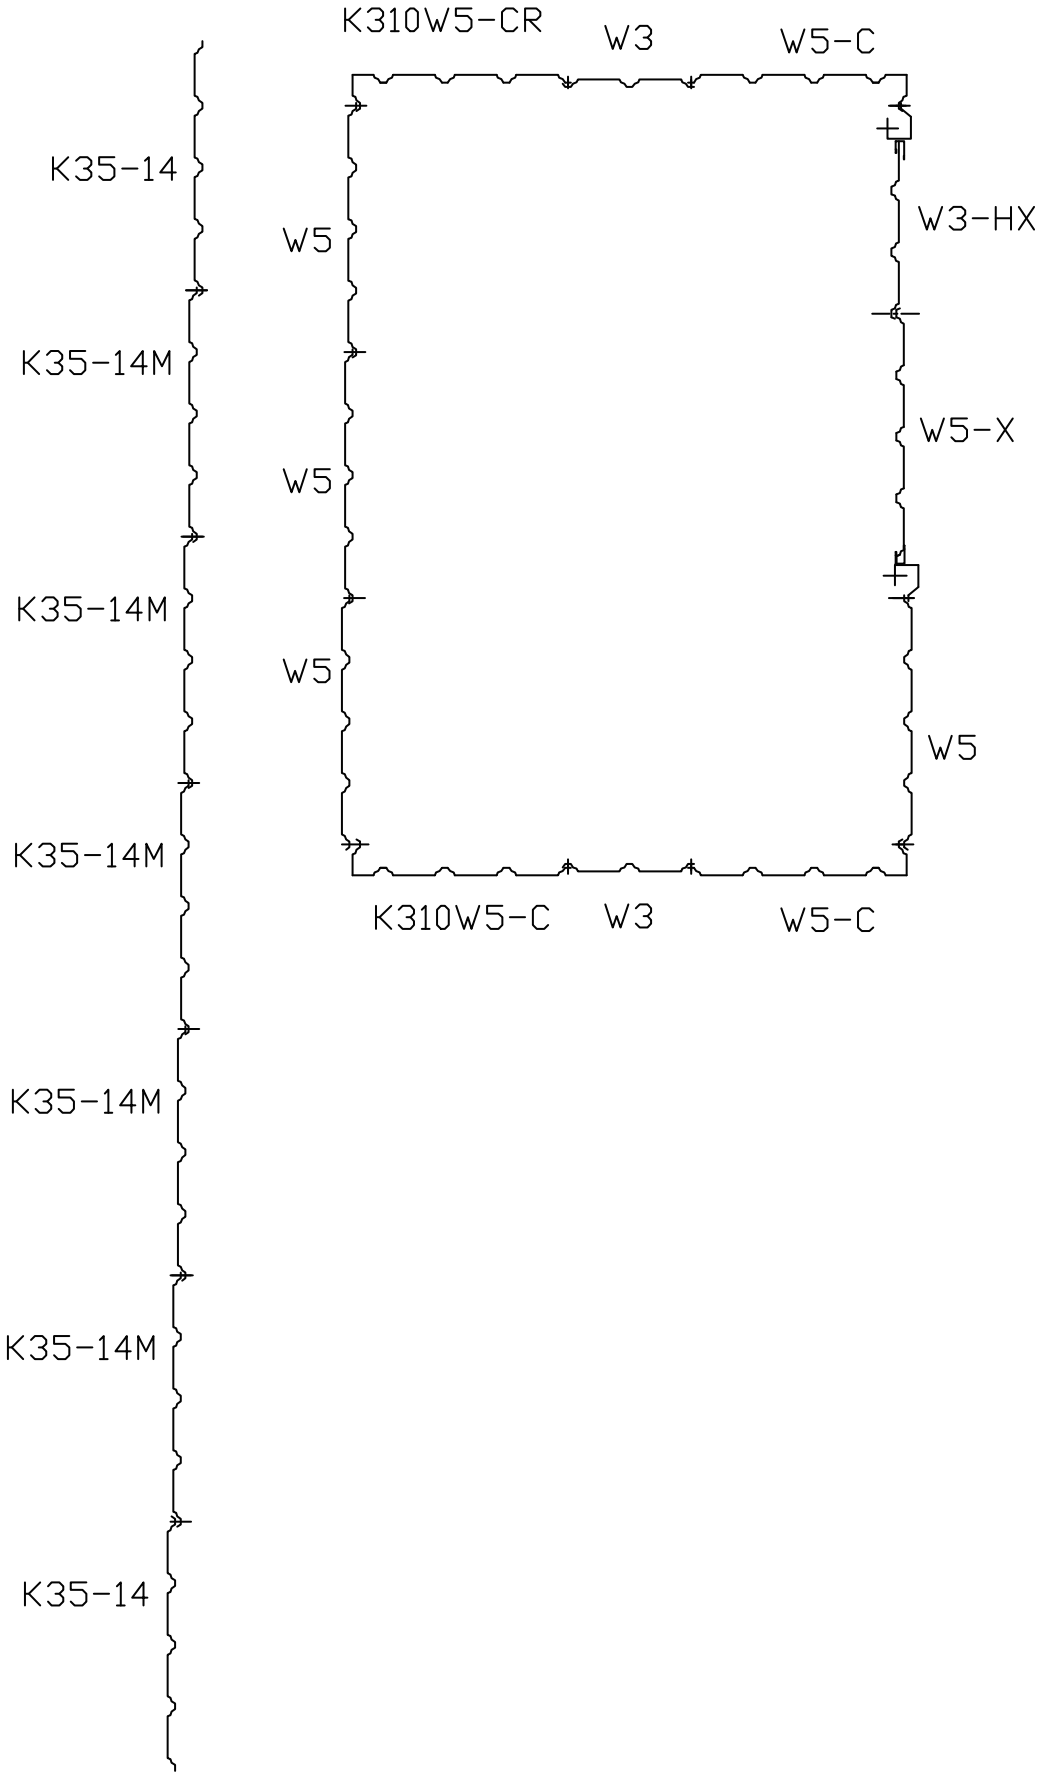


NOTE: This is not the beginning of the installation steps; it is merely to indicate where each component will be installed.


Left Extension

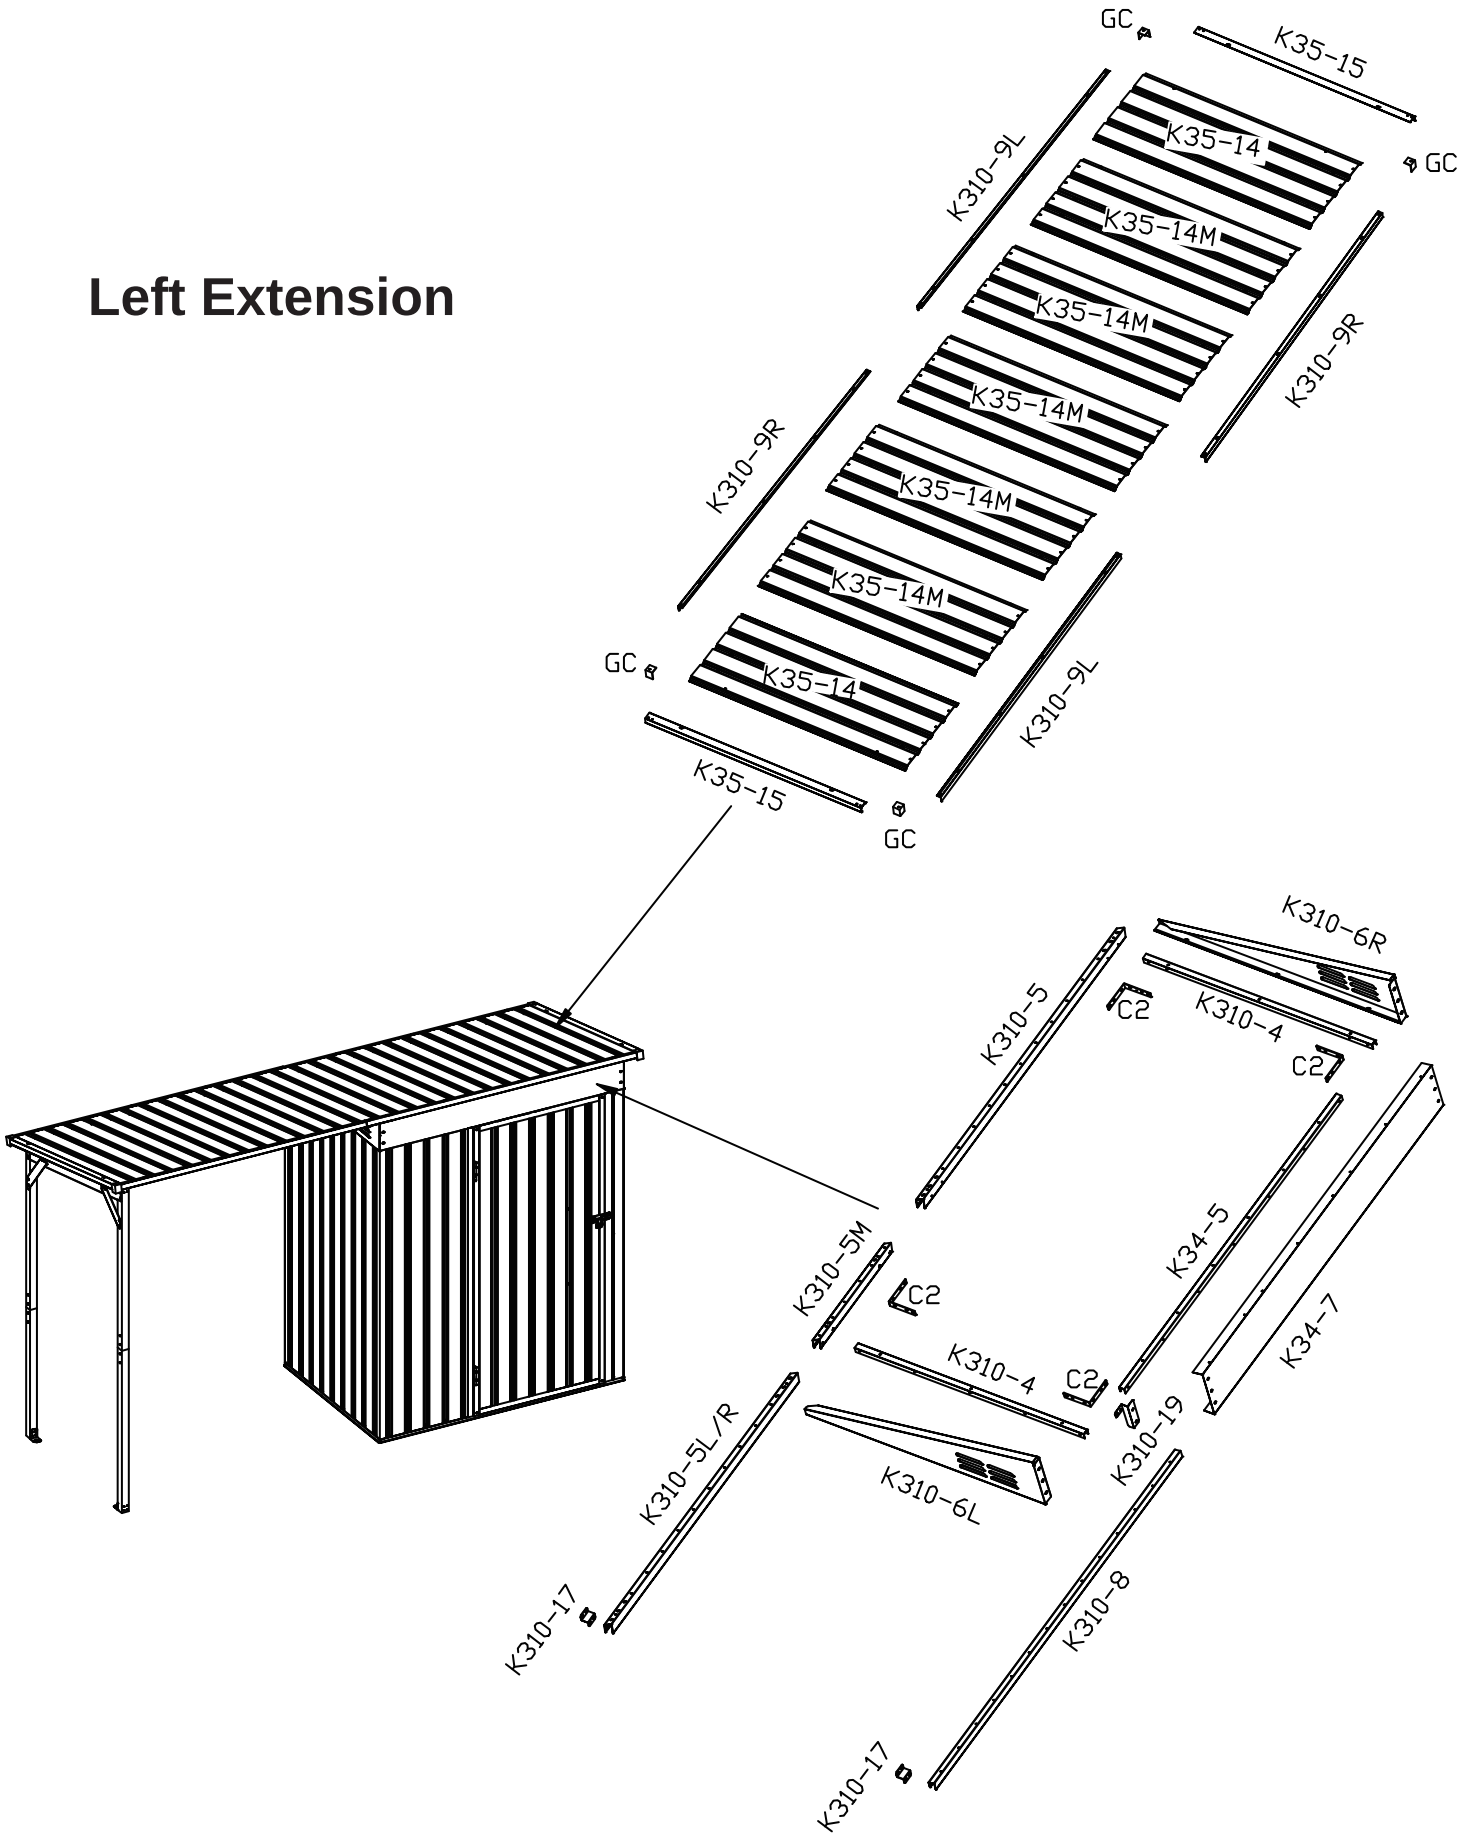


NOTE: This is not the beginning of the installation steps; it is merely to indicate where each component will be installed.

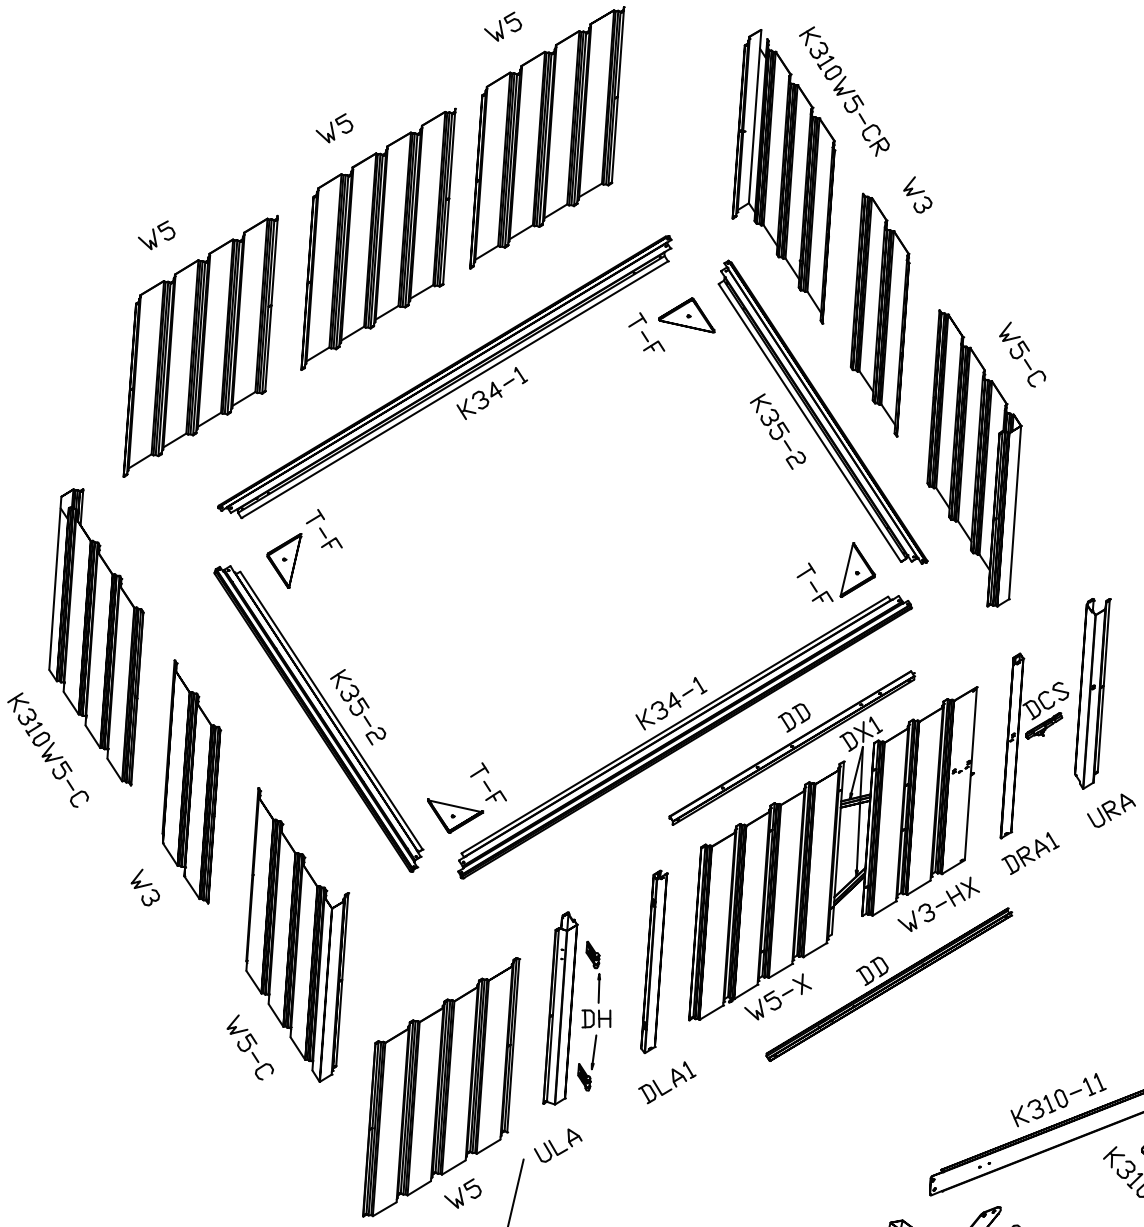


Left Extension

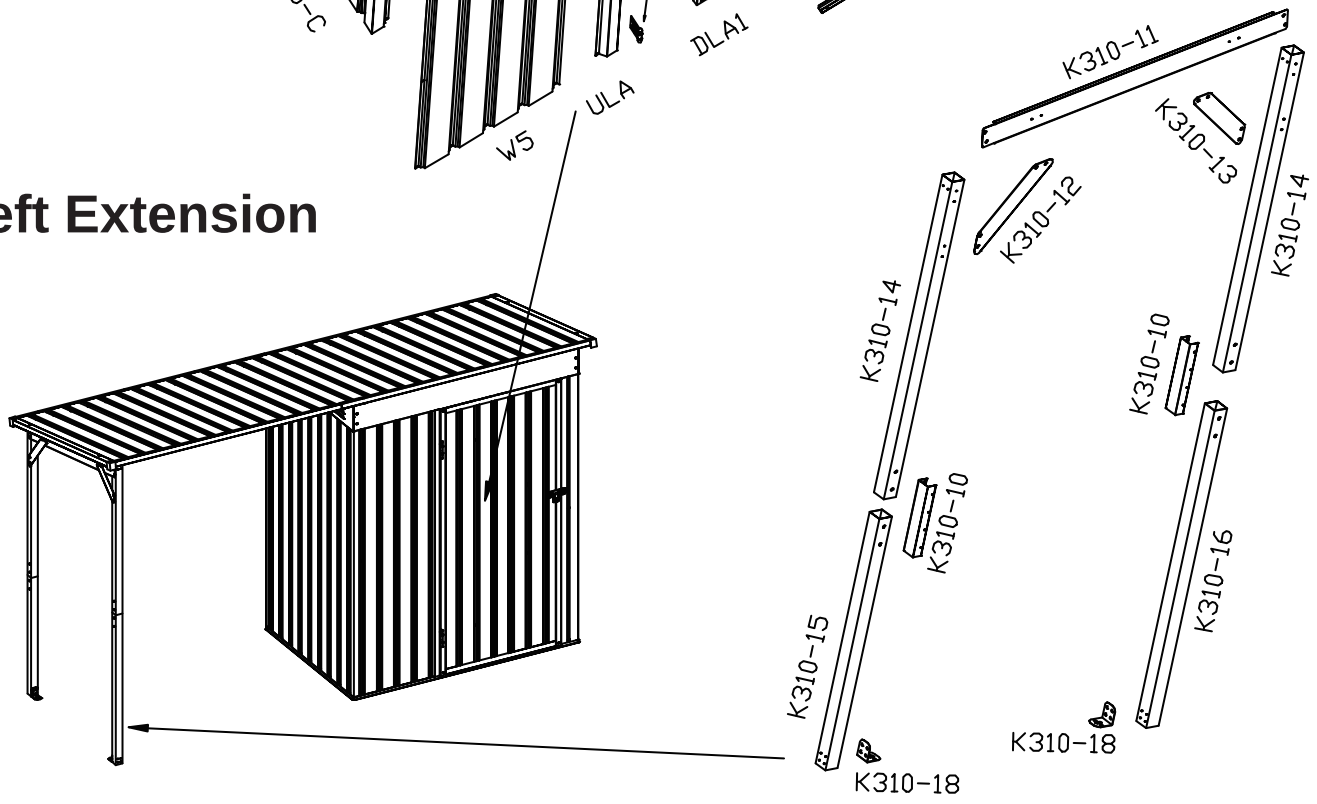



Shed Base Assemble

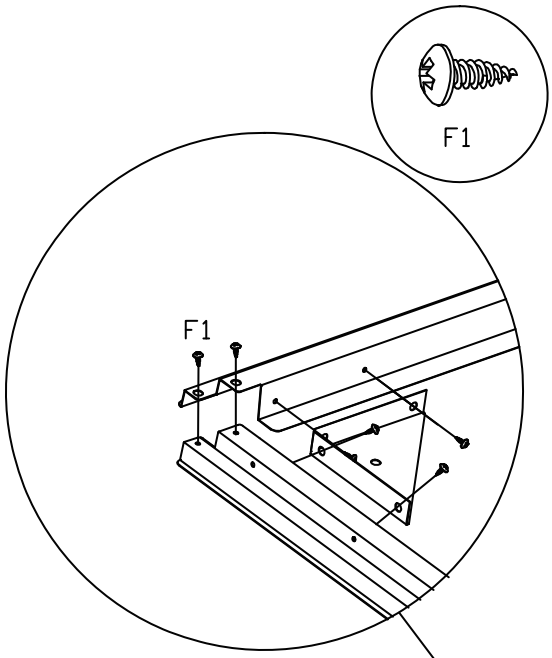

PART	NO.	QTY.
	K34-1	2
	K35-2	2
	T-F	4
	F1	24


Left Extension

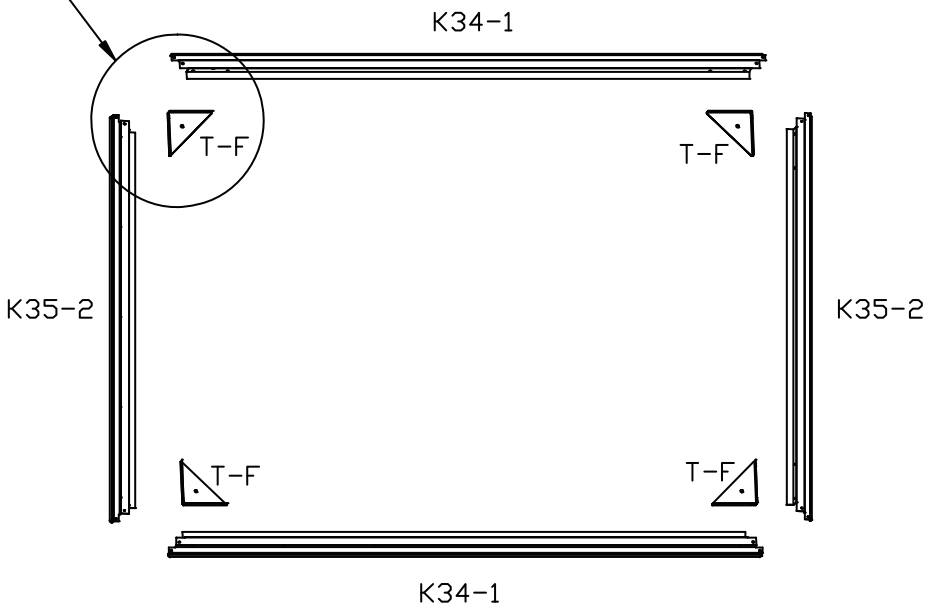

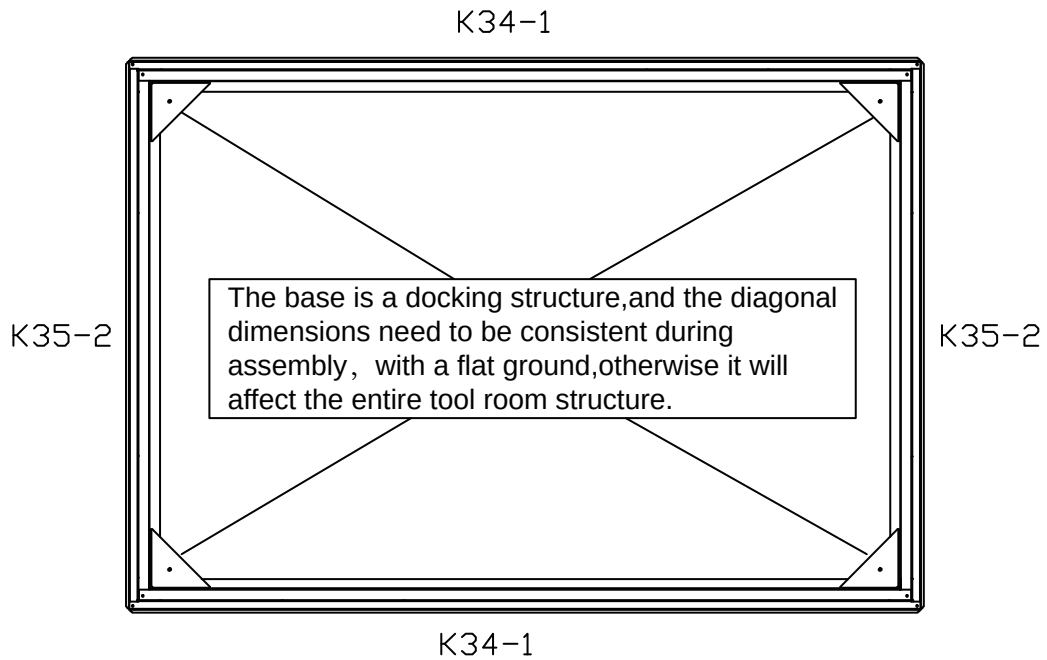


The base is a docking structure,and the diagonal dimensions need to be consistent during assembly， with a flat ground,otherwise it will affect the entire tool room structure.

Side Panel Assemble

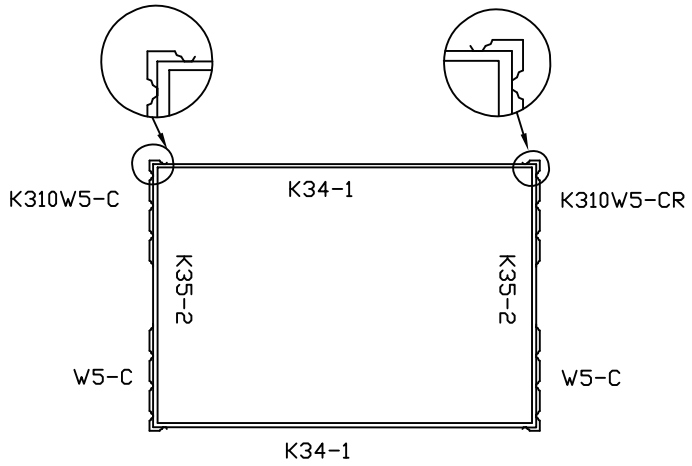


PART	NO.	QTY.
	K310W5-C	1
	K310W5-CR	1
	W5-C	2
	F1	12

Left Extension

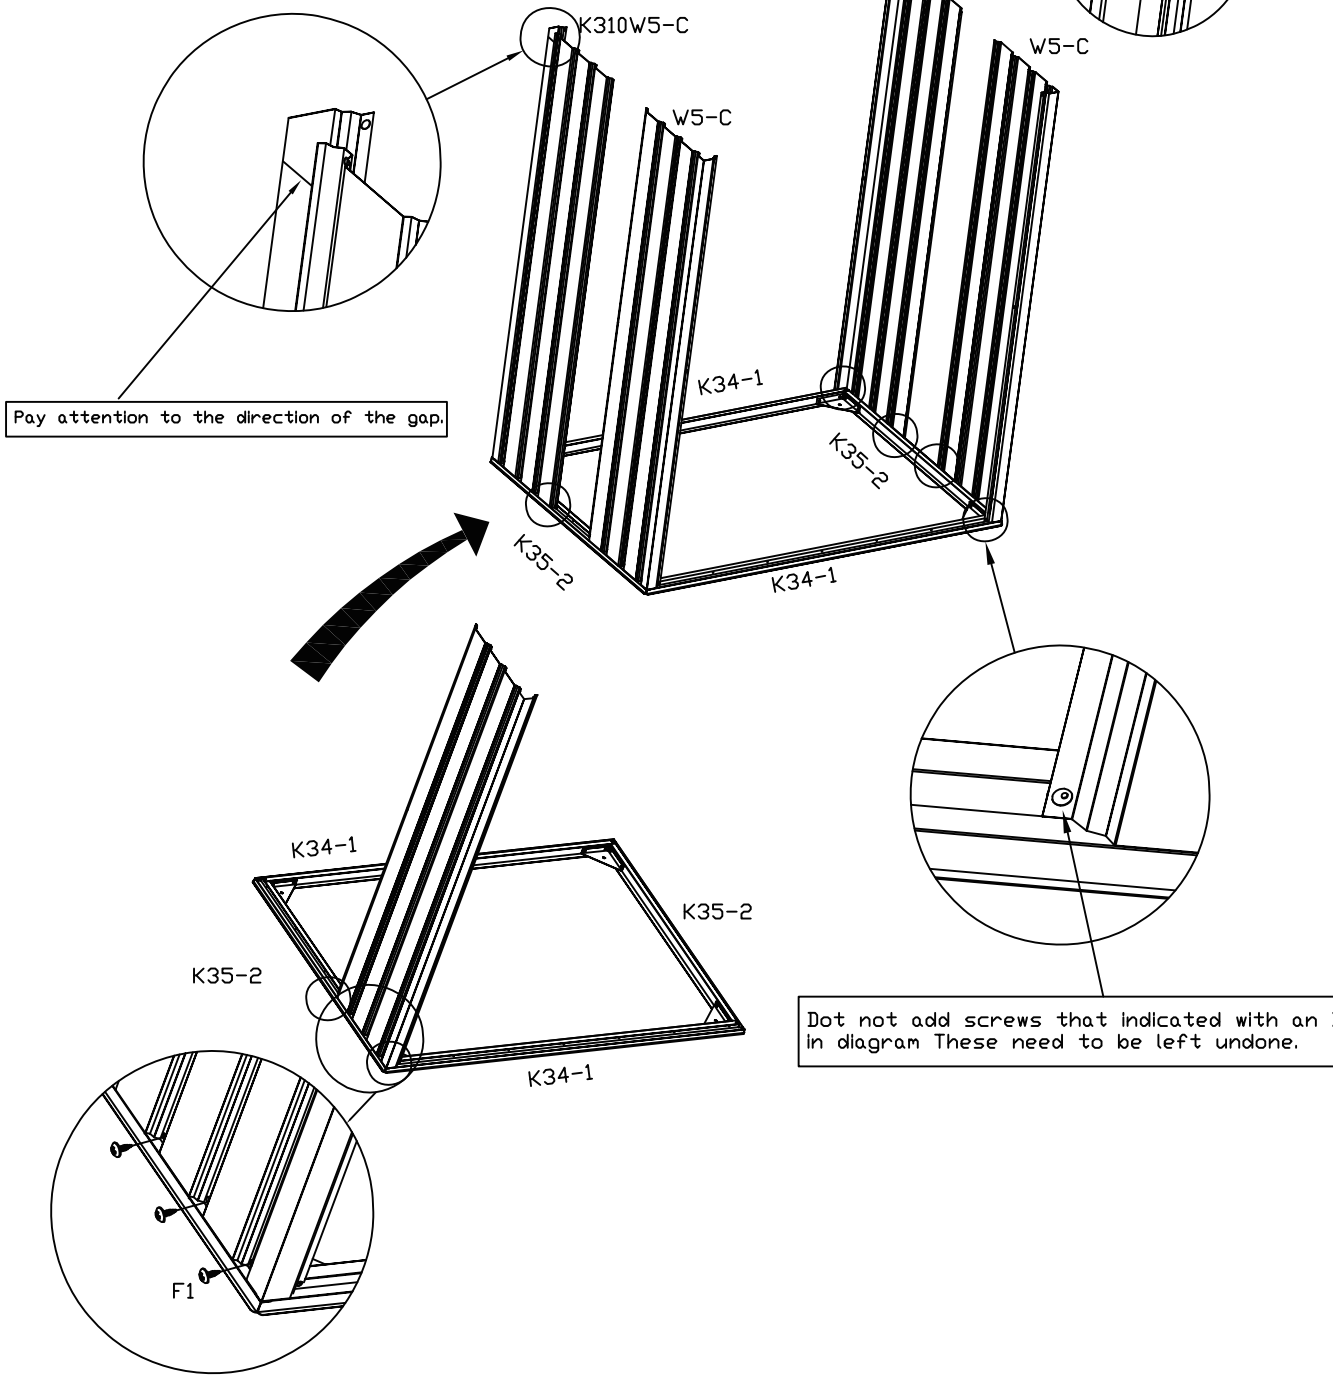

Left Extension

PART	NO.	QTY.
	K310-4	2
	F1	12

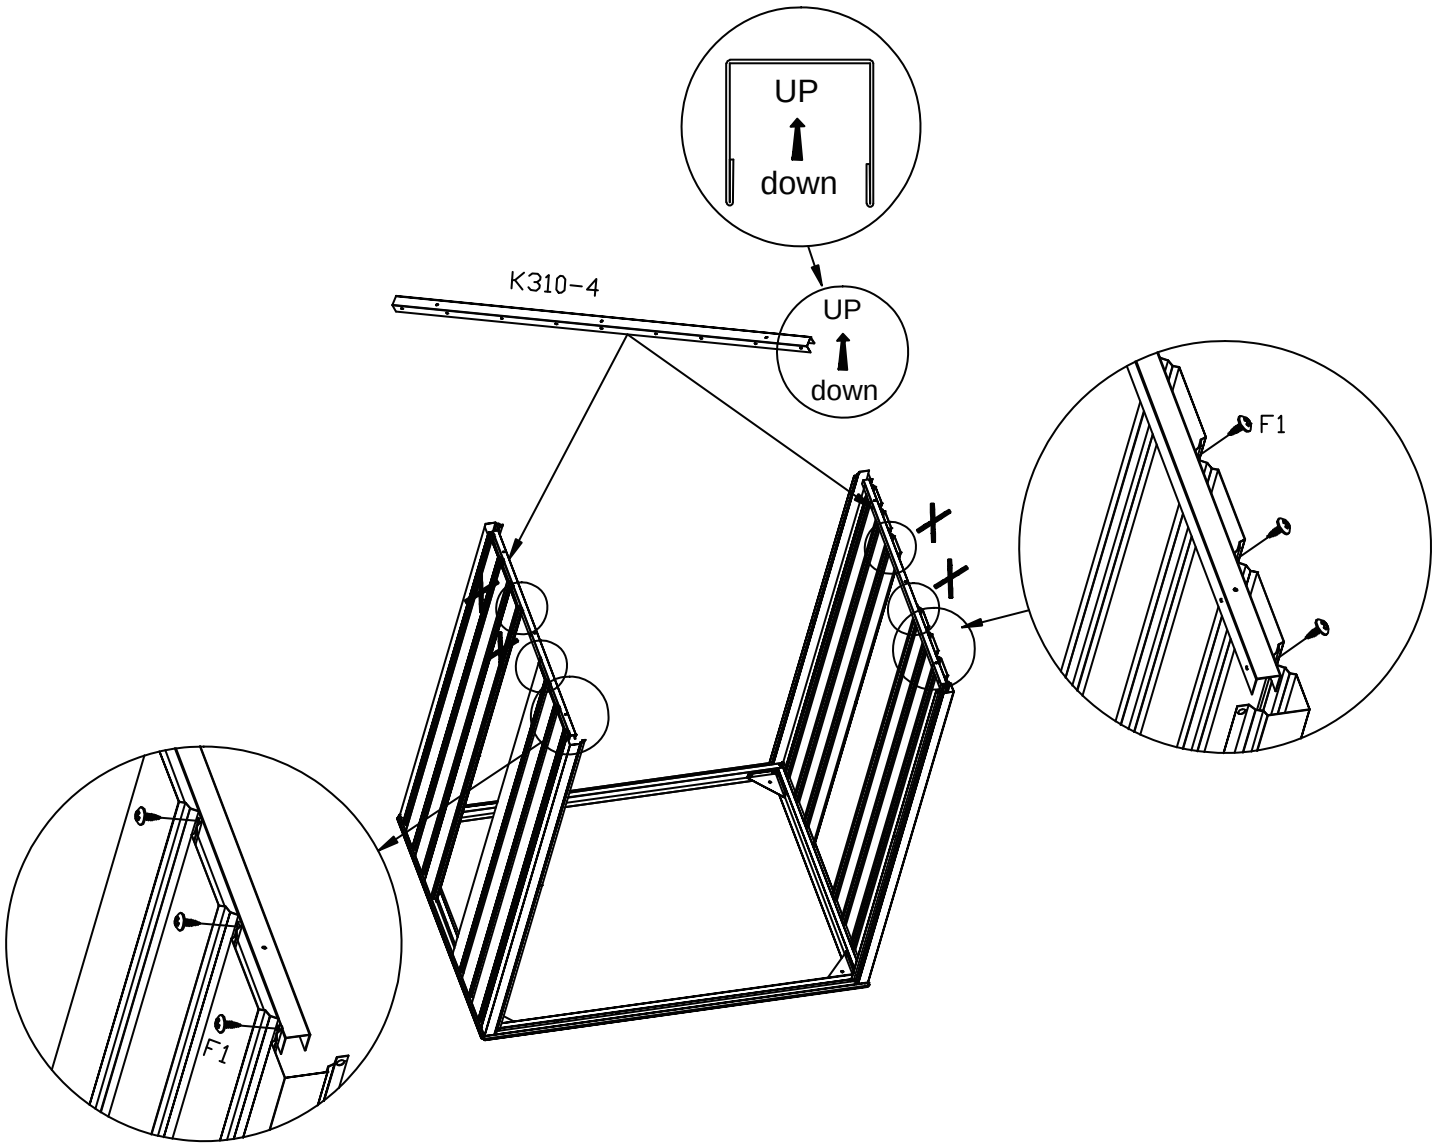



Left Extension


PART	NO.	QTY
	K310-5	1
	K310-5M	1
	C2	2
	F1	7

Left Extension


PART	NO.	QTY.
	component A	1
	K34-5	1
	F1	12
	C2	2

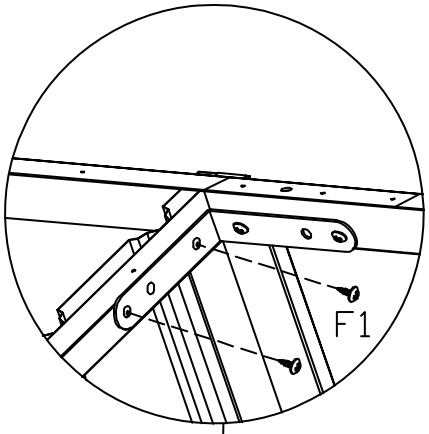


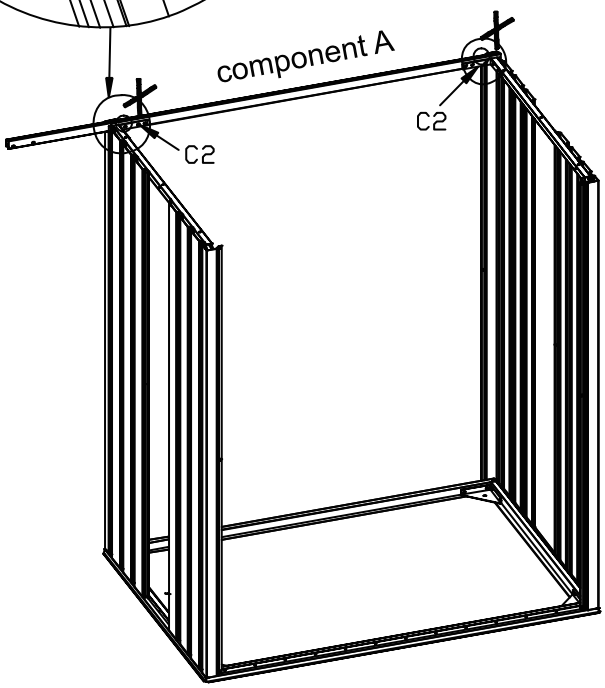


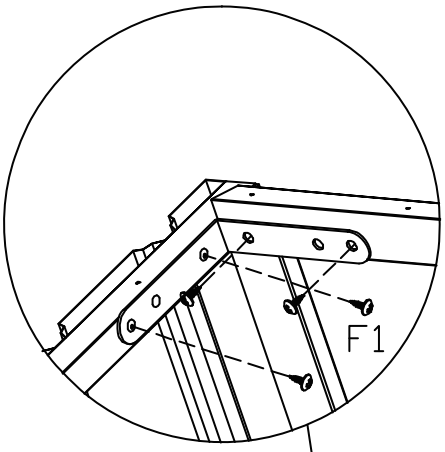



Dot not add screws that indicated with an X in diagram These need to be left undone.

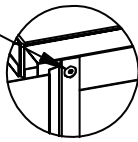


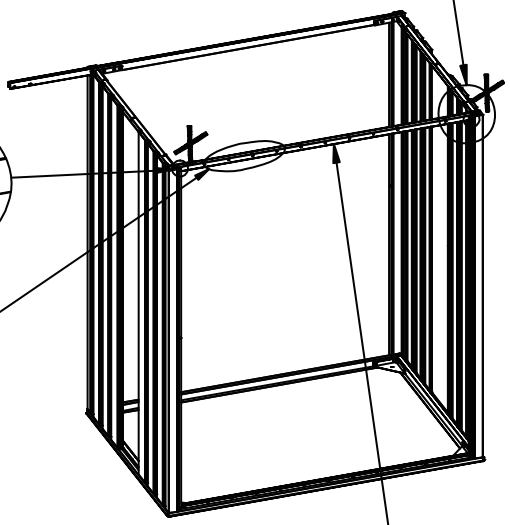


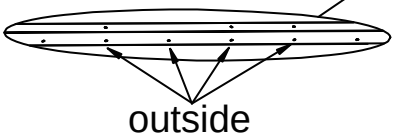

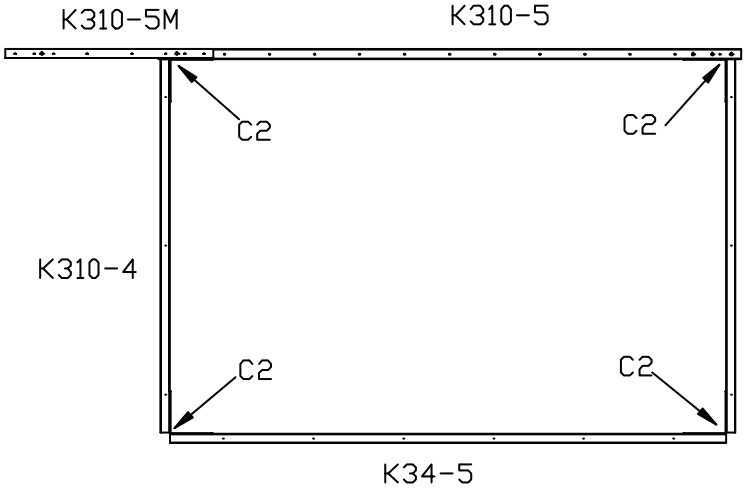

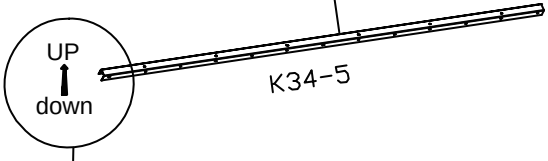


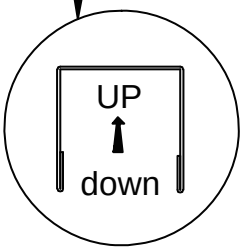

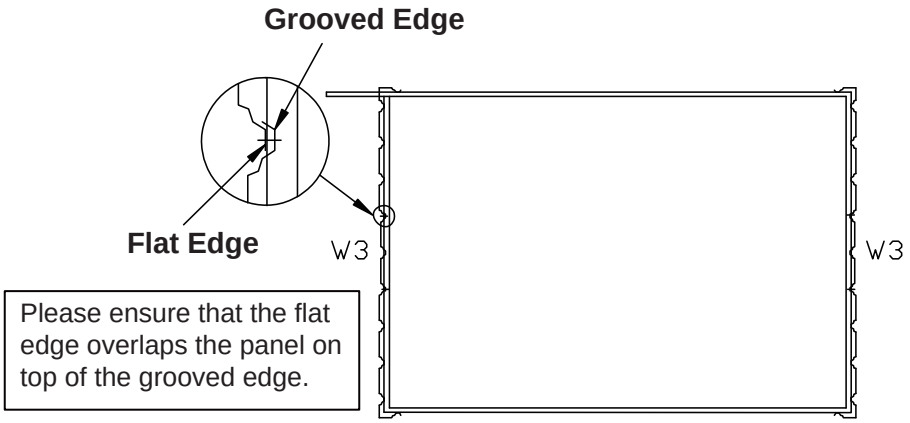

Please ensure that the flat edge overlaps the panel on top of the grooved edge.


PART	NO.	QTY.
	W3	2
	F1	12
	F2	4

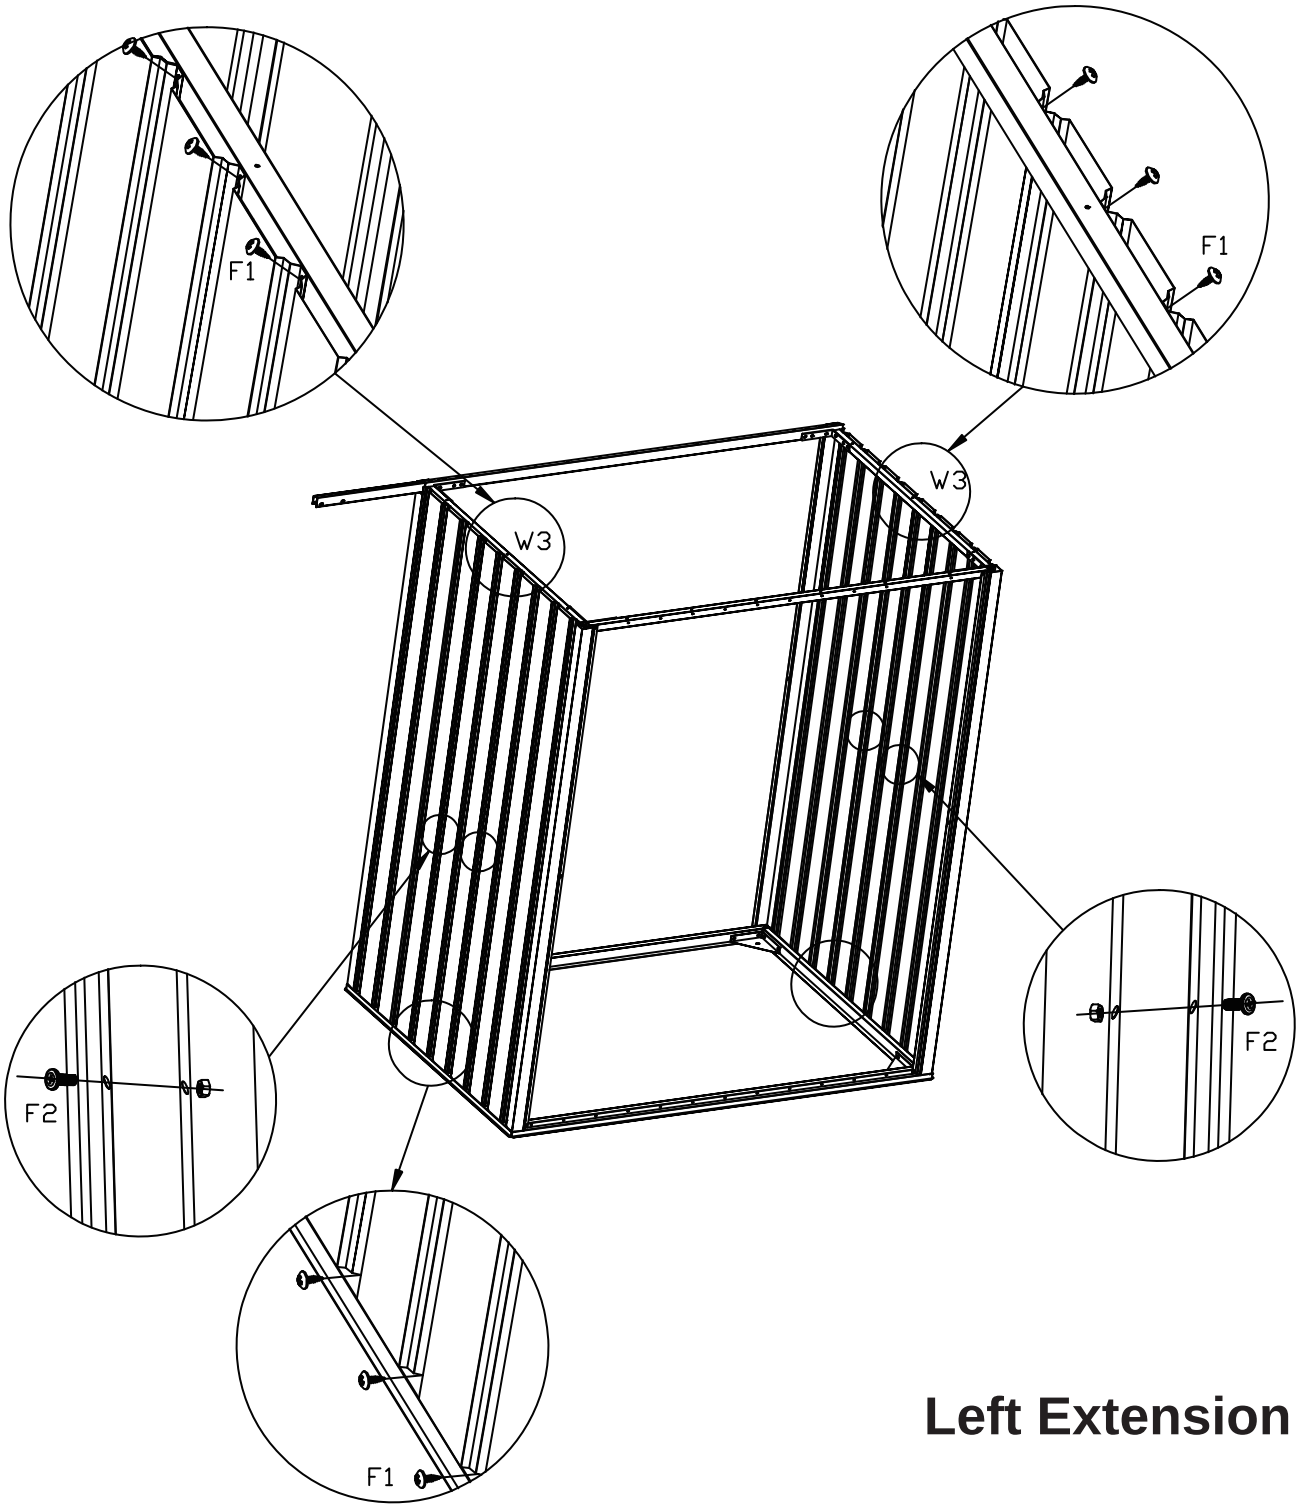


Left Extension


Left Extension

PART	NO.	QTY.
	W5	3
	F1	26
	F2	4

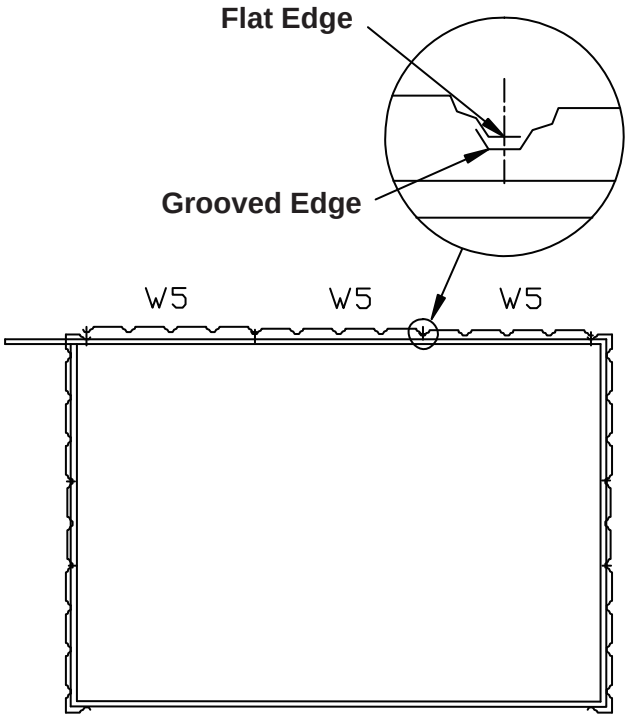

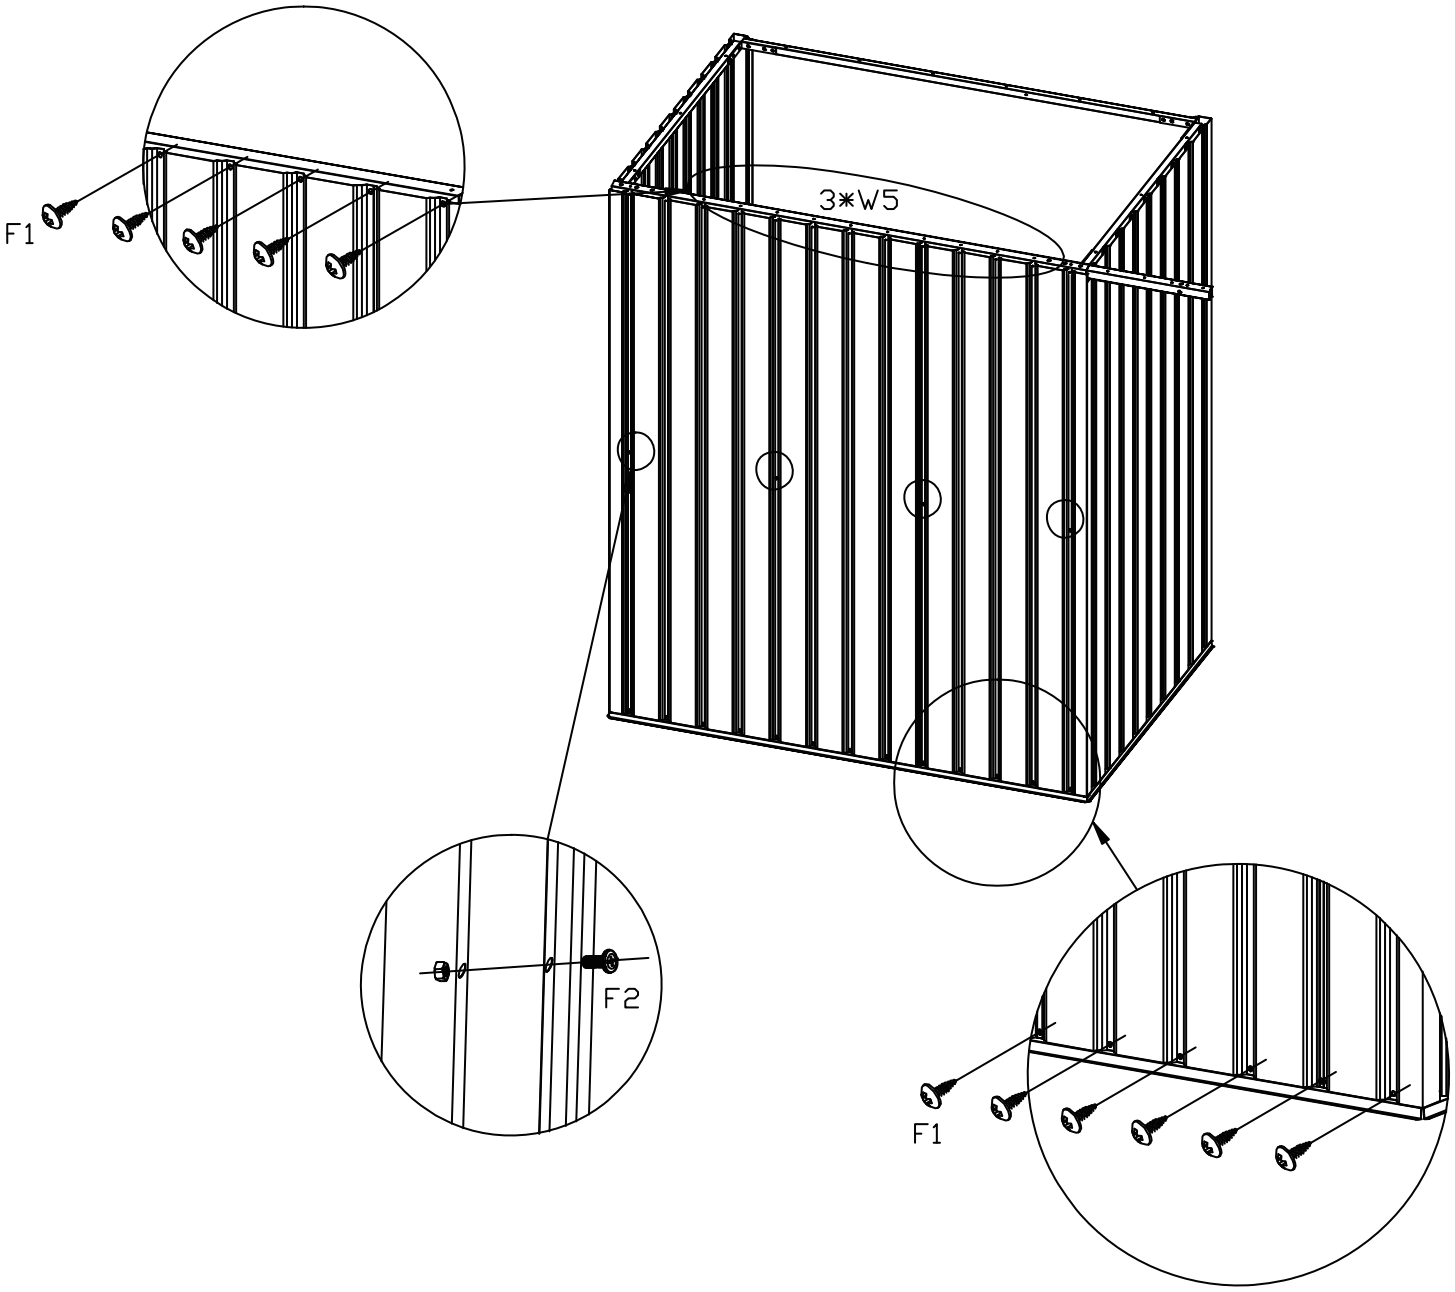


Left Extension

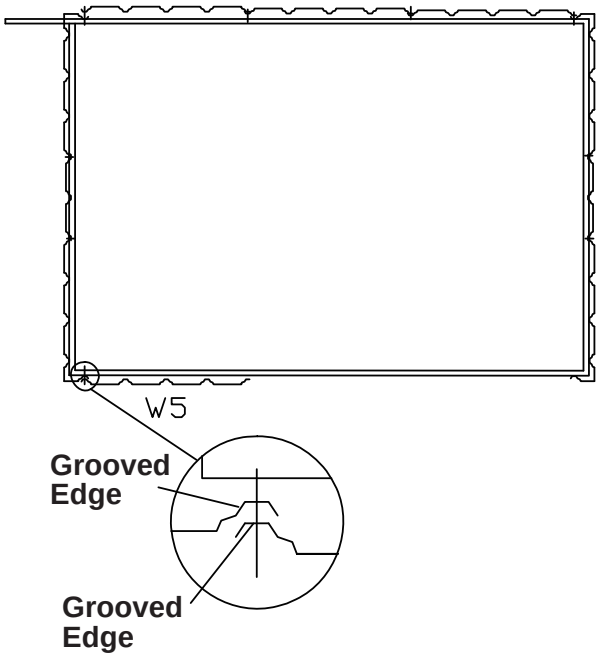



PART	NO.	QTY.
	W5	1
	F1	8
	F2	1

Dot not add screws that indicated with an X in diagram These need to be left undone.

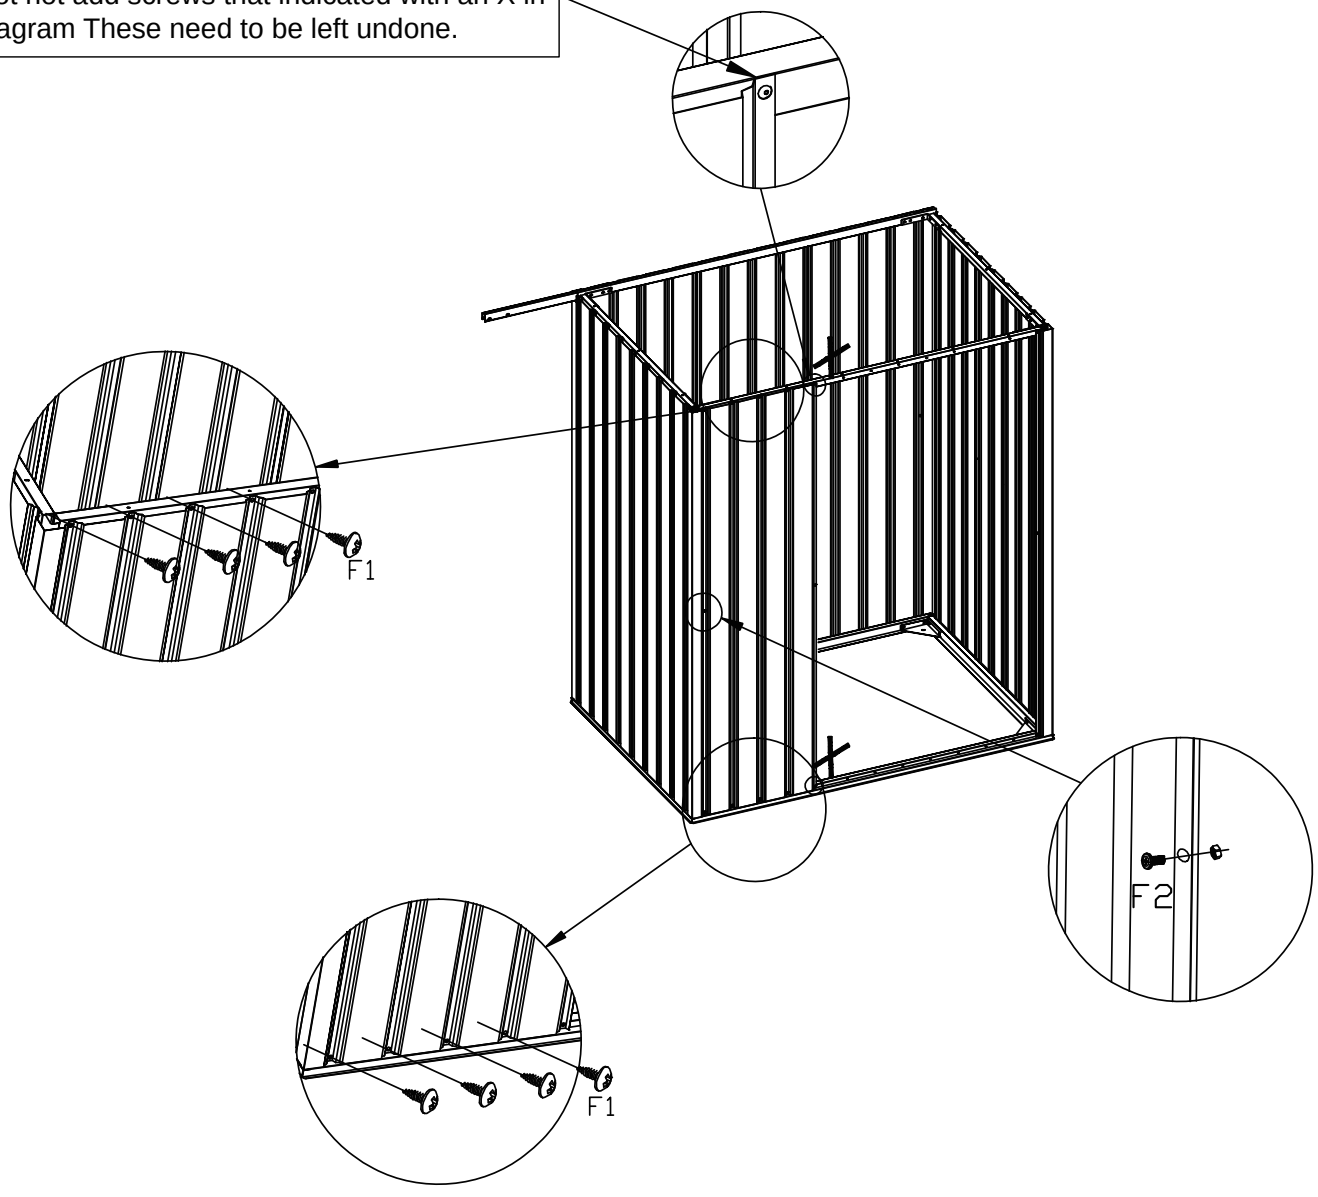



Left Extension

PART	NO.	QTY.
	ULA	1
	URA	1
	F1	8
	F2	2

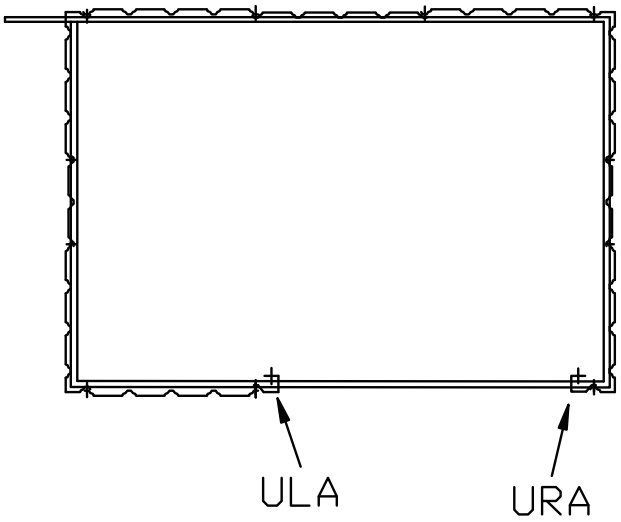


① ULA/URA notch is inserted into K34-5.

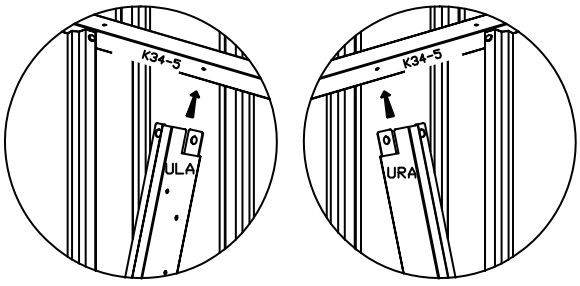


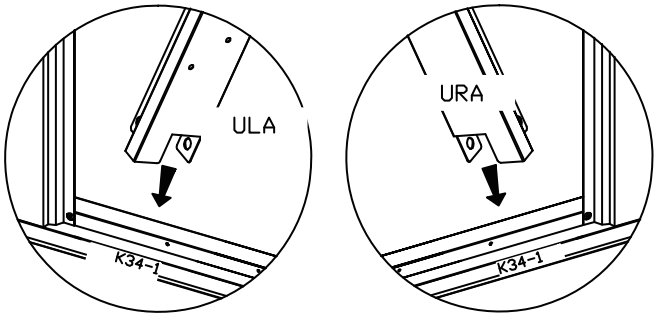

② ULA/URA notch is inserted into K34-1.

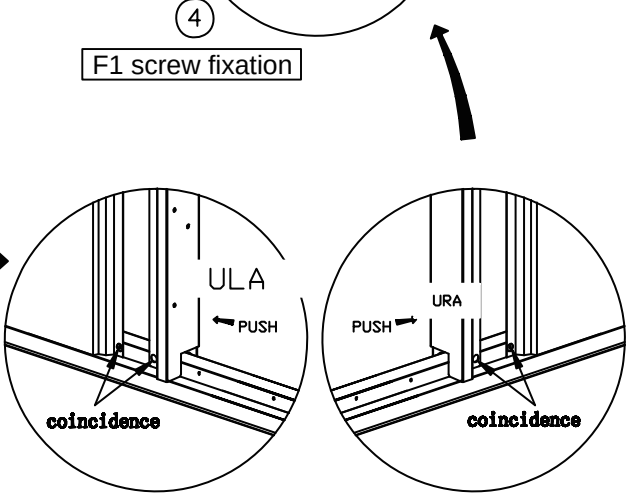

③ Push ULA/URA to coincide with the screw holes on the board.

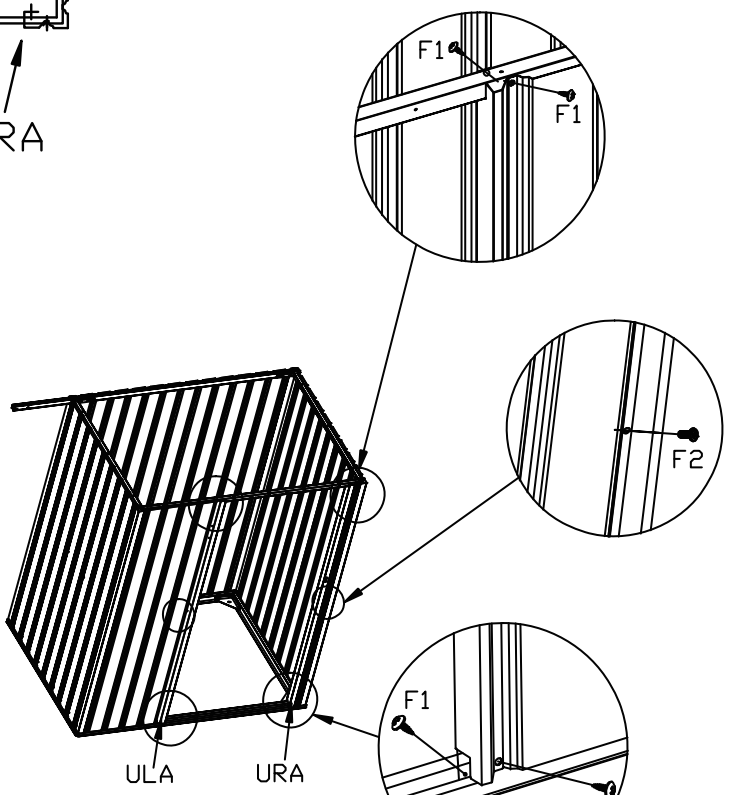



④ F1 screw fixation


Top Panel Assemble

Left Extension


Note: to prevent misalignment, first install the screws in the middle of the ventilation panel (as indicated by the arrow).


PART	NO.	QTY.
	K310-6L	1
	K310-6R	1
	K34-7	1
	K310-19	1
	F1	12
	F2	6

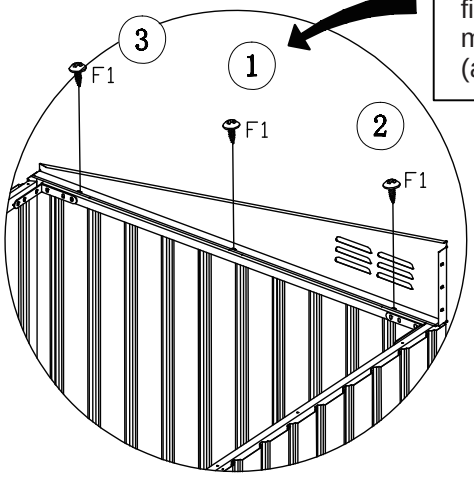


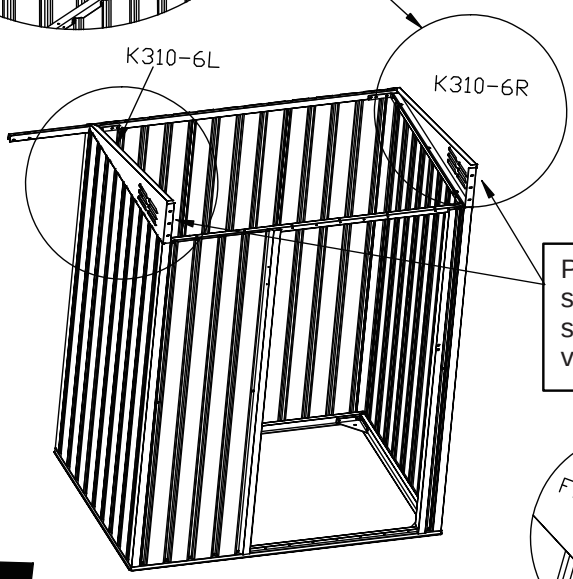



Please note the installation direction shown in the diagram: ensure the short side of the right-angled triangle on the top ventilation panel is facing the door.

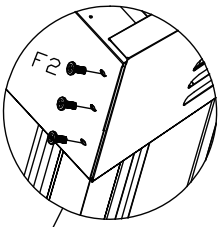


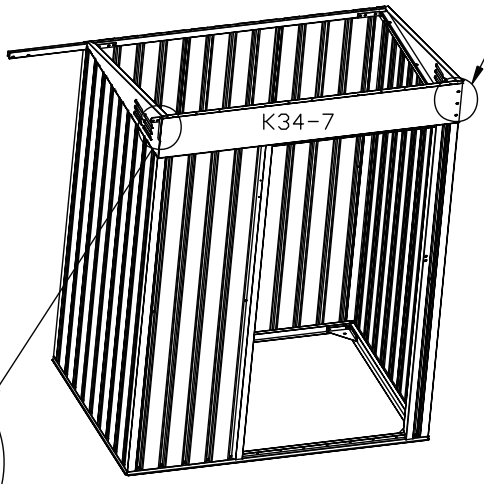

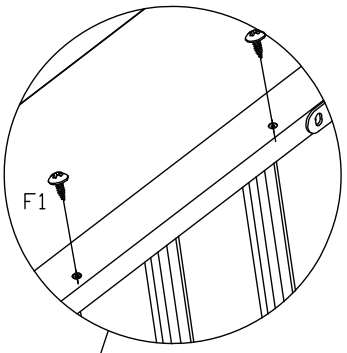

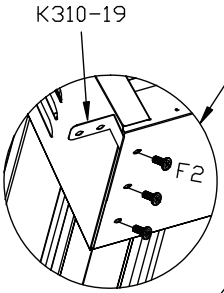

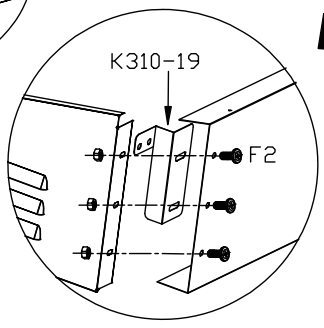

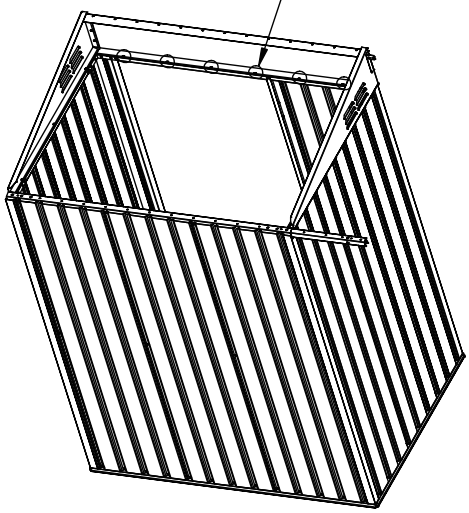

Left Extension


PART	NO.	QTY.
	K310-5L/R	1
	K310-8	1
	K310-17	2
	F1	9

Left Extension


PART	NO.	QTY.
	K310-14	2
	K310-15	1
	K310-16	1
	K310-10	2
	K310-18	2
	F1	24


TUBE 1 :
formed by connecting two short posts, K310-15 and K310-14.

TUBE 2 :
formed by connecting two short posts, K310-16 and K310-14.

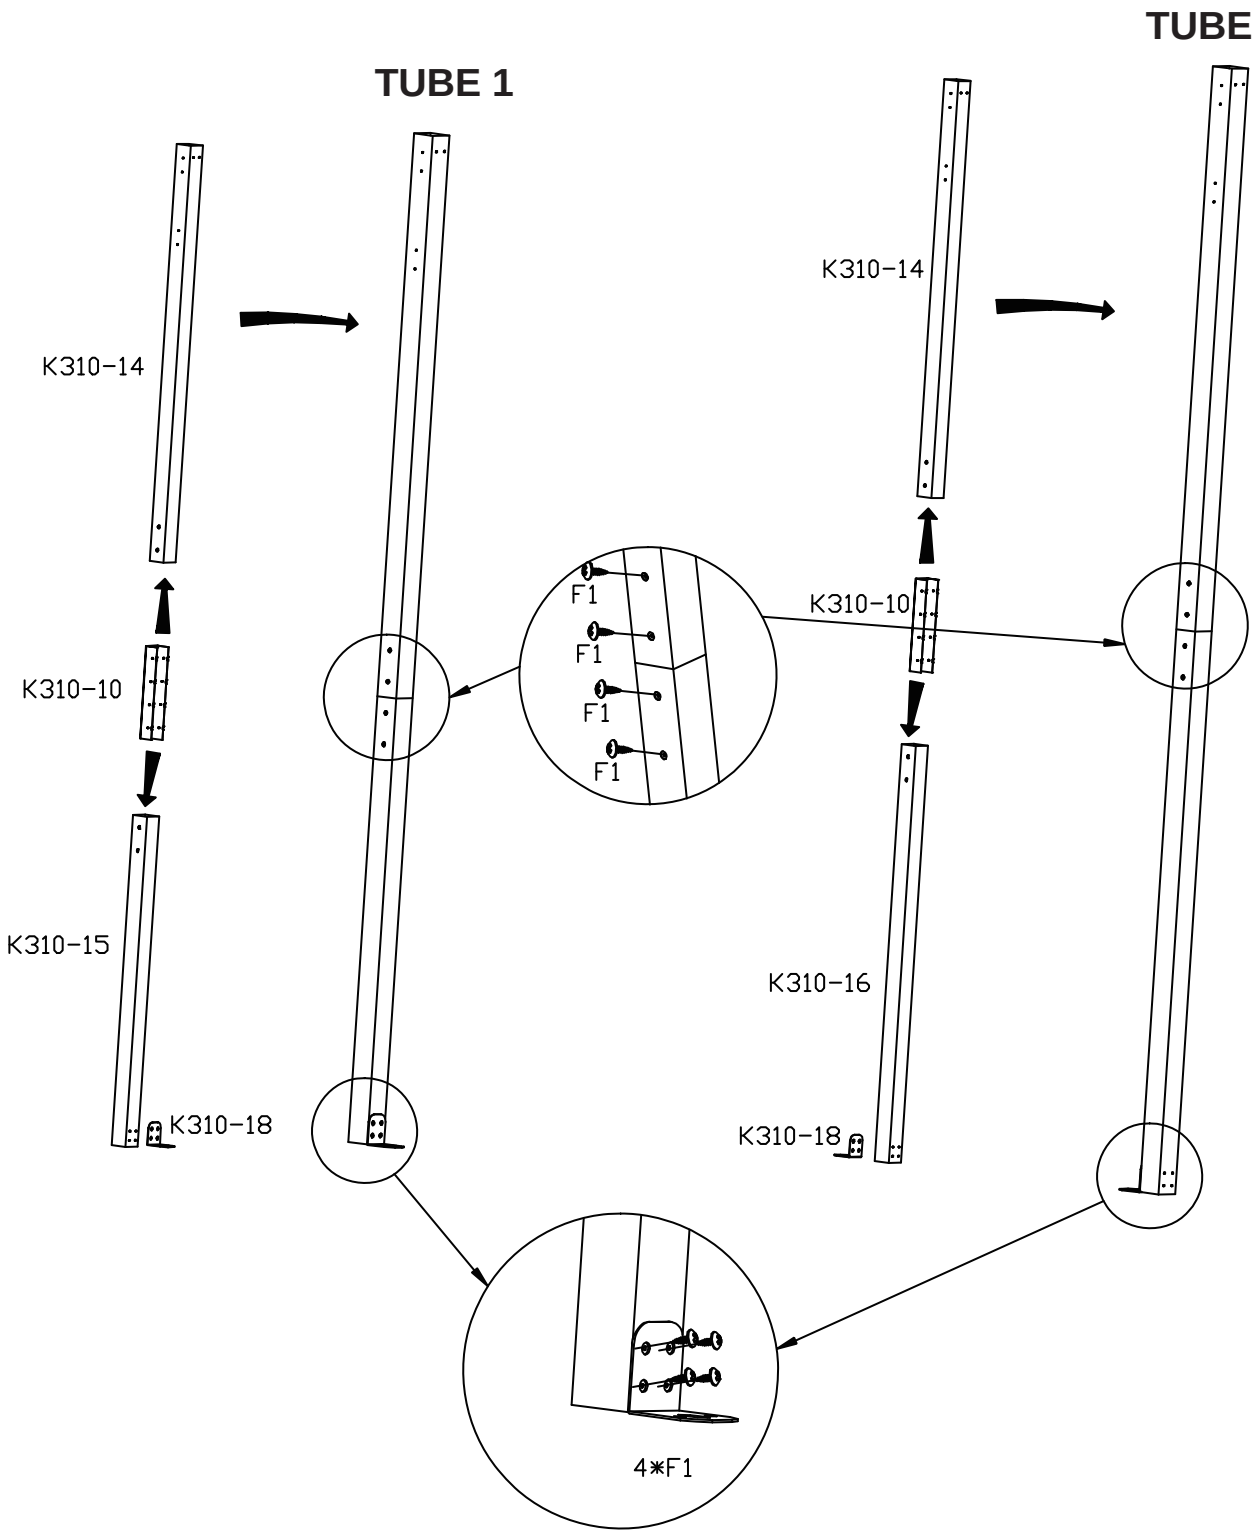


Left Extension

PART	NO.	QTY.
	K310-11	1
	K310-12	1
	K310-13	1
	TUBE1	1
	TUBE2	1
	F1	16

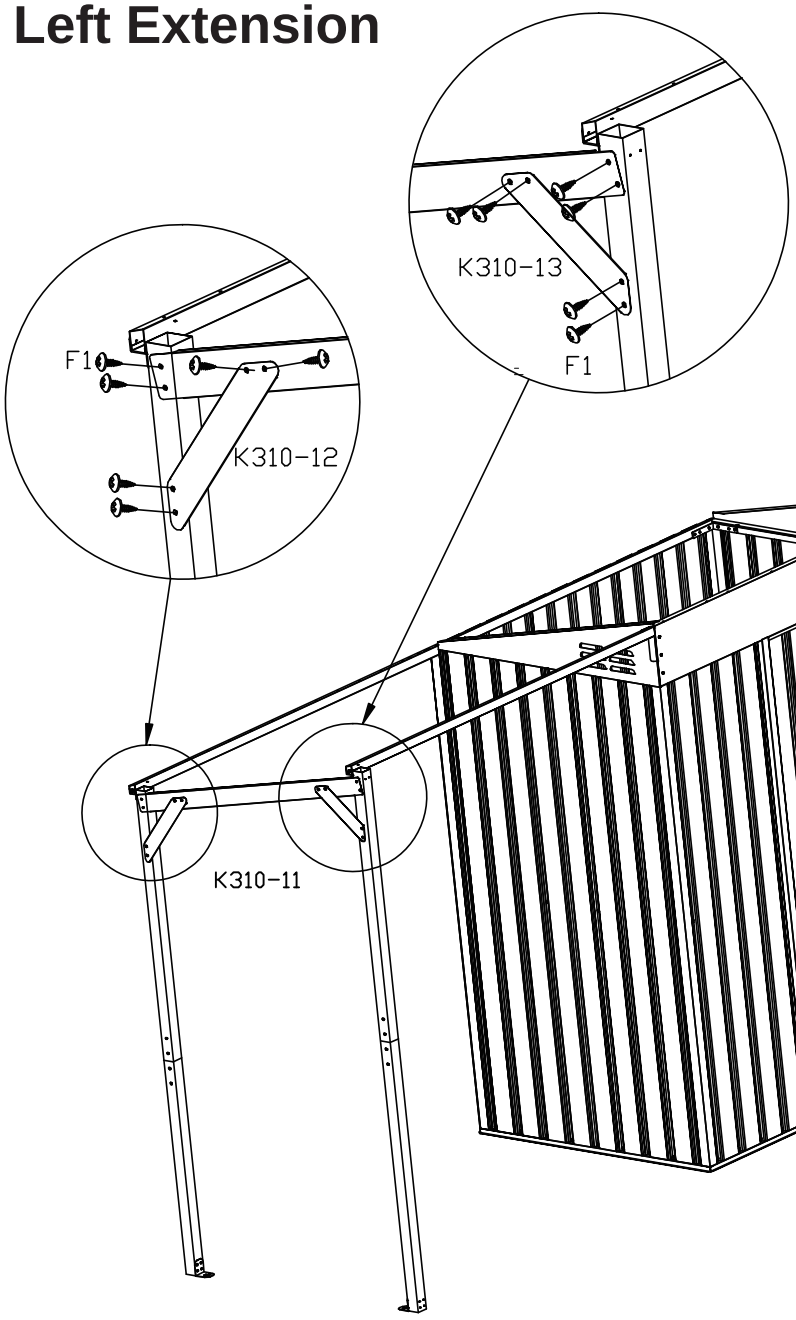


TUBE 1

TUBE 2

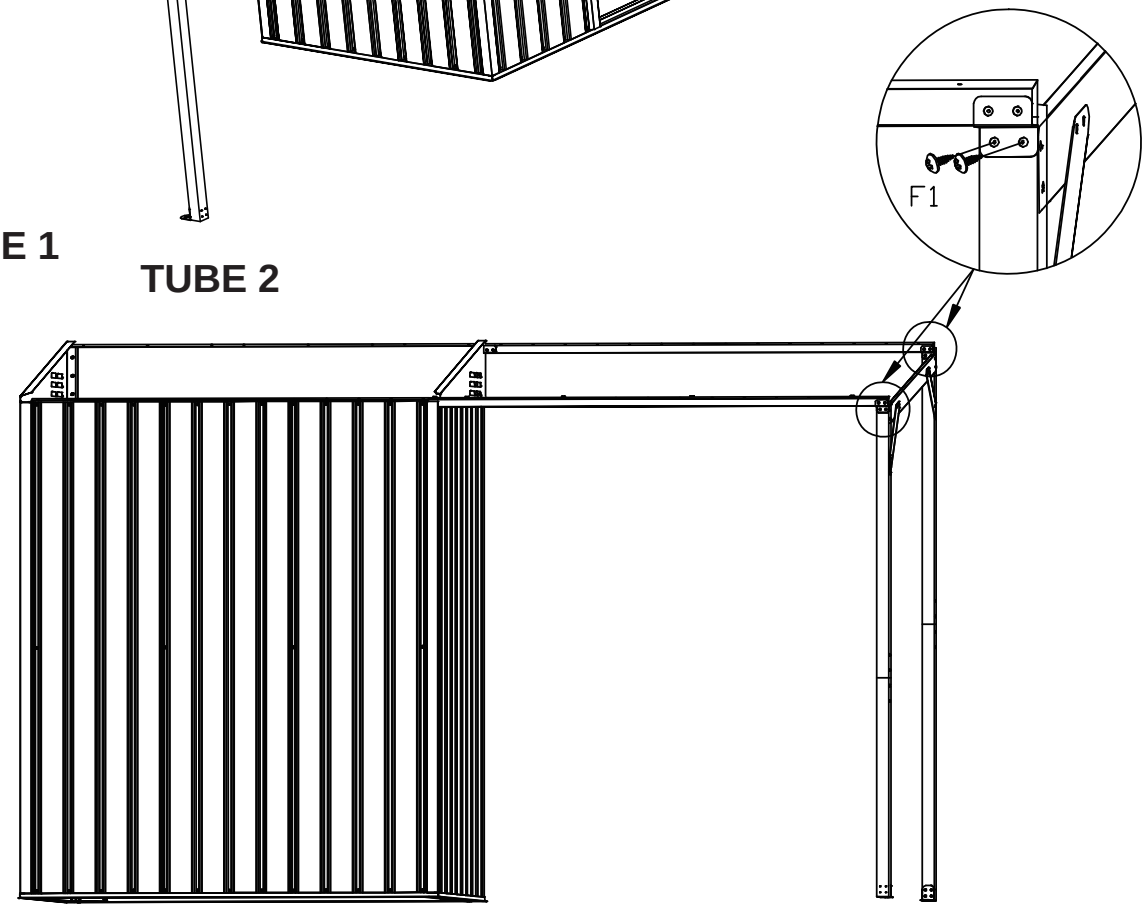


Left Extension


PART	NO.	QTY.
	K35-14	2
	K35-14M	5
	V2	54
	F1	54

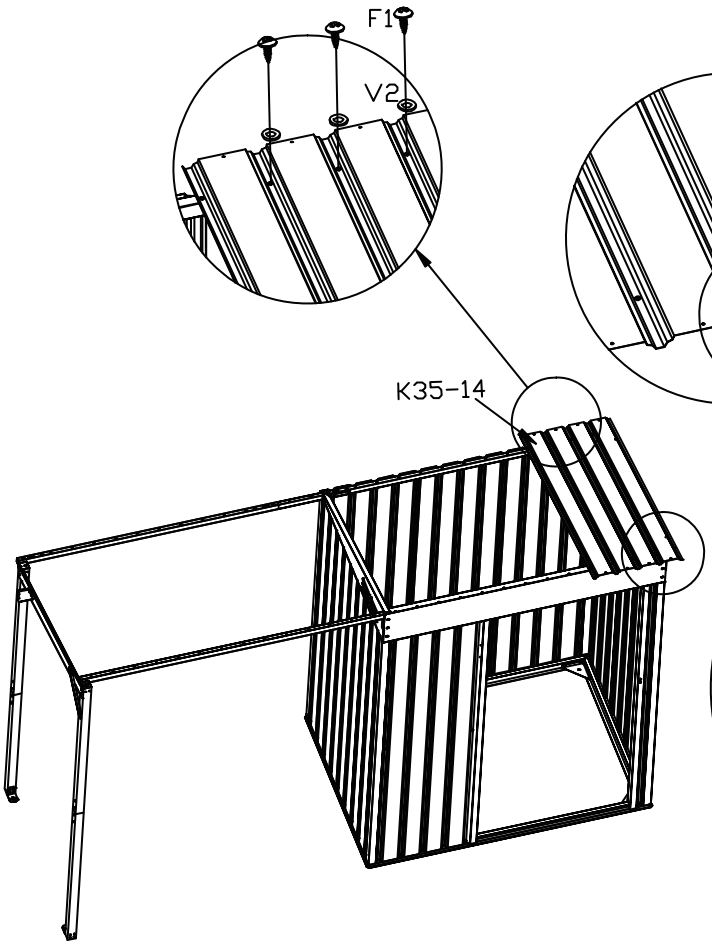



Please install K35-14 with the small hole facing the outside of the cabinet.

Please extend K35-14 towards the shed door by approximately 1.97 inches (just an estimate).

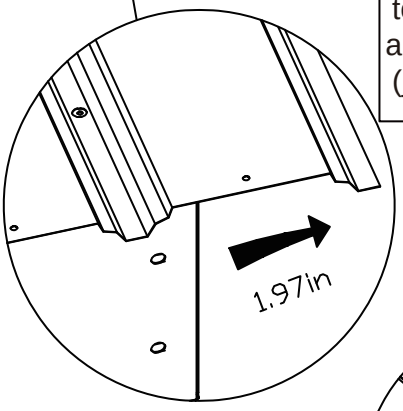

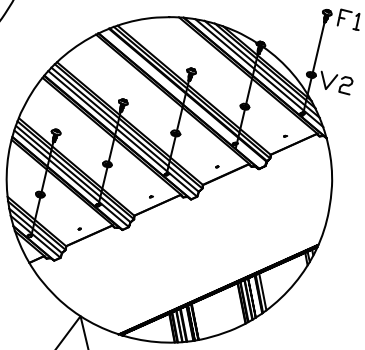

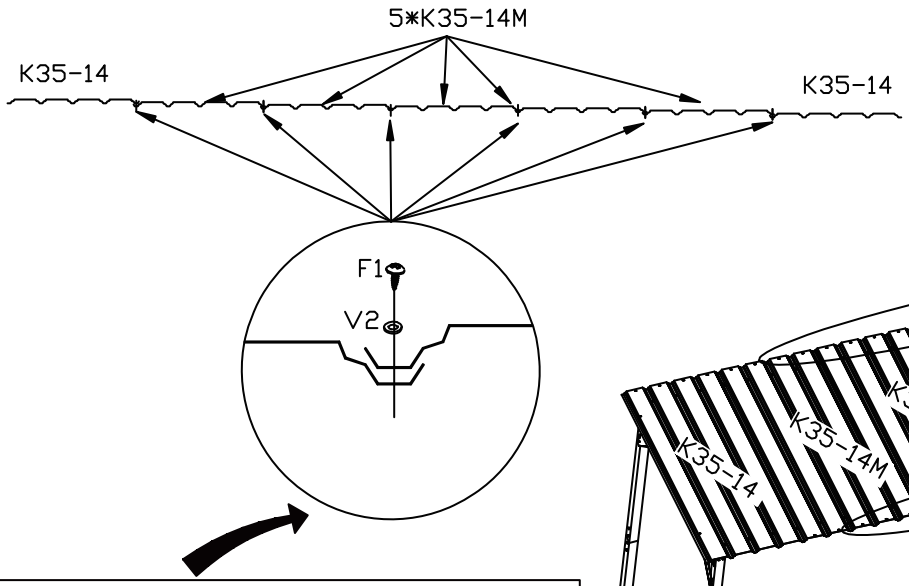


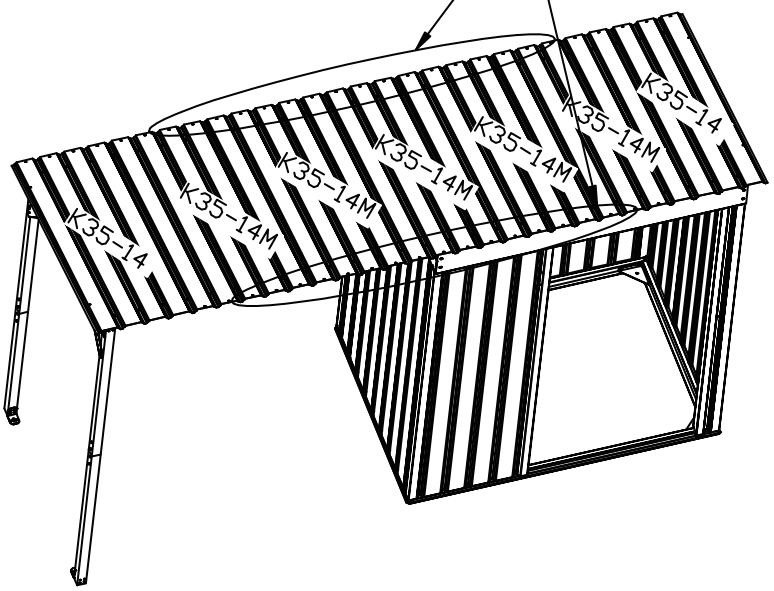



Please ensure that the flat edge overlaps the panel on top of the grooved edge.

Left Extension

PART	NO.	QTY.
	K310-9L	2
	K310-9R	2
	K35-15	2
	GC	4
	V2	24
	F1	24

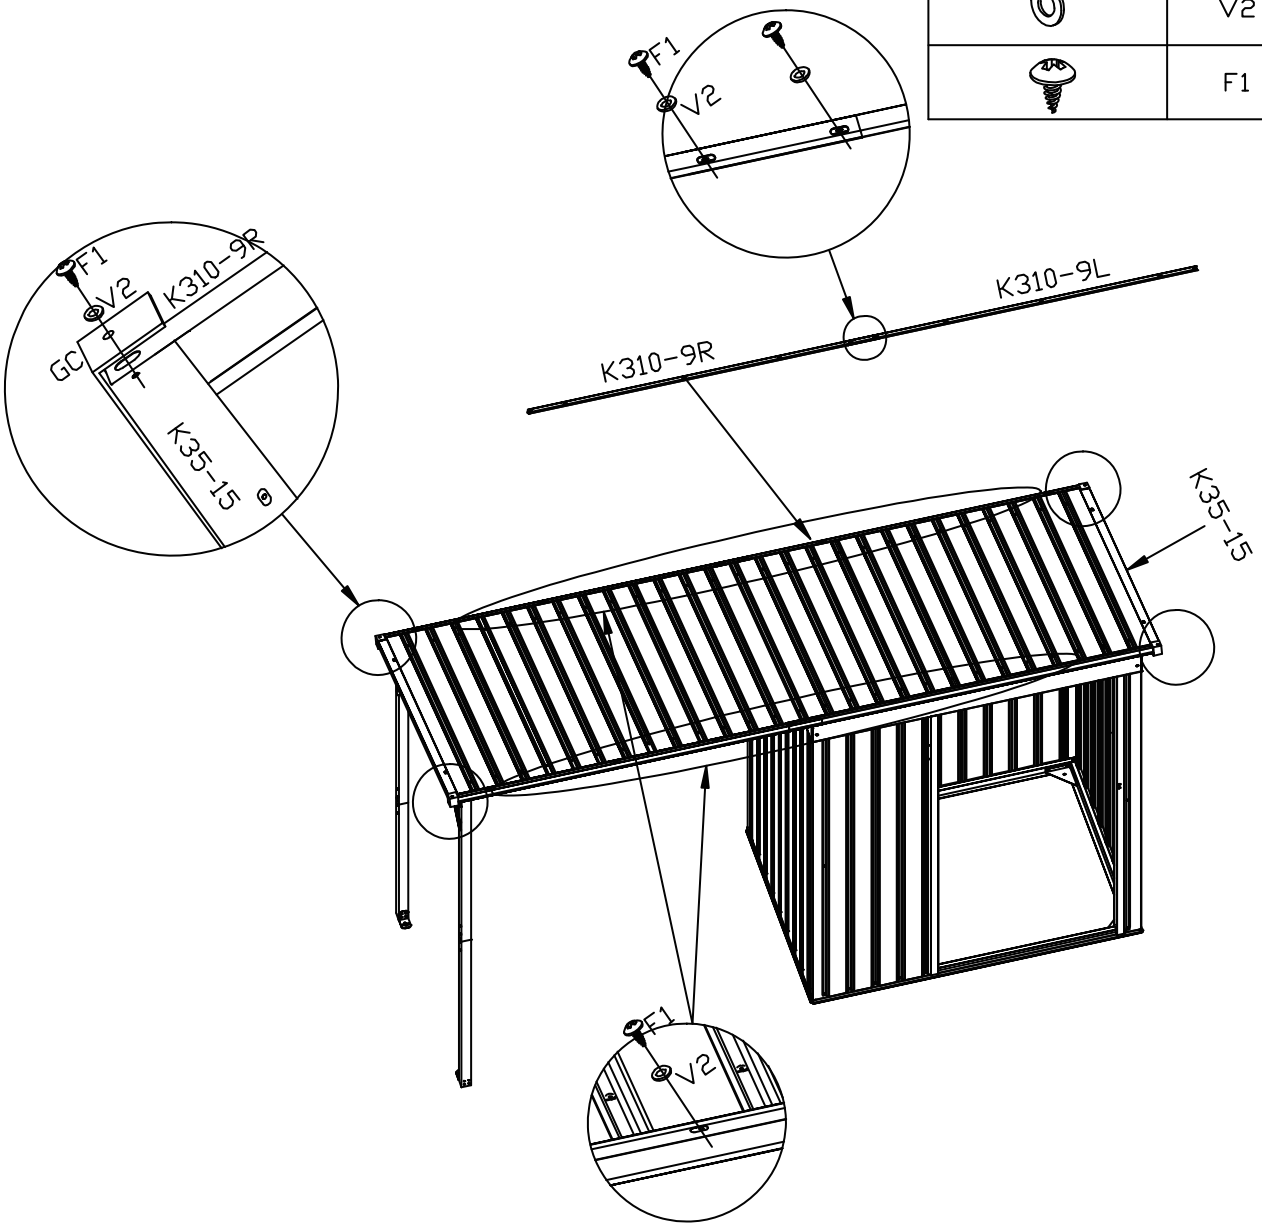

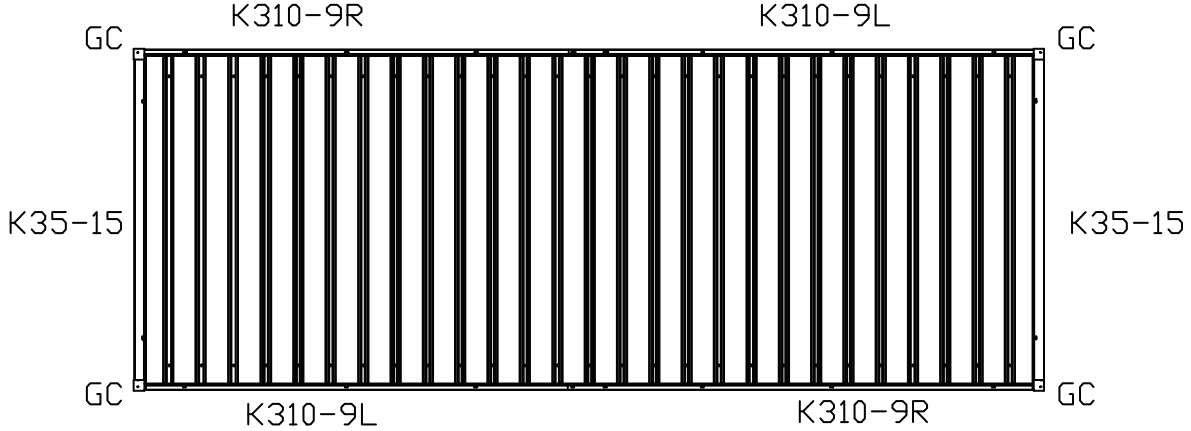

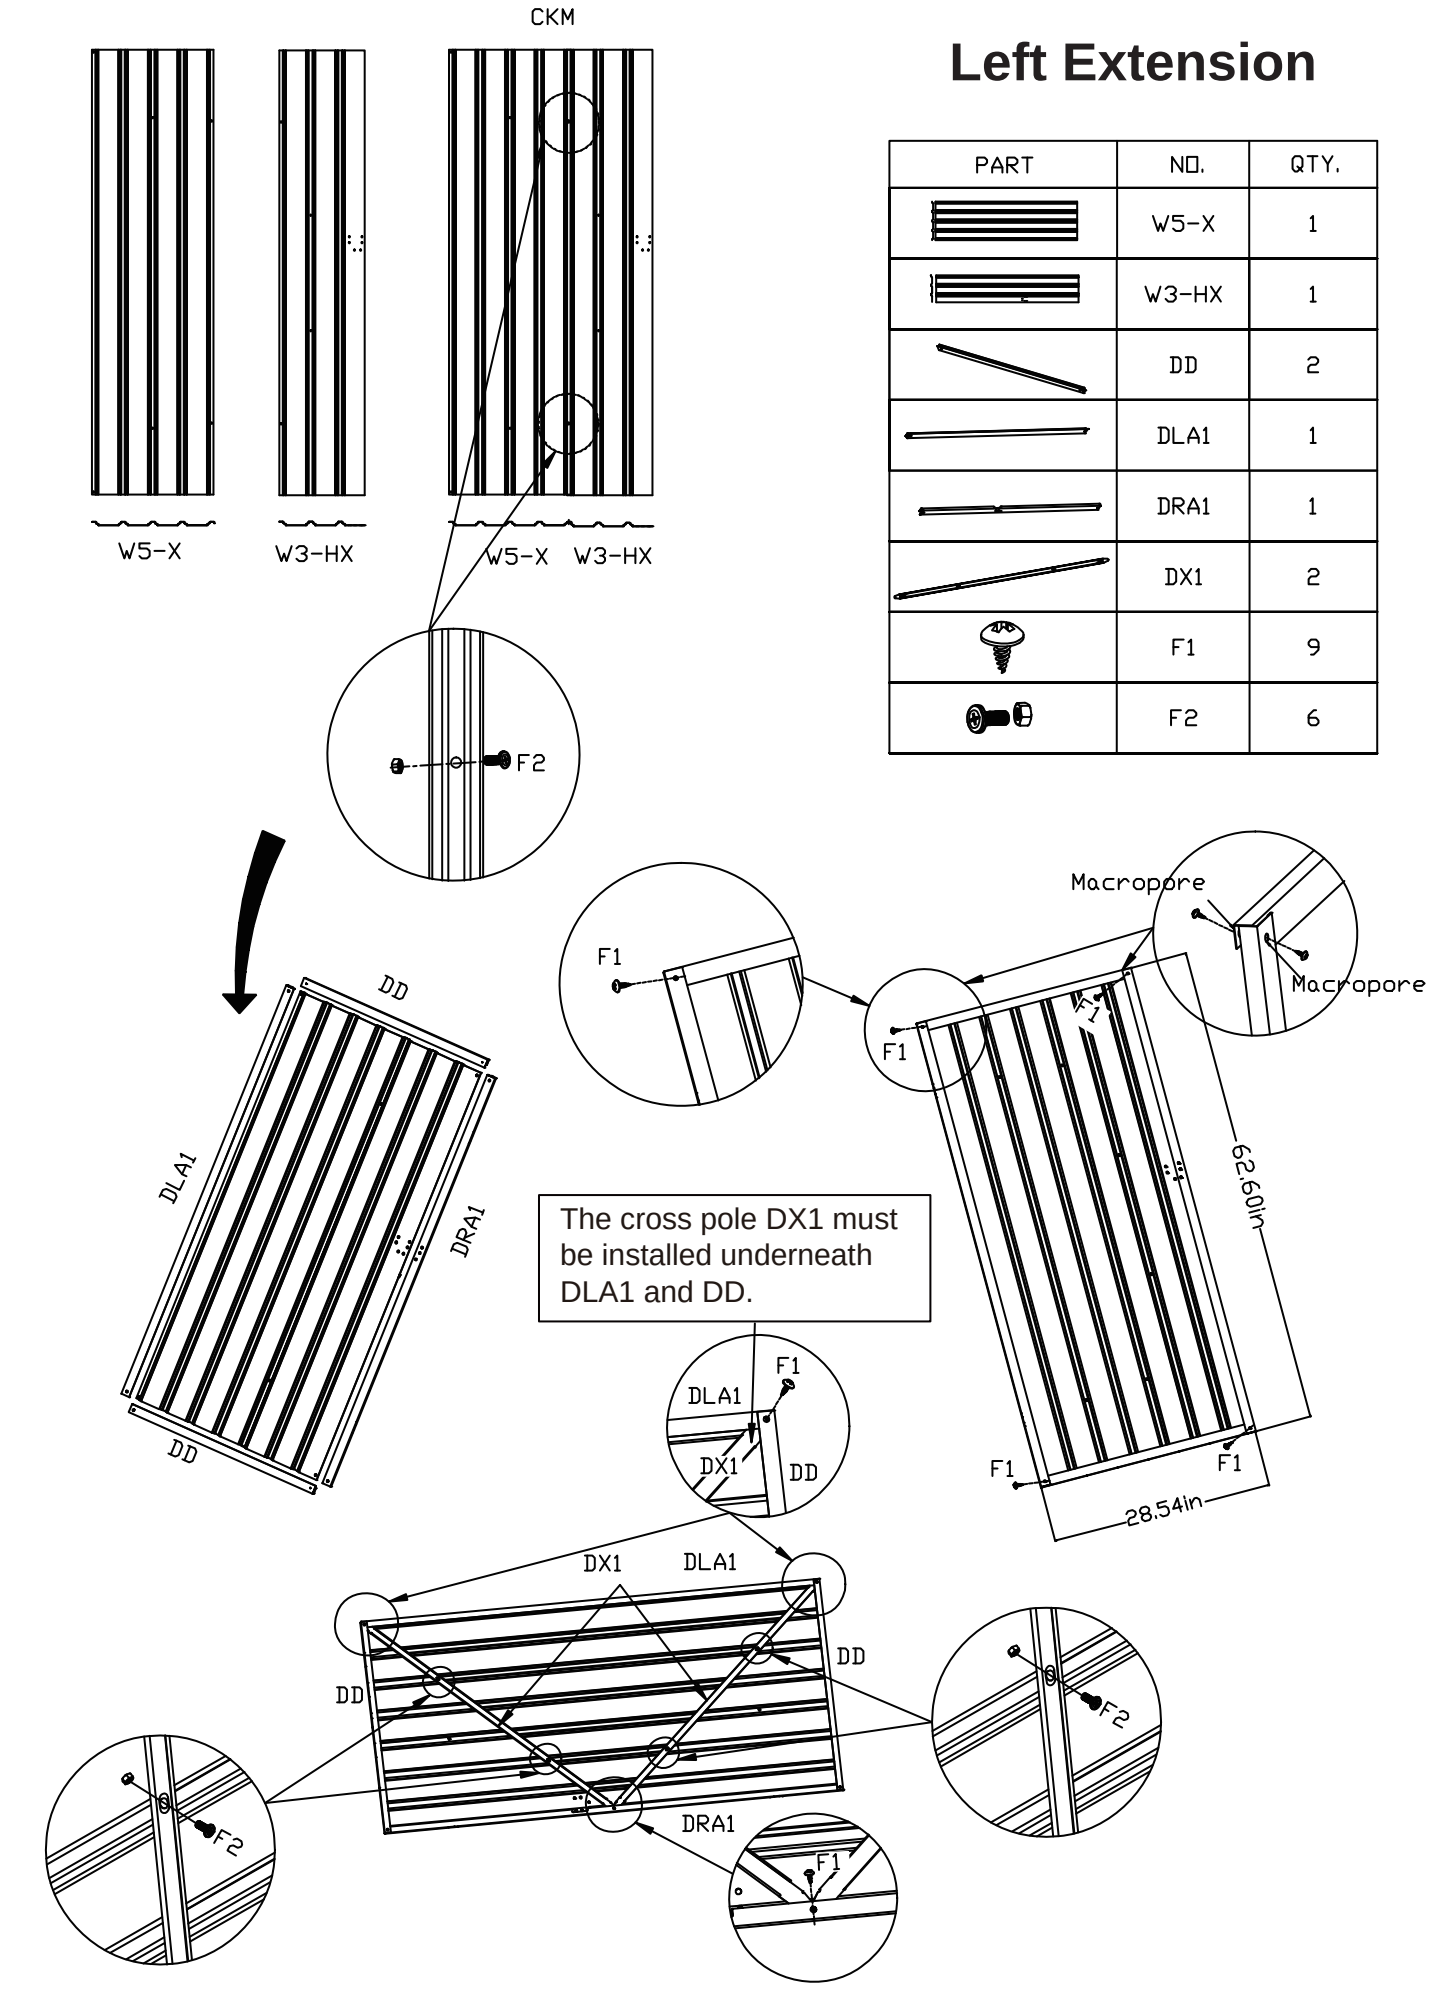



Left Extension

PART	NO.	QTY.
	W5-X	1
	W3-HX	1
	DD	2
	DLA1	1
	DRA1	1
	DX1	2
	F1	9
	F2	6


Left Extension


PART	NO.	QTY.
	DCS	1
	DH	2
	F3	8
	F2	6

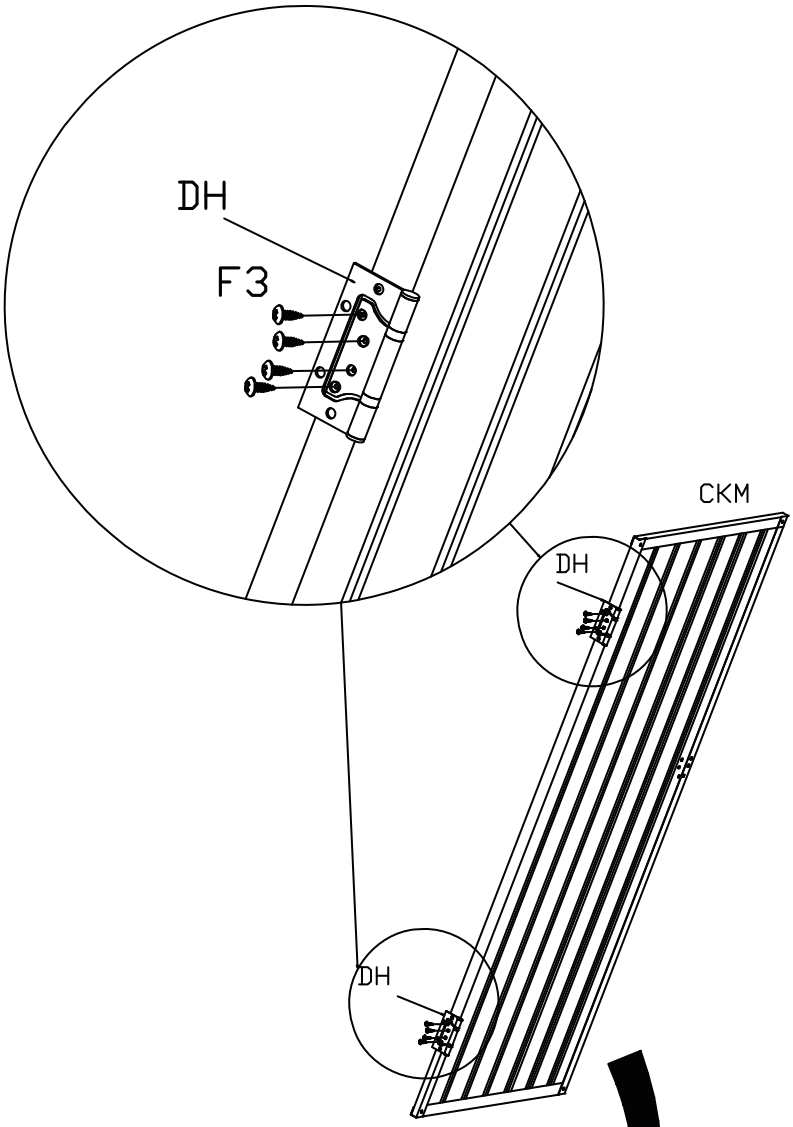

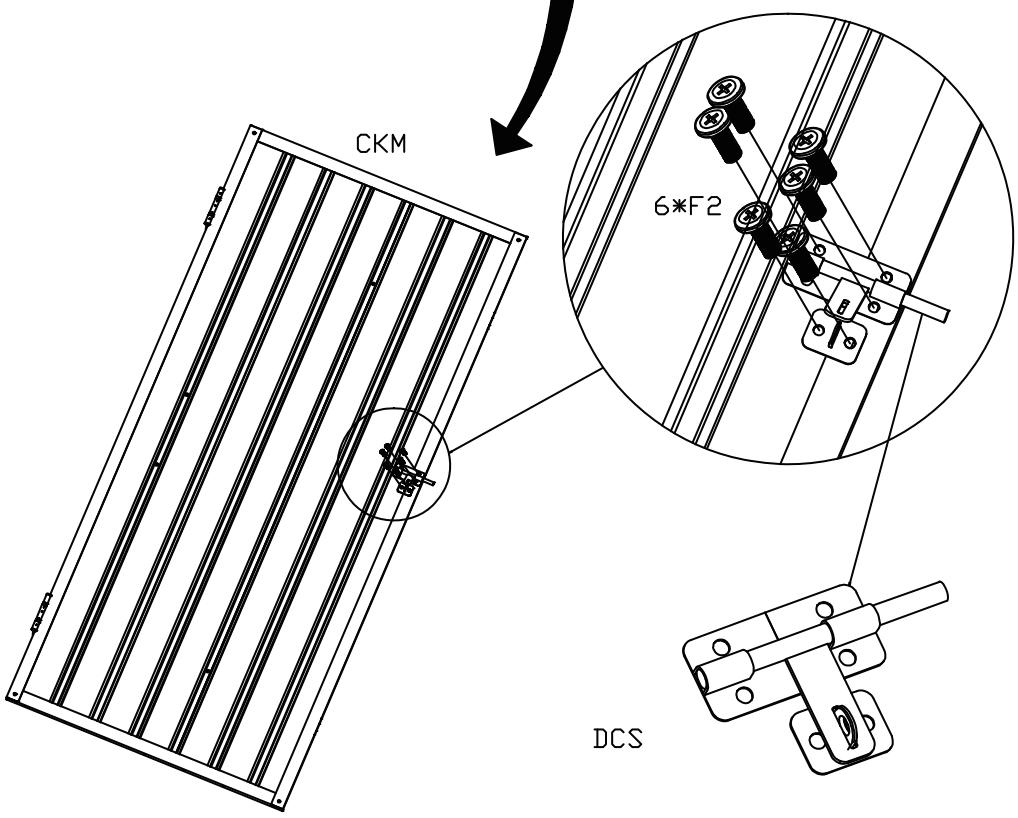


Left Extension

PART	NO.	QTY.
	CKM	1
	F3	8
	F2	2

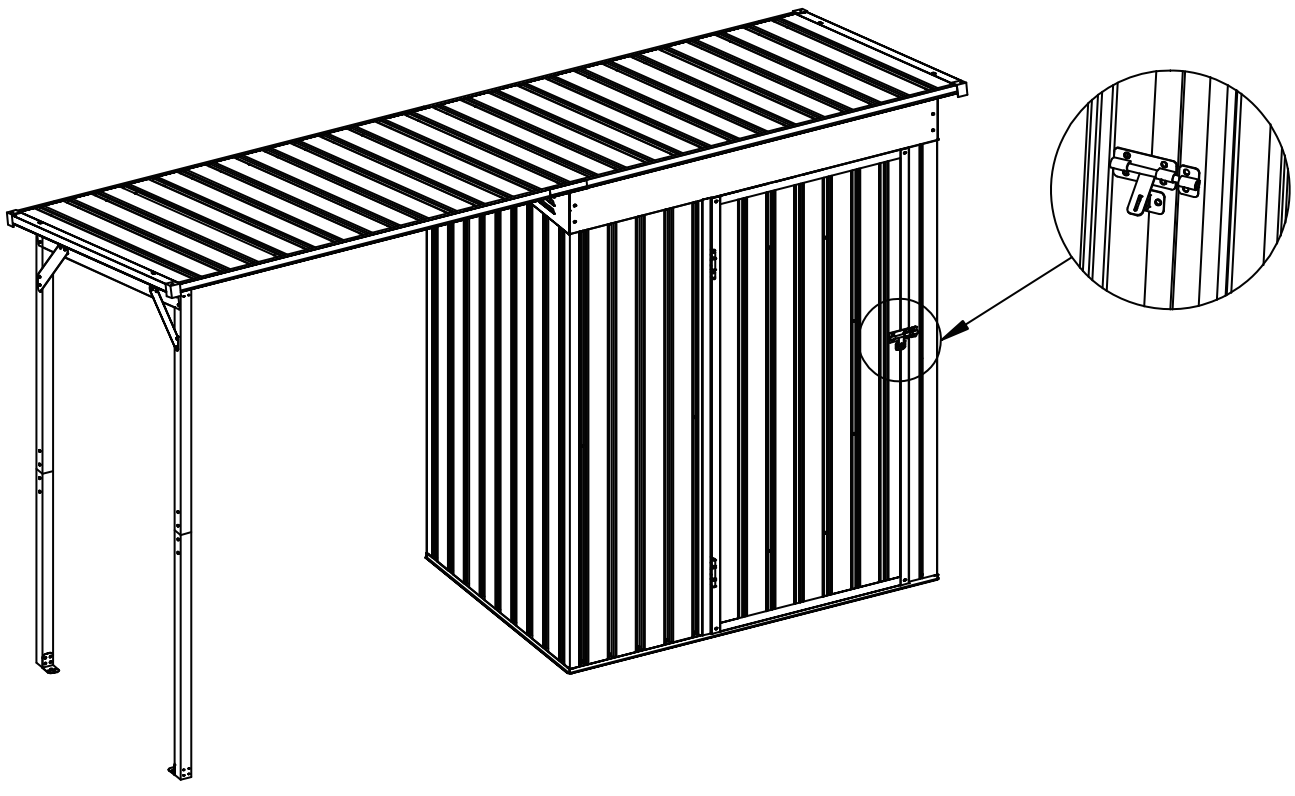

Left Extension


PART	NO.	QTY
	PZ1	6

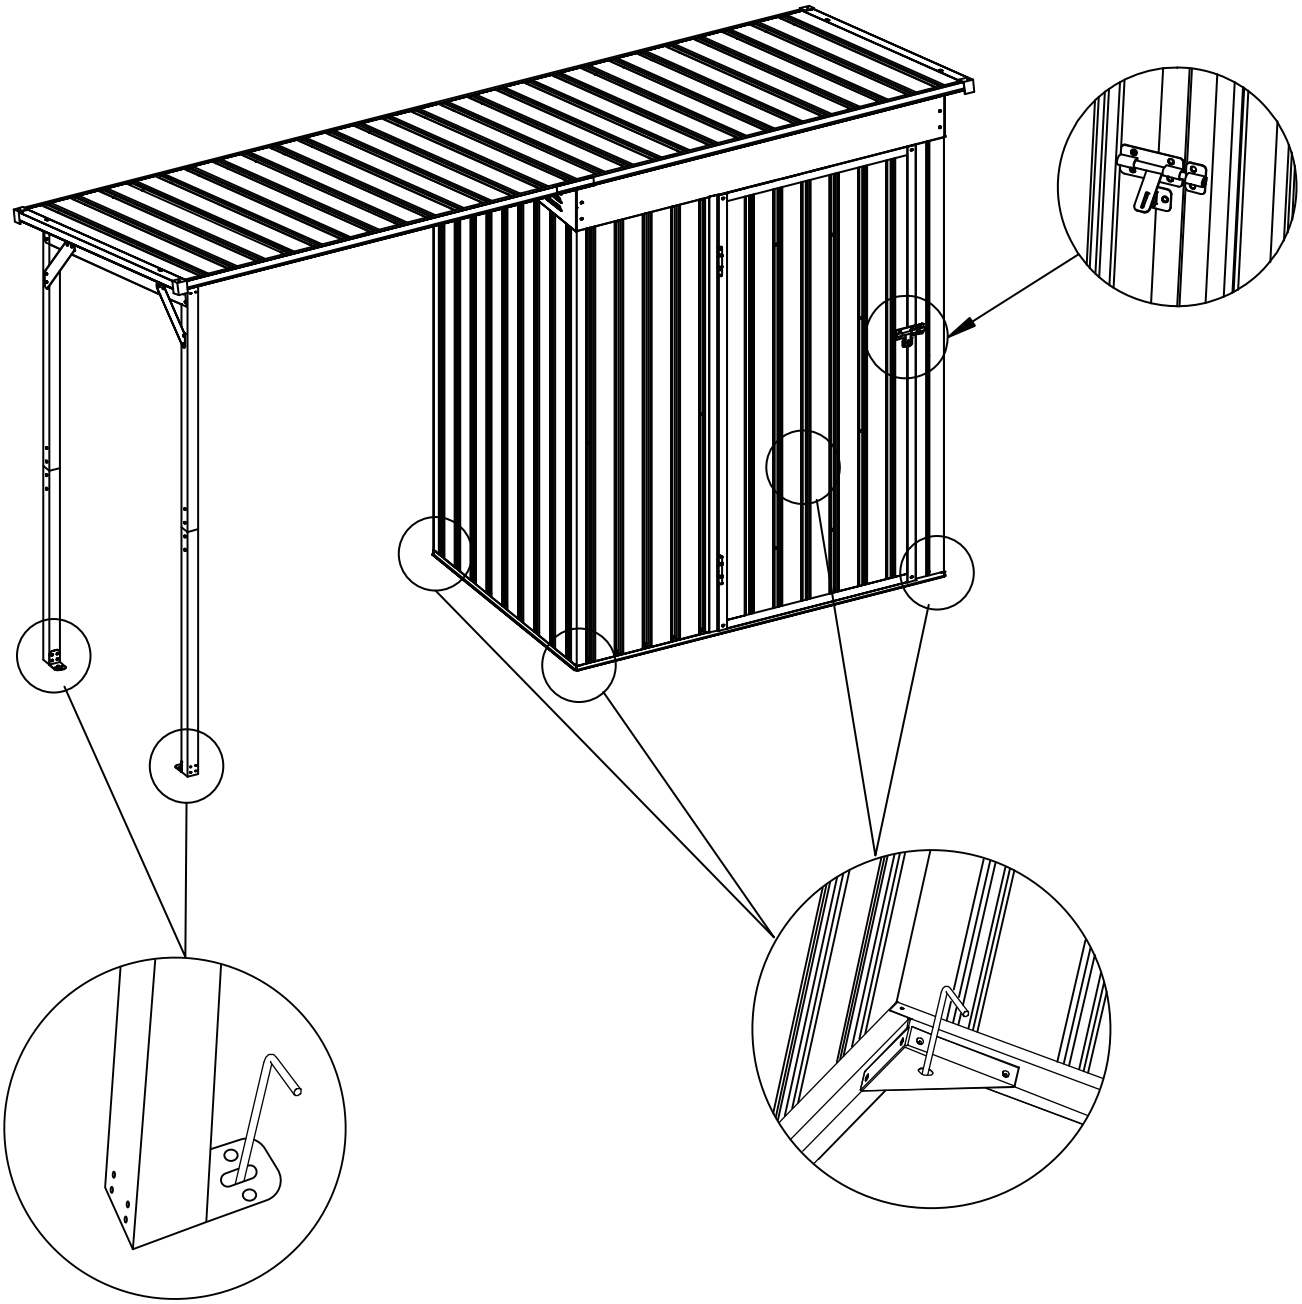

After the installation of the tool room is completed, drive PZ1 piles into the ground at the four (T-F) corners of the base and secure them.


Right Extension

NOTE: This is not the beginning of the installation steps; it is merely to indicate where each component will be installed.

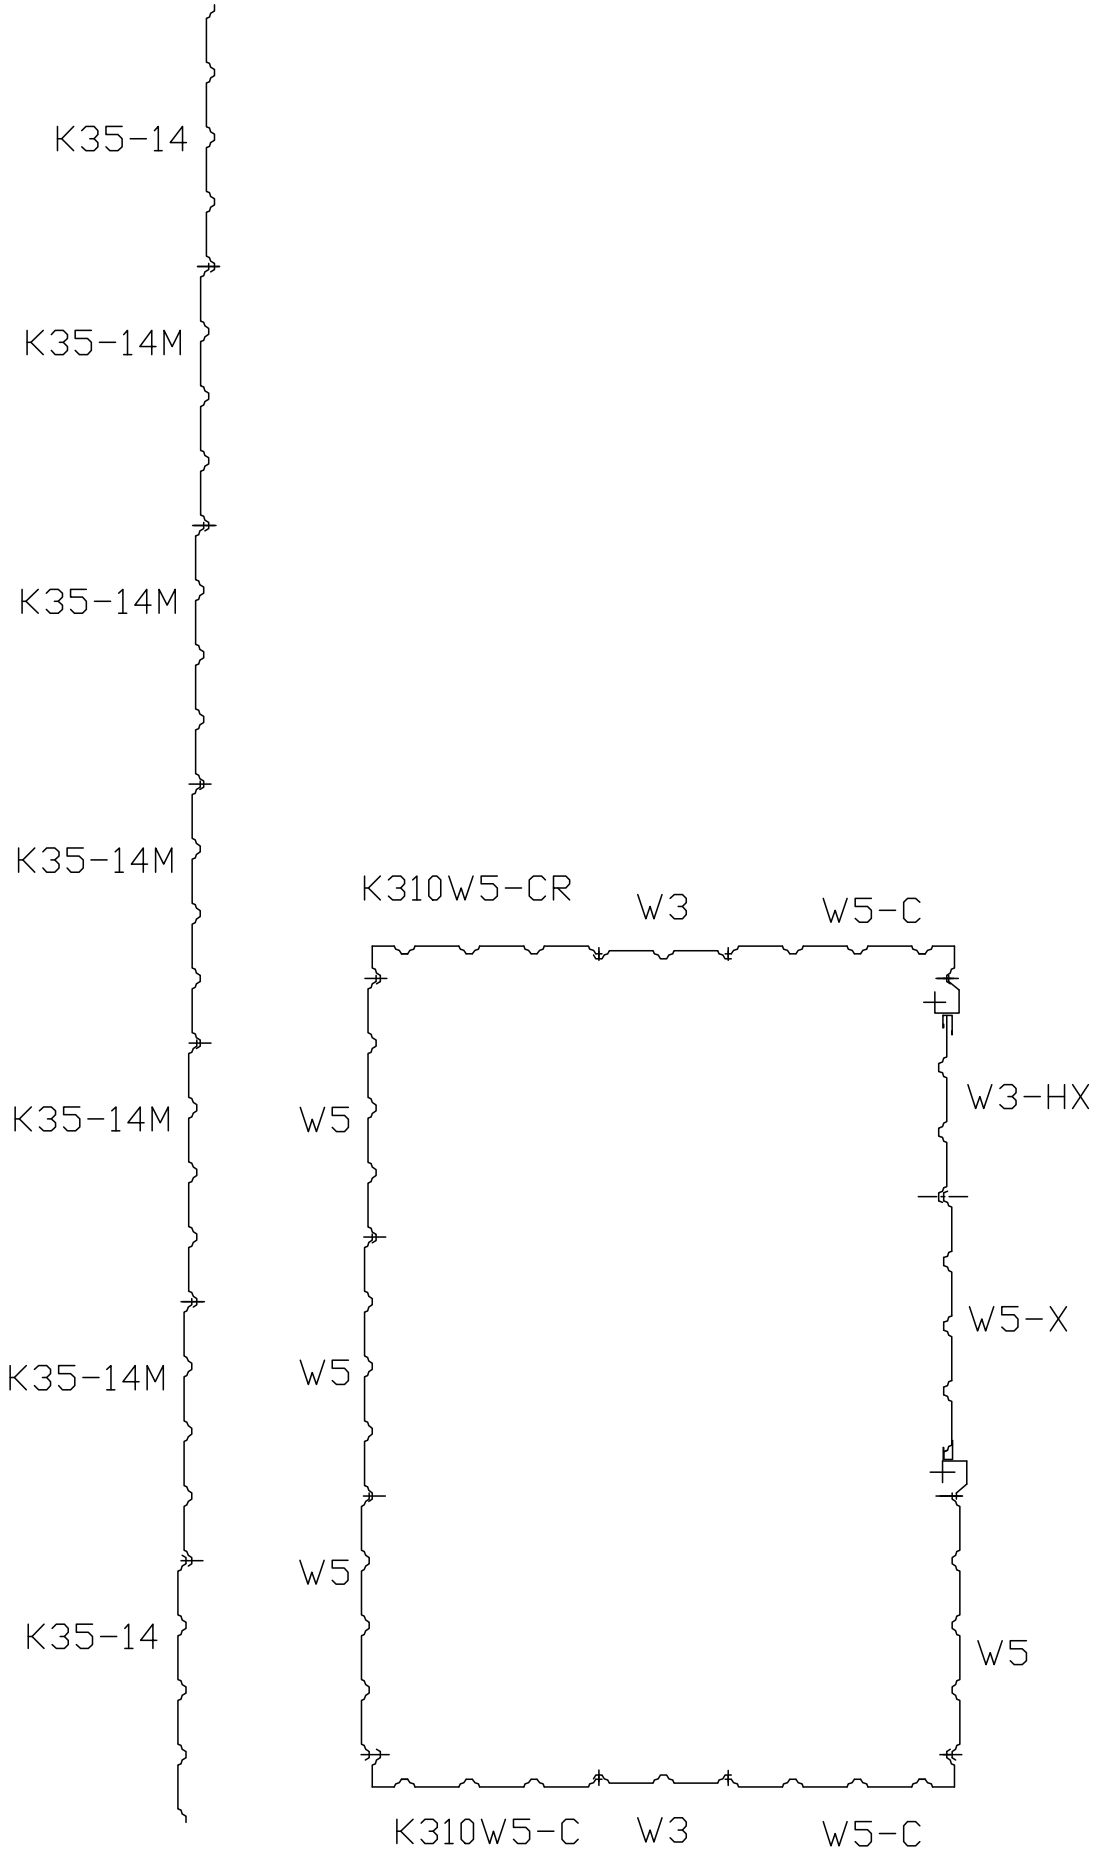


NOTE: This is not the beginning of the installation steps; it is merely to indicate where each component will be installed.


Right Extension

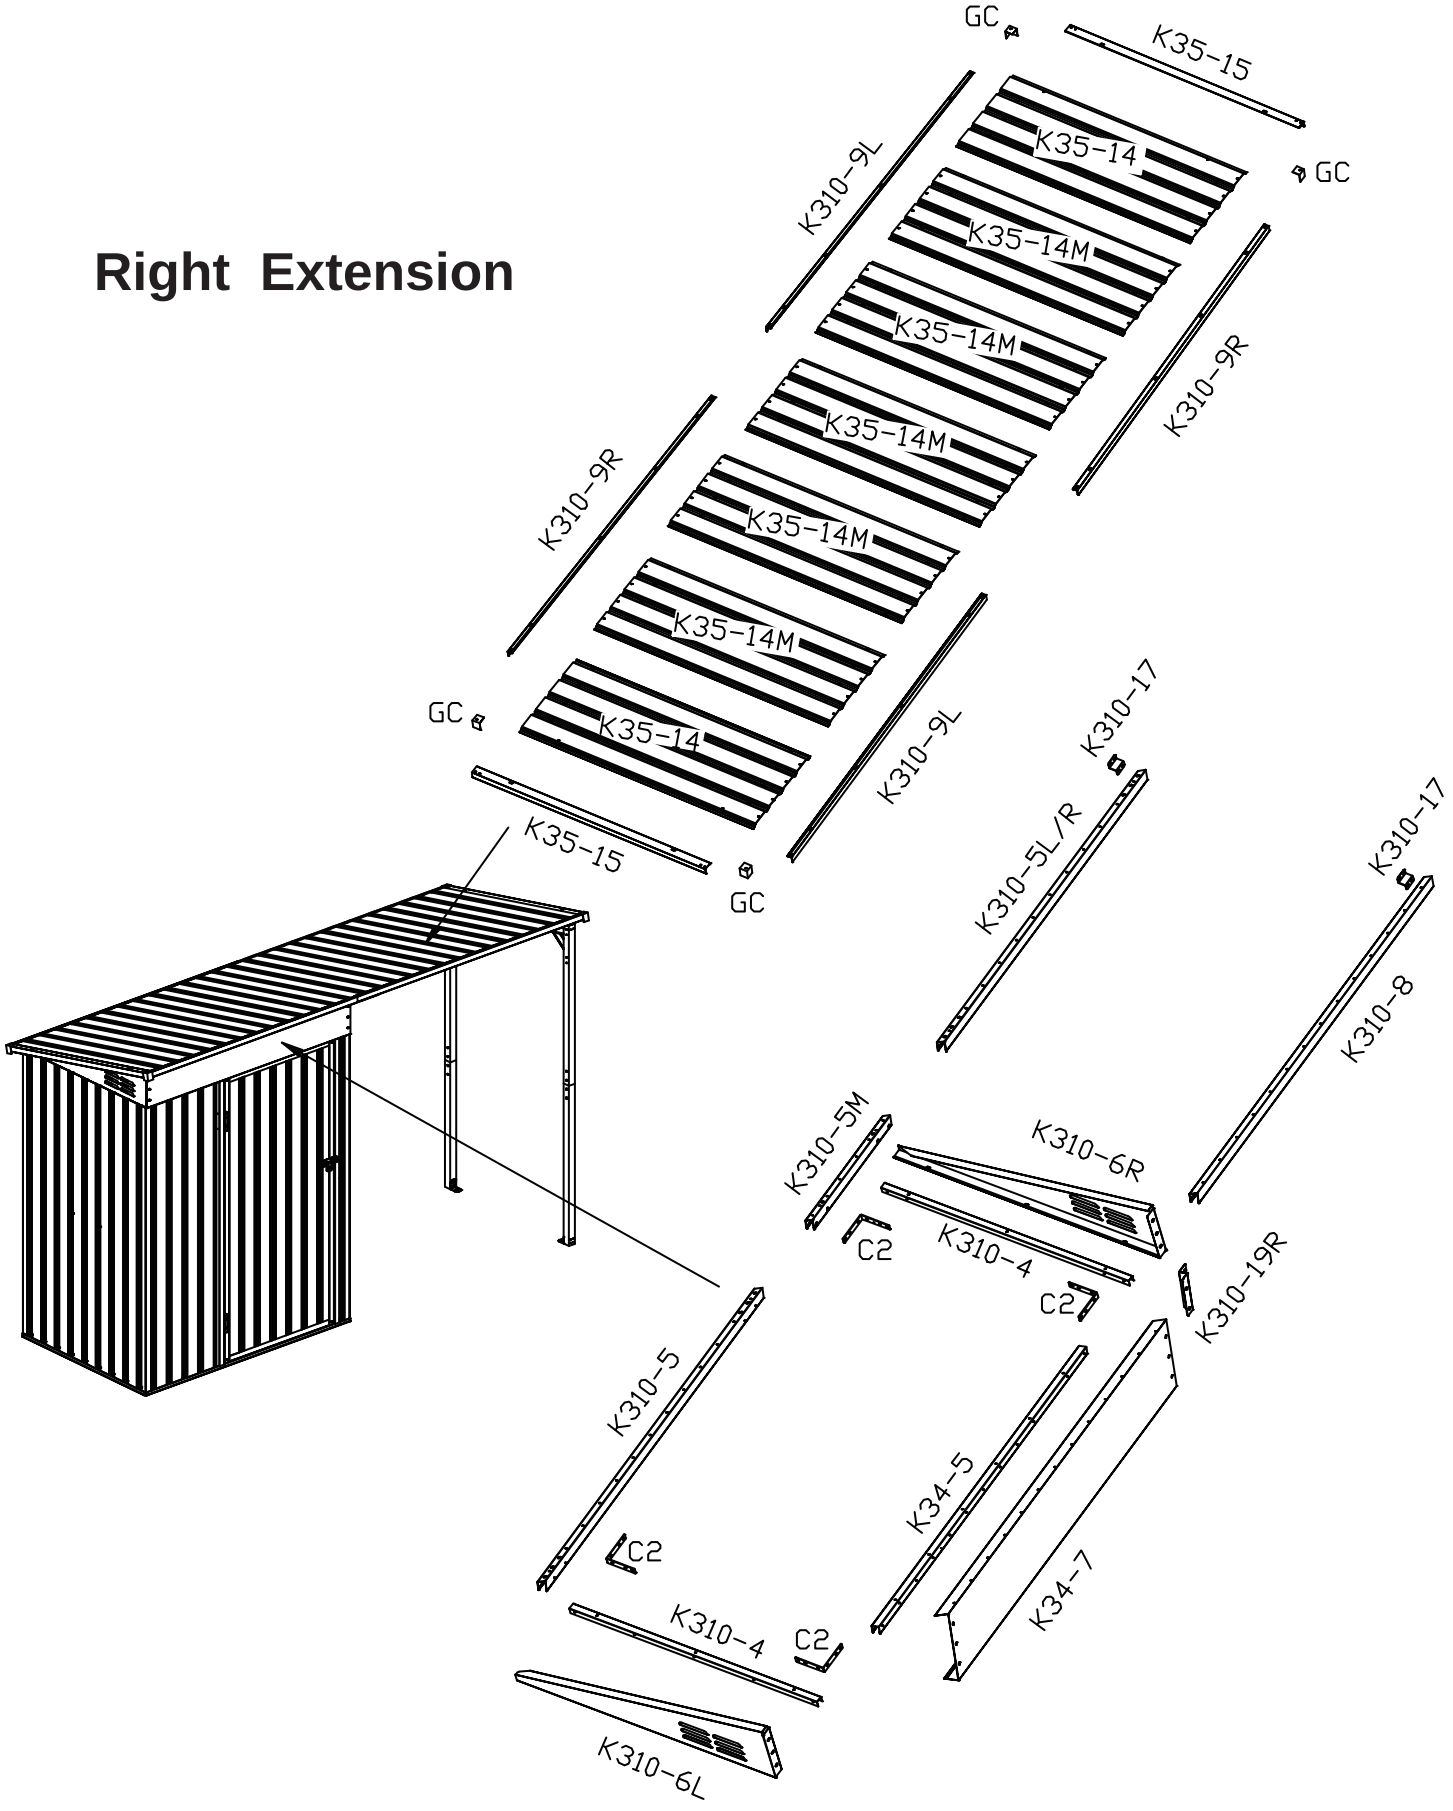


NOTE: This is not the beginning of the installation steps; it is merely to indicate where each component will be installed.

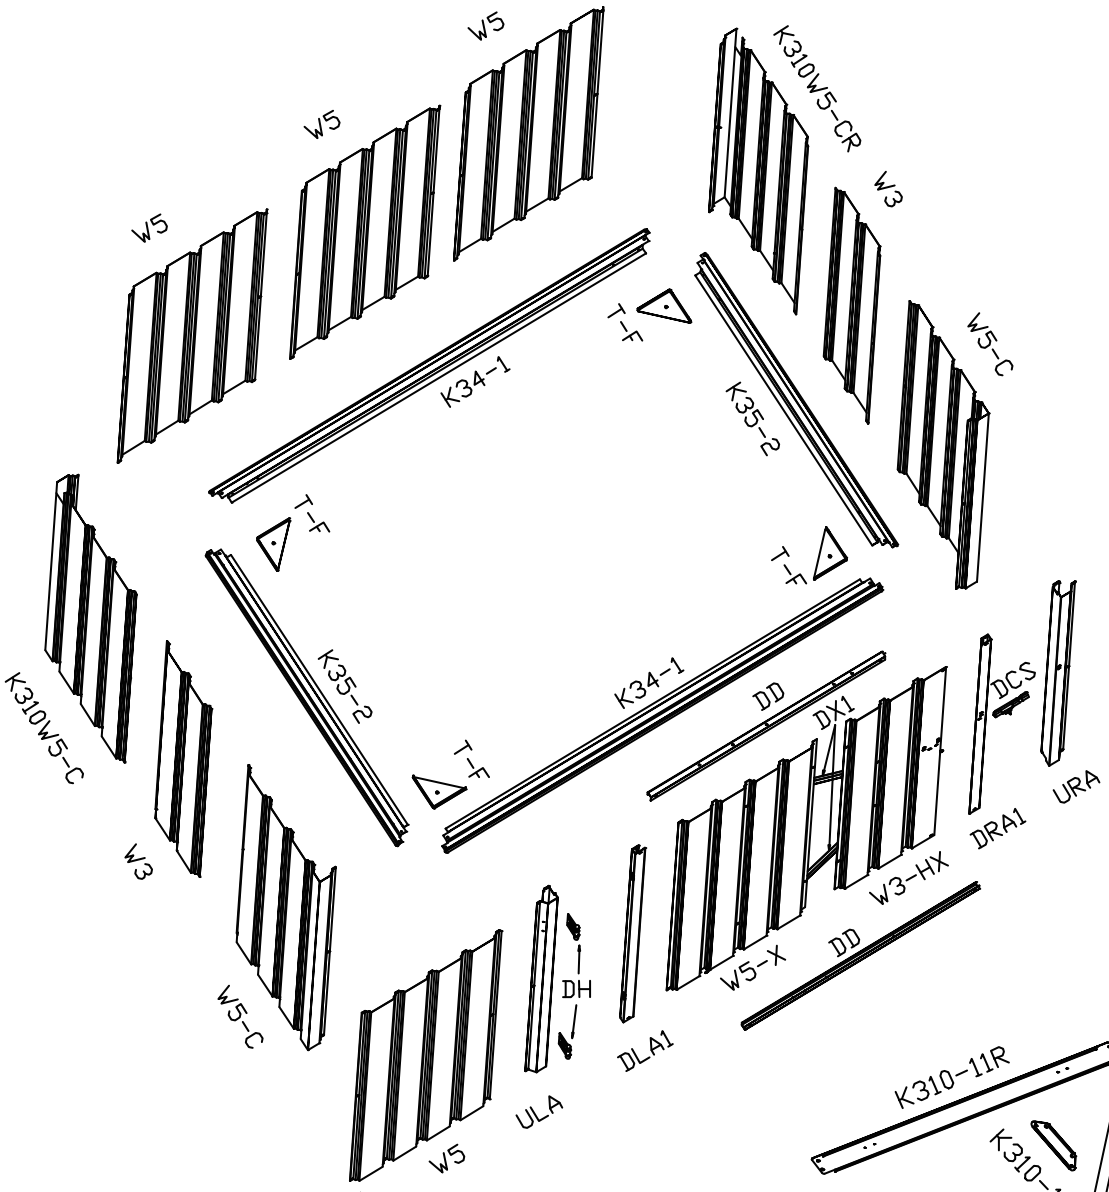


Right Extension

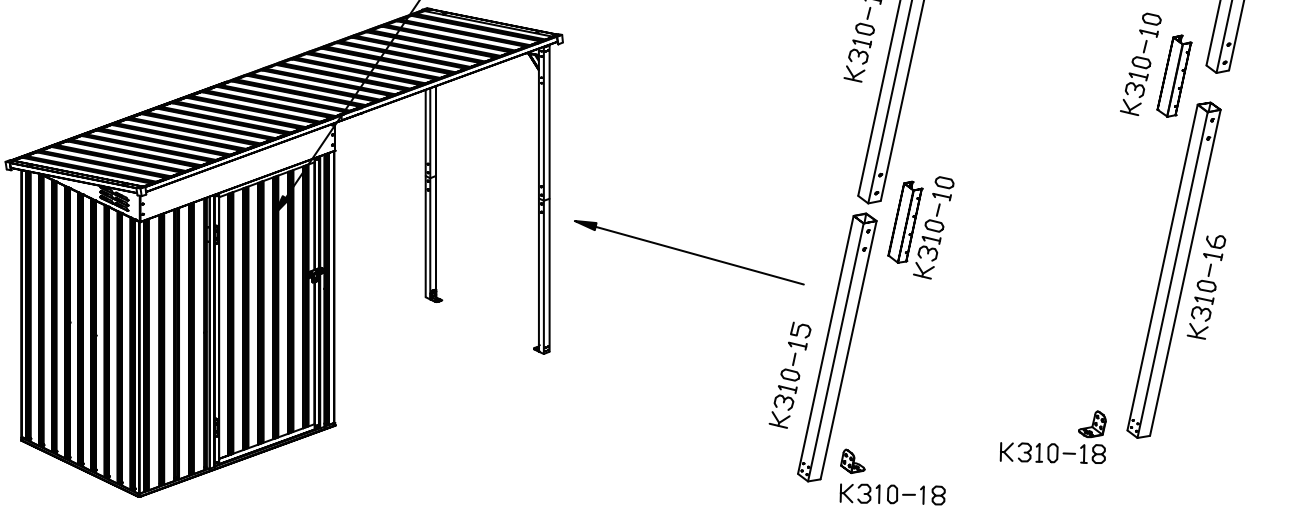



Shed Base Assemble

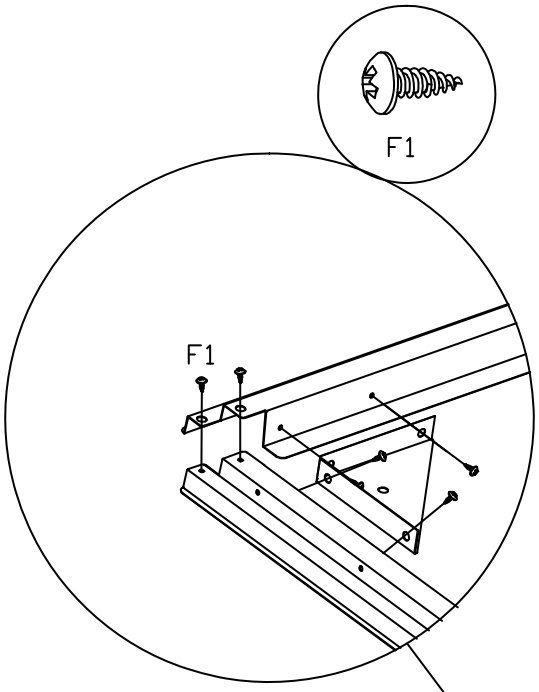

PART	NO.	QTY.
	K34-1	2
	K35-2	2
	T-F	4
	F1	24


Right Extension

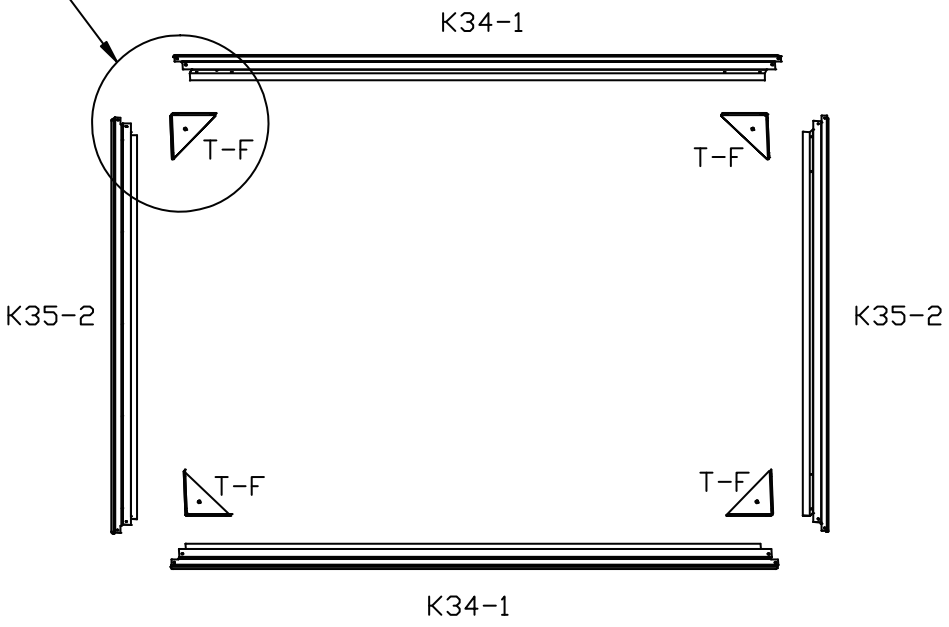

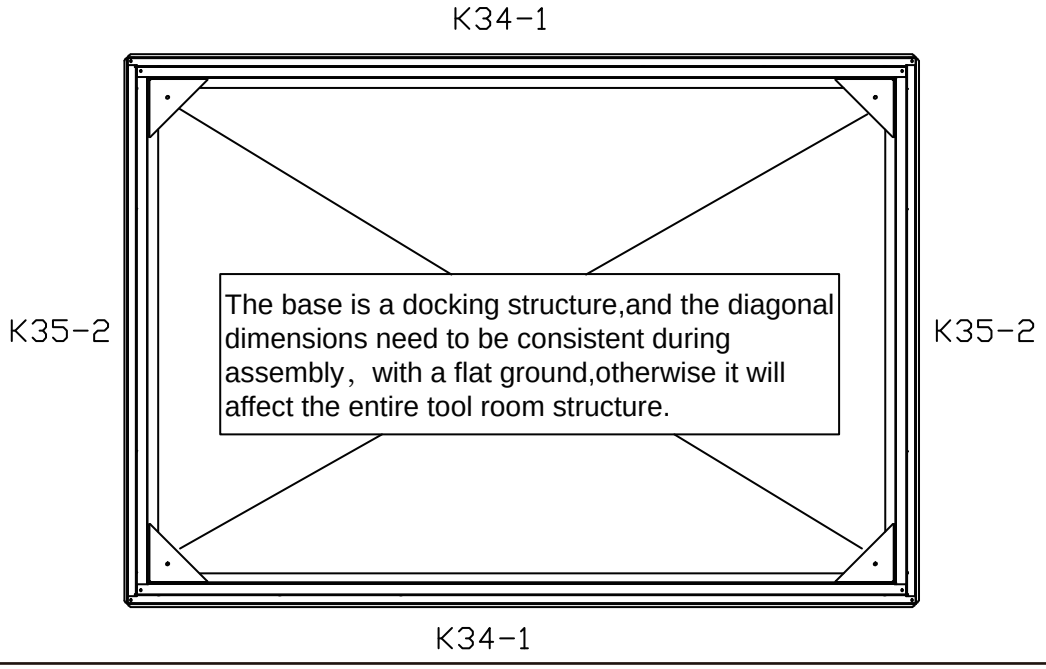


The base is a docking structure,and the diagonal dimensions need to be consistent during assembly， with a flat ground,otherwise it will affect the entire tool room structure.

Side Panel Assemble

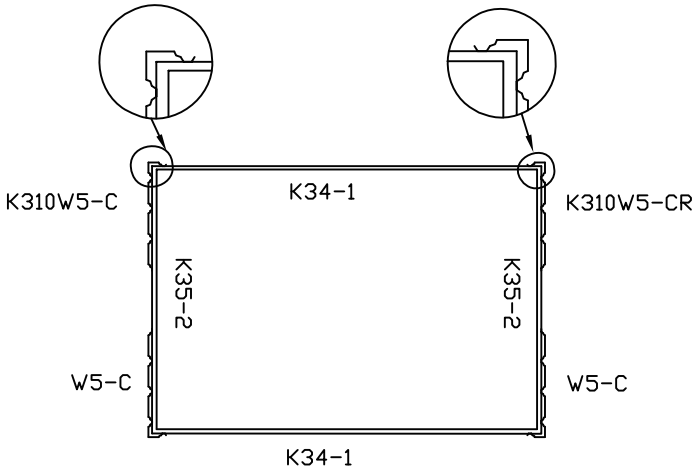


PART	NO.	QTY.
	K310W5-C	1
	K310W5-CR	1
	W5-C	2
	F1	12

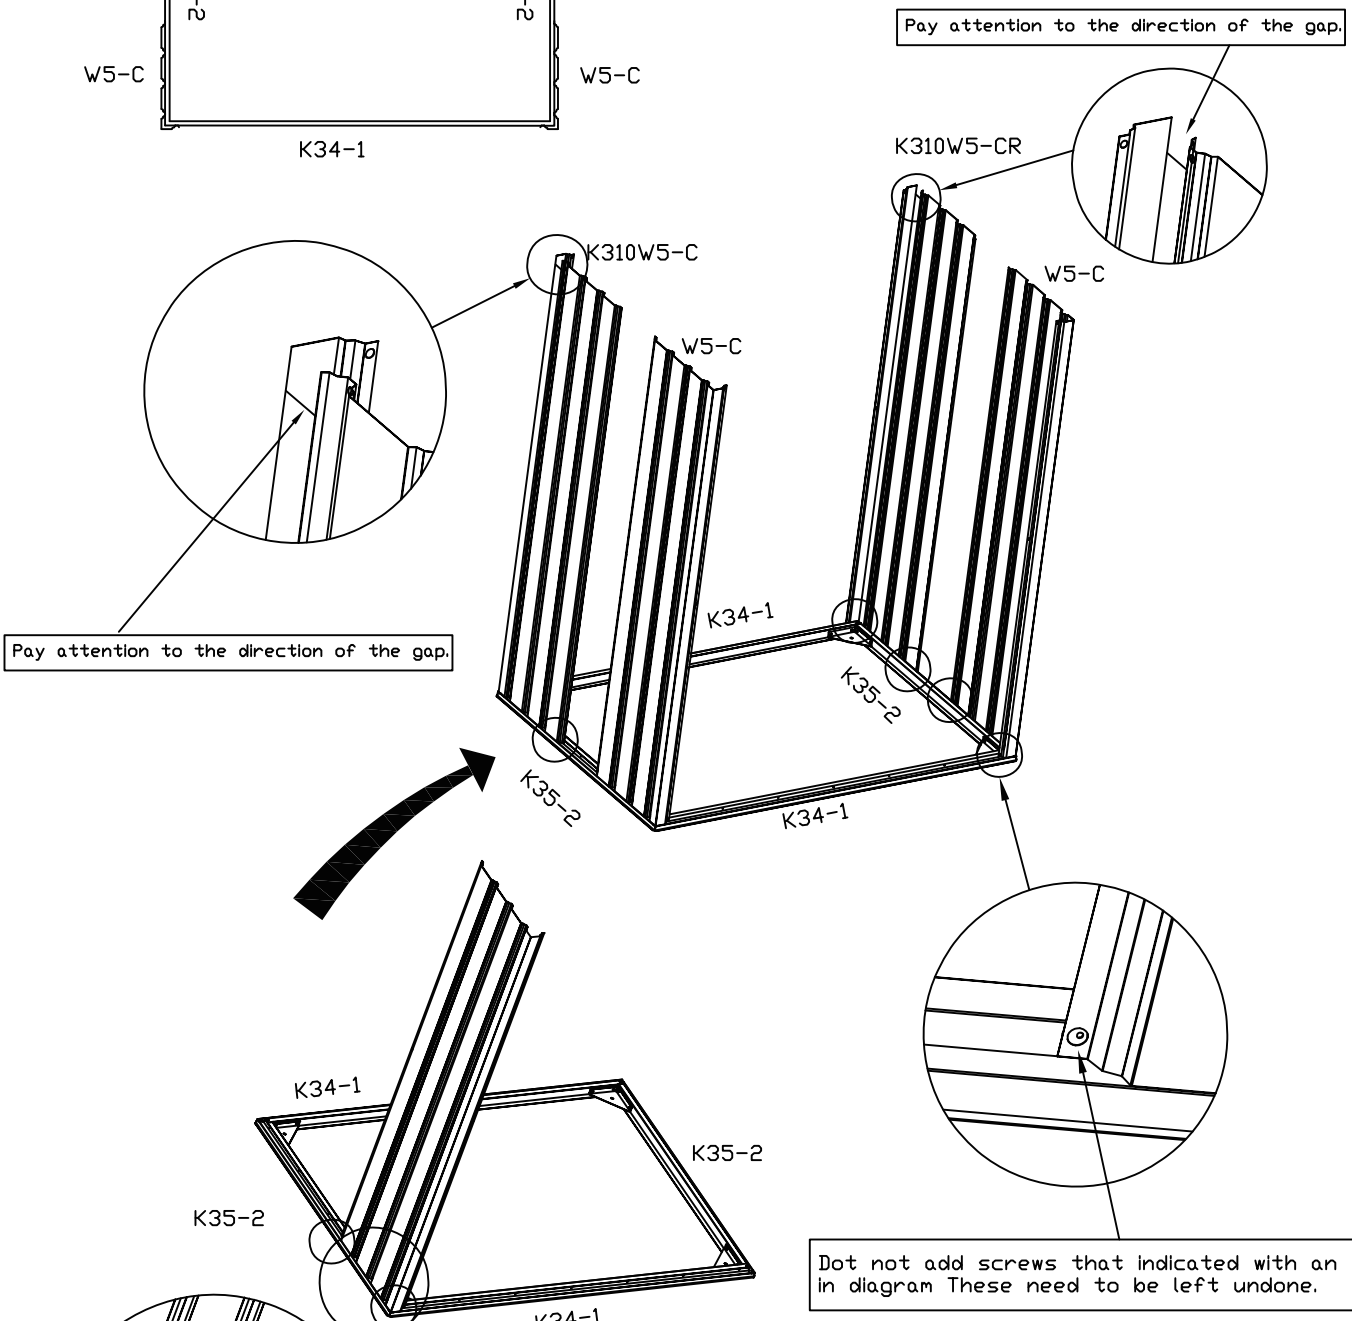

Right Extension

Right Extension

PART	NO.	QTY.
	K310-4	2
	F1	12

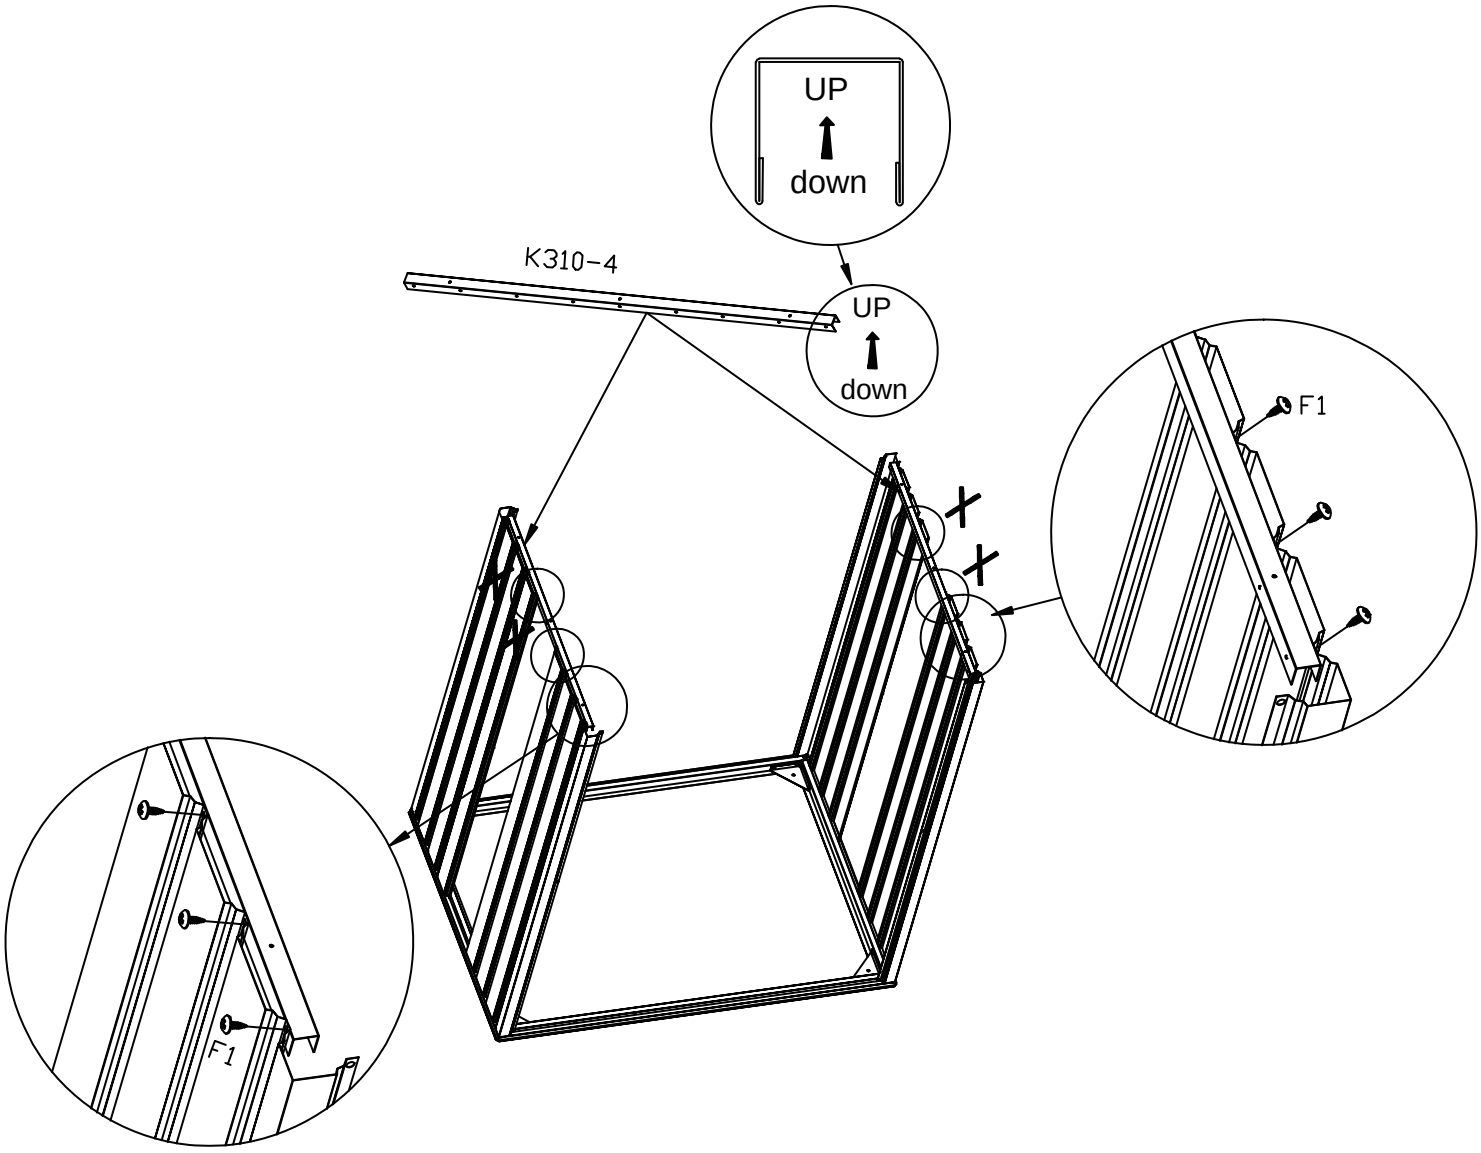



Right Extension


PART	NO.	QTY
	K310-5	1
	K310-5M	1
	C2	2
	F1	7


Right Extension


PART	NO.	QTY.
	component A	1
	K34-5	1
	F1	12
	C2	2

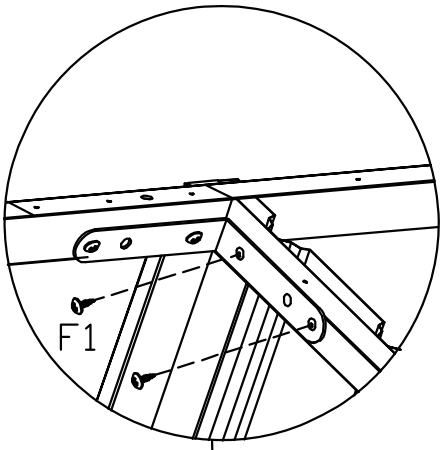

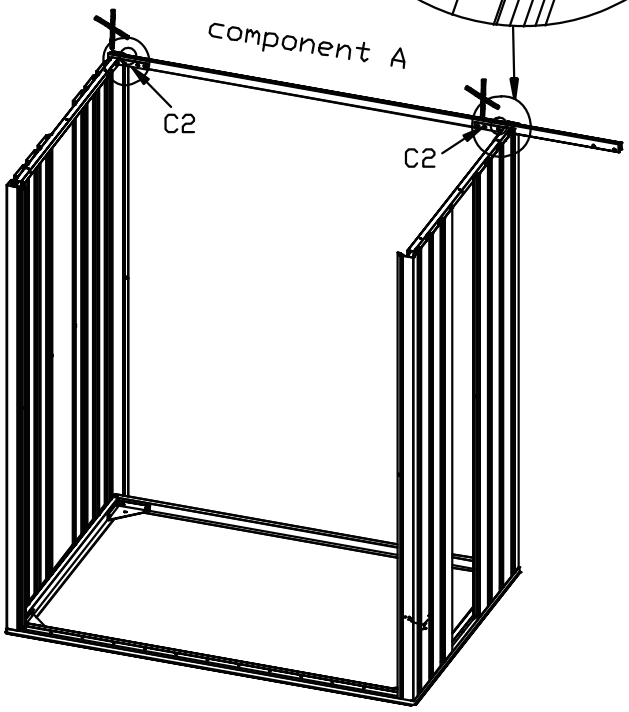


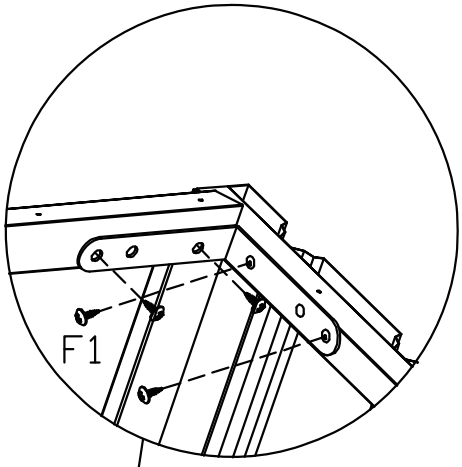


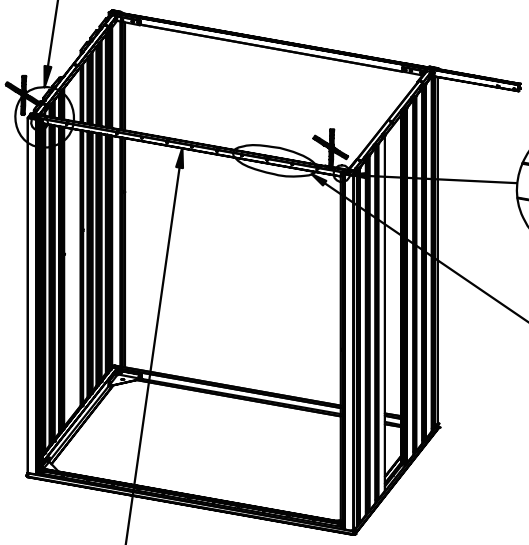


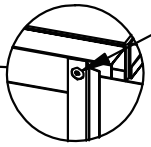


Dot not add screws that indicated with an X in diagram These need to be left undone.

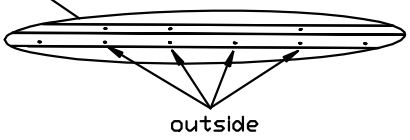


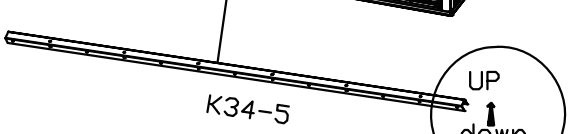

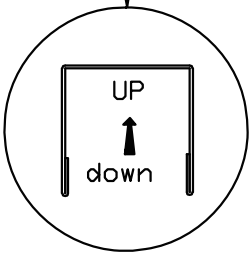


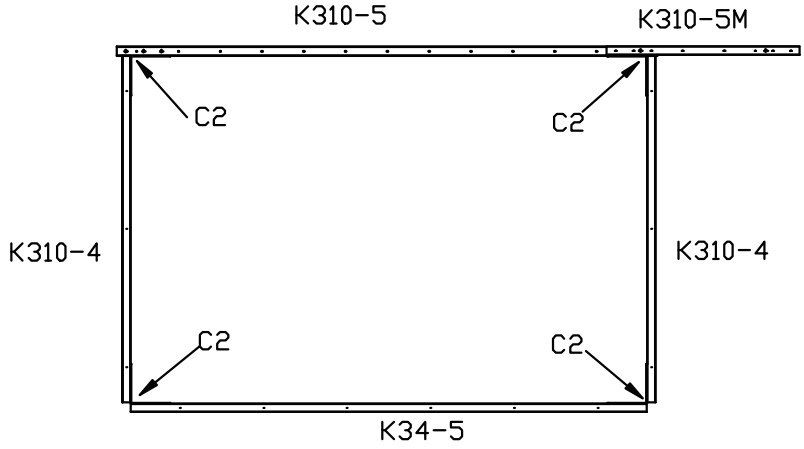

PART	NO.	QTY.
	W3	2
	F1	12
	F2	4

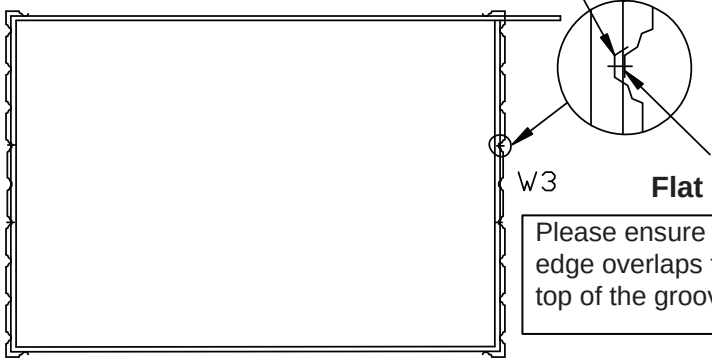


Please ensure that the flat edge overlaps the panel on top of the grooved edge.

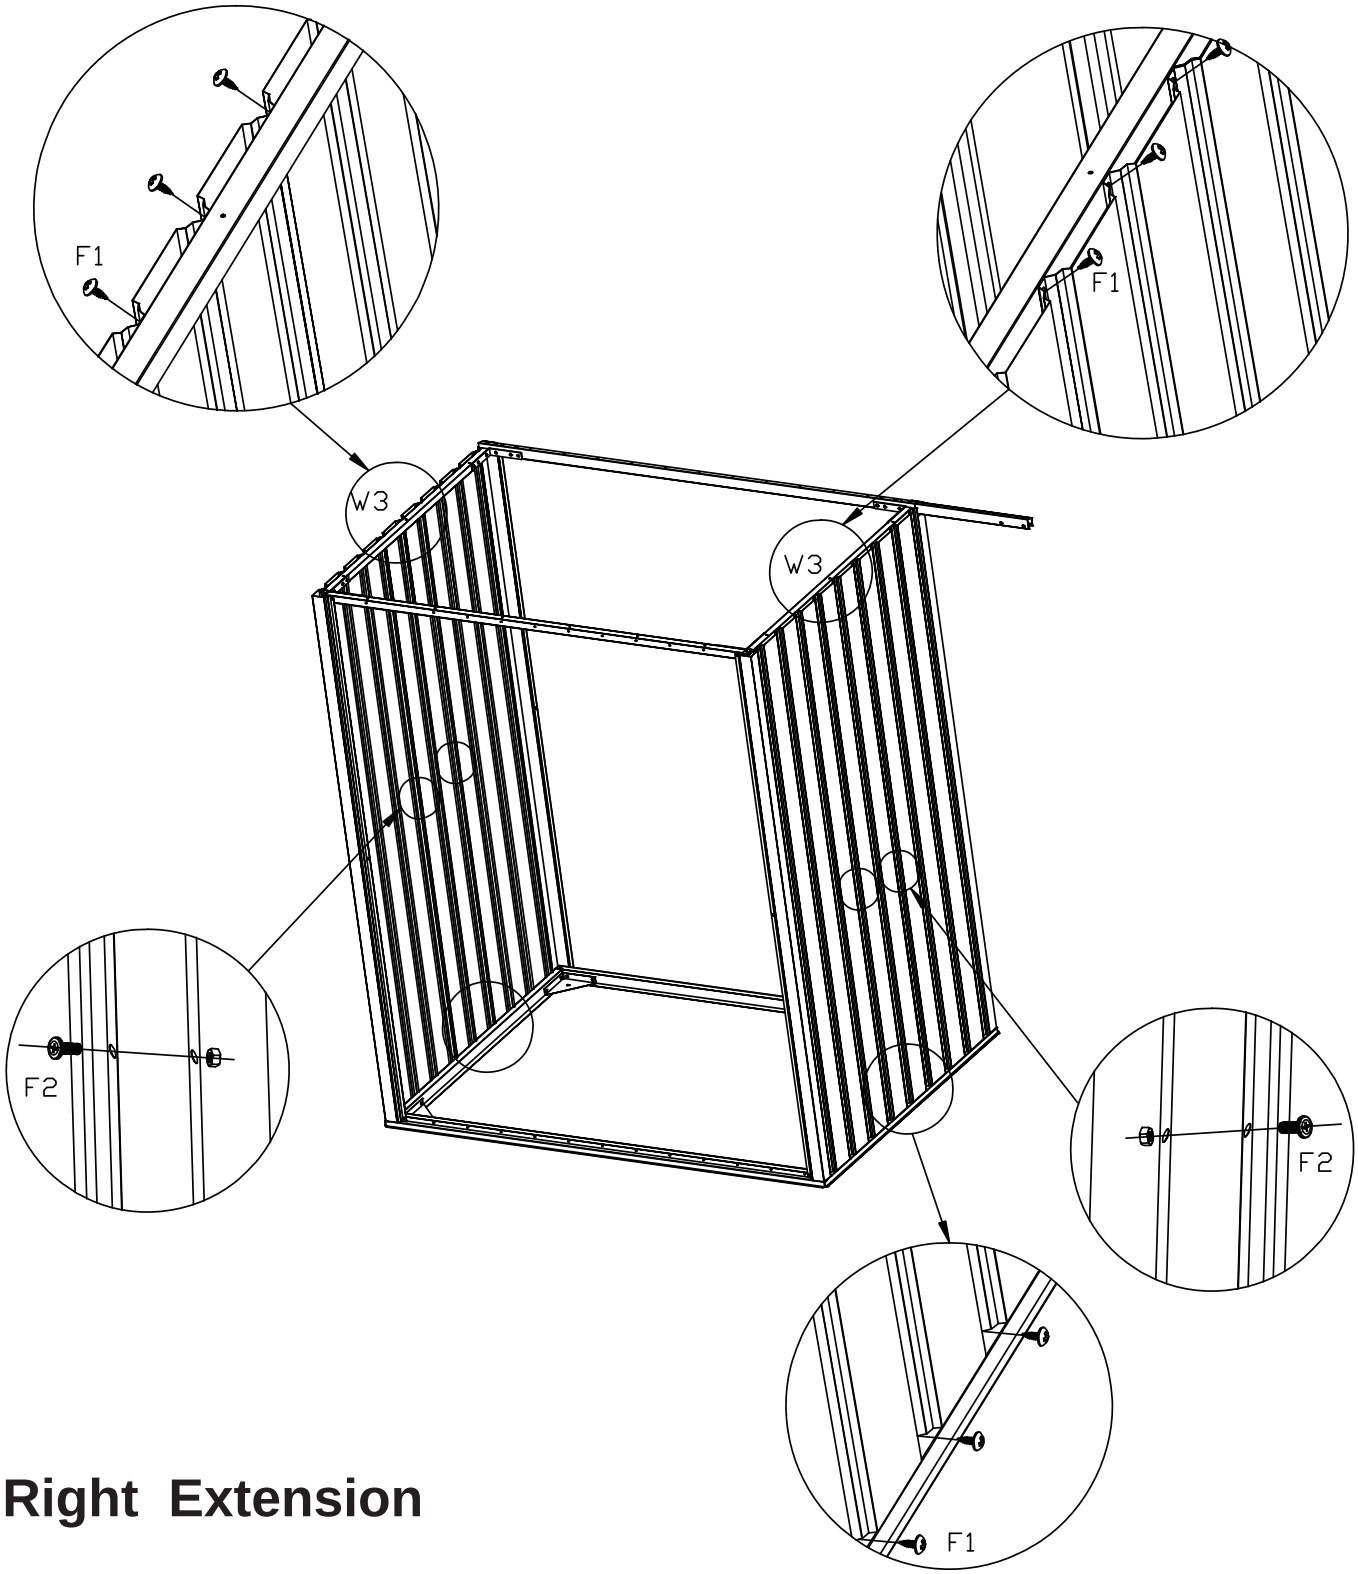


Right Extension

Right Extension


PART	NO.	QTY.
	W5	3
	F1	26
	F2	4

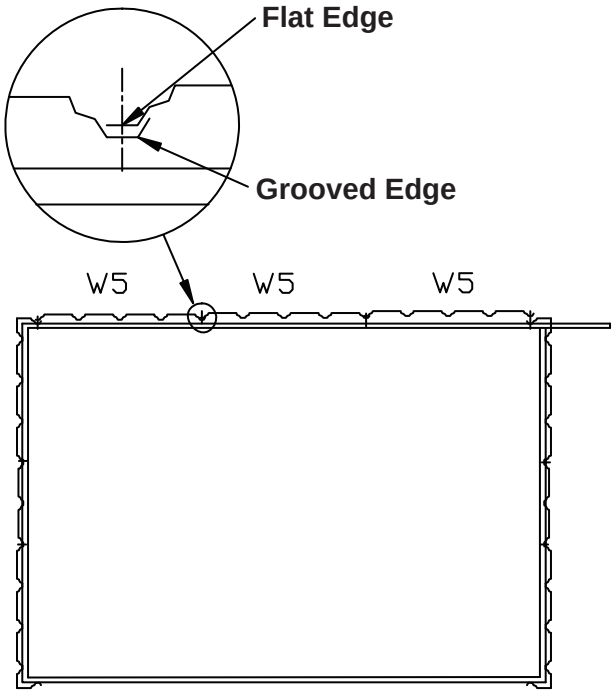


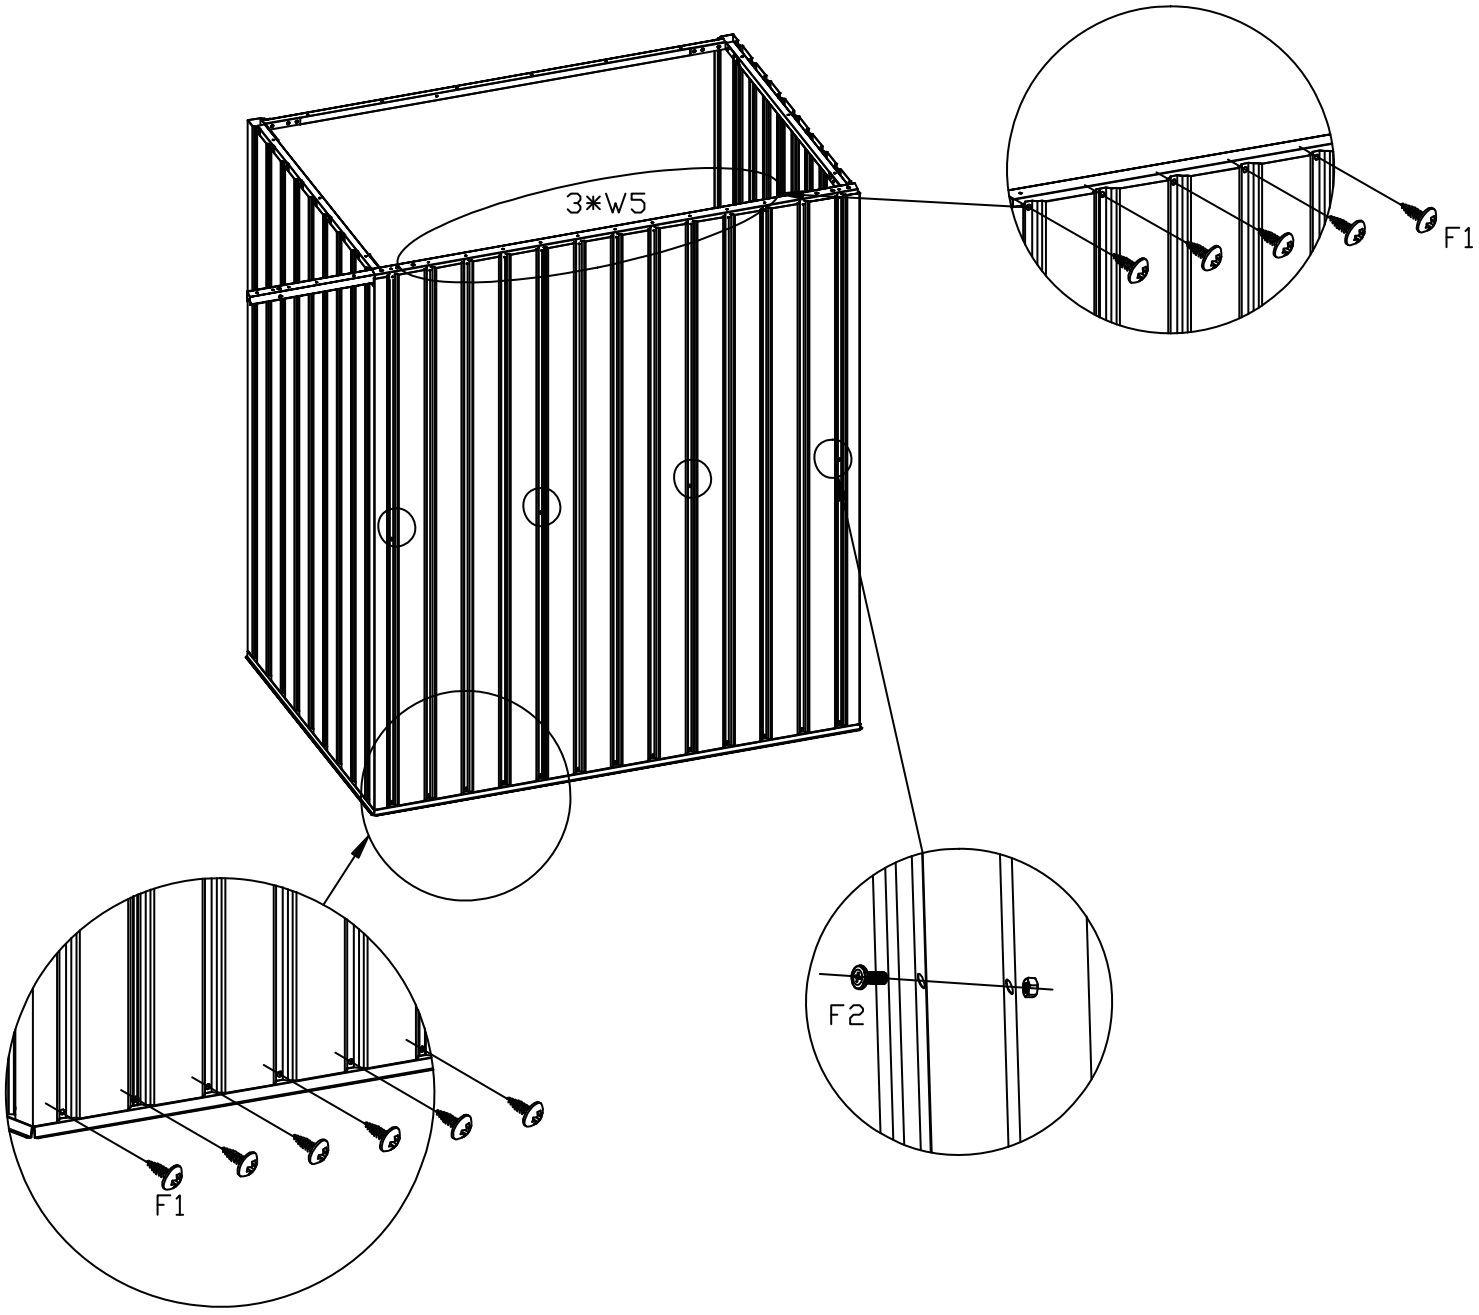


Right Extension


PART	NO.	QTY.
	W5	1
	F1	8
	F2	1

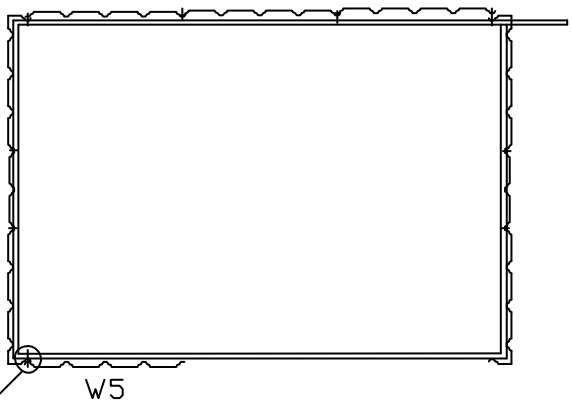

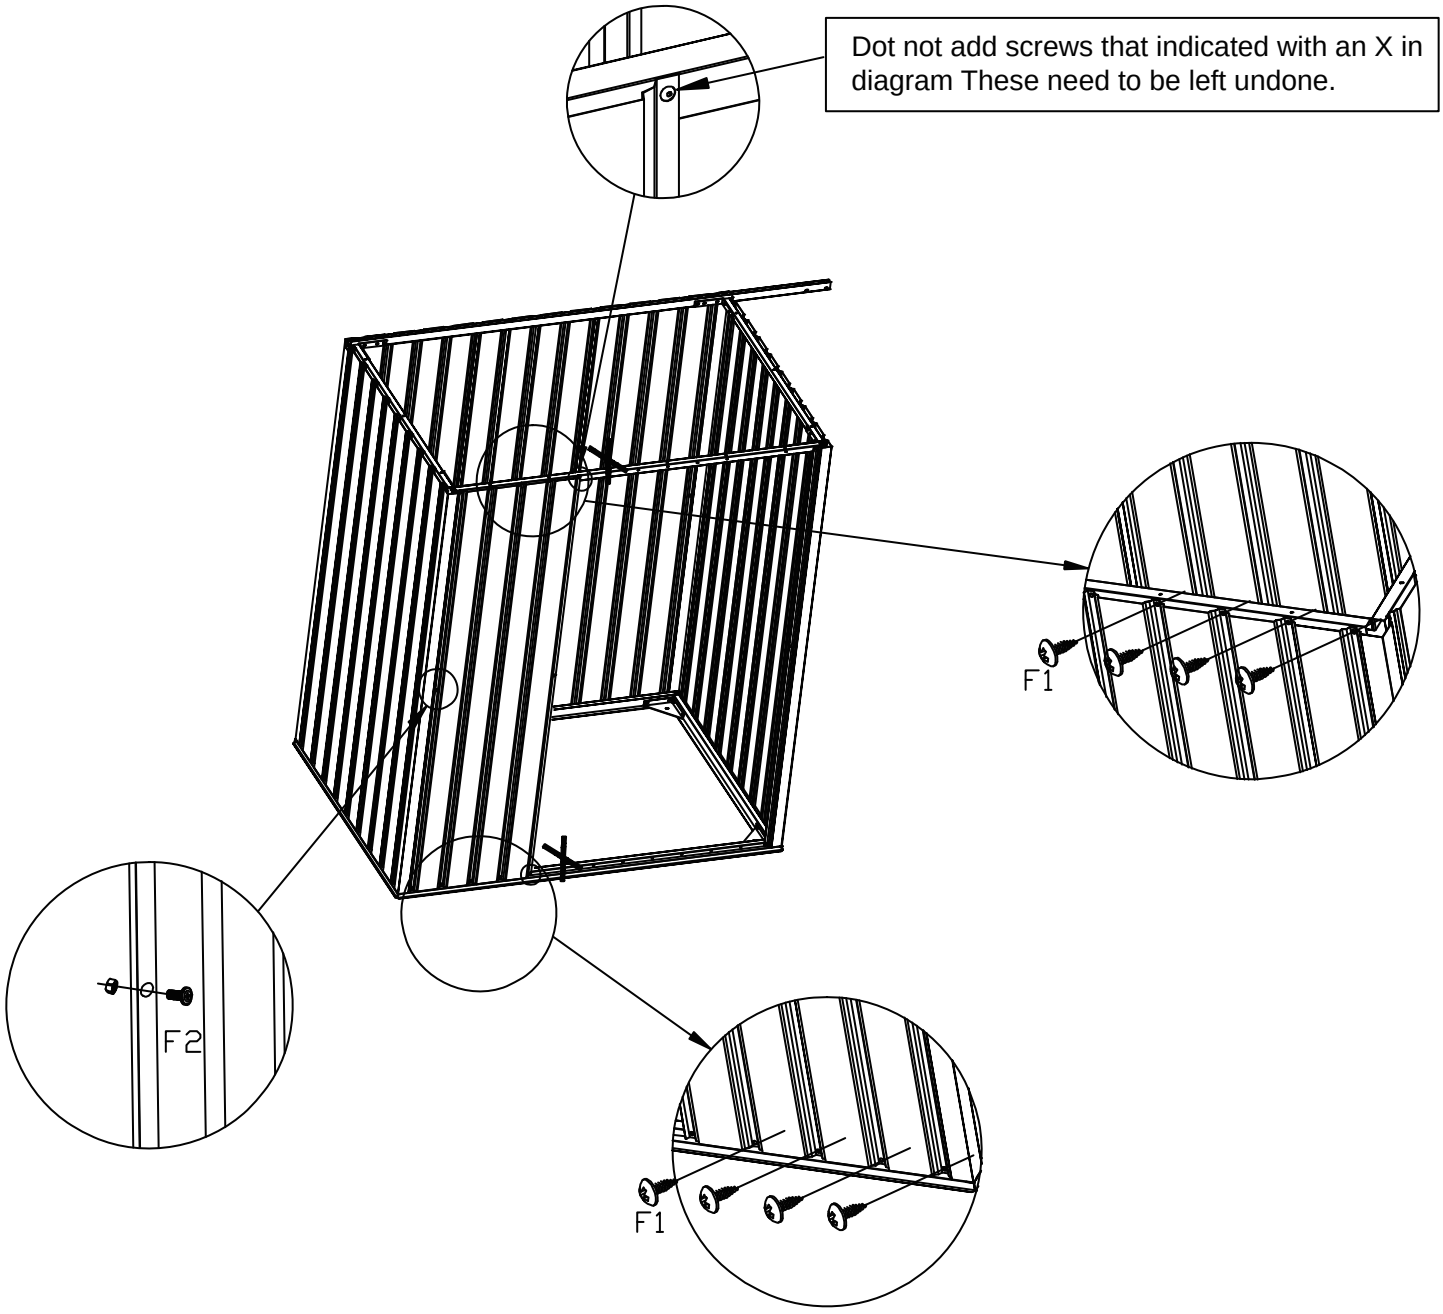



Right Extension


PART	NO.	QTY.
	ULA	1
	URA	1
	F1	8
	F2	2

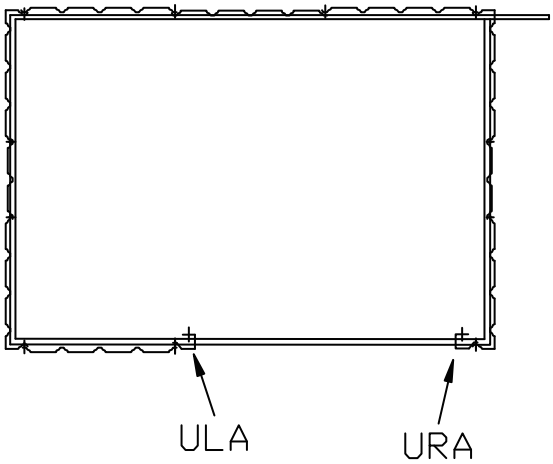



1. ULA/URA notch is inserted into K34-5.

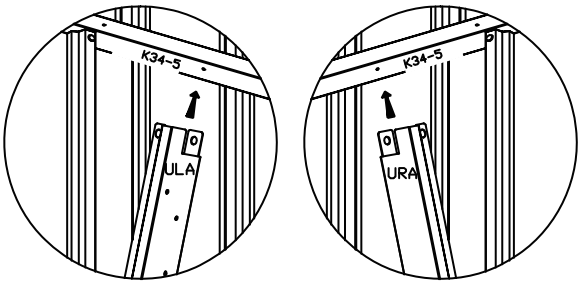

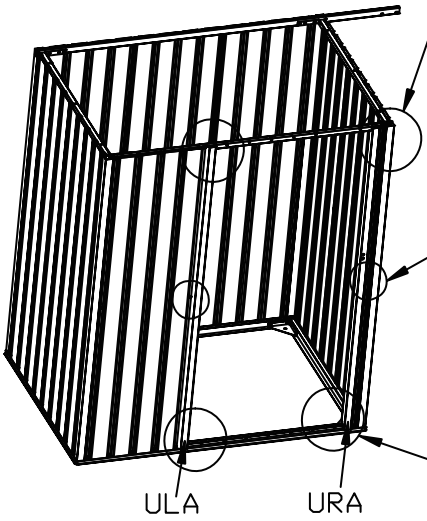


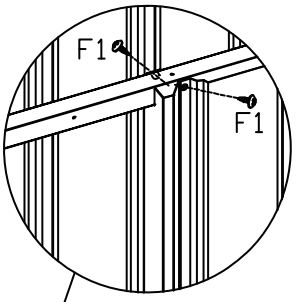

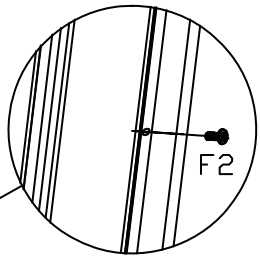


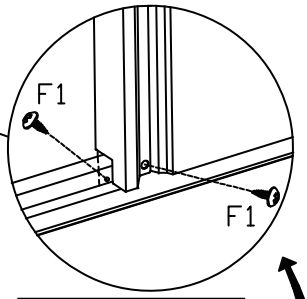

4. F1 screw fixation

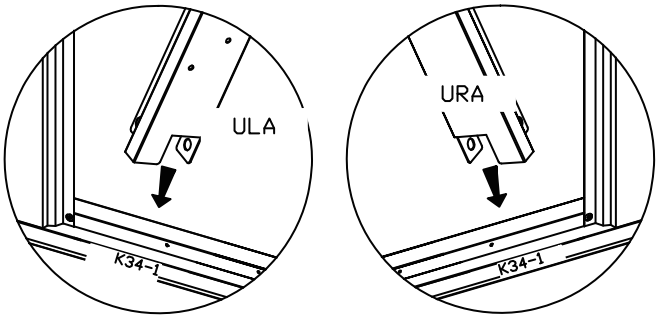

2. ULA/URA notch is inserted into K34-1.

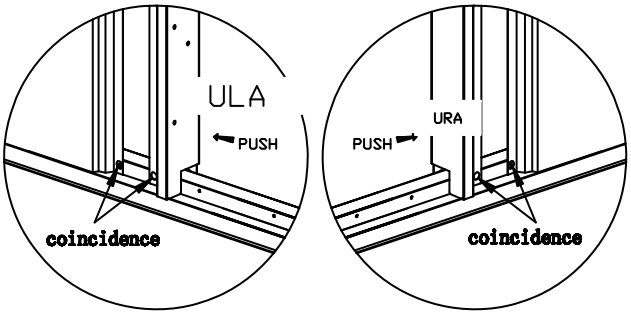



3. Push ULA/URA to coincide with the screw holes on the board.


Top Panel Assemble

Note: to prevent misalignment, first install the screws in the middle of the ventilation panel (as indicated by the arrow).


Right Extension


PART	NO.	QTY.
	K310-6L	1
	K310-6R	1
	K34-7	1
	K310-19R	1
	F1	12
	F2	6

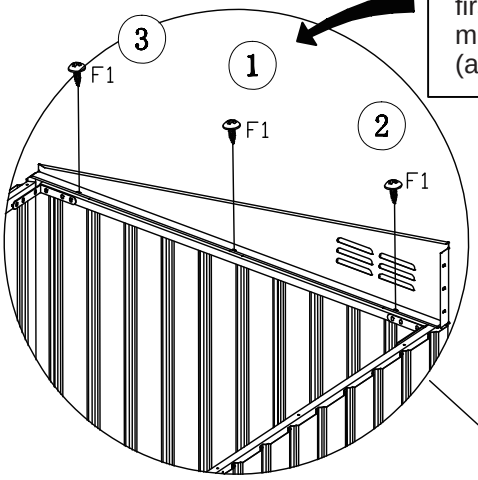


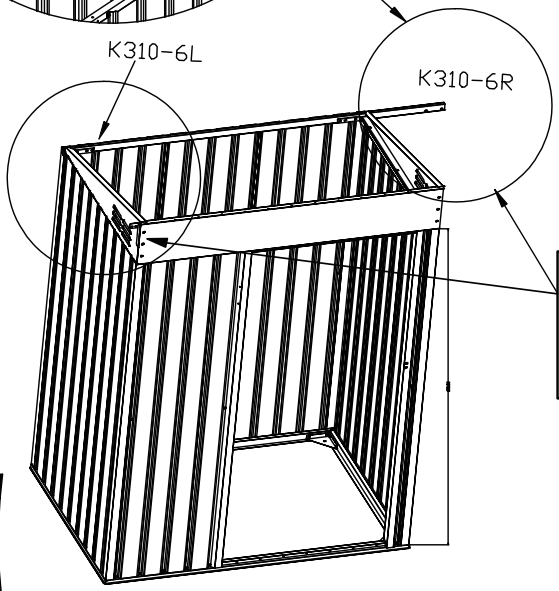



Please note the installation direction shown in the diagram: ensure the short side of the right-angled triangle on the top ventilation panel is facing the door.

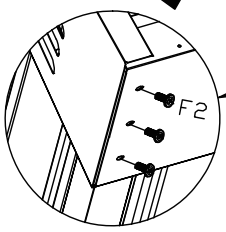


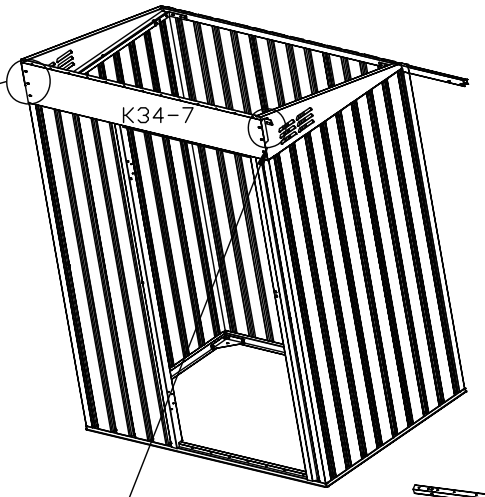

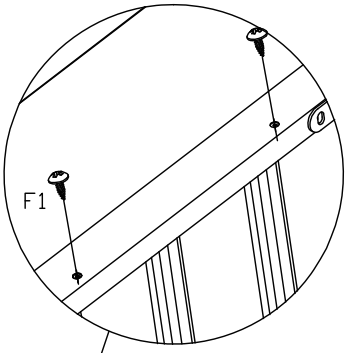

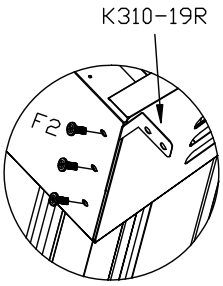


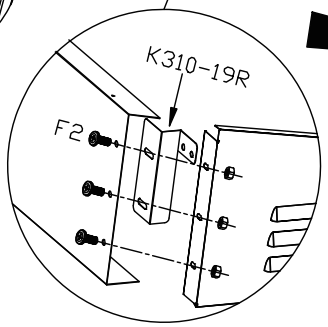

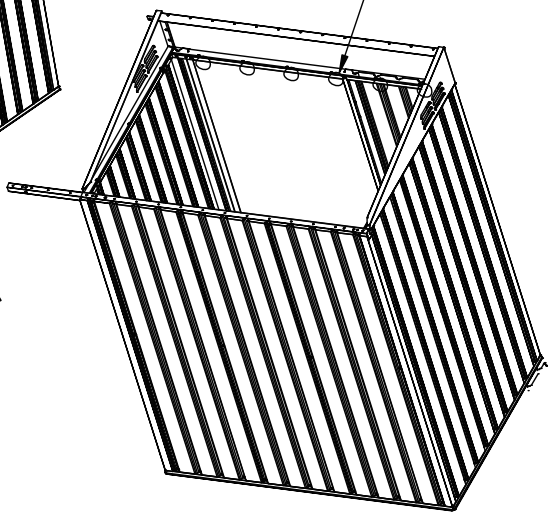

Right Extension

PART	NO.	QTY.
	K310-5L/R	1
	K310-8	1
	K310-17	2
	F1	9

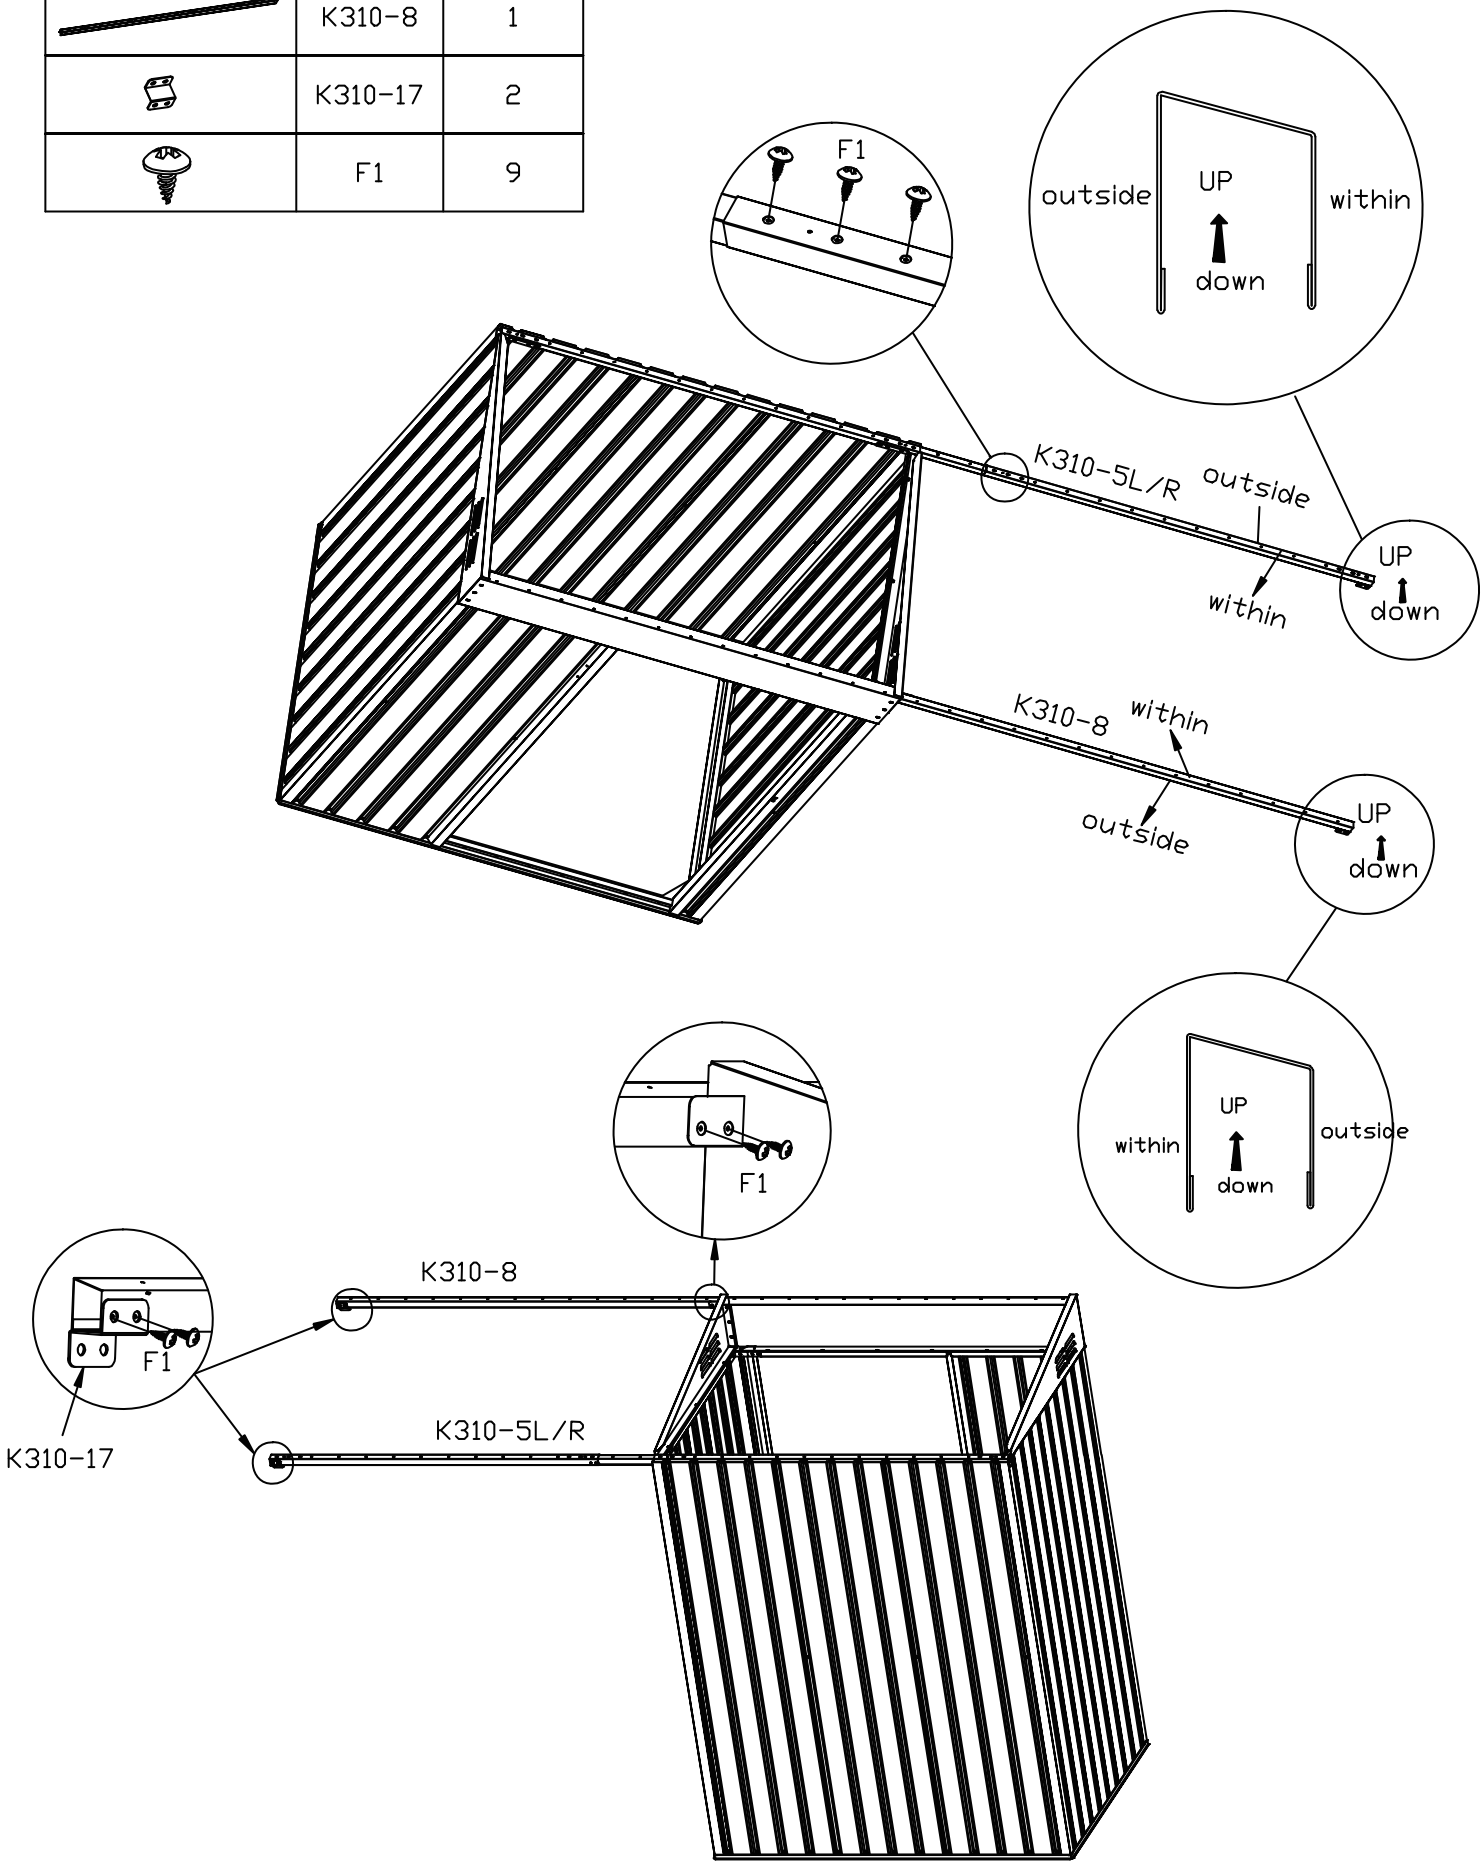



Right Extension

PART	NO.	QTY.
	K310-14	2
	K310-15	1
	K310-16	1
	K310-10	2
	K310-18	2
	F1	24


TUBE 1 :
formed by connecting two short posts, K310-15 and K310-14.

TUBE 2 :
formed by connecting two short posts, K310-16 and K310-14.

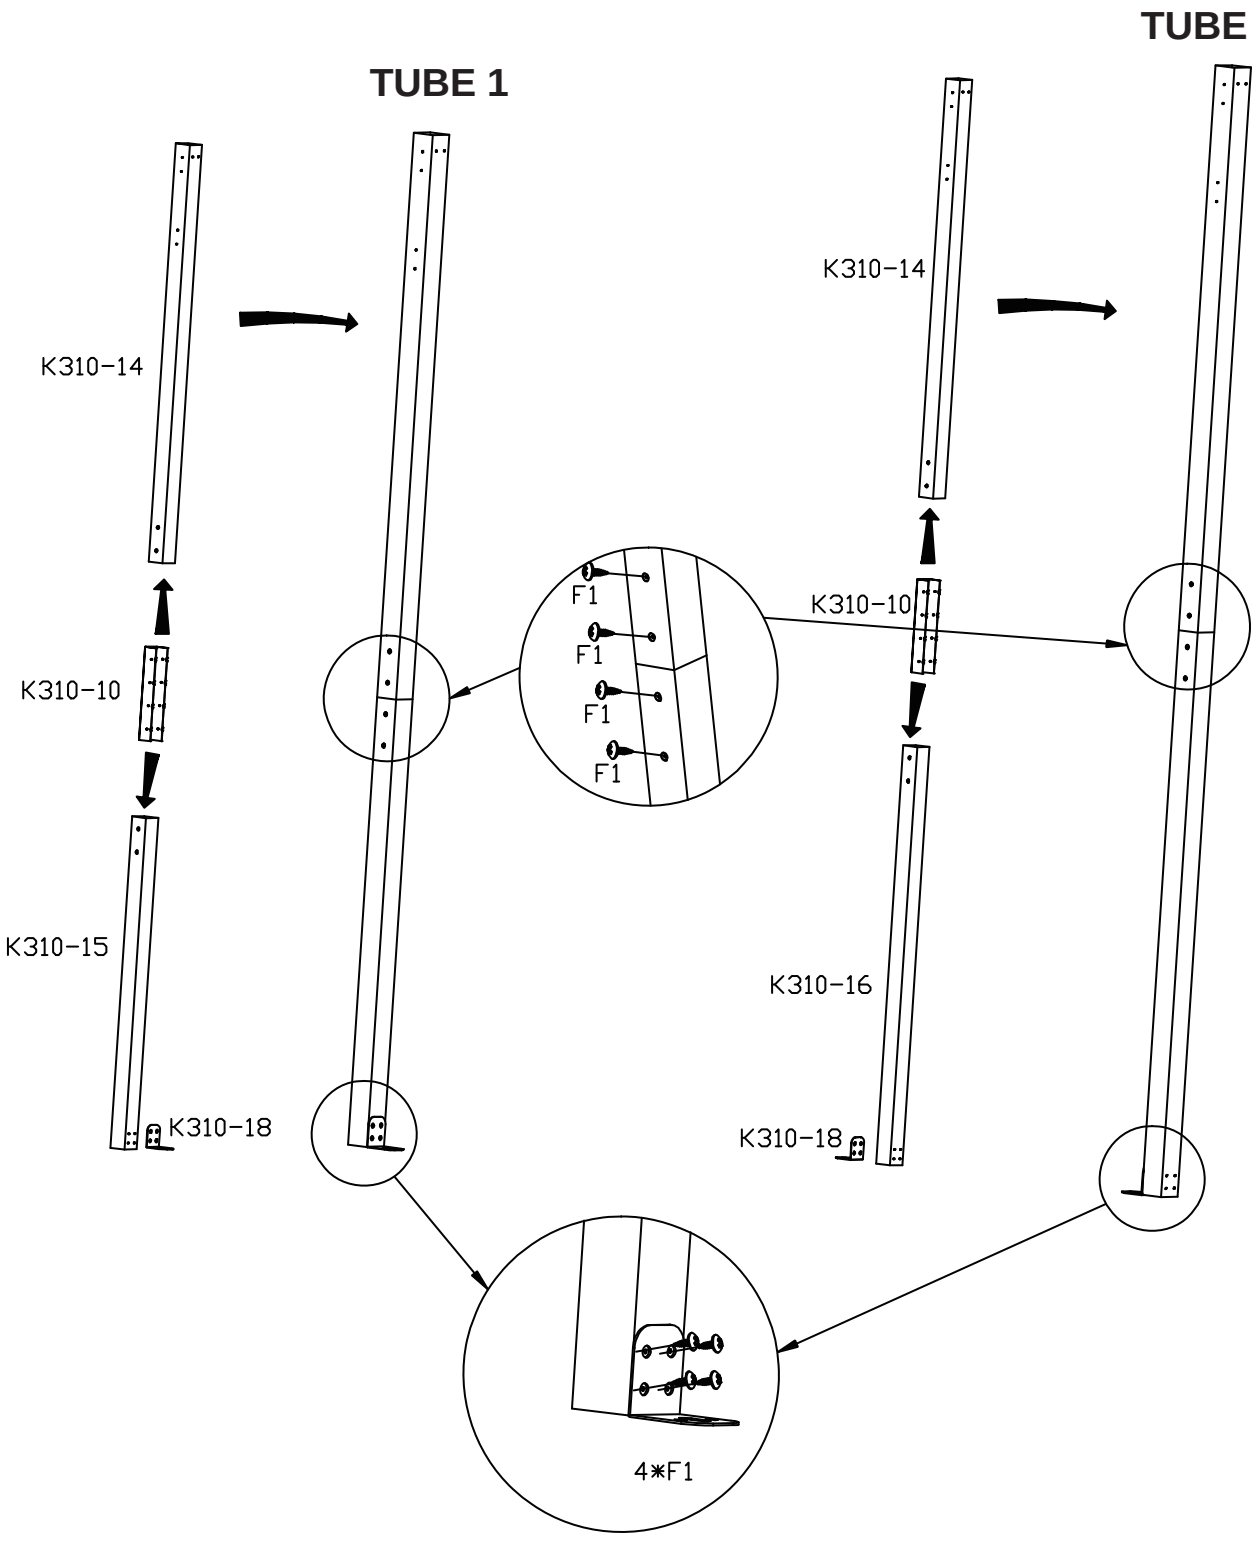


PART	NO.	QTY.
	K310-11R	1
	K310-12	1
	K310-13	1
	TUBE1	1
	TUBE2	1
	F1	16


Right Extension

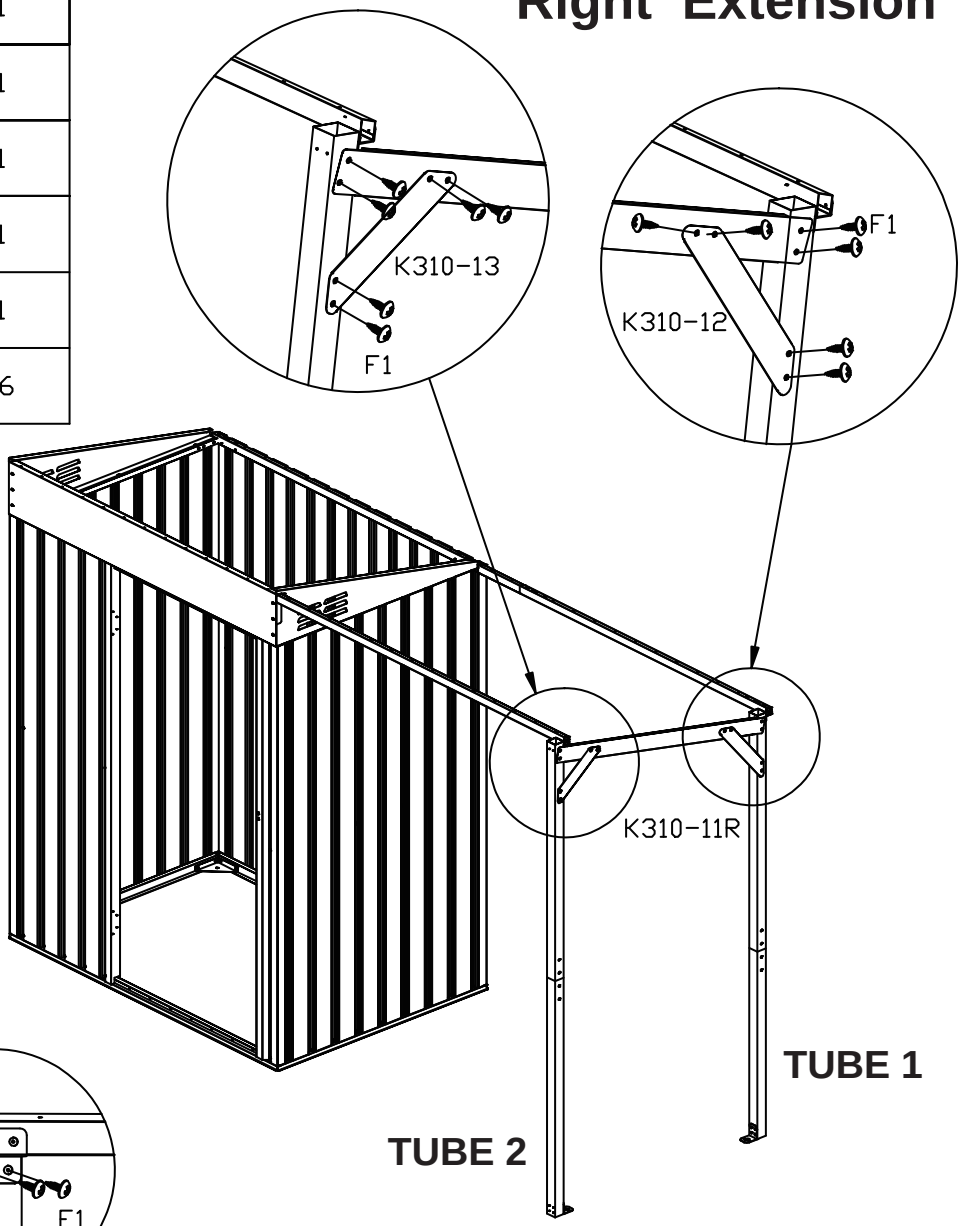

Right Extension


PART	NO.	QTY.
	K35-14	2
	K35-14M	5
	V2	54
	F1	54

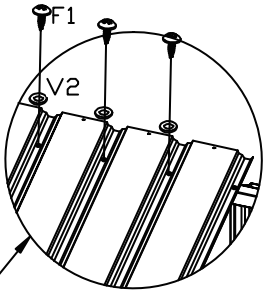

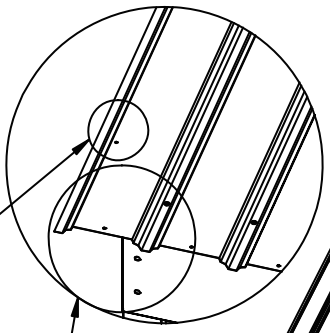



Please install K35-14 with the small hole facing the outside of the cabinet.


K35-14

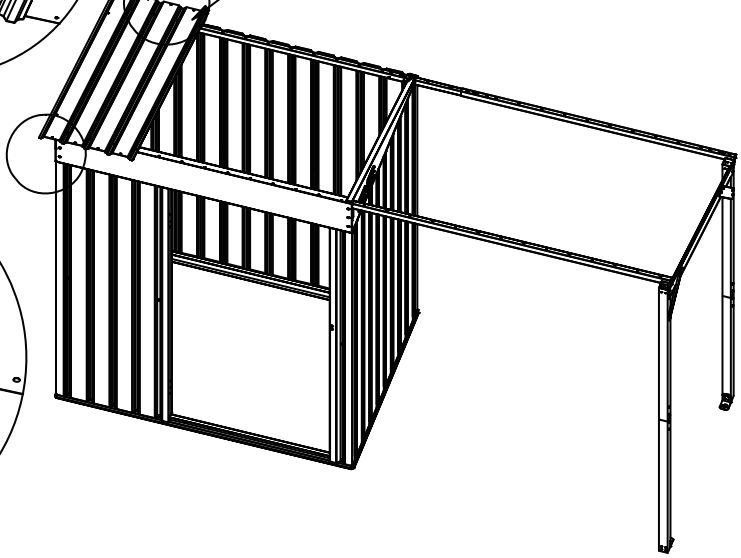



Please extend K35-14 towards the shed door by approximately 1.97 inches (just an estimate).

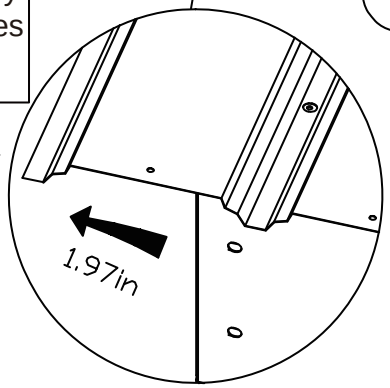

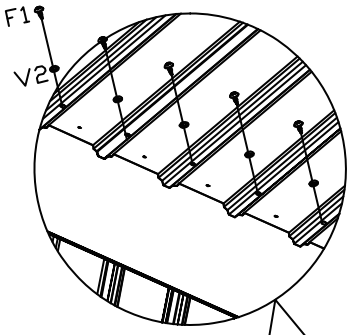

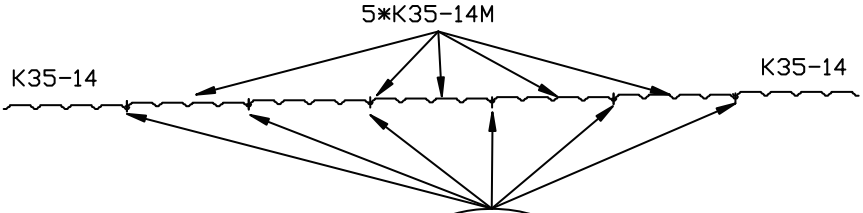

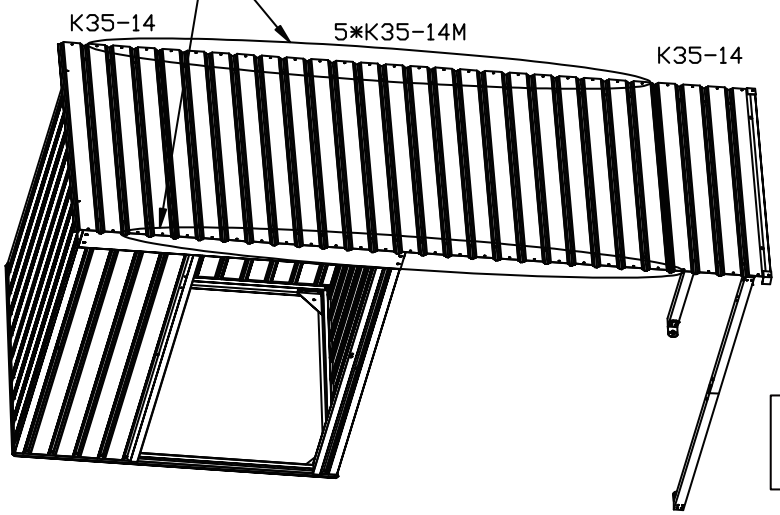


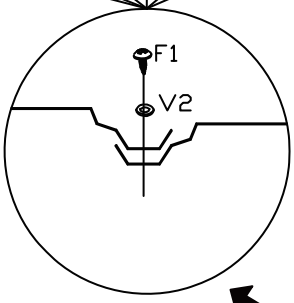


Please ensure that the flat edge overlaps the panel on top of the grooved edge.

Right Extension

PART	NO.	QTY.
	K310-9L	2
	K310-9R	2
	K35-15	2
	GC	4
	V2	24
	F1	24

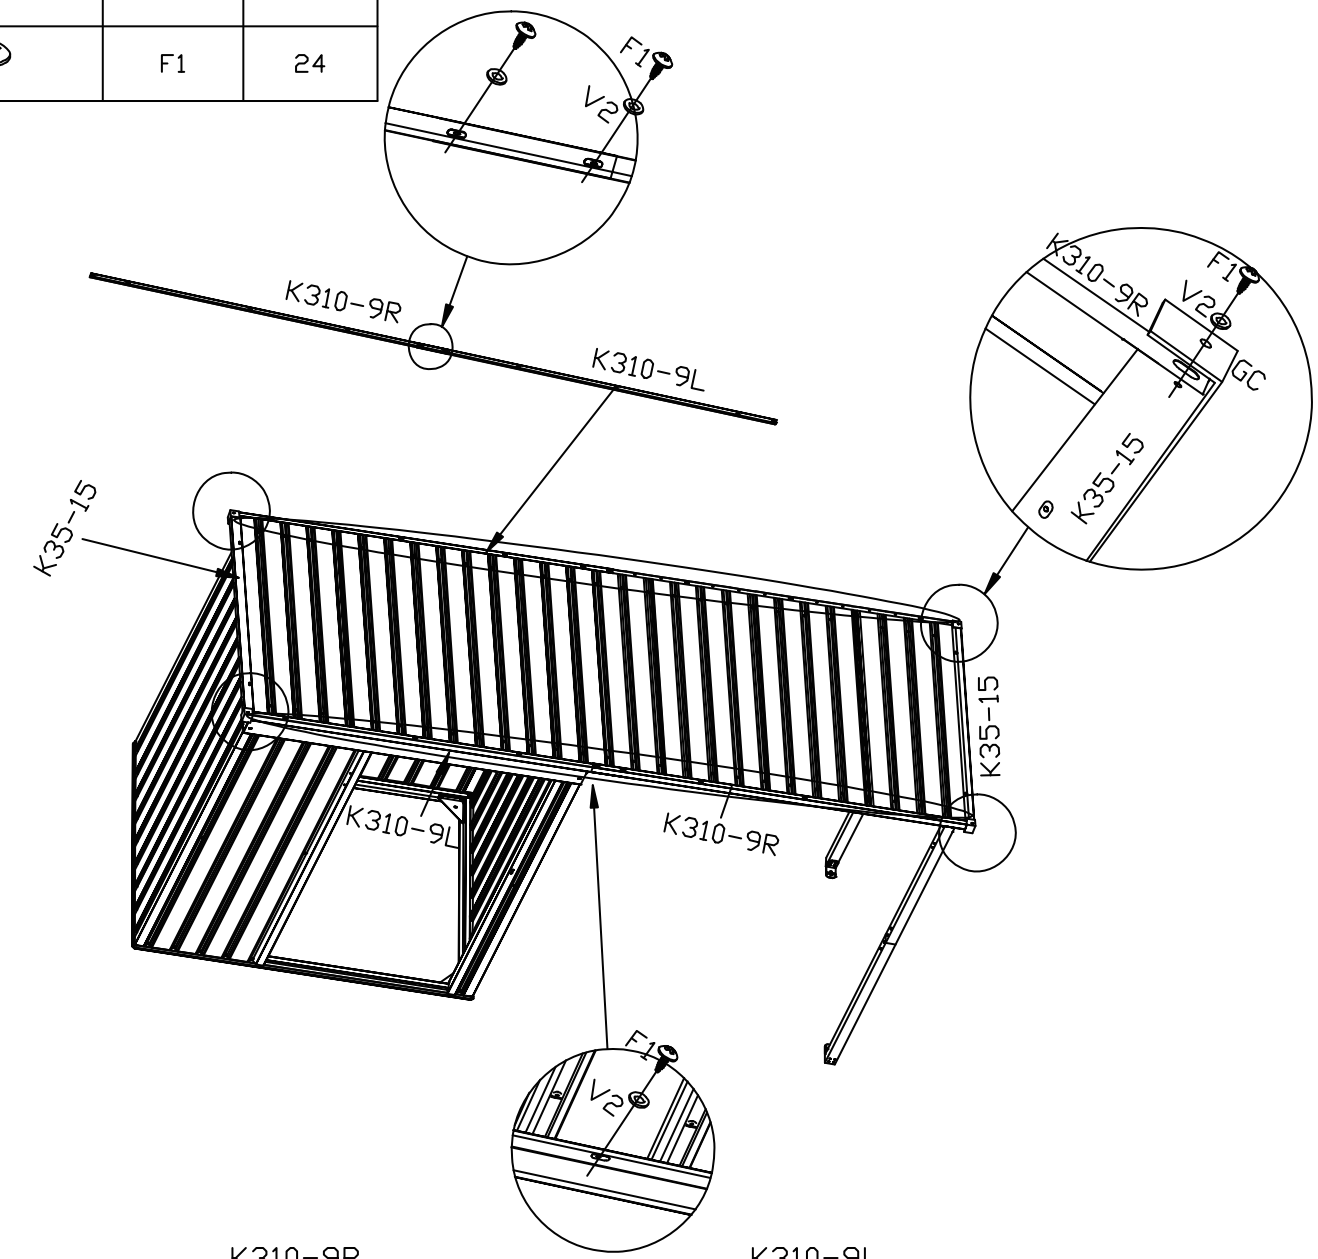


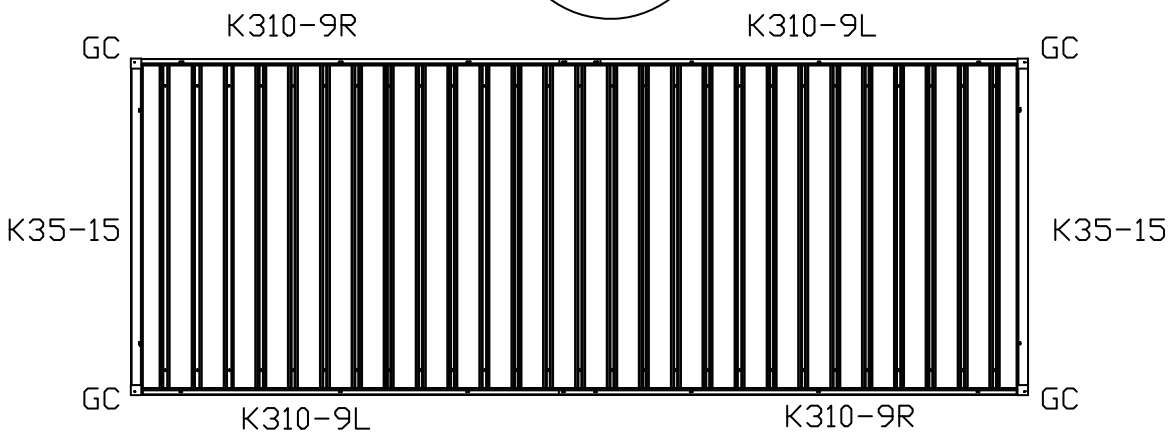

Door Assemble


Right Extension


PART	NO.	QTY.
	W5-X	1
	W3-HX	1
	DD	2
	DLA1	1
	DRA1	1
	DX1	2
	F1	9
	F2	6

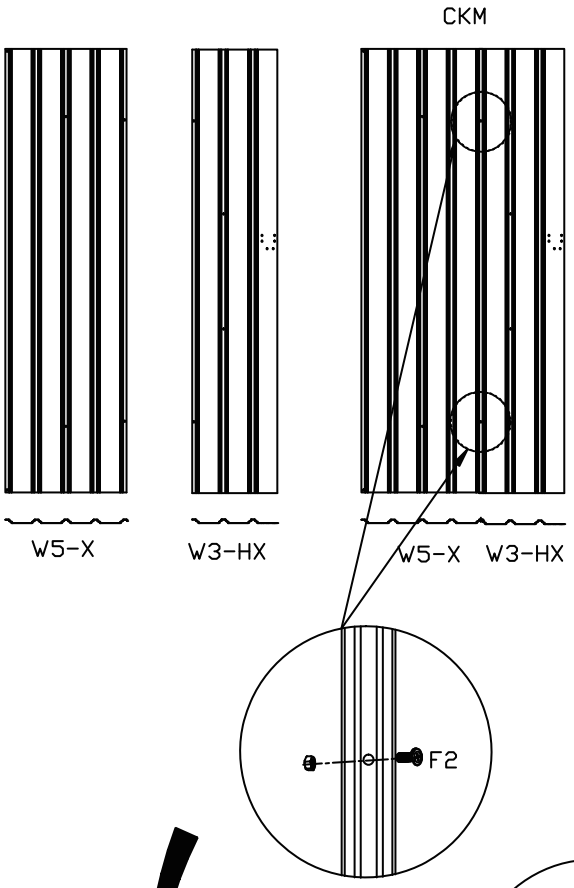

Right Extension

PART	NO.	QTY.
	DCS	1
	DH	2
	F3	8
	F2	6

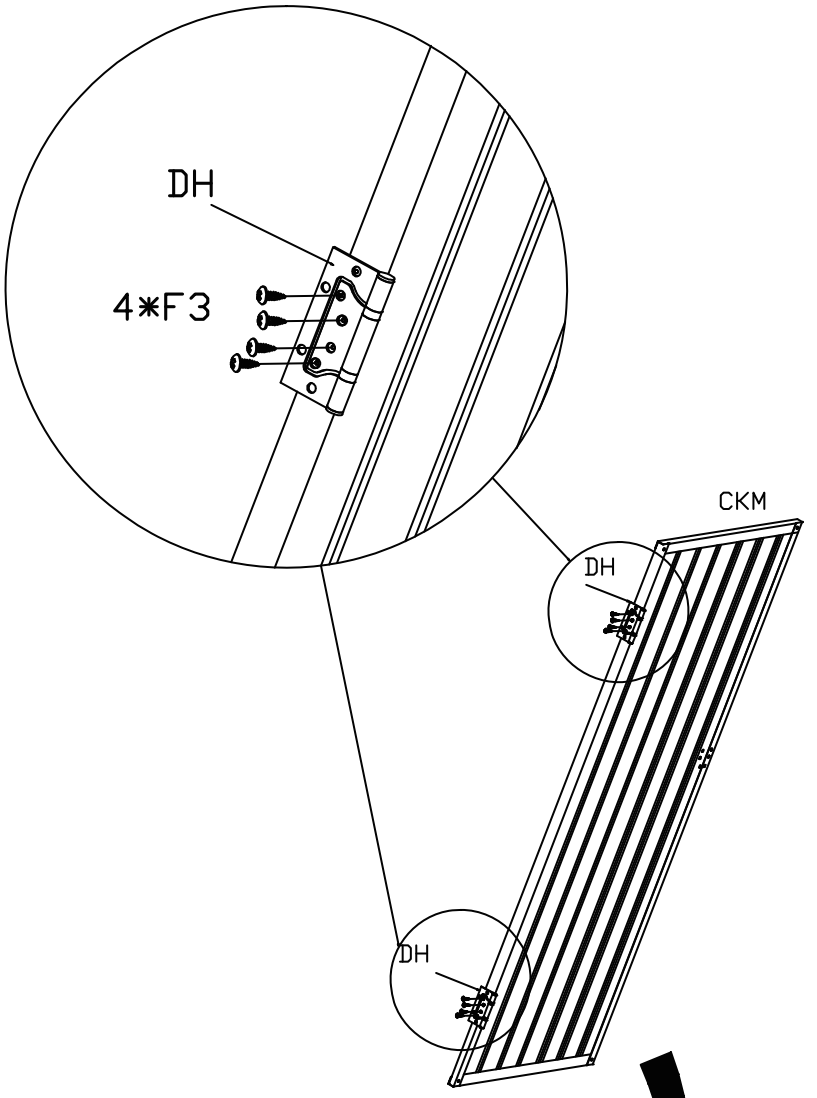

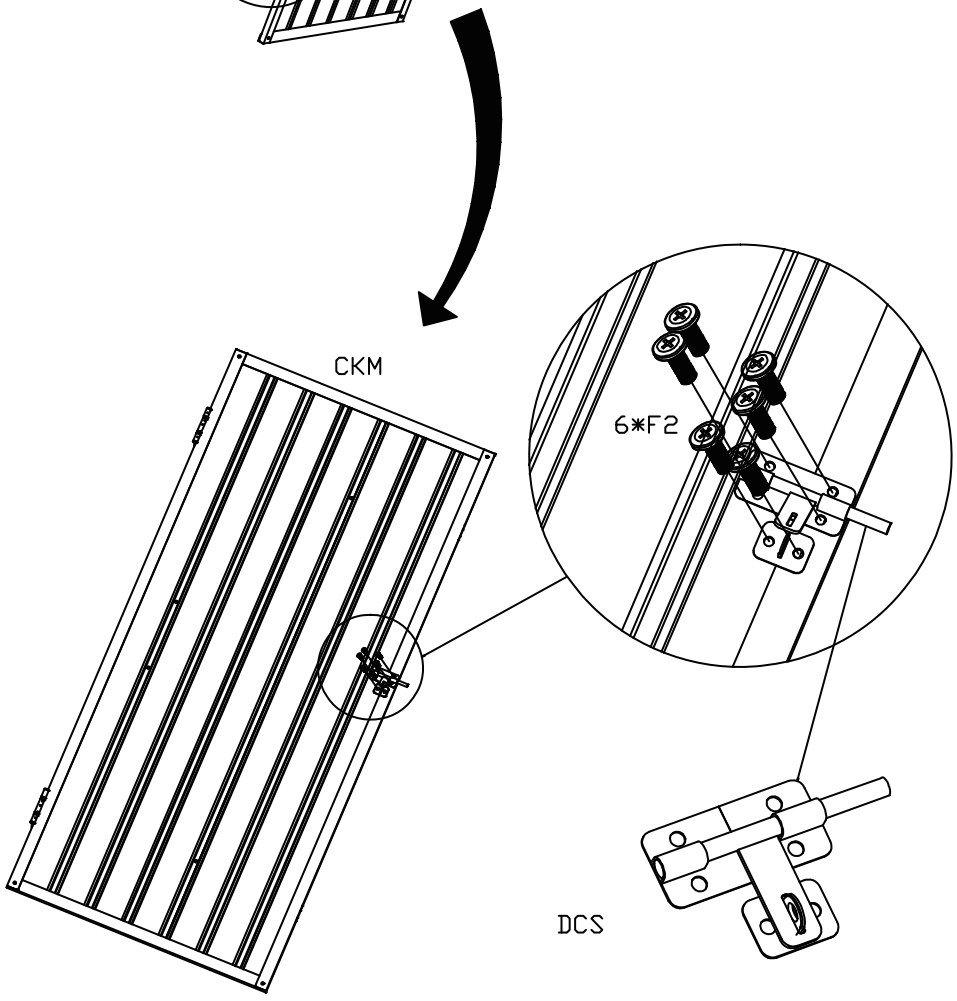


Right Extension

PART	NO.	QTY.
	CKM	1
	F3	8
	F2	2

PART	NO.	QTY
	PZ1	6

Left Extension

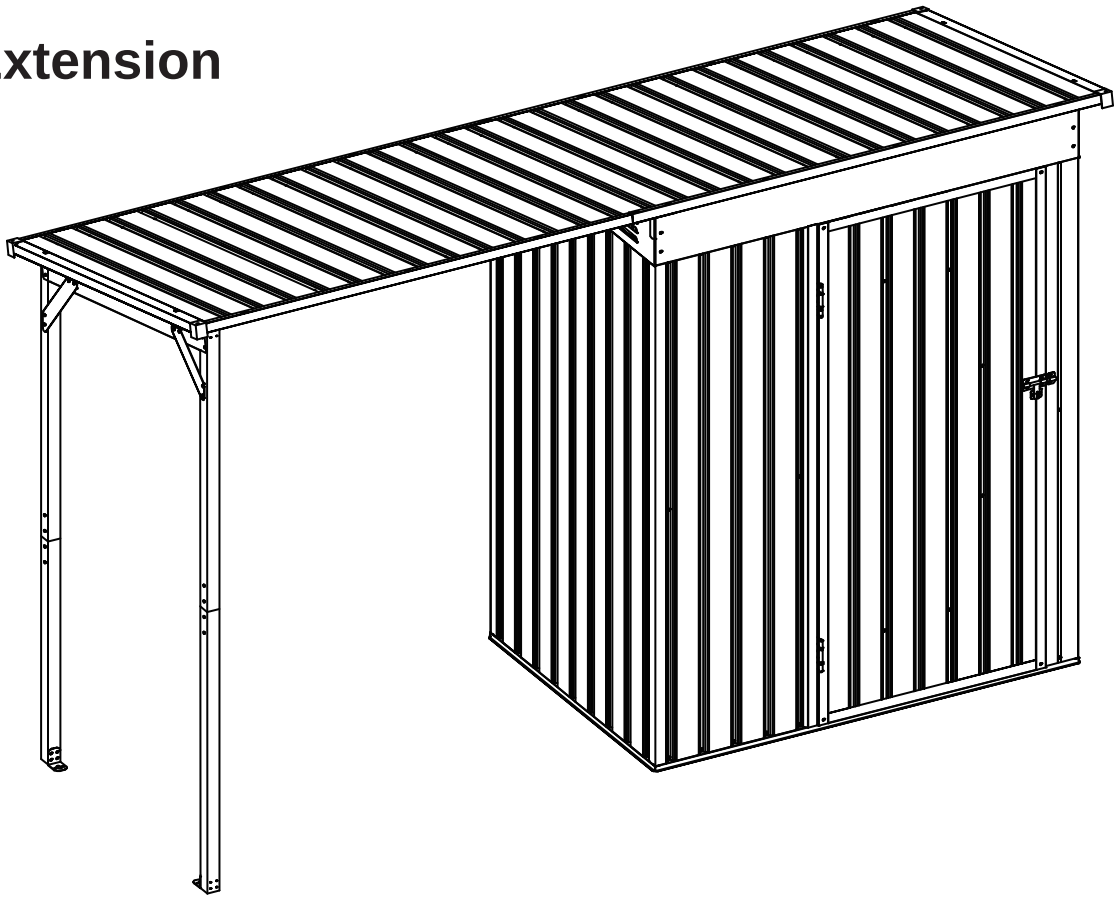

Right Extension

