



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF305759

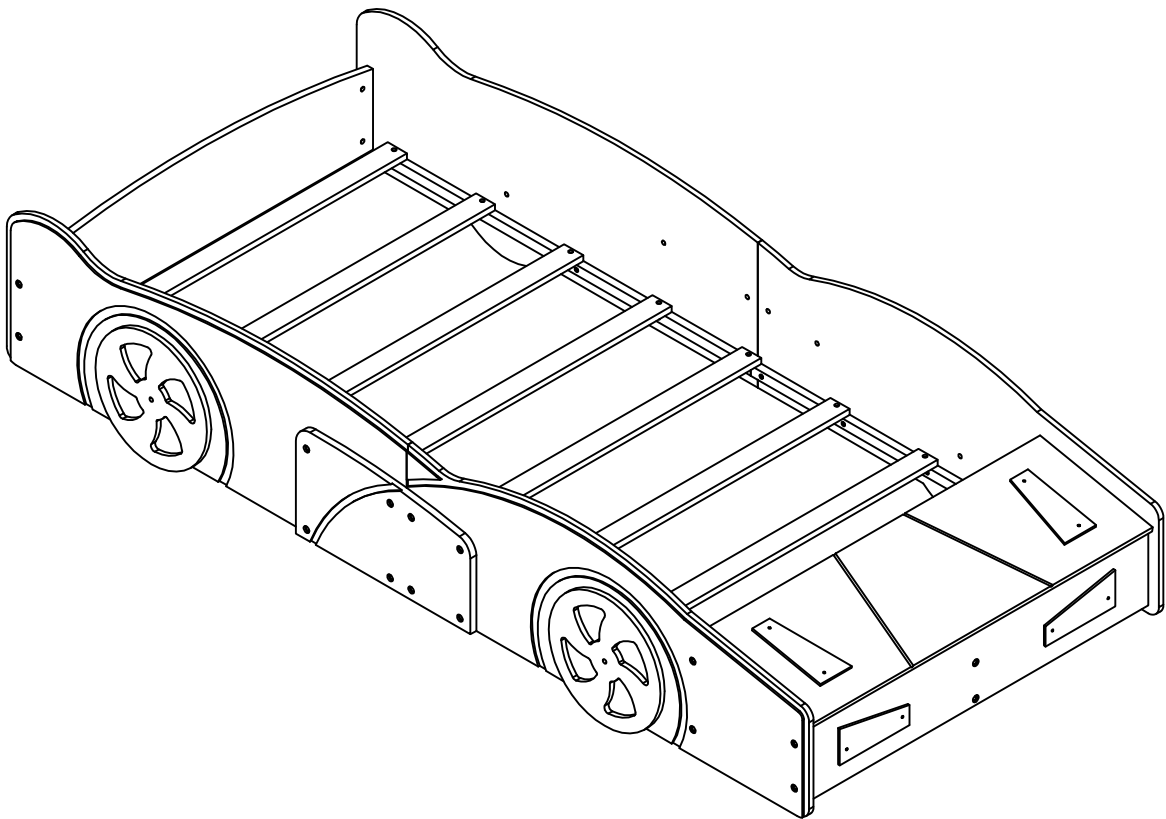


DETAIL VIEW

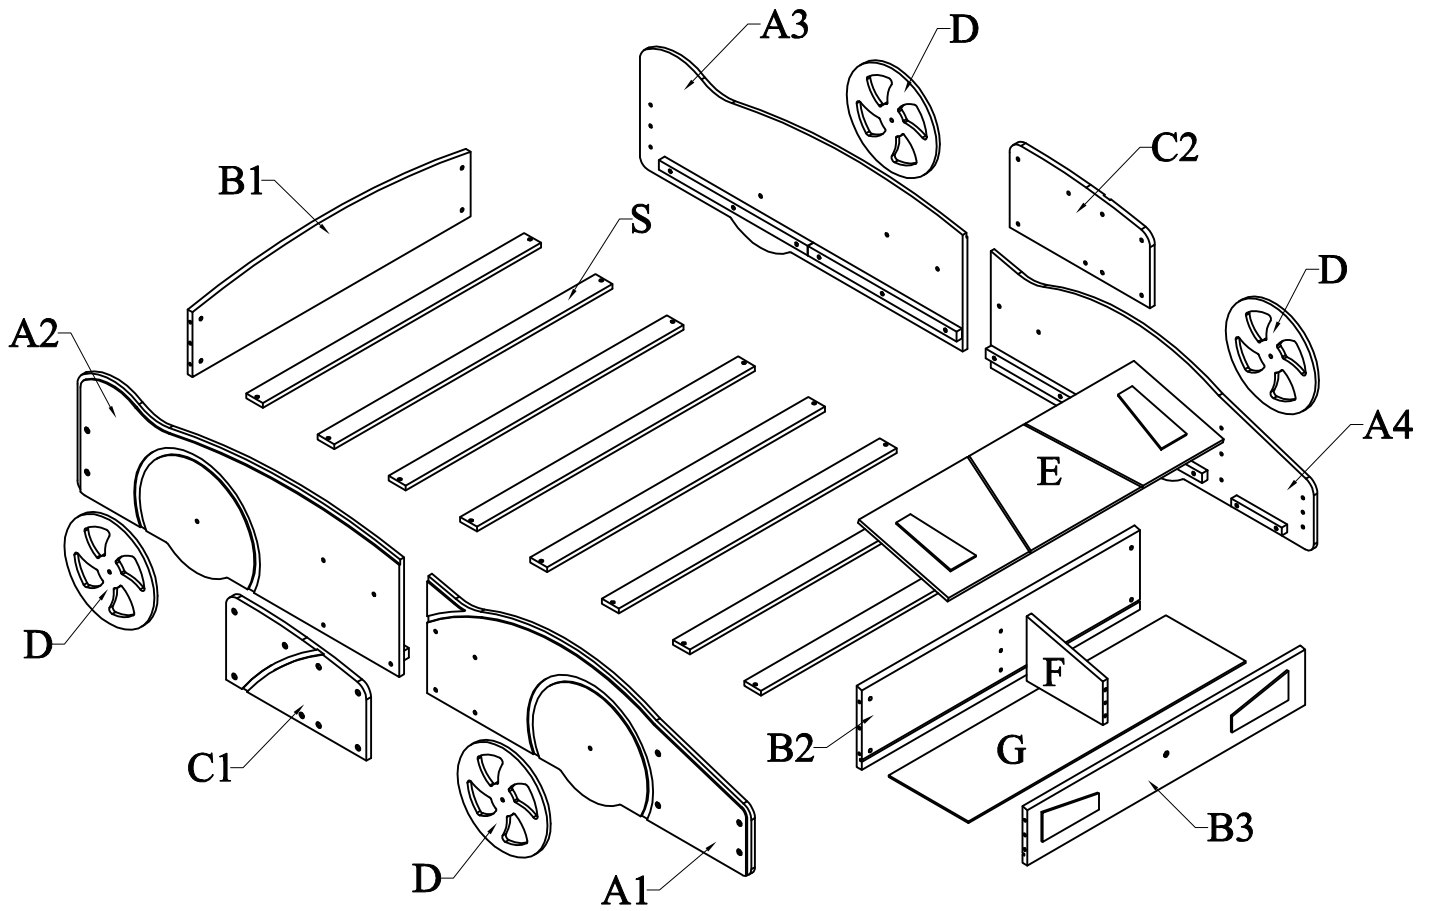


BOX: WF305759

A1

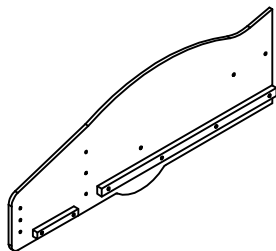


Top panel (1sets)

A2

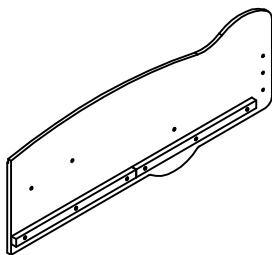


Bottom panel (1pc)

A3

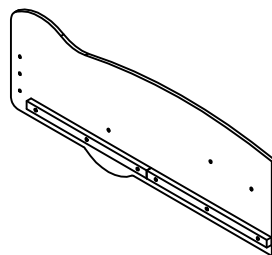


Support - bottom (2pcs)

A4

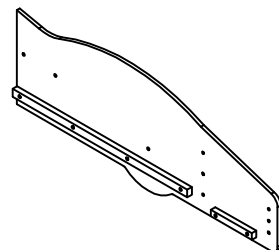


Back rail (2pcs)

B1

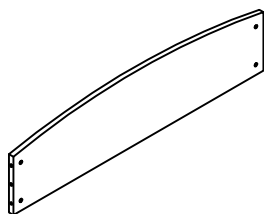


Horizontal rail - back (1pc)

B2

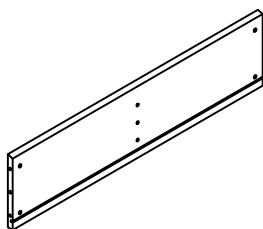


Horizontal rail - middle (1pc)

B3

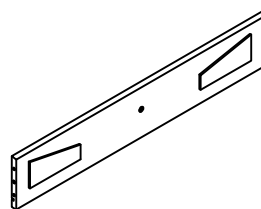


Horizontal rail - front (1pc)

C1

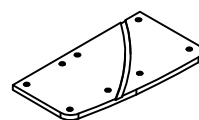

Support side rail - left (1pc)

C2

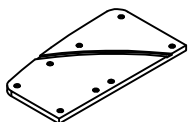


Support side rail - right (1pc)

D




Wheel (4pcs)

E

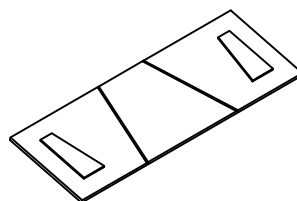


Top panel (1pc)

F

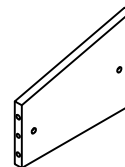


Partition panel (1pc)

G

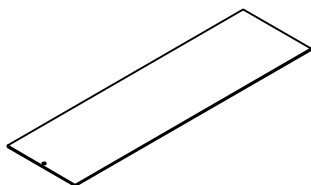







Bottom panel (1pc)


S

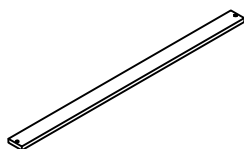

Slats (8pcs)


HARDWARE LIST: WF305759

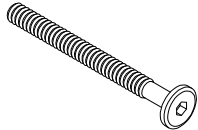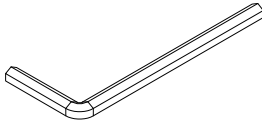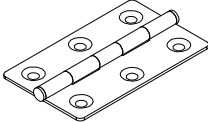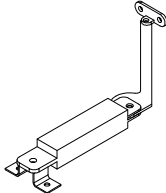1  Hex - Head bolts Ø1/4" * 60 - 14pcs	2  Hex - Head bolts Ø1/4" * 25 - 16pcs	3  Hex - Head bolts Ø1/4" * 15 - 4pcs	4  Horizontal - Hold bolts Ø1/4" - 16pcs
5  Canopy head though Ø1/4" - 20pcs	6  Wood dowel Ø8 * 30 - 10pcs	7  Allen key K4 - 2pc	8  Hinge - 2pcs
9  Folded patt - 1pcs	10  Wood crews M4 * 25 - 16pcs	11  Round wood crews M3.5 * 15 - 4pcs	12  Wood crews M3.5 * 15 - 12pcs



Assembly Tools Required (Not Included)

STEP 1

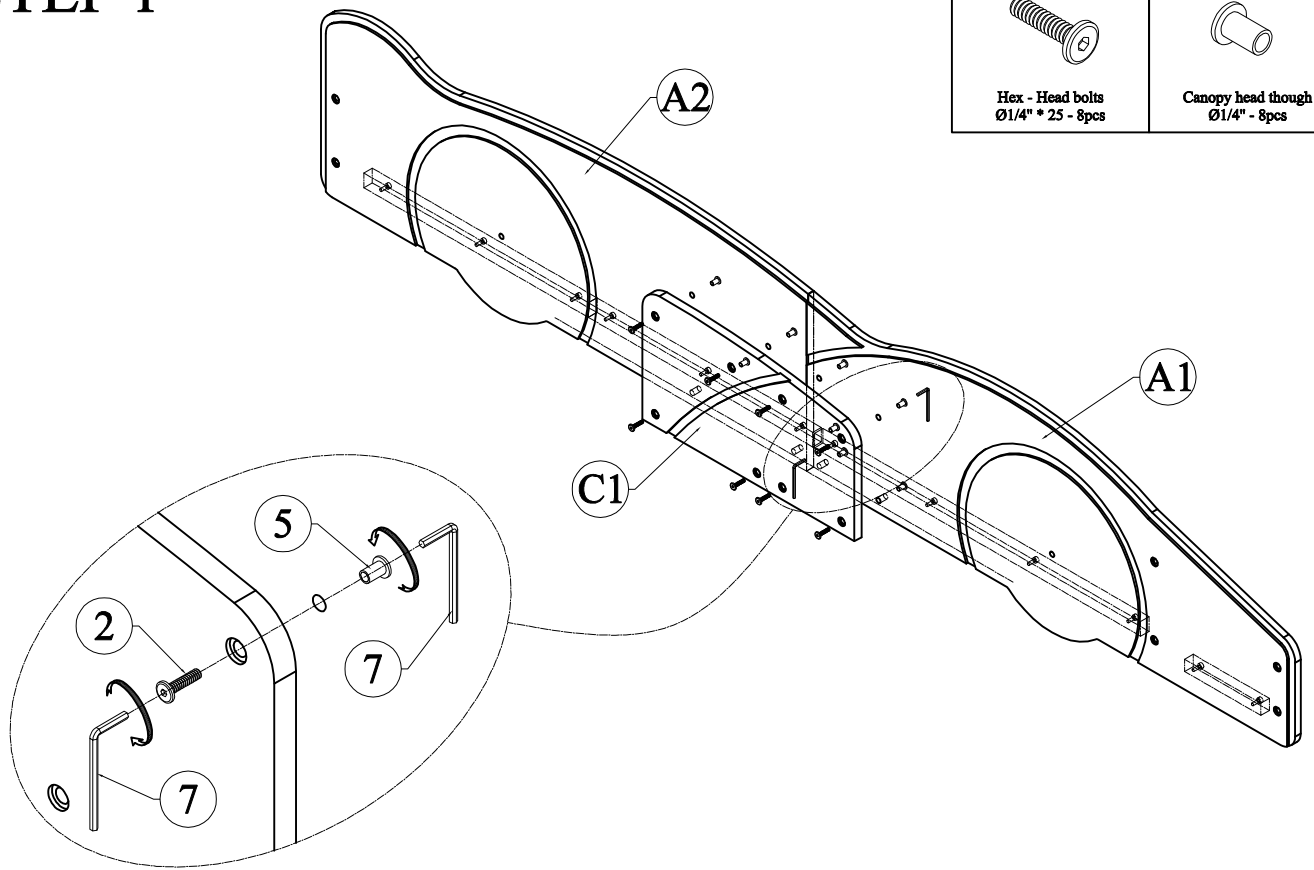

2




Hex - Head bolts
Ø1/4" * 25 - 8pcs

5



Canopy head through
Ø1/4" - 8pcs

STEP 2

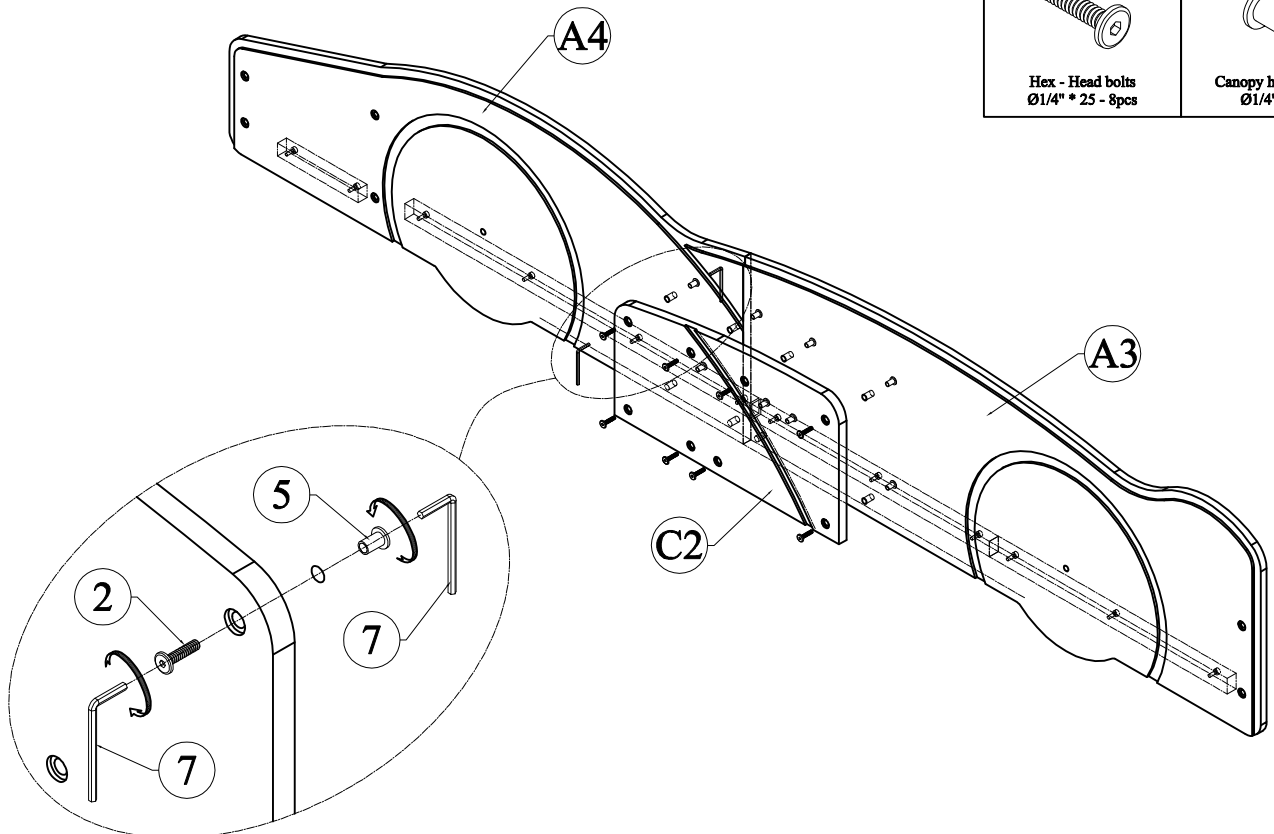

2




Hex - Head bolts
Ø1/4" * 25 - 8pcs

5



Canopy head through
Ø1/4" - 8pcs

STEP 3

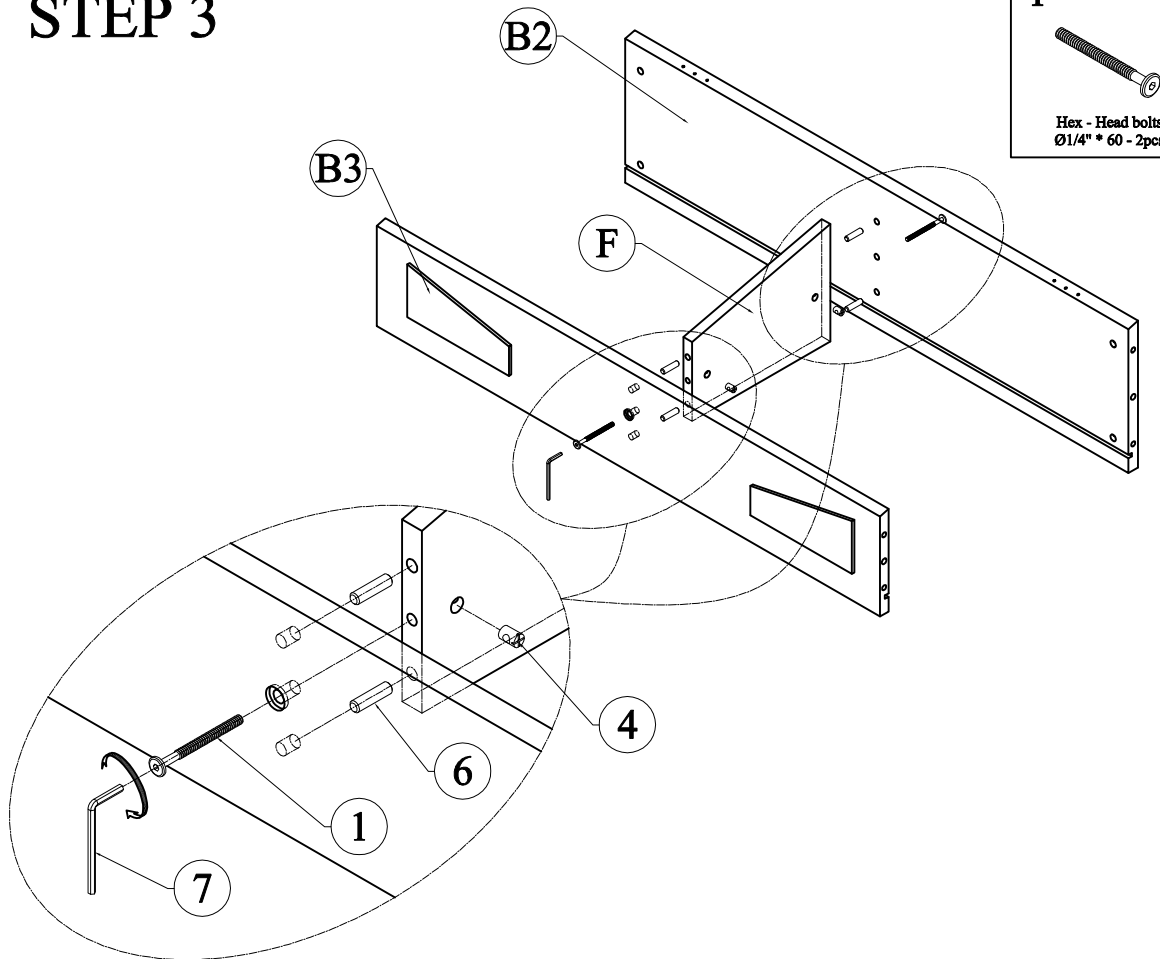


1
Hex - Head bolts
Ø1/4" * 60 - 2pcs

4
Horizontal - Hold bolts
Ø1/4" - 2pcs

6
Wood dowel
Ø8 * 30 - 4pcs

STEP 4

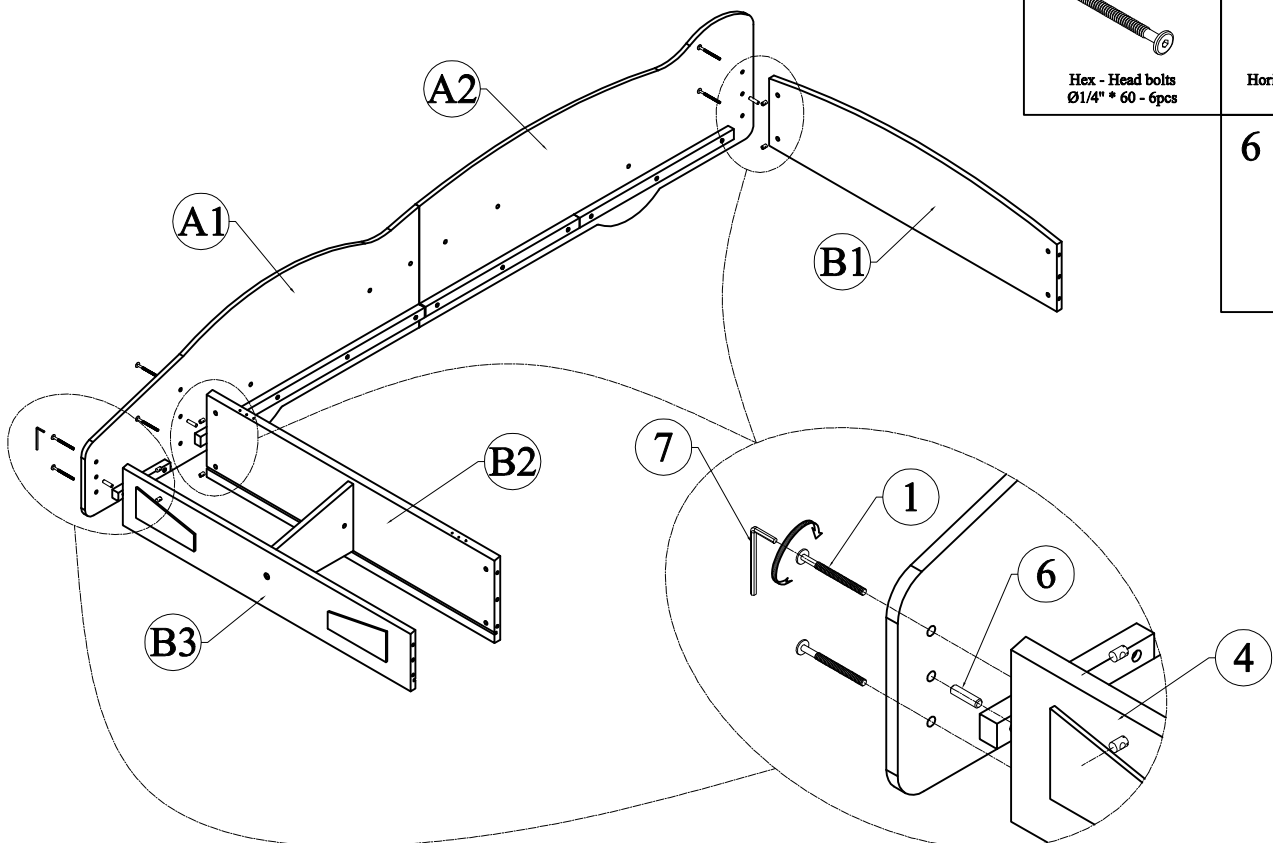


1
Hex - Head bolts
Ø1/4" * 60 - 6pcs


4
Horizontal - Hold bolts
Ø1/4" - 6pcs

6
Wood dowel
Ø8 * 30 - 3pcs

STEP 5

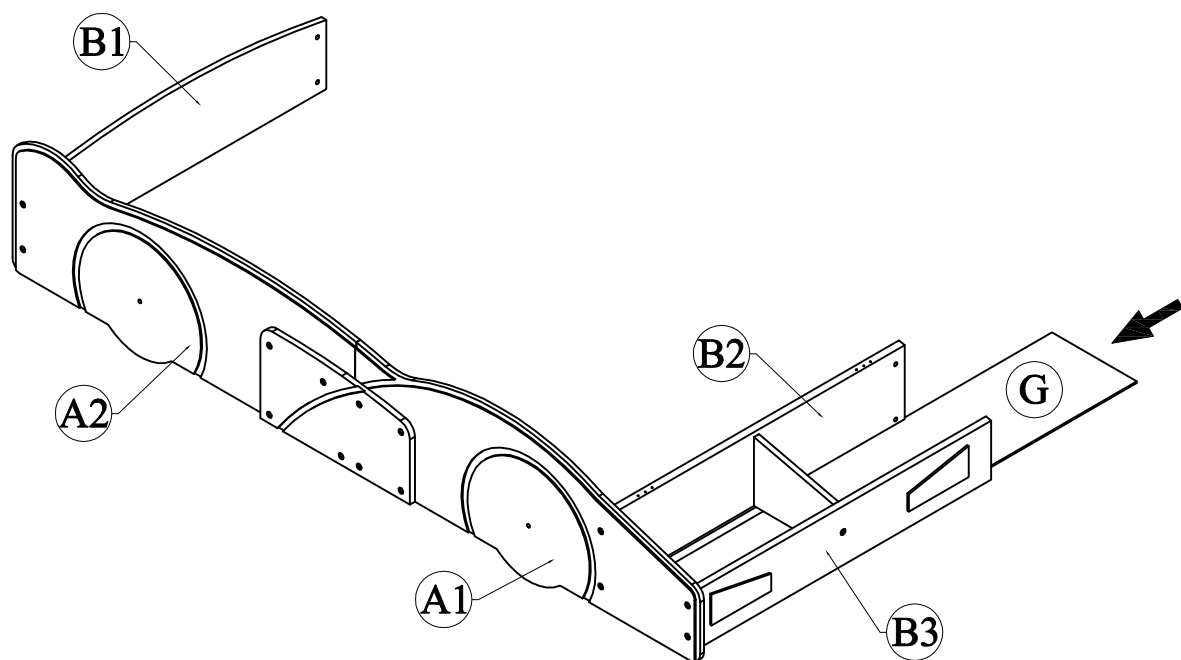

STEP 6

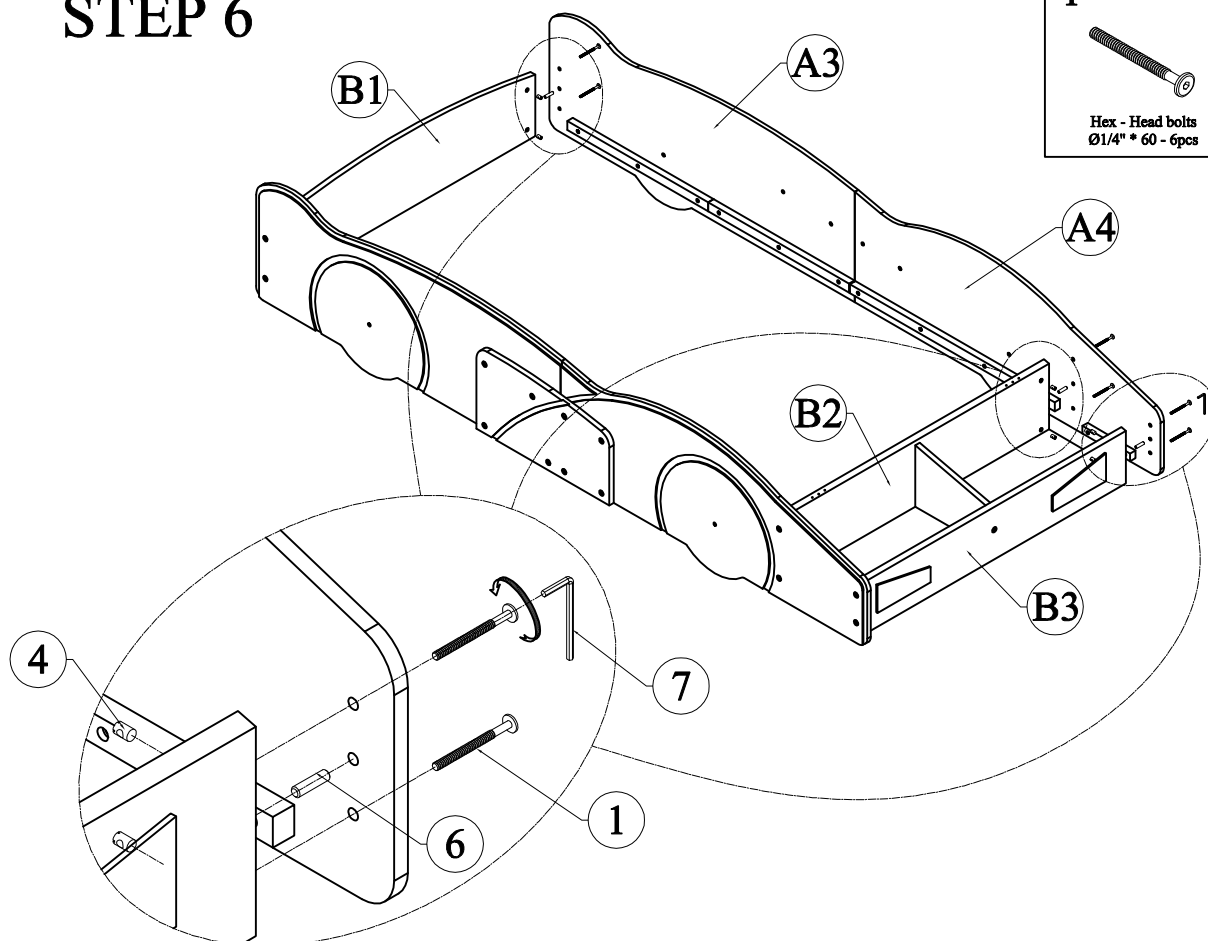

1
Hex - Head bolts
Ø1/4" * 60 - 6pcs

4
Horizontal - Hold bolts
Ø1/4" - 6pcs

6
Wood dowel
Ø8 * 30 - 3pcs


STEP 7

The distance between the slats is 7 - 2/3 inch

10



Wood crews
M4 * 25 - 16pcs

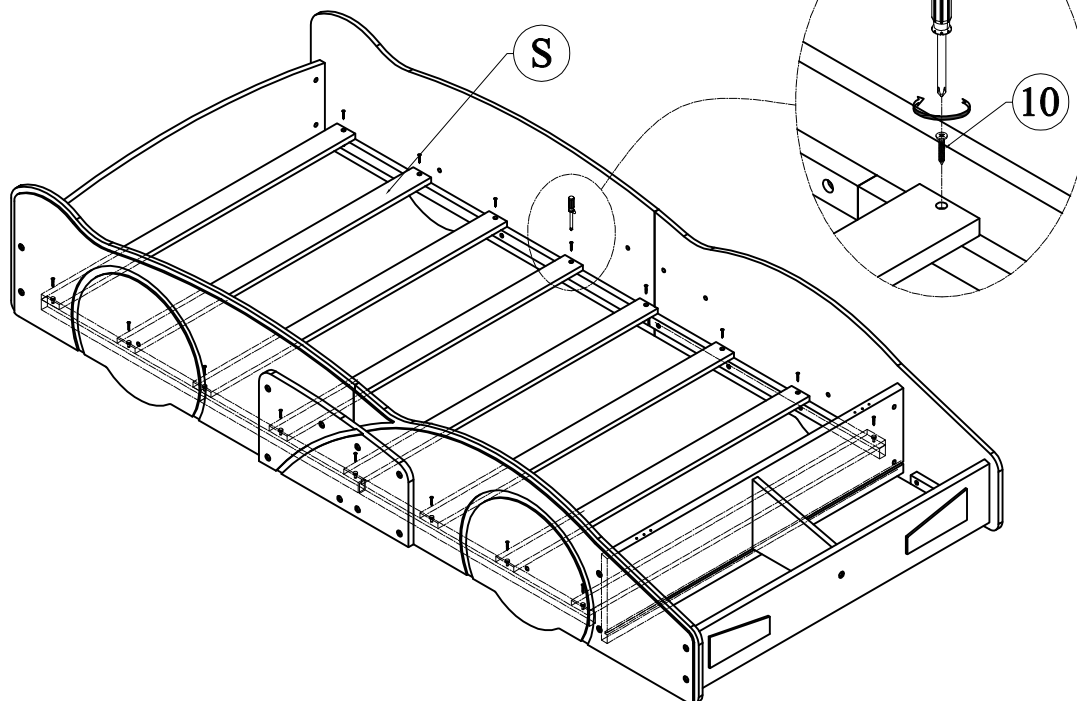

STEP 8

3




Hex - Head bolts
Ø1/4" * 15 - 4pcs

5




Canopy head through
Ø1/4" - 4pcs

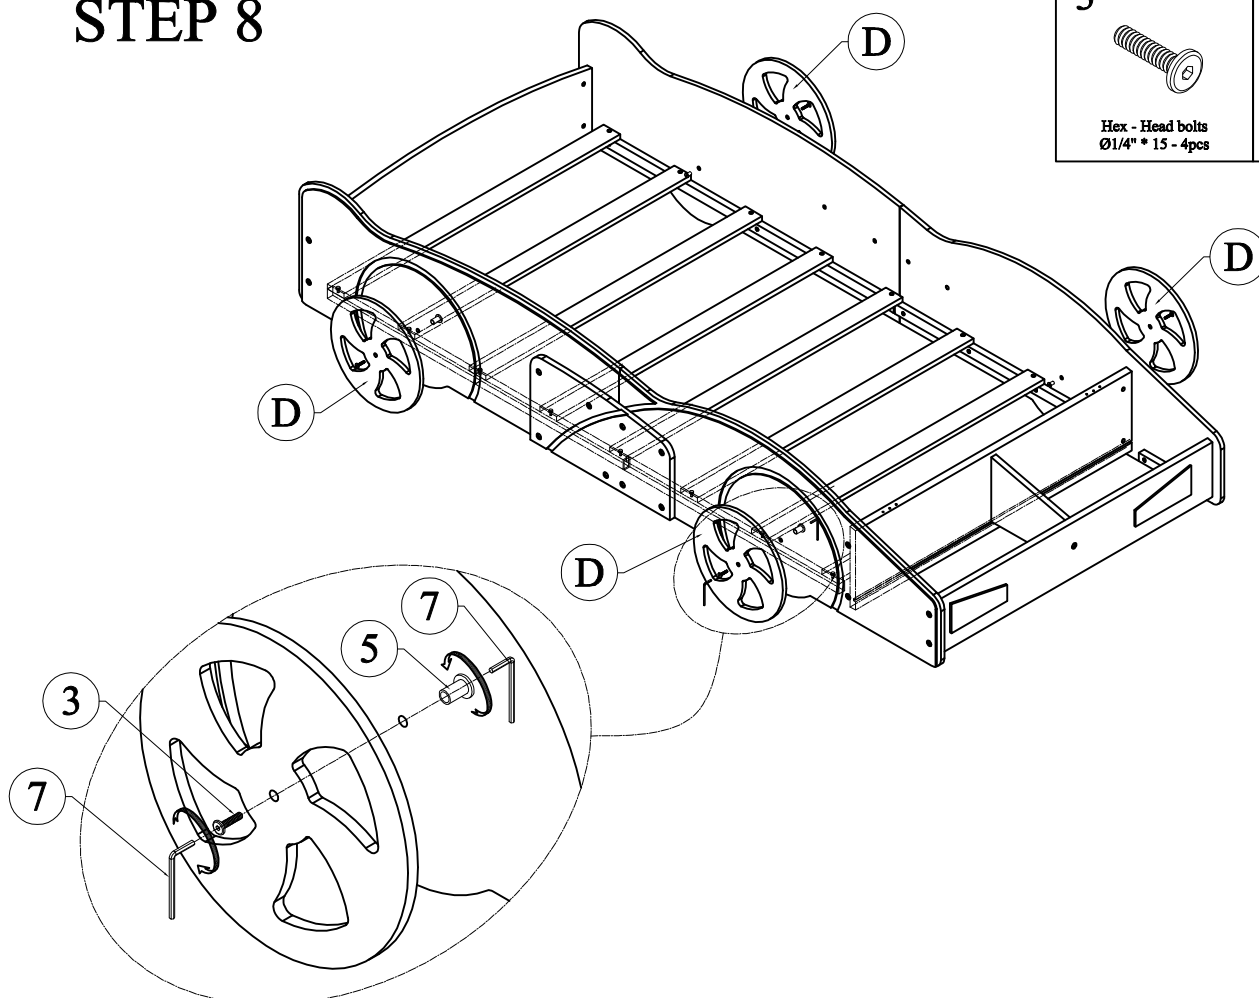

STEP 9

8




Hinge - 2pcs

12



Wood screws
M3.5 * 15 - 6pcs

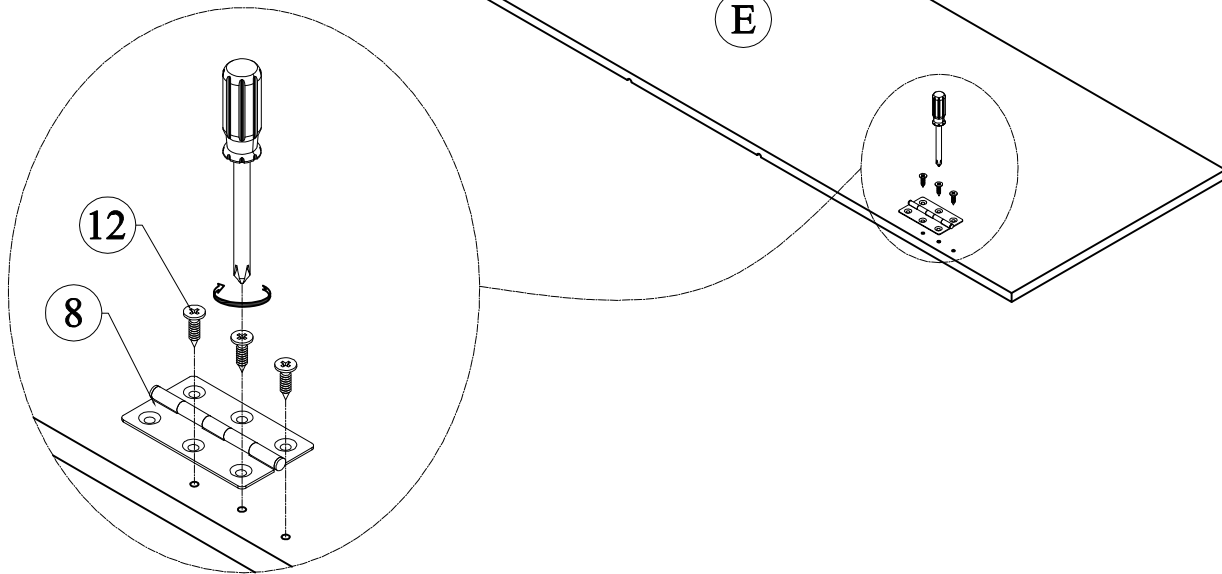


STEP 10

12




Wood screws
M3.5 * 15 - 6pcs

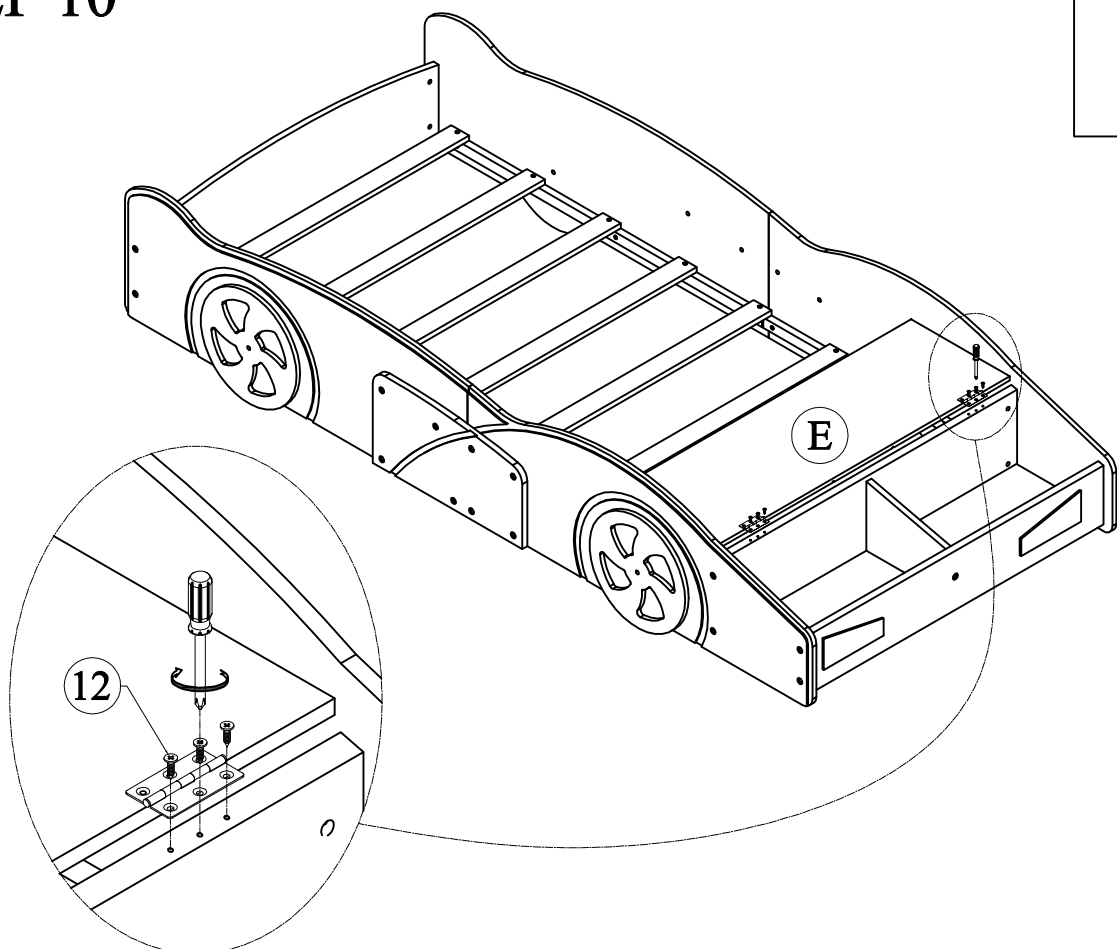

STEP 11

9




Folded patt - 1pcs

11



Round wood crews
M3.5 * 15 - 2pcs

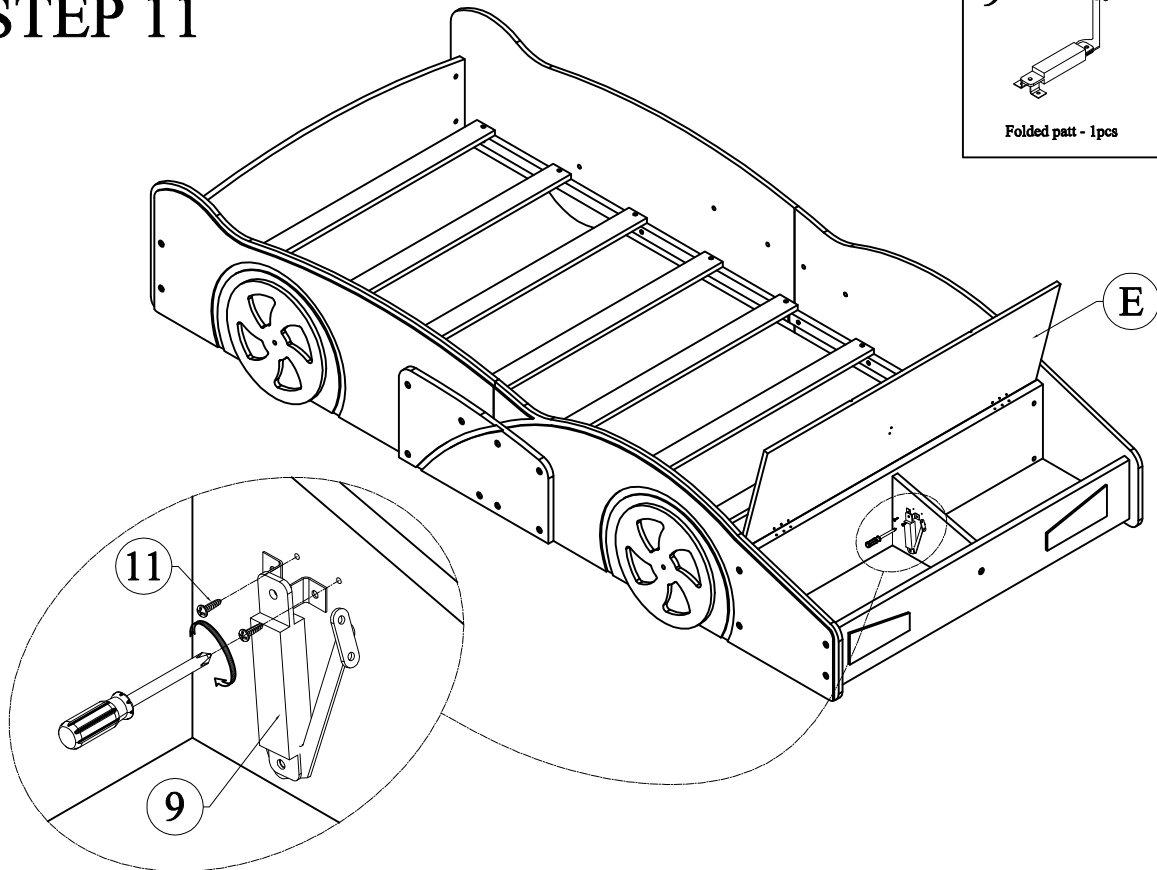


STEP 12


11



Round wood crews
M3.5 * 15 - 2pcs

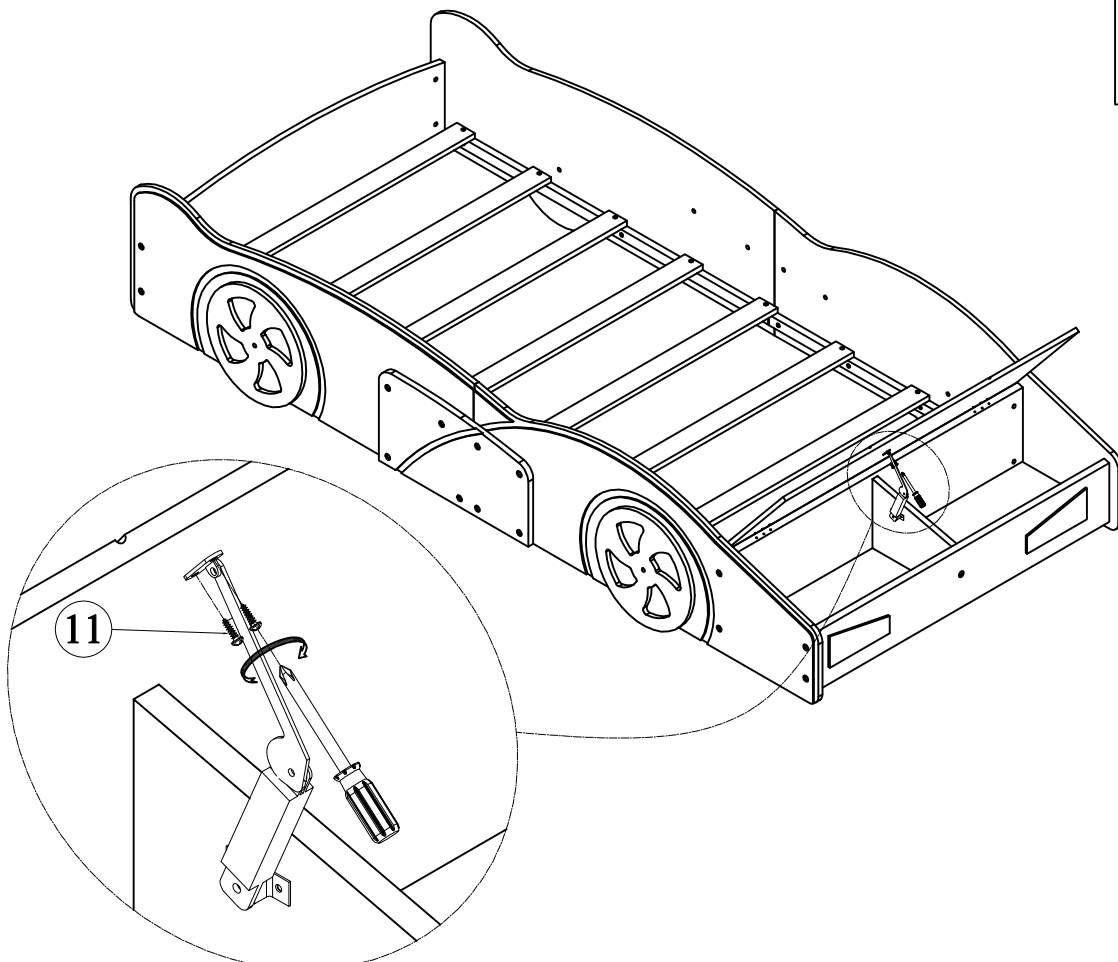

STEP 13

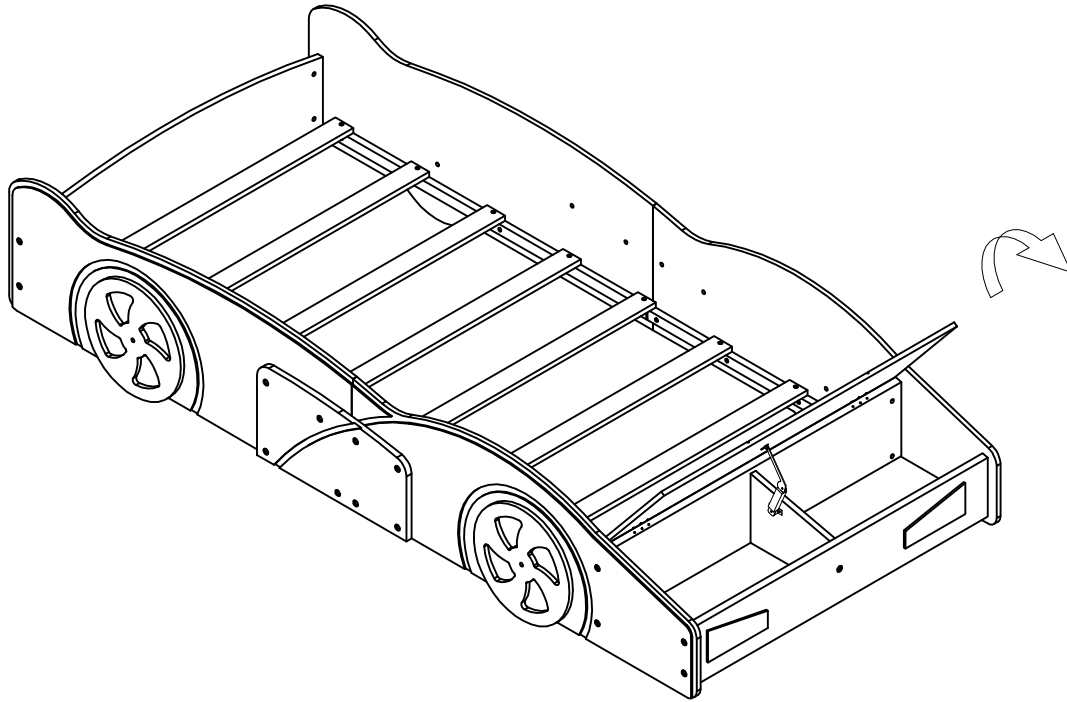

COMPLETED

