

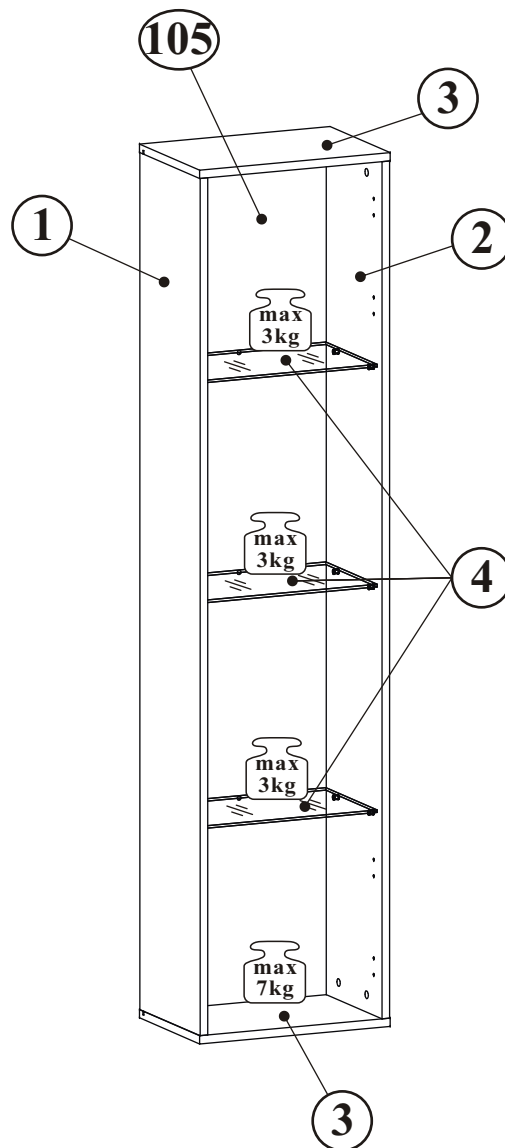
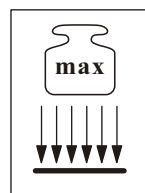
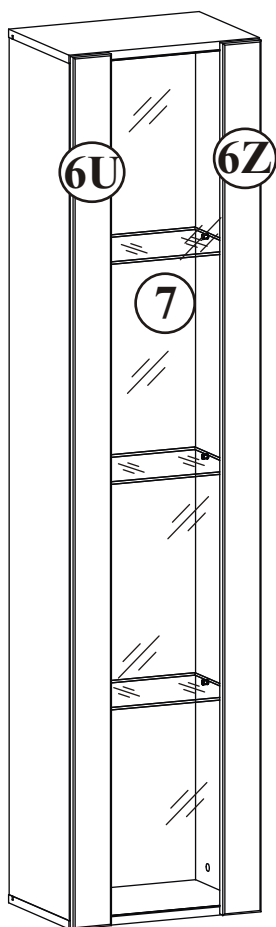
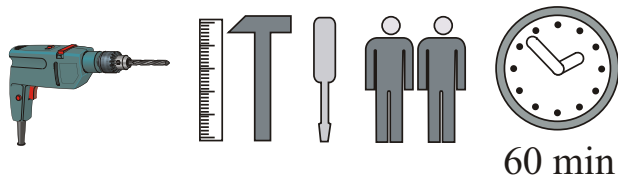






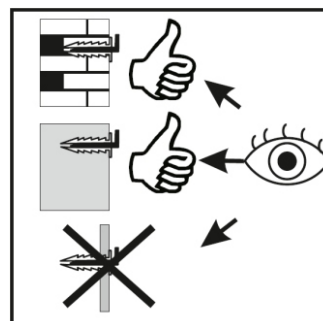
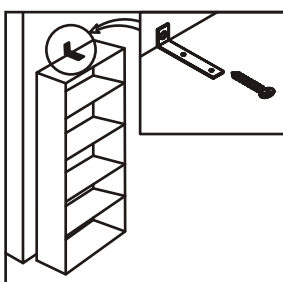
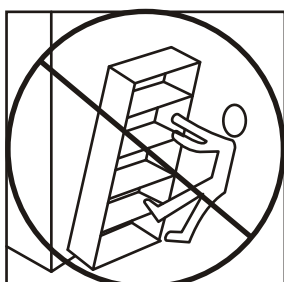
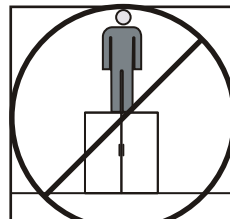
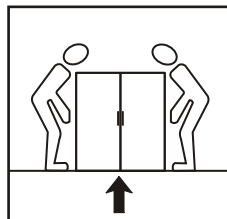
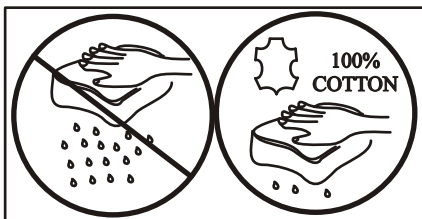
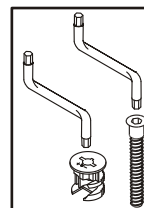
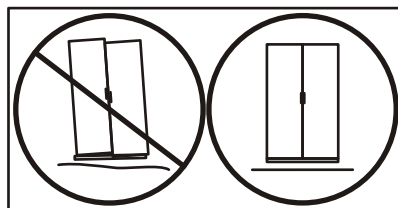
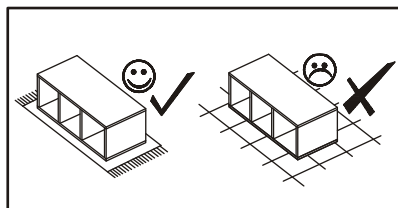
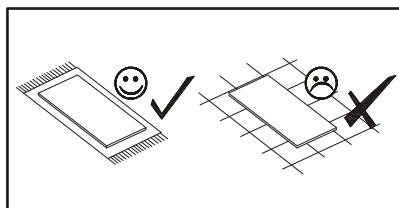
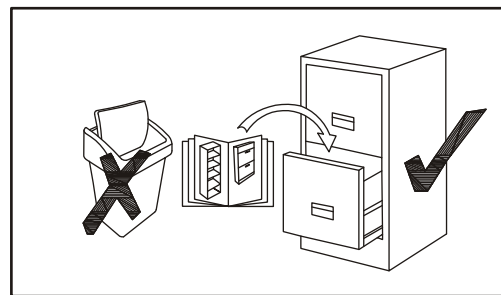
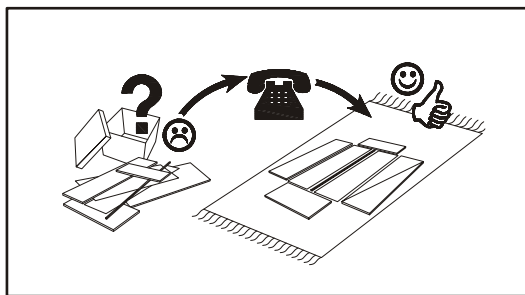
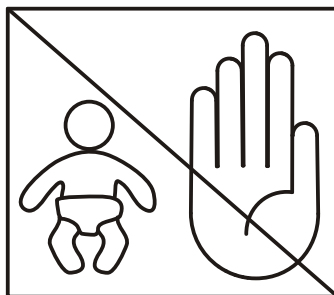




NO	Dim.		Col.-No	Qty
1	1668	274	1	1
2	1668	274	1	1
3	400	274	1	2
4	364	234	1	3
105	1680	378	1	1
6Z	80	1696	1	1
6U	80	1696	1	1
7	1664	283	1	1





A1 x8  ø8x36	B4 x8 	B5 x8  ø15x12	G5 x8 	ZR1 x2 	D6 x4  USØ3,5x30
E2 x4  H=0	E1 x4  Ø26 H=0	D10 x10  USØ3,5x13	AM x1 	G20 x12 	Z2 x8  Ø5
P2 x12 	UP13 x12  UPØ3x16	S1 x12 	KR2 x2 	G2 x1 	




A1		B5		G20	
x8	ø8x36	x8	ø15x12	x12	

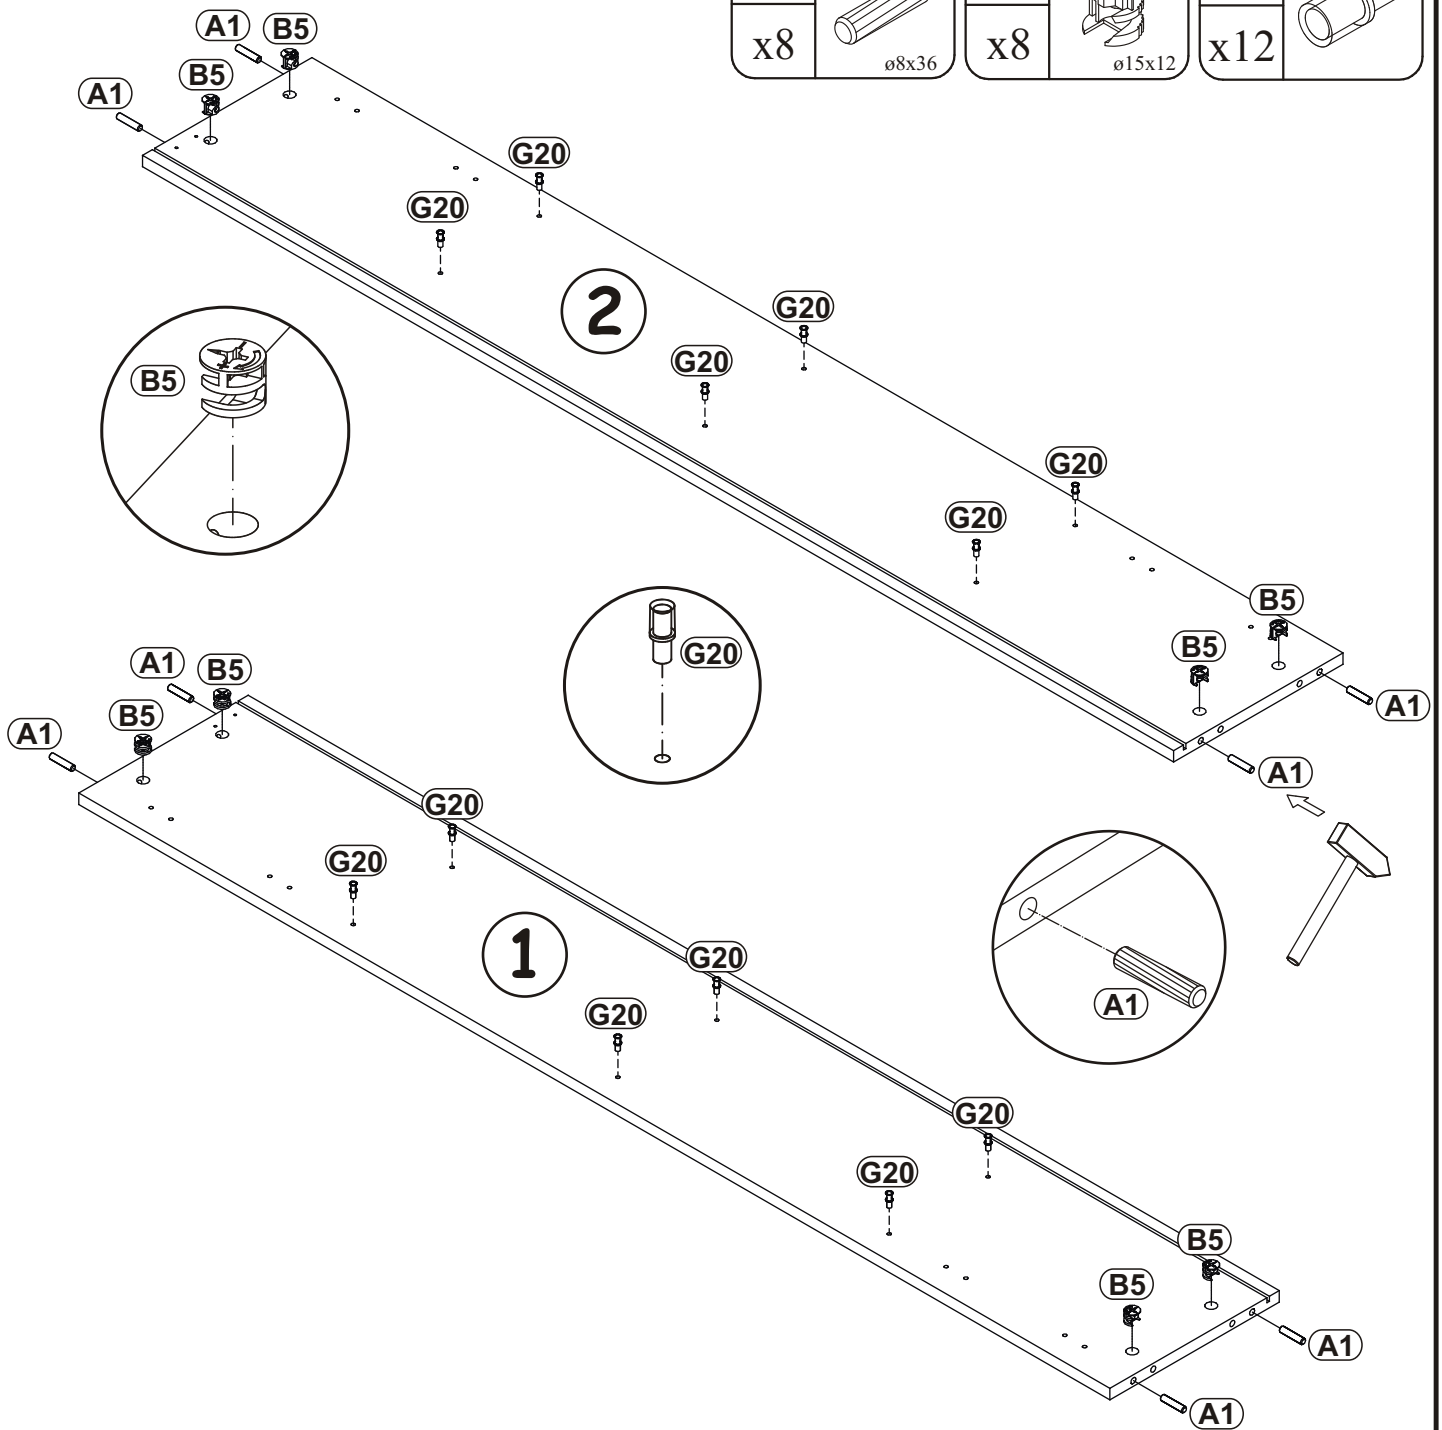






2

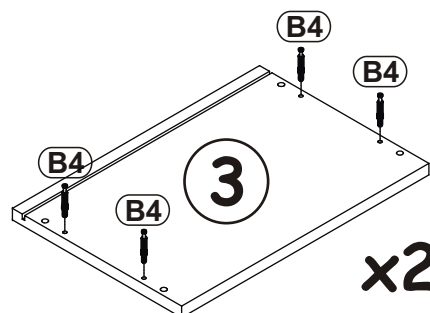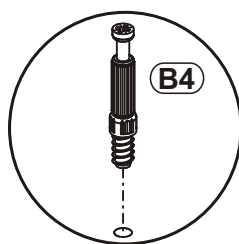


B4	
x8	

3

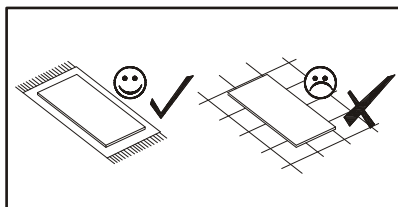


E1	Ø26	D10	
x4	 H=0	x8	 USØ3,5x13
P2		UP13	 UPØ3x16
x12		x12	

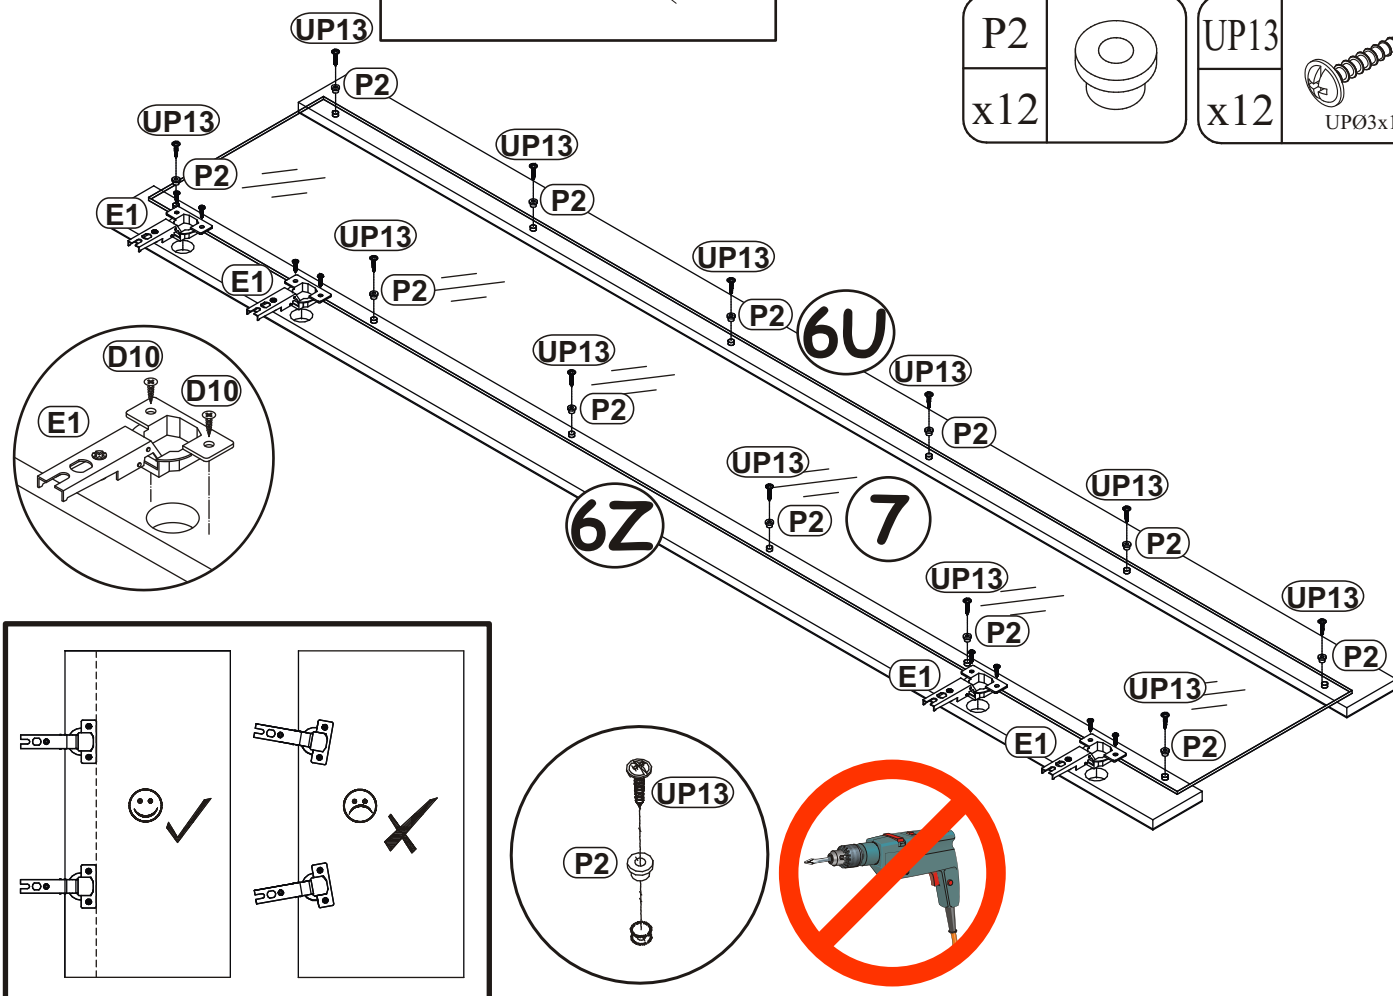

4


G5	
x4	

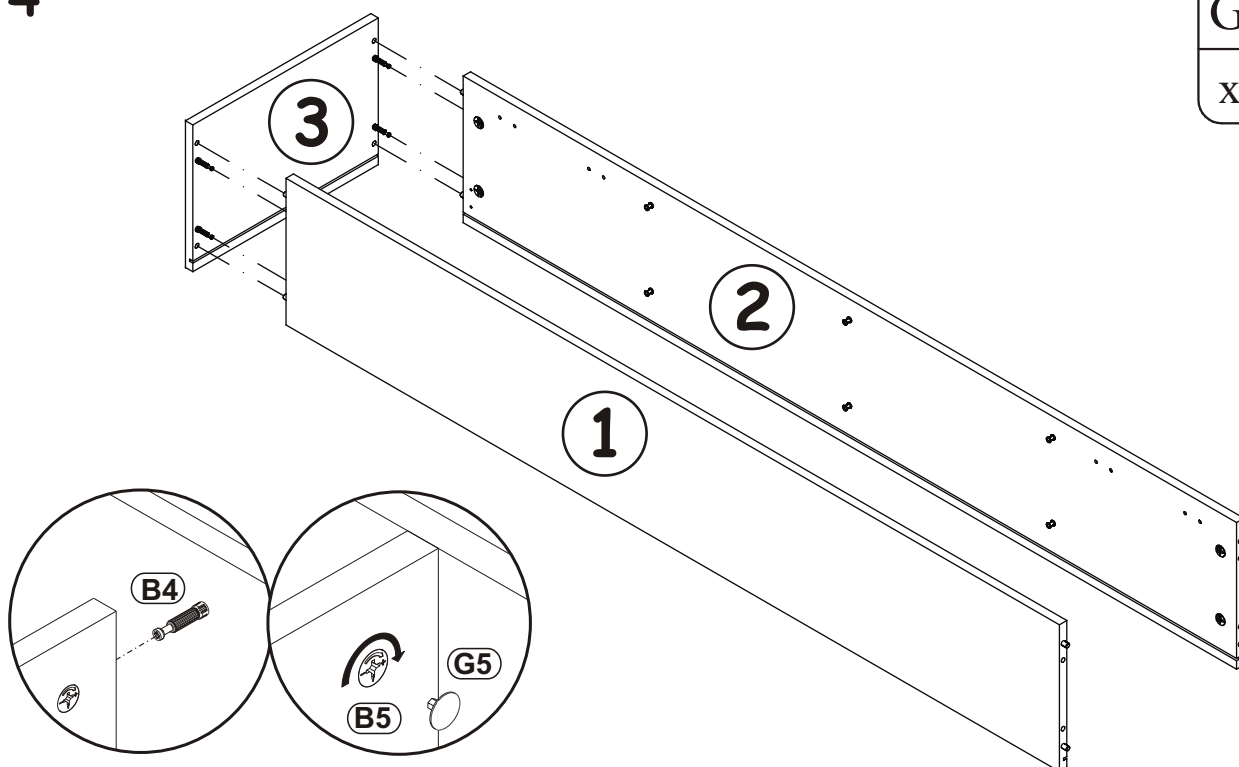

5

G5

x4


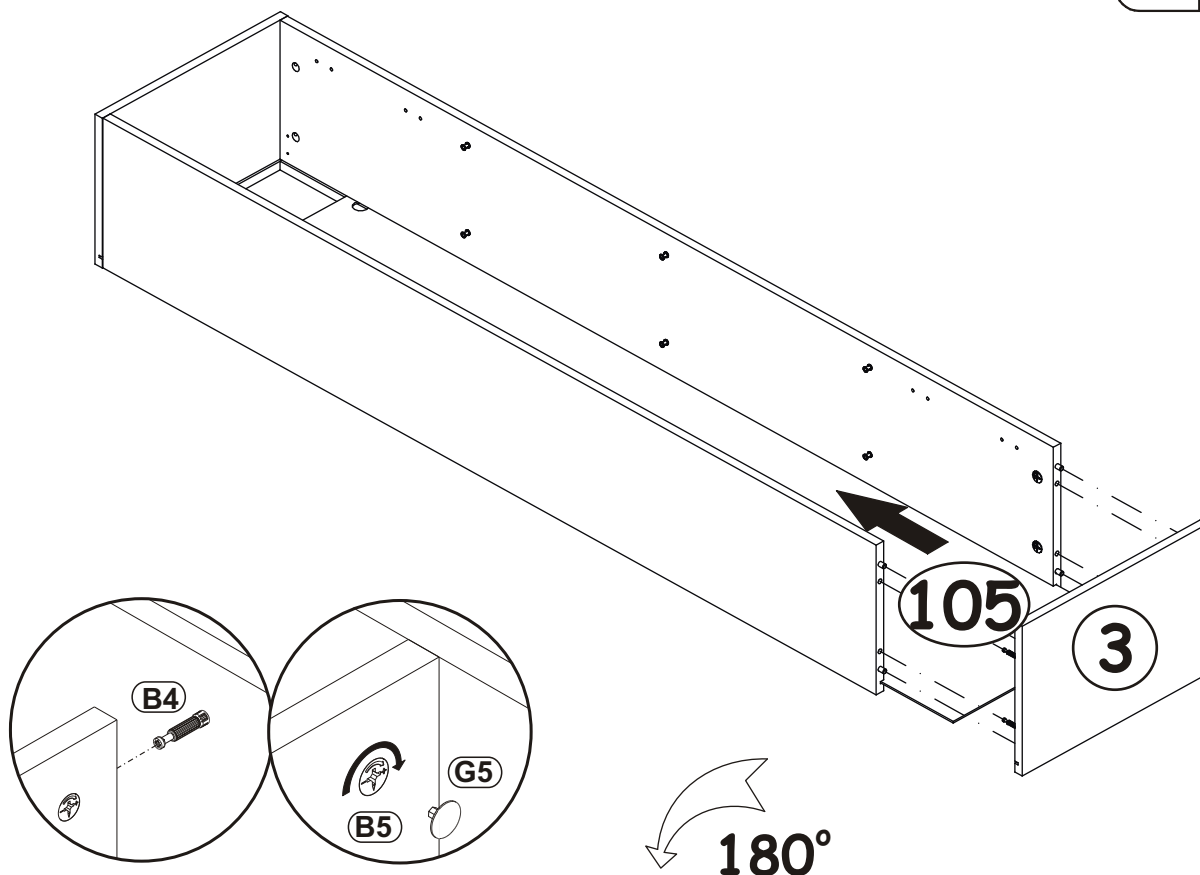


6








S1












x12

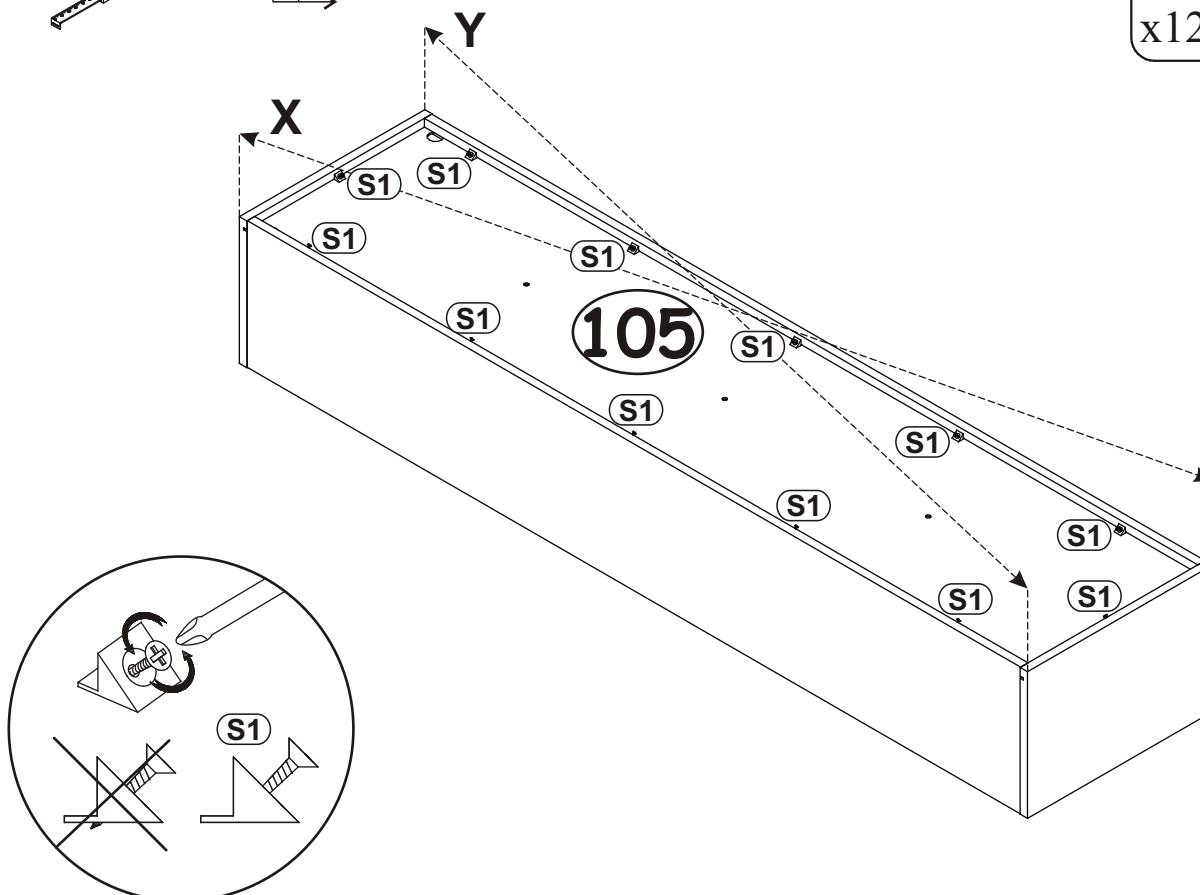


7

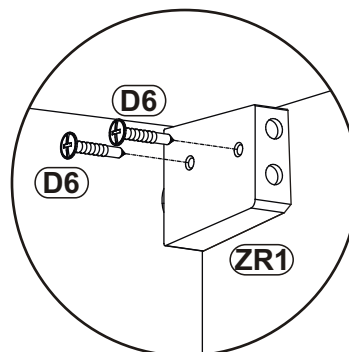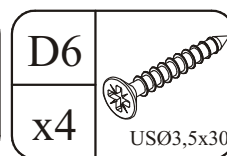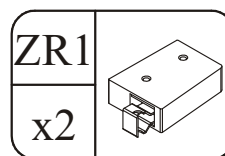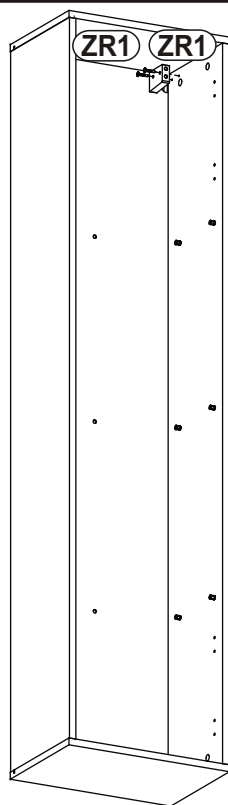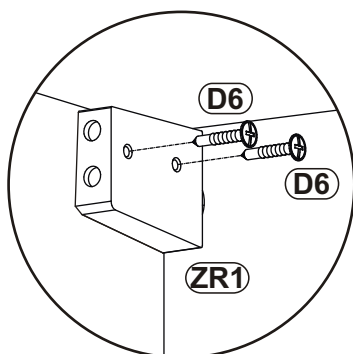


8

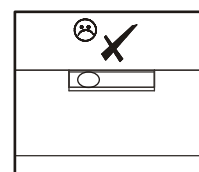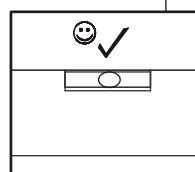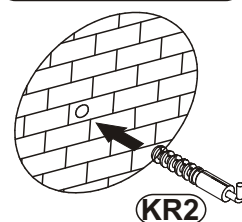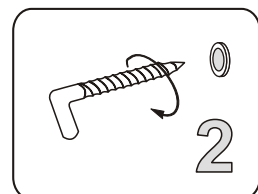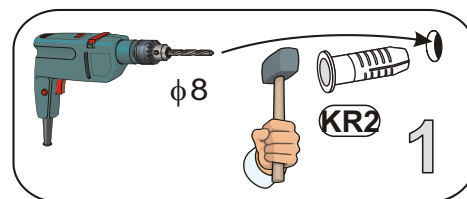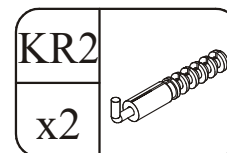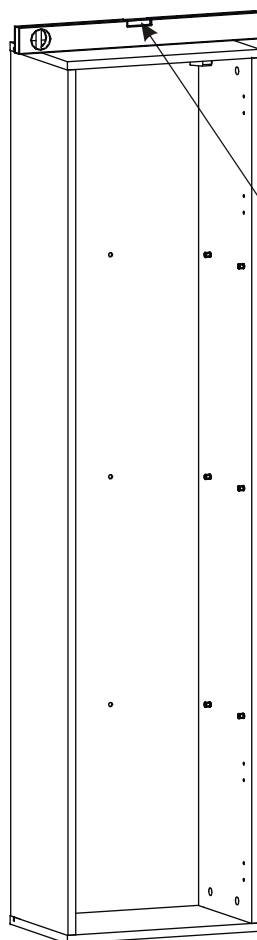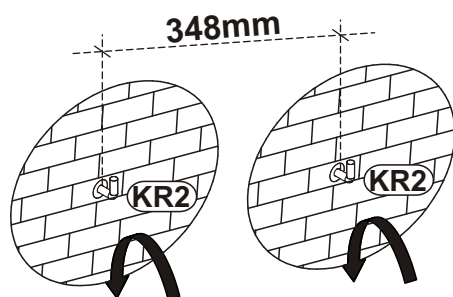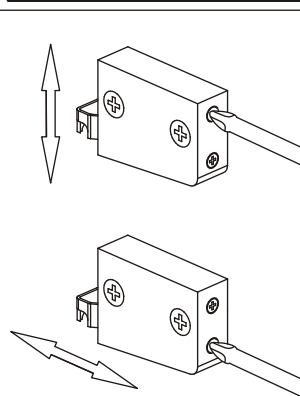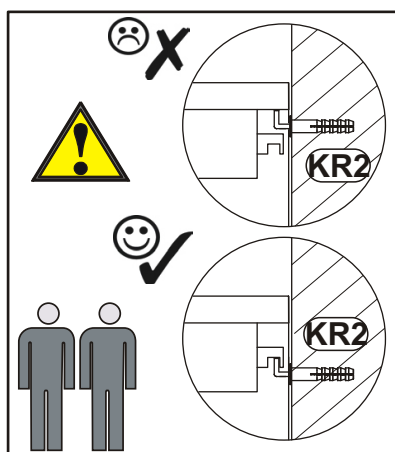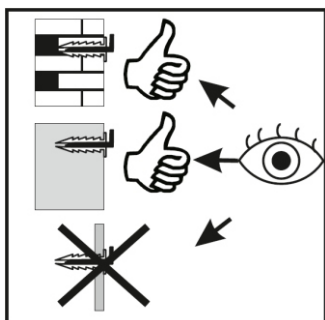




9-10

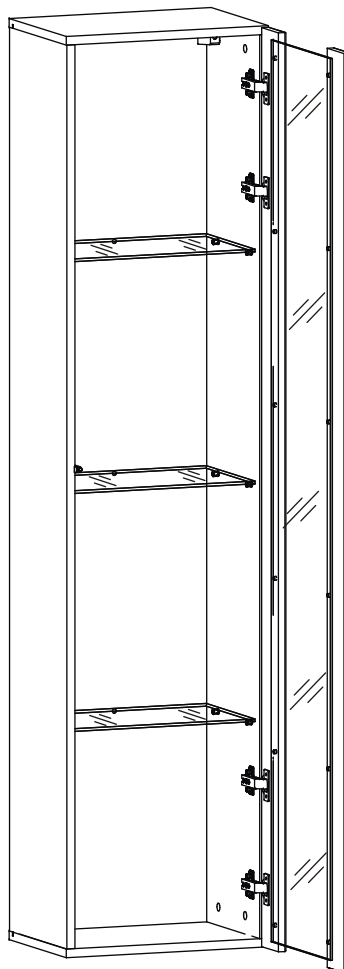



11-12

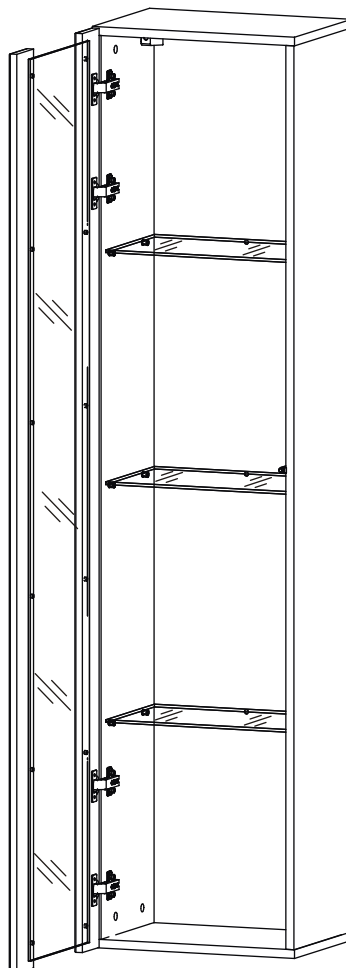





9

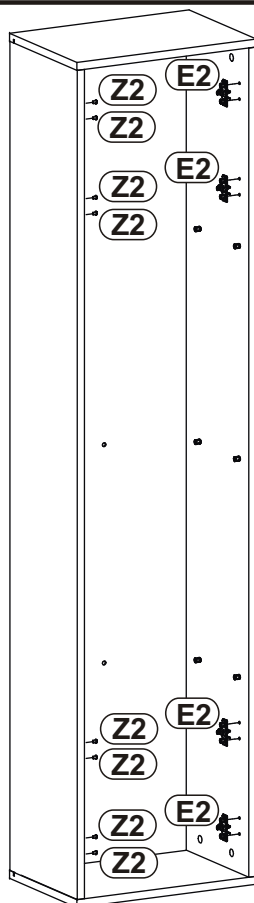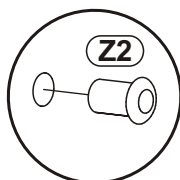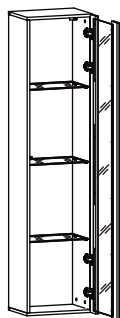



E2		Z2	
x4	H=0	x8	Ø5

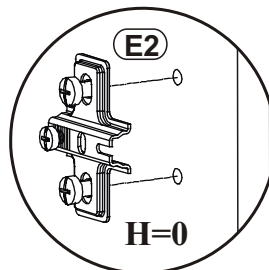





10

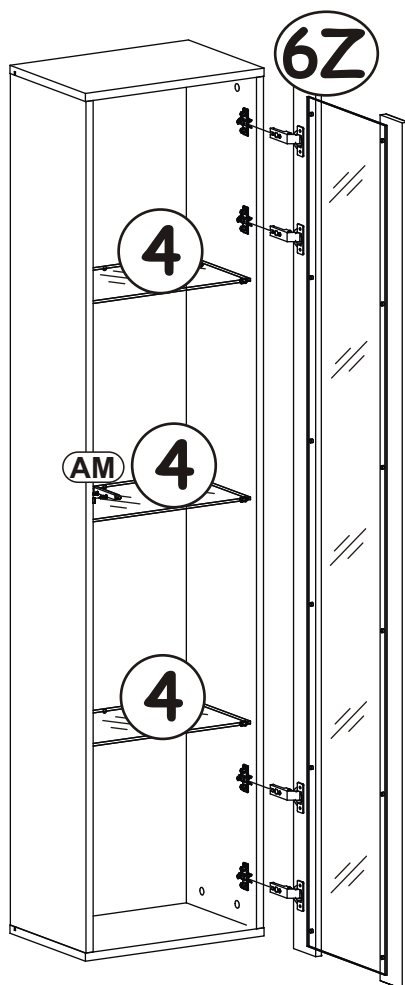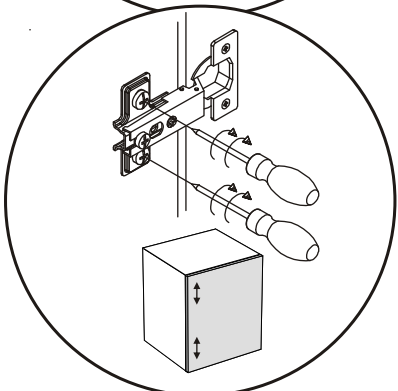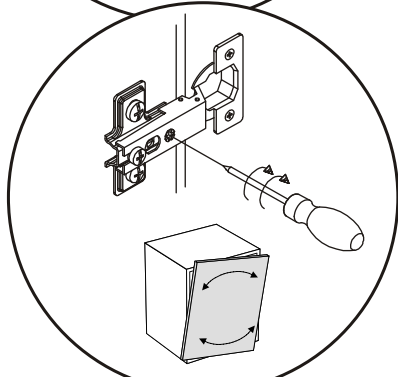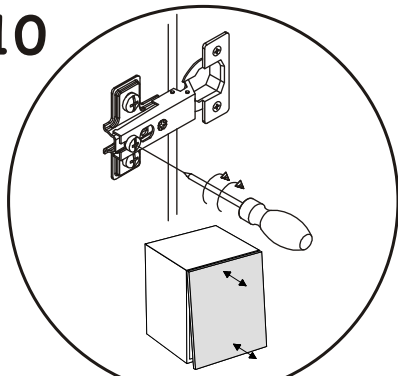

AM		D10	
x1		x2	USØ3,5x13

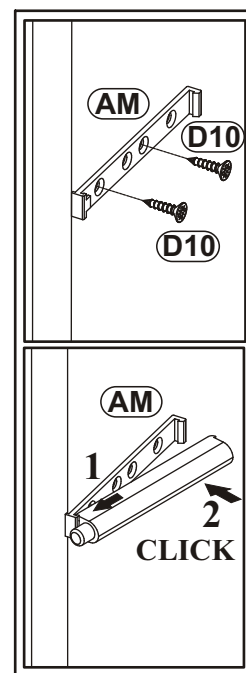

A technical line drawing of a tall, narrow cabinet. The cabinet door is open to the left, revealing three internal shelves. The door is hinged on the left edge with three visible hinges. The interior of the cabinet has a smooth finish, and the shelves are supported by brackets. The drawing is a simple black-and-white line art style.

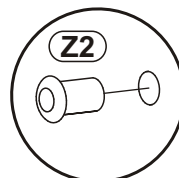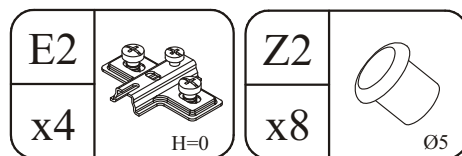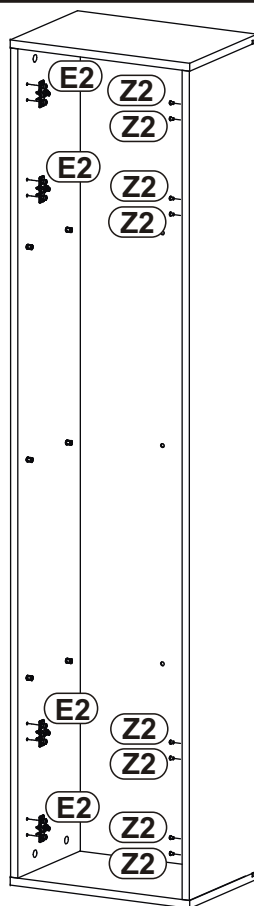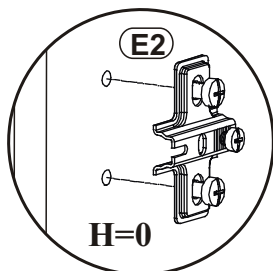

2



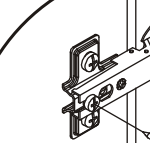


Diagram 2 illustrates the final step of mounting the door handle. A screwdriver is shown tightening a screw into the handle assembly, which is being mounted onto a door. The door handle is shown in two positions: open and closed.

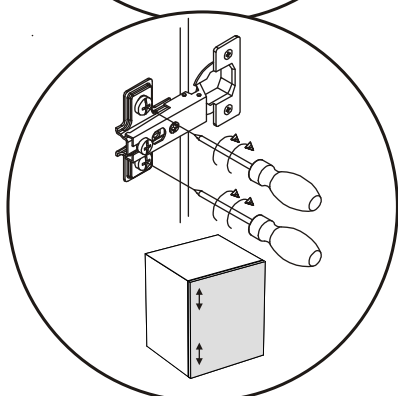

6Z

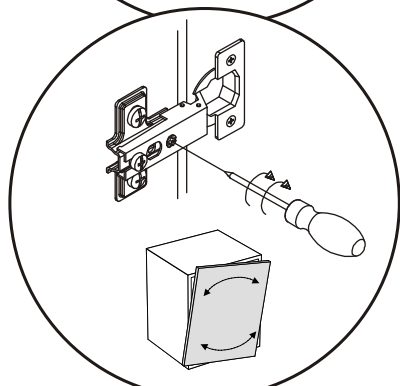