ASSEMBLY INSTRUCTIONS

EEI-6639

V2.01.21.25



Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

Let's get started!

Read through all of the instructions before starting

Approx. 90 minutes assembly time

2 people recommended for assembly

Care instructions are listed in the last step of this manual

Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Adjustable Shelf	x2
6	Fixed Shelf	x1
7	Bottom Skirt	x1
8	Door Left	x1
9	Door Right	x1

10	Support Board 1 Hutch	x2
11	Support Board 2 Hutch	x3
12	Front Board Hutch	x1
13	Back Board Hutch	x1
14	PVC Board	x1
15	Support Board 1	x2
16	Support Board 2	x2
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1

19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1
21	Front Drawer	x2
22	Side Drawer Left	x2
23	Side Drawer Right	x2
24	Back Drawer	x2
25	Bottom Drawer	x2
26	Back Board 1	x2
27	Back Board 2	x1

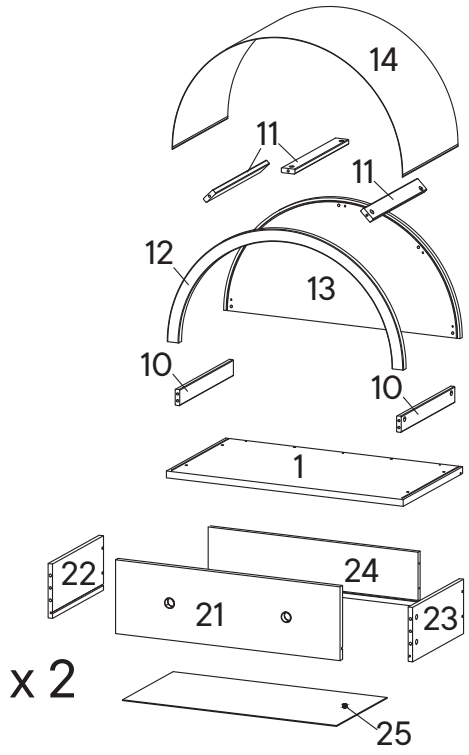


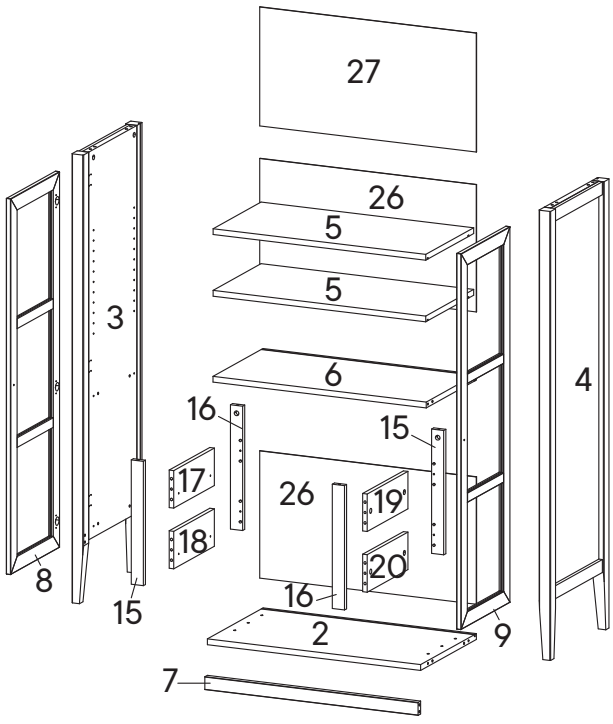


Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x45	L		Screw M 4.5 x 12.5 mm	x37	W		Plate	x1
B		Cam Lock Ø15 mm	x37	M		Wedge	x24	X		List	x2
C		Wood Dowel Ø8 x 30 mm	x45	N		Screw M 3.5 x 15.5 mm	x24	RM30A		Drawer Runner	x2
D		Screw M 6.4 x 14 mm	x1	O		Handle	x4	HS26C		Hinge	x6
E		Screw M 8 x 39 mm	x8	P		Allen Key	x2				
F		Shelf Pin	x8	Q		Joining Strip	x1				
G		Screw Cap Ø15 mm	x4	R		Cam Lock Ø12 mm	x8				
H		Stopper	x2	S		Wood Dowel Ø6 x 30 mm	x4				
I		Handle	x2	T		Screw M 7 x 50 mm	x6				
J		Screw M 4 x 20 mm	x2	U		Screw M 6 x 10.5 mm	x8				
K		Floor Protector	x4	V		Screw M 3.5 x 13 mm	x12				

What you need:

 Phillips		Phillips Head Screwdriver

Components Carton Placement

Carton 1 of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
8	Door Left	x1
9	Door Right	x1
14	PVC Board	x1
26	Back Board 1	x2
27	Back Board 2	x1
	Hardware Pack	x1

Carton 2 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Adjustable Shelf	x2
6	Fixed Shelf	x1
7	Bottom Skirt	x1
10	Support Board 1 Hutch	x2
11	Support Board 2 Hutch	x3
12	Front Board Hutch	x1
13	Back Board Hutch	x1
15	Support Board 1	x2
16	Support Board 2	x2
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1
21	Front Drawer	x2
22	Side Drawer Left	x2
23	Side Drawer Right	x2
24	Back Drawer	x2
25	Bottom Drawer	x2

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x8
S	Wood Dowel Ø6 x 30 mm	x4

COMPONENTS

21	Front Drawer	x2
22	Side Drawer Left	x2
23	Side Drawer Right	x2

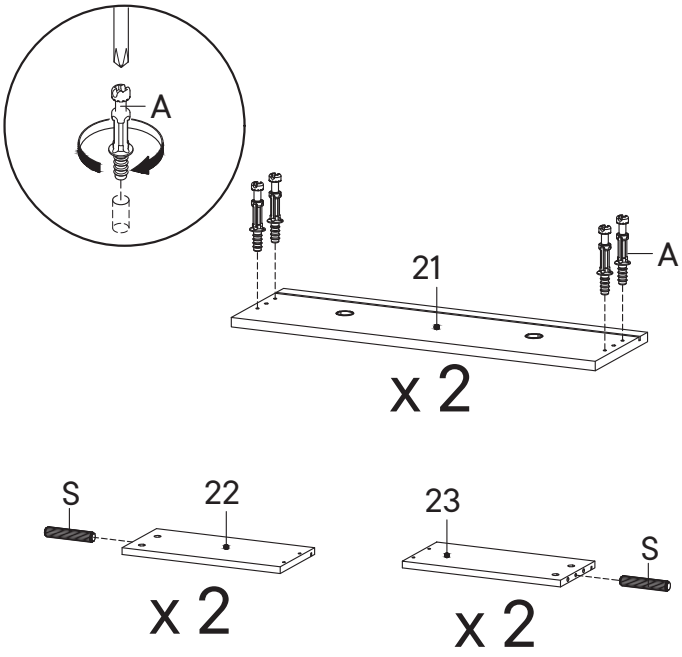


Step 2

HARDWARE

E	Screw M 8 x 39 mm	x8
R	Cam Lock Ø12 mm	x8

COMPONENTS


21	Front Drawer	x2
22	Side Drawer Left	x2
23	Side Drawer Right	x2
24	Back Drawer	x2
25	Bottom Drawer	x2

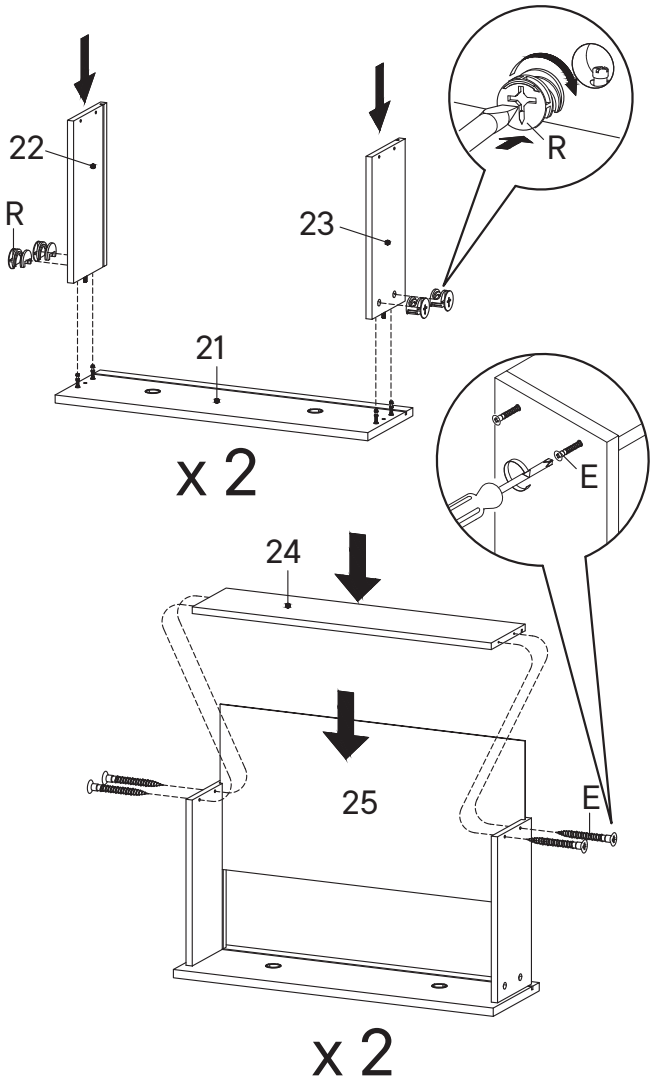


Step 3


HARDWARE

M	Wedge	x8
N	Screw M 3.5 x 15.5 mm	x8
V	Screw M 3.5 x 13 mm	x12
RM30A	Drawer Runner	x2

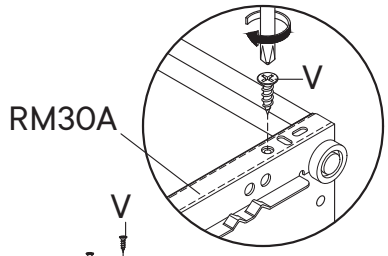


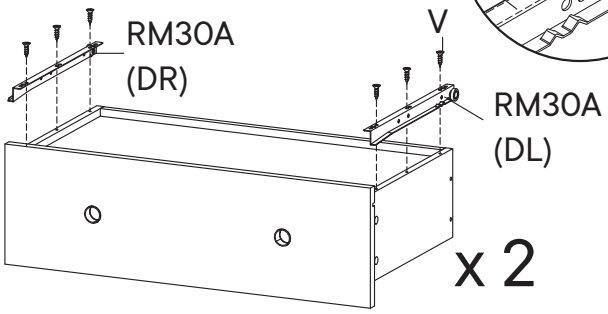

x 2

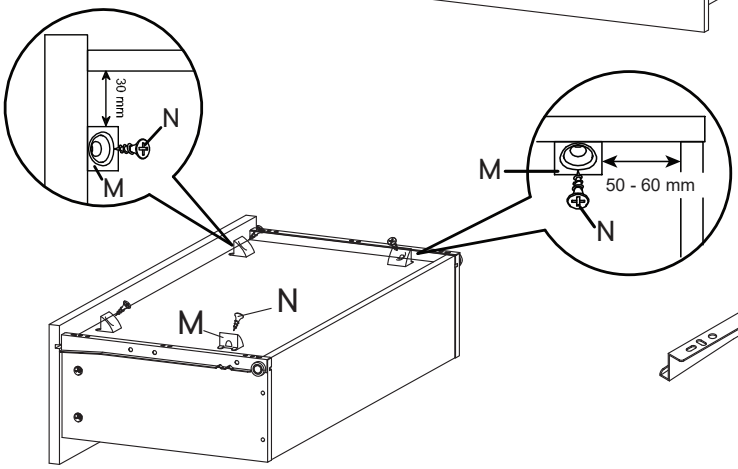


x 2

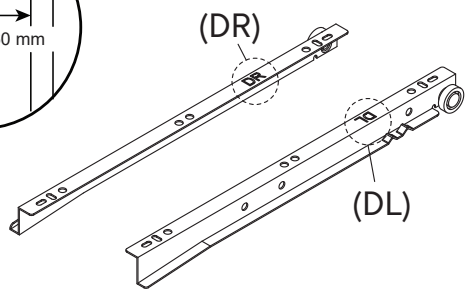



Step 4

HARDWARE

O	Handle	x4

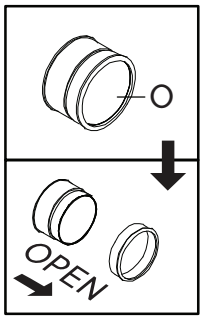

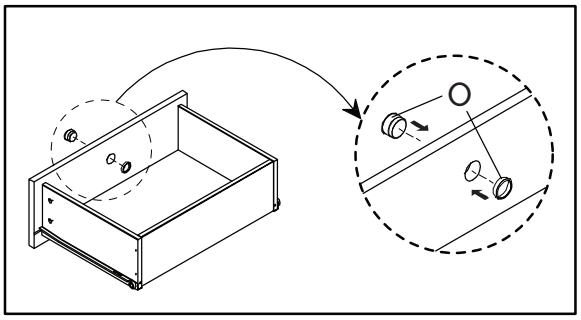

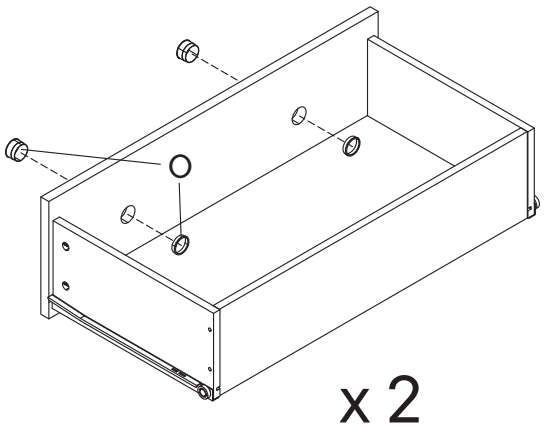

x 2


Step 5


HARDWARE


A	Cam Bolt Ø6 x 35 mm	x8
C	Wood Dowel Ø8 x 30 mm	x4
K	Floor Protector	x4


COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

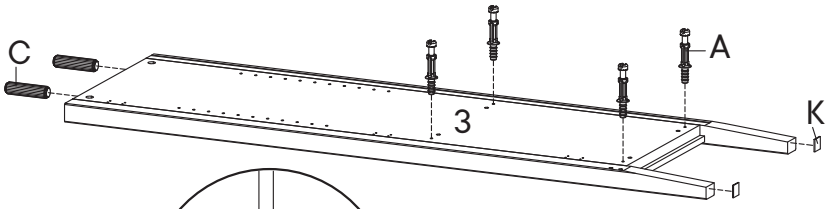

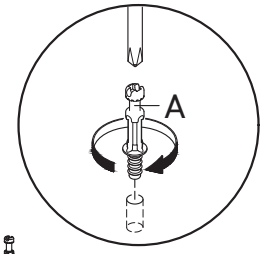

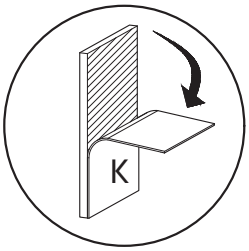

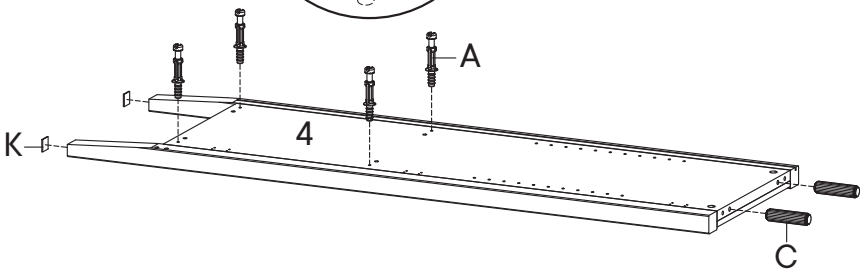


Step 6


HARDWARE


C	Wood Dowel Ø8 x 30 mm	x4
L	Screw M 4.5 x 12.5 mm	x1
W	Plate	x1


COMPONENTS

2	Bottom Board	x1

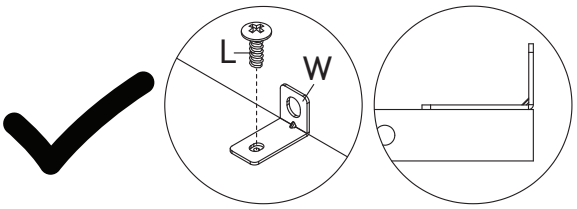

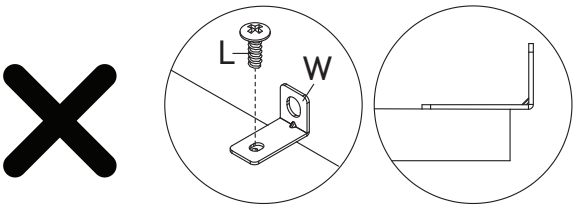

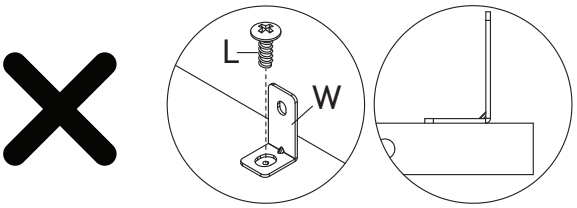

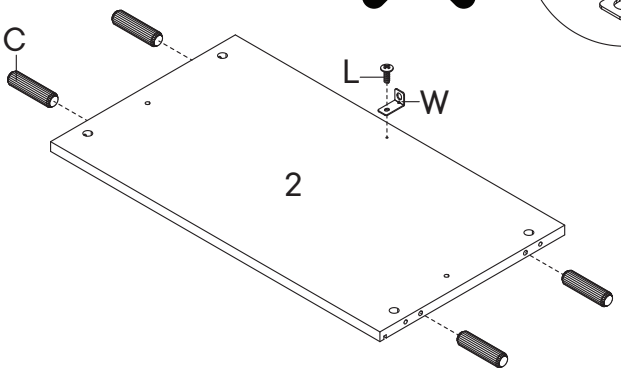


Step 7

HARDWARE

C	Wood Dowel Ø8 x 30 mm	x20

COMPONENTS

17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1

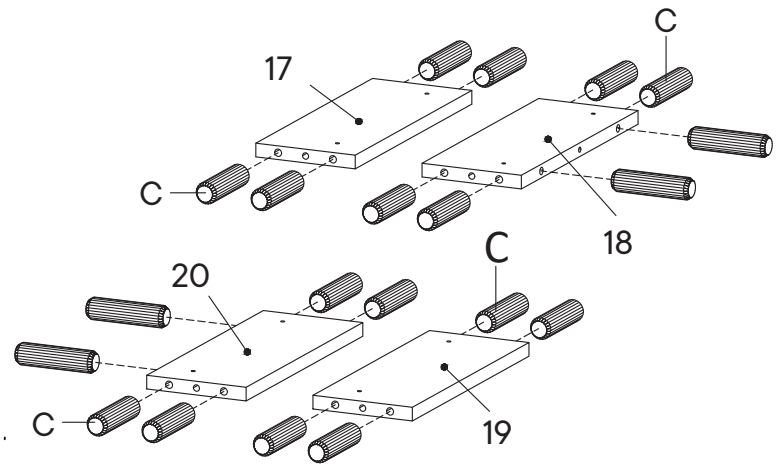


Step 8

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x15
C	Wood Dowel Ø8 x 30 mm	x8

COMPONENTS

1	Top Board	x1
6	Fixed Shelf	x1
7	Bottom Skirt	x1
15	Support Board 1	x2
16	Support Board 2	x2

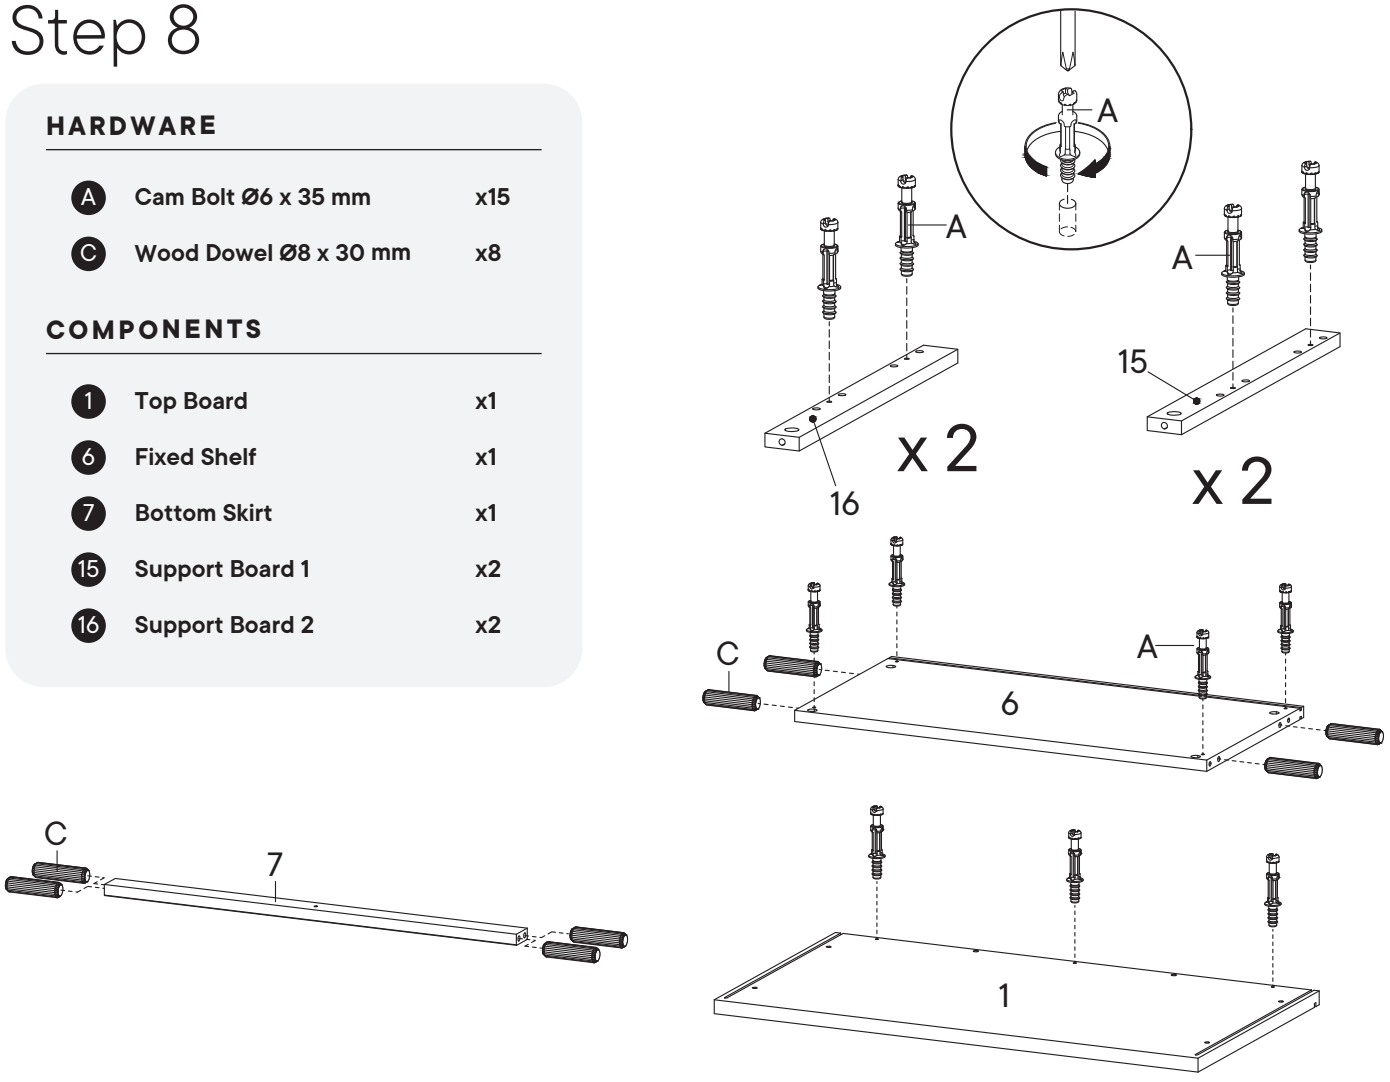


Step 9


HARDWARE


U	Screw M 6 x 10.5 mm	x4
RM30A	Drawer Runner	x2

COMPONENTS

15	Support Board 1	x1
16	Support Board 2	x1
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1

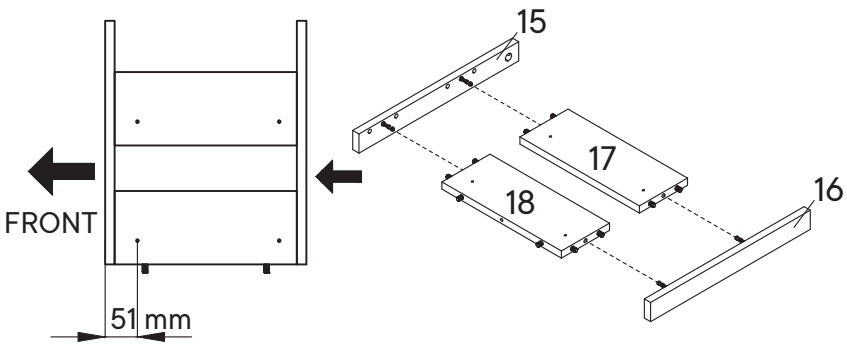

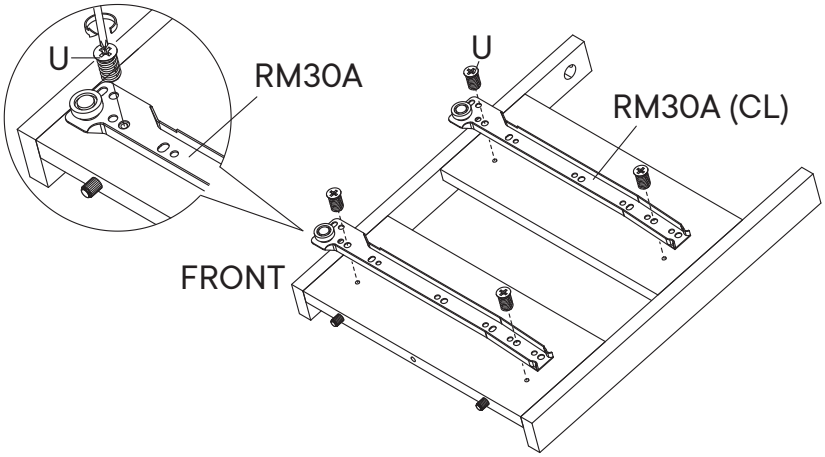

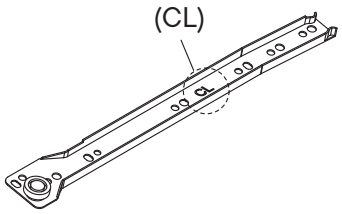


Step 10


HARDWARE


U	Screw M 6 x 10.5 mm	x4
RM30A	Drawer Runner	x2

COMPONENTS

15	Support Board 1	x1
16	Support Board 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1

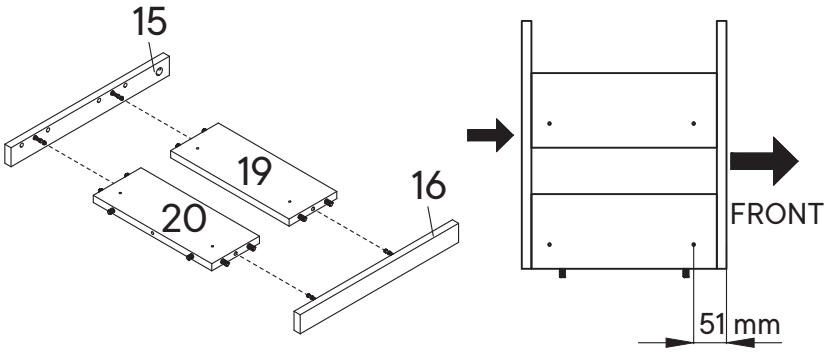

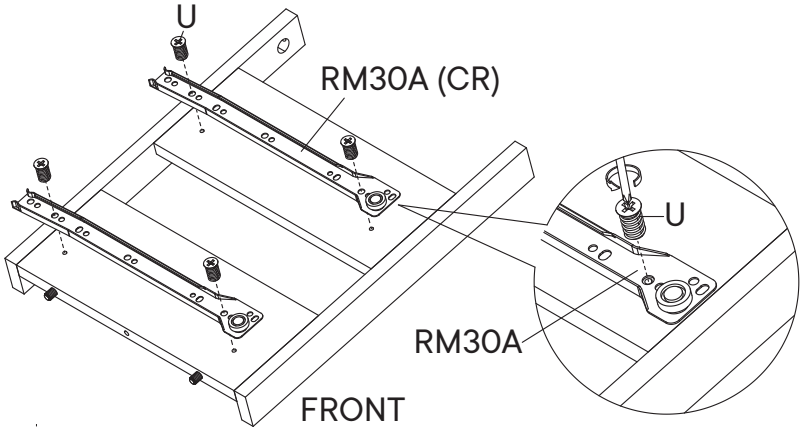


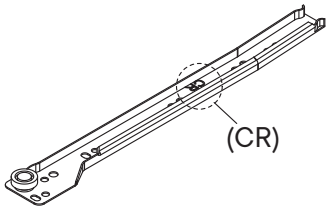

Step 11

HARDWARE

B	Cam Lock Ø15 mm	x8

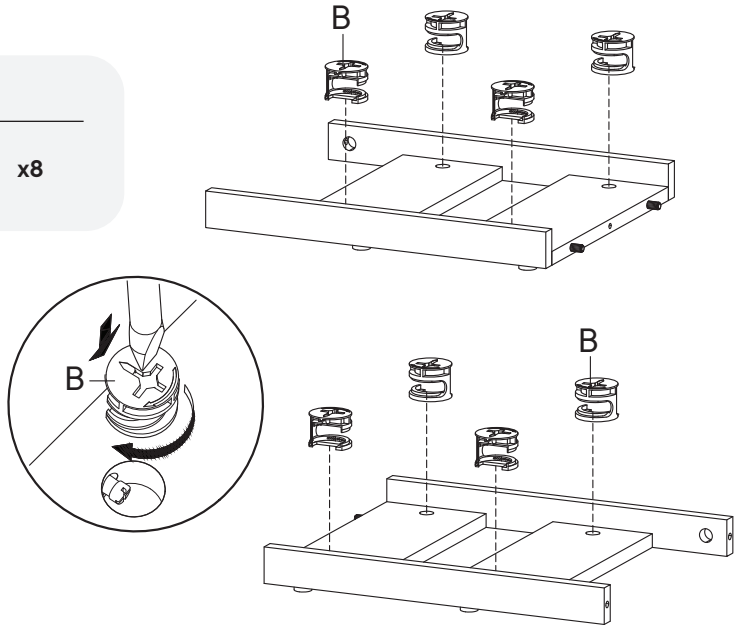


Step 12

HARDWARE

B	Cam Lock Ø15 mm	x4

COMPONENTS

6	Fixed Shelf	x1
15	Support Board 1	x2
16	Support Board 2	x2
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1
19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1

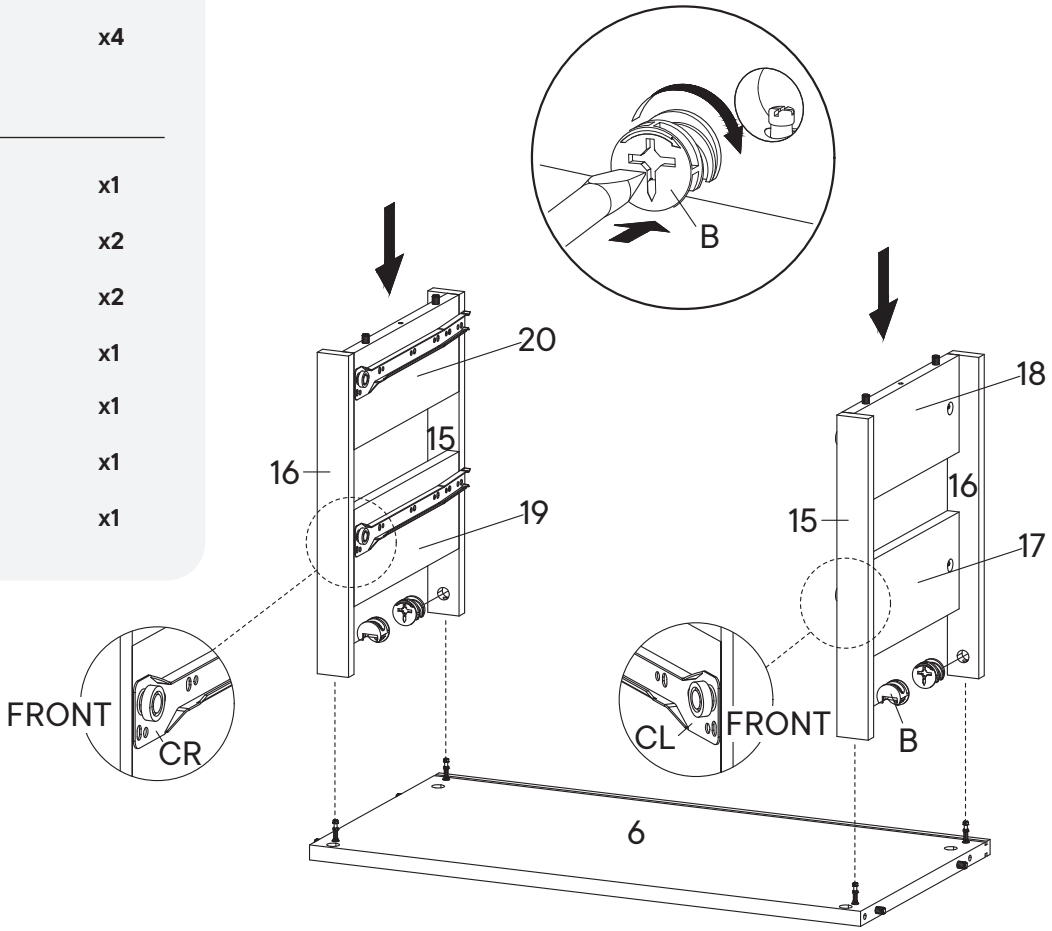


Step 13


HARDWARE

P	Allen Key	x1
T	Screw M 7 x 50 mm	x2

COMPONENTS

2	Bottom Board	x1

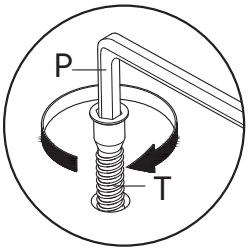

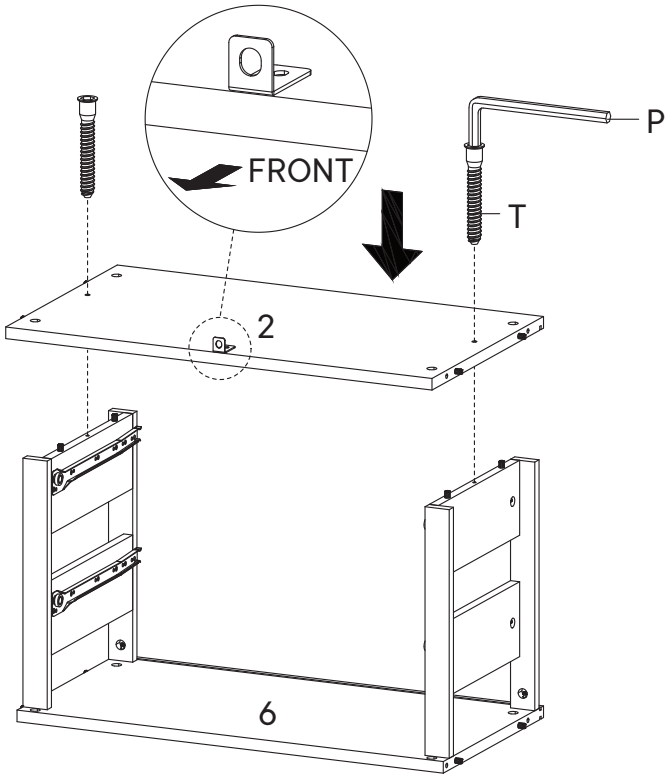


Step 14


HARDWARE

B	Cam Lock Ø15 mm	x4
P	Allen Key	x1

COMPONENTS

4	Side Board Right	x1

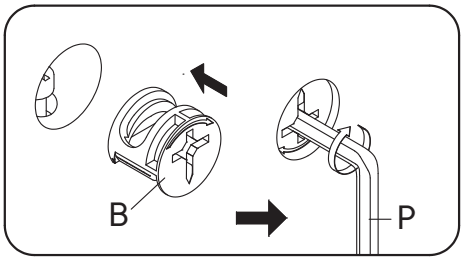


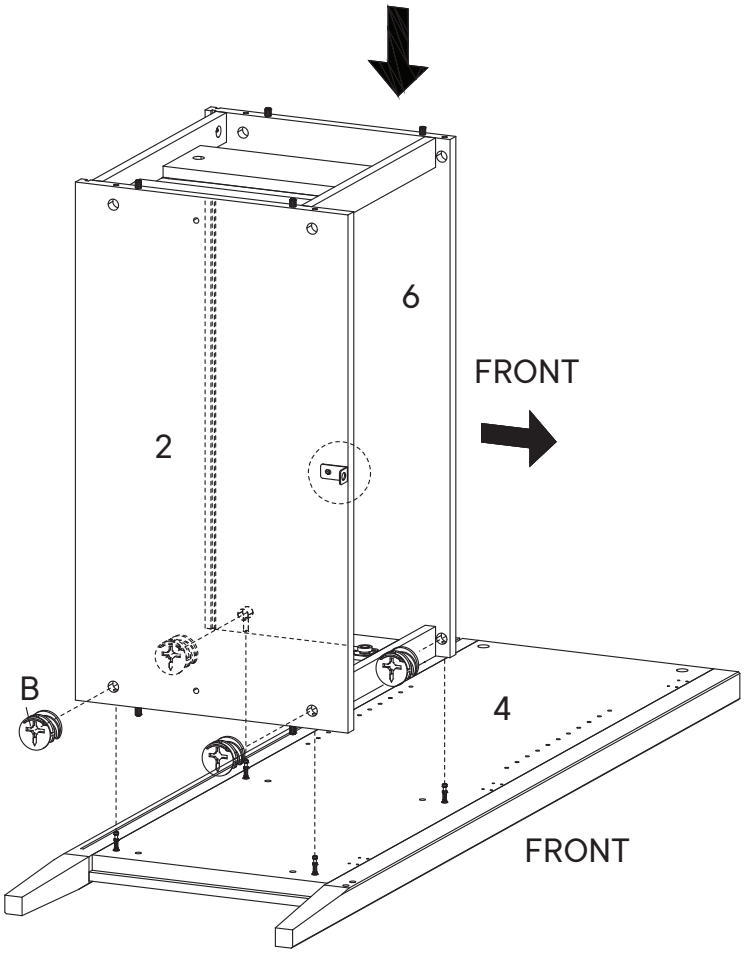

Step 15

COMPONENTS

7	Bottom Skirt	x1

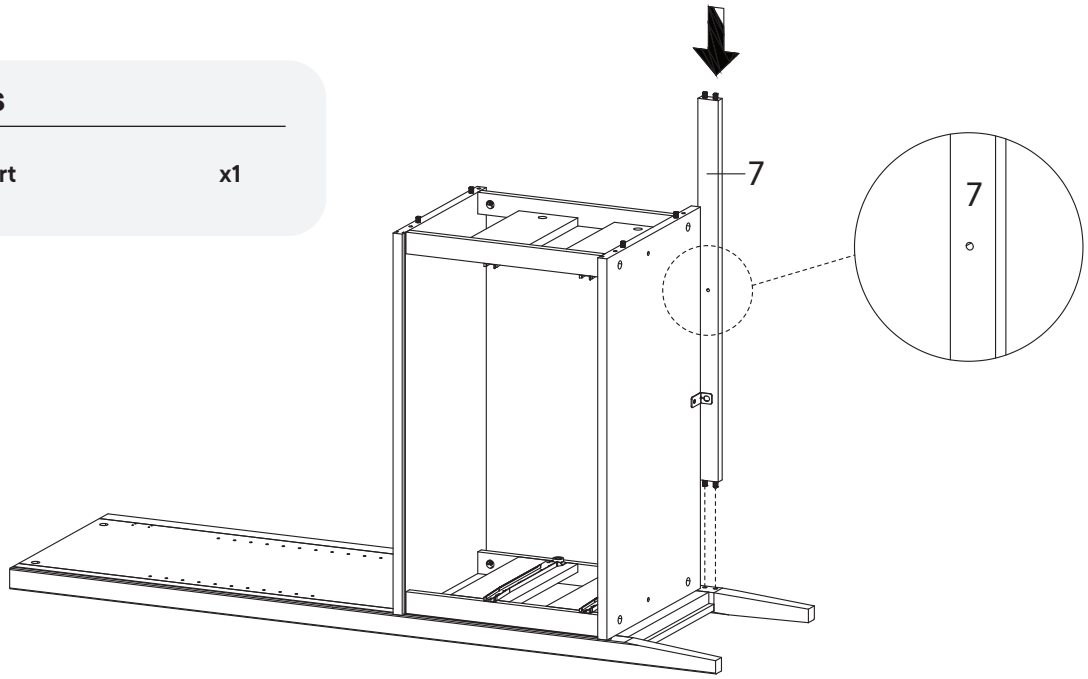


Step 16


HARDWARE

B	Cam Lock Ø15 mm	x4
P	Allen Key	x1

COMPONENTS

3	Side Board Left	x1
26	Back Board 1	x1

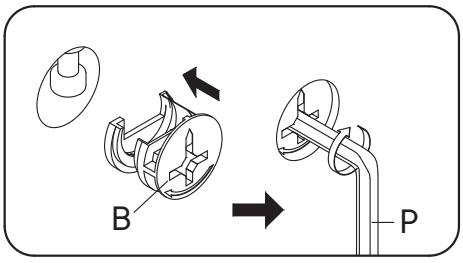


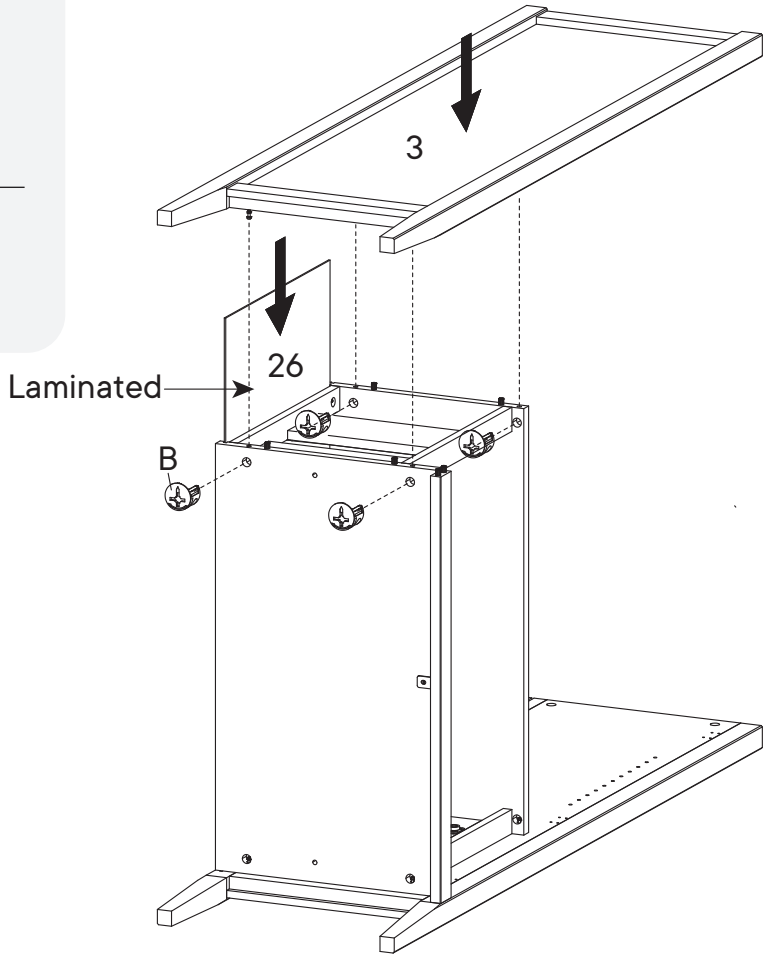

Step 17

HARDWARE

D	Screw M 6.4 x 14 mm	x1
P	Allen Key	x1

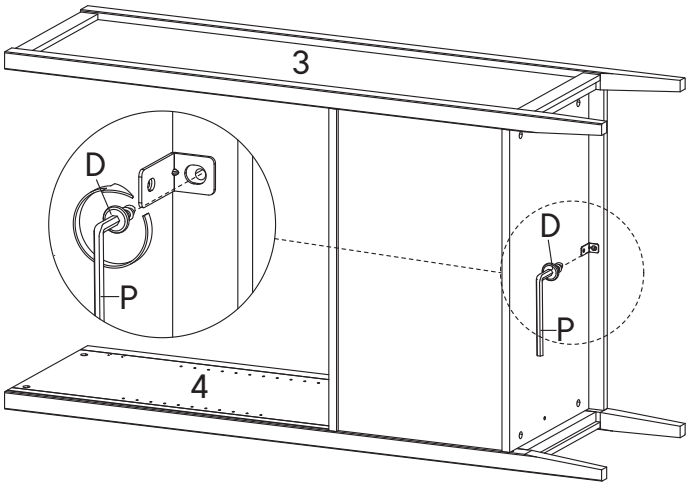


Step 18

HARDWARE

Q	Joining Strip	x1

COMPONENTS

26	Back Board 1	x1
27	Back Board 2	x1

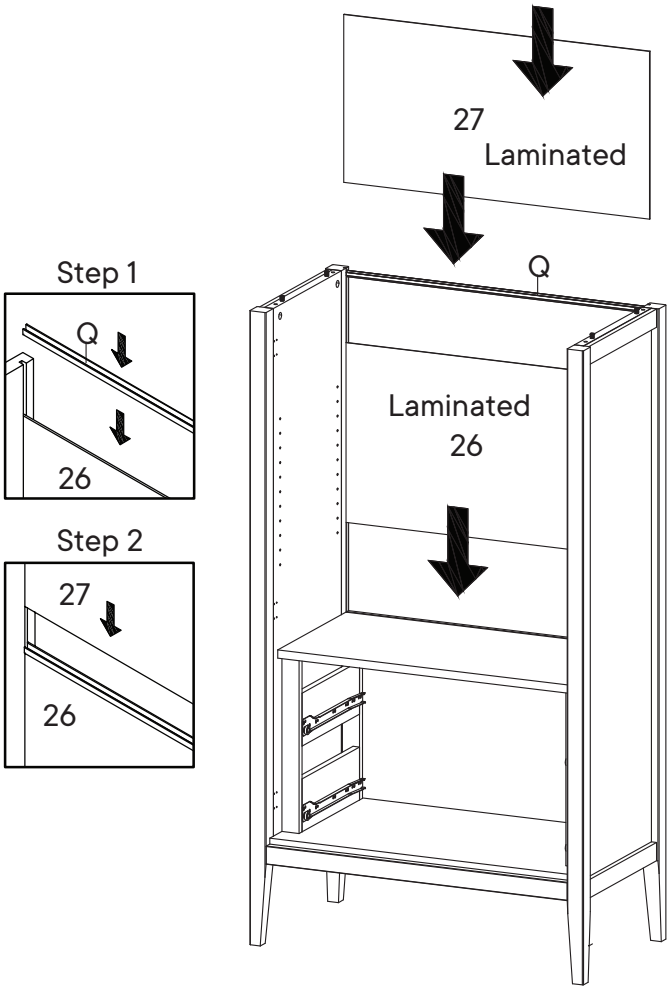


Step 19


HARDWARE

A	Cam Bolt Ø6 x 35 mm	x10
C	Wood Dowel Ø8 x 30 mm	x9


COMPONENTS

10	Support Board 1 Hutch	x2
11	Support Board 2 Hutch	x3
12	Front Board Hutch	x1
13	Back Board Hutch	x1

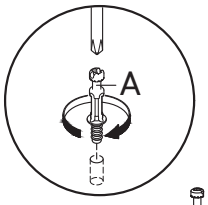

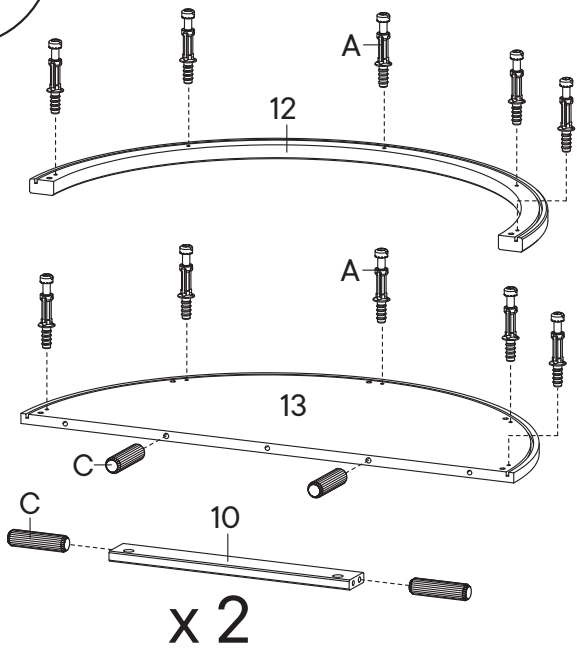

x 2



x 3


Step 20


HARDWARE


B	Cam Lock Ø15 mm	x5

COMPONENTS

10	Support Board 1 Hutch	x2
11	Support Board 2 Hutch	x3
13	Back Board Hutch	x1

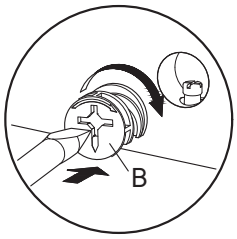

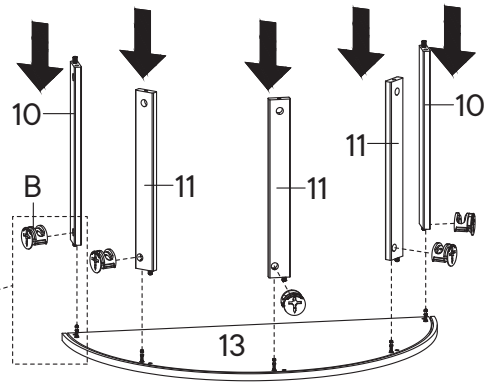

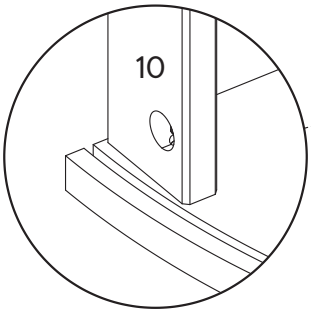


Step 21

HARDWARE

B	Cam Lock Ø15 mm	x5

COMPONENTS


12	Front Board Hutch	x1

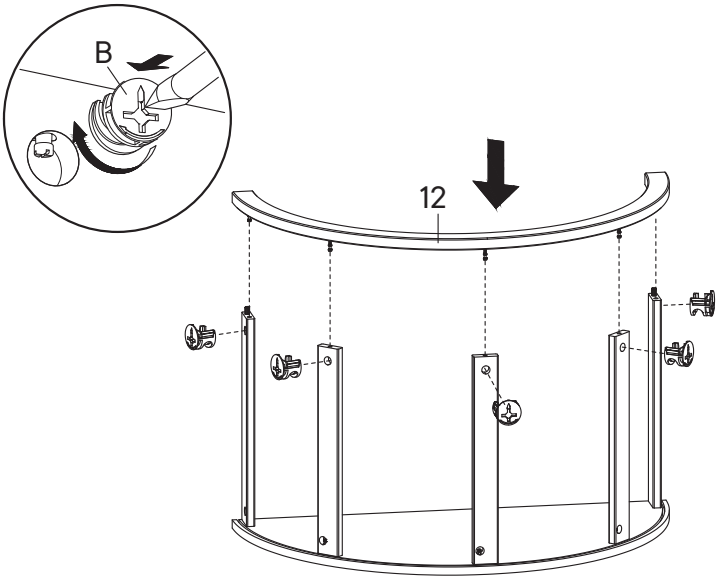

Step 22

COMPONENTS

14	PVC Board	x1

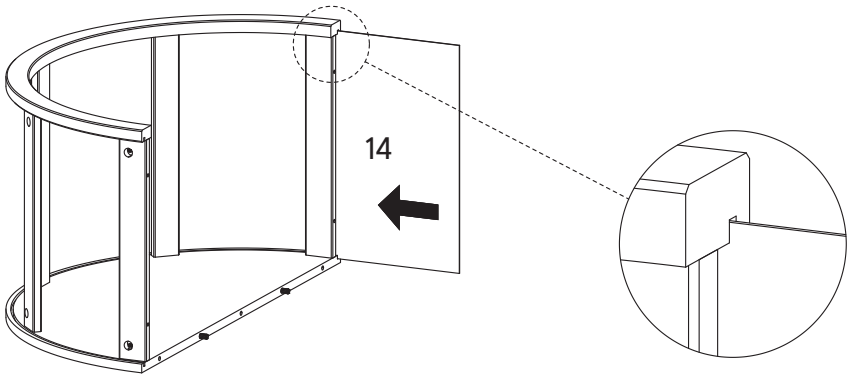


Step 23

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x4
B	Cam Lock Ø15 mm	x3
T	Screw M 7 x 50 mm	x4
H	Stopper	x2
P	Allen Key	x1

COMPONENTS


1	Top Board	x1

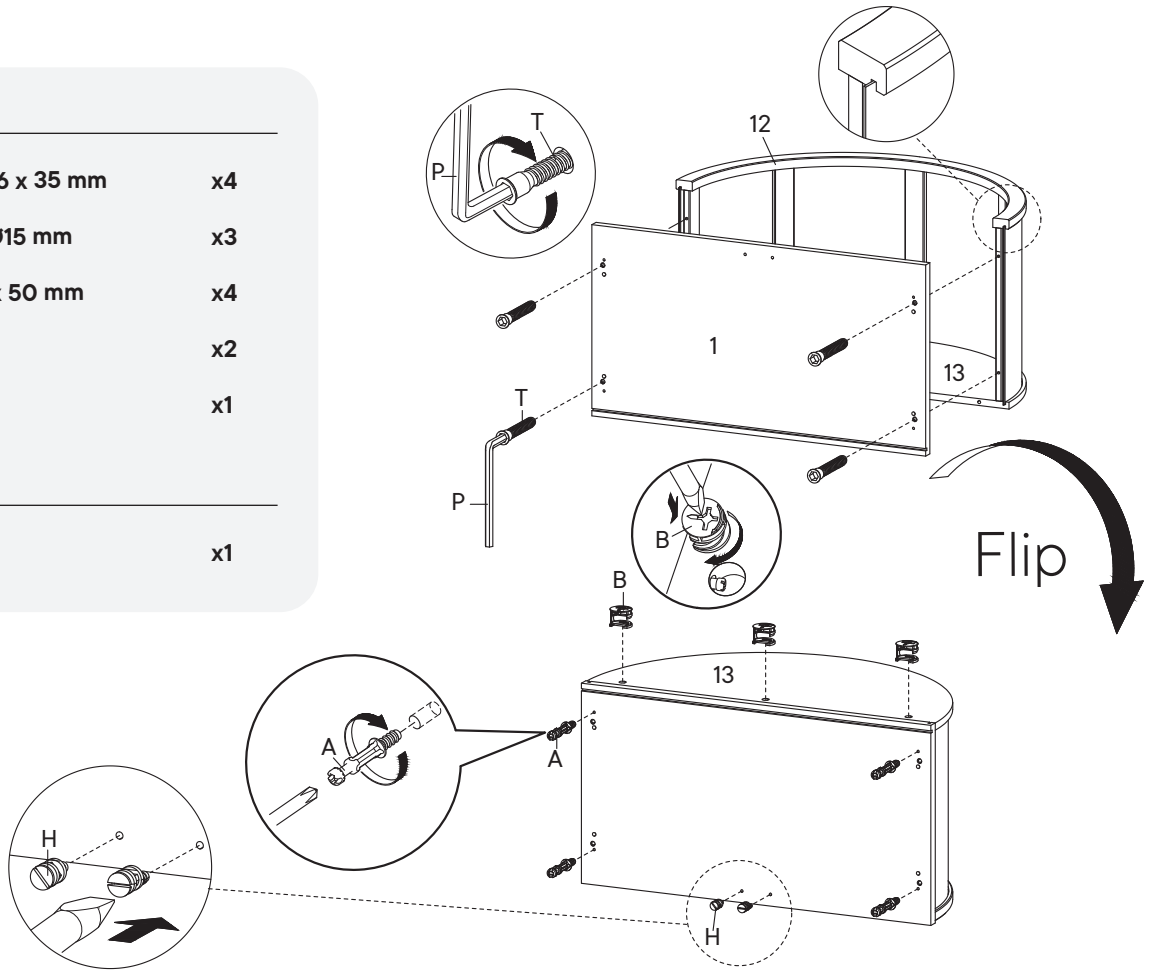

Step 24

HARDWARE

B	Cam Lock Ø15 mm	x4
G	Screw Cap Ø15 mm	x4

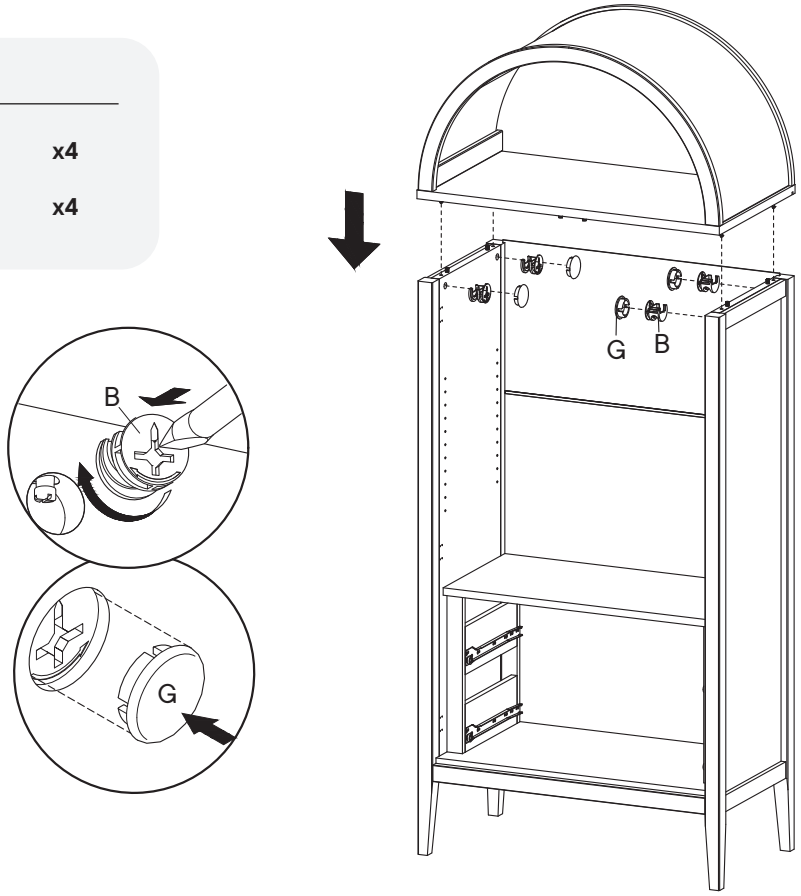


Step 25

HARDWARE


F	Shelf Pin	x8


COMPONENTS

5	Adjustable Shelf	x2

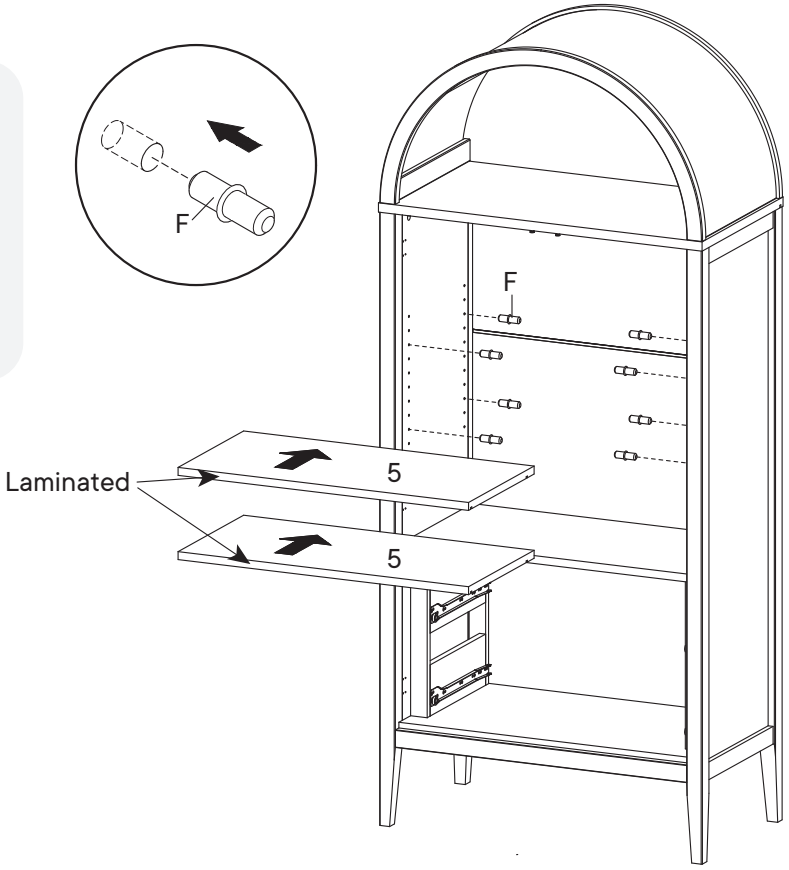

Step 26

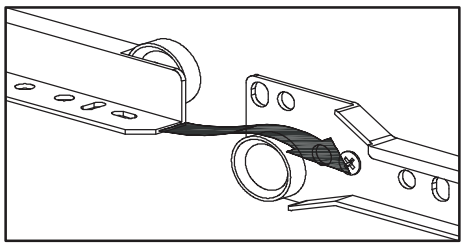

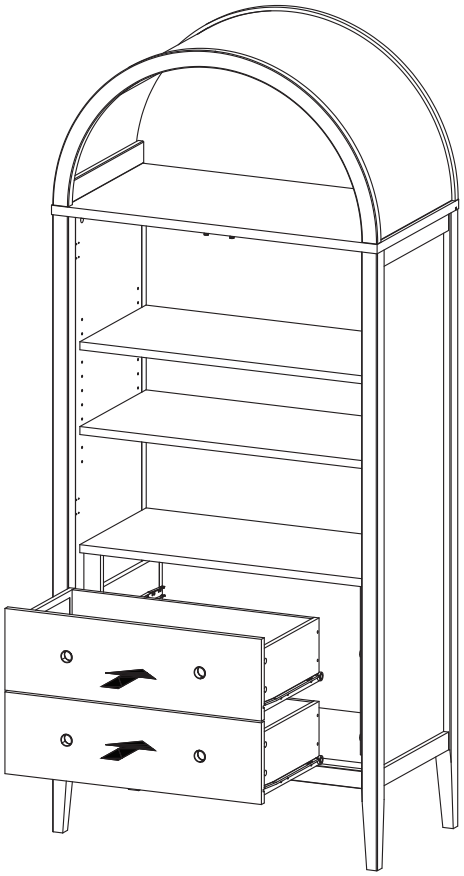


Step 27

HARDWARE

L	Screw M 4.5 x 12.5 mm	x12
HS26C	Hinge	x6

COMPONENTS

8	Door Left	x1
9	Door Right	x1

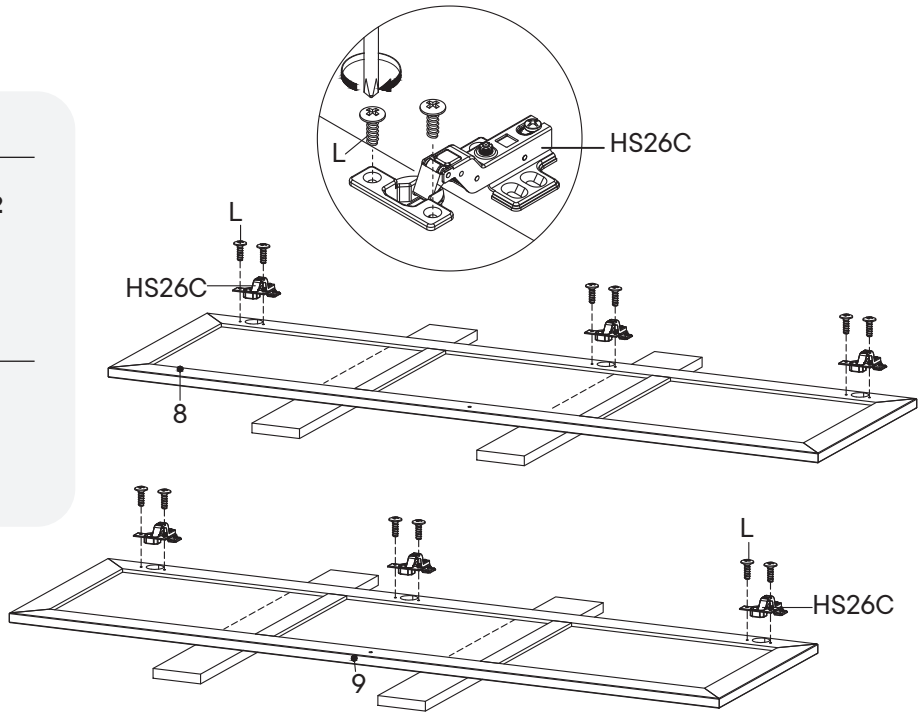


Step 28


HARDWARE

I	Handle	x2
J	Screw M 4 x 20 mm	x2
L	Screw M 4.5 x 12.5 mm	x24


COMPONENTS

8	Door Left	x1
9	Door Right	x1

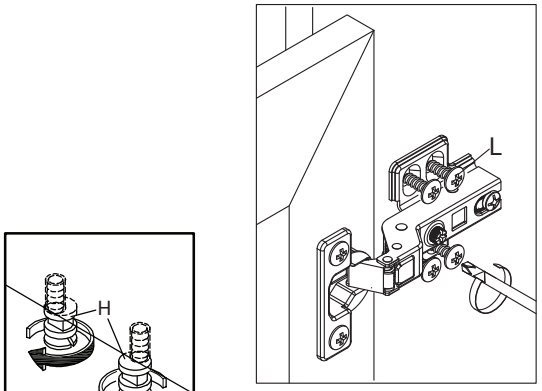

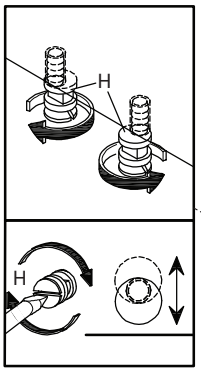

The door stopper position is adjustable (H). Please use screwdriver to adjust it as needed, so the doors are aligned when closed

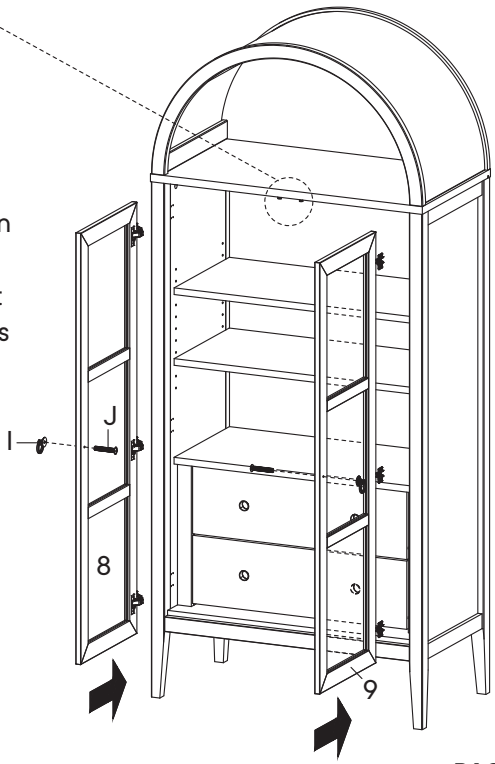


Note:
Door alignment can be adjusted after all cabinet parts are secured. Refer page 20 OF 20

Step 29

HARDWARE


M	Wedge	x16
N	Screw M 3.5 x 15.5 mm	x16

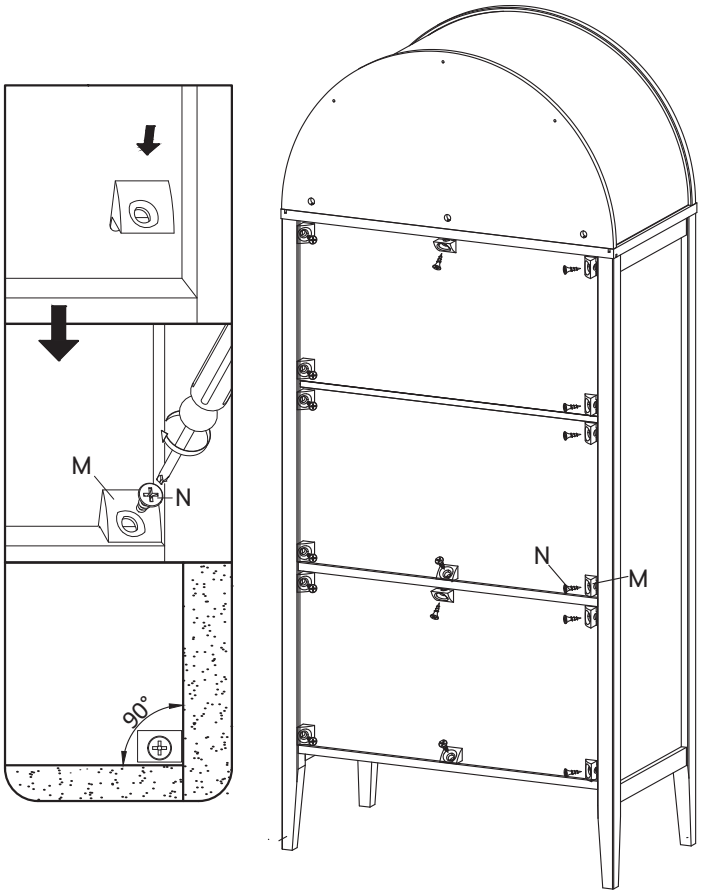


Step 30

HARDWARE

X	List	x2

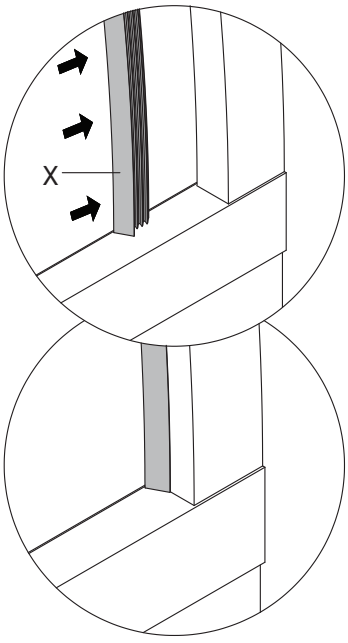

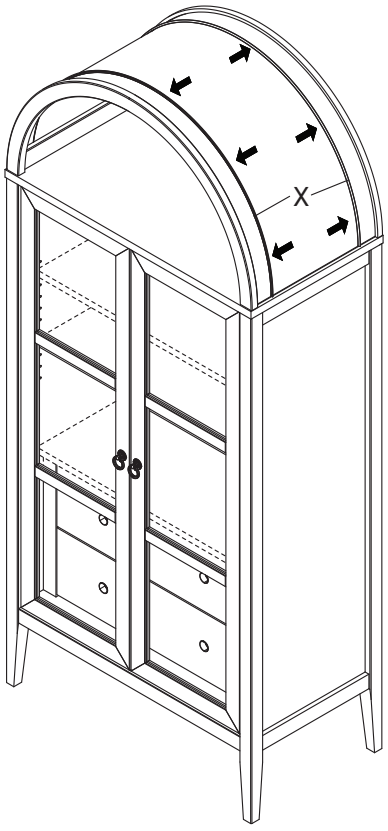

Great job!

Bookcase assembly is complete.

CARING FOR YOUR ITEM

Indoor use only.


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.


Never use harsh chemicals, as they could damage the finish or integrity of the item.


CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

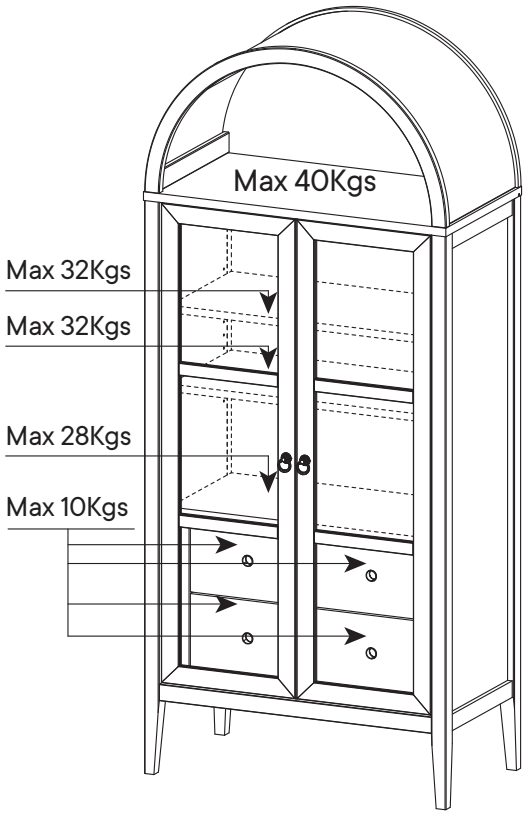


Cabinet Door Alignment

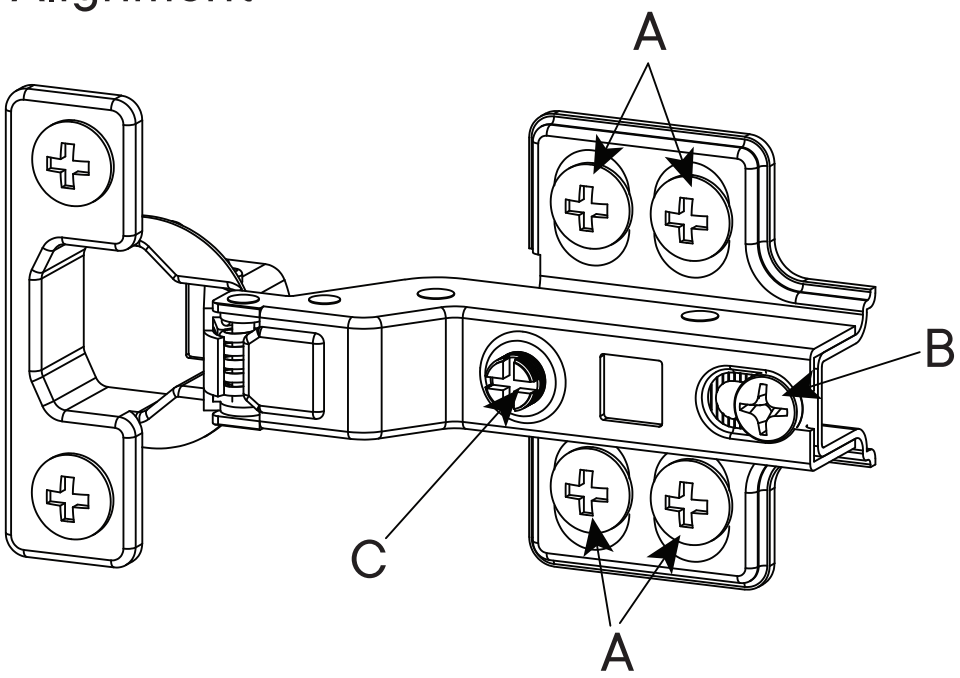

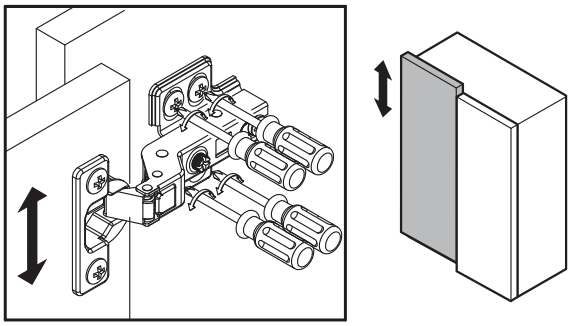


To adjust the vertical height.

Loosen the four screws “A” on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

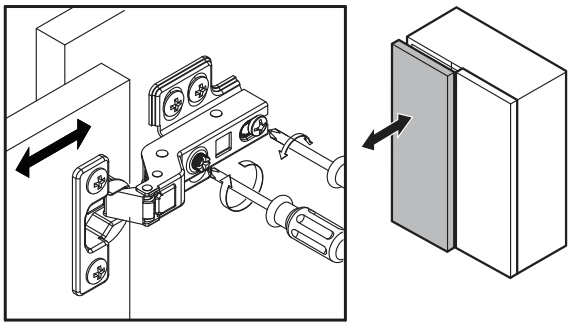

To adjust depth.

Loosen screw “B” and adjust door, if the door can not be adjusted, please loosen screw “C”, then try again. Tighten screw “B” and “C”.

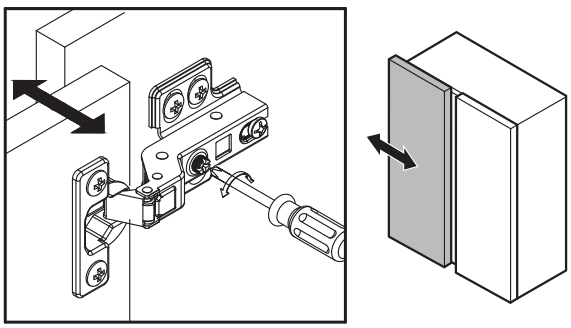



To adjust side ways.


Turn screw “C” on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE


Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for you wall type.



AA1 x 2



AA2 x 4



AA3 x 4



AA4 x 4

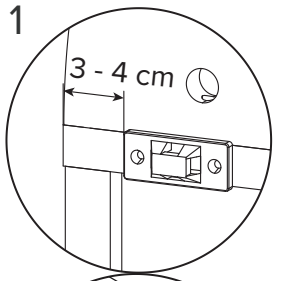


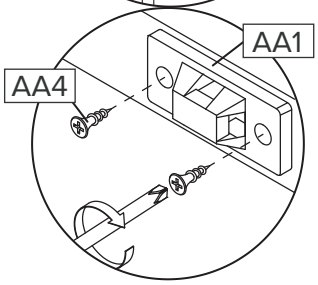


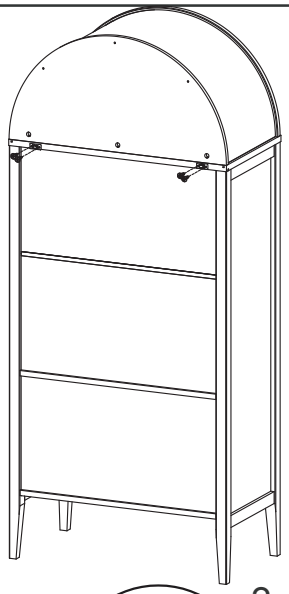


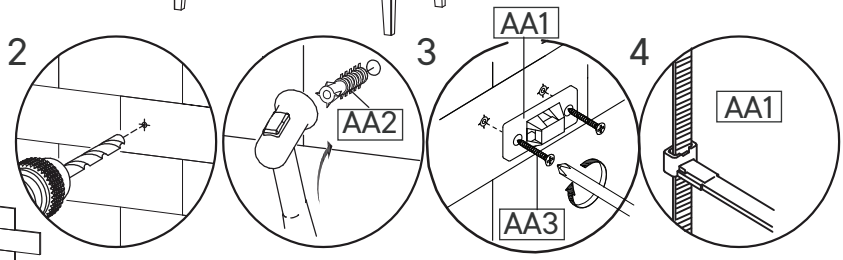

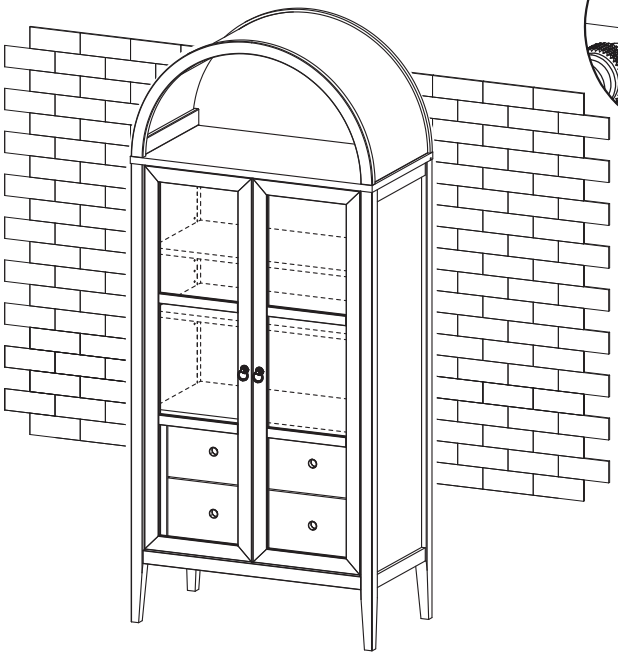

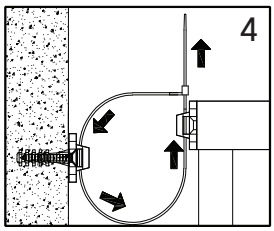

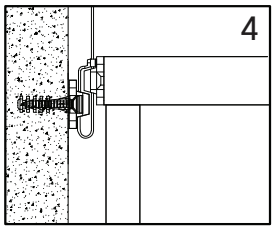

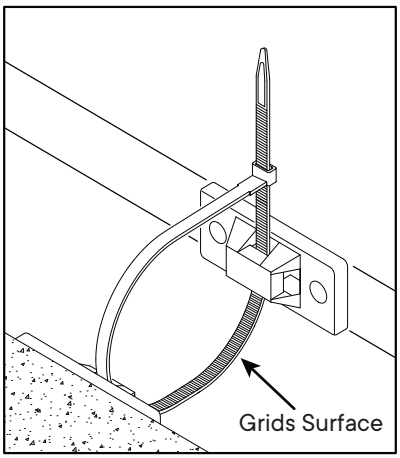

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 3 - 4 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.