Assembly Instructions



Date 2025-07-03 Rev.01-A


General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.

III. Two people are recommended for ease in the assembly of this product.


VI. A Phillips head screwdriver is required for the assembly of this product .

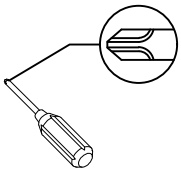

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

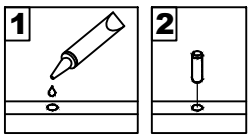

In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

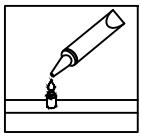


VI. HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.


4.Use the sticker to conceal the Cam.

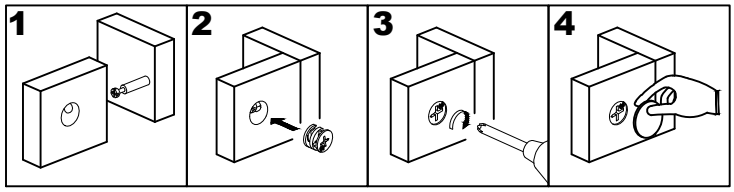


VII. Power tools should not be used to assemble this product .

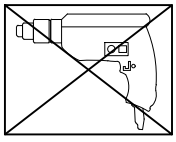






Parts List

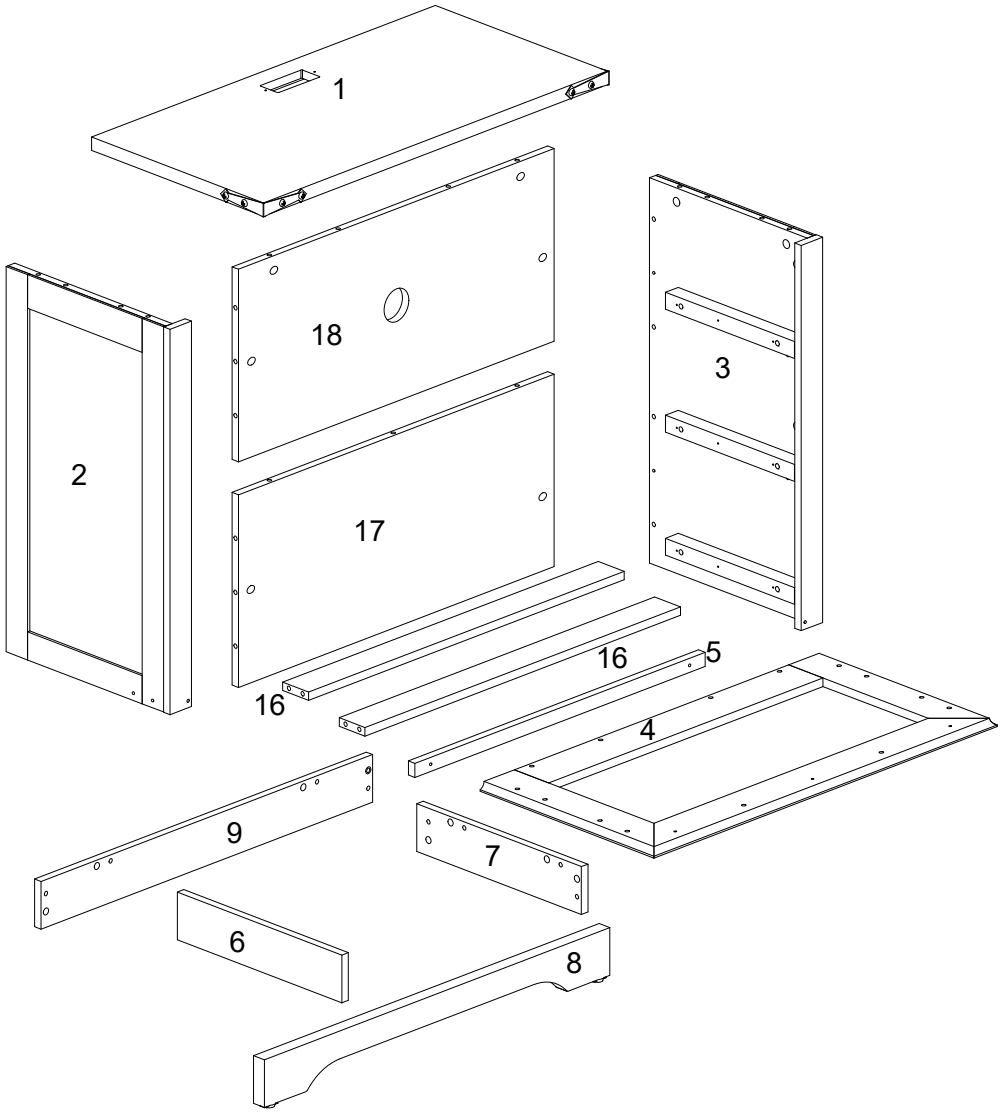


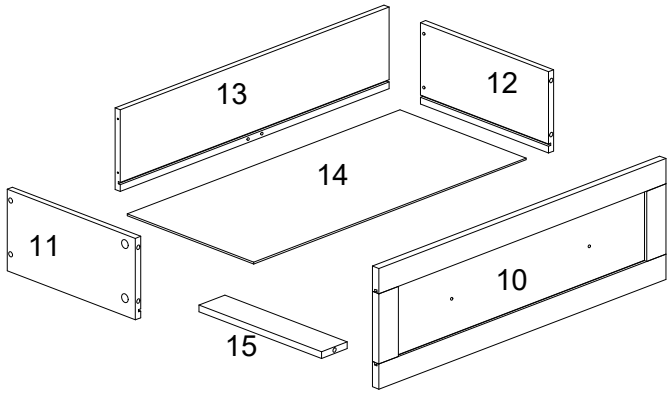

X3




Hardware List


A		Ø8x30mm	Dowel	29 pcs
B		Ø6x35mm	Cam Bolt	29 pcs
C		Ø15x12mm	Cam Lock	14 pcs
D		Ø15x10mm	Cam Lock （Small)	15 pcs
E		Ø30mm	Cover	29 pcs
F			Handle	6 set
G		Ø4x12mm	Handle bolt	6 pcs
H			Connector	12 pcs
I		1/4"x12mm	Bolt	24 pcs
J		M4	Allen Wrench	1 pc
K		Ø6x50mm	Screw	6 pcs
L		Ø3.5x12mm	Screw	38 pcs
M		Ø4x32mm	Screw	18 pcs
N		Ø6x12mm	Screw	8 pcs
O			Metal accent	2 pcs
P		Ø4x28mm	Screw	3 pcs

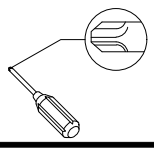

Philips head screwdriver required for assembly
(not included)


Hardware List

Q		12"	Left cabinet member	3	pcs
R		12"	Right cabinet member	3	pcs
S		12"	Left drawer runner	3	pcs
T		12"	Right drawer runner	3	pcs
U			Glue Tube	1	pc
V			Power Cord W/USB	1	pc
W			Tipping Restraint Hardware	1	set

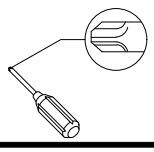


Philips head screwdriver required for assembly
(not included)


Step 1

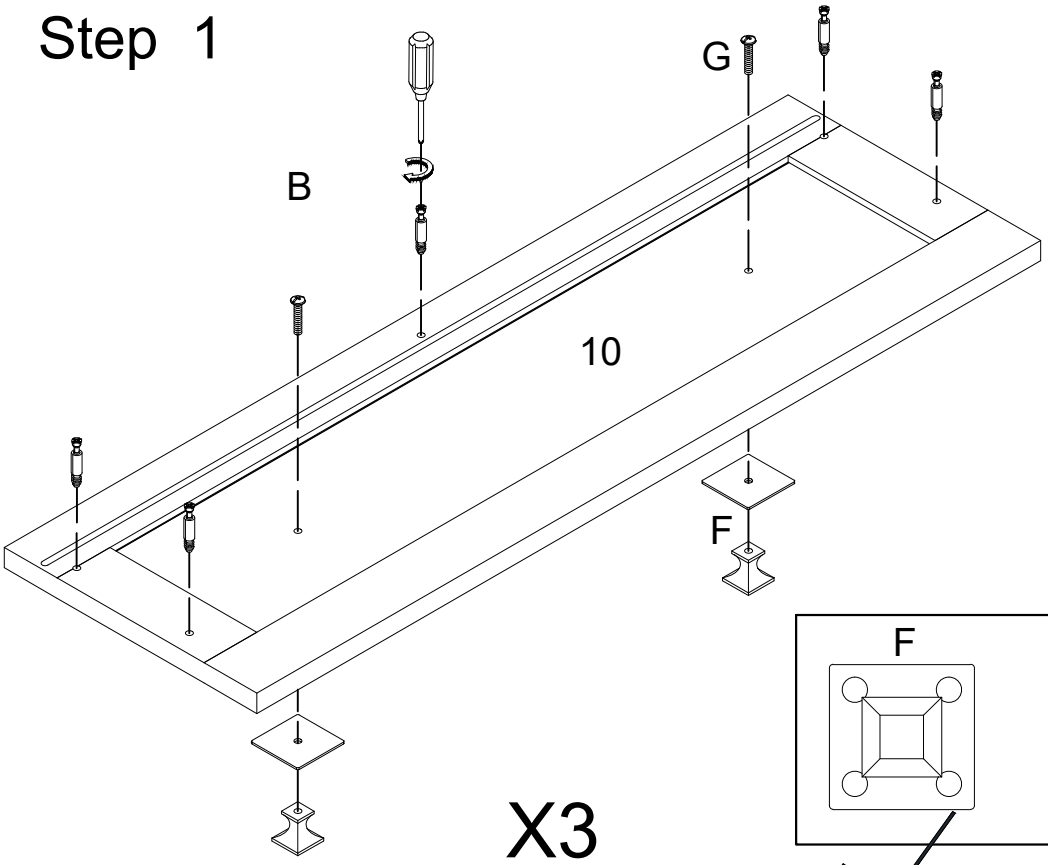

X3

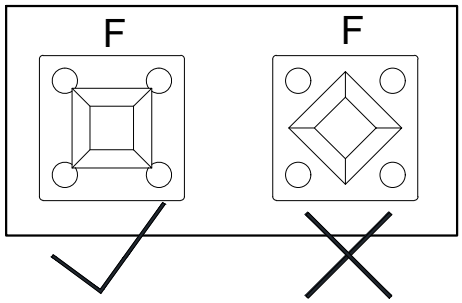


Step 2

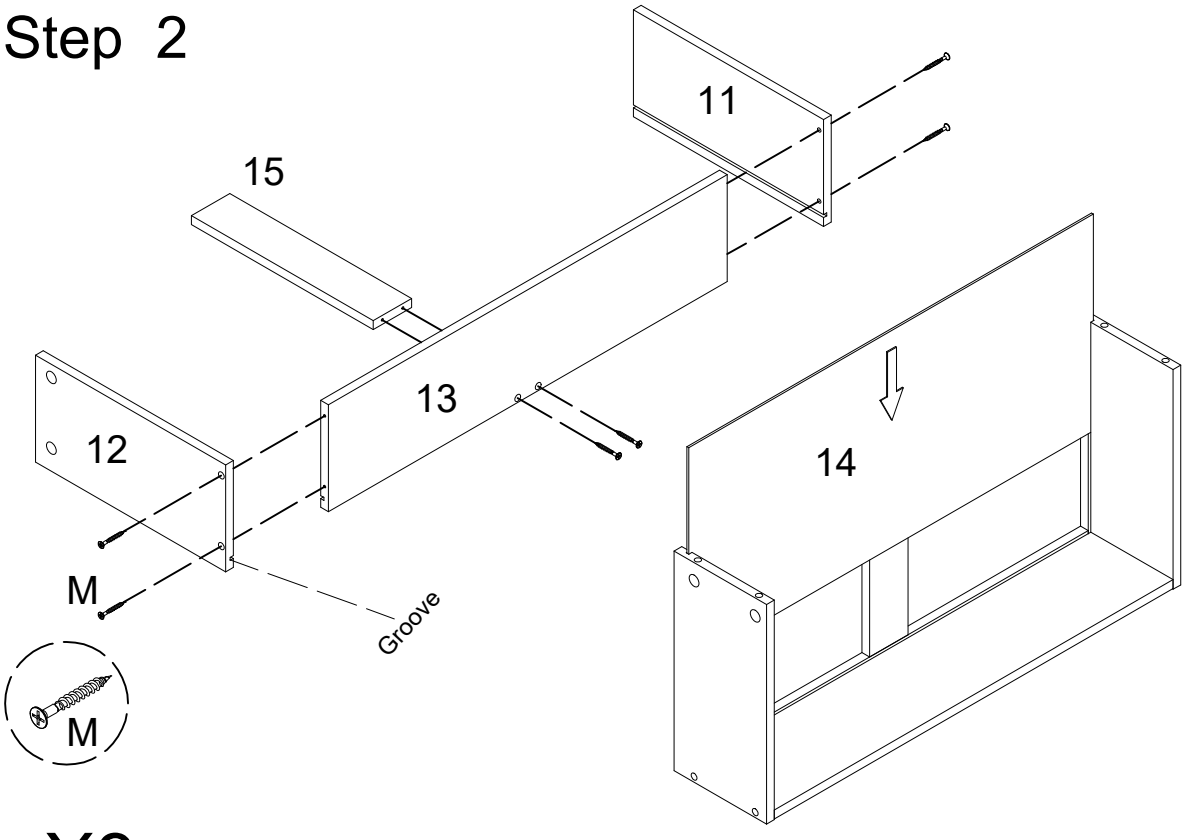


X3

Step 3

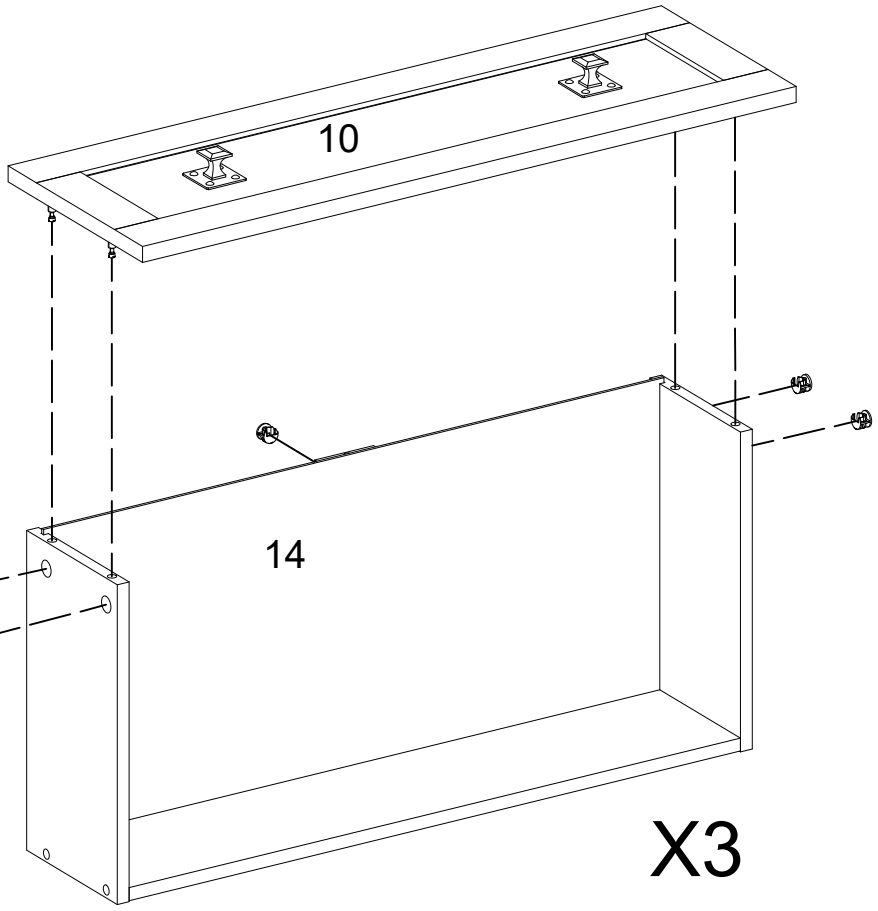


Small cam lock
D

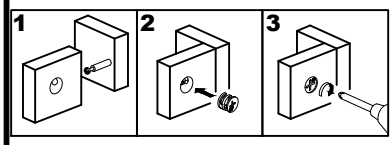


X3

Step 4

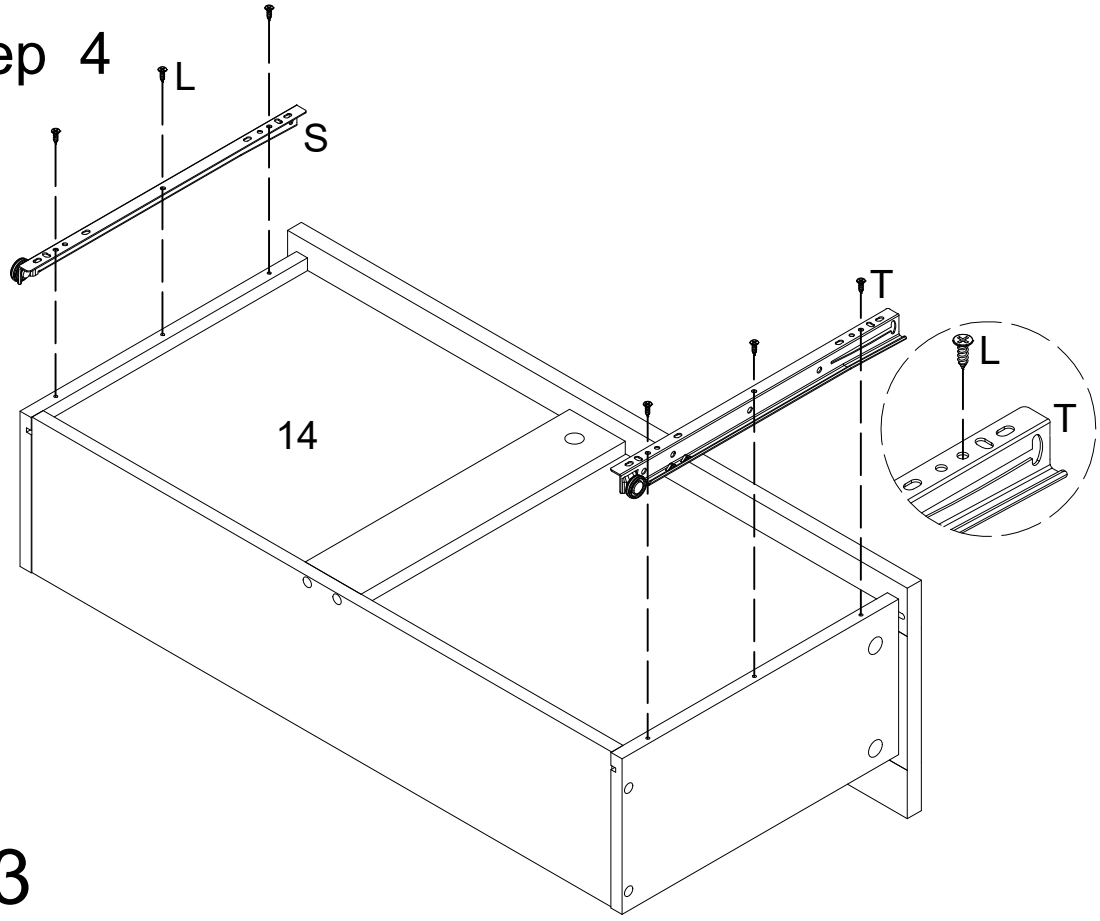


X3


Step 5

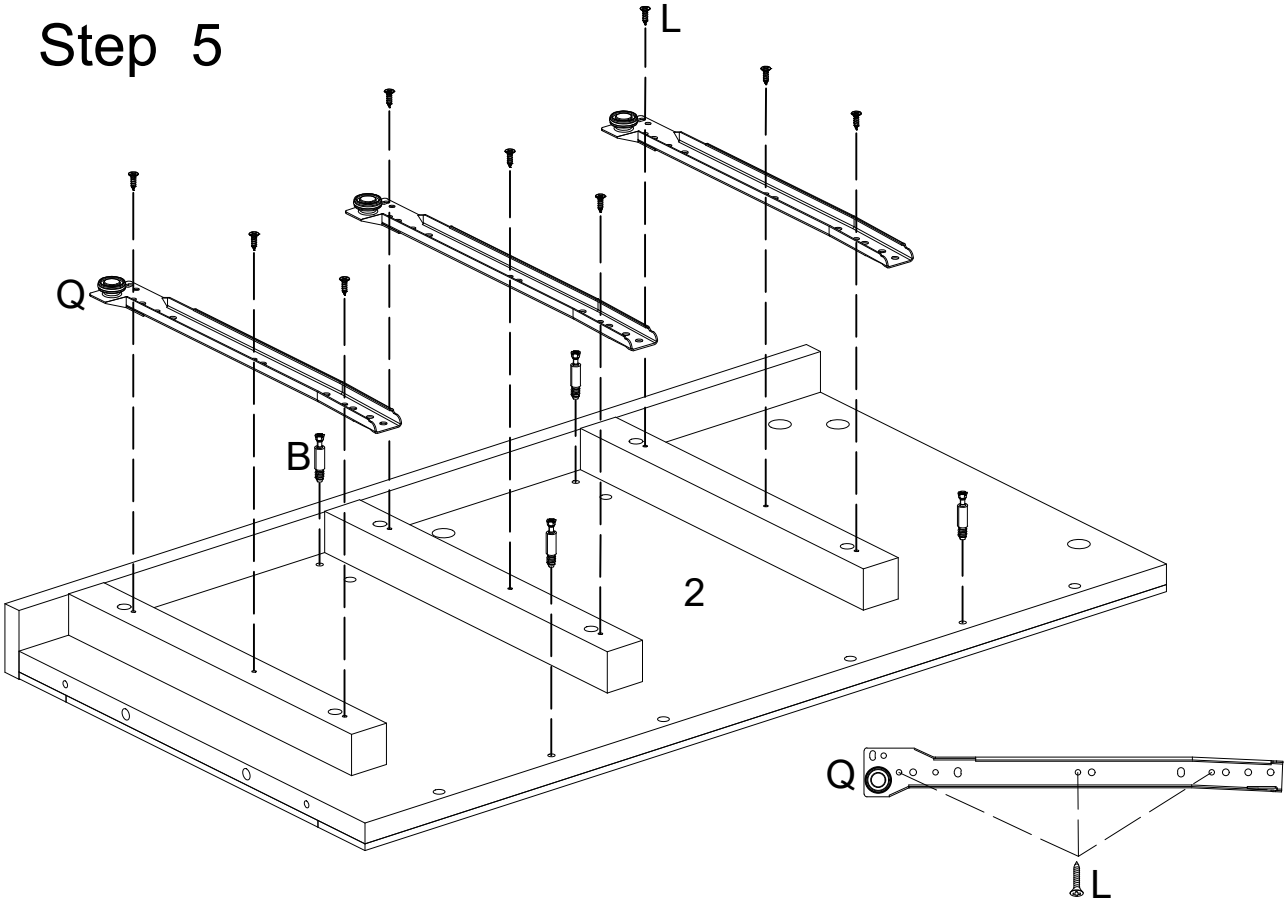


Step 6

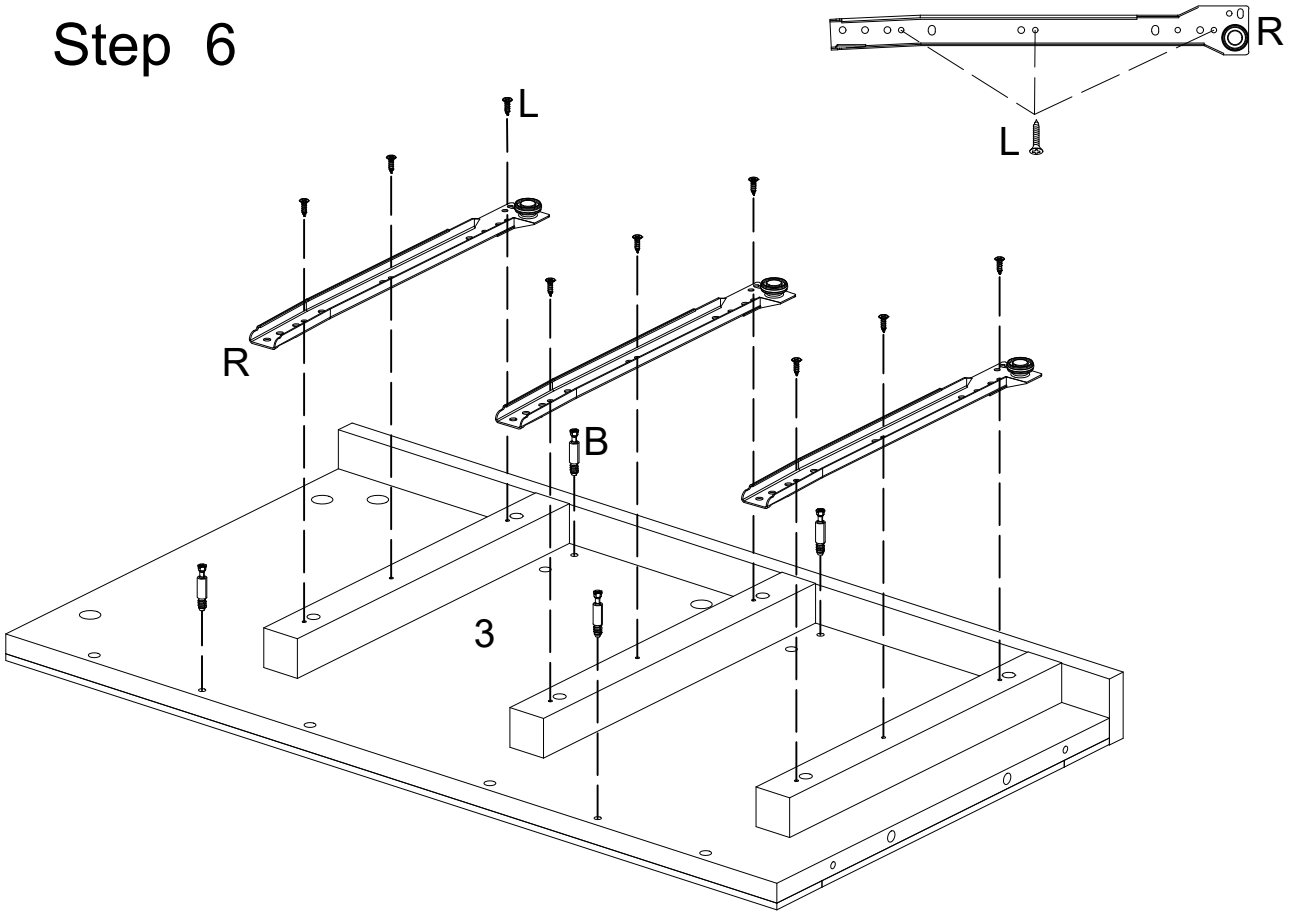


Step 7

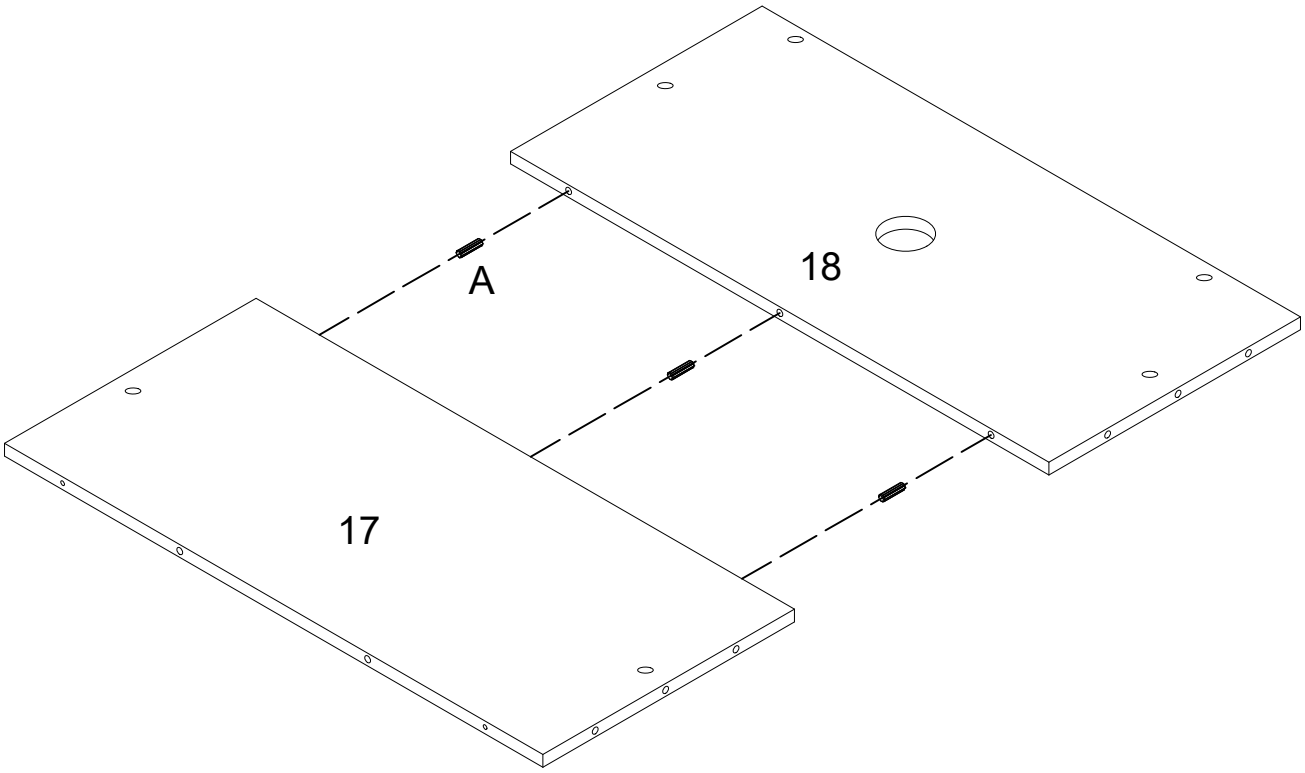


Step 8

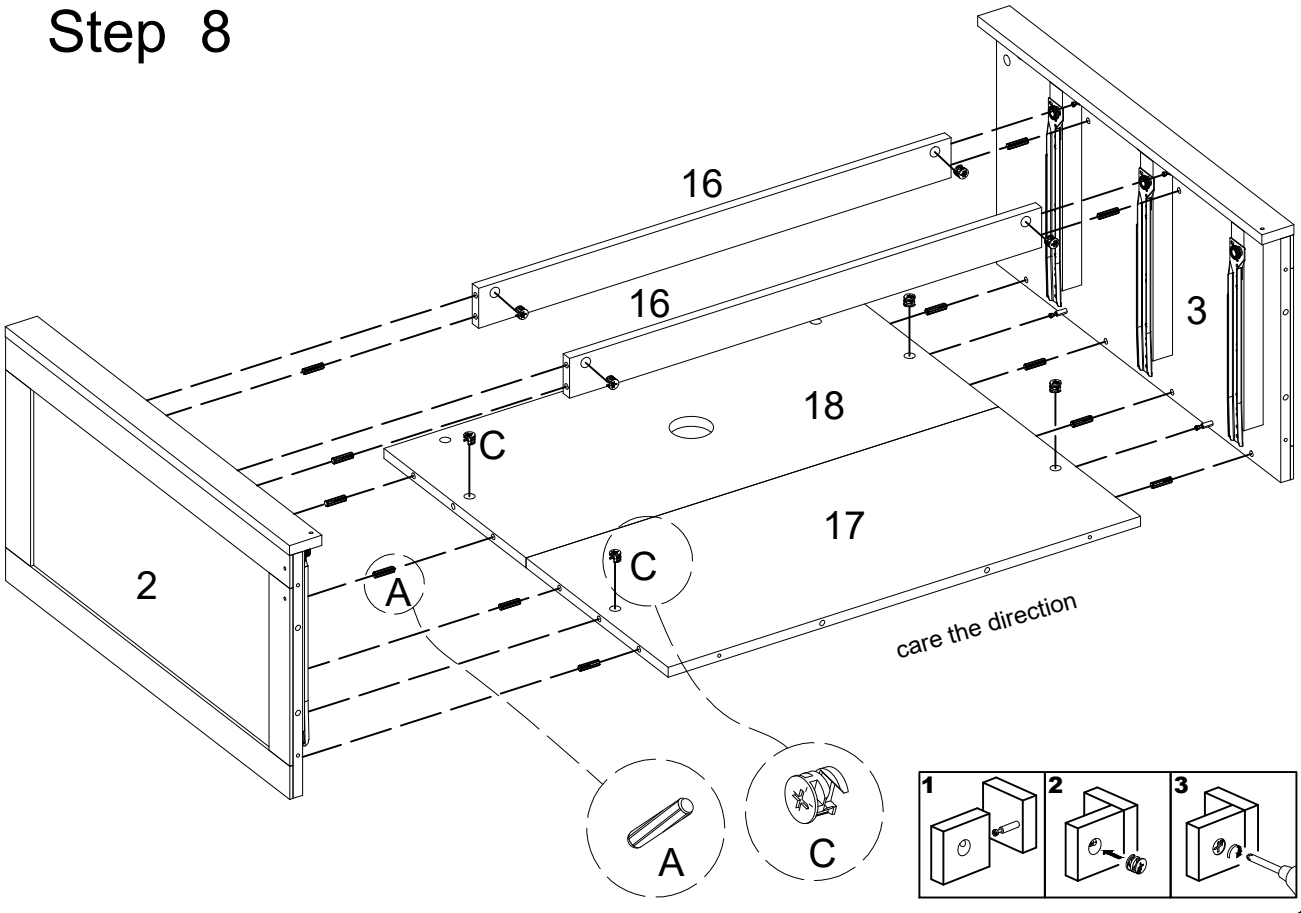


Step 9

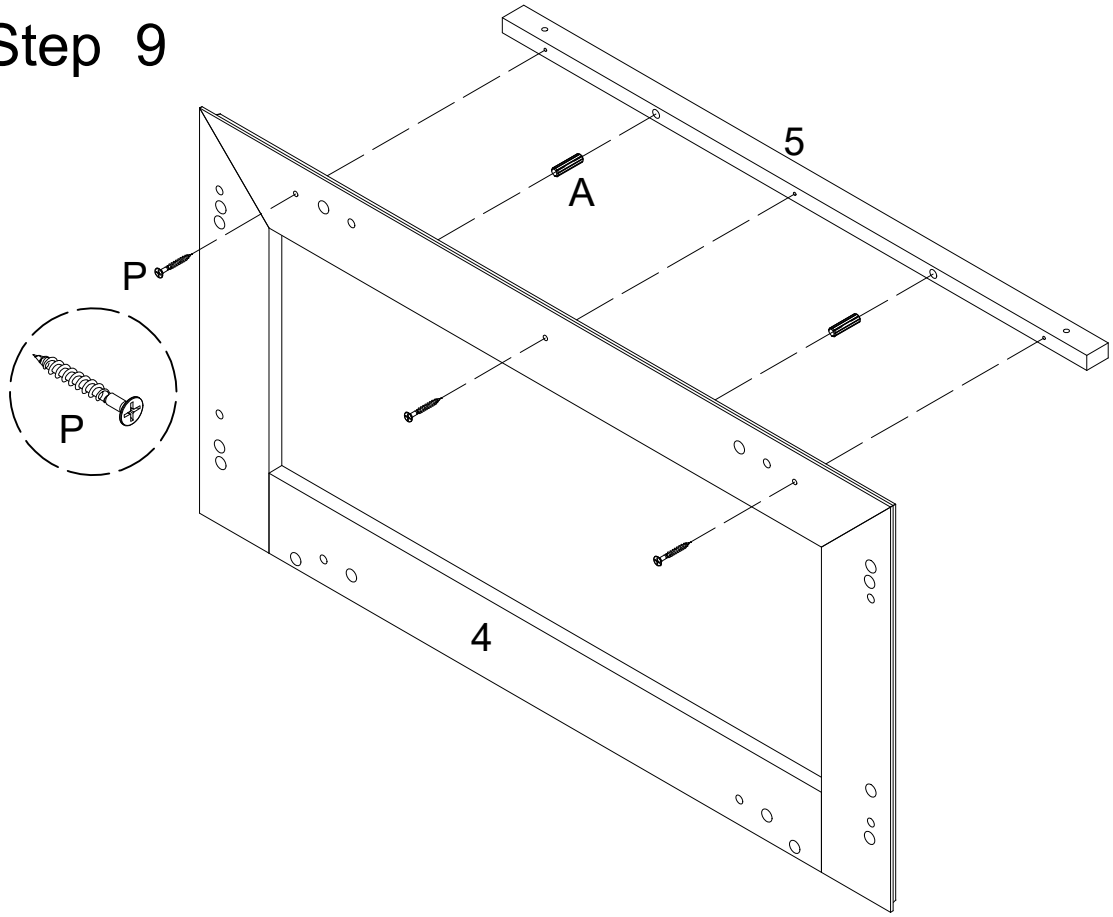



Step 10

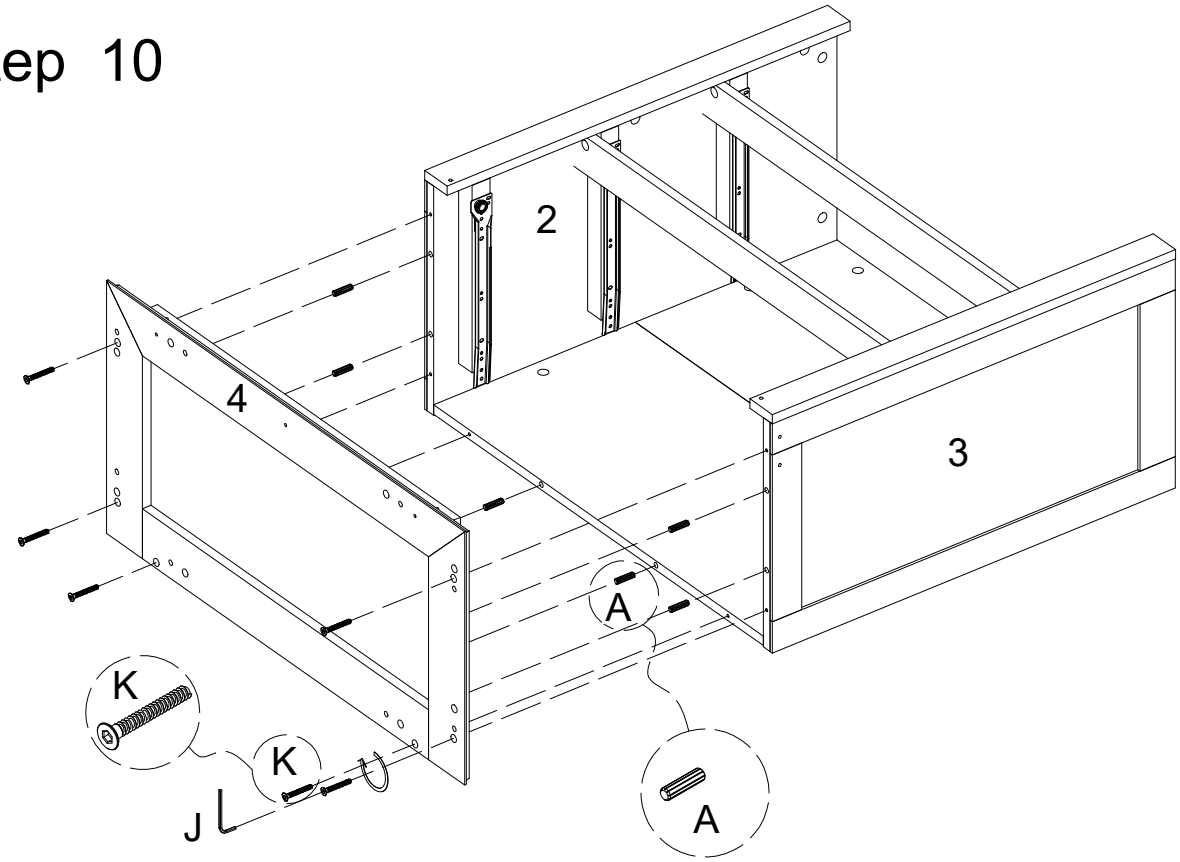


Step 11

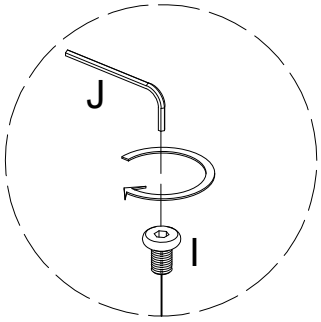


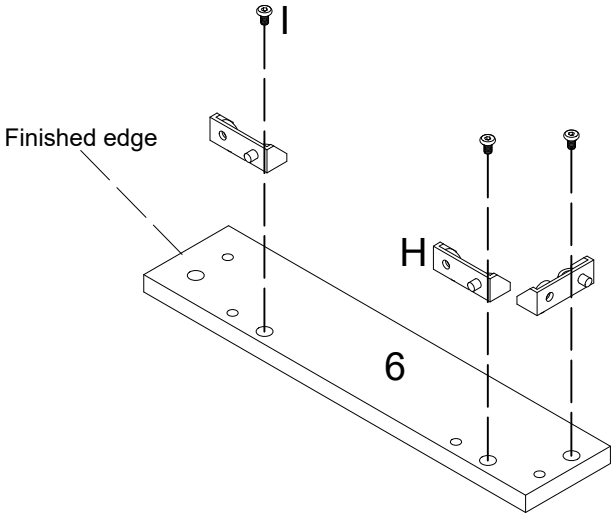


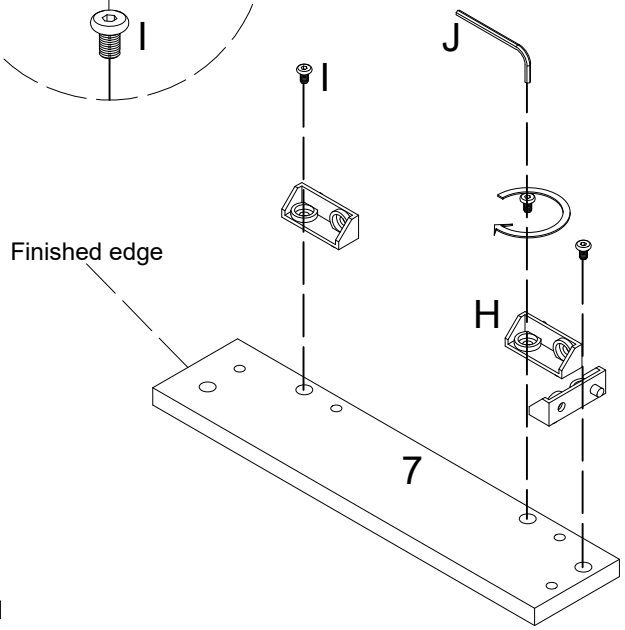


Step 12

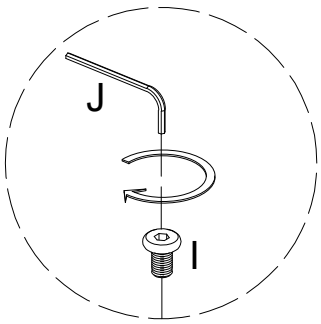

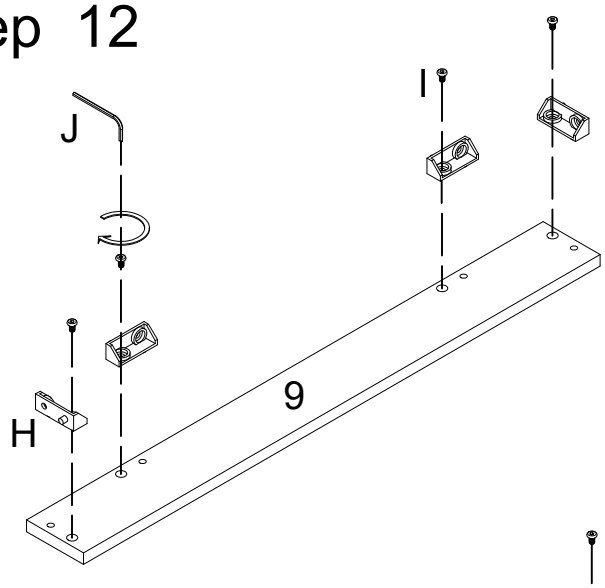


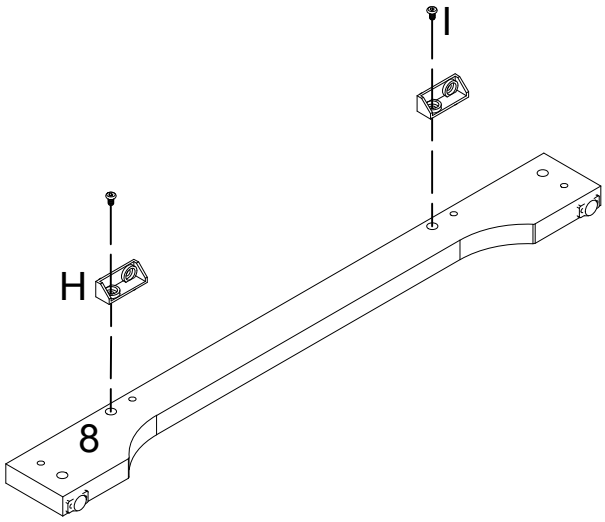


Step 13

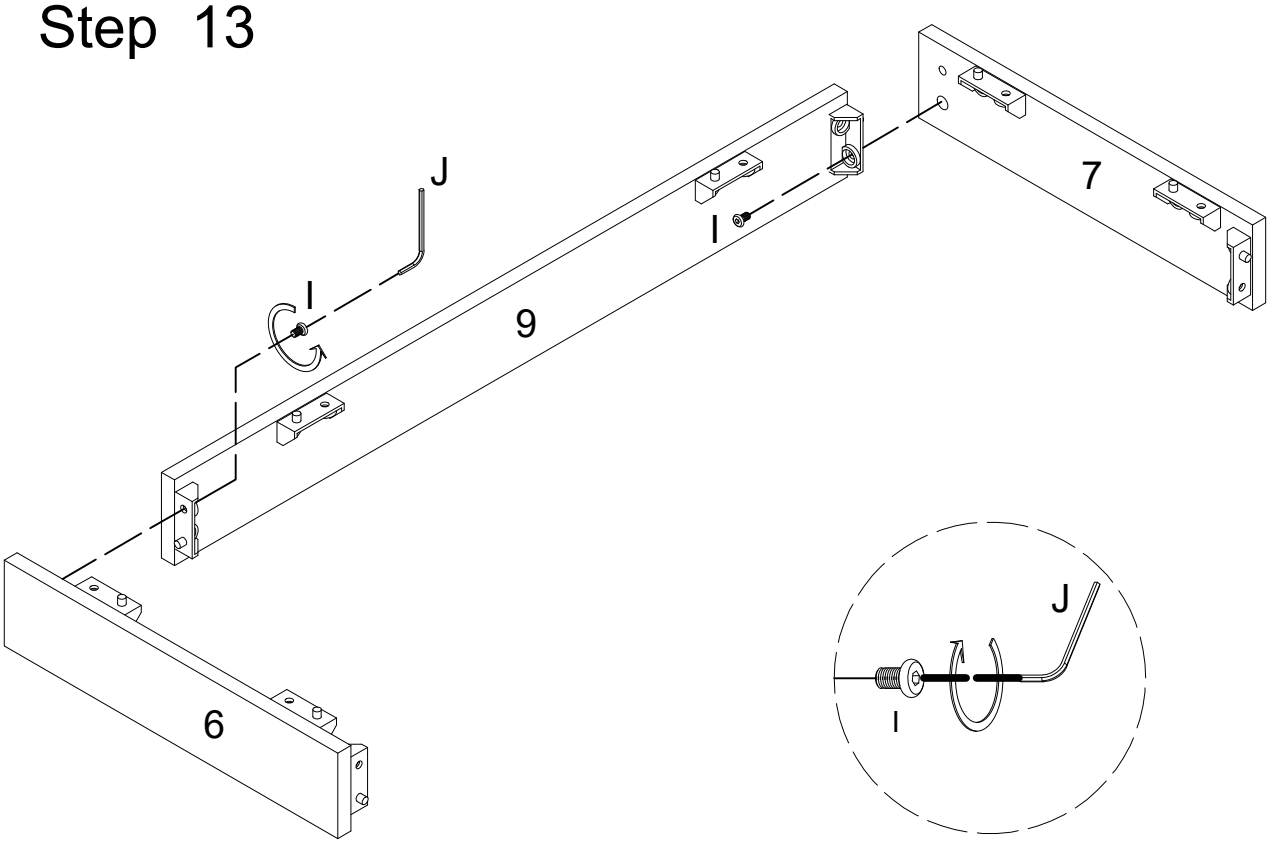


Step 14

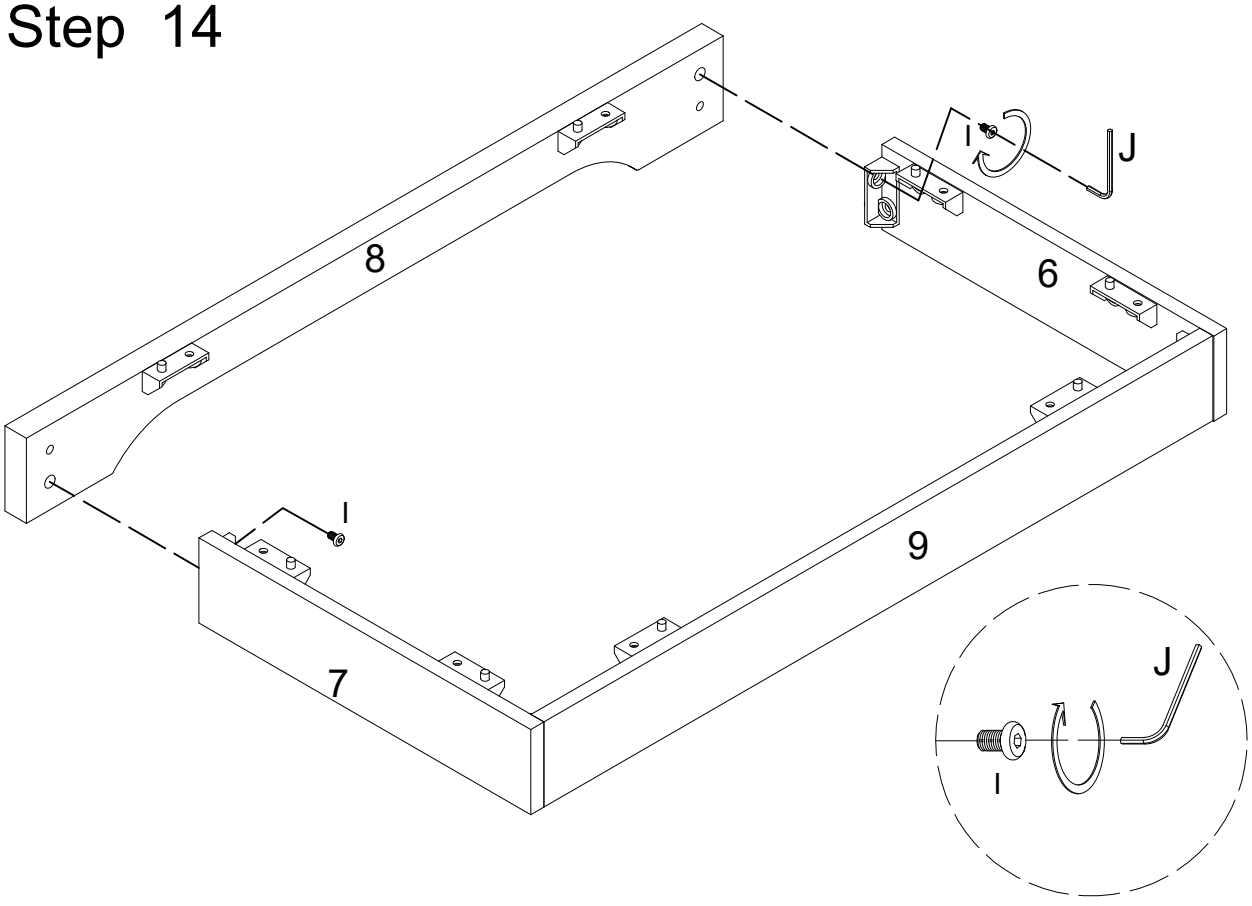


Step 15

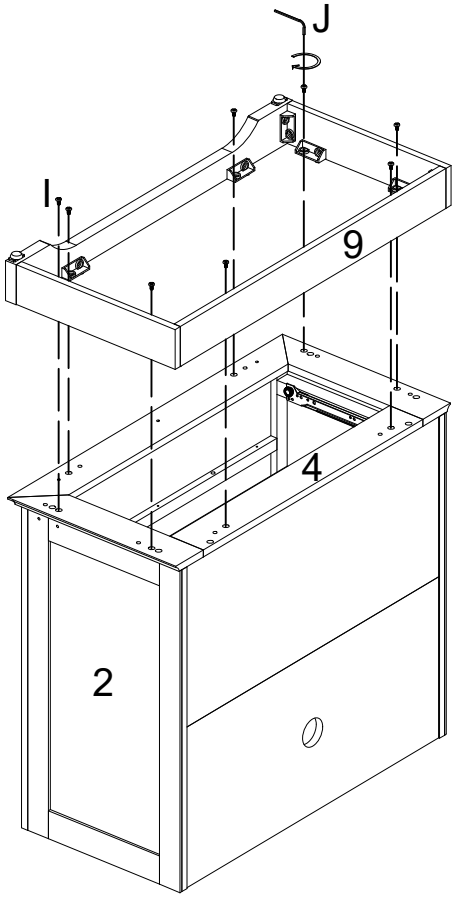


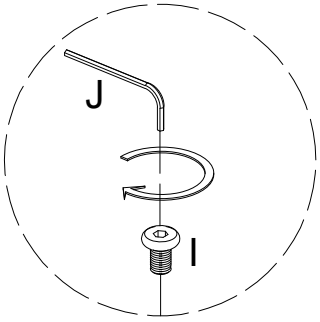


Step 16

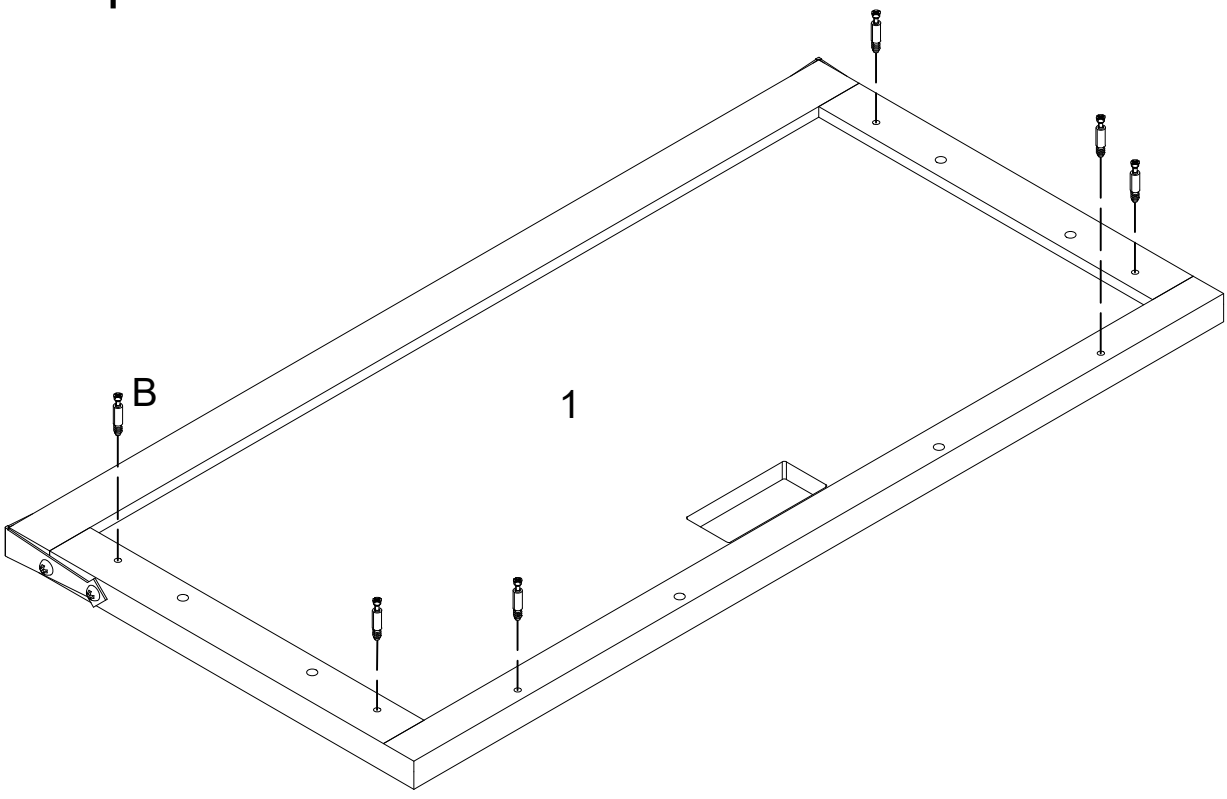


Step 17

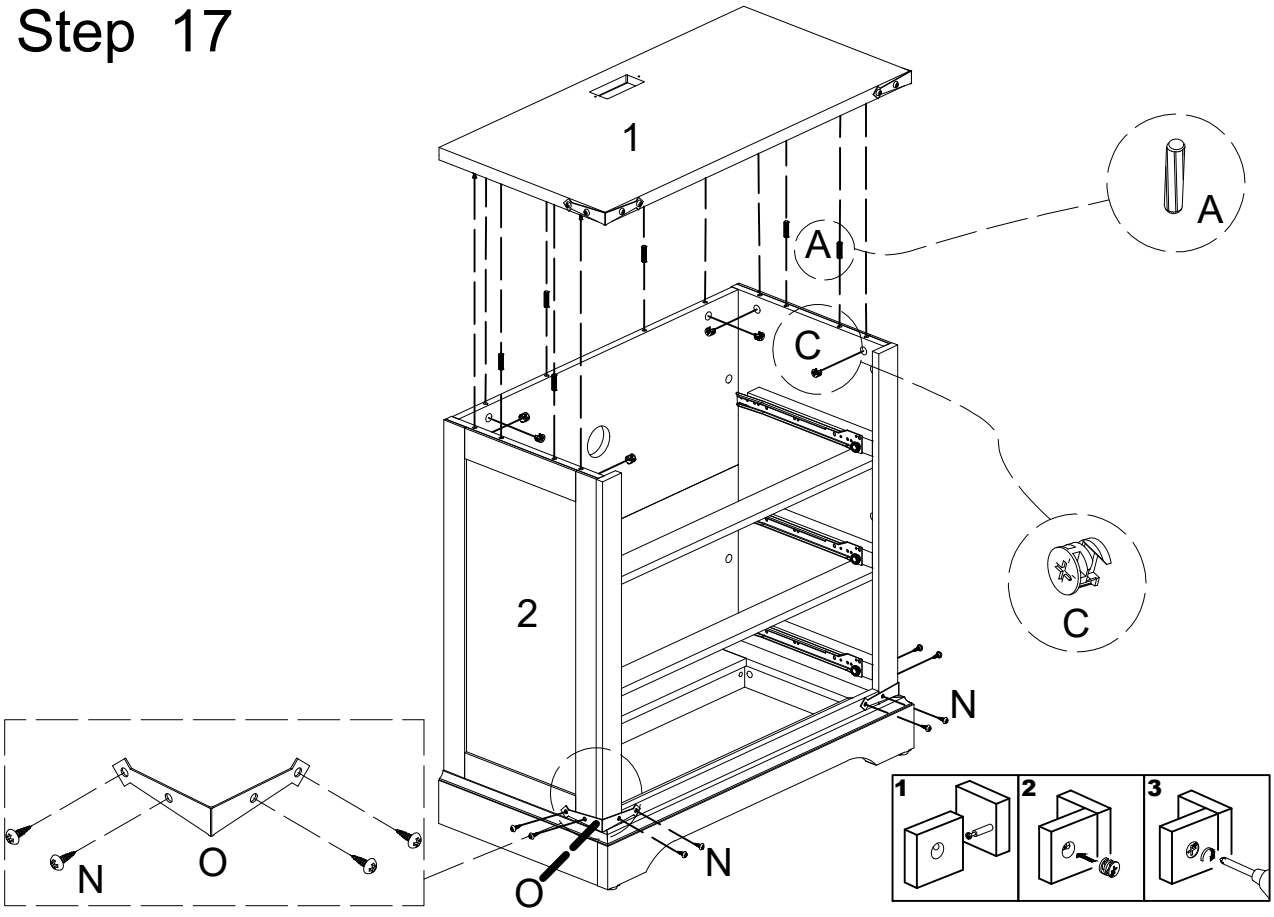


Step 18

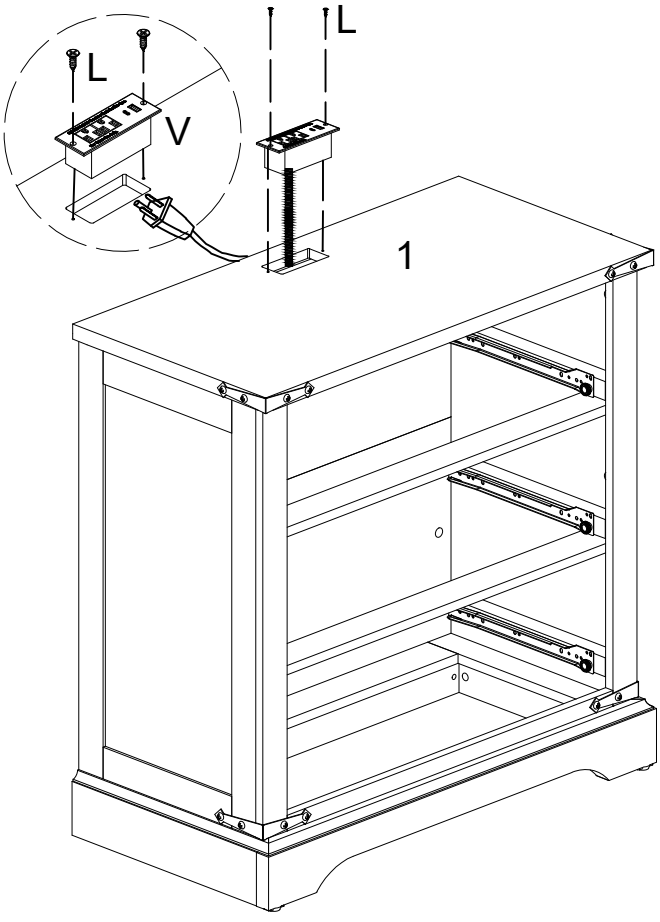


Step 19

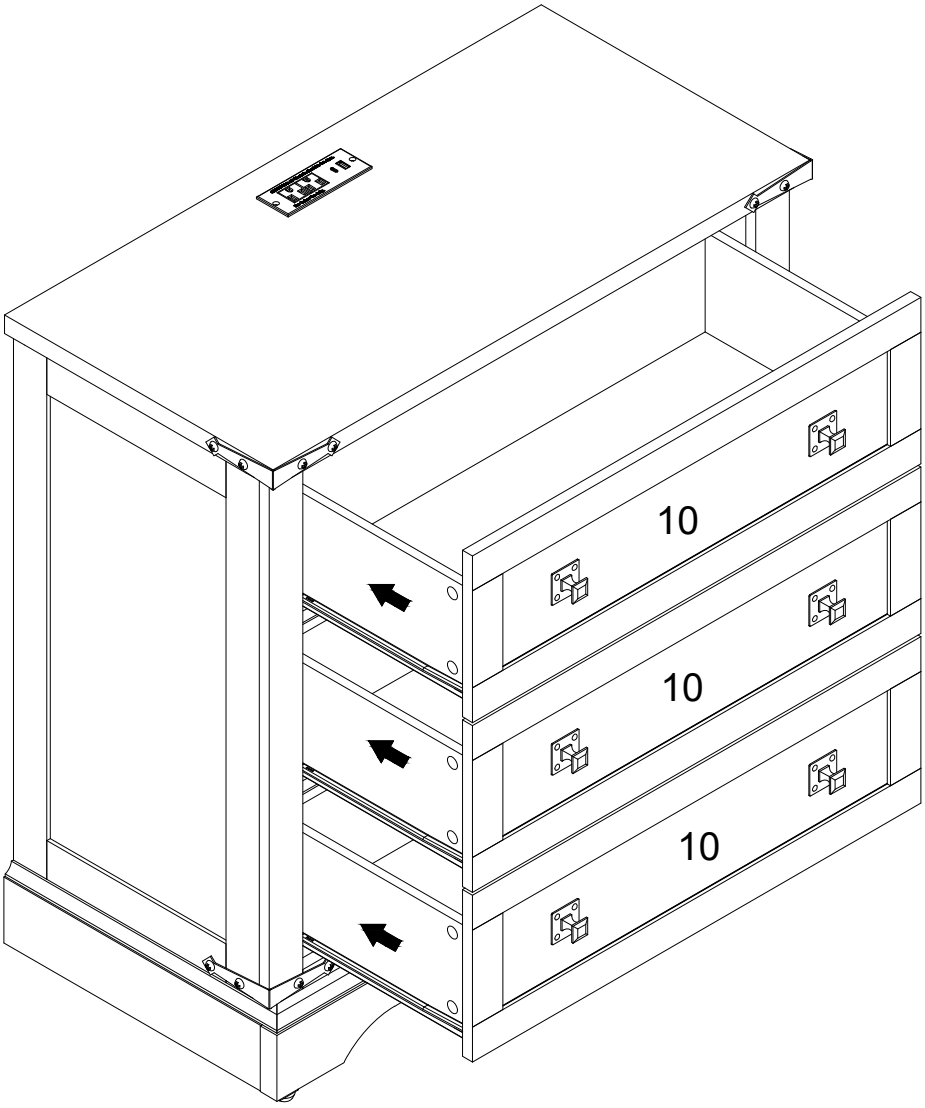

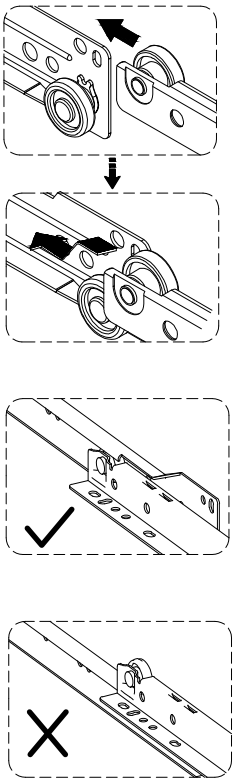

Step 20

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

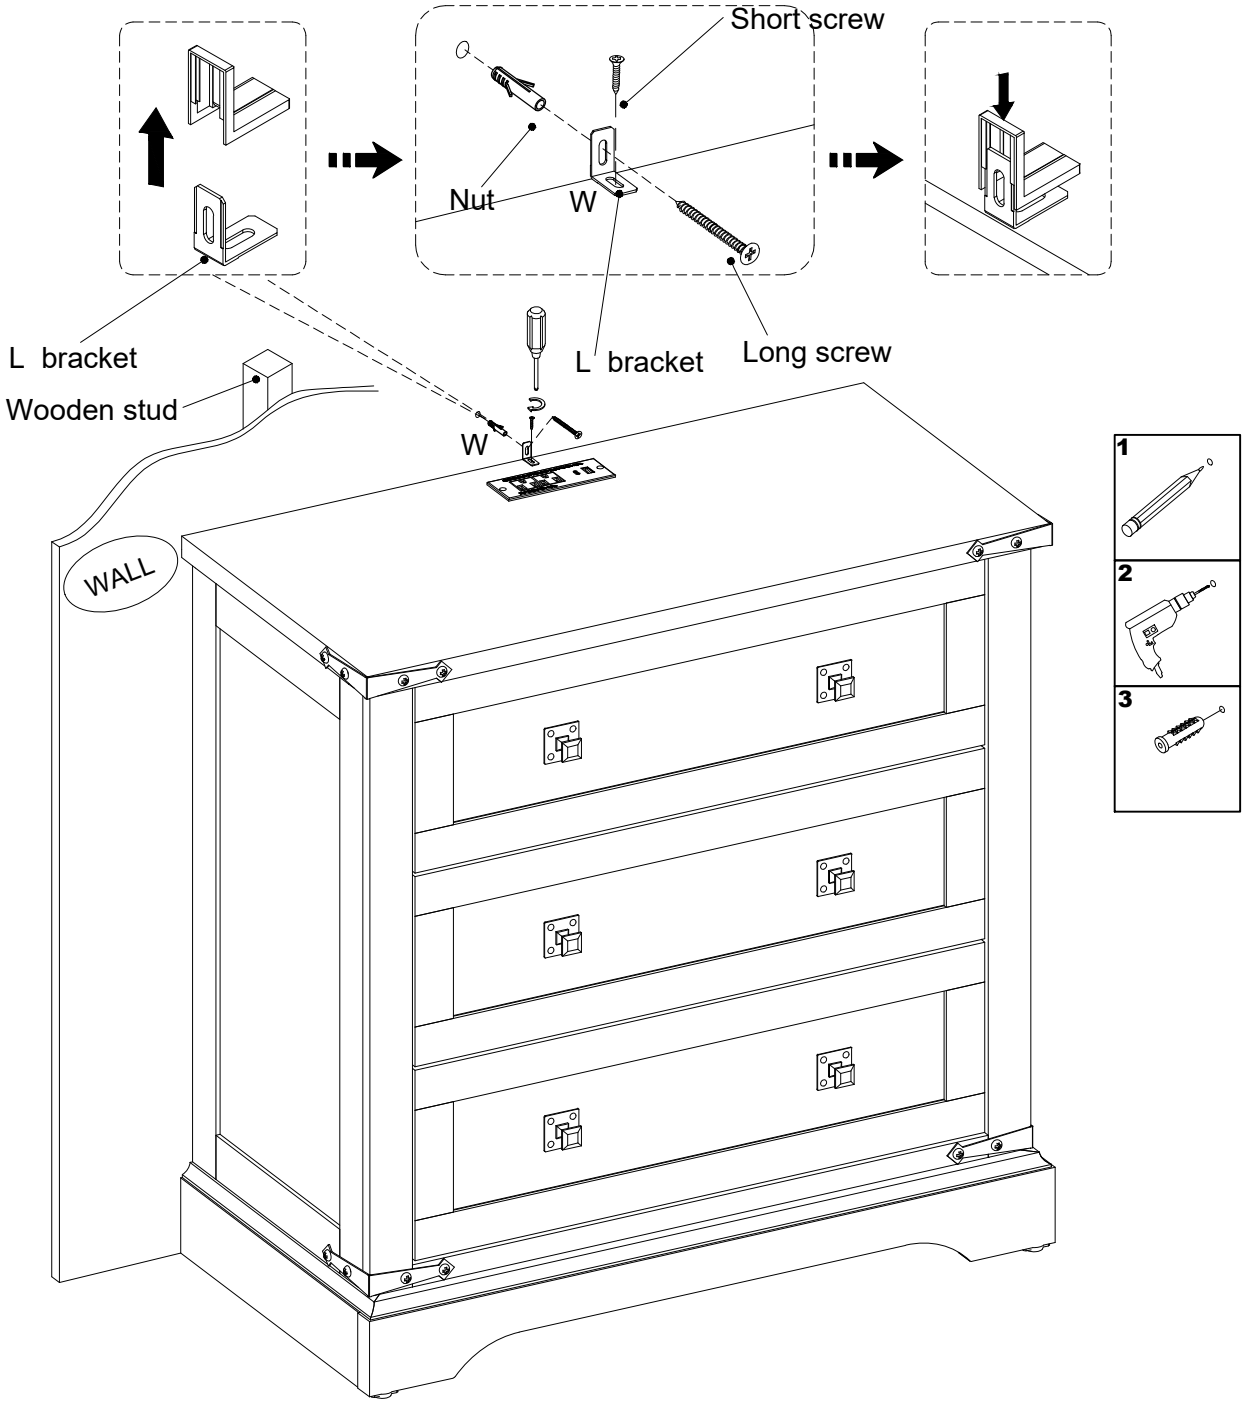

Final Assembly