

## Arctic Insulation Package Install

### Step 1

Remove all side panels.


### Step 2

Insert foam pieces in between frame uprights (Picture 1 & 2)



### Step 3

Staple/Nail/Screw the reflective wrap to the frame over the foam (Picture 3)

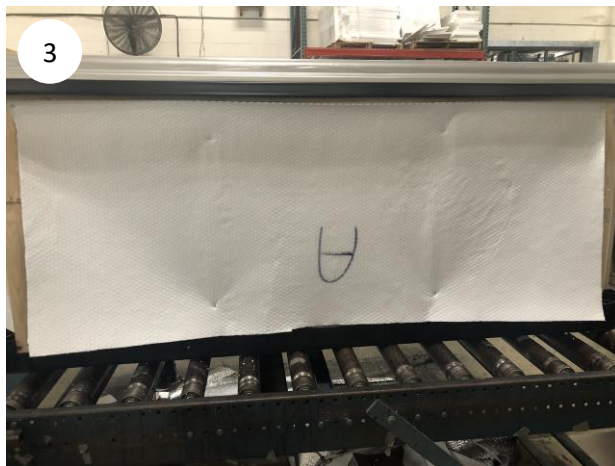

### Step 4

Re-install all side panels.