





PAPER TOWEL HOLDER INSTALLATION GUIDE

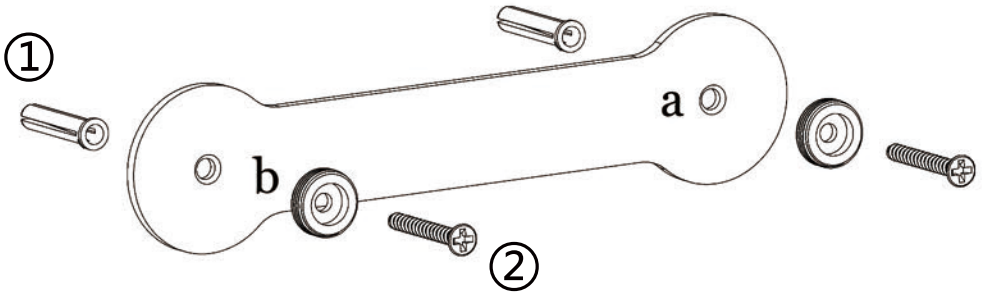

1. After drilling the hole in front of the 6mm bit, drive the pellets.
2. Arrange the bottom plate a and accessory b in the order shown in the figure, and then fix them on the perforated rubber granules with screws

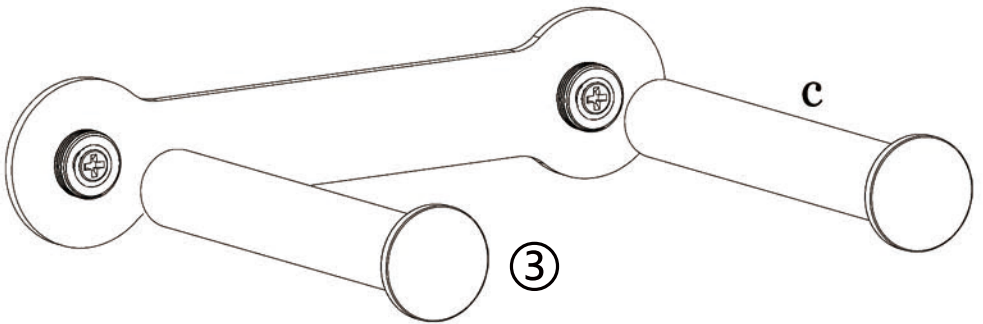

3. Rotate cylinder c onto b to complete the installation