



VANITY TABLE

918L-W-L, 918L-B-L INSTALLATION MANUAL

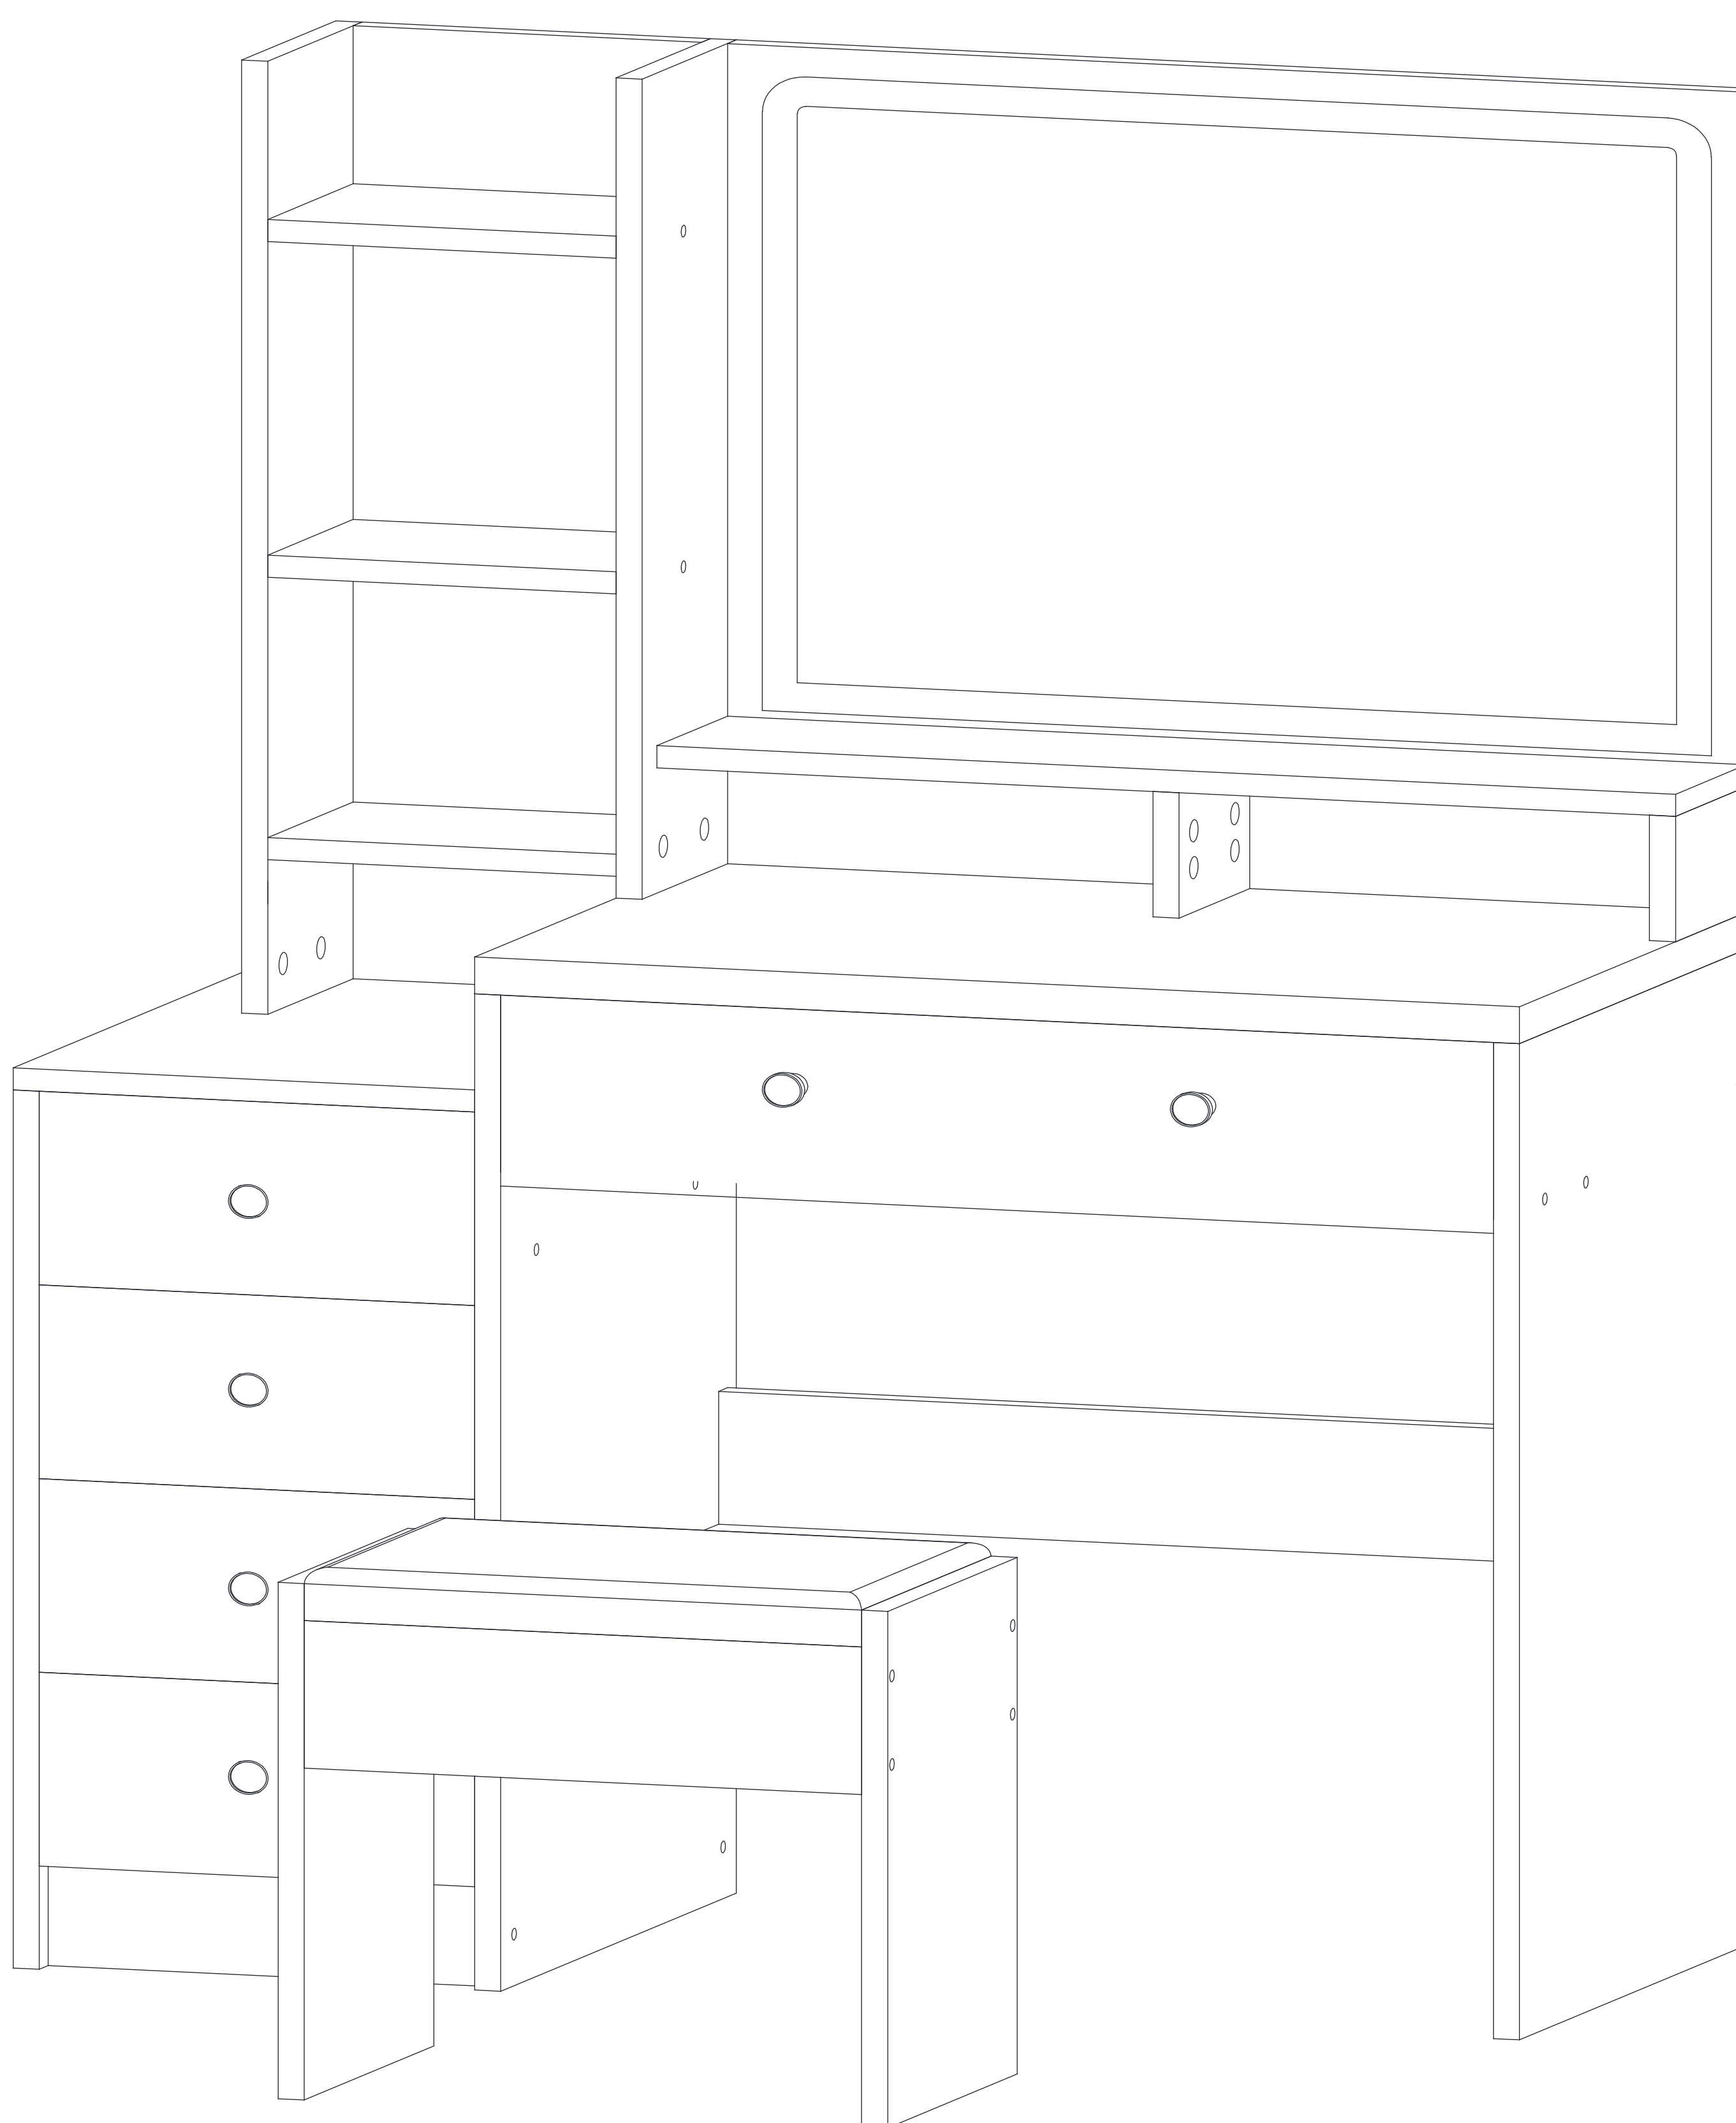



Before assembly please scan the code to get the installation video.

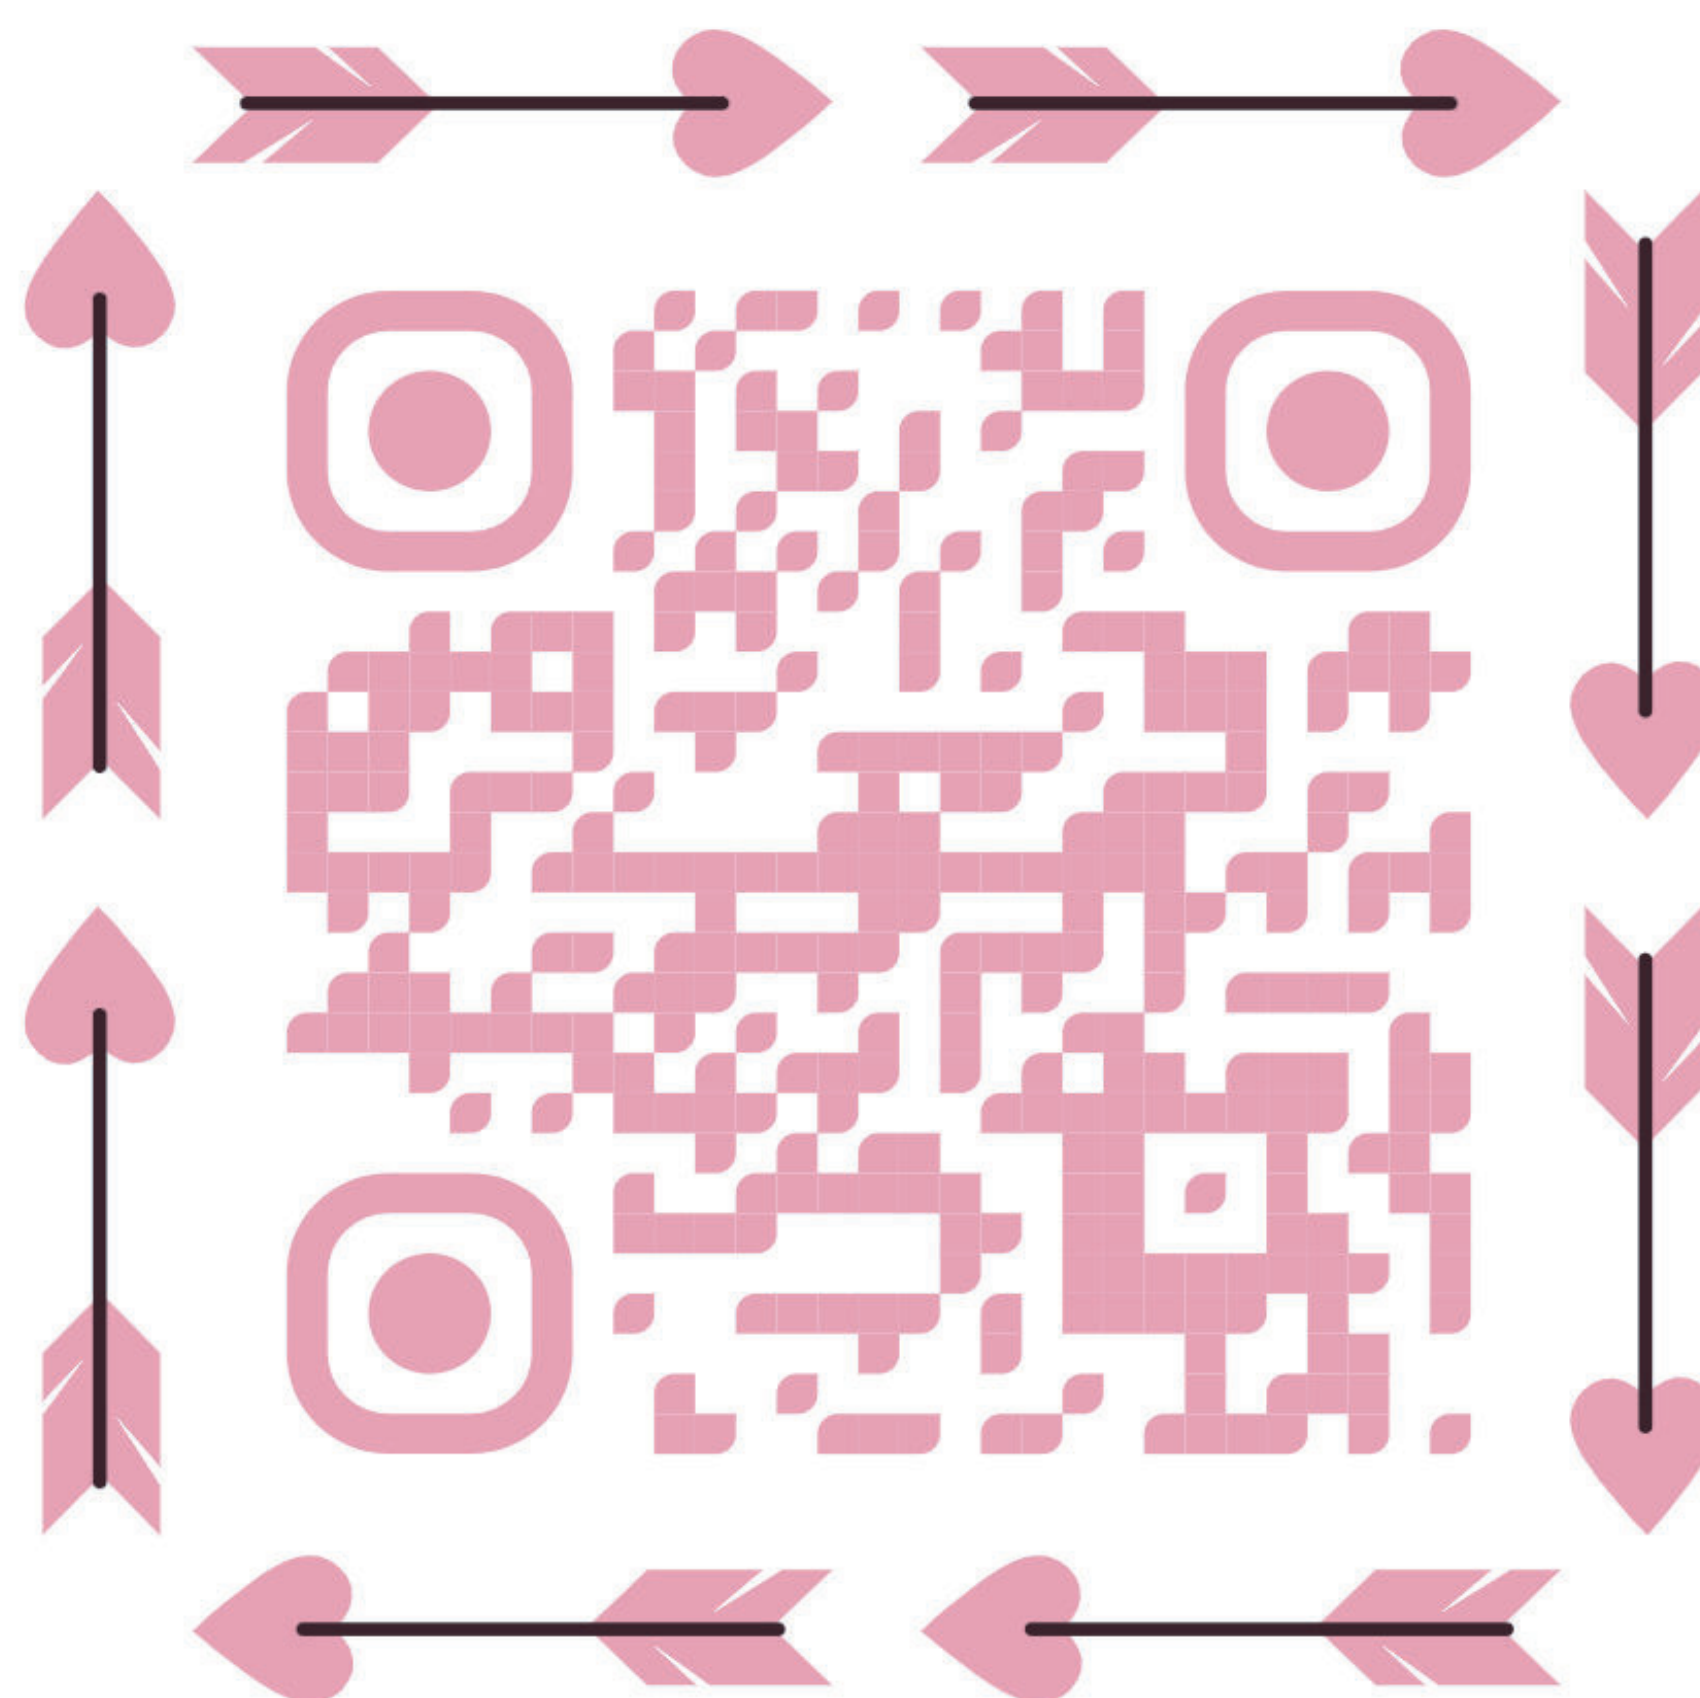


How to fix the mirror light problem?
please scan the code to get the video

Also note that:

1. Screw C is a drawer positioning pin that prevents the drawer from falling off when opened. After installation, please confirm that all positioning screws C have been installed.



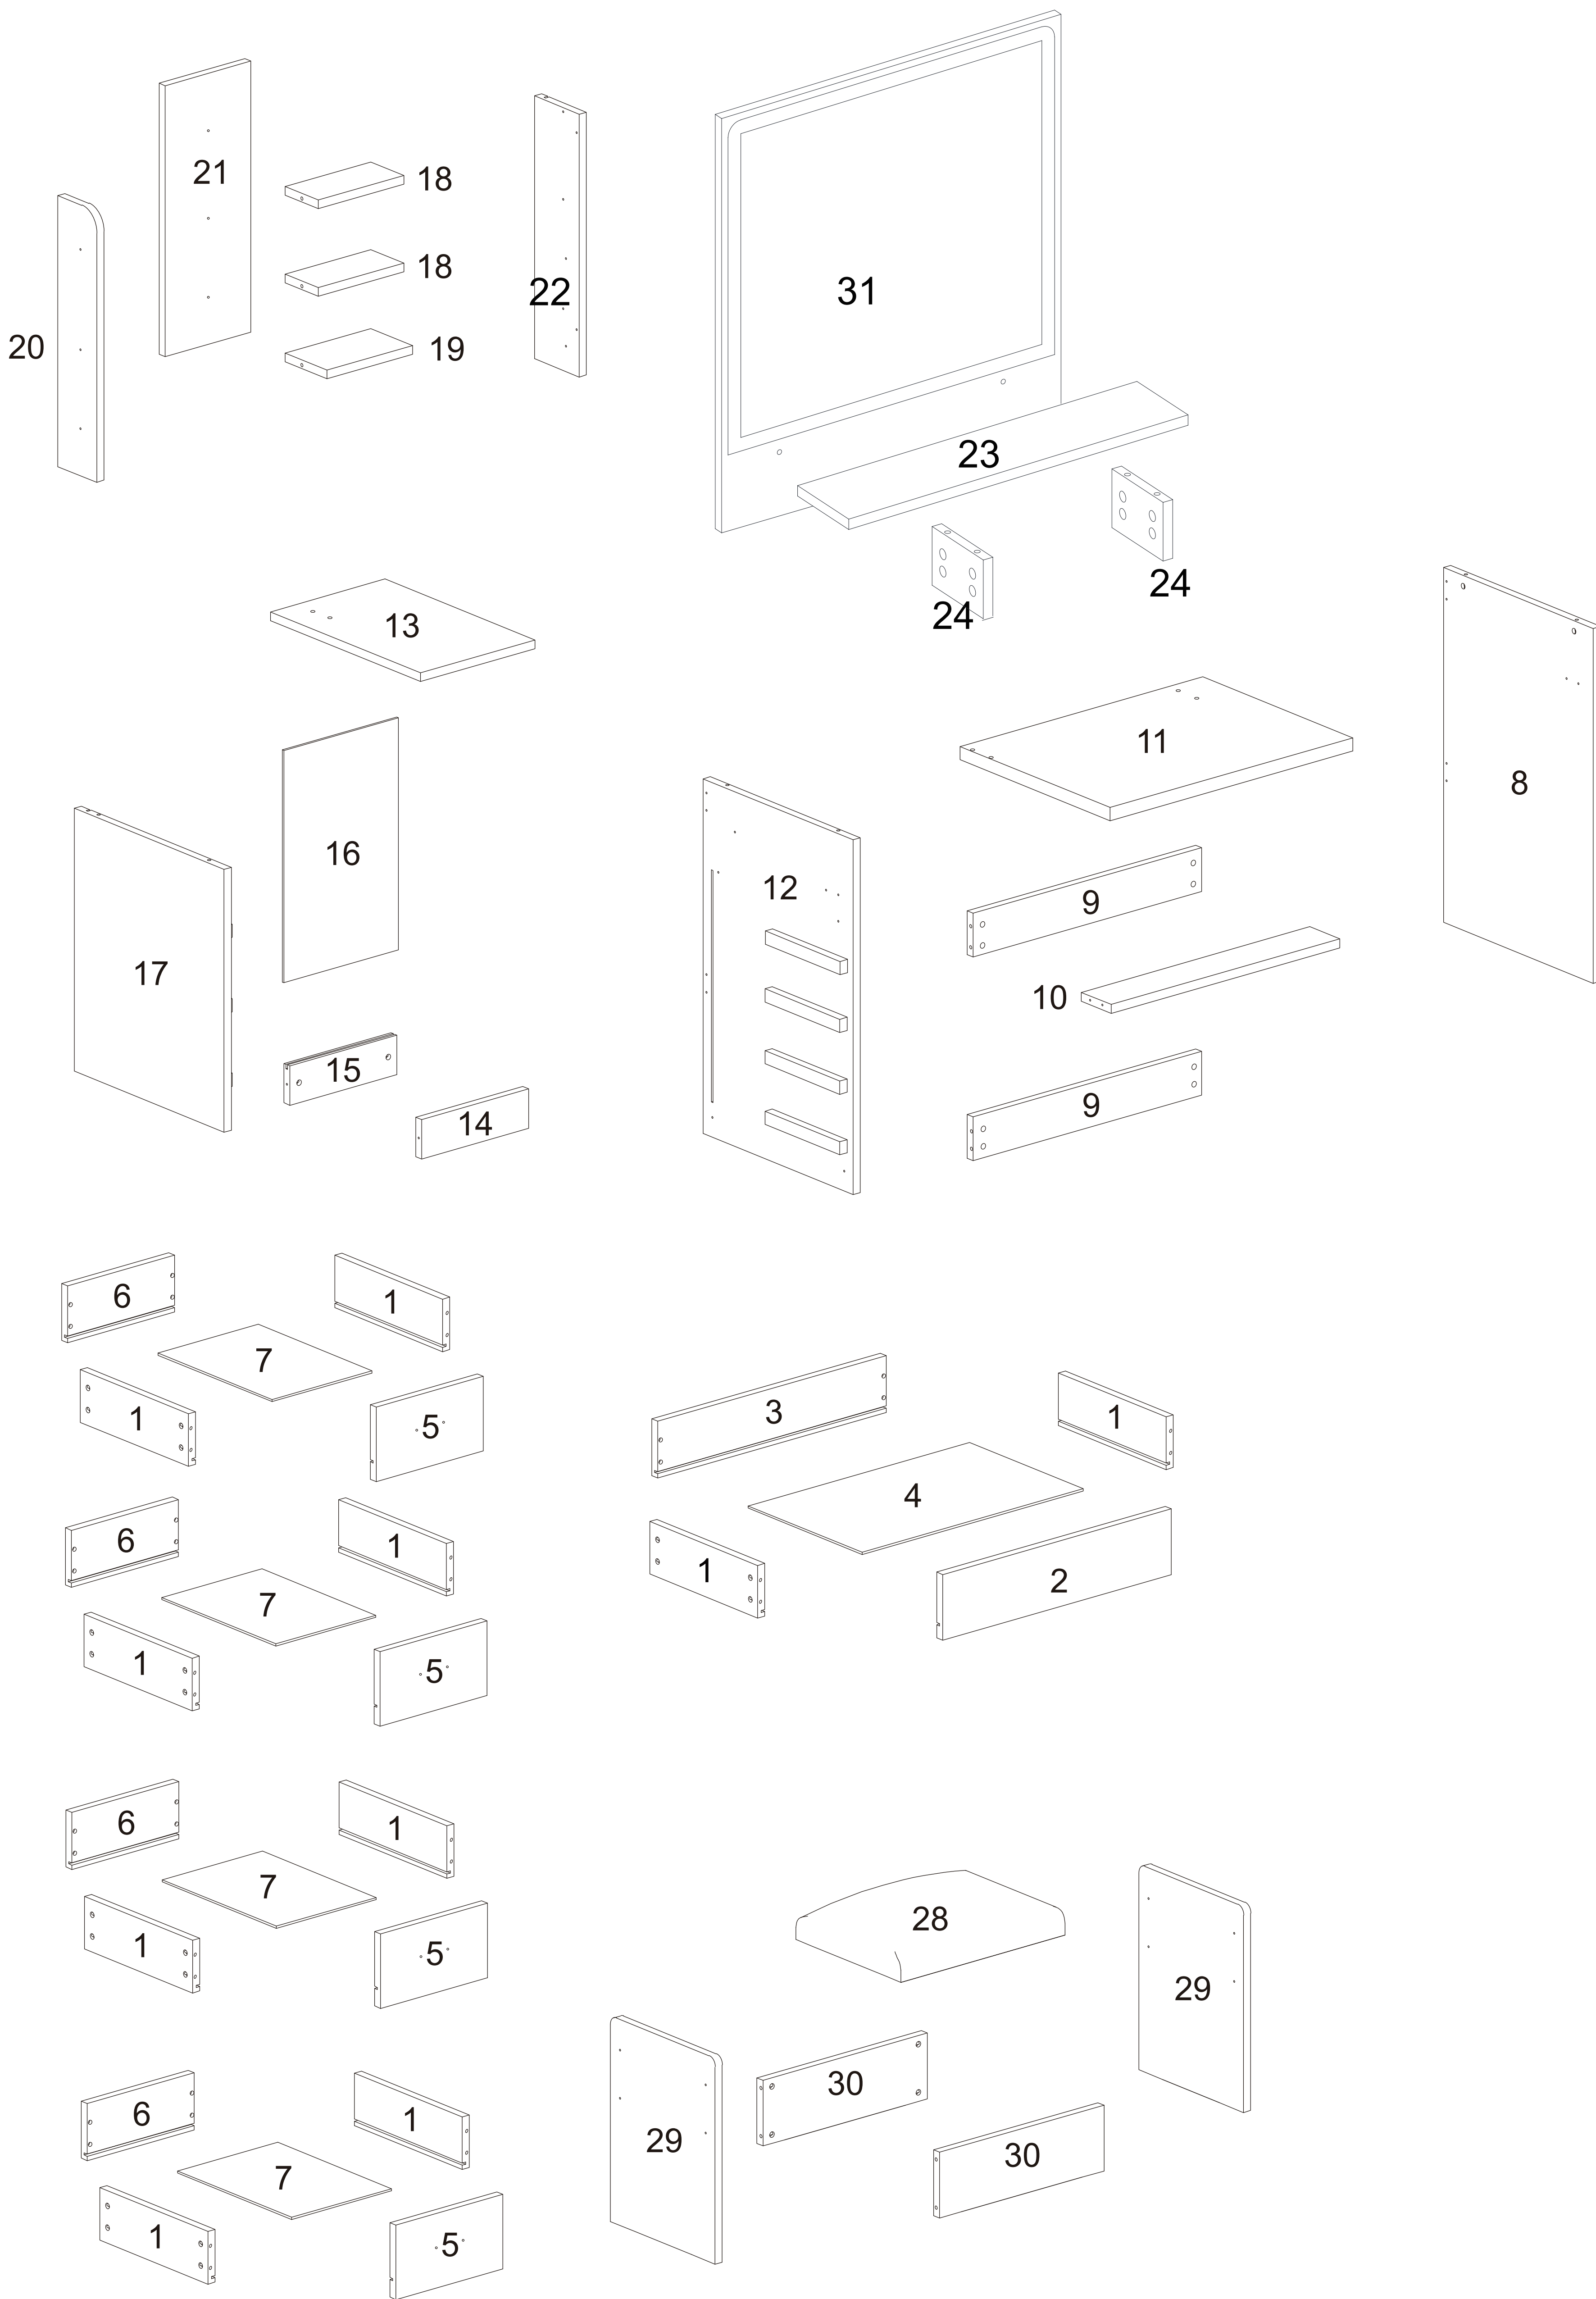

1 - x10	6 - x4	11 - x1	16 - x1	21 - x1		31 - x1
2 - x1	7 - x4	12 - x1	17 - x1	22 - x1		
3 - x1	8 - x1	13 - x1	18 - x2	23 - x1	28 - x1	
4 - x1	9 - x2	14 - x1	19 - x1	24 - x2	29 - x2	
5 - x4	10 - x1	15 - x1	20 - x2		30 - x2	




1 -x10



2 -x1



3 -x1

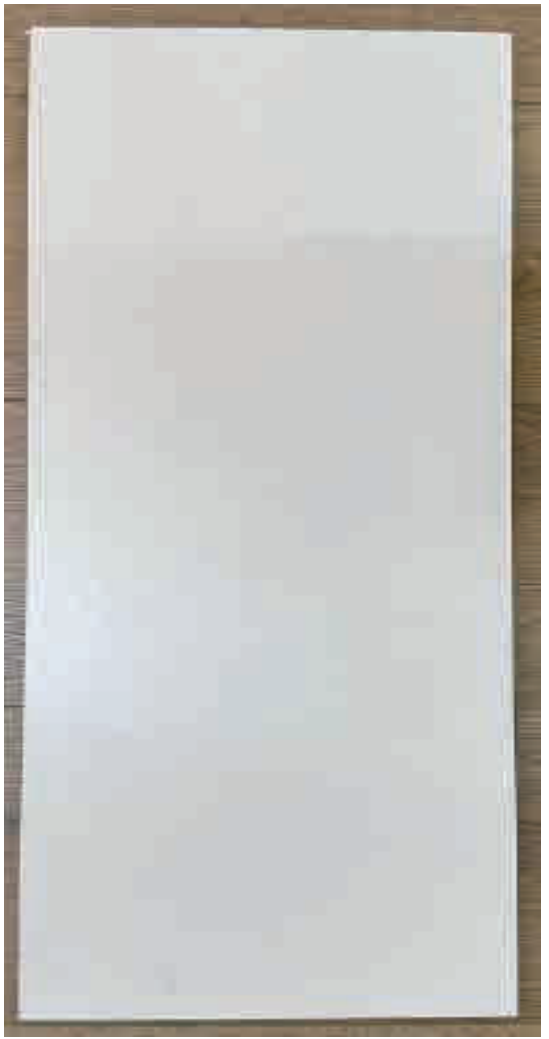


4 -x1




5 -x4



6 -x4

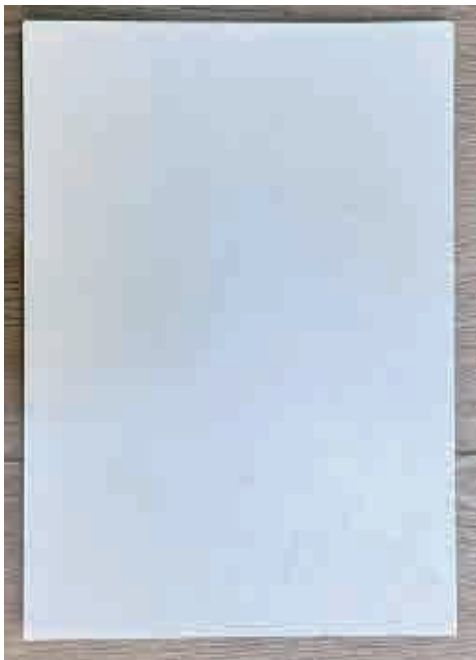

7 -x4

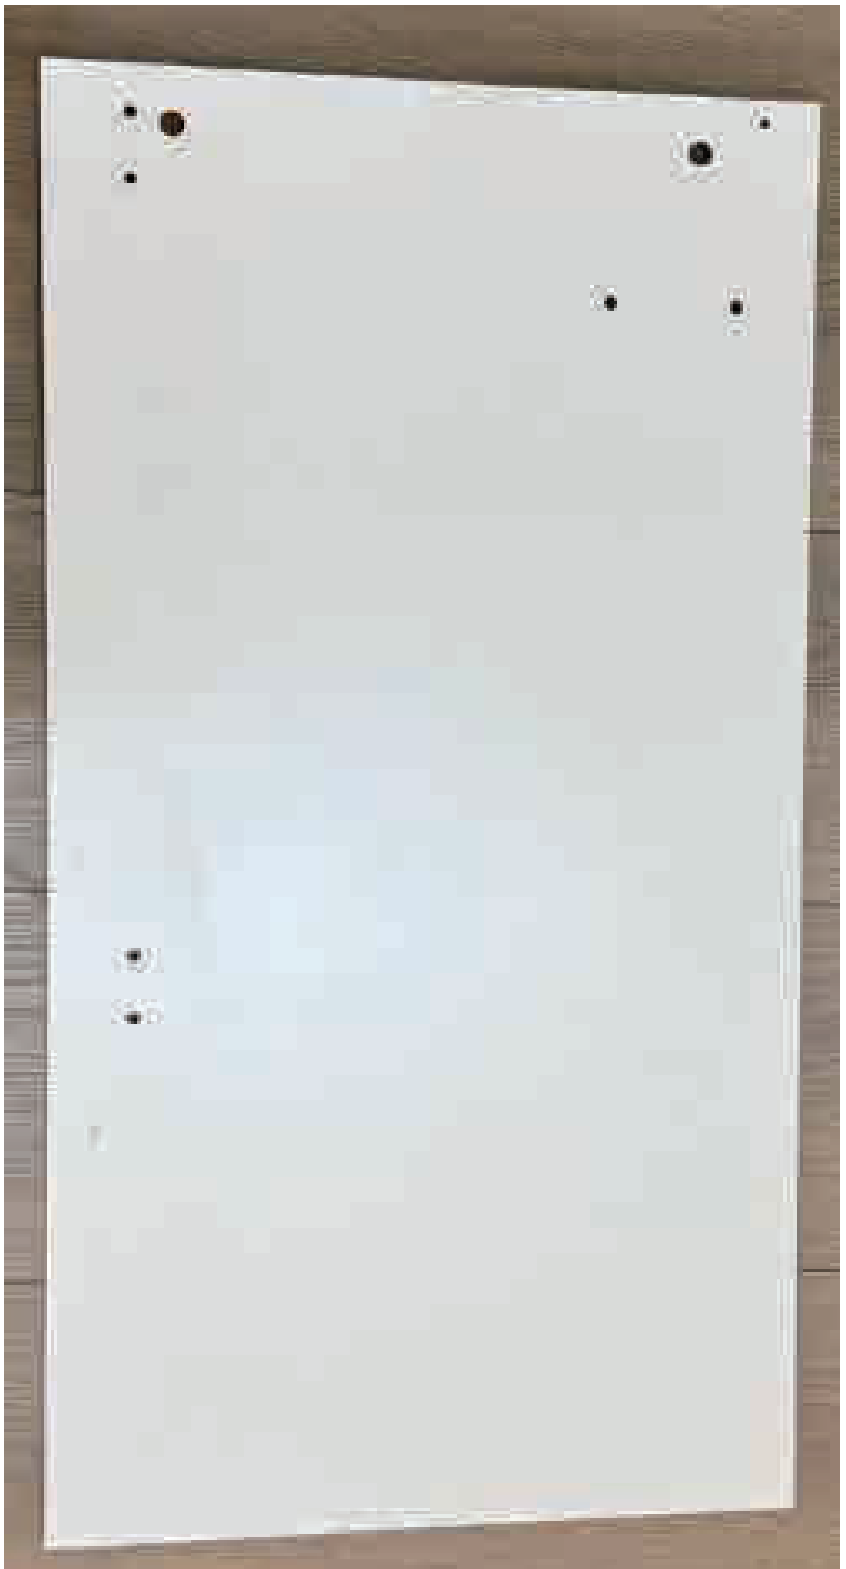


8 -x1



9 -x2




10 -x1

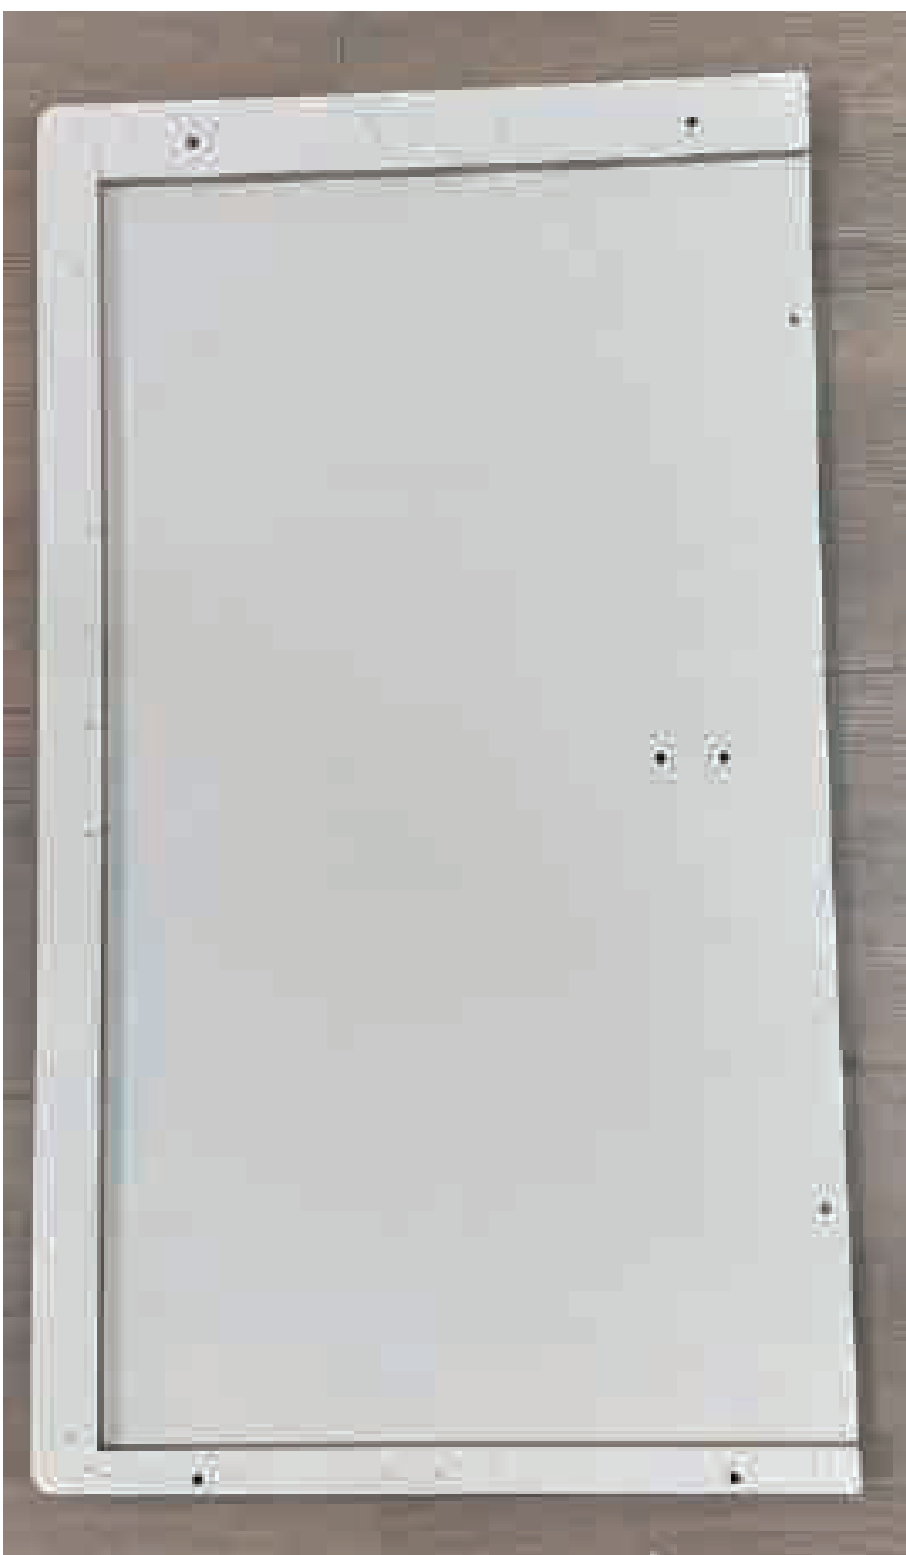

11 -x1



12 -x1

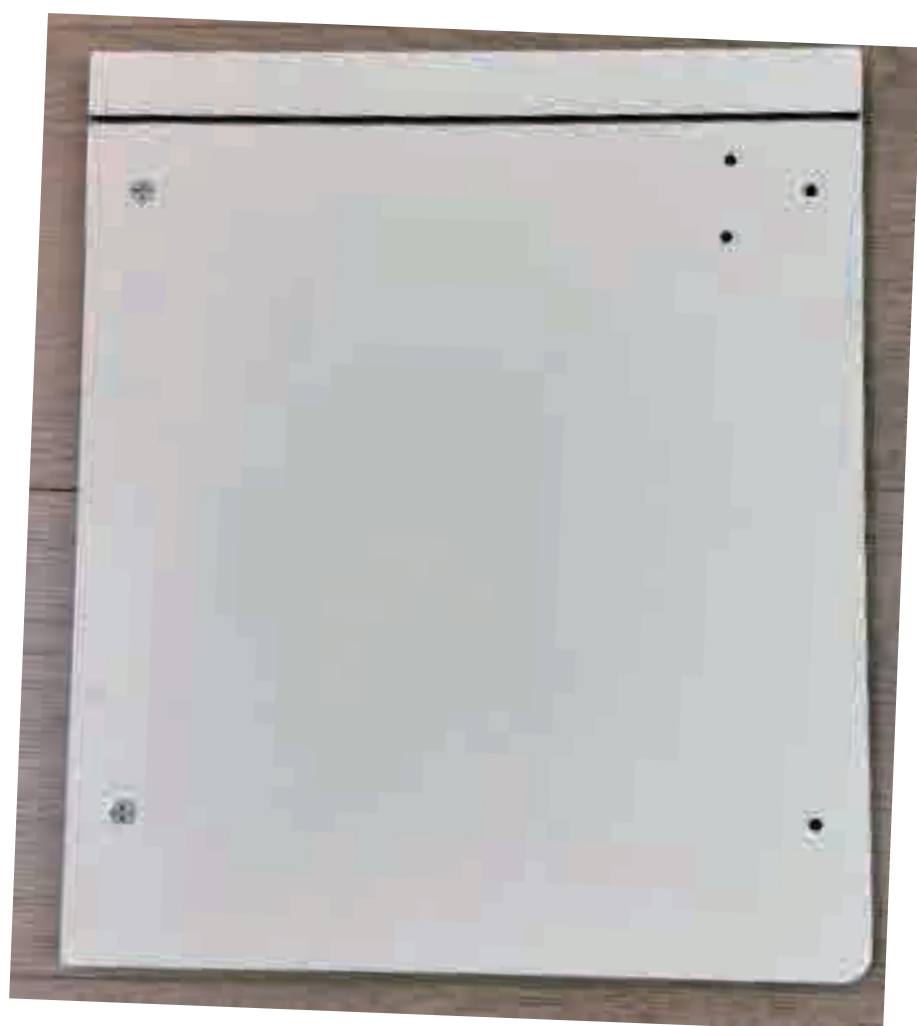

13 -x1




14 -x1



15 -x1



16 -x1

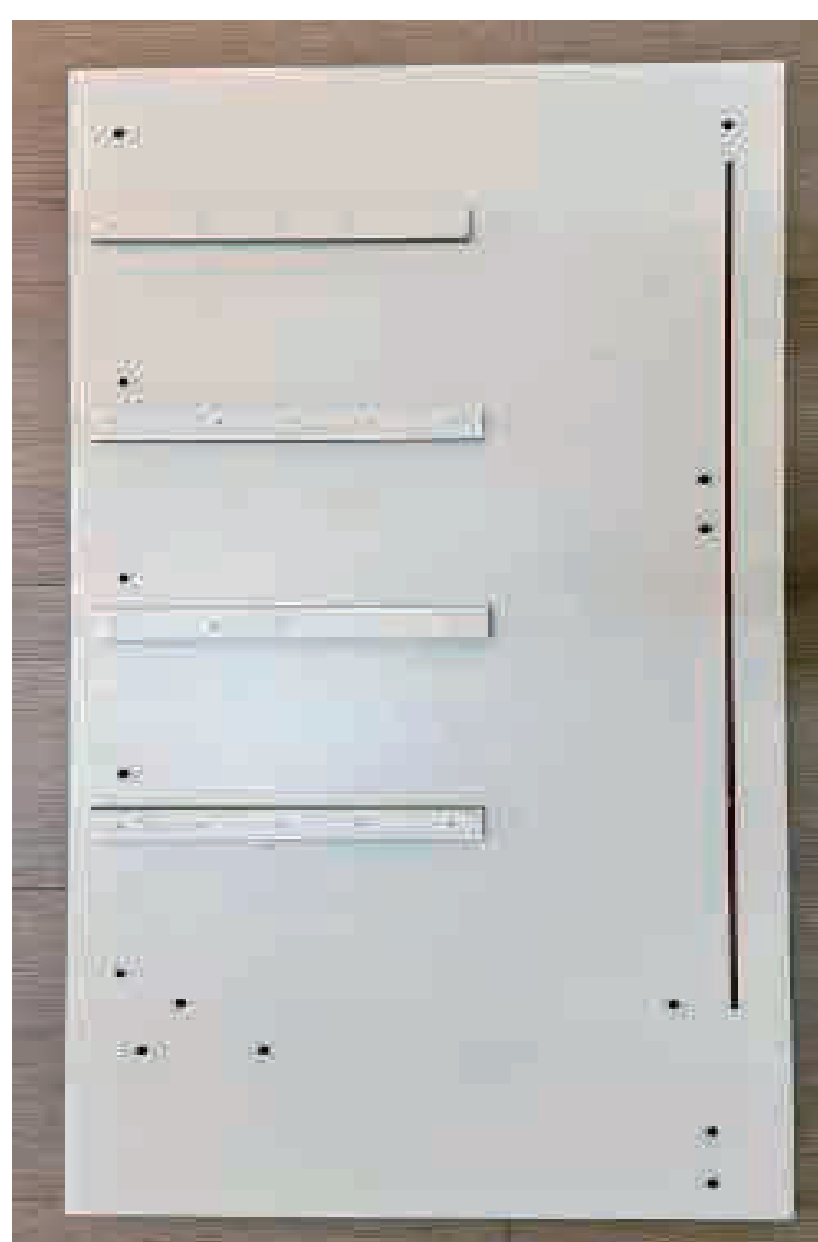


17 -x1




18 -x2



19 -x1

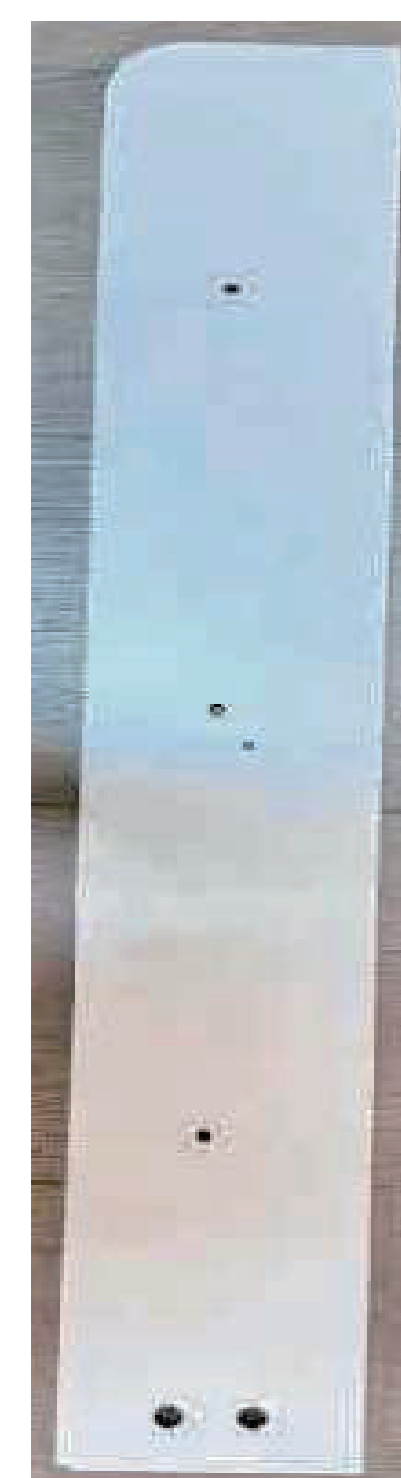

20 -x1

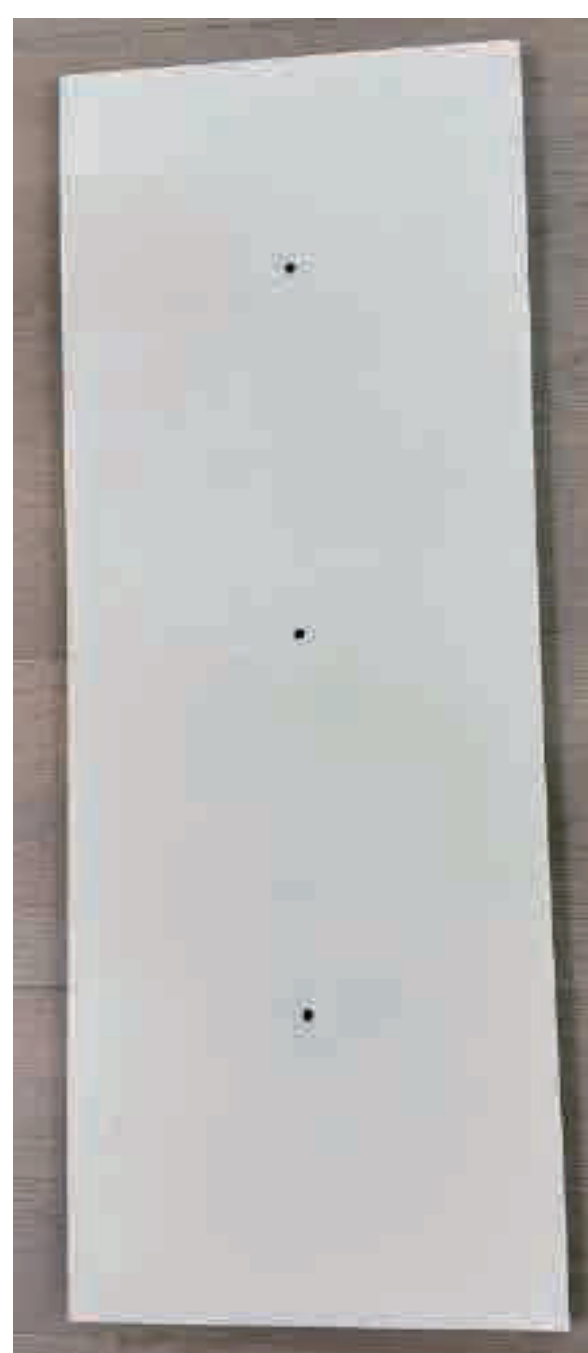


21 -x1




22 -x1




23 -x1

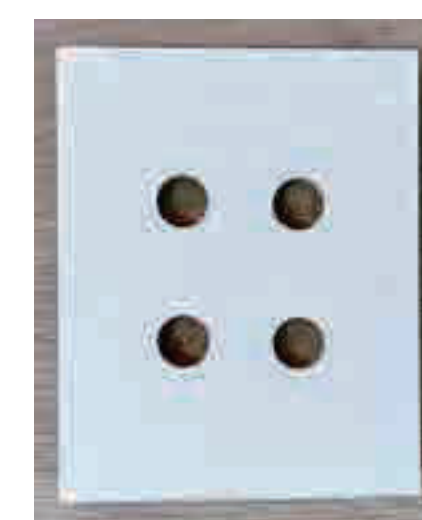

24 -x2

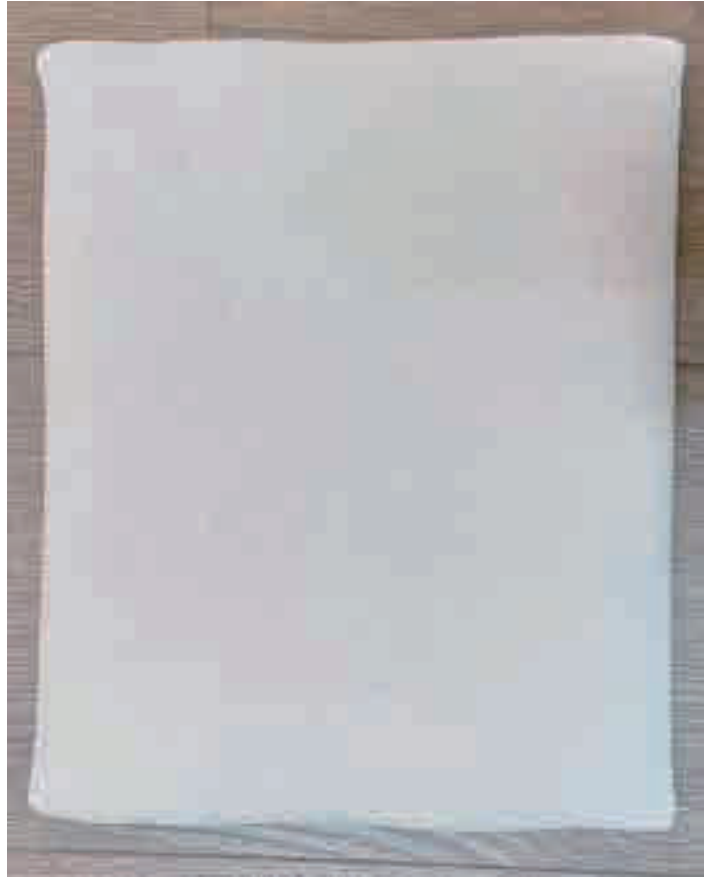

28 -x1

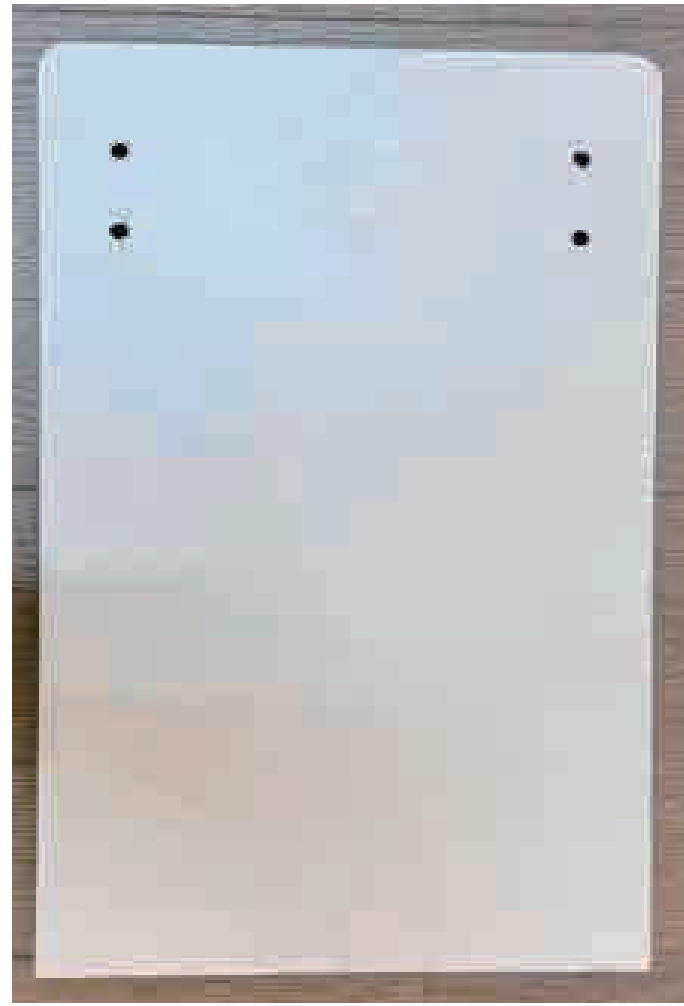

29 -x2



30 -x2



31 -x1

HARDWARE



A	2 IN 1 SCREW AND LOCK	x 46
---	--------------------------	------



B	3 IN 1 SCREW AND LOCK	x 60
---	--------------------------	------



C	DRAWER POSITIONING SCREW	x10
---	-----------------------------	-----



D	12MM SCREW	x16
---	------------	-----



E	DRAWER HANDLE	x 6
---	------------------	-----



G	L PLATE	x2
---	---------	----



N	POWER PLUG	x1
---	------------	----




O	I PLATE	x2
---	---------	----

For luxury version and
basic version


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

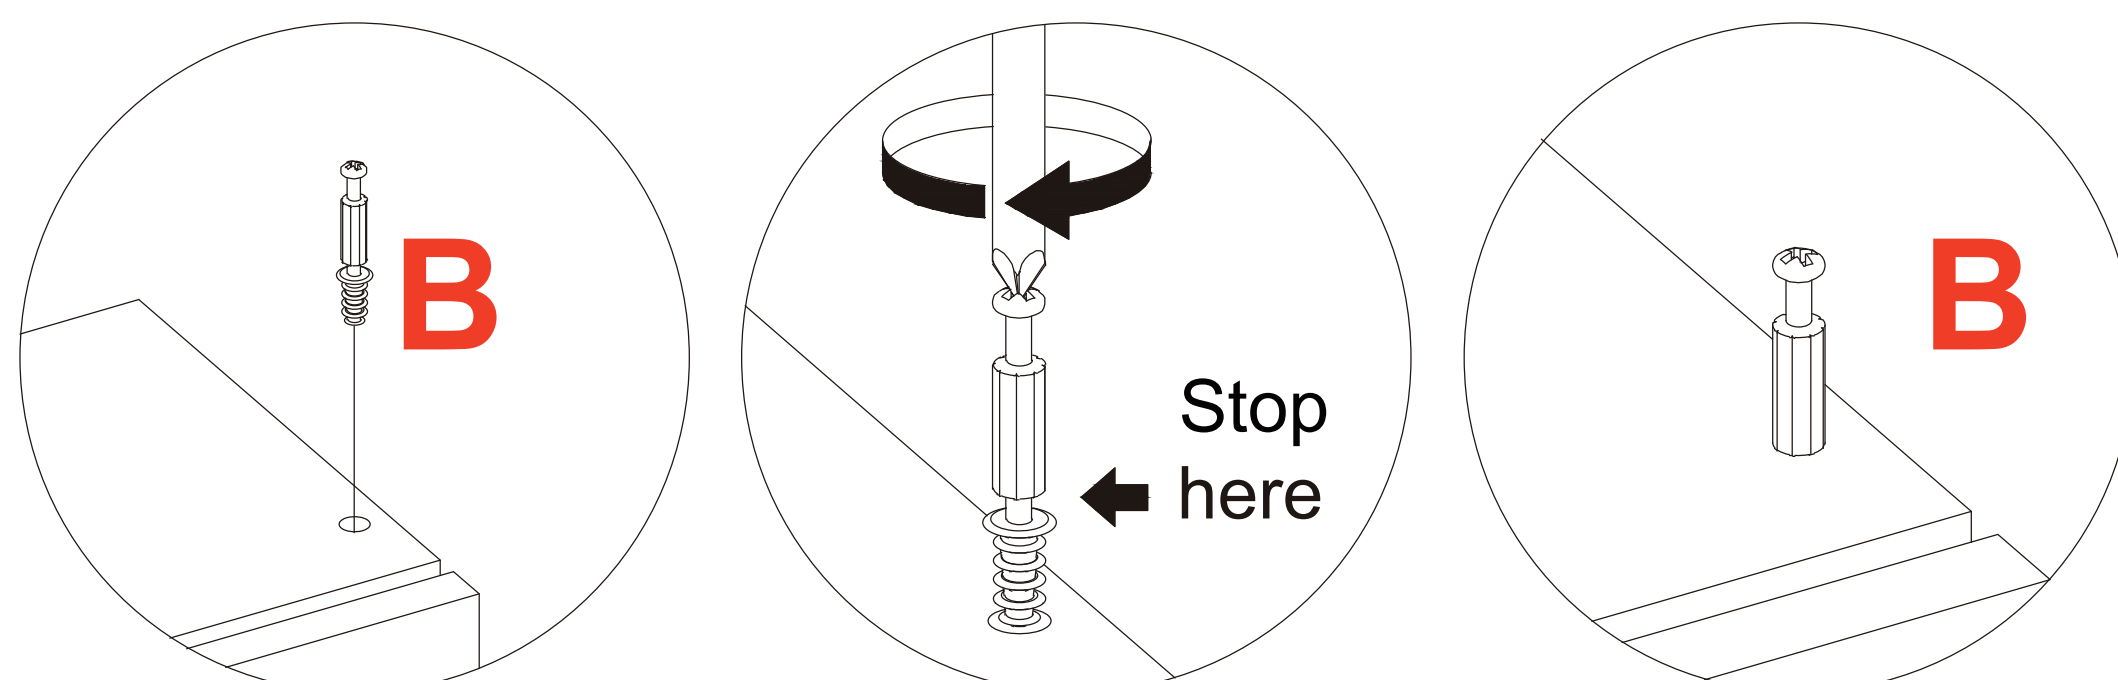


2. Check the Nut direction



This direction of the marked nut is consistent with the direction in which the screw is inserted

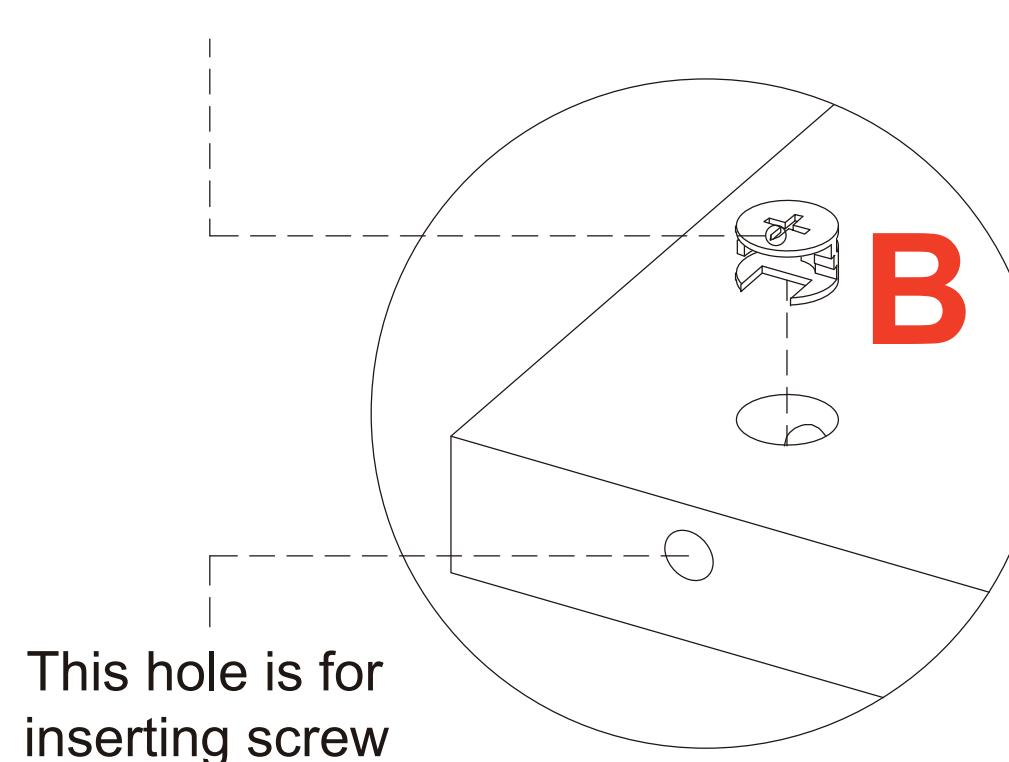

3. Installation on the board with fixing screws



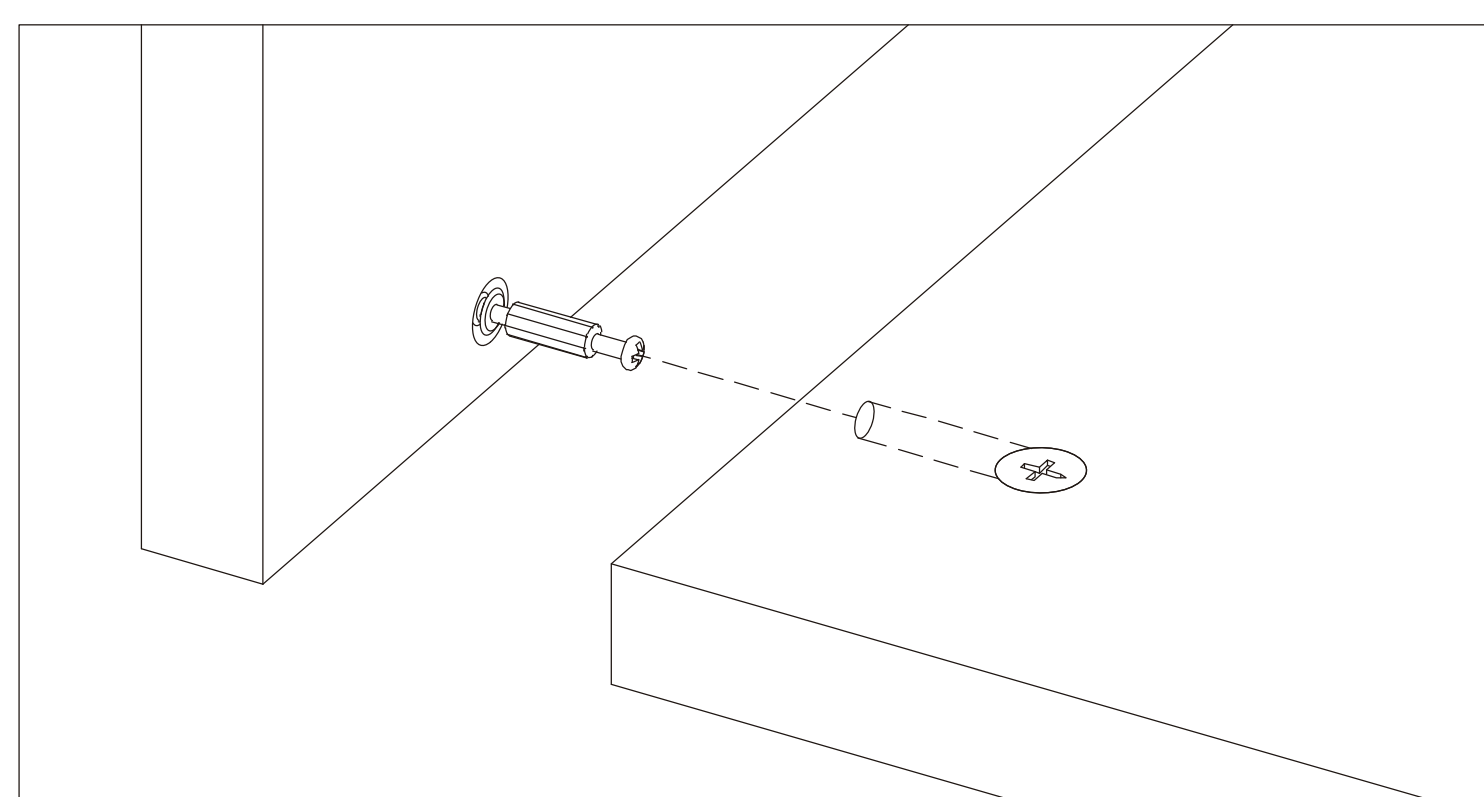


3. Rotate slowly until it stops


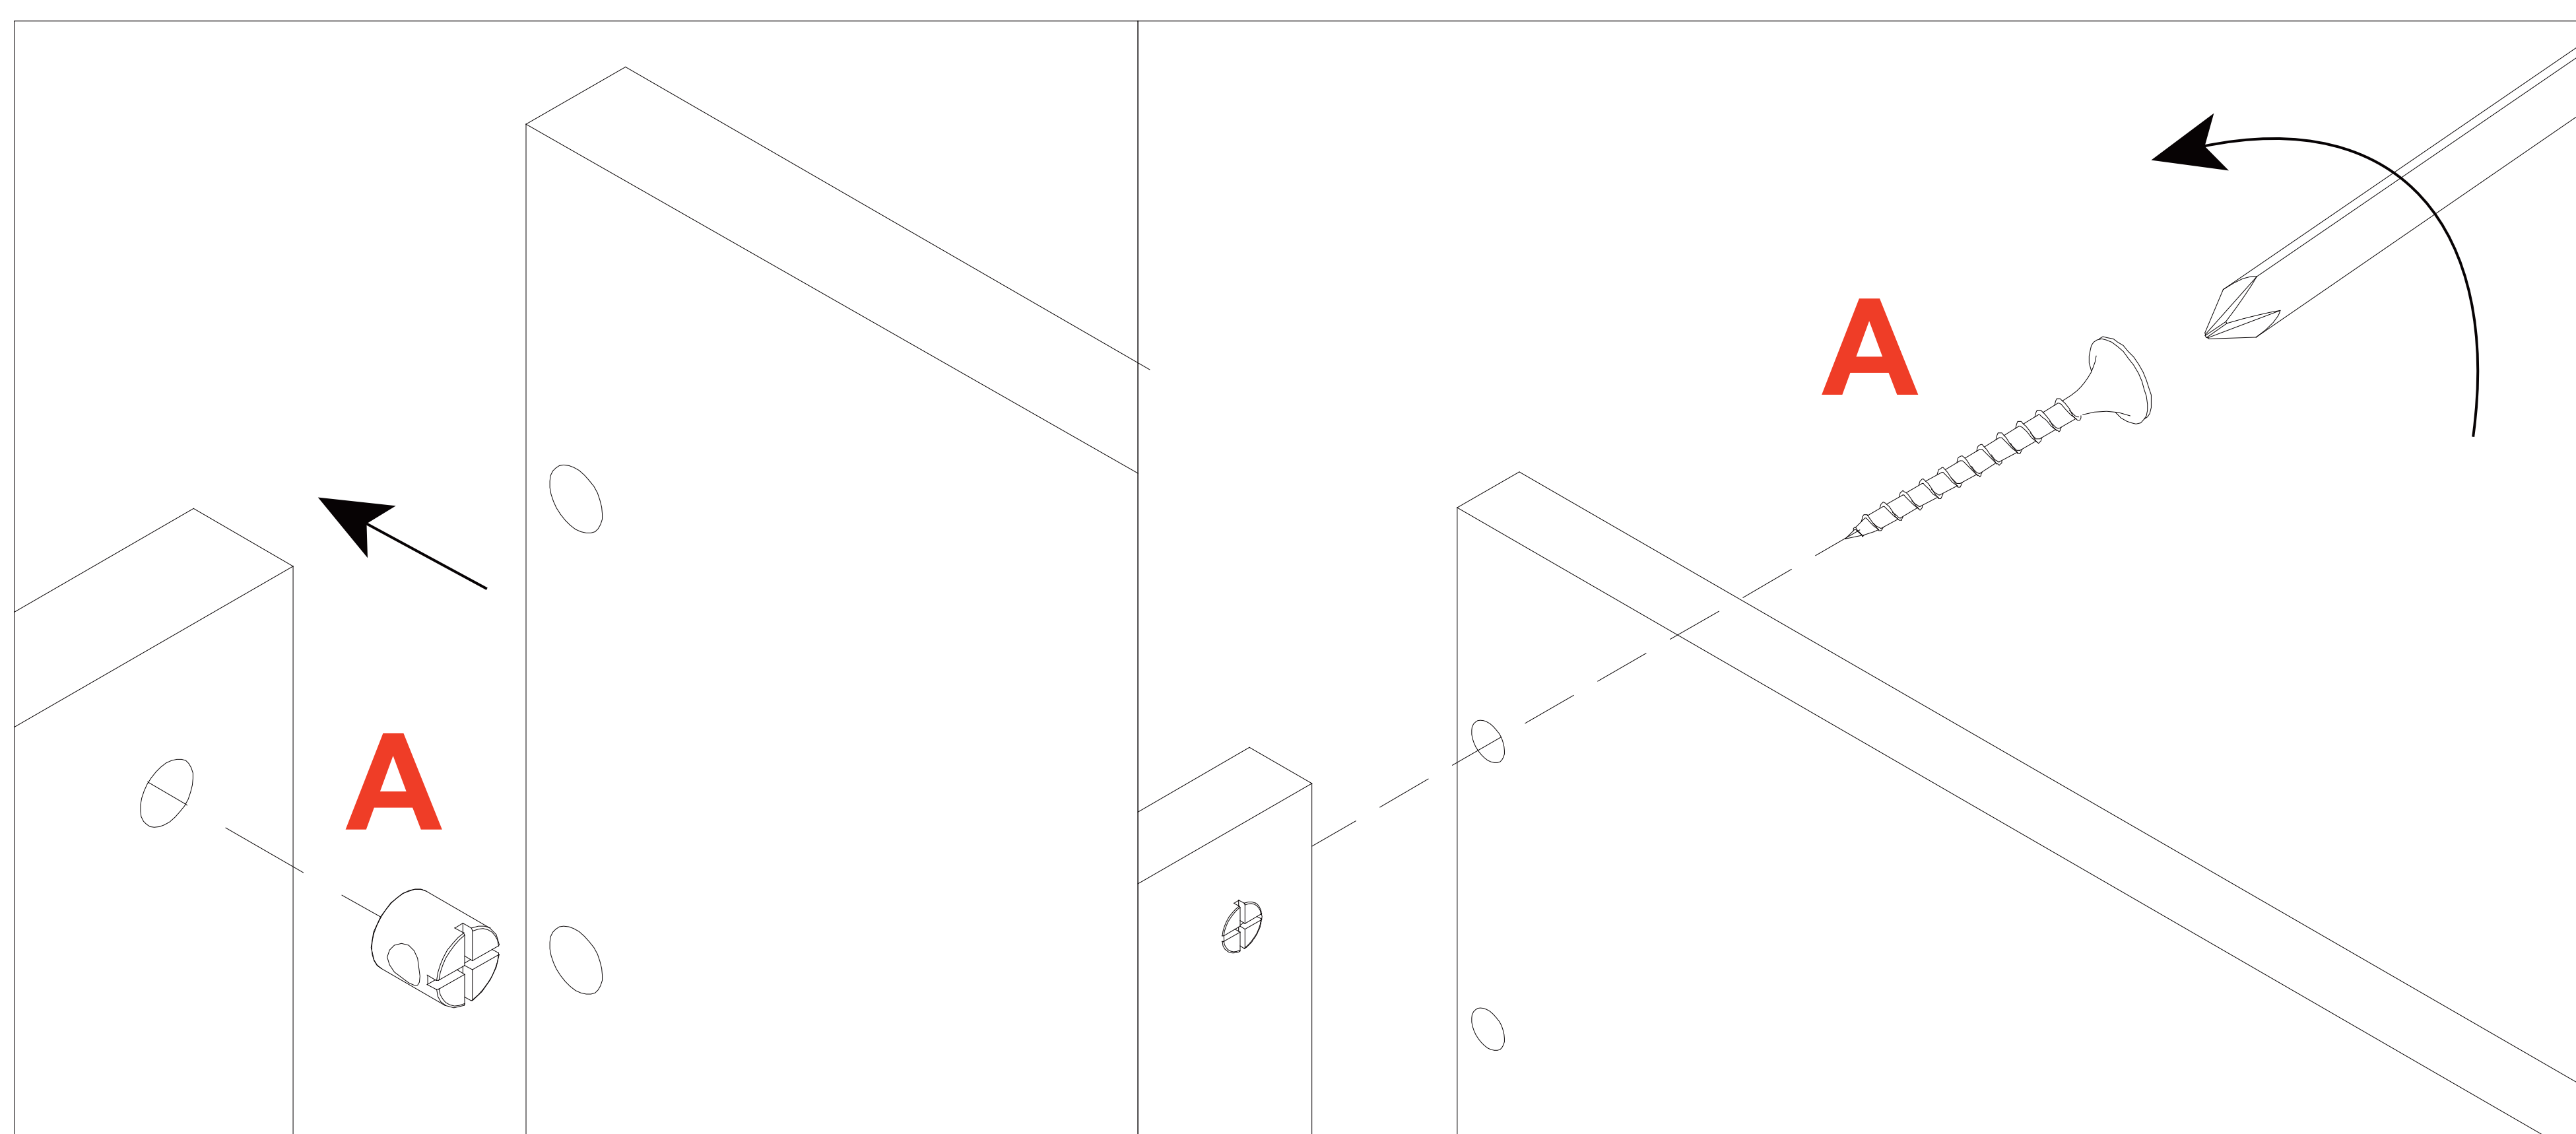
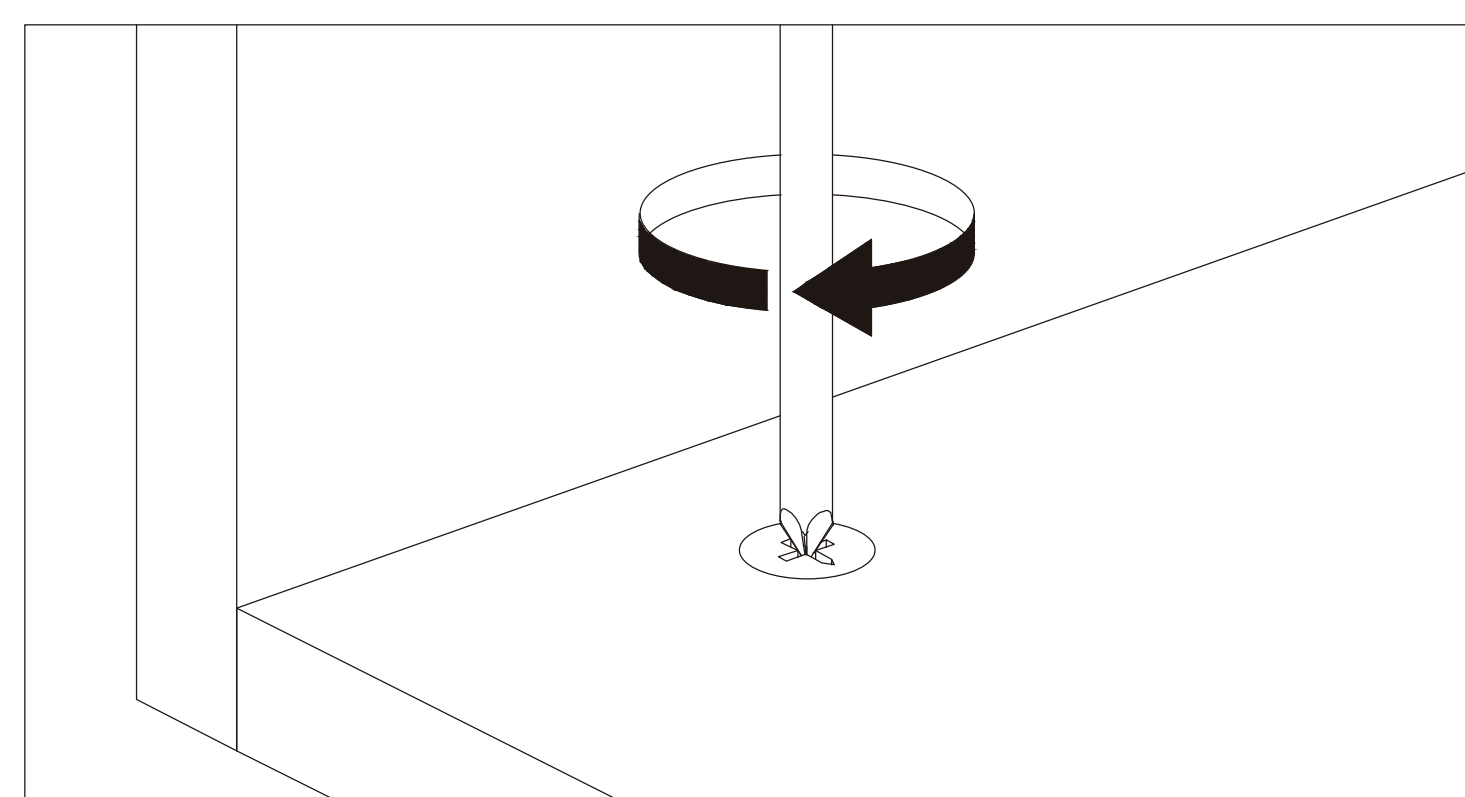


Step 01


pick up ①x2, ②x1, ③x1, ④x1 and ①x8, ⑤x4, ⑥x4, ⑦x4

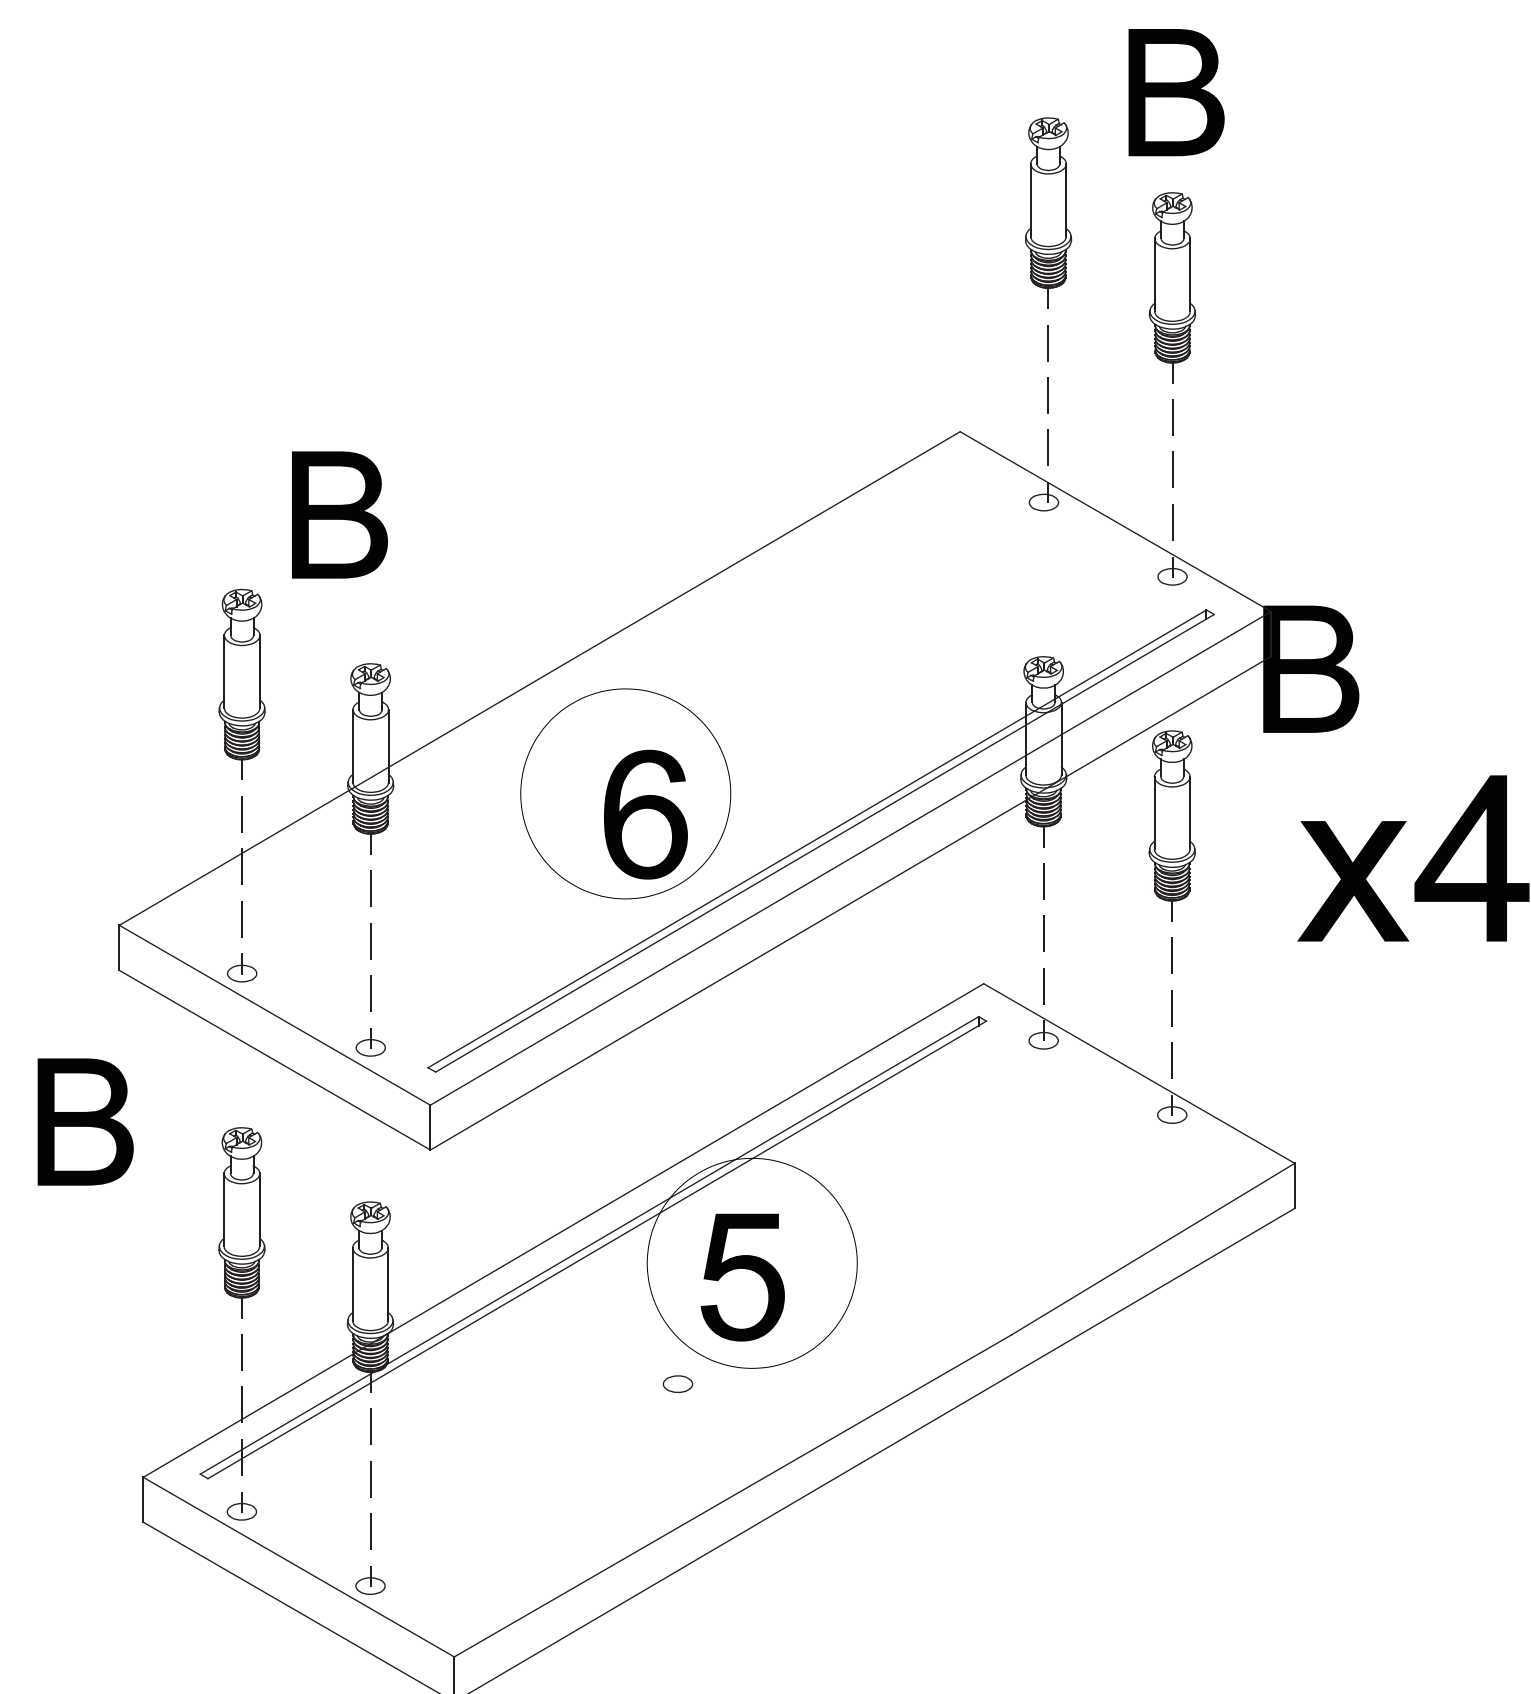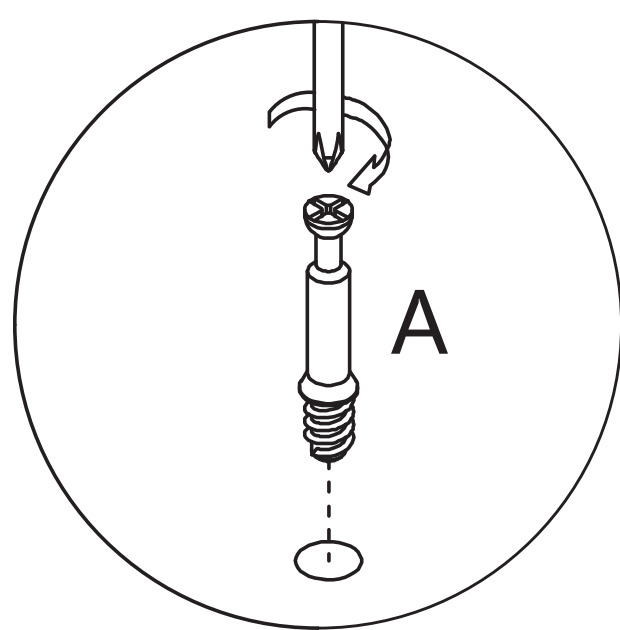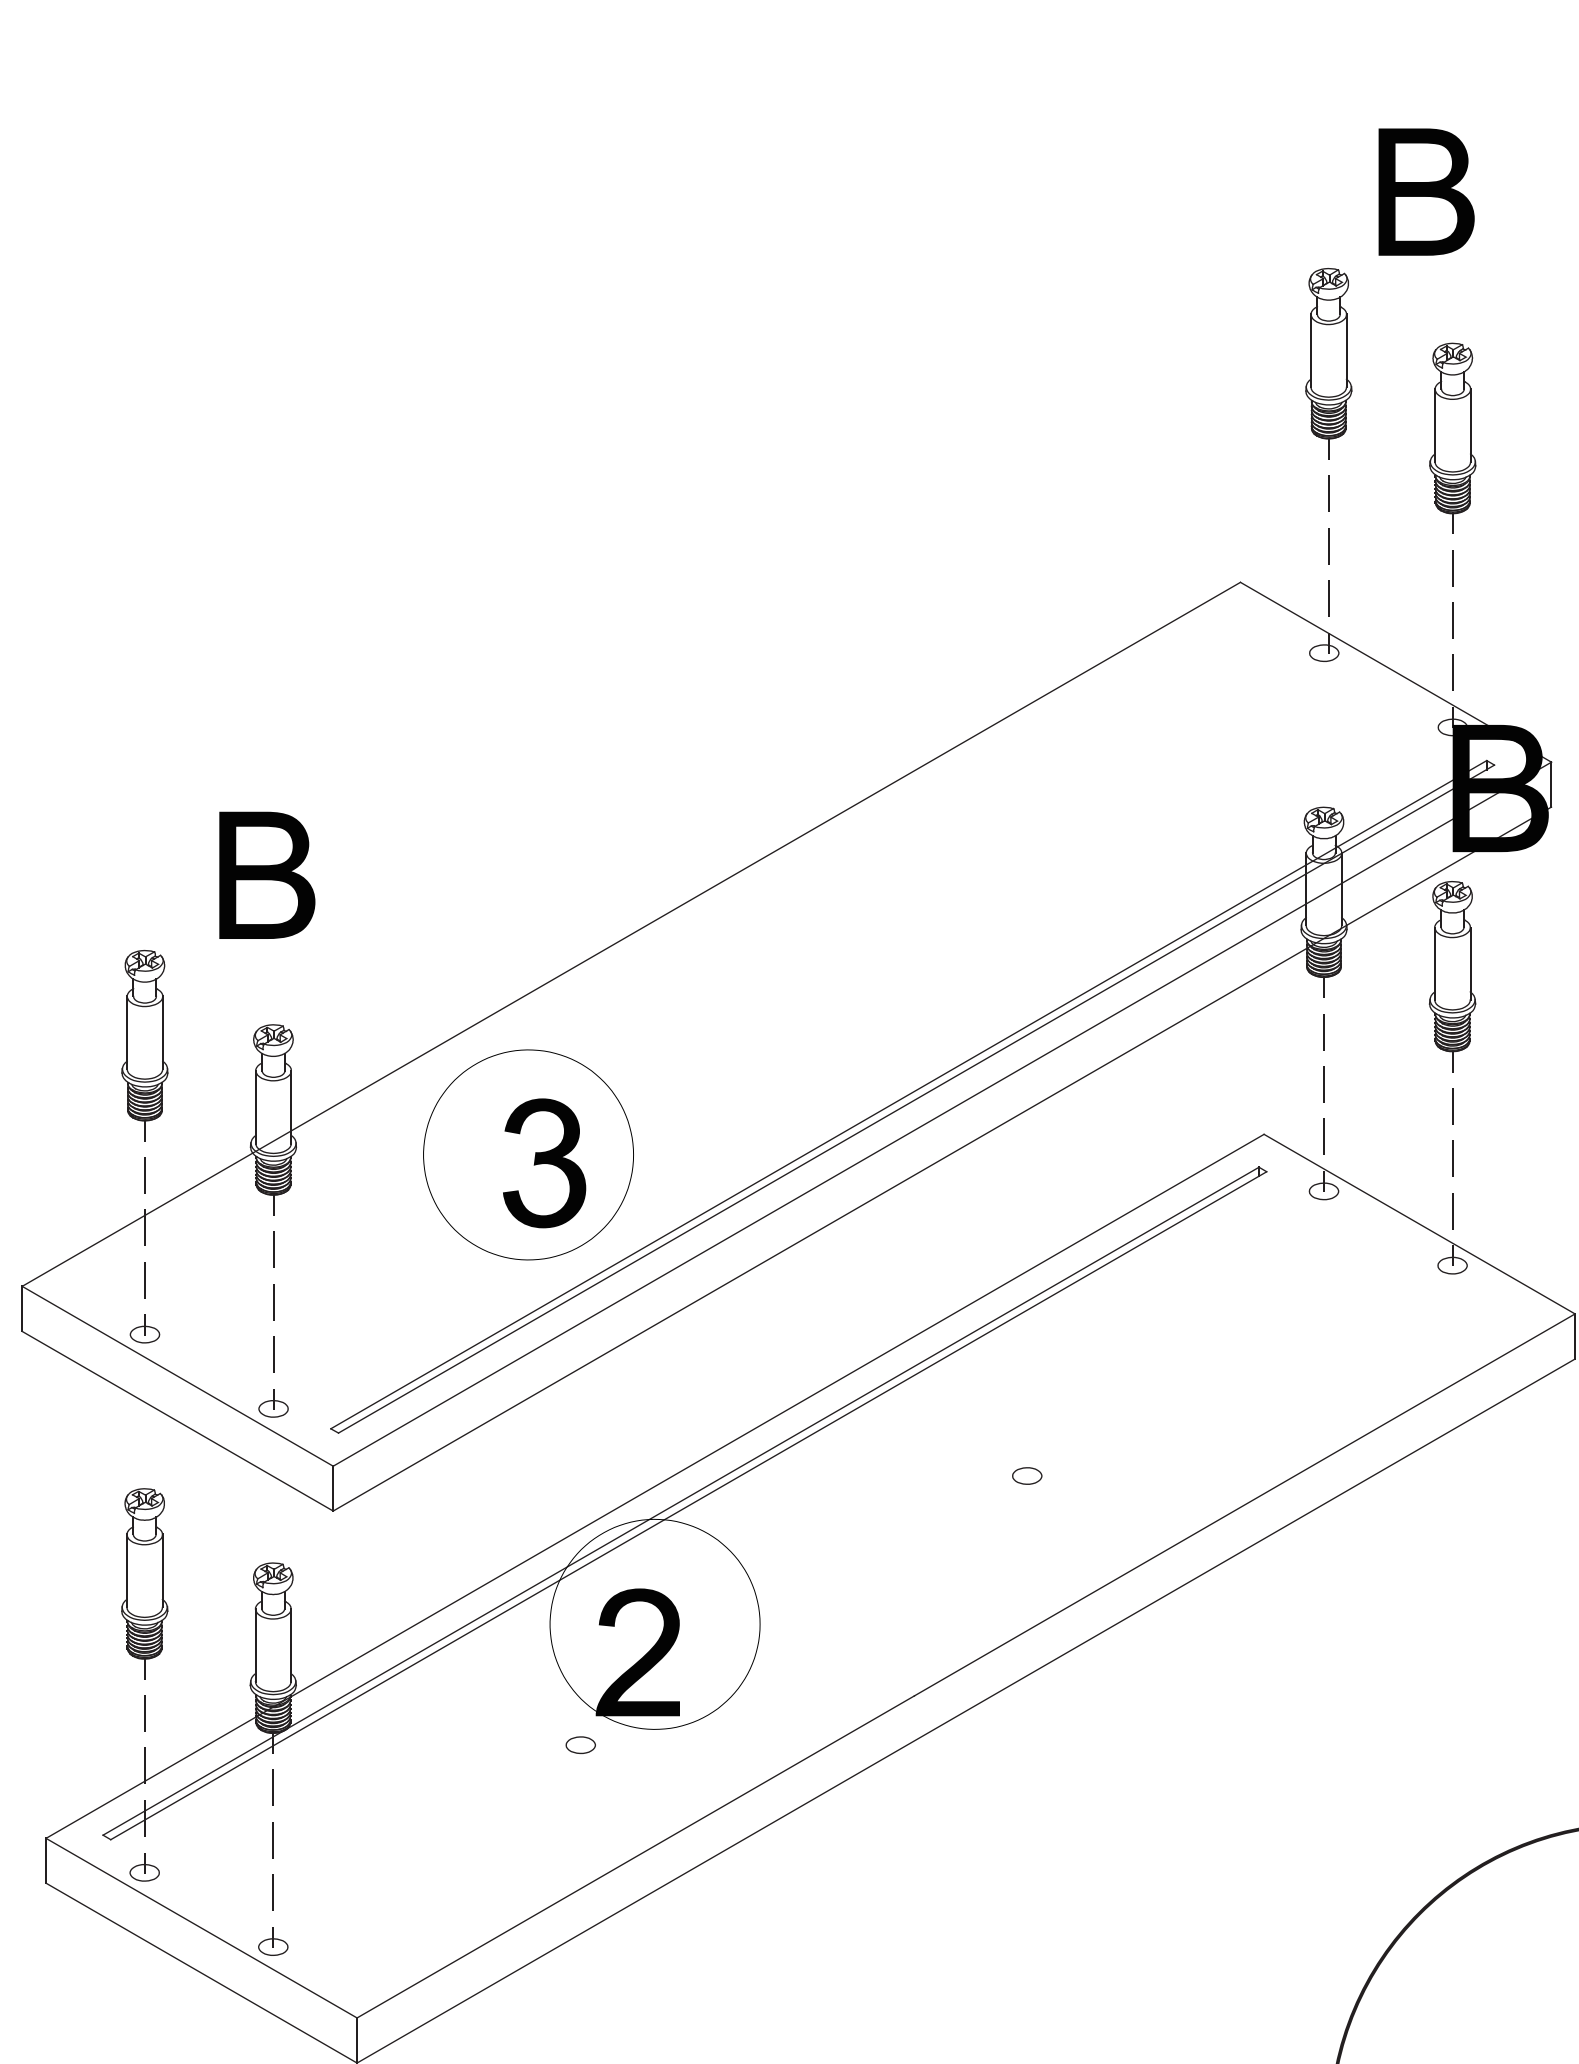


Step 02

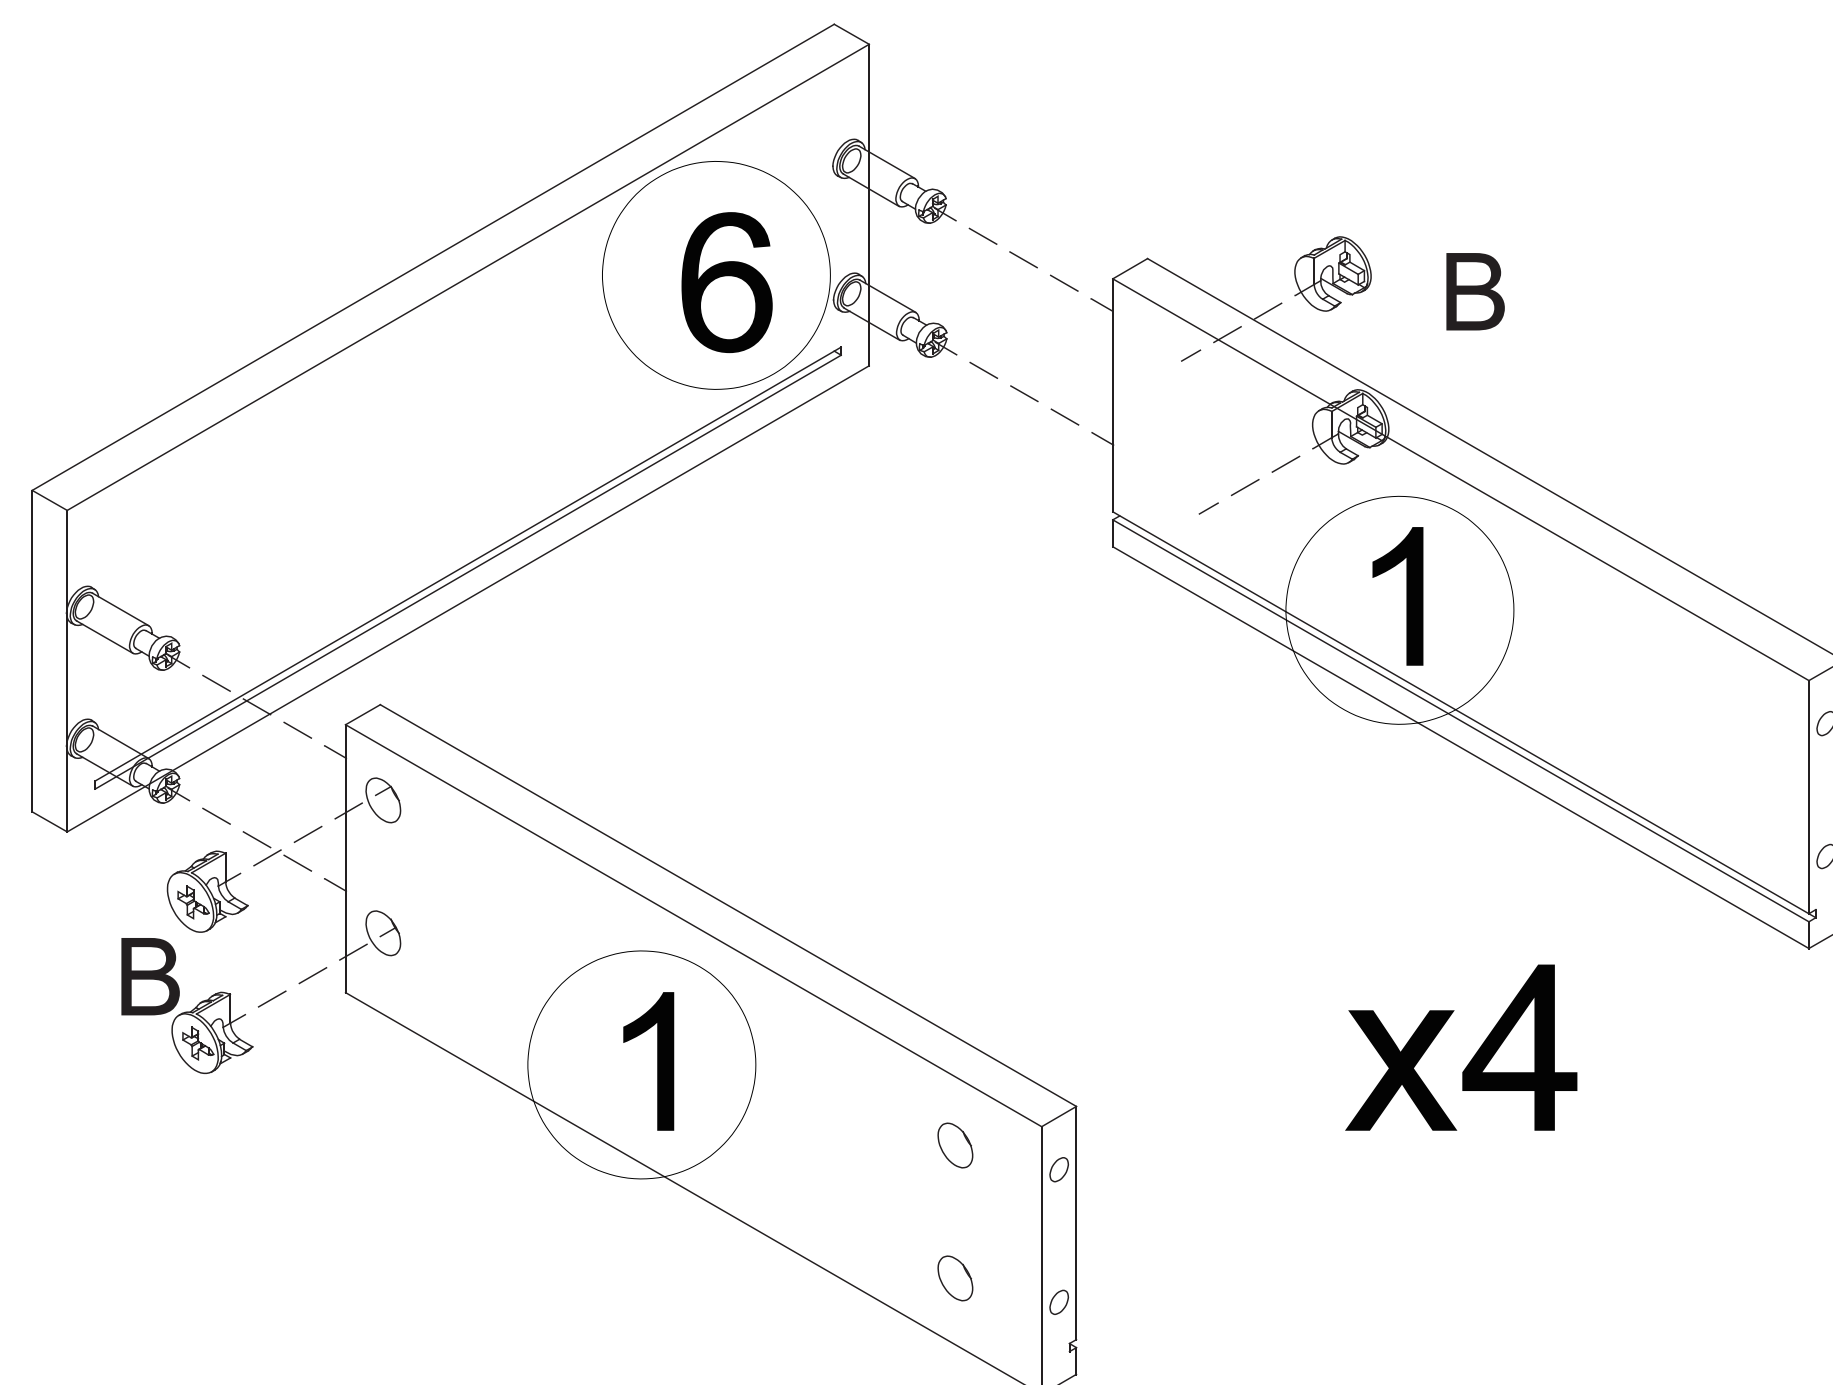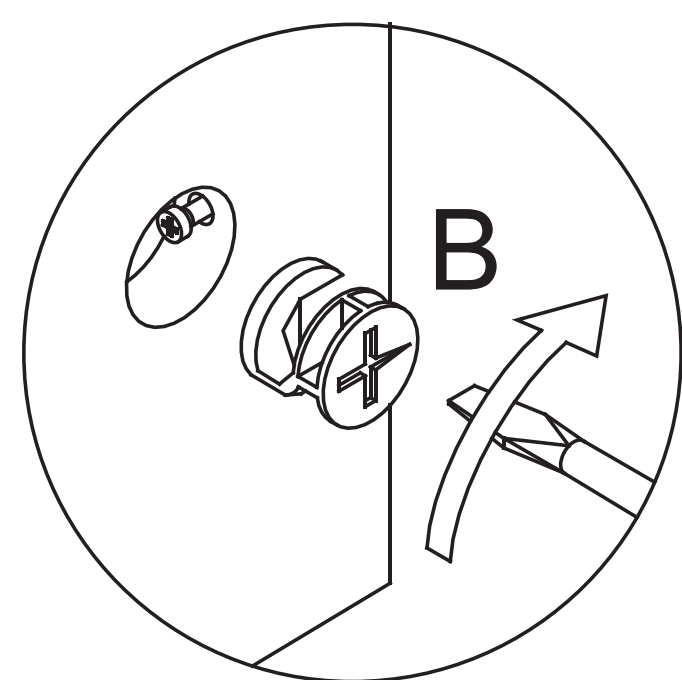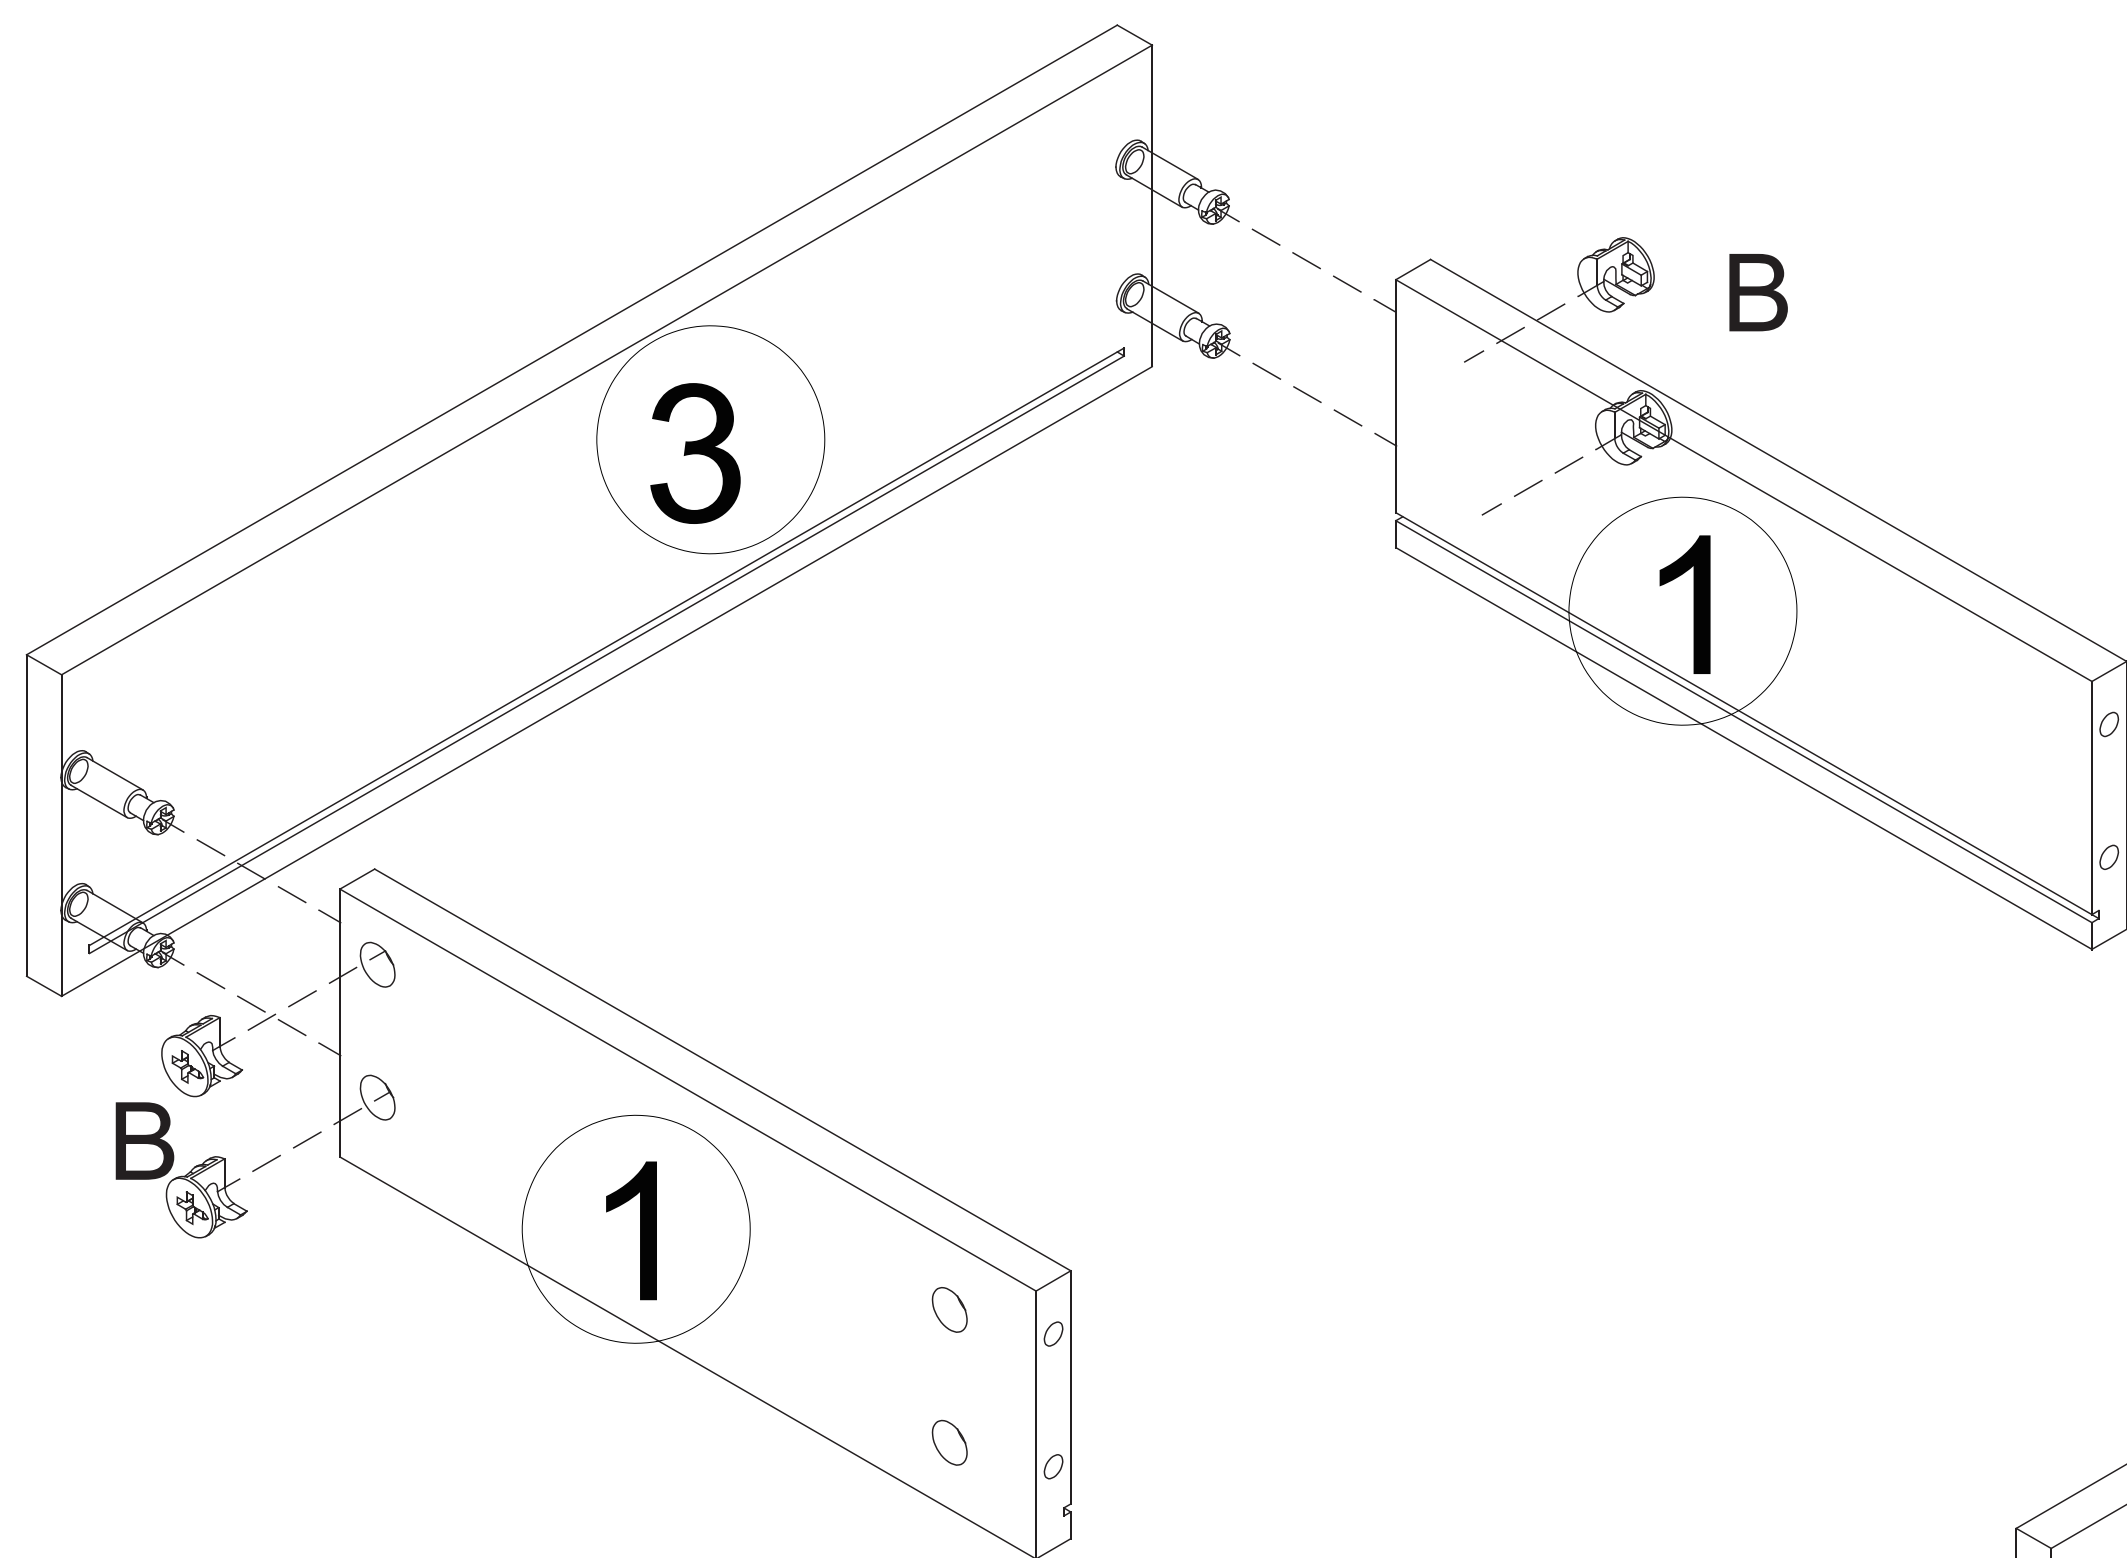


Step 03

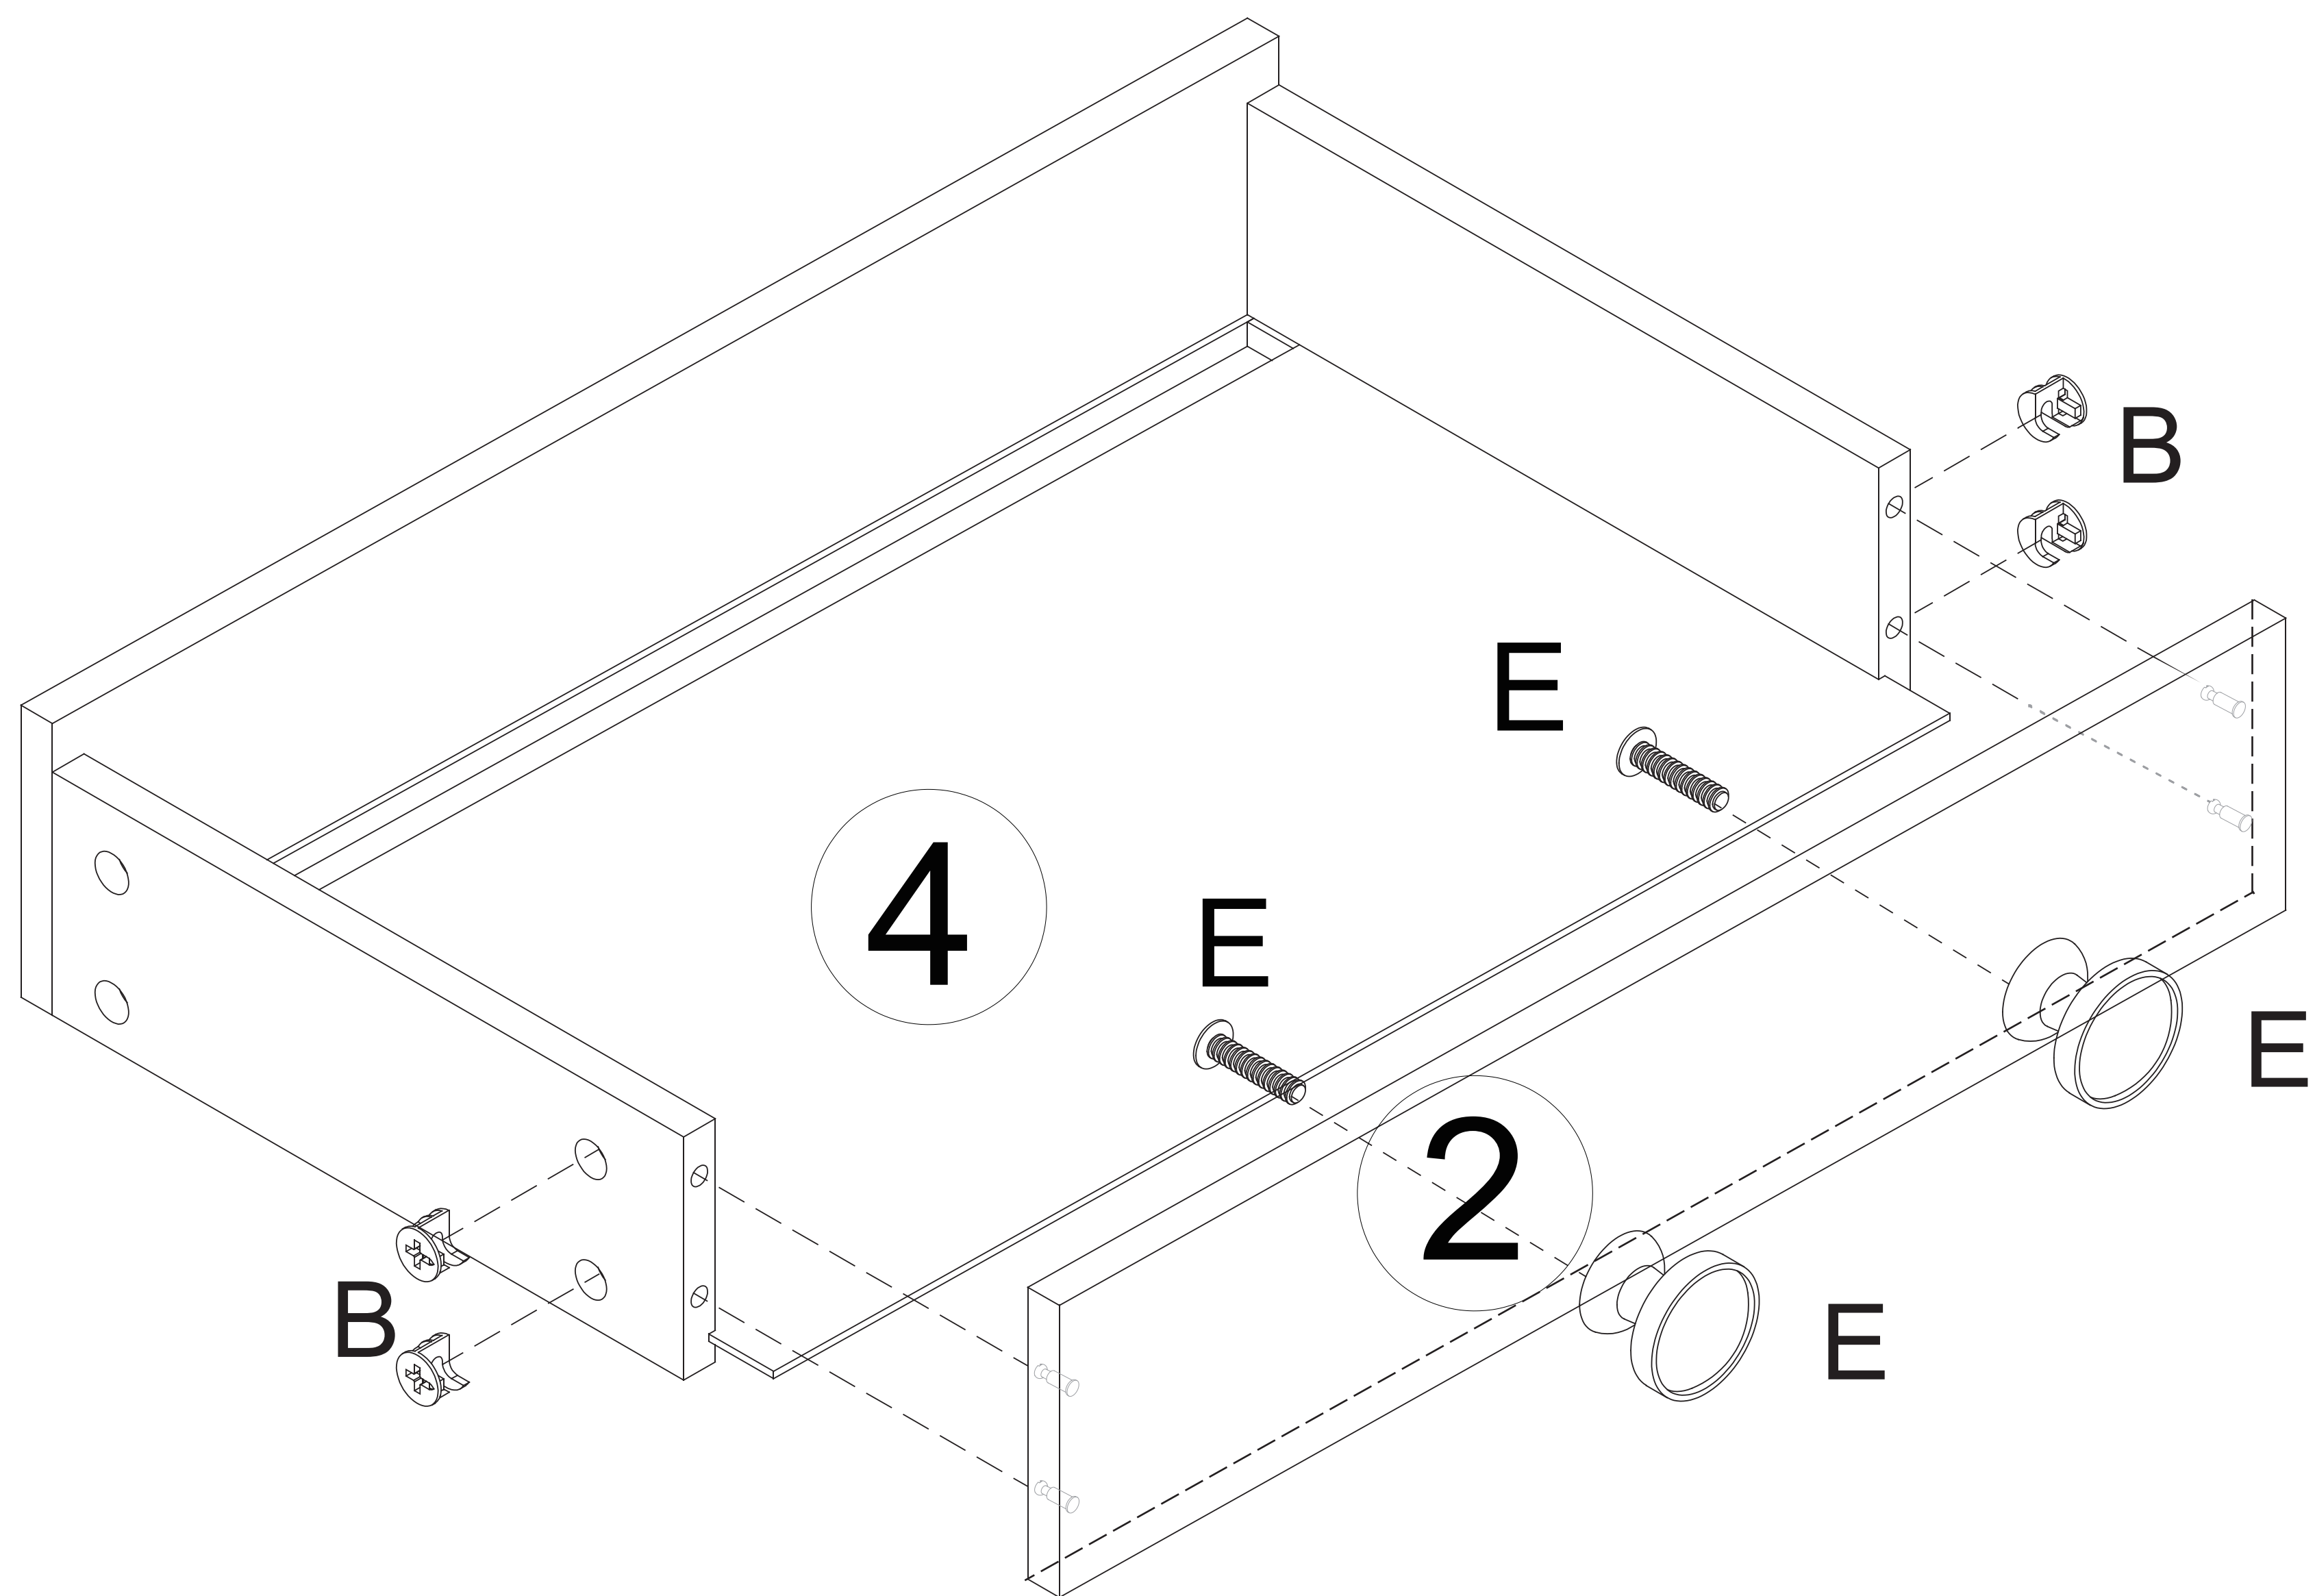


Step 04

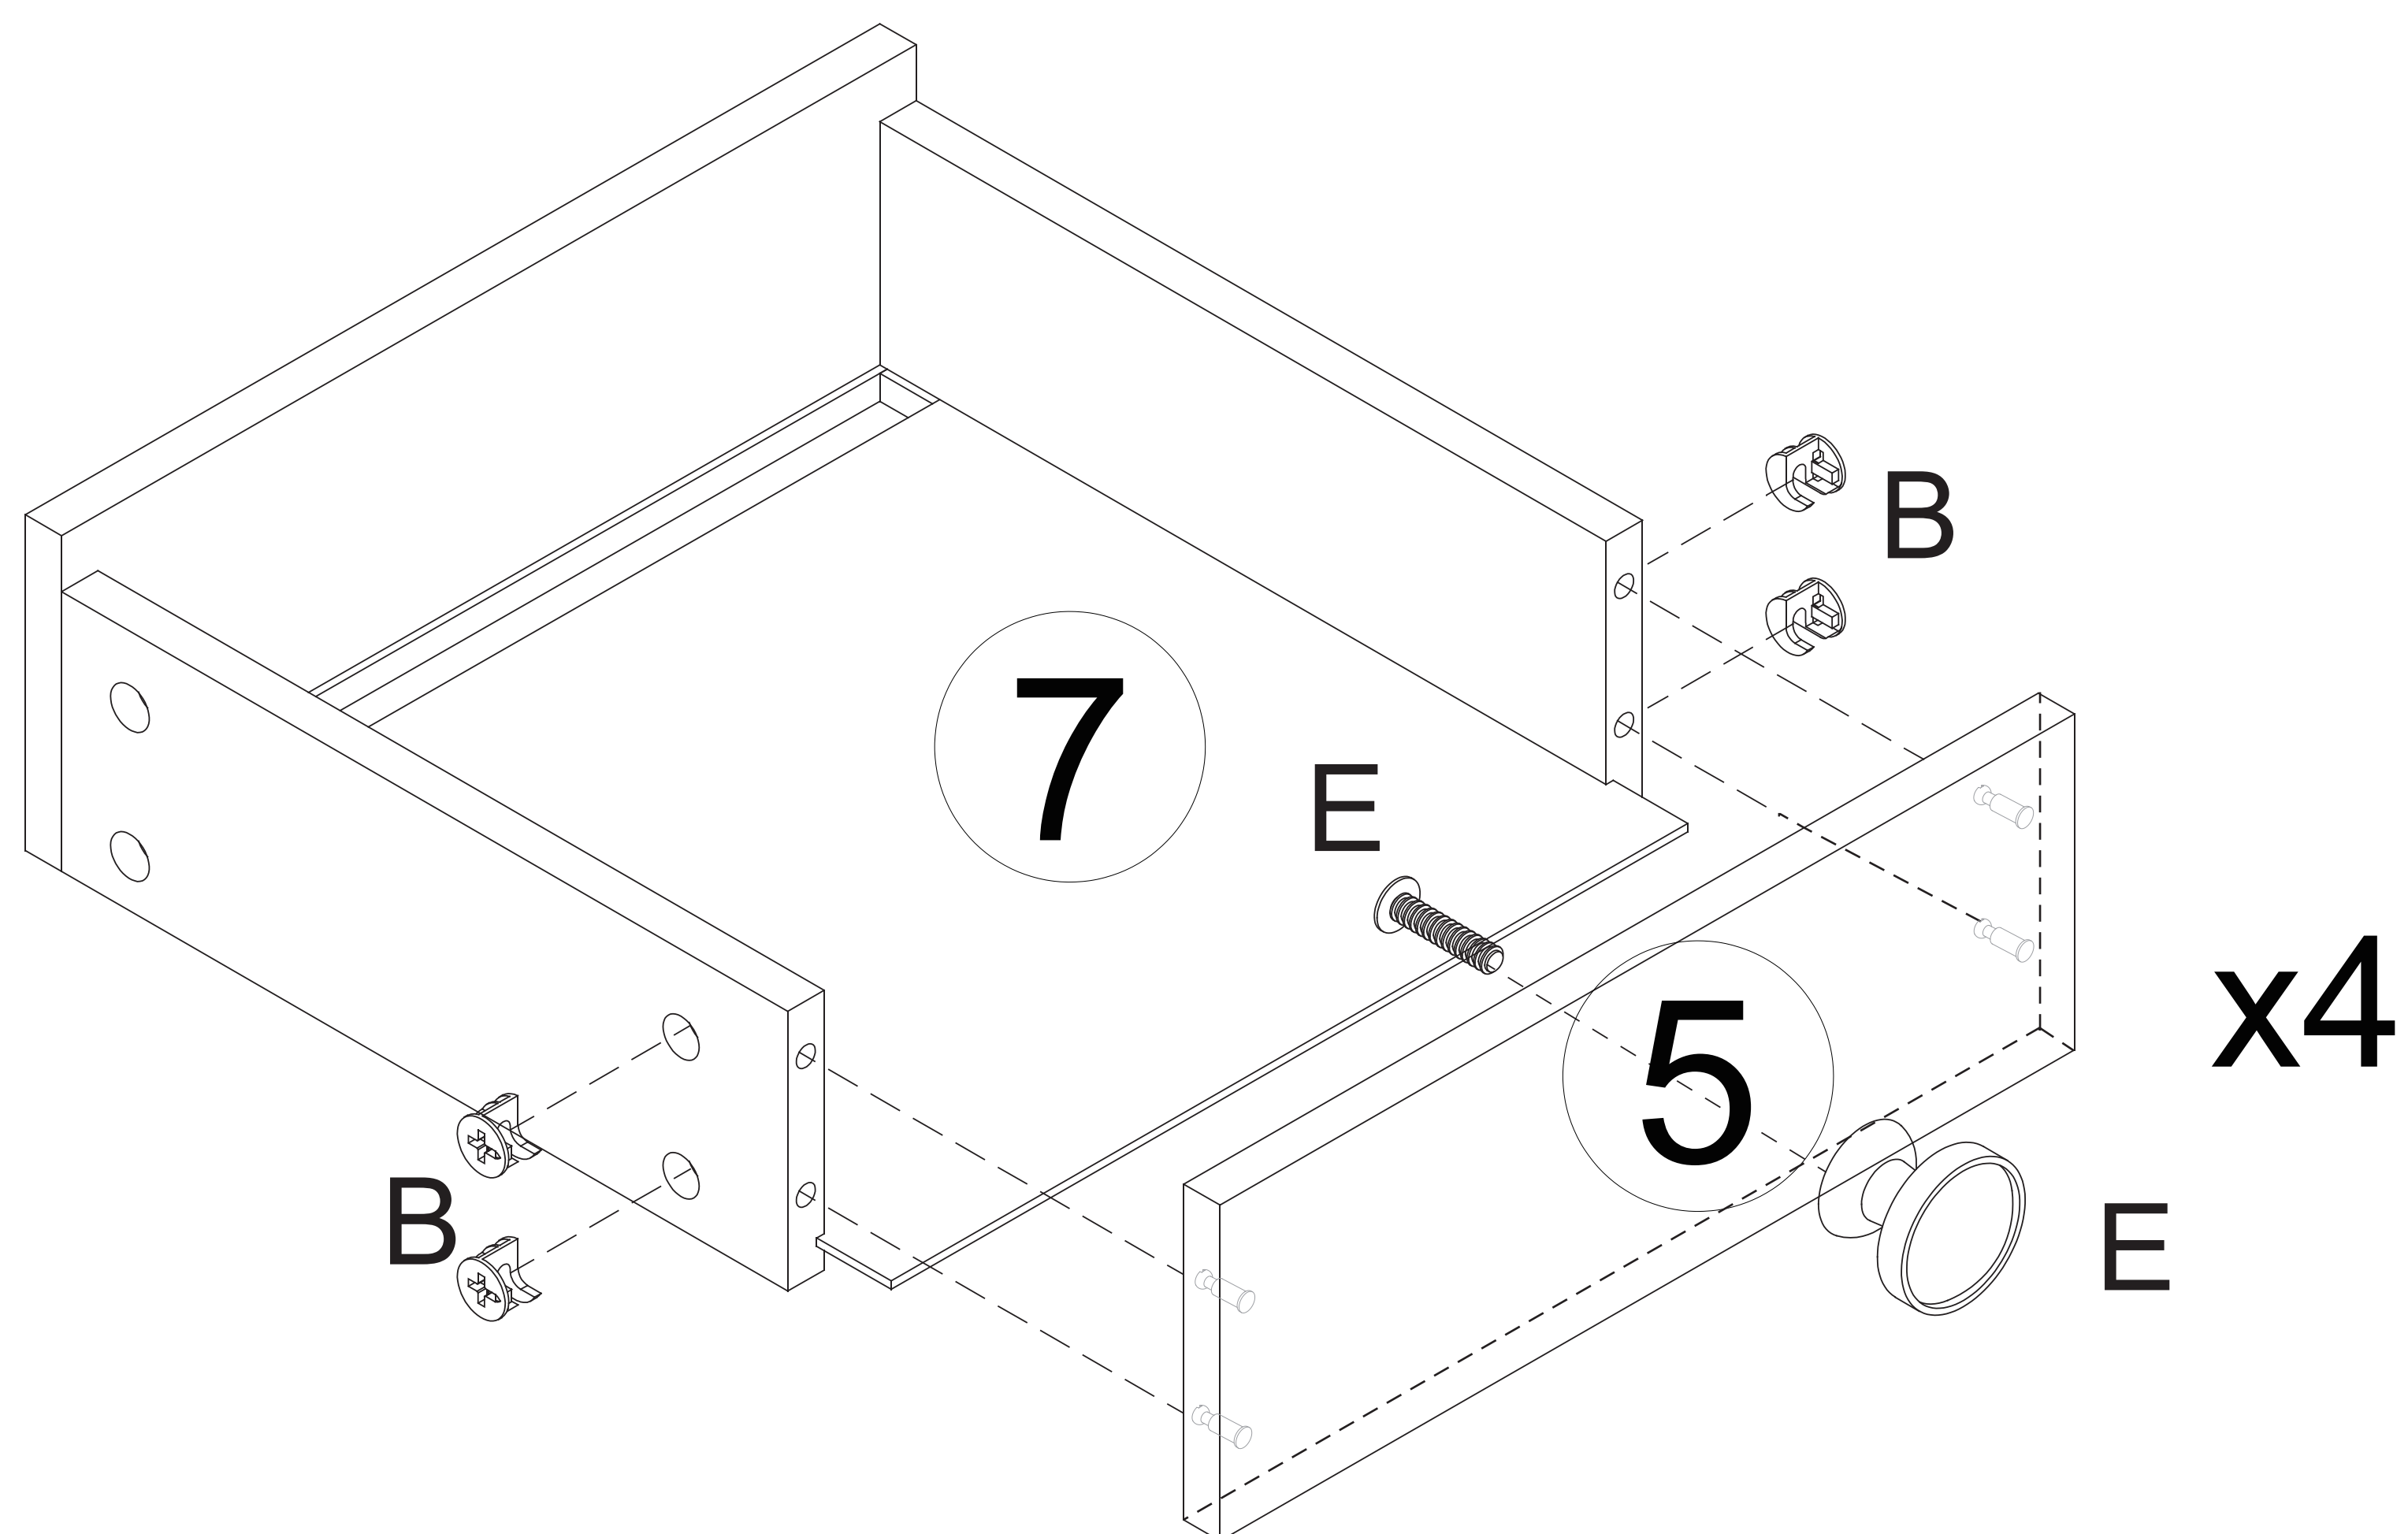


Step 05 pick up ⑧x1, ⑨x2, ⑩x1, ⑫x1

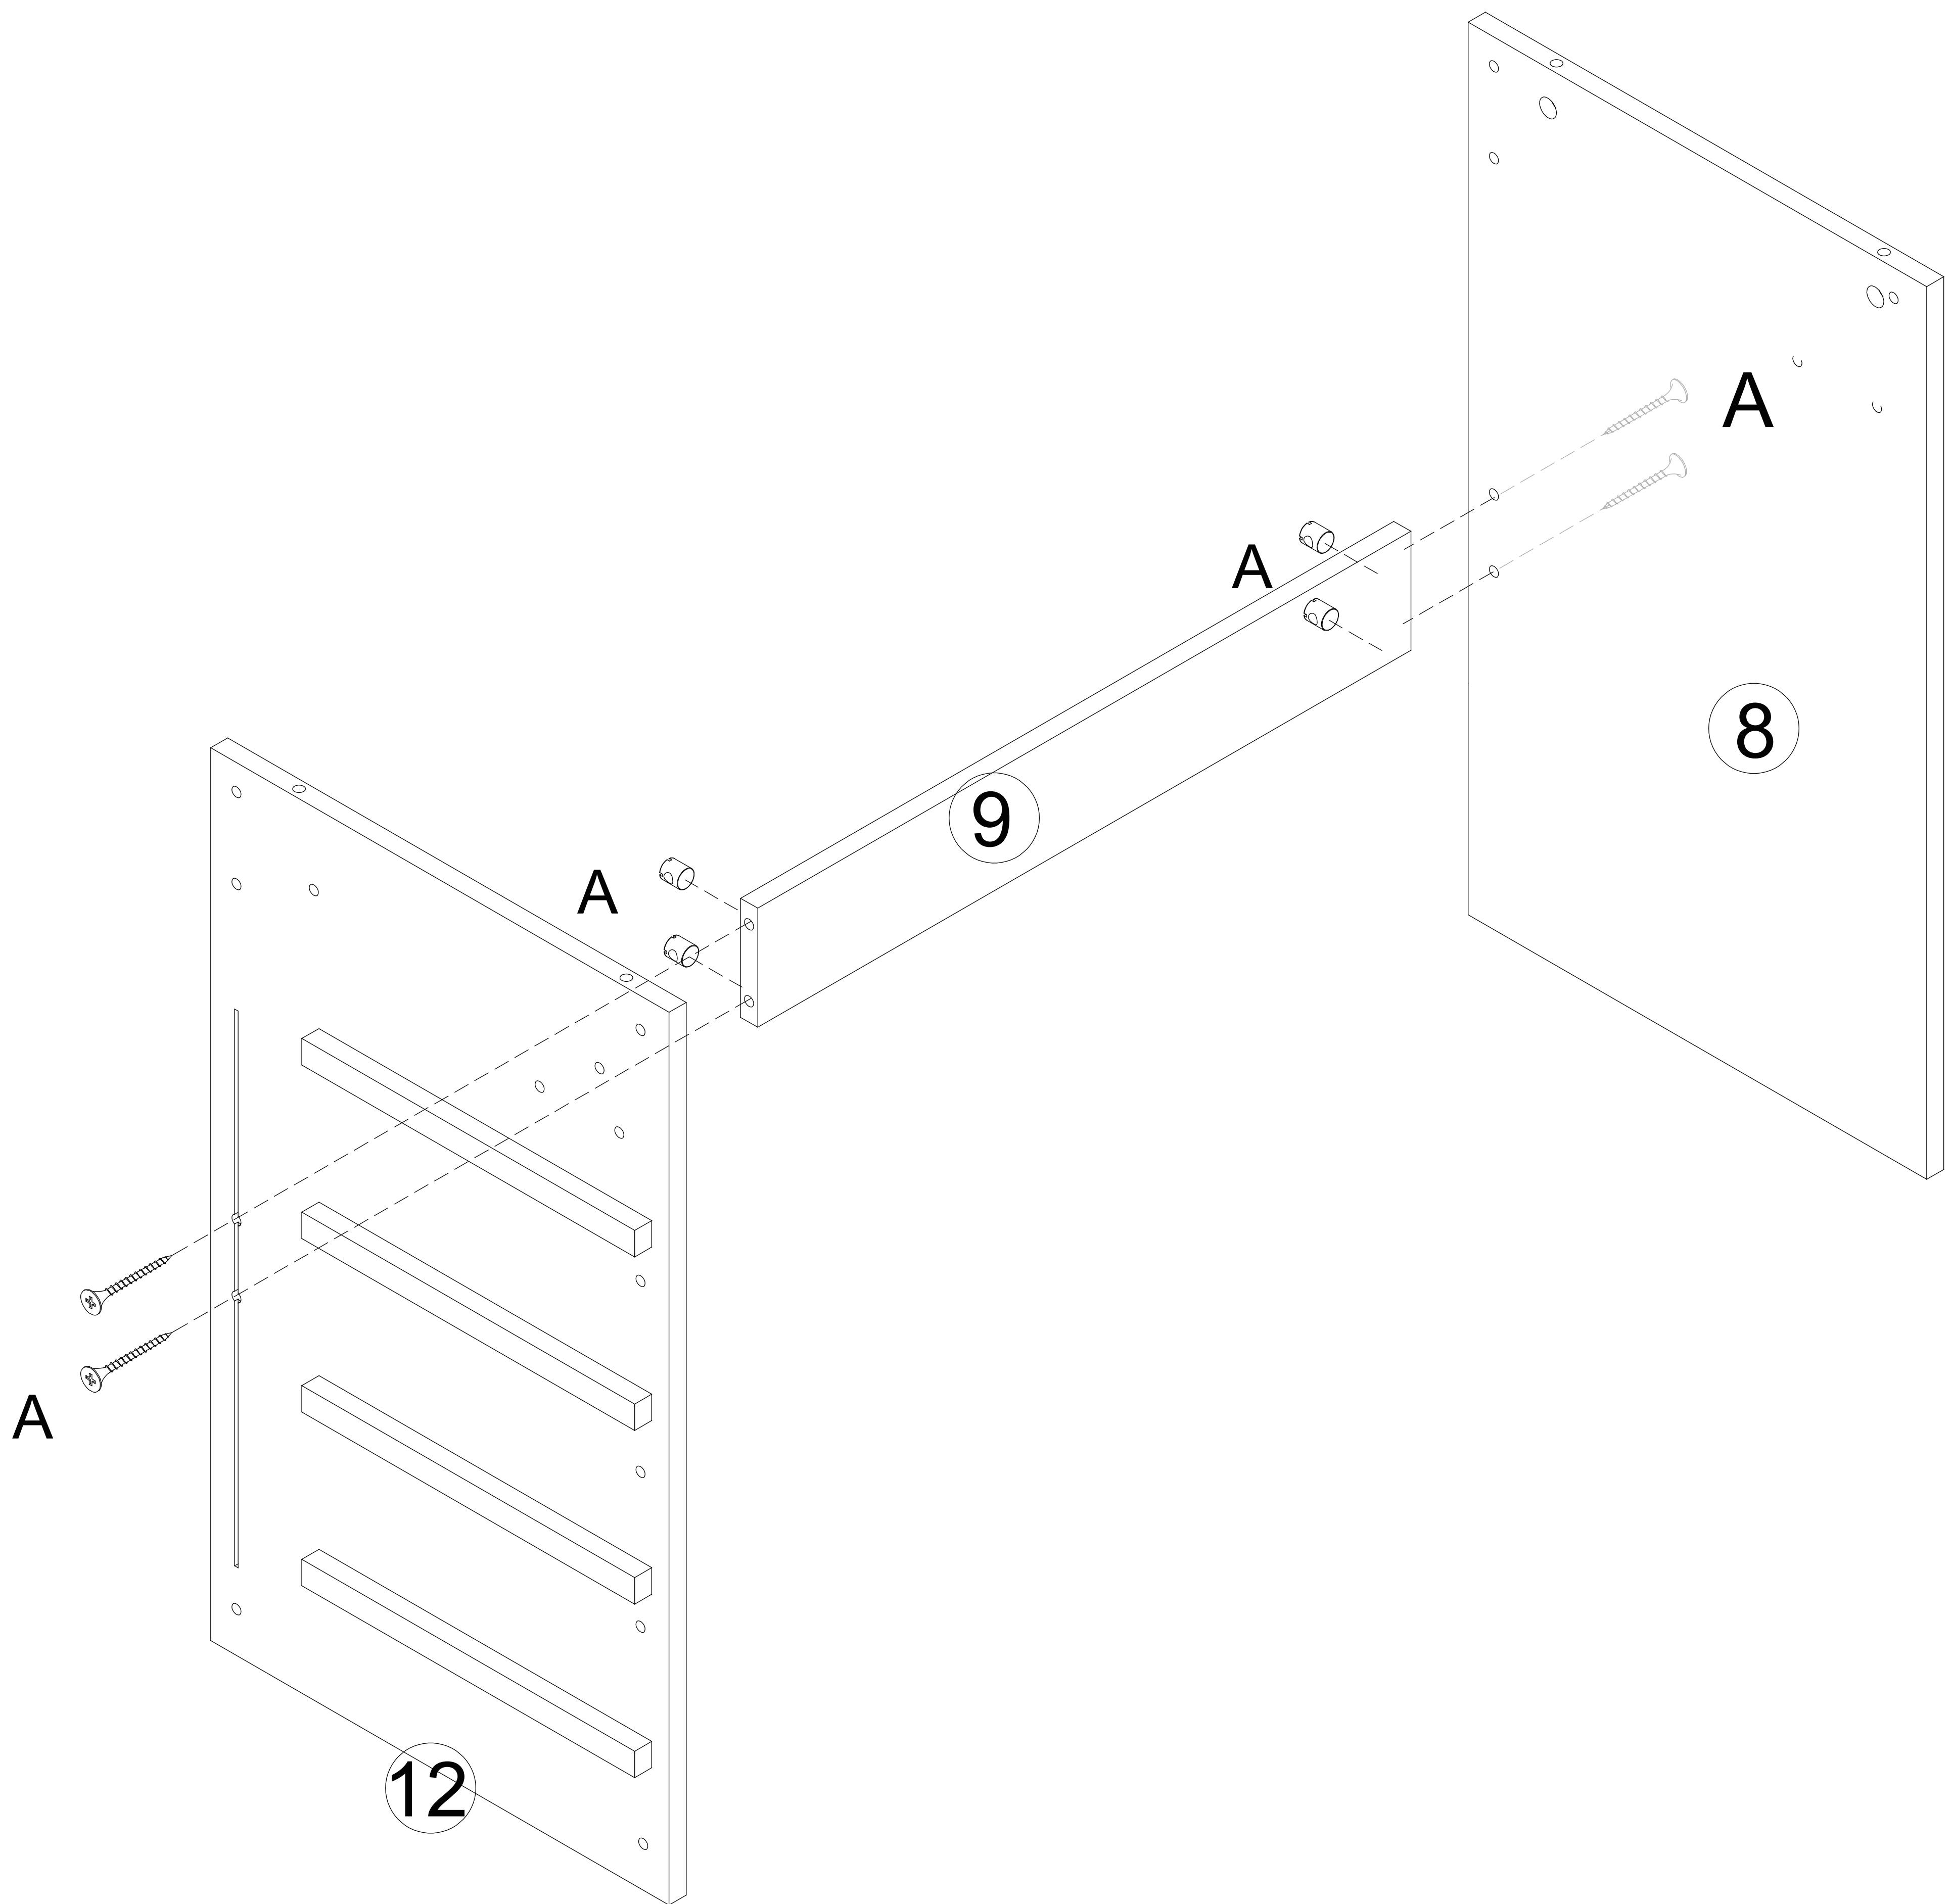


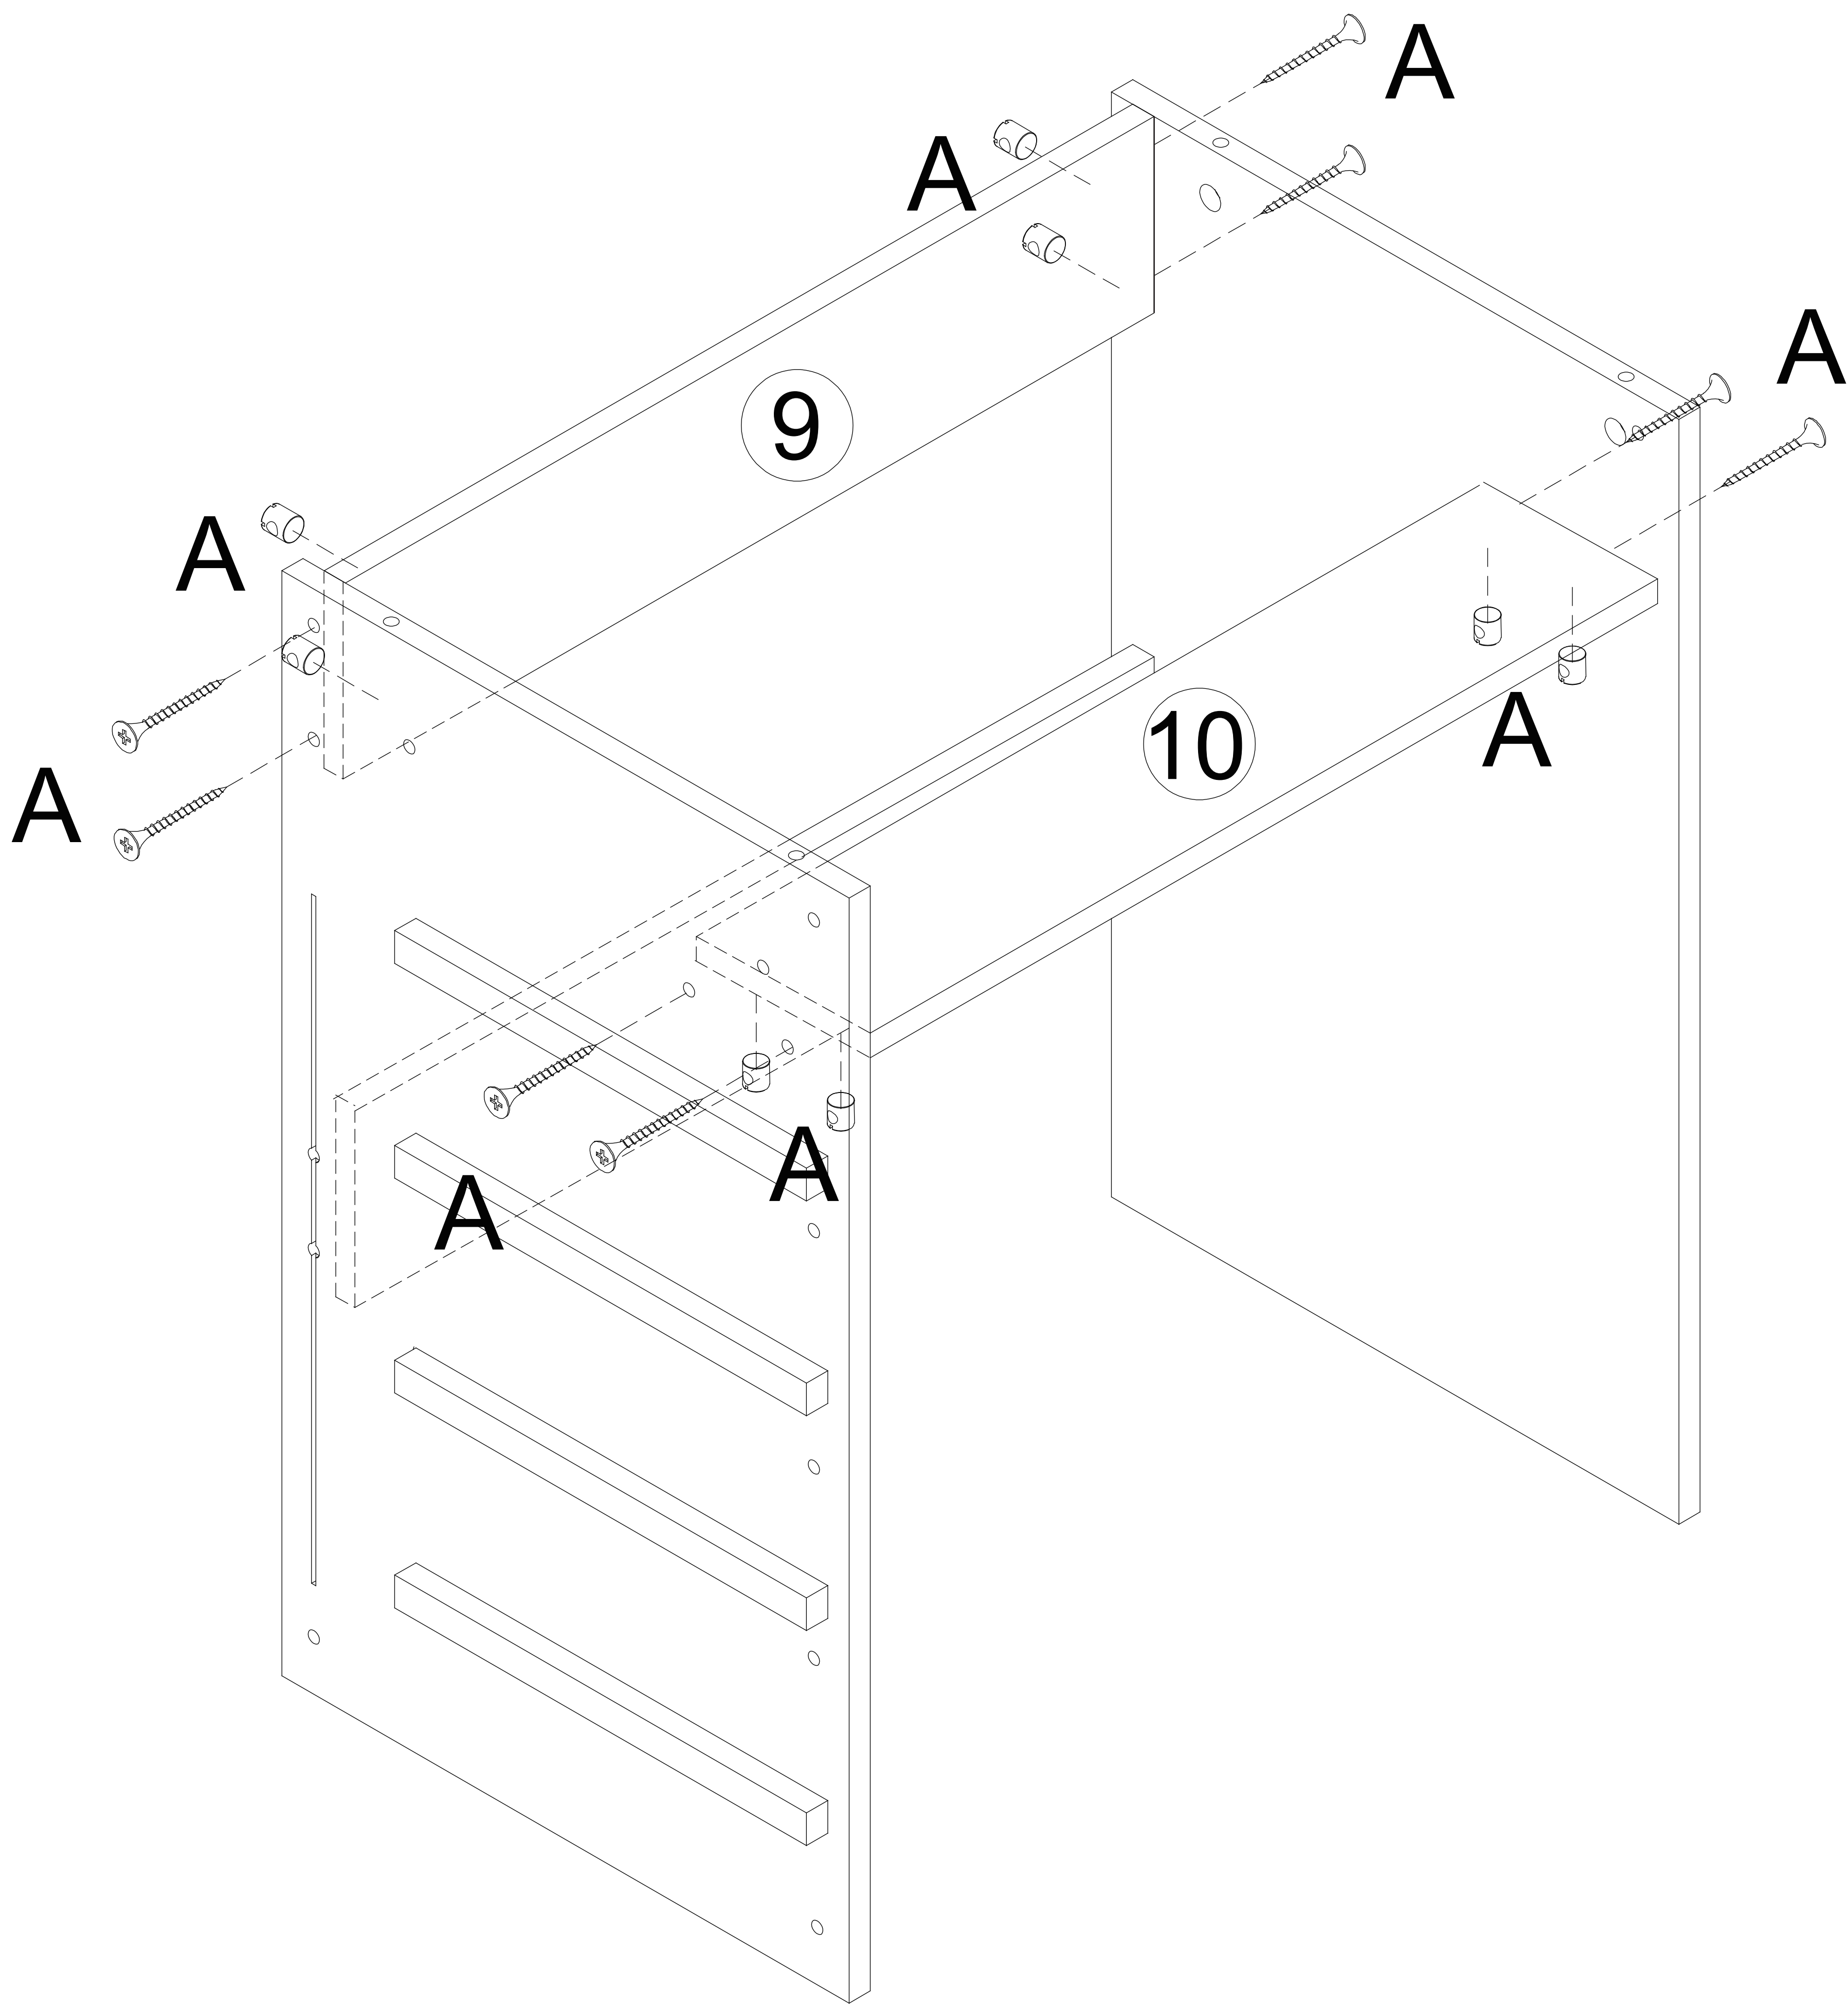


Step 07


pick up ⑭ x1, ⑮ x1, ⑯ x1, ⑰ x1

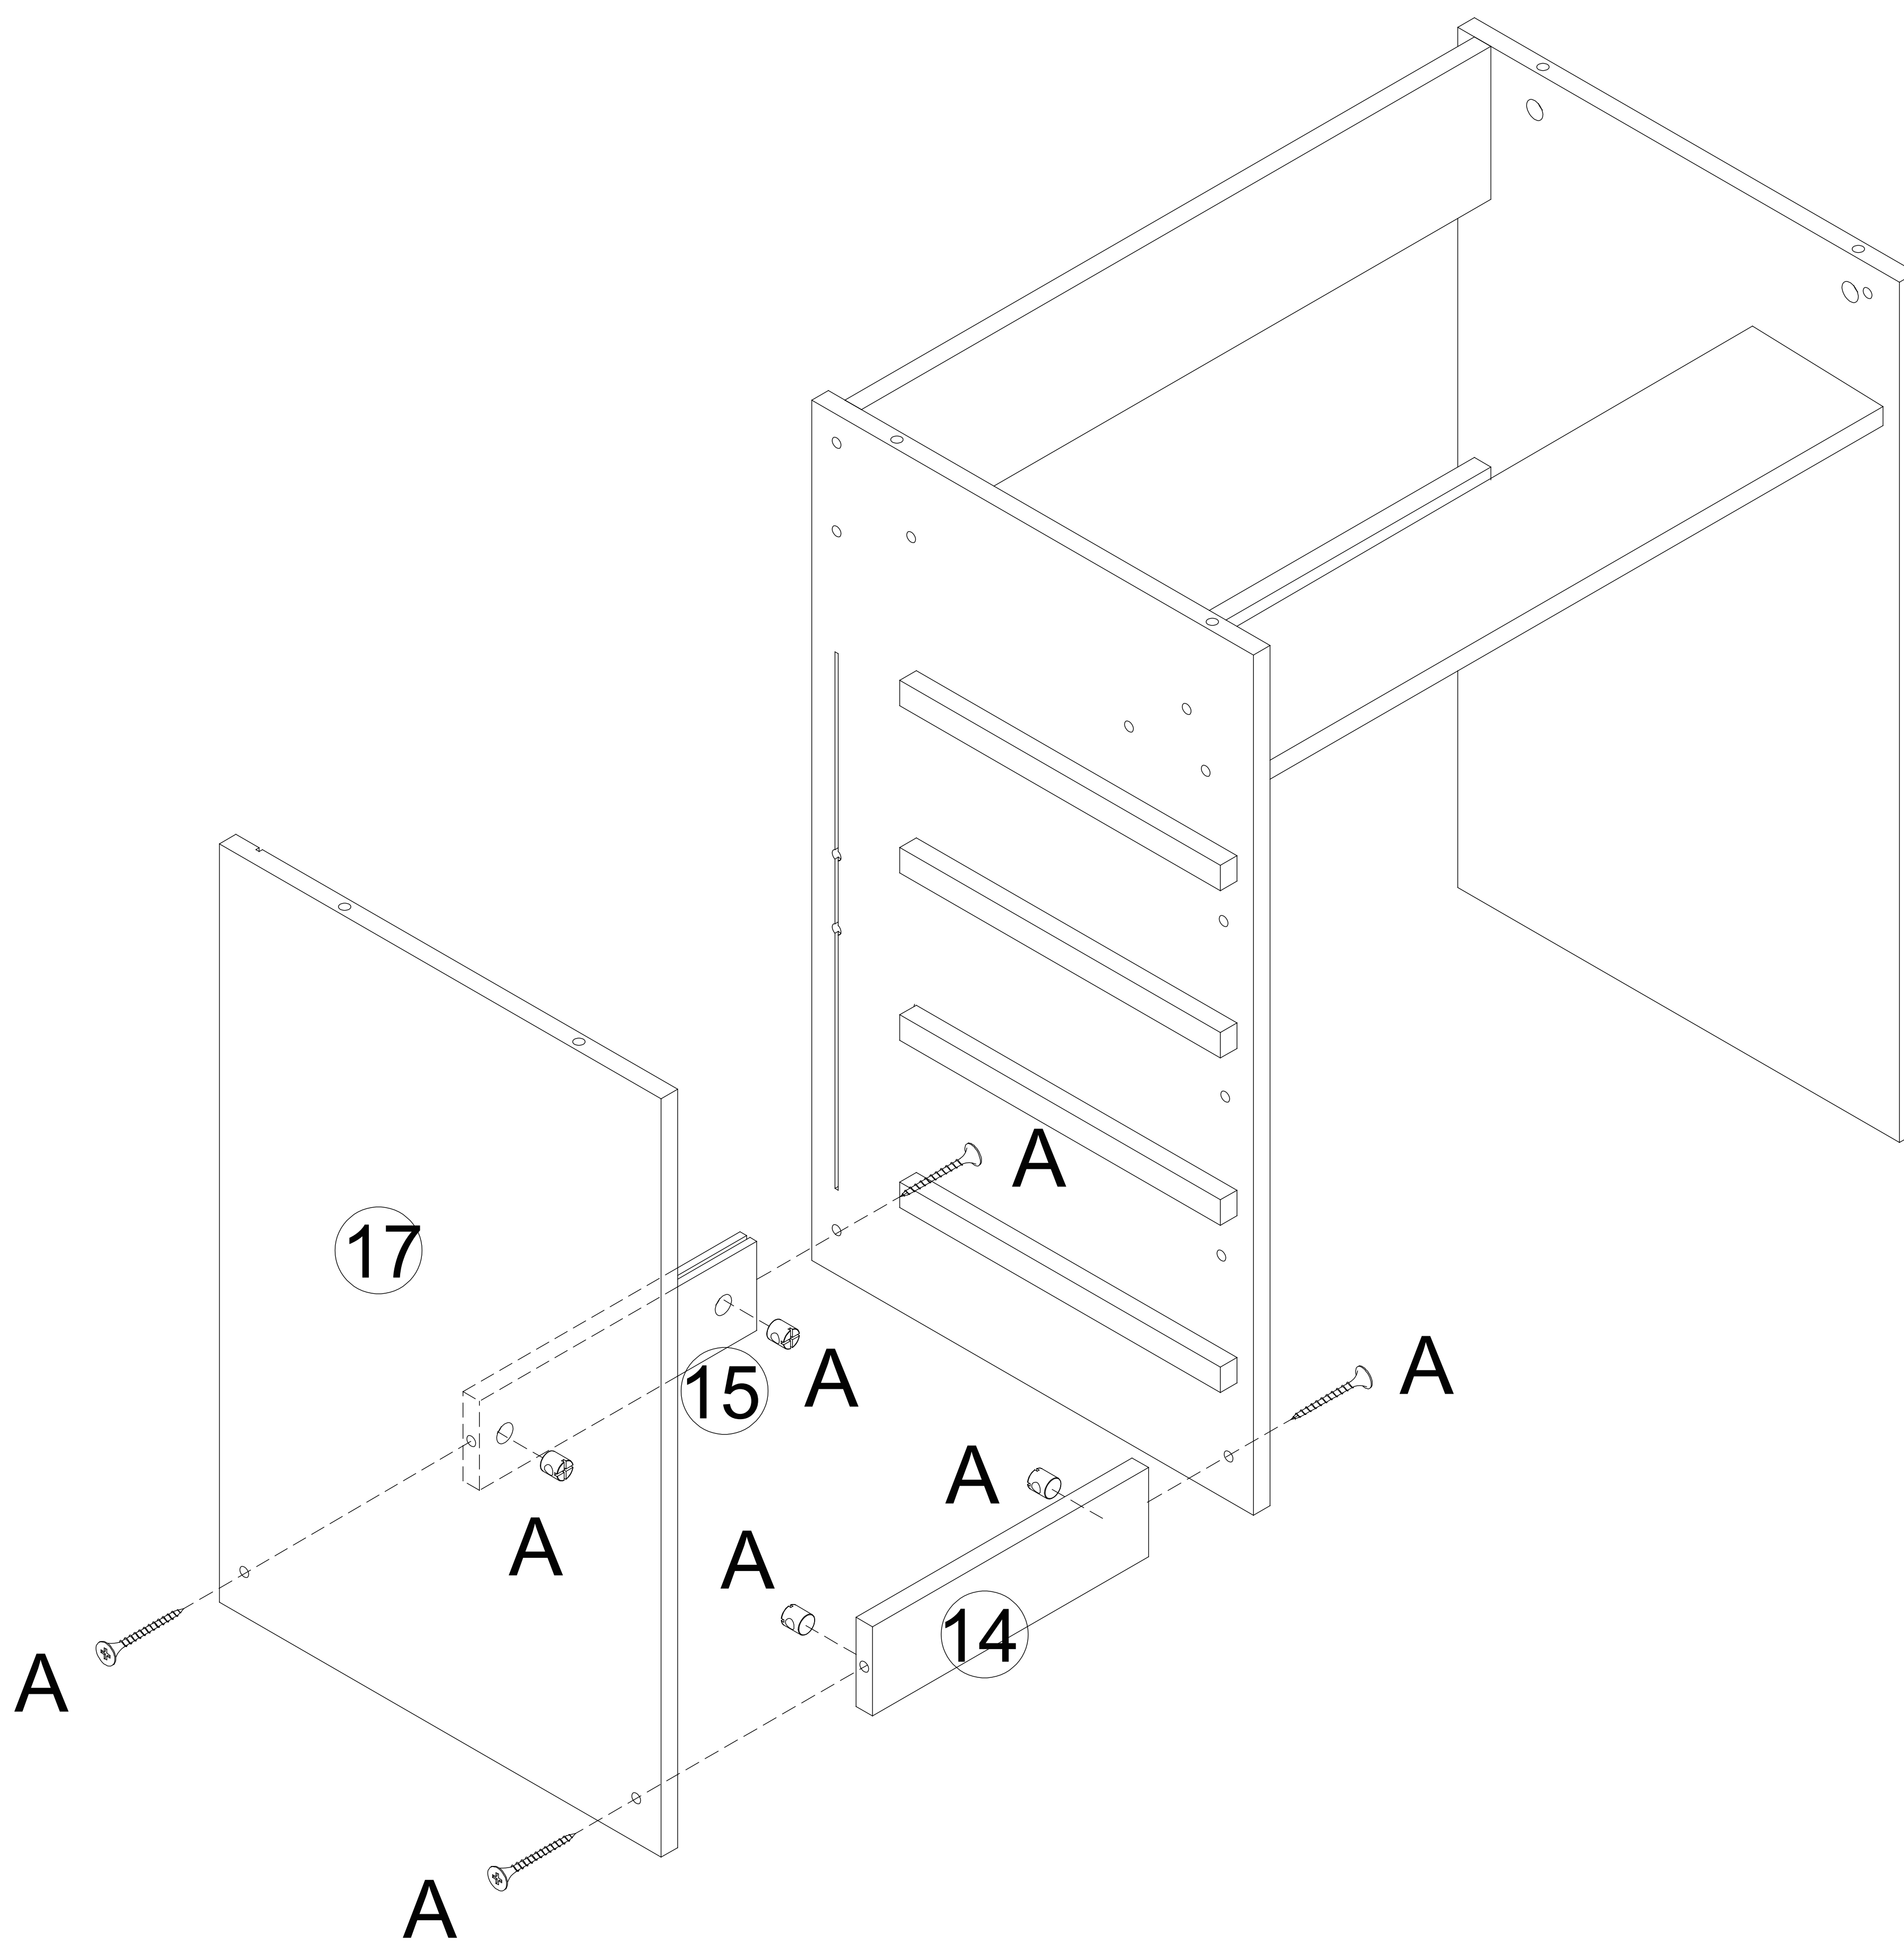


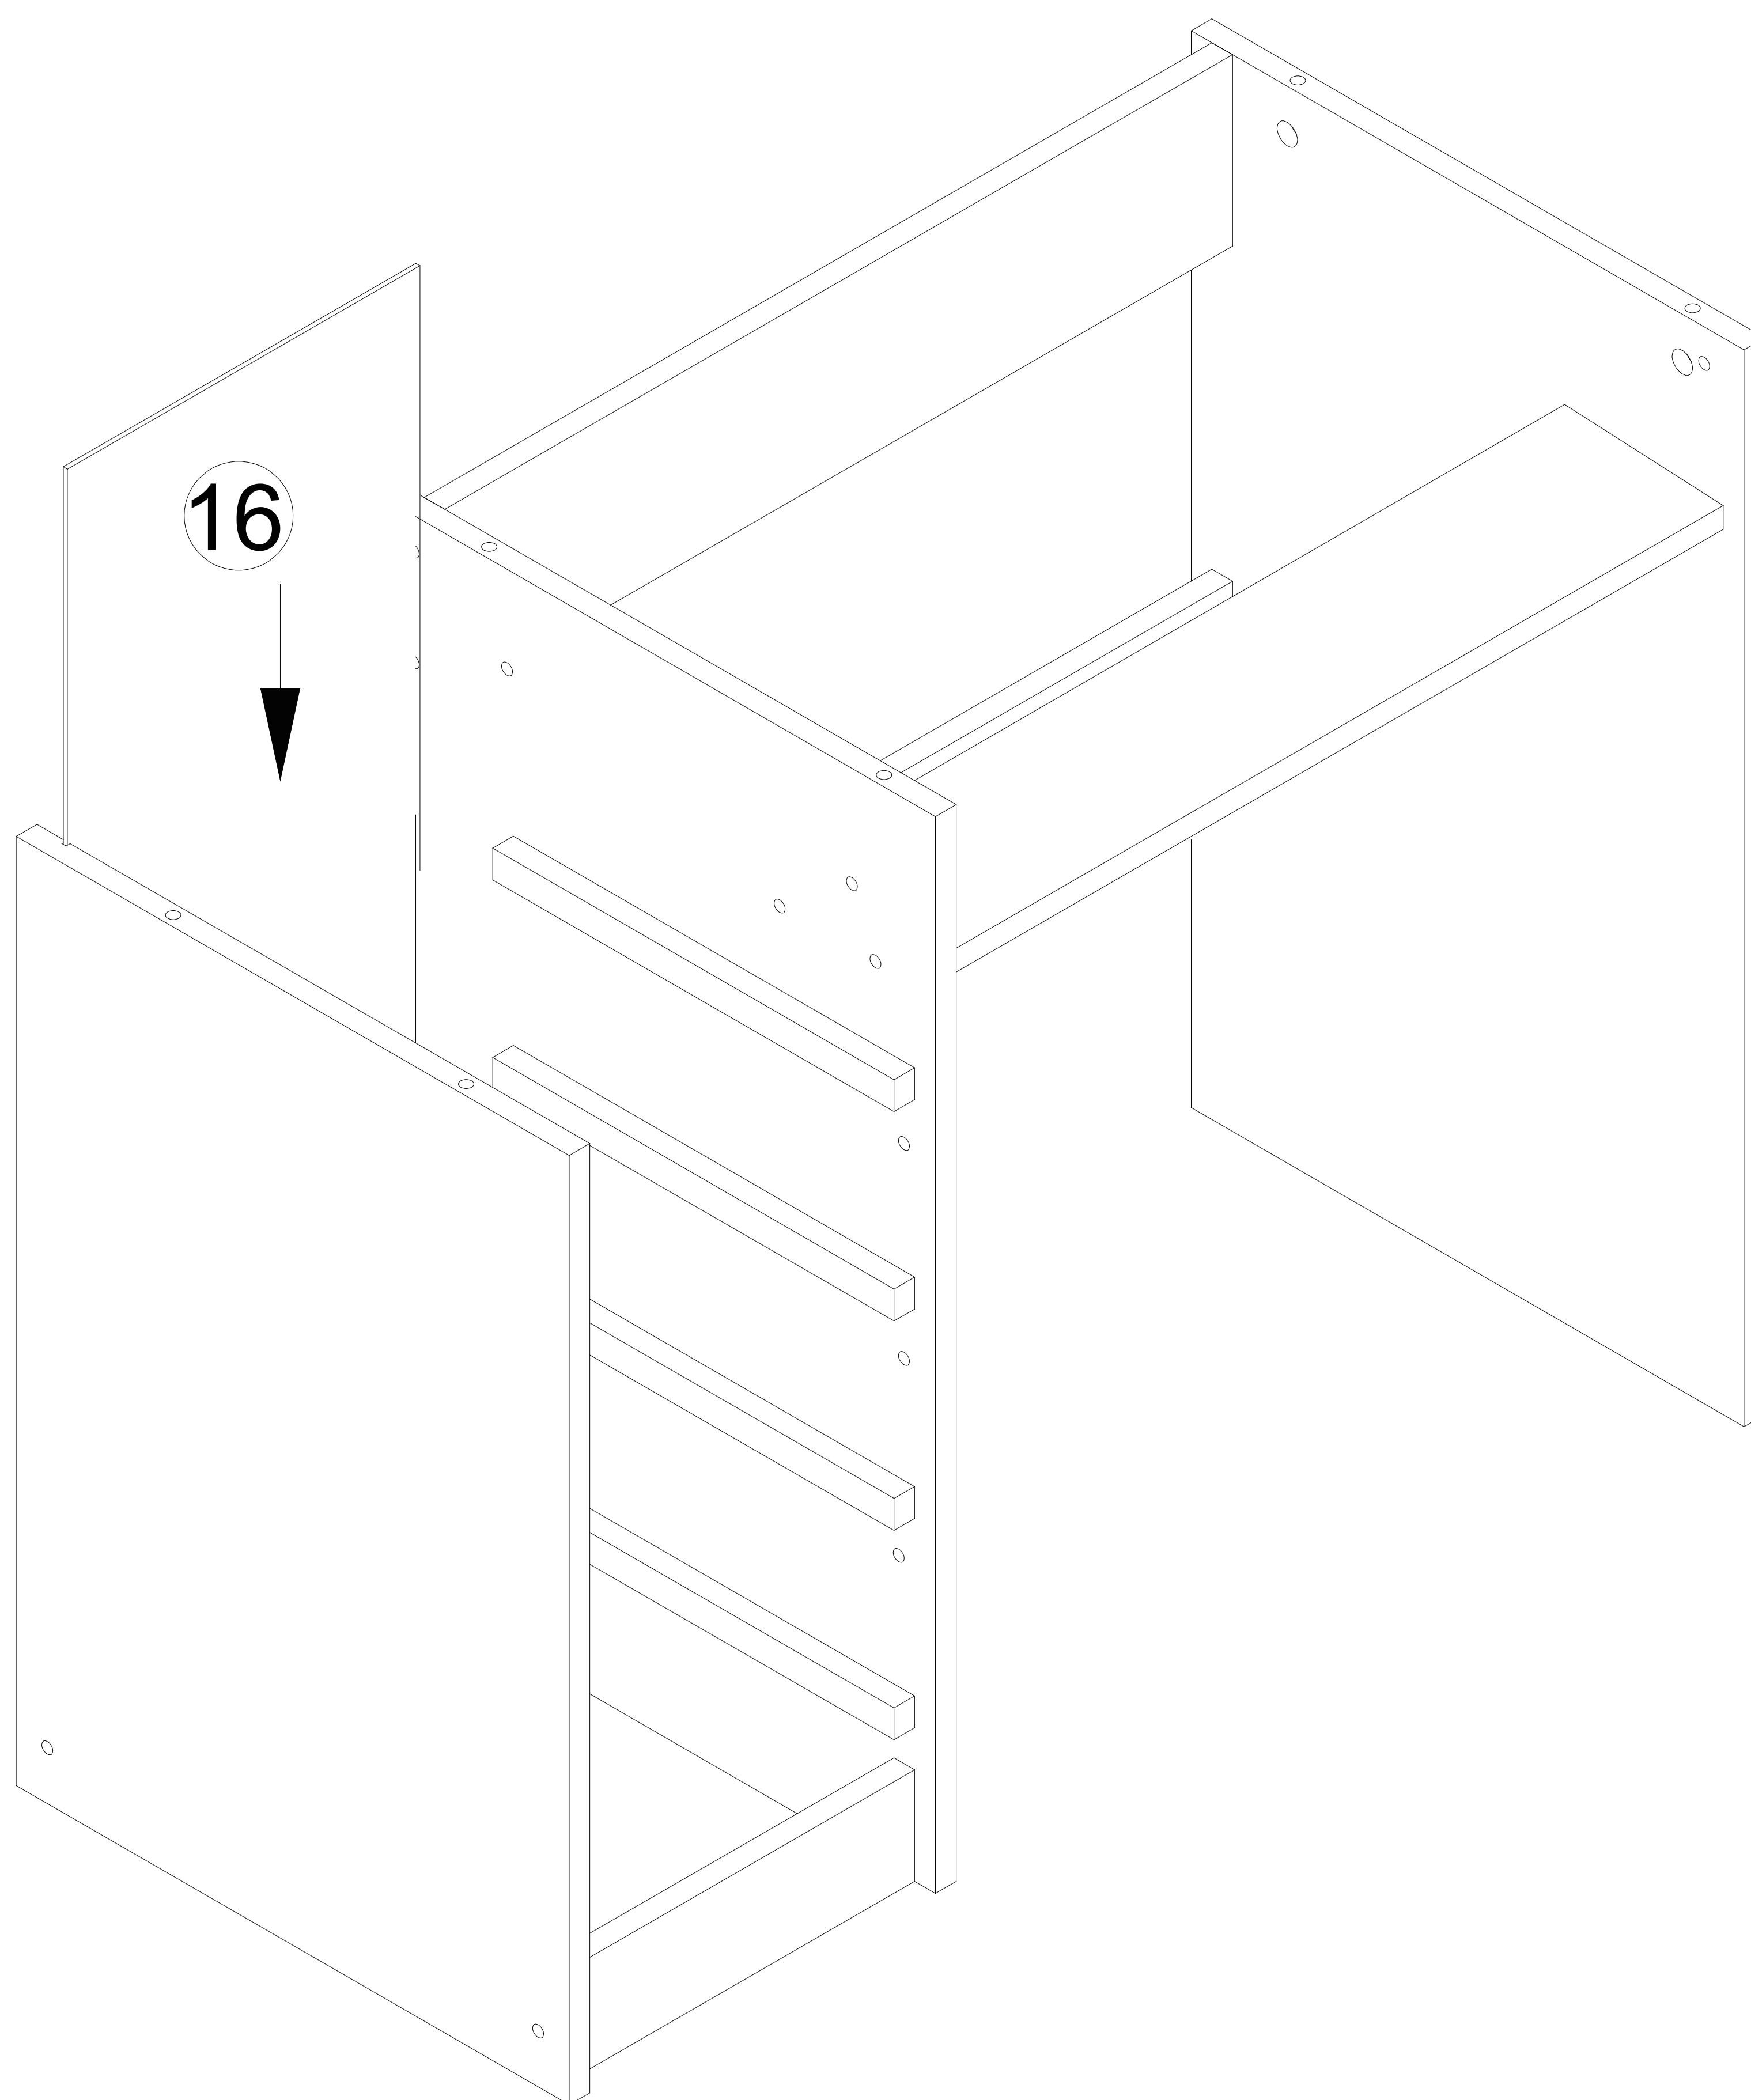


Step 09 pick up ⑪ x1, ⑬ x1

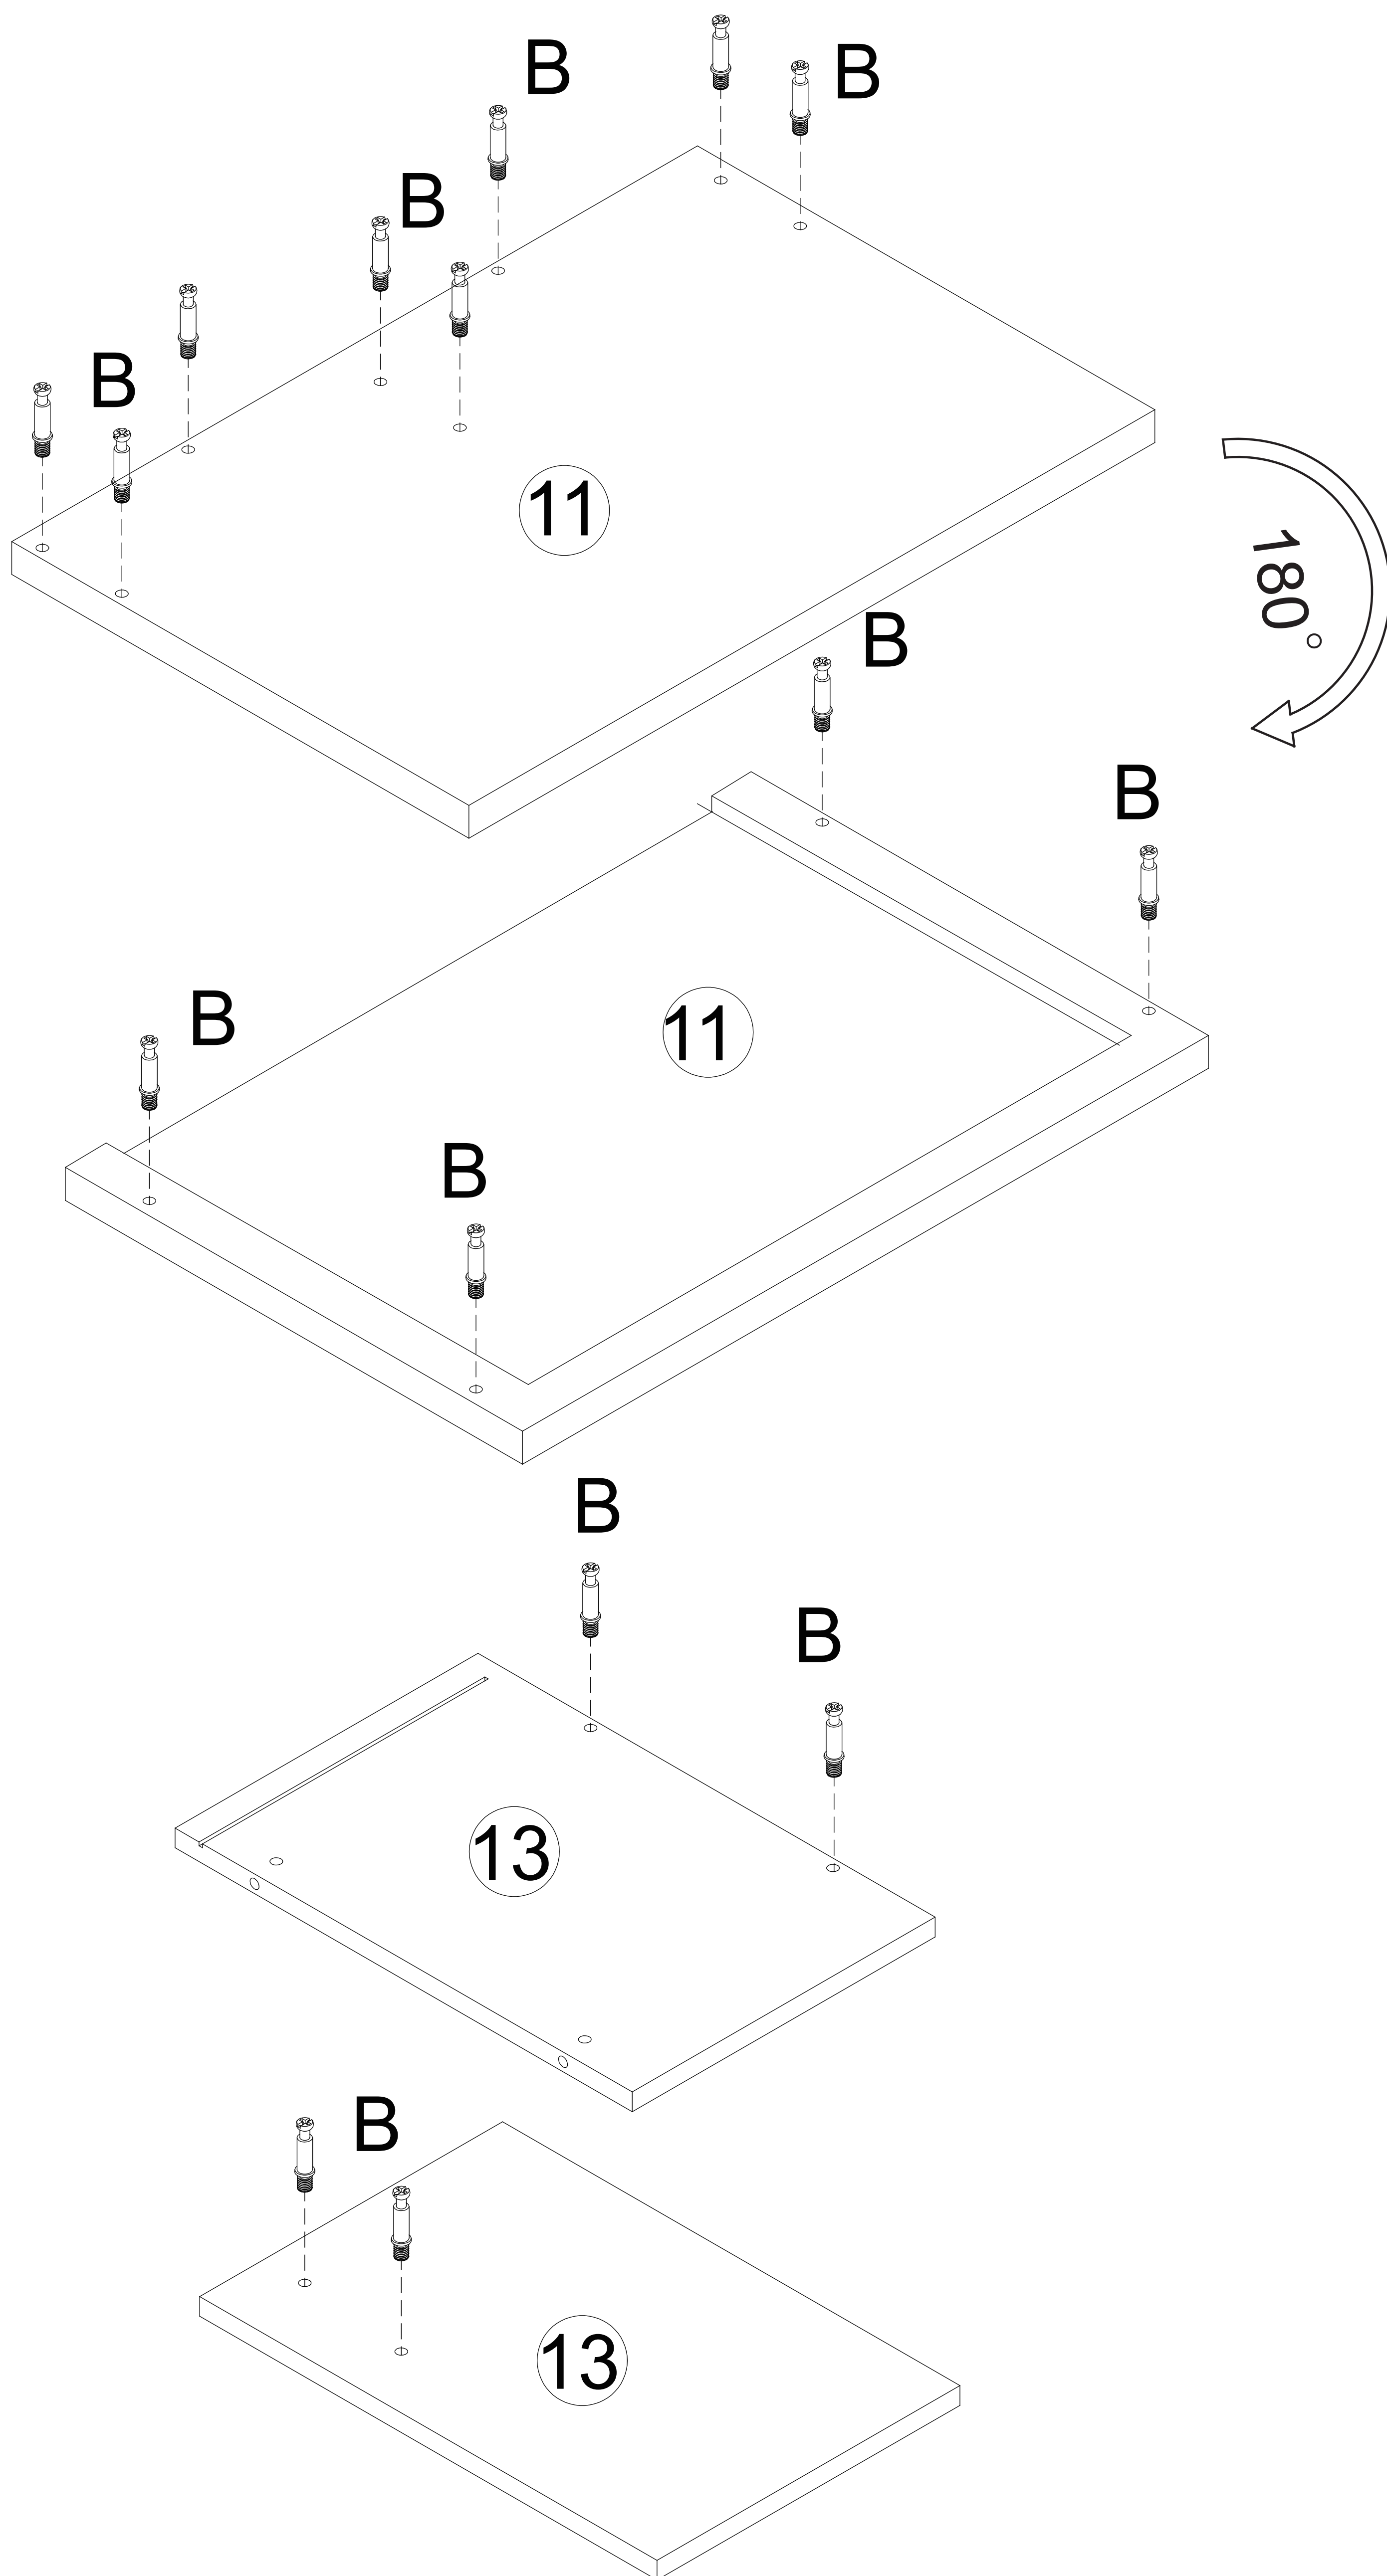

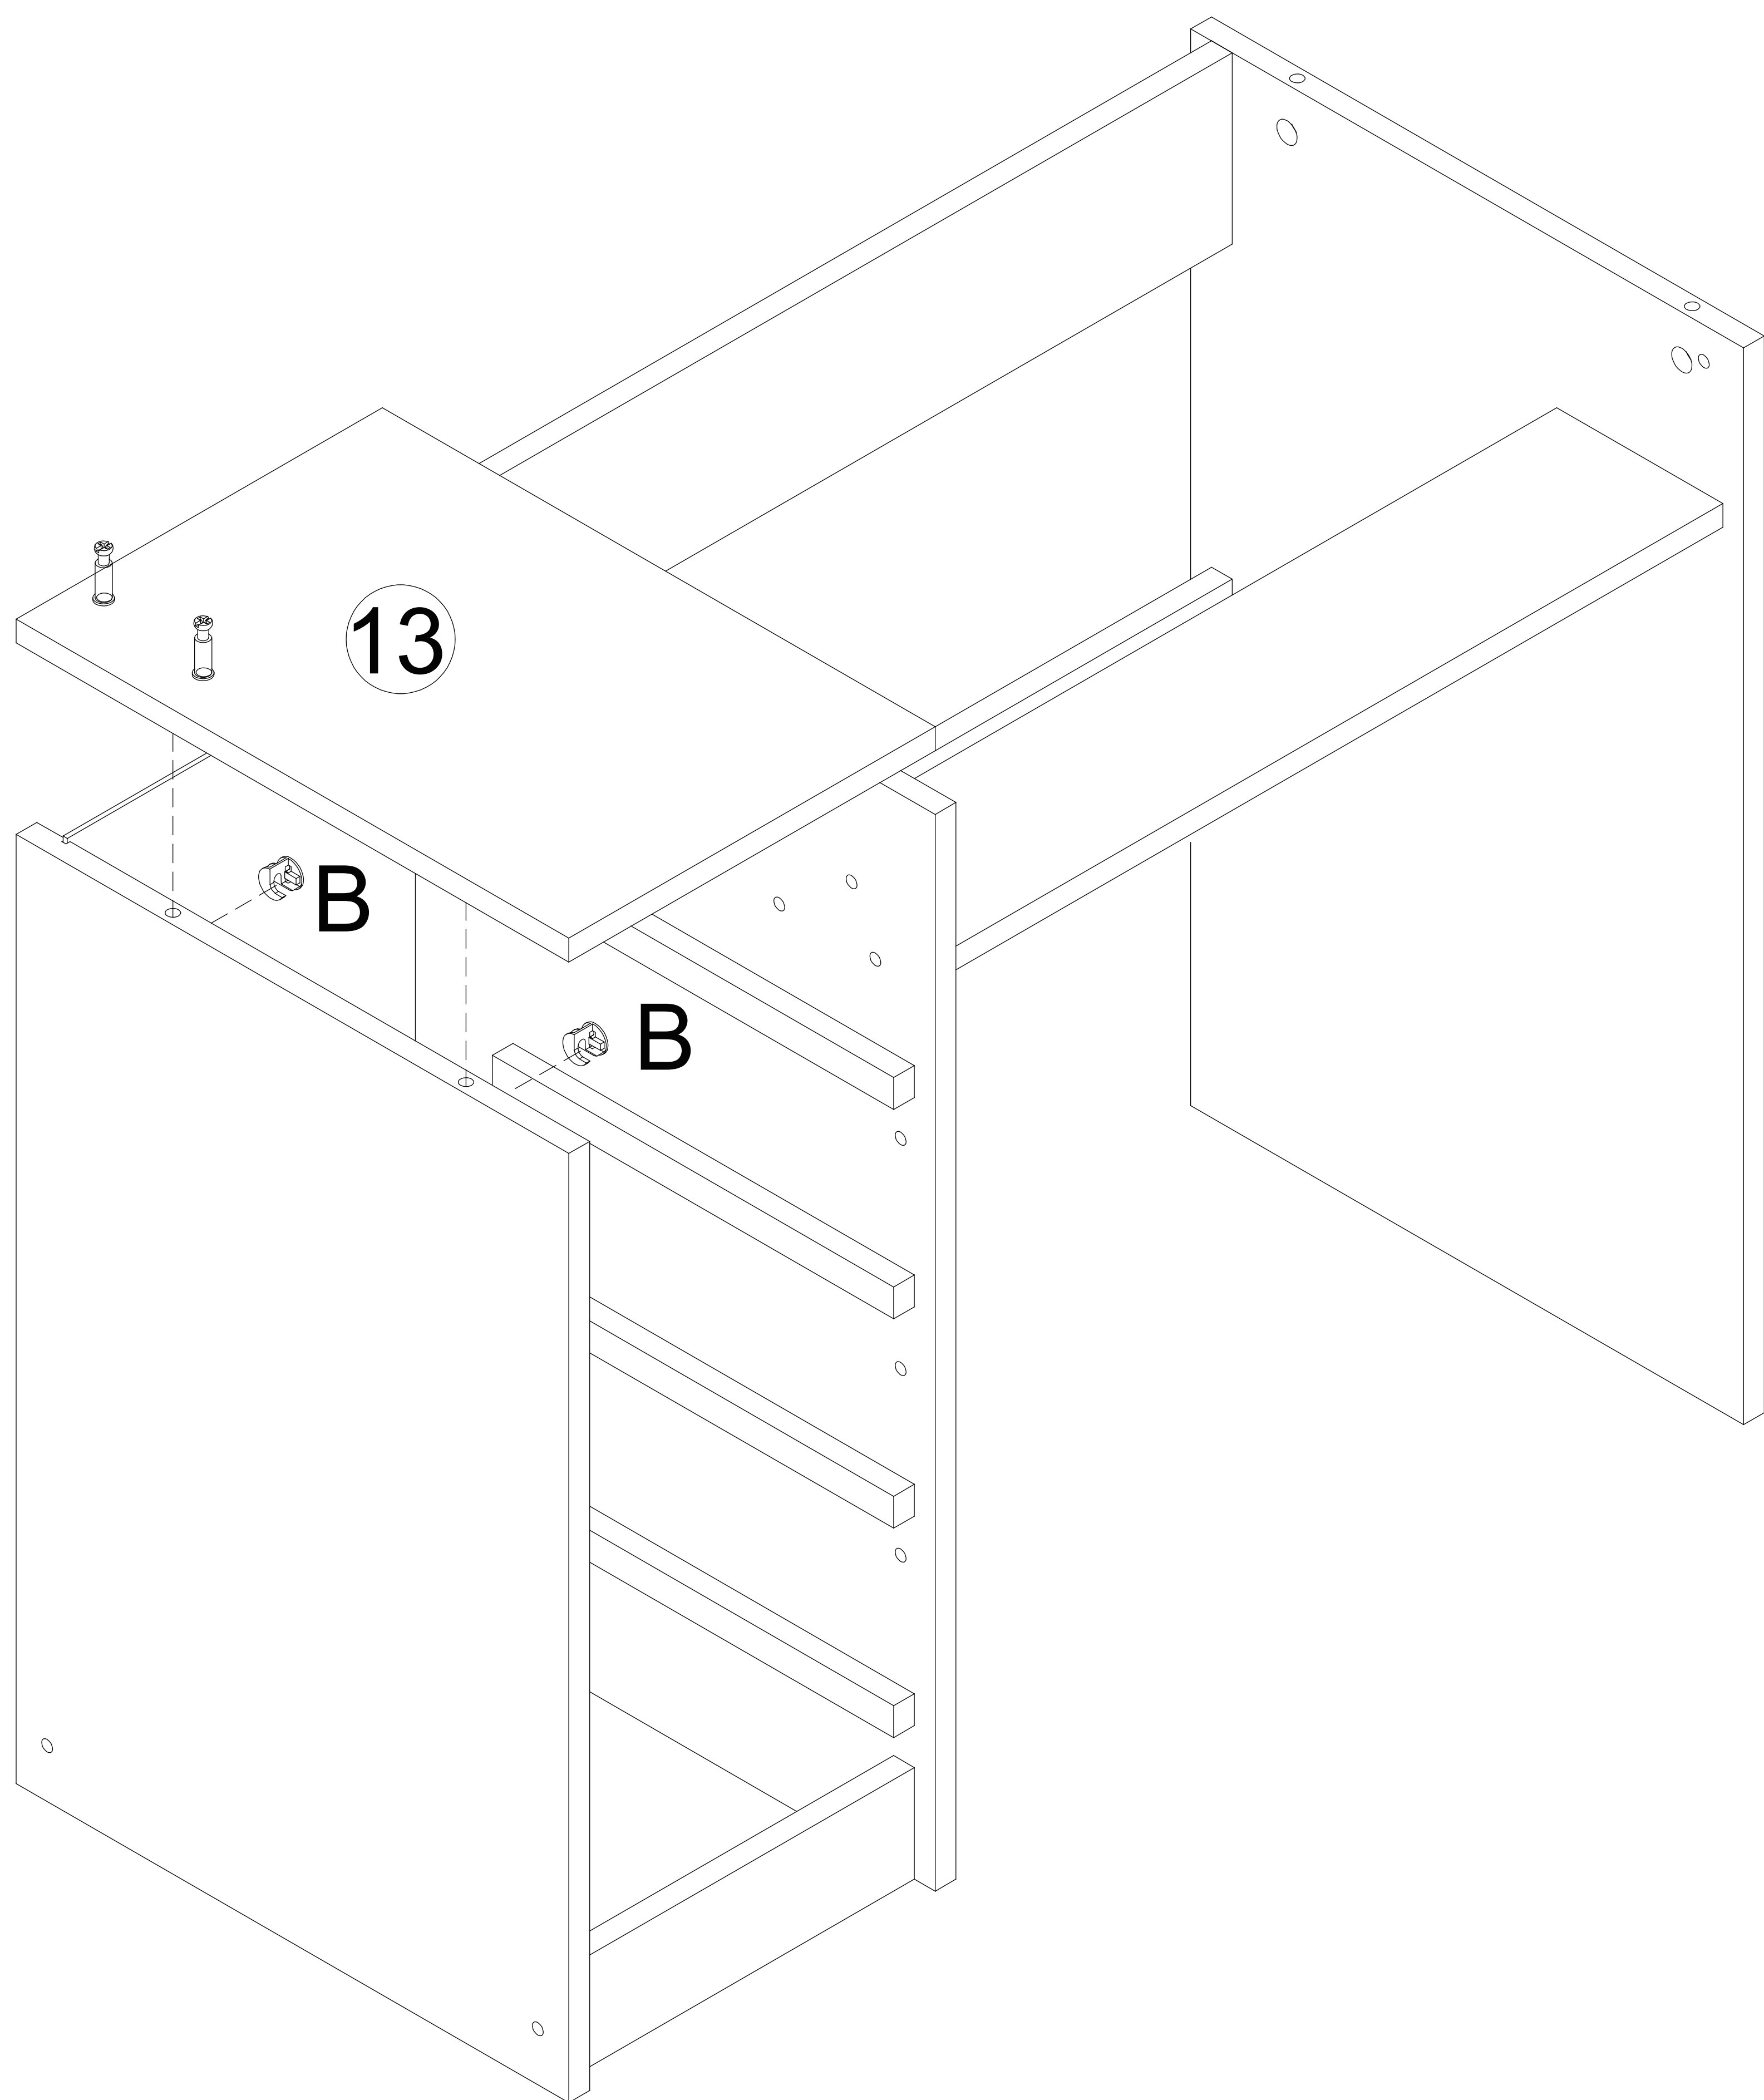


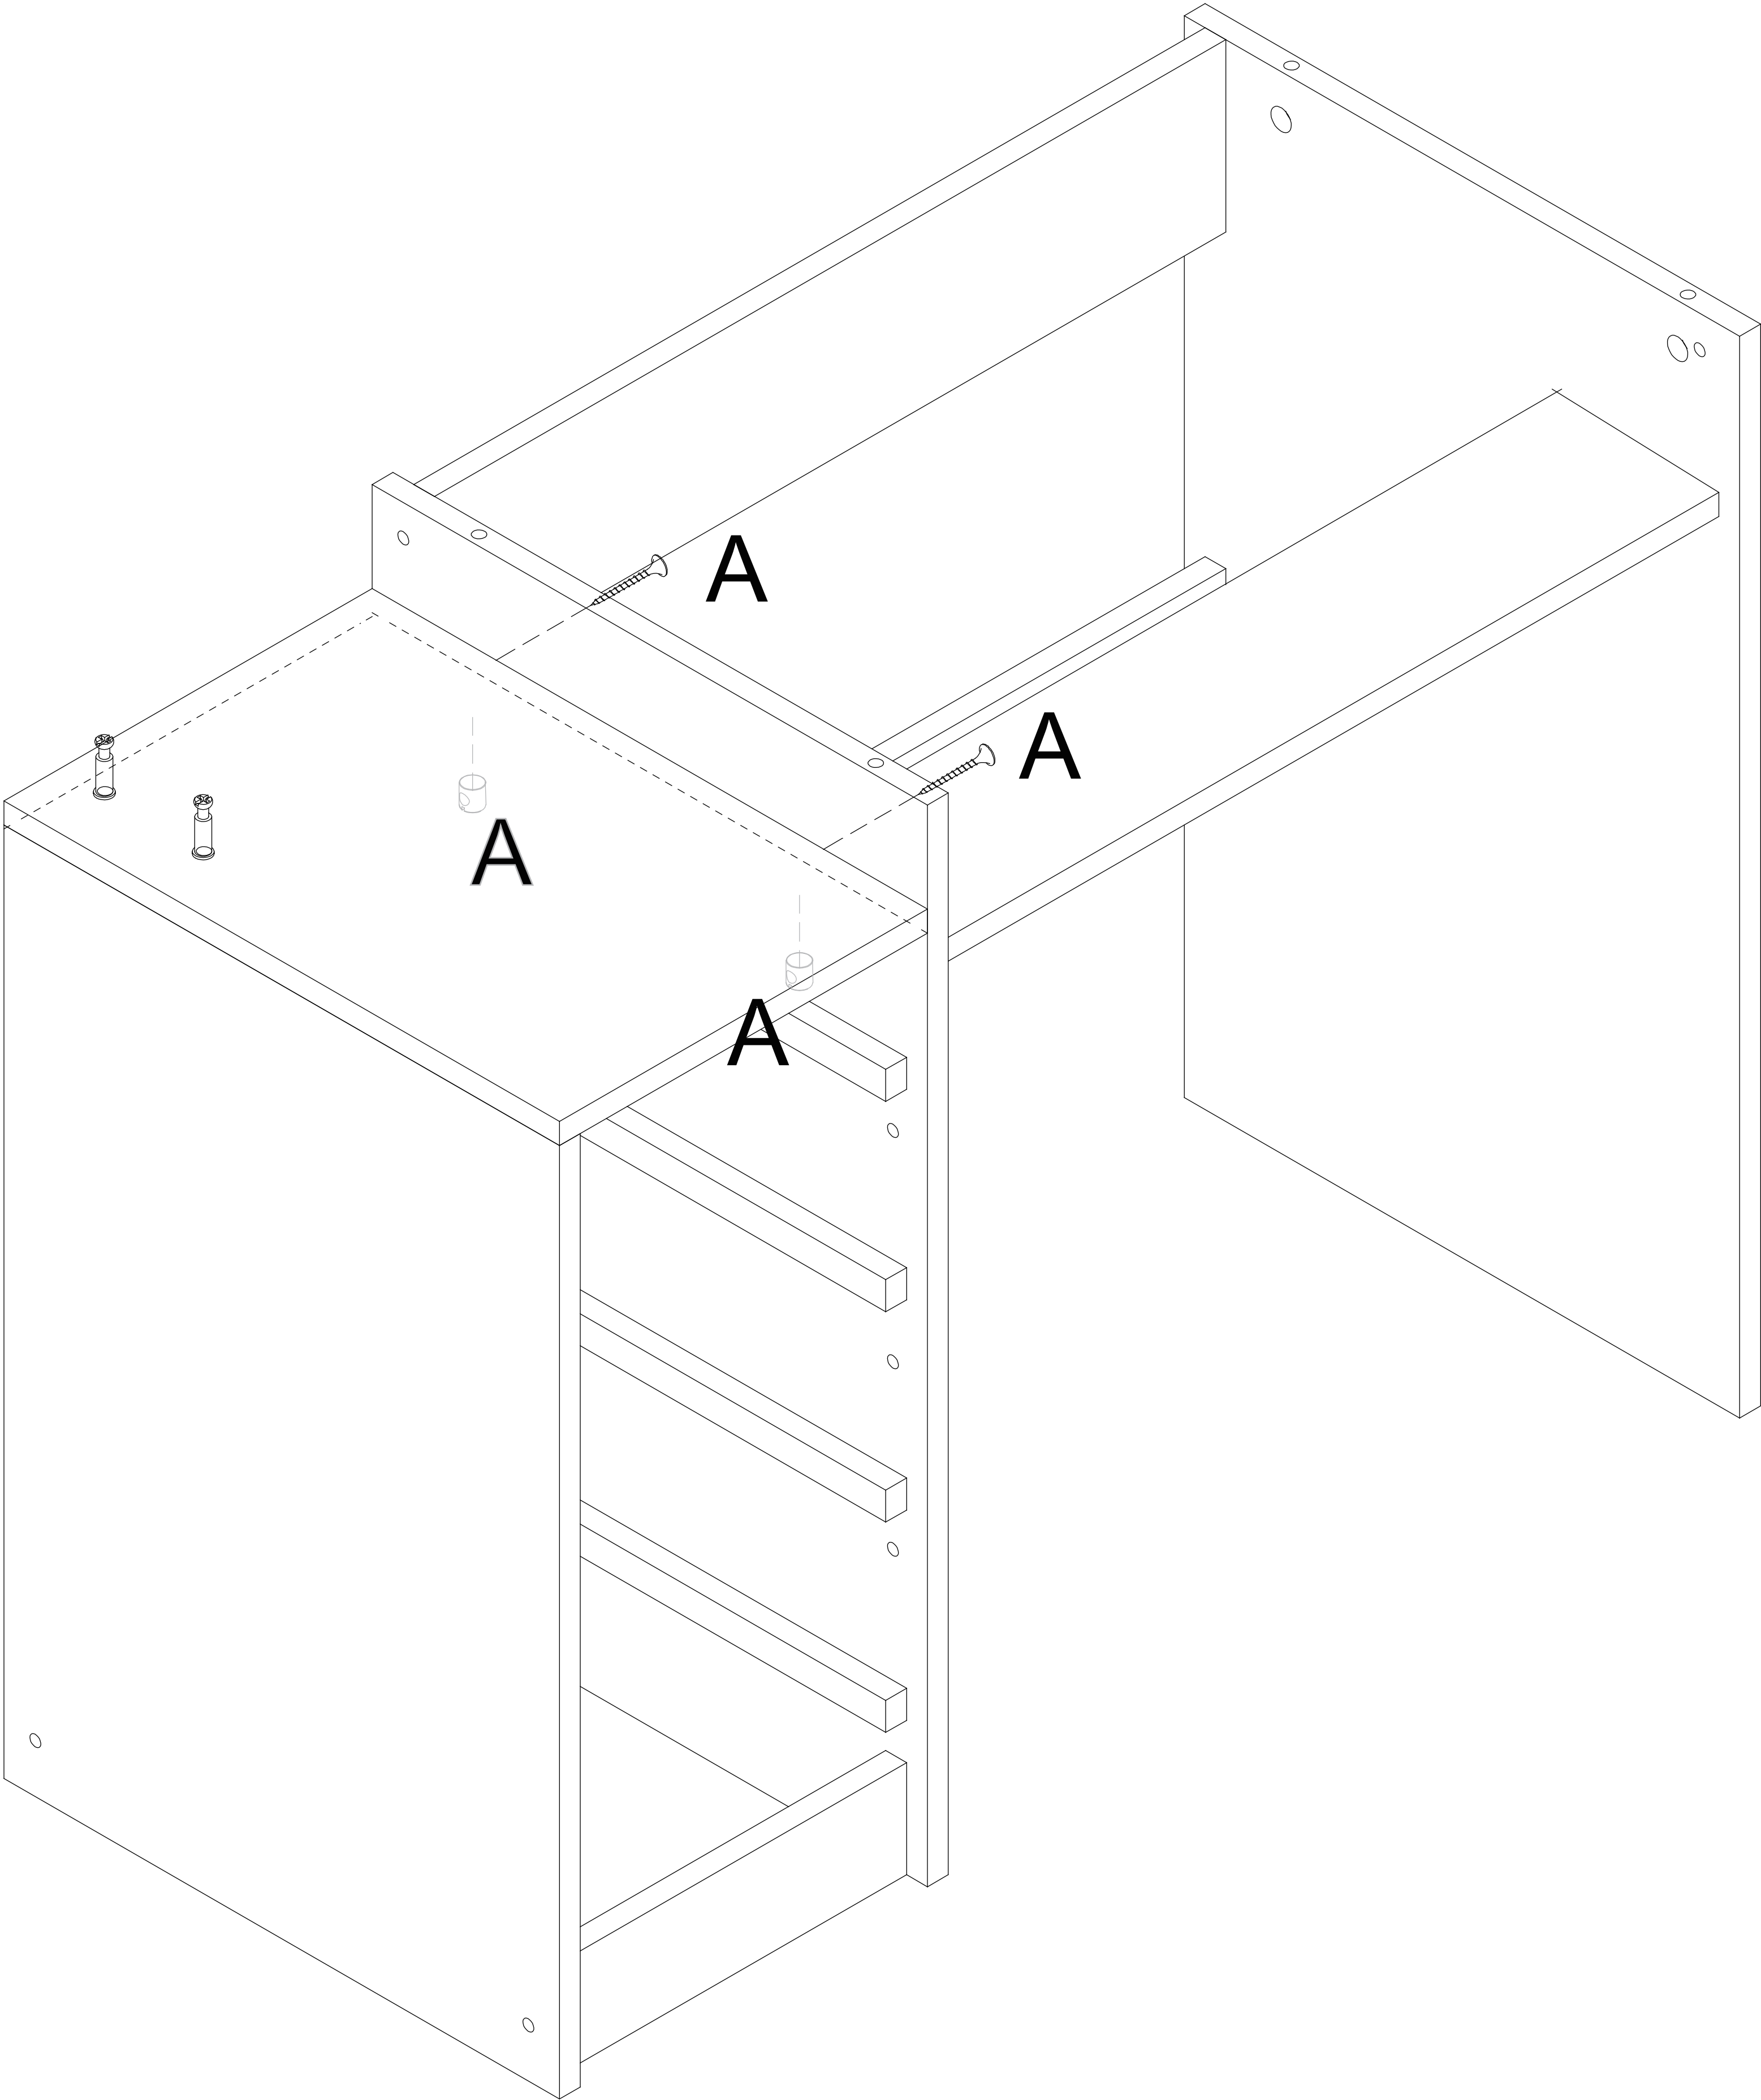


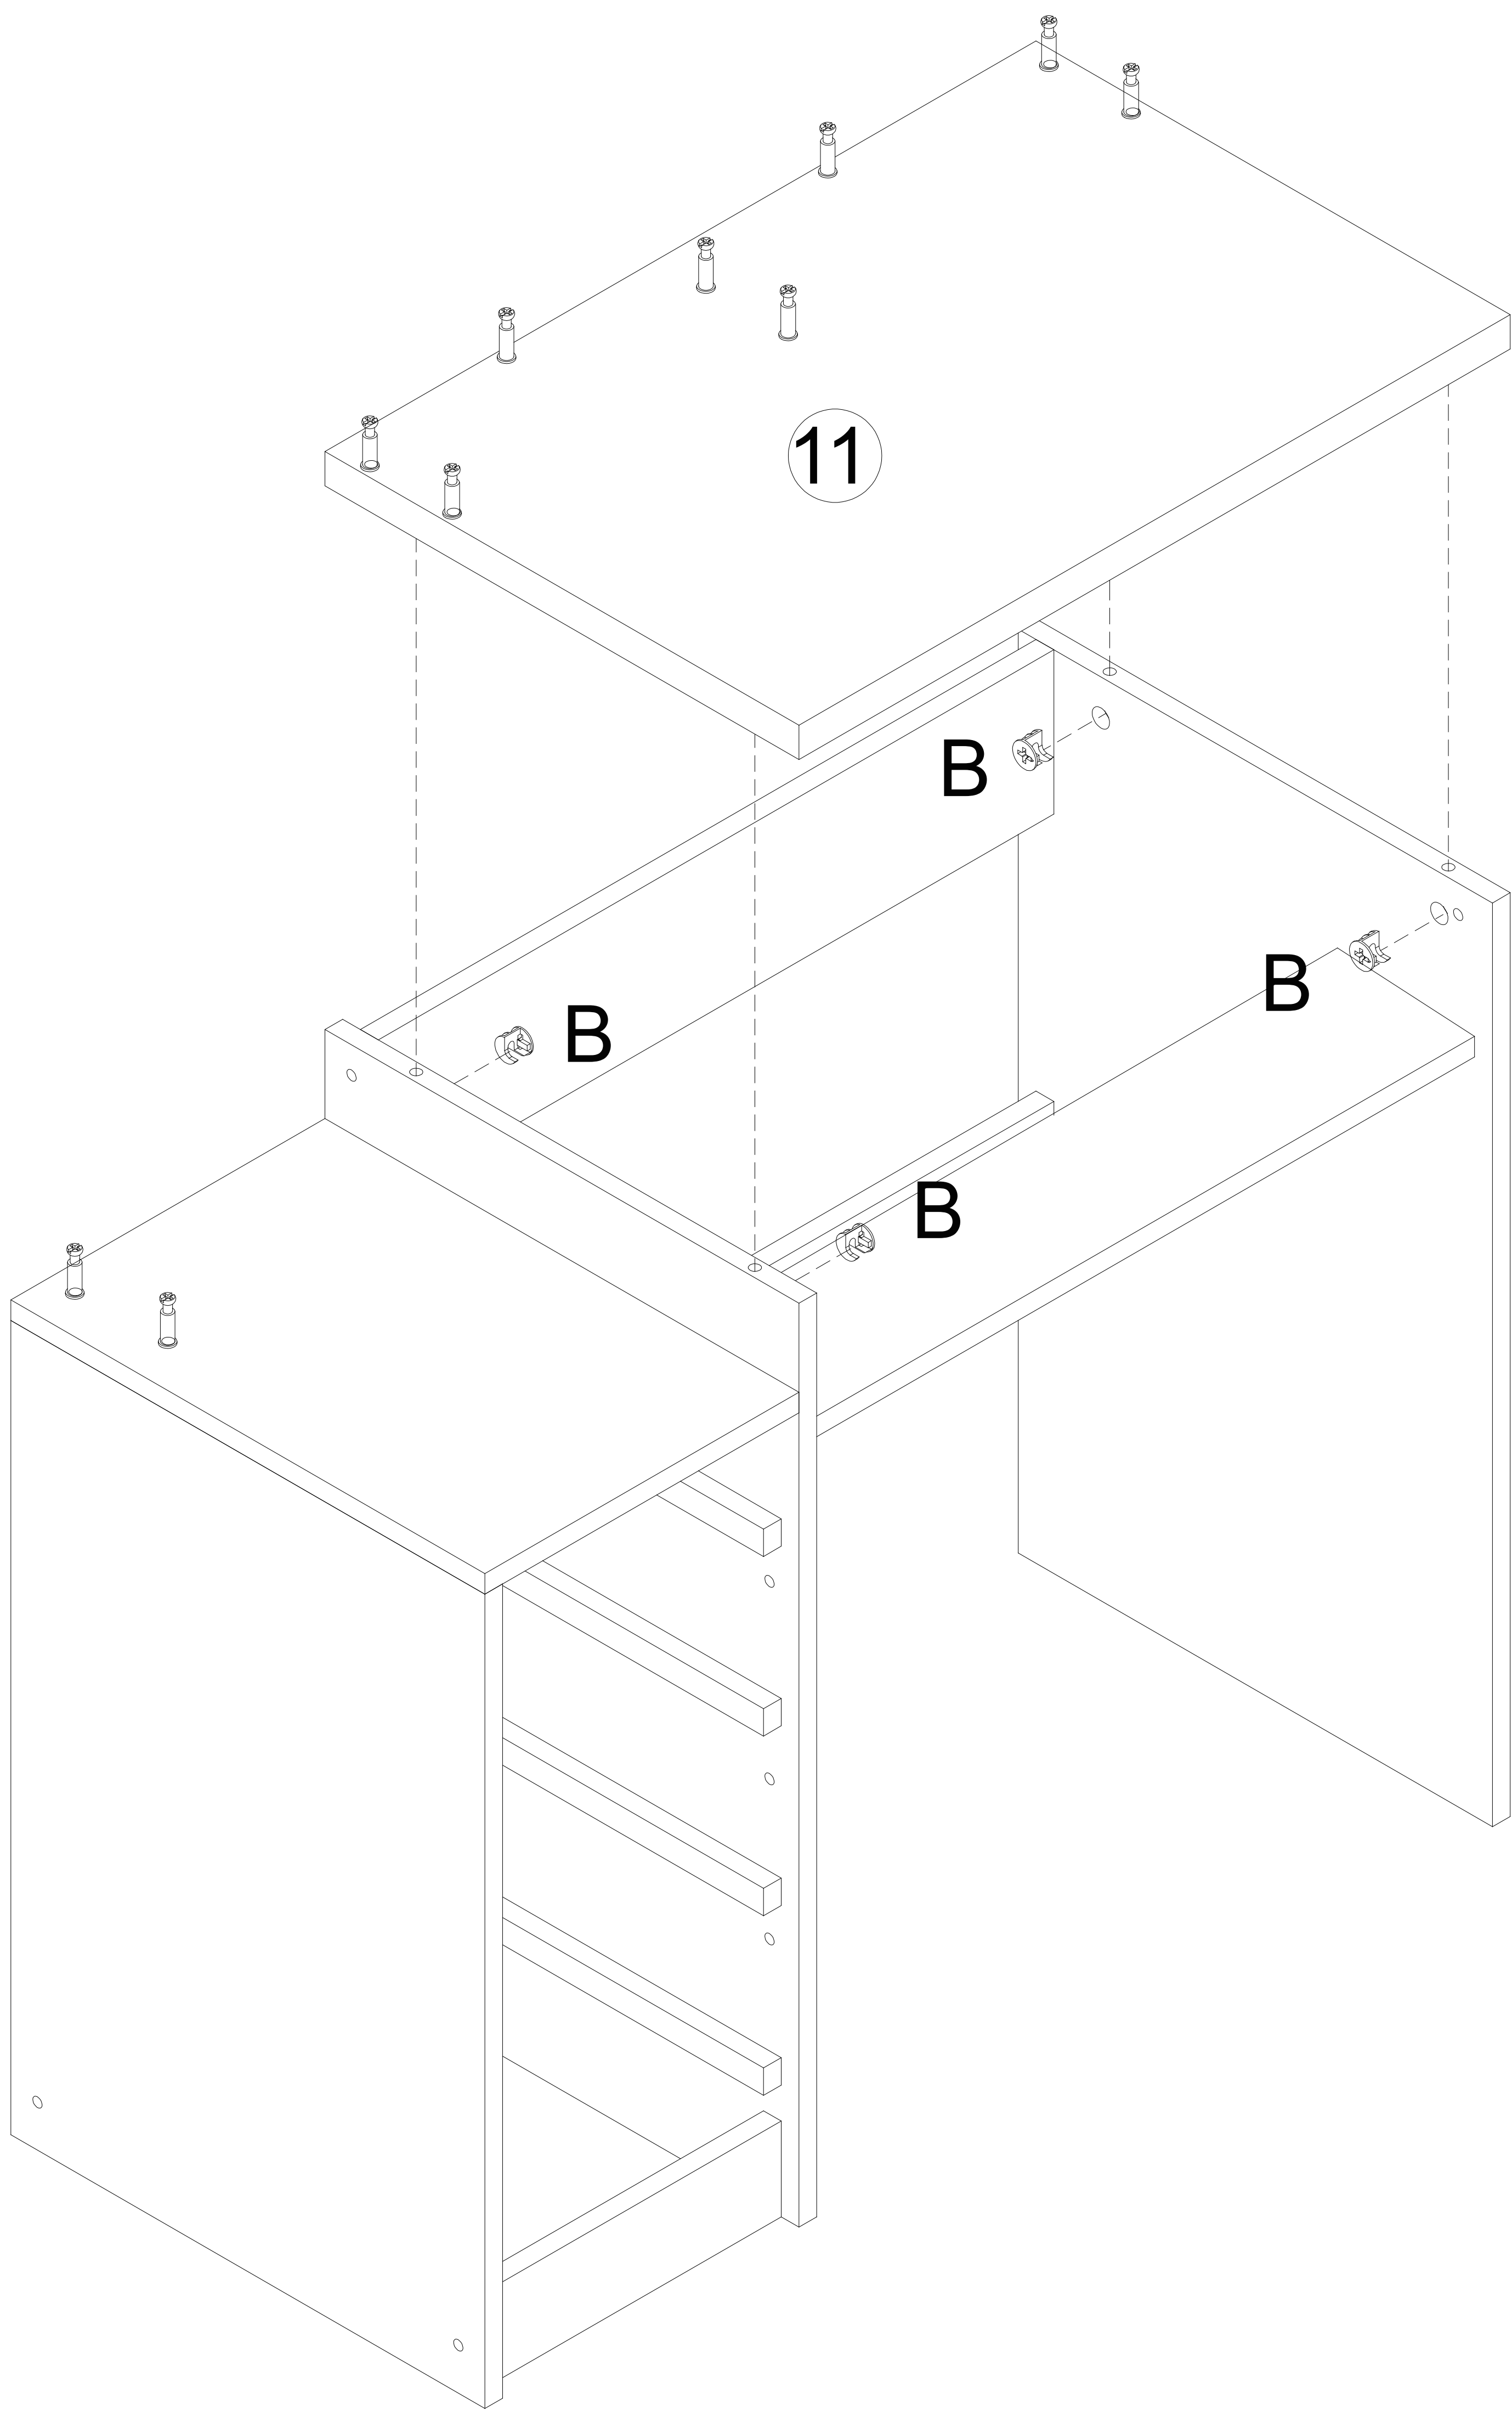


Step 13

pick up 18 x2, 19 x1, 20 x1, 21 x1, 22 x1


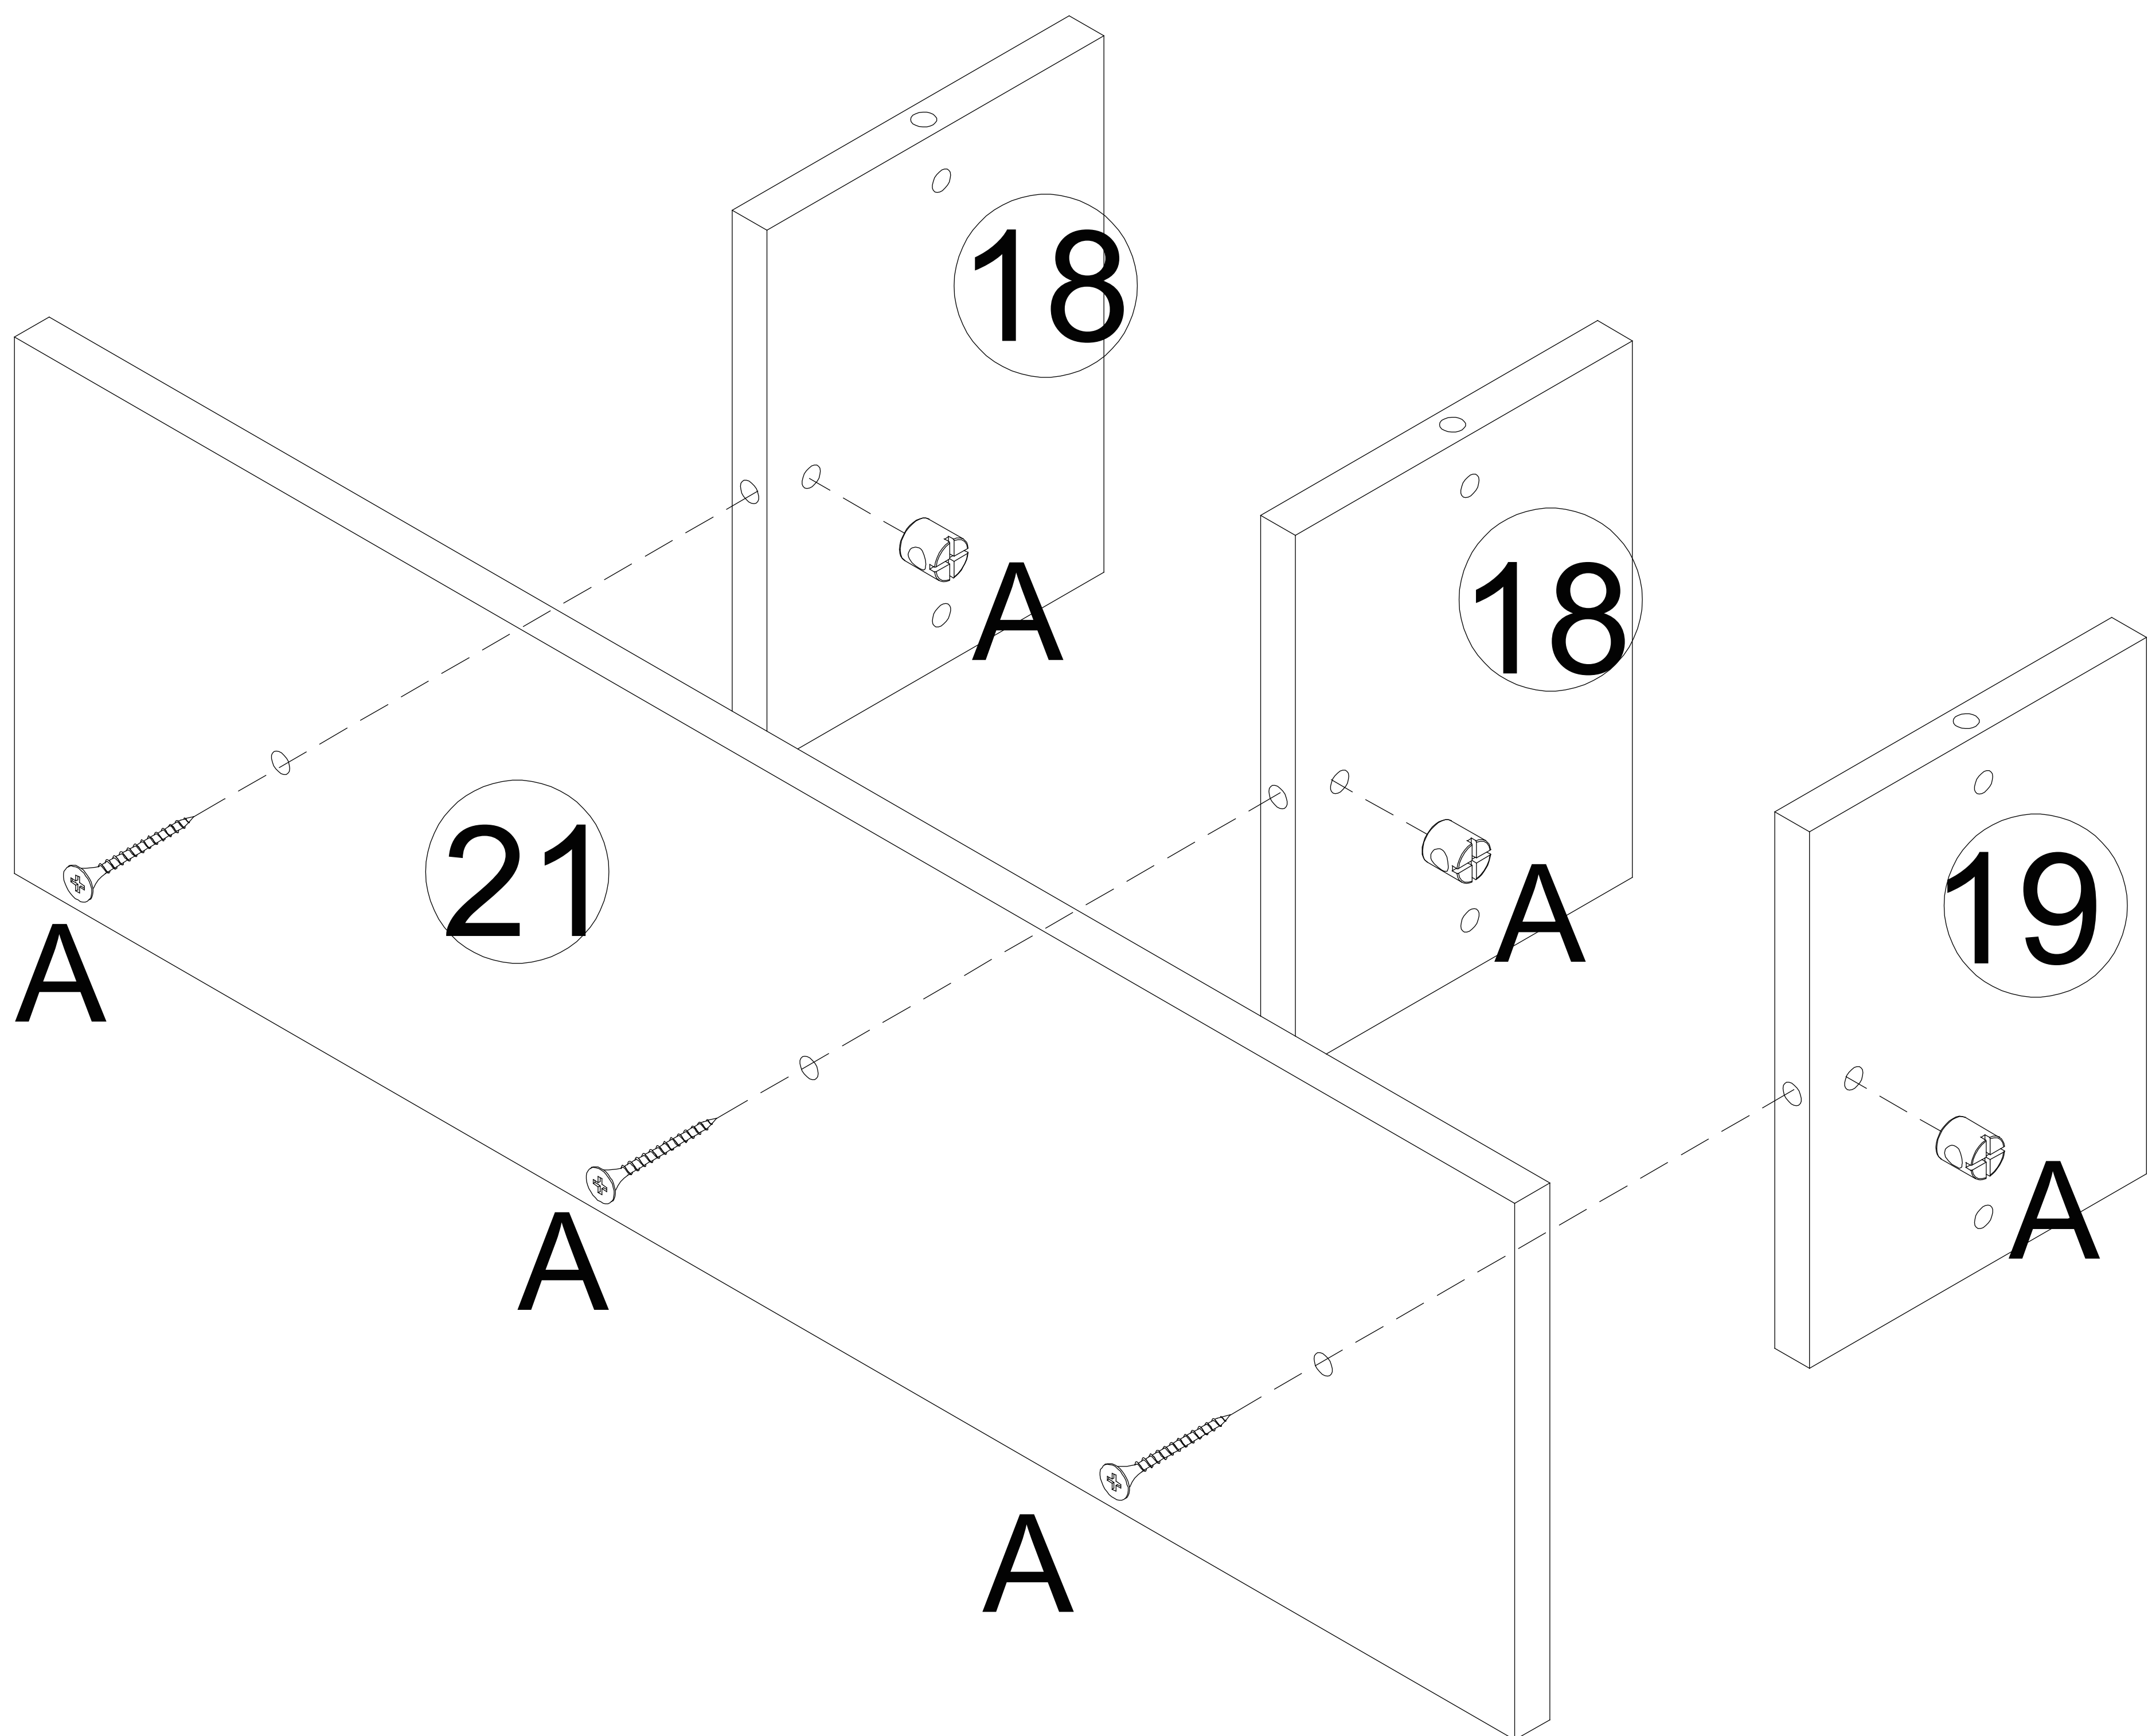


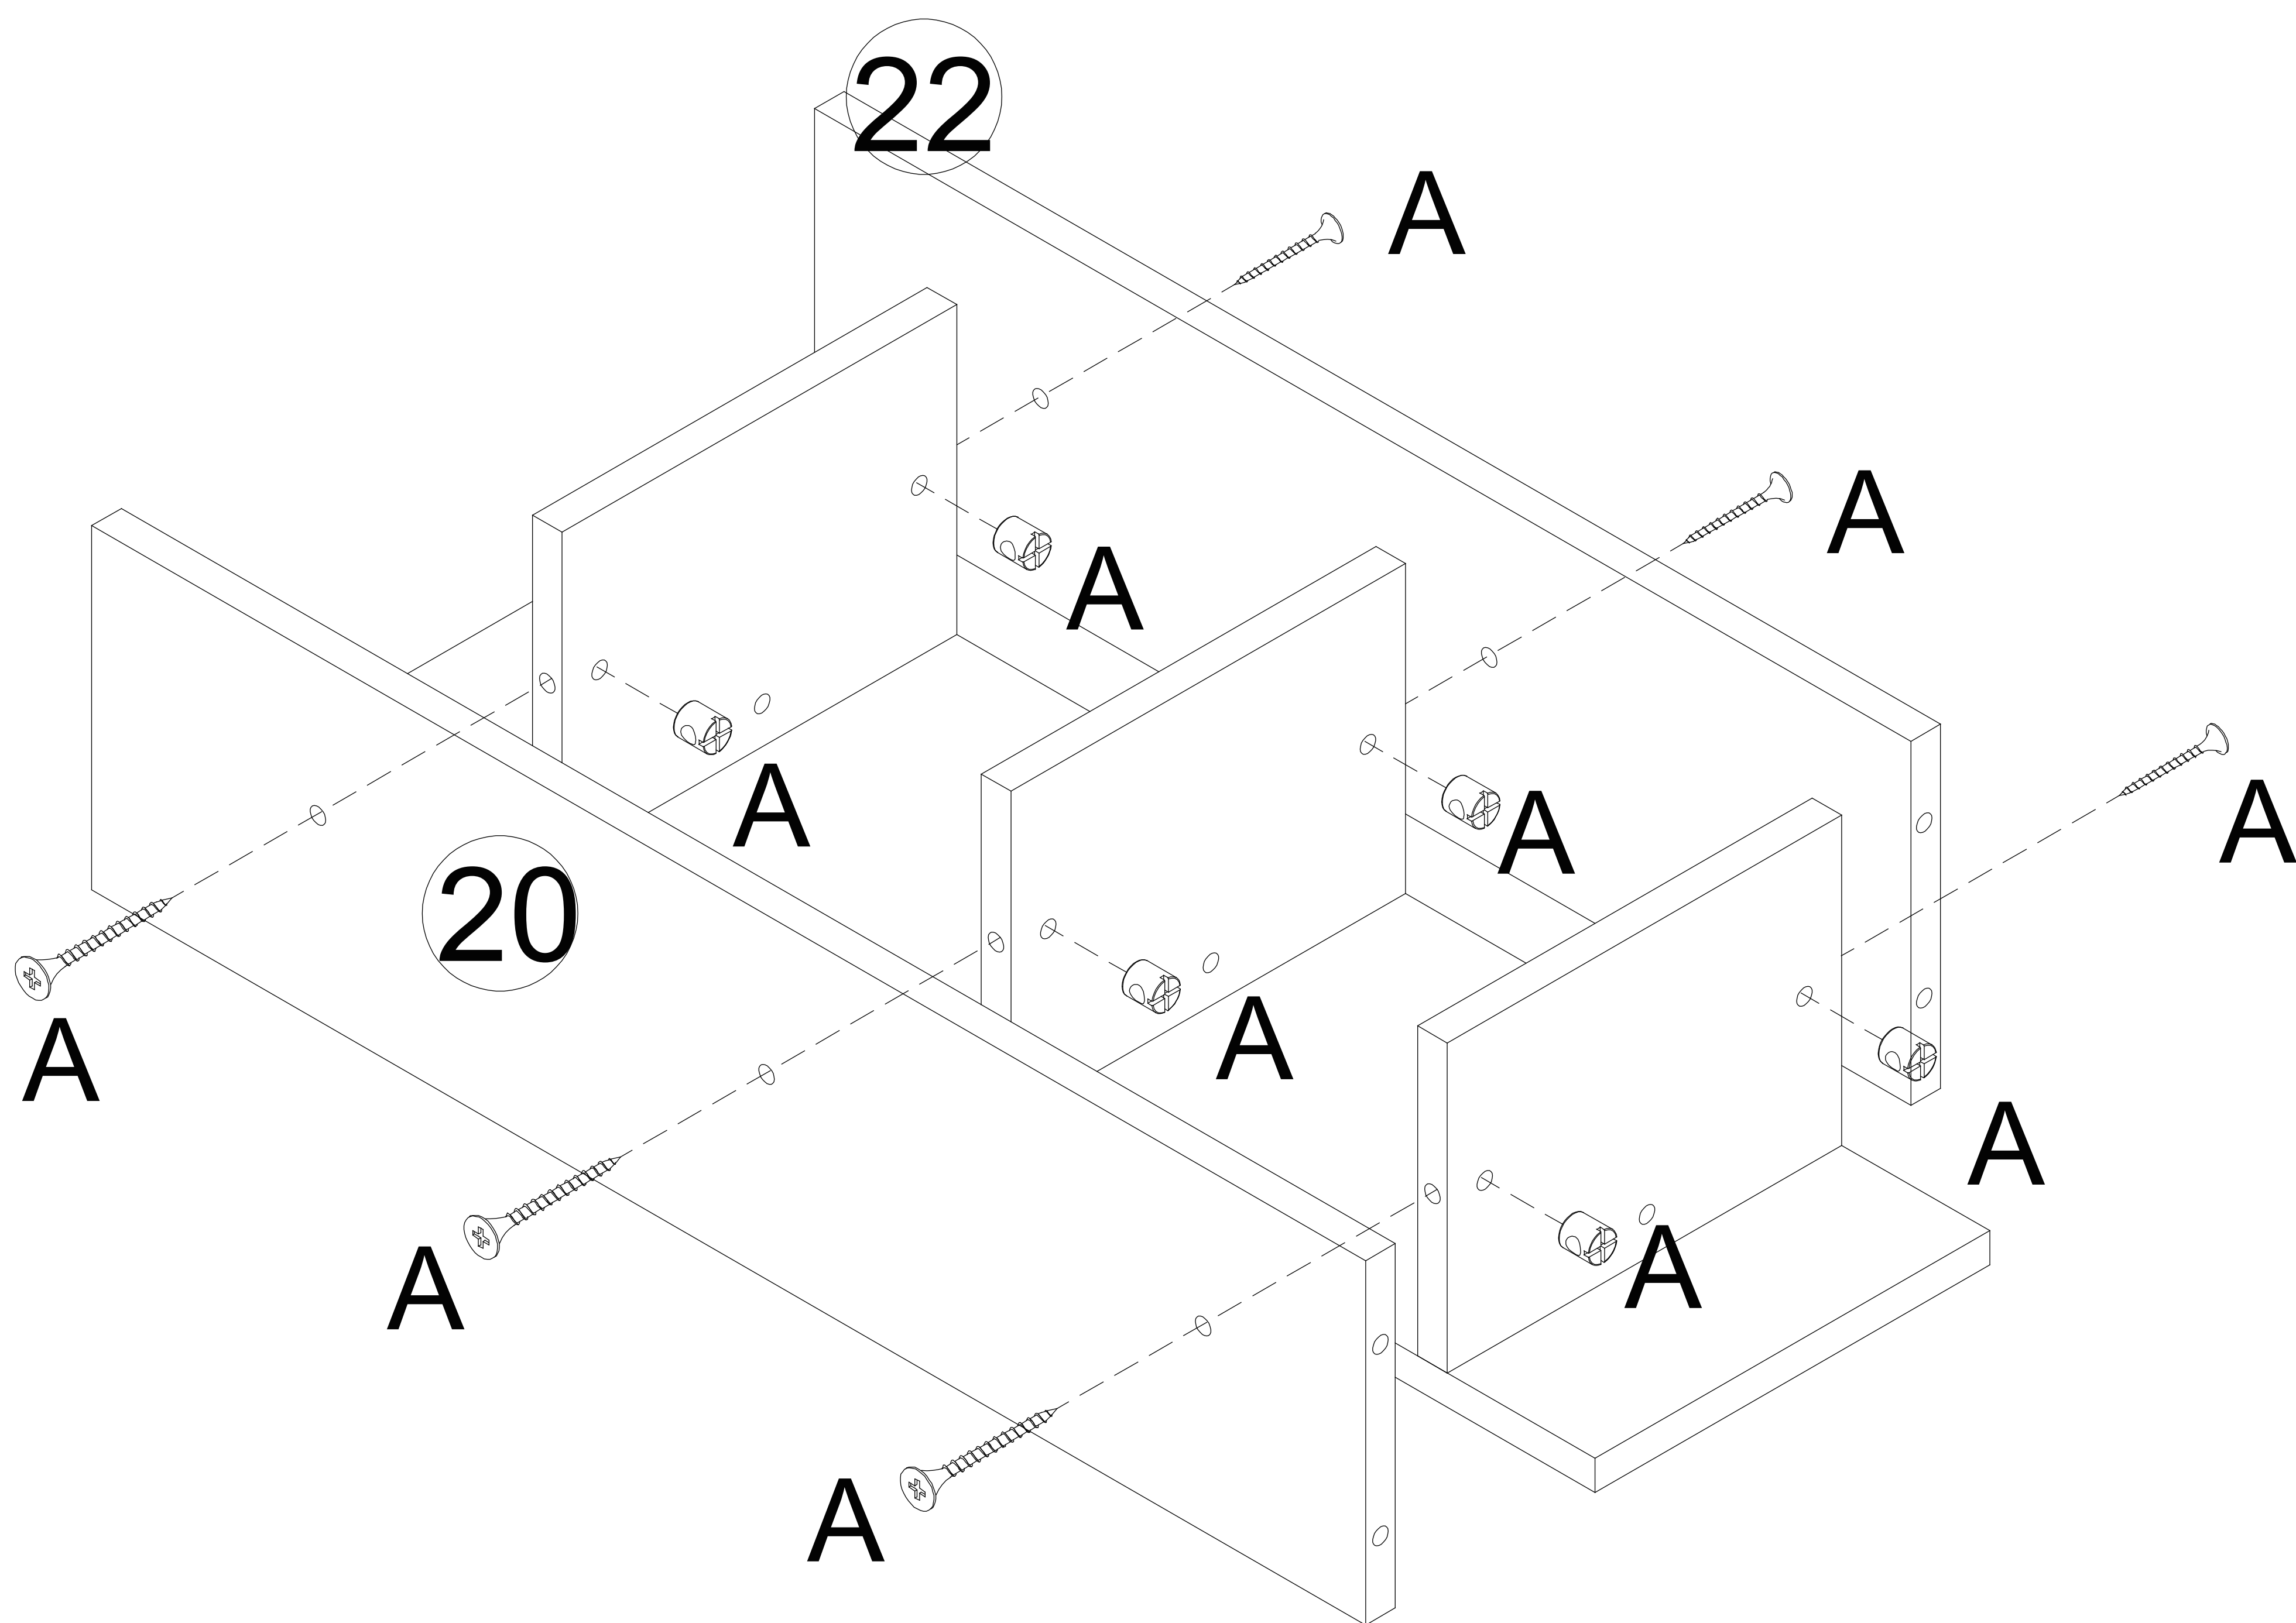

Step 15



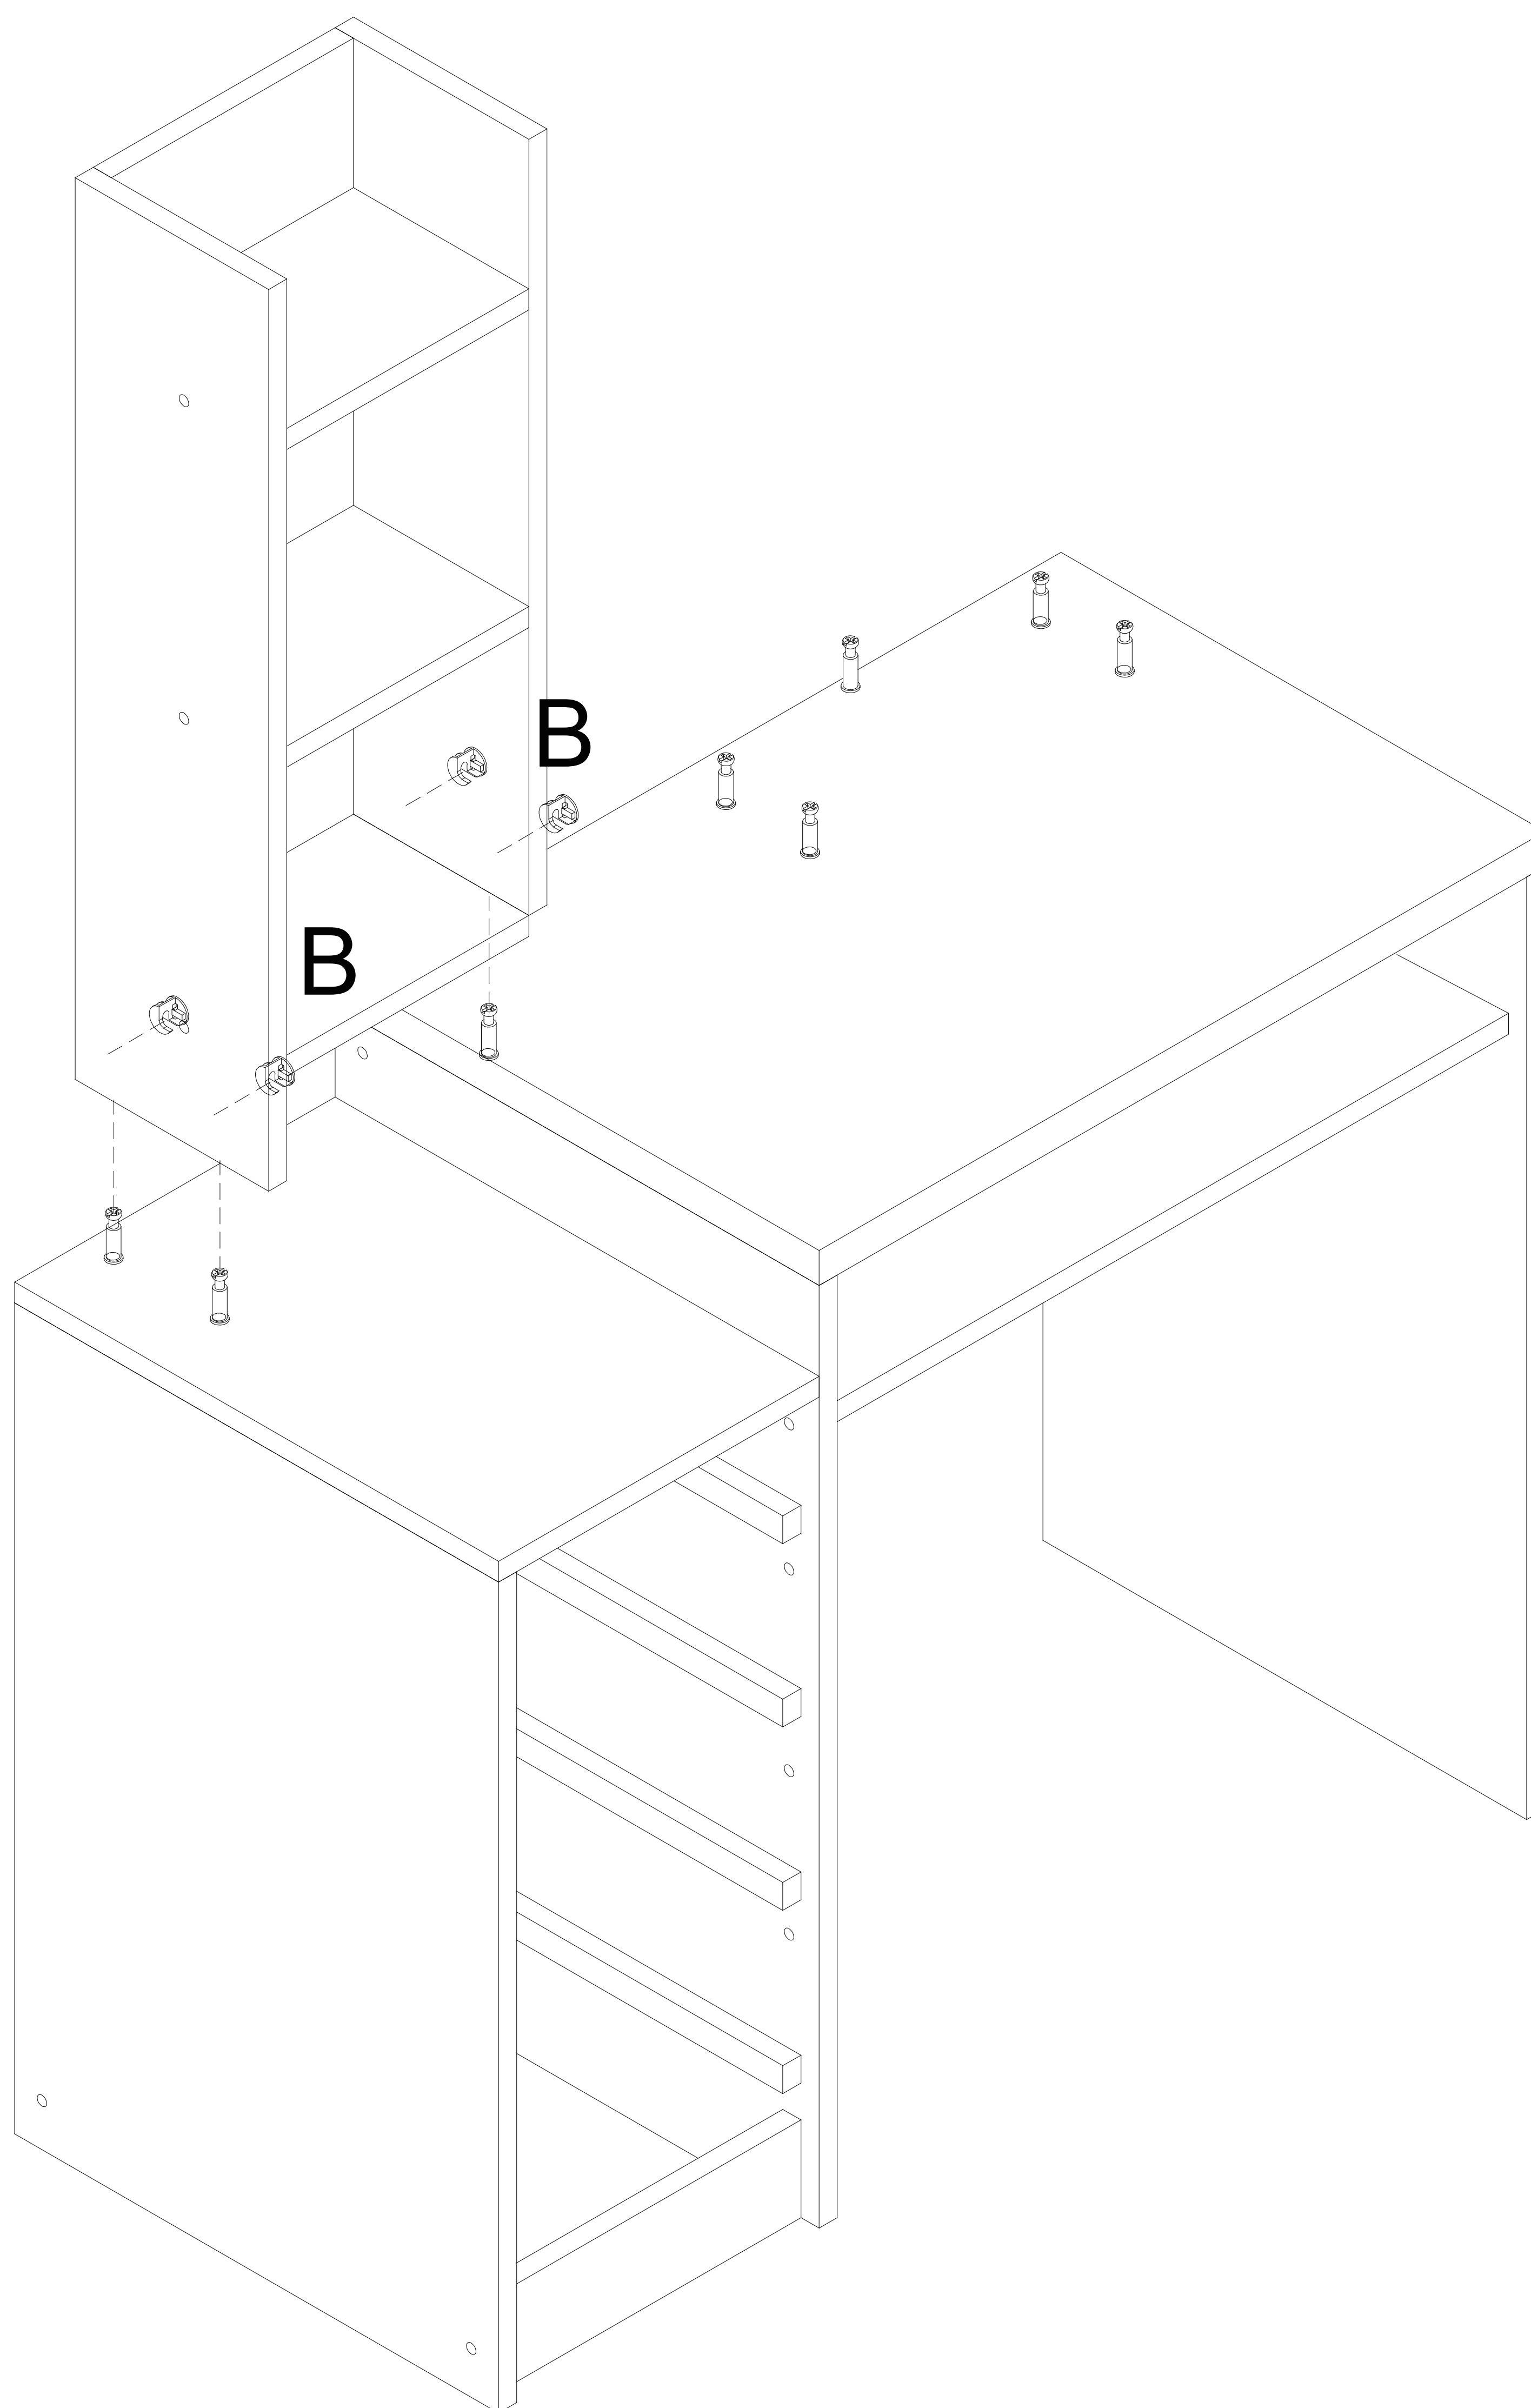


Step 16 pick up ②3 x1, ②4 x2, ③1 x1

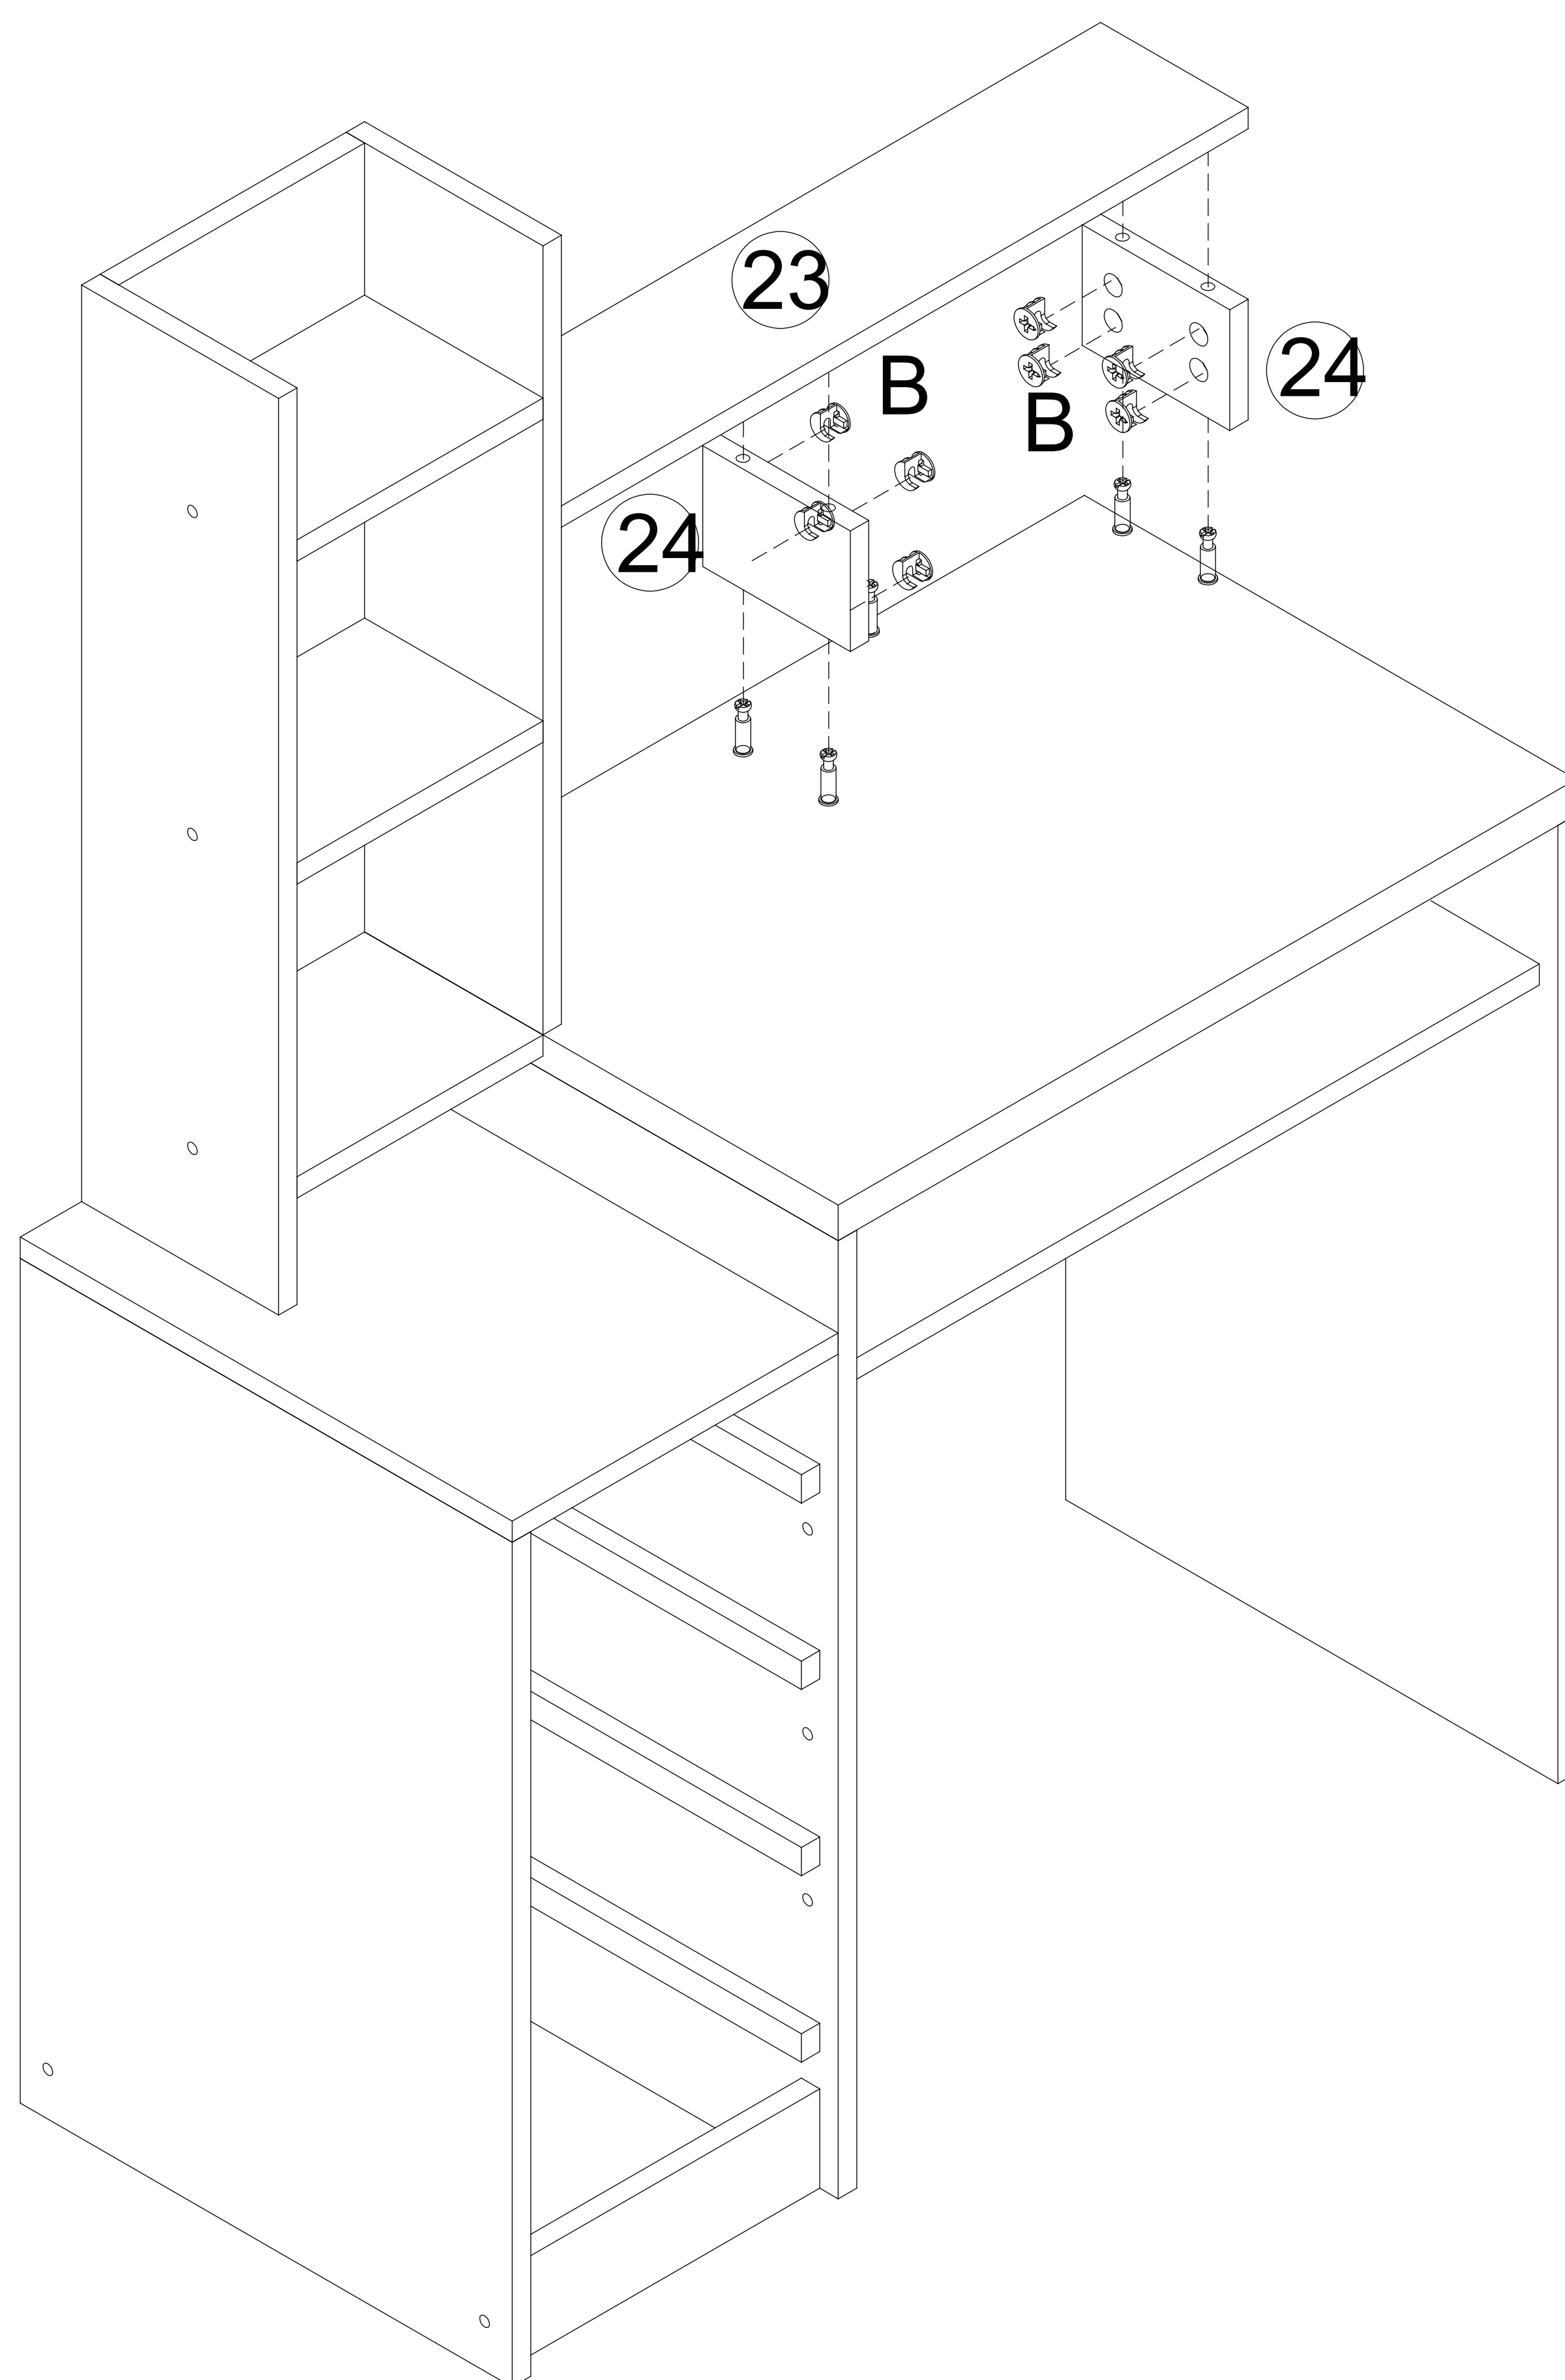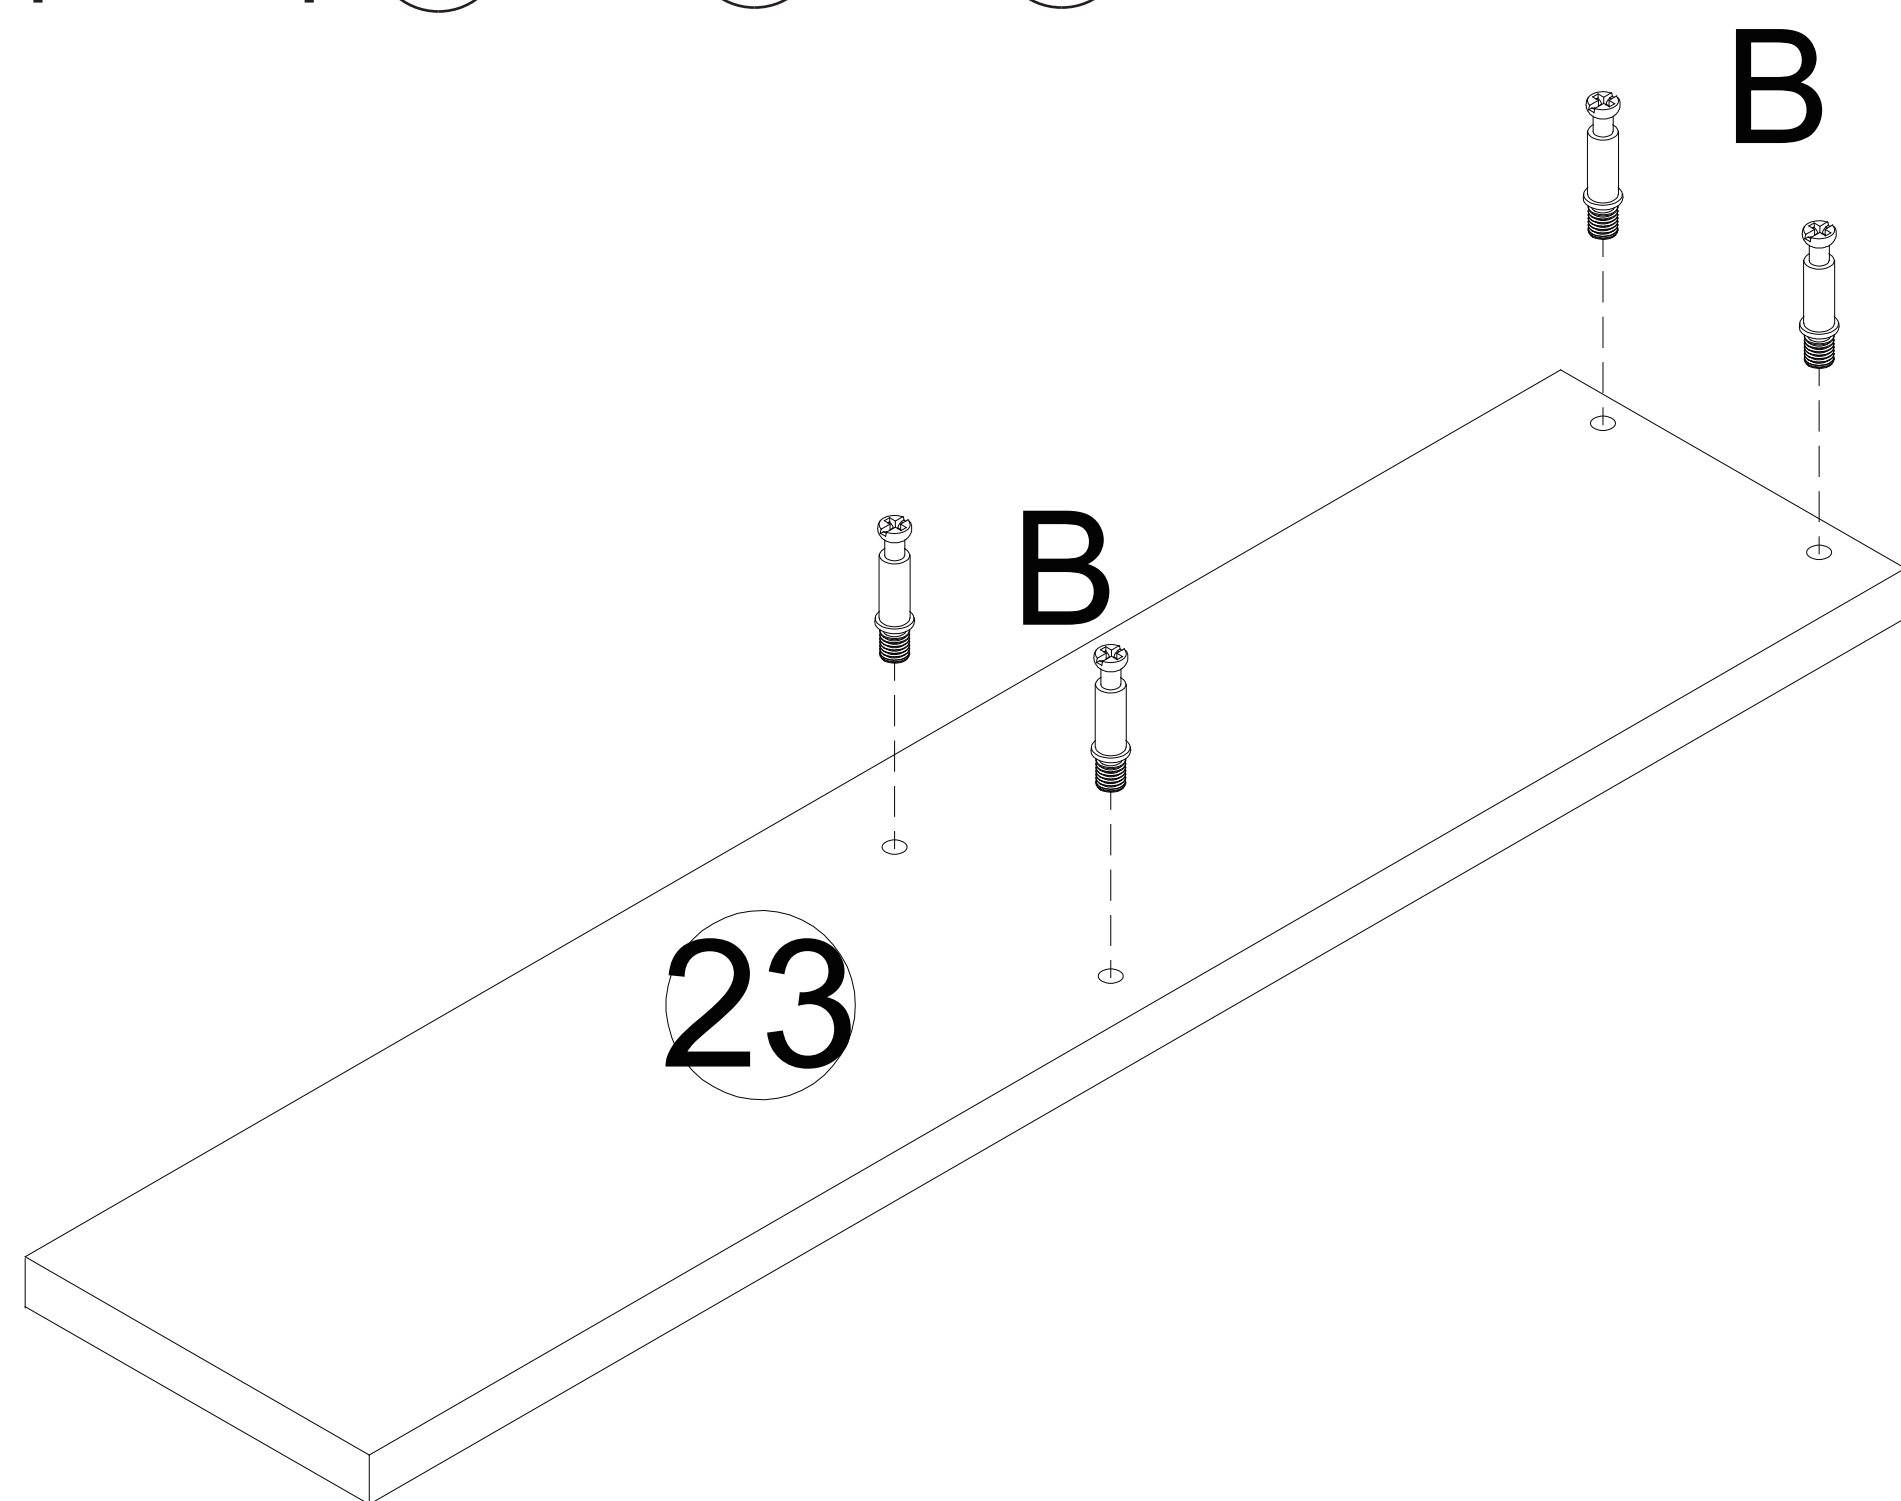


Step 17


For vanity table with light

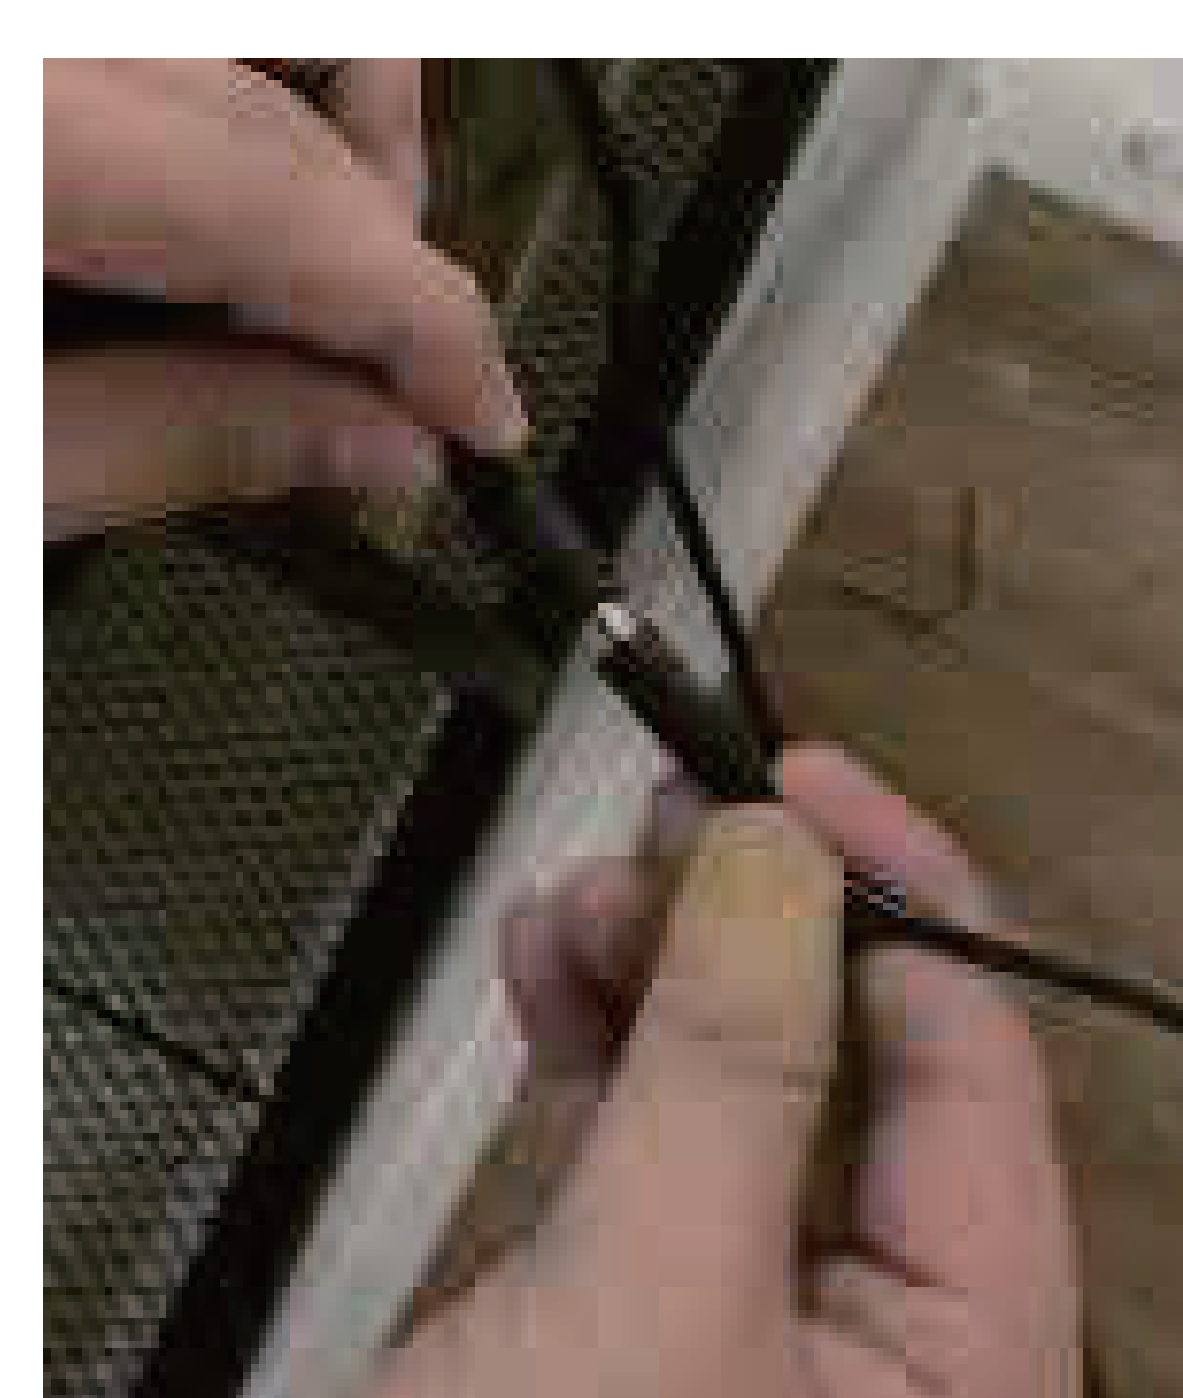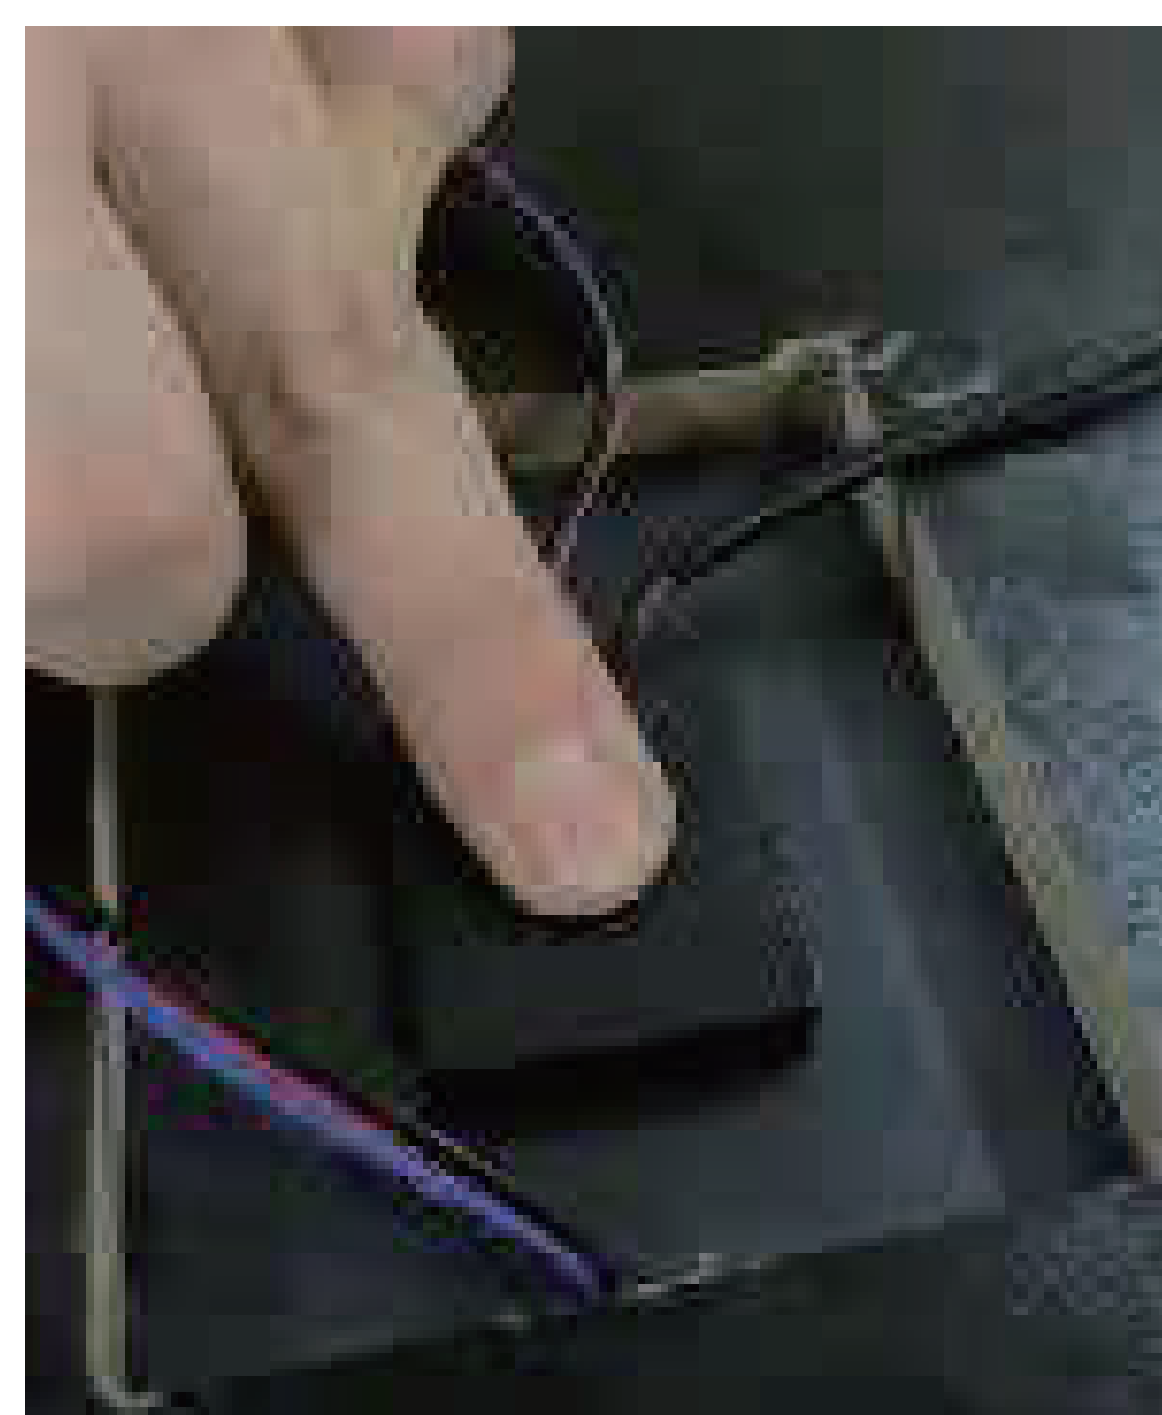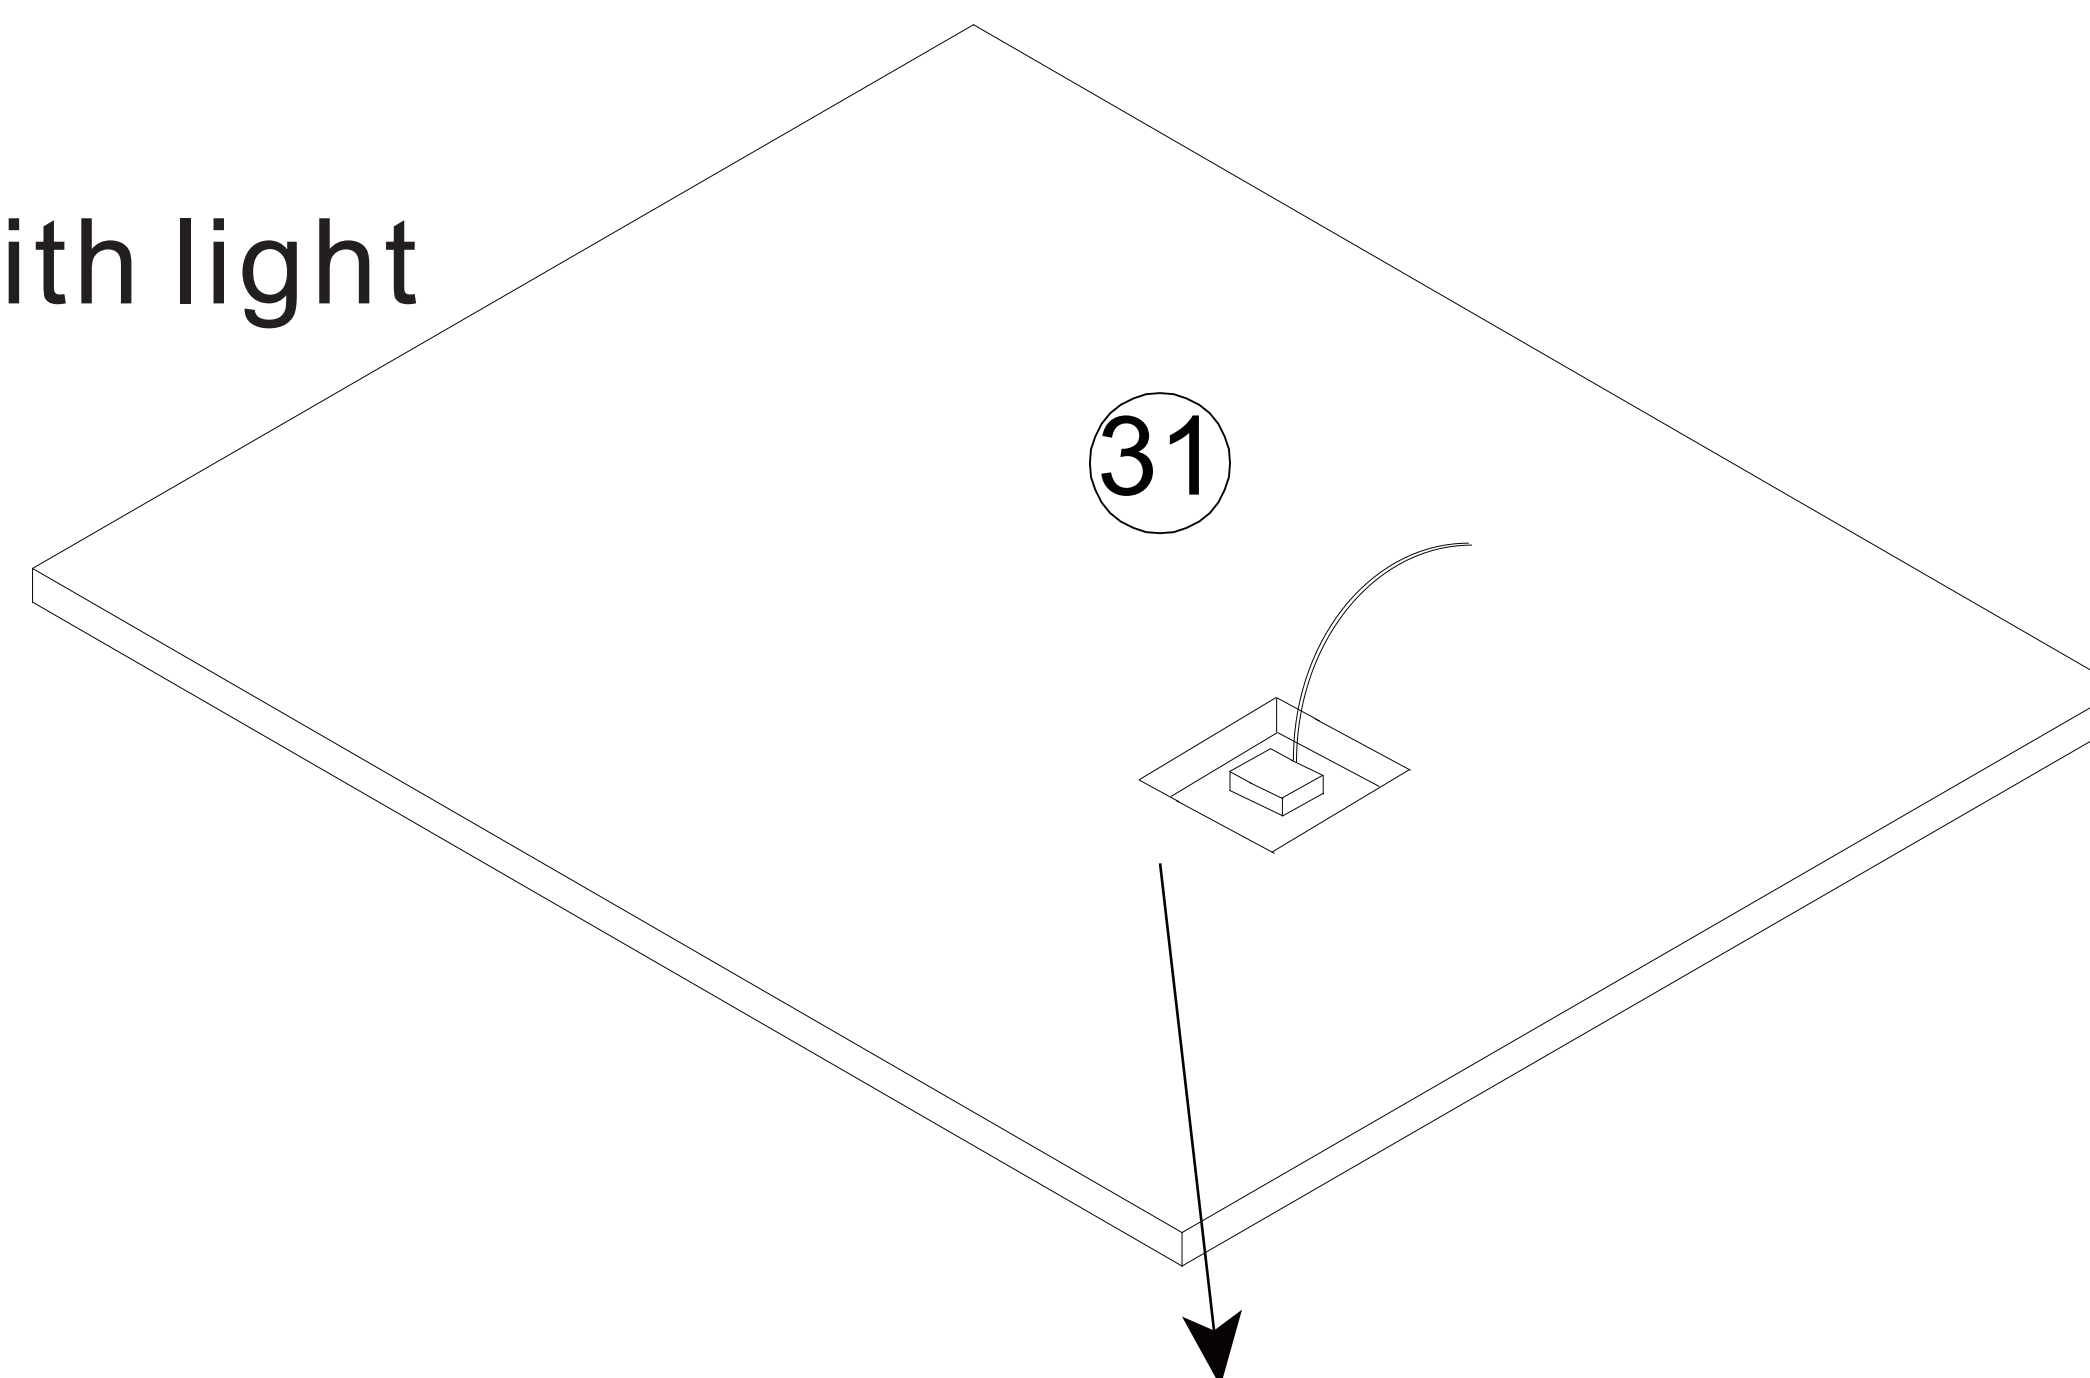



If your vanity table include a LED mirror light, please test the light in this step. Touch the switch botton on the mirror to turn on the mirror light, click the switch botton to change the color of the light, and long press the switch botton to adjust the brightness. If the switch botton is not sensitive, you can check whether the touch switch is tightly attached to the mirror back as shown in the diagram. If it is not tightly attached, please use your fingers to press the touch switch to the designated position and check if the connecting wire is OK.

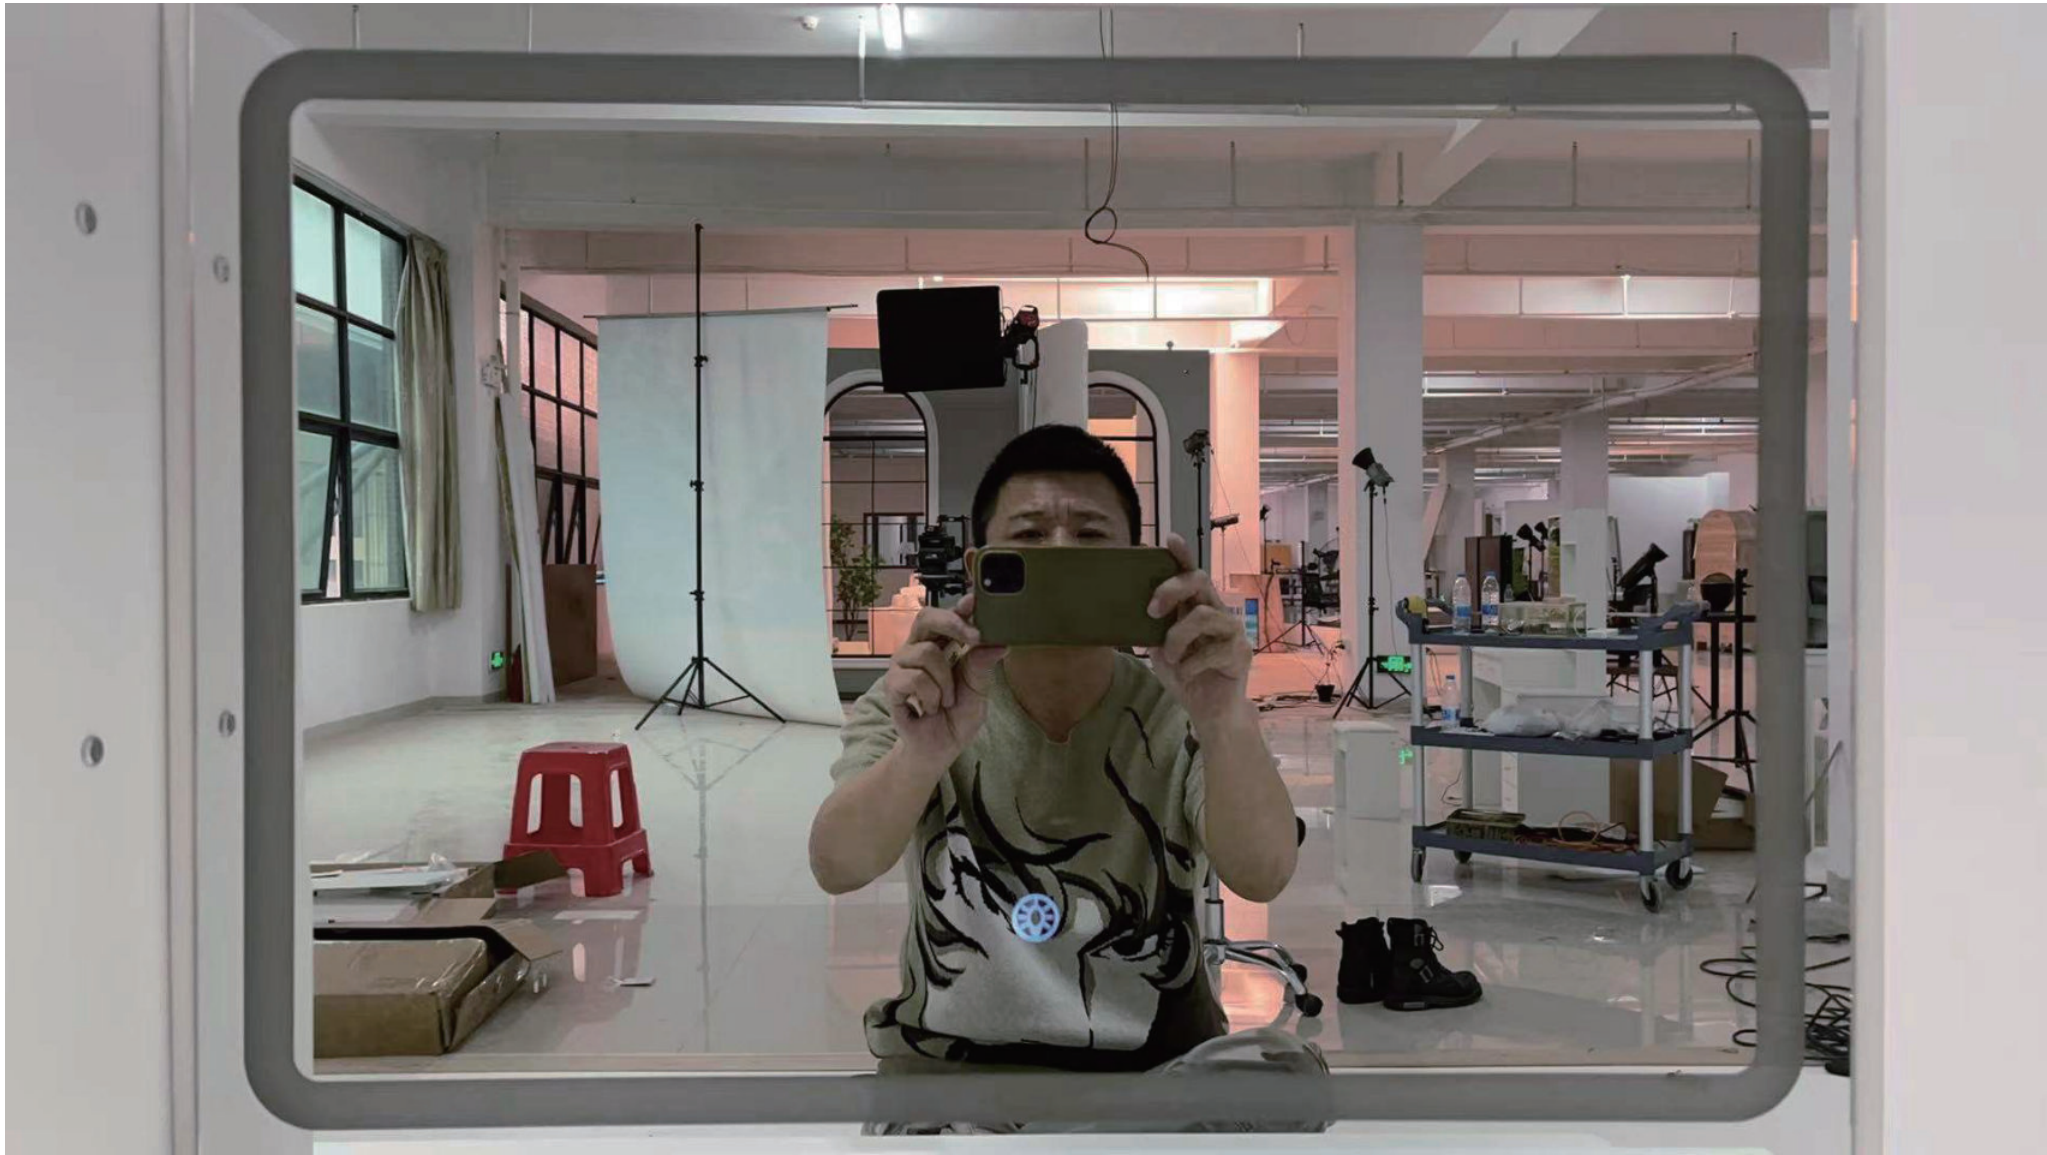


Please connect the light power cord as shown in the diagram, click the touch switch to turn on the mirror light. Please note that due to strict safety standards and heat dissipation requirements, the maximum brightness of the mirror light must be controlled below the safety standards. Therefore, the mirror light is not very bright and is not used for lighting purposes. It is only used to adjust the color of the environment. If you think that the light is not bright enough, it is due to safety standards limitations, not product quality defects.

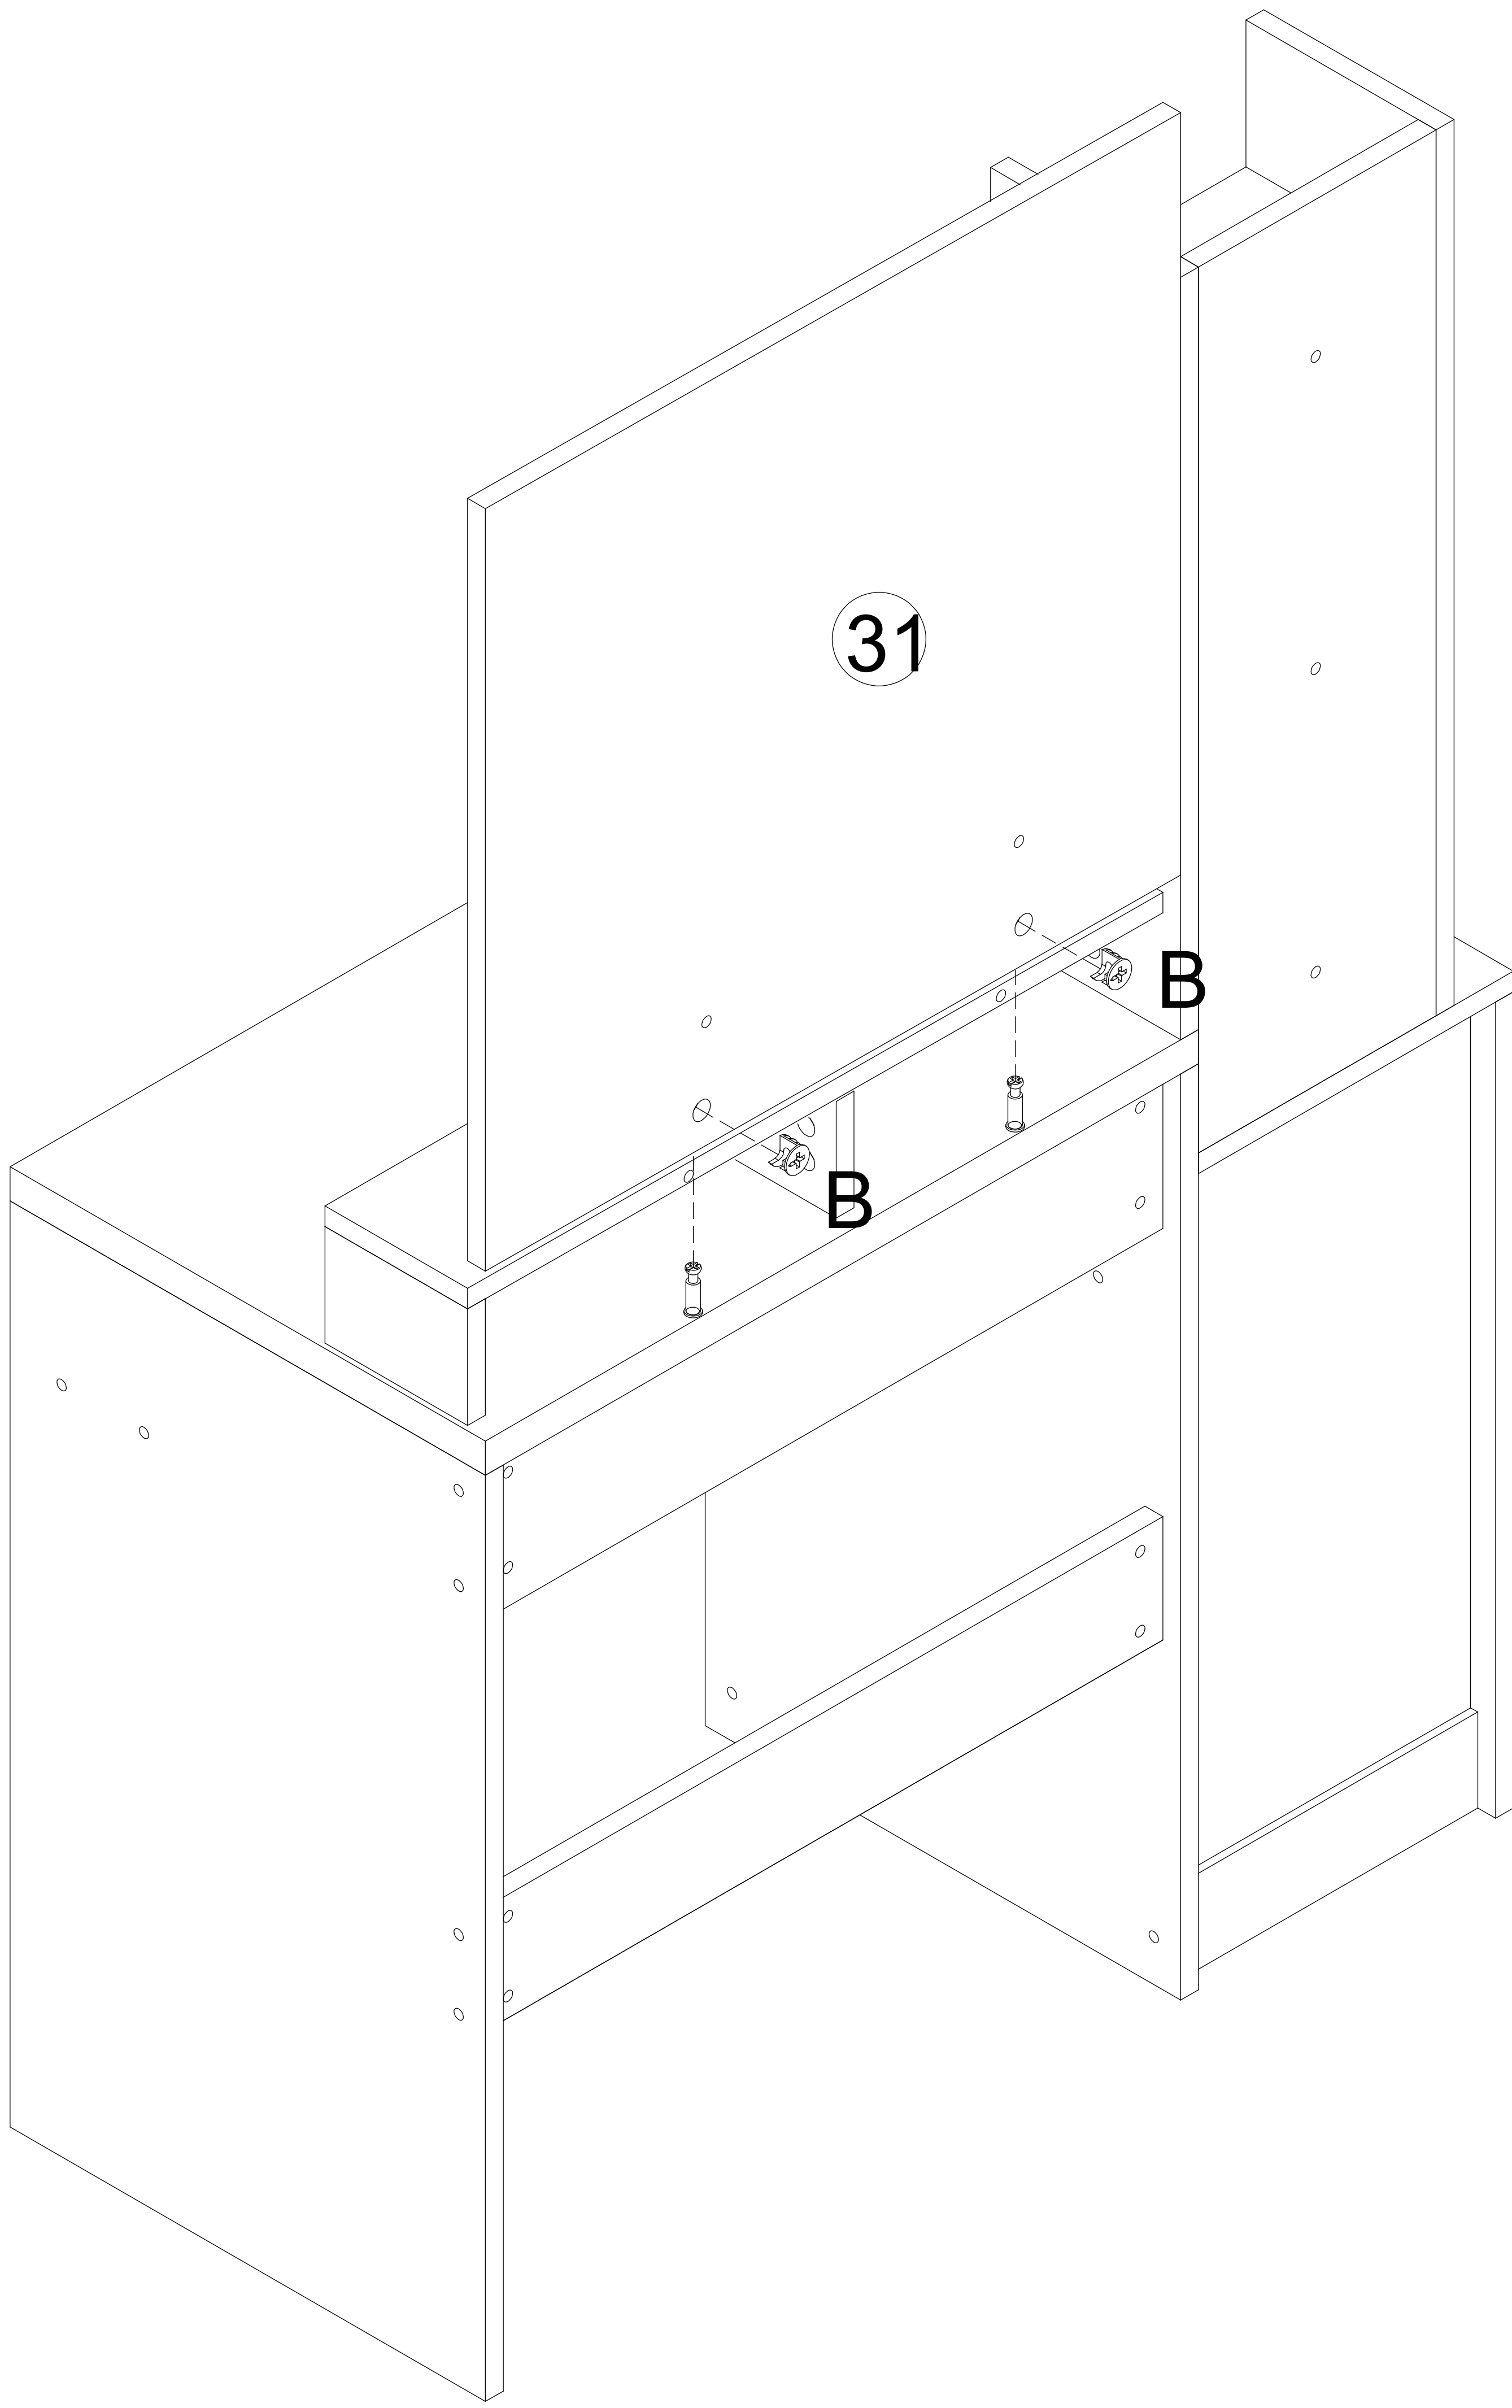


Step 19

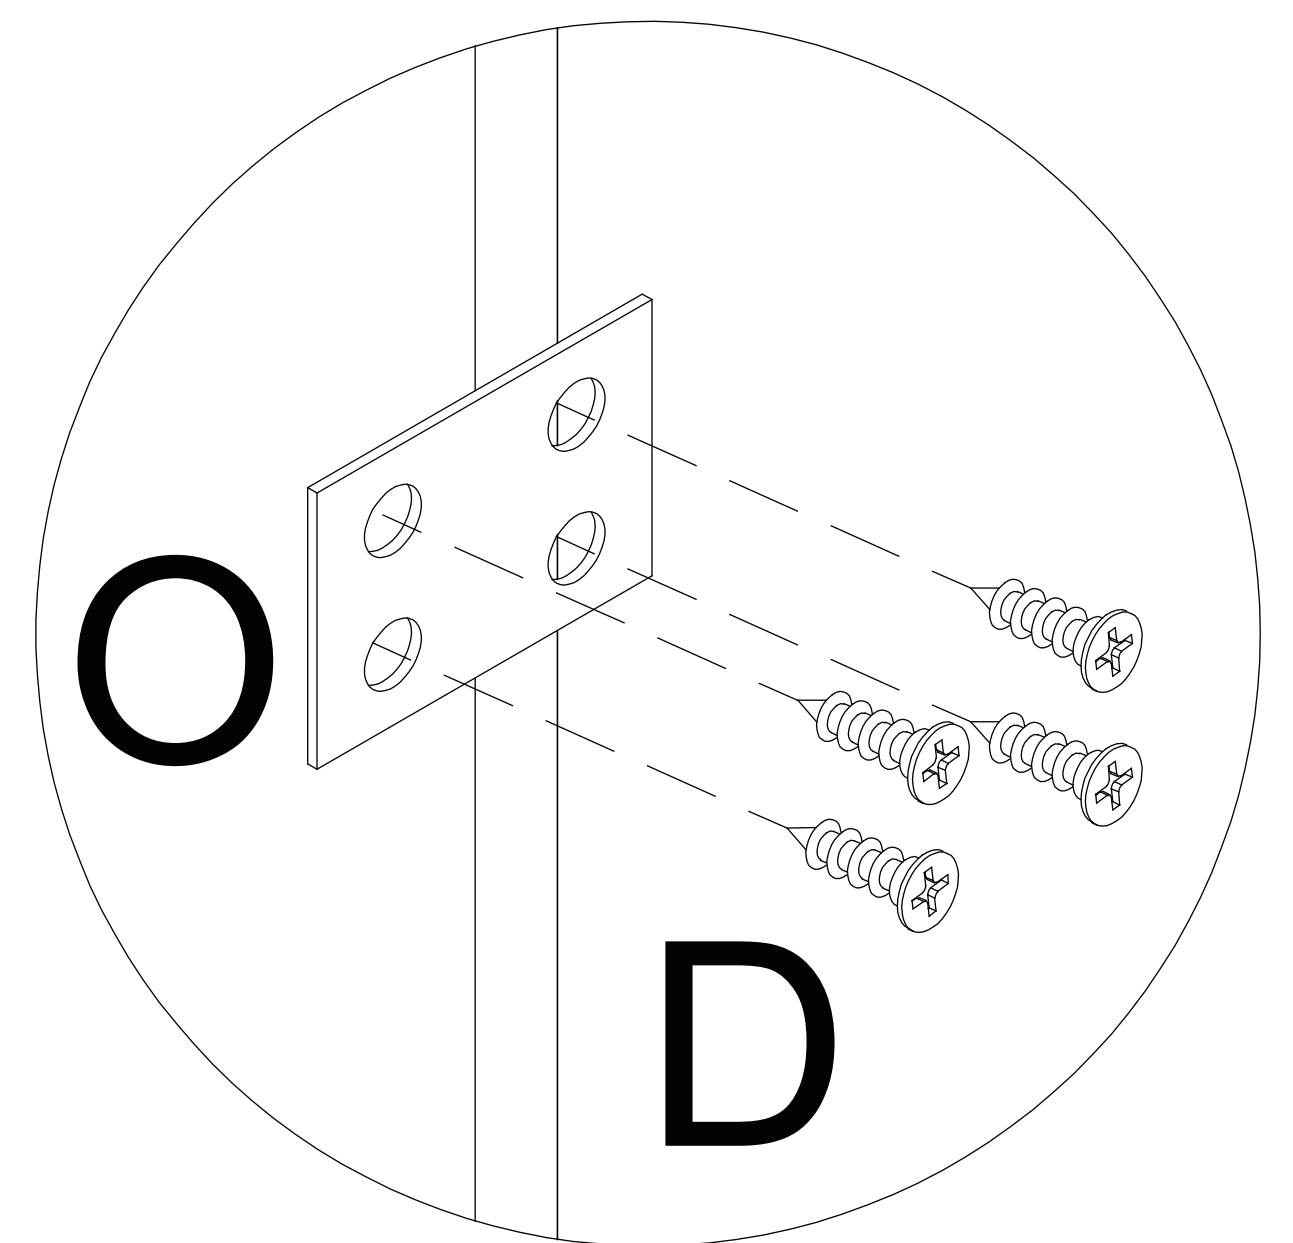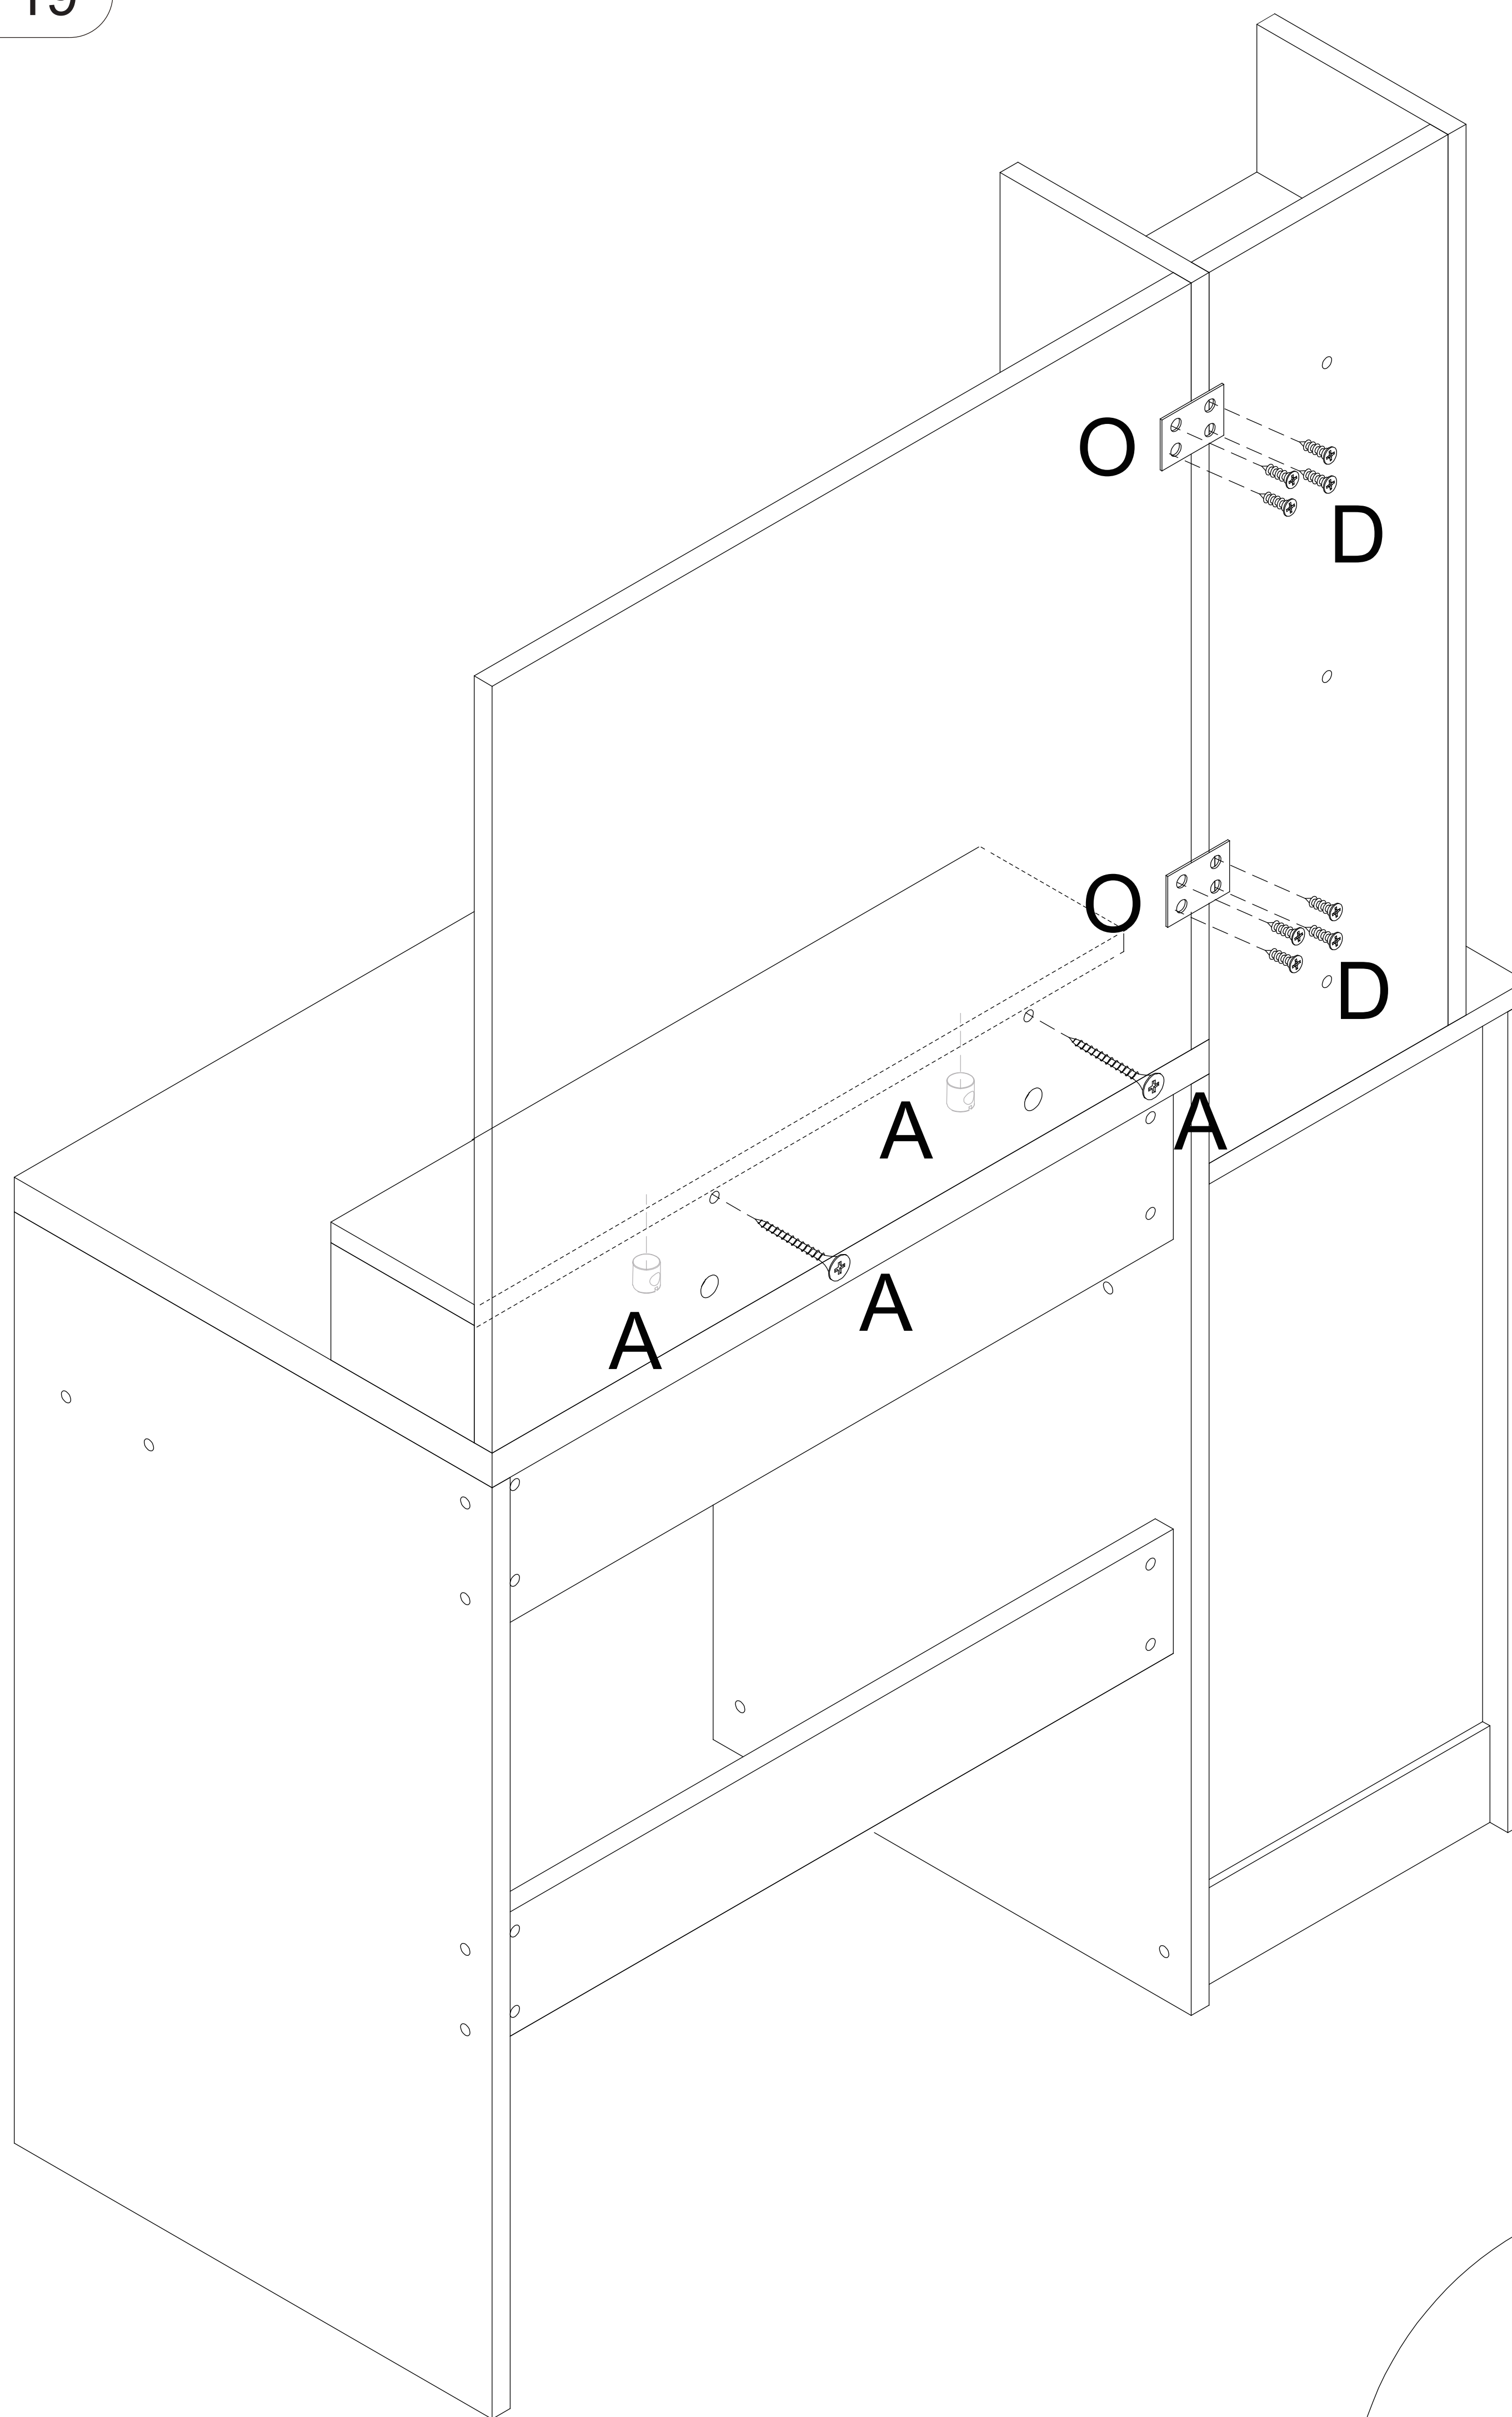

Step 20

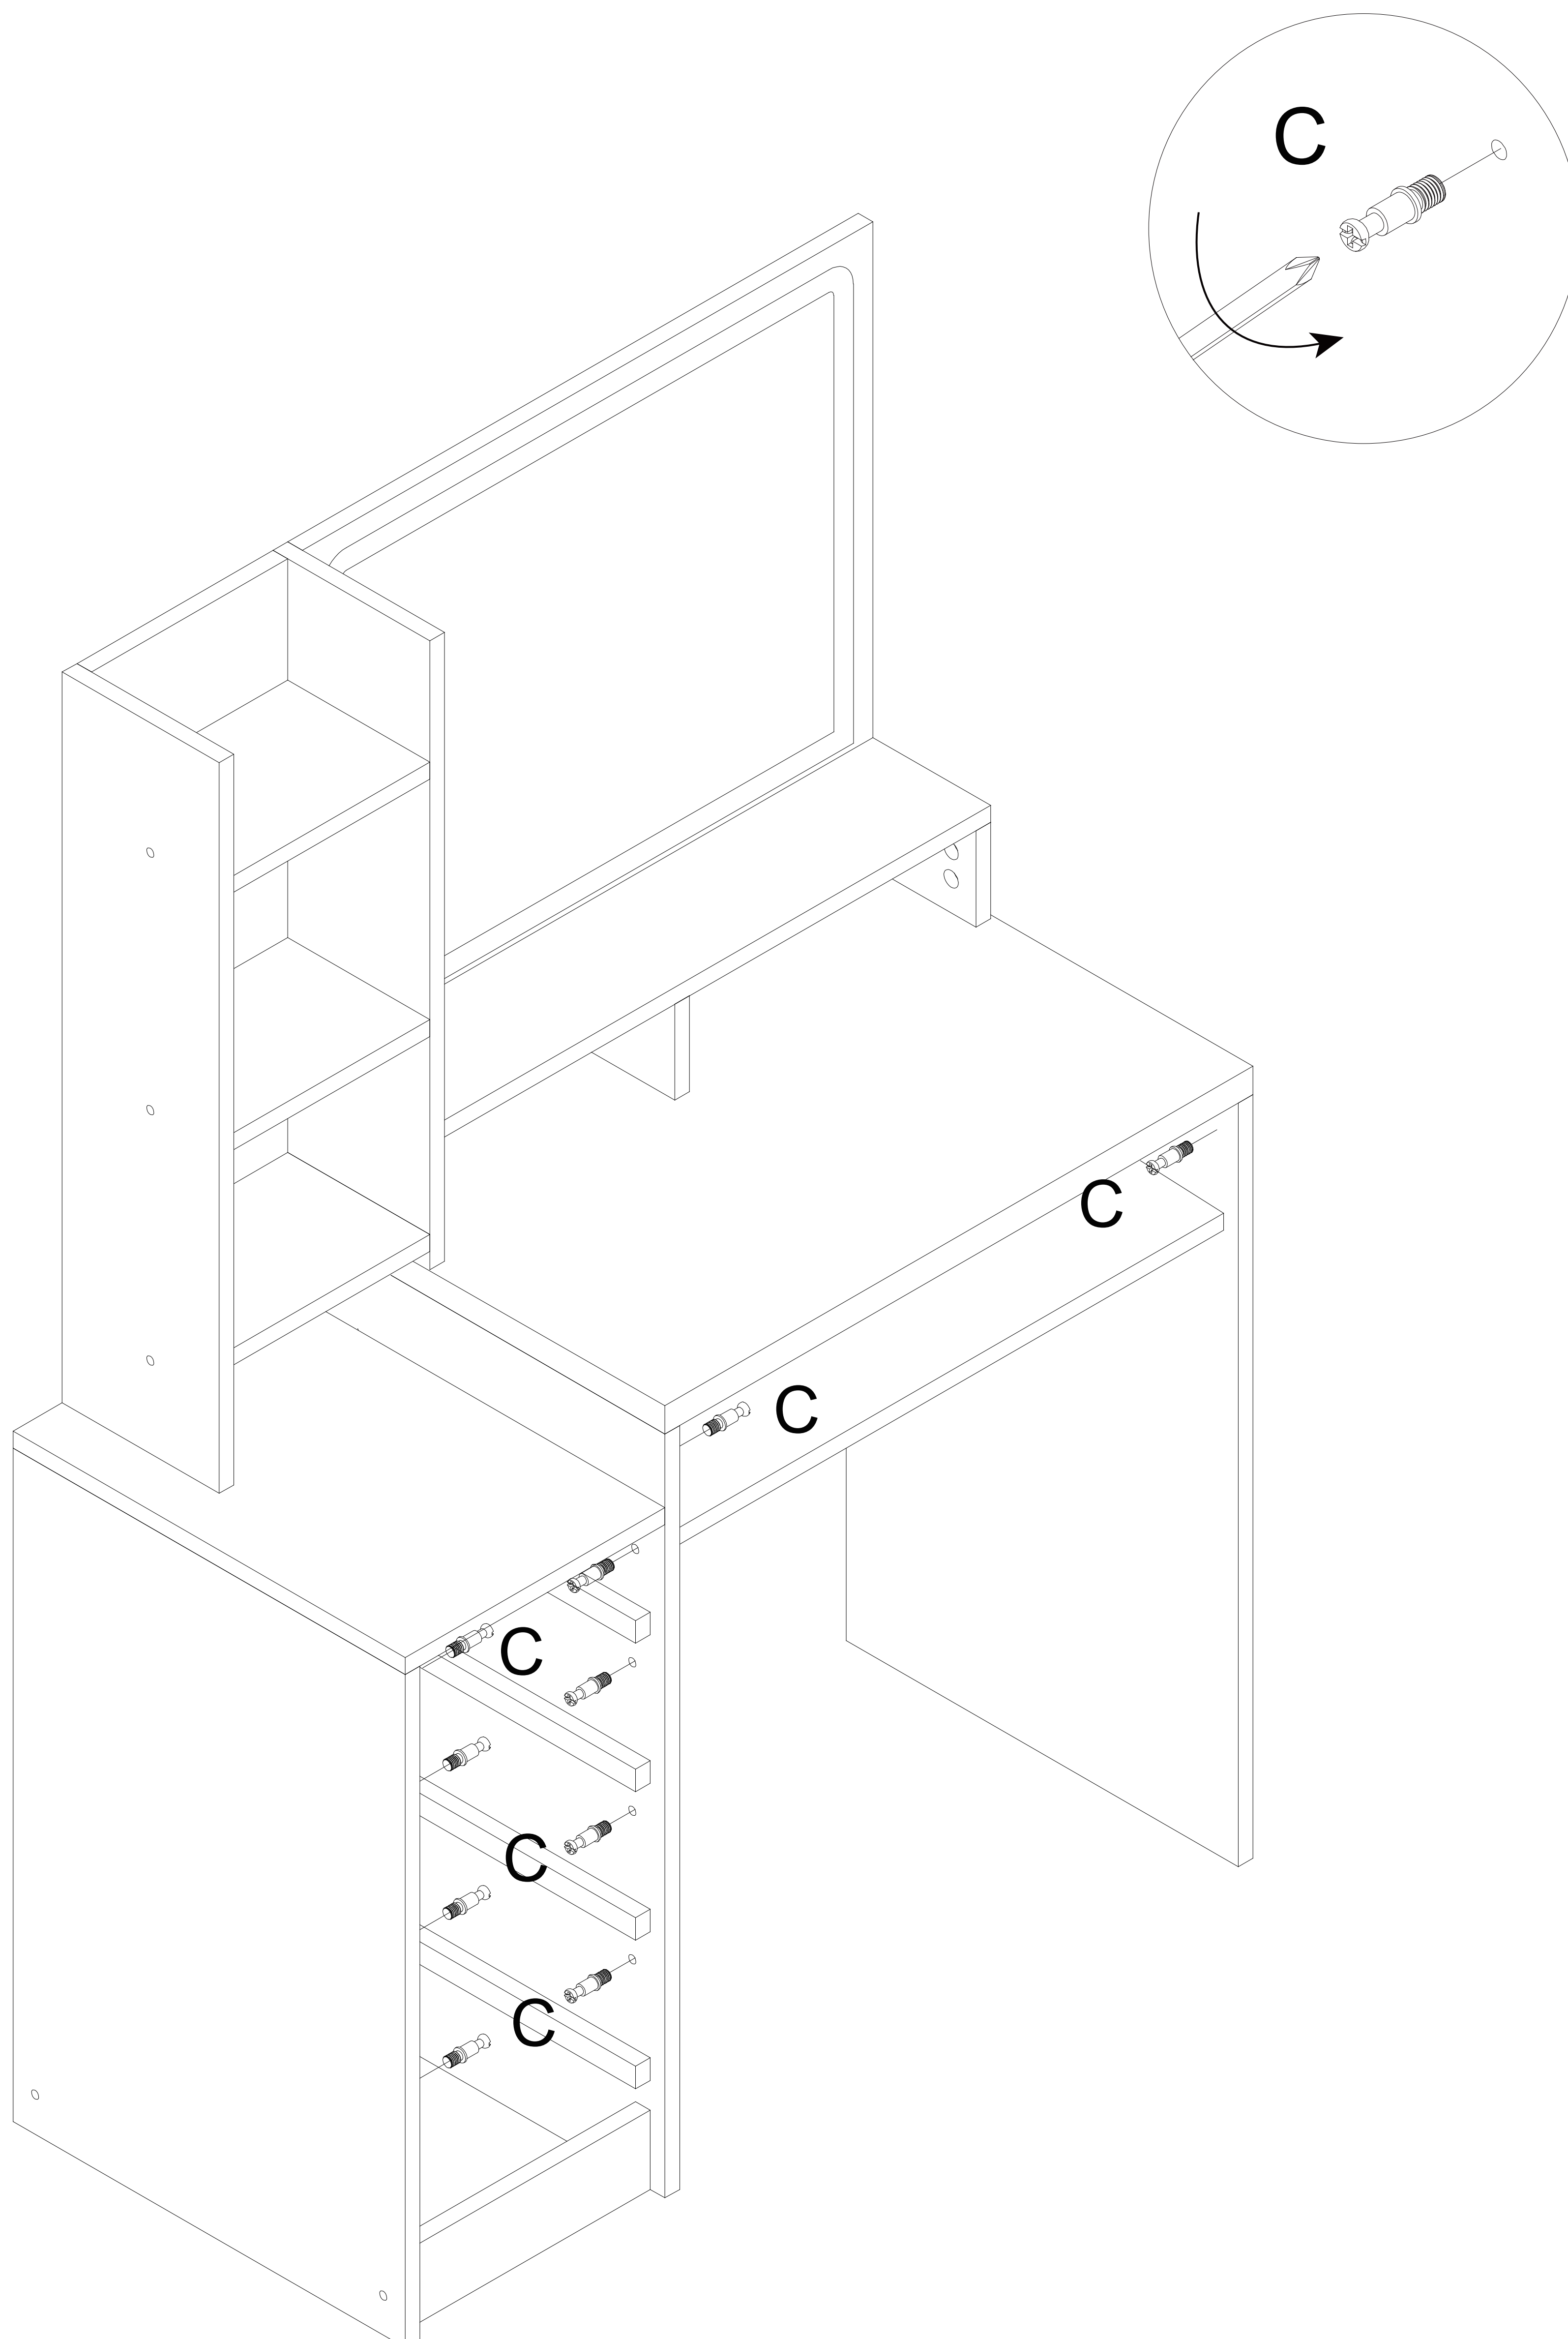

Step 21

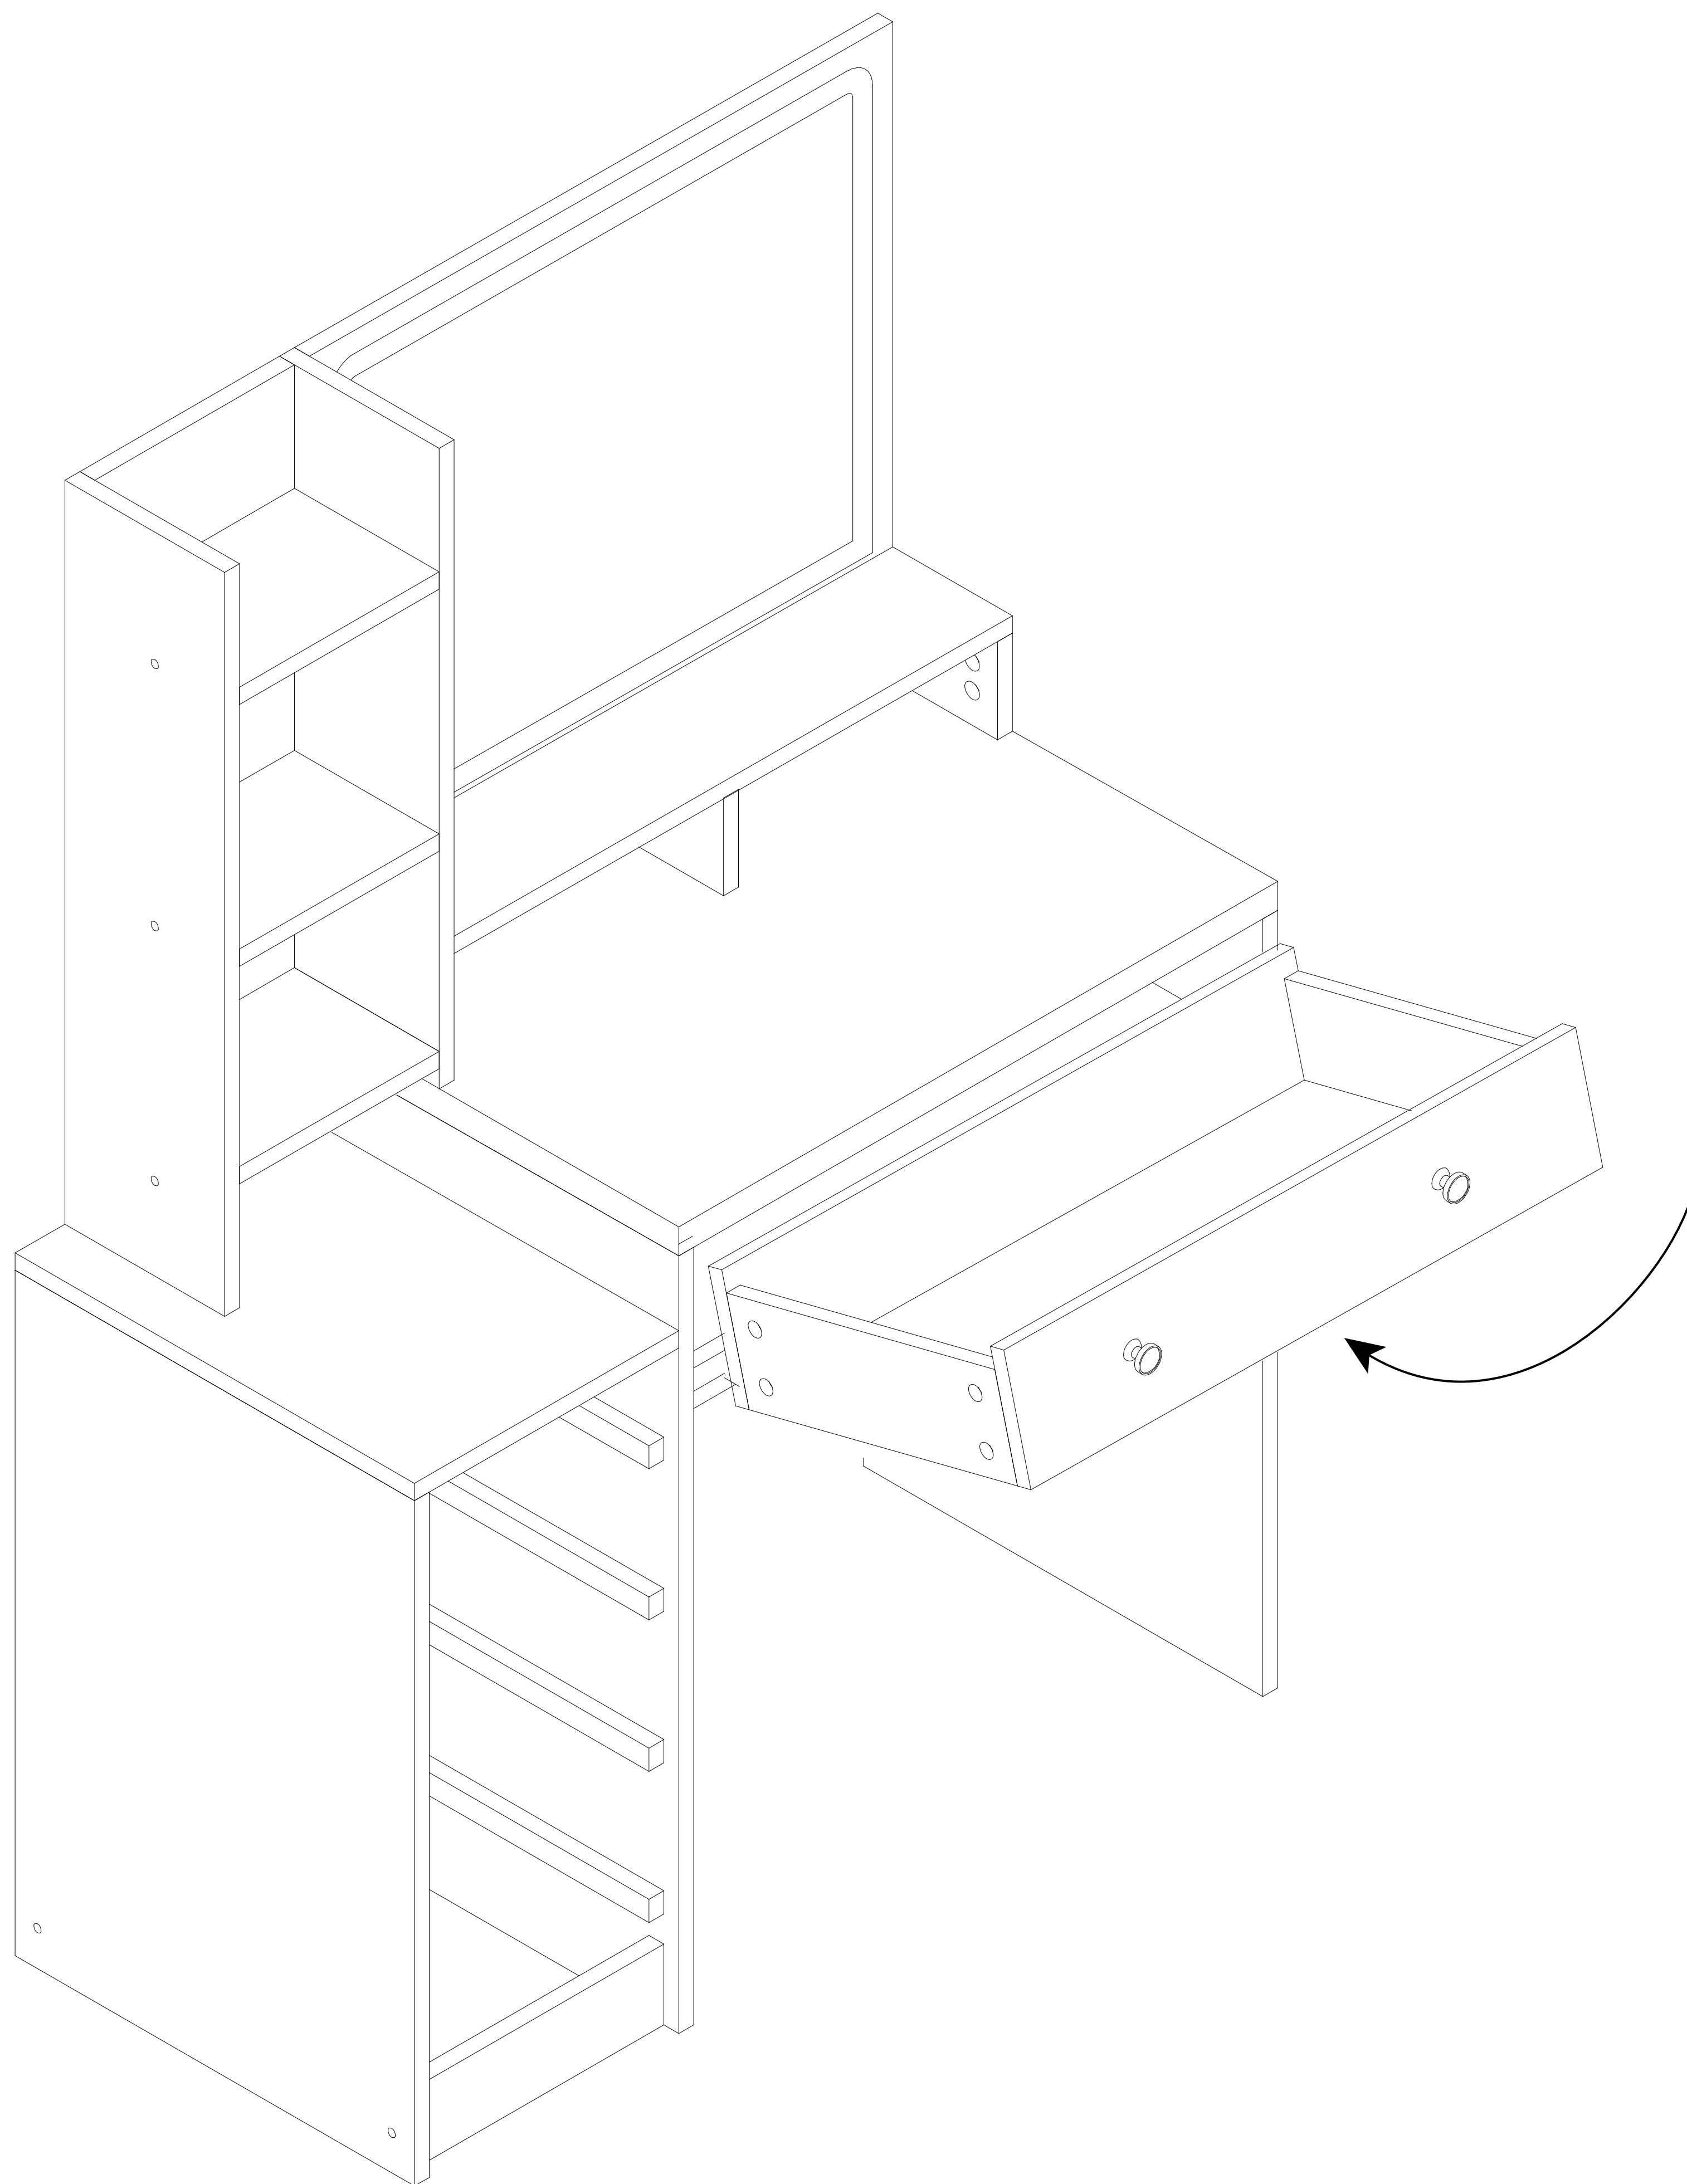

Please note that when placing the drawer in, the drawer positioning pin will block the drawer. Therefore, please follow the diagram to first insert the inner edge of the drawer using a concave method, and then push the drawer flat.

Step 23

pick up 28 x1, 29 x2, 30 x2

