

Outdoor Storage Shed


Assembly Guide



5 Hours



x 2

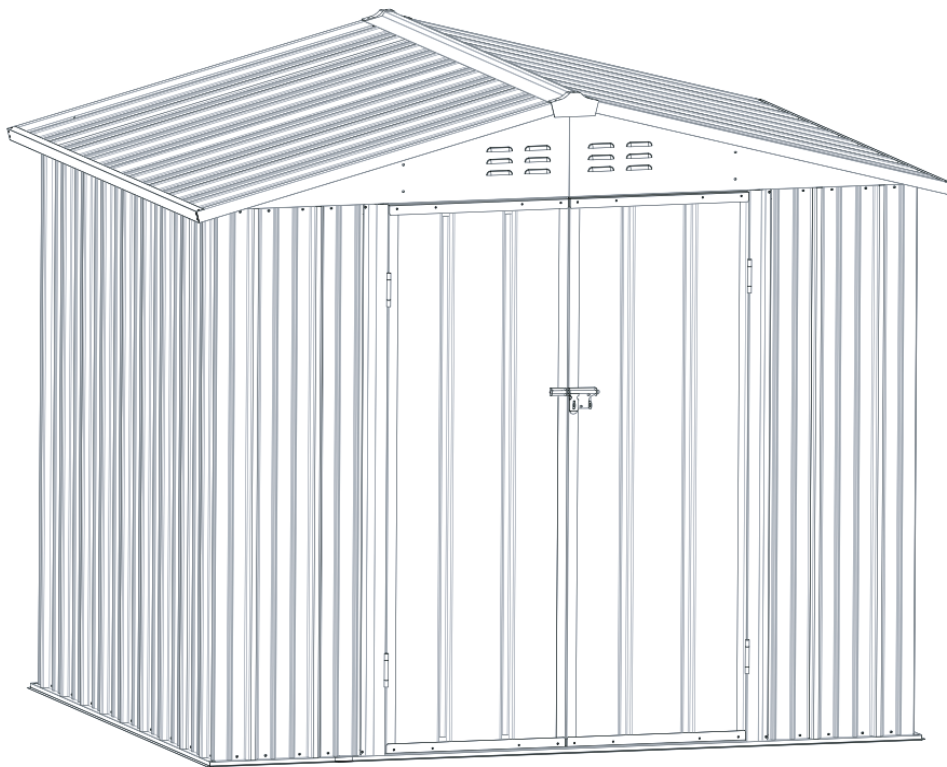




CUSTOMER FIRST, SERVICE FOREMOST!




QUESTIONS? ISSUES?

CONTACT US

REPLY WITHIN 24 HOURS IN BUSINESS DAYS


Exploded View

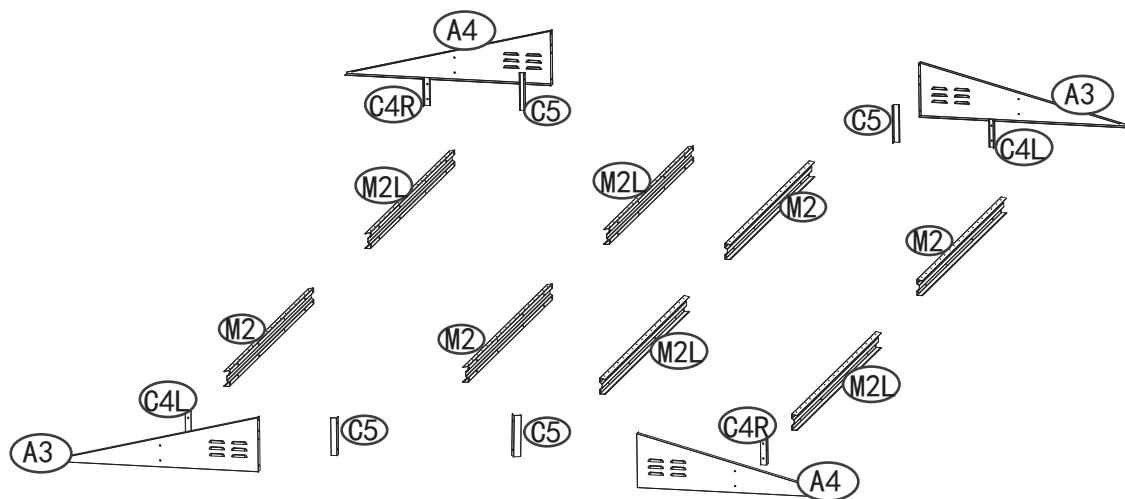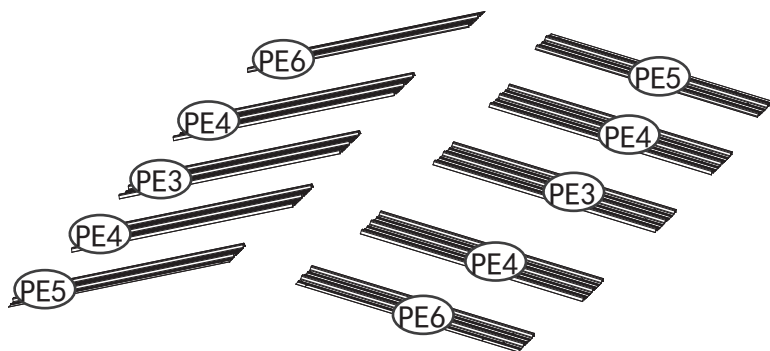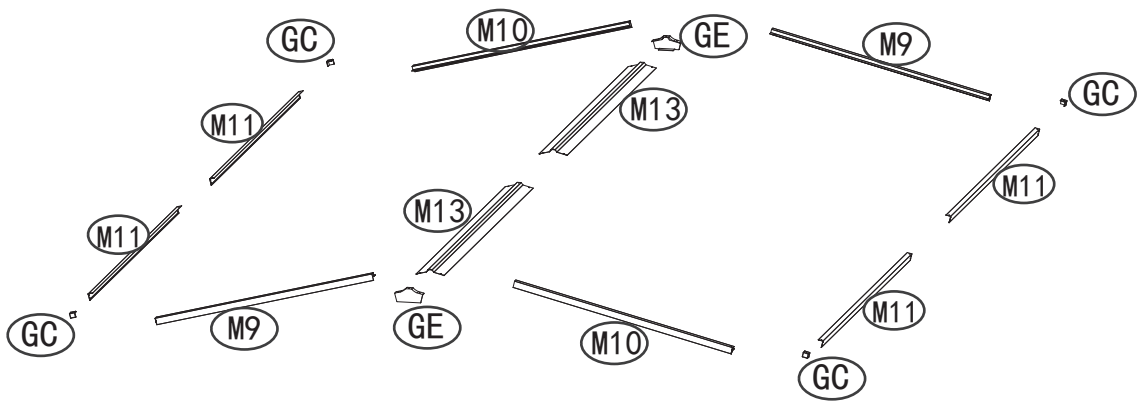

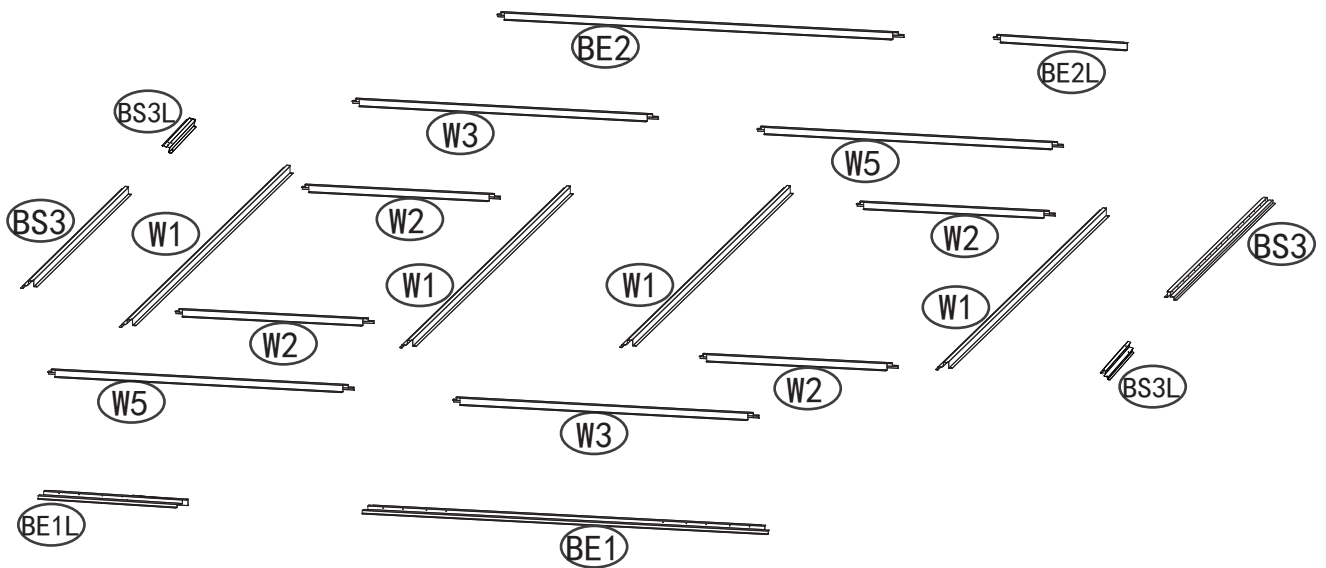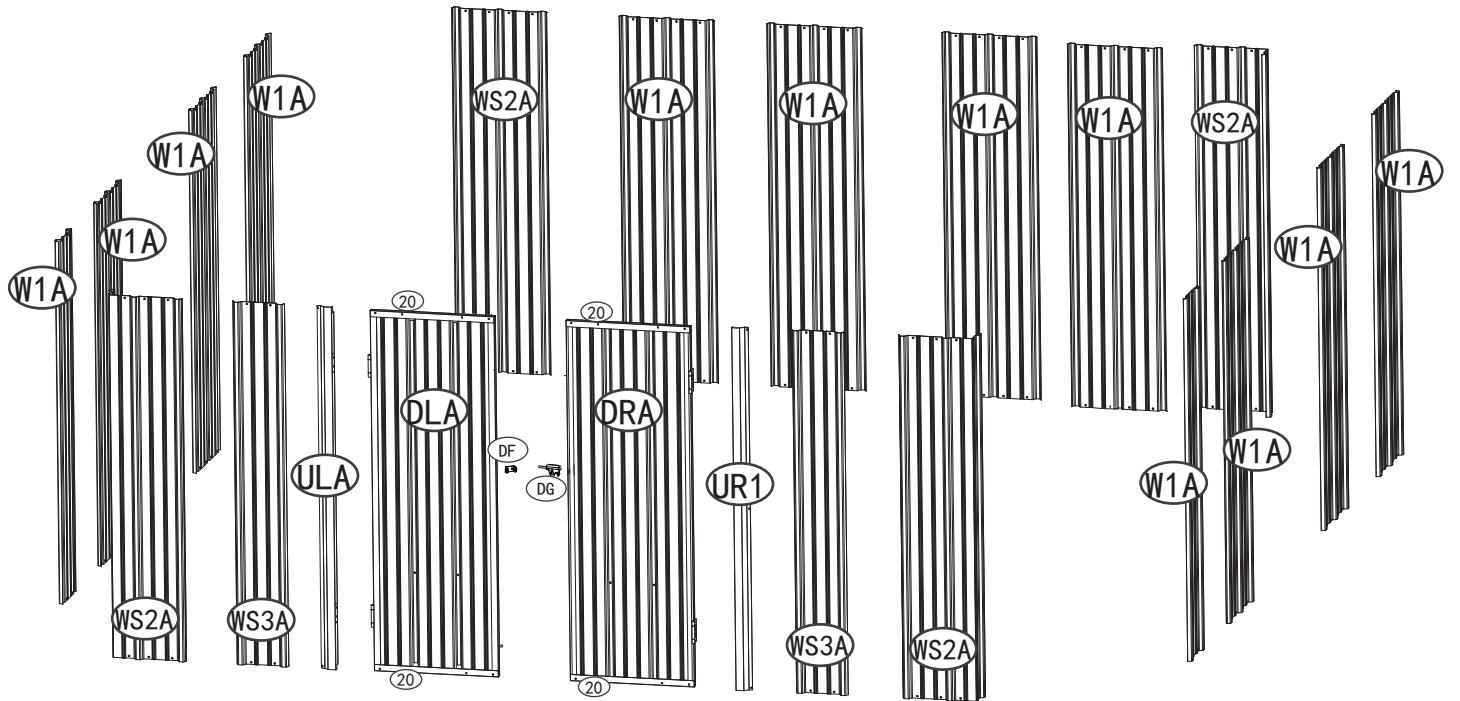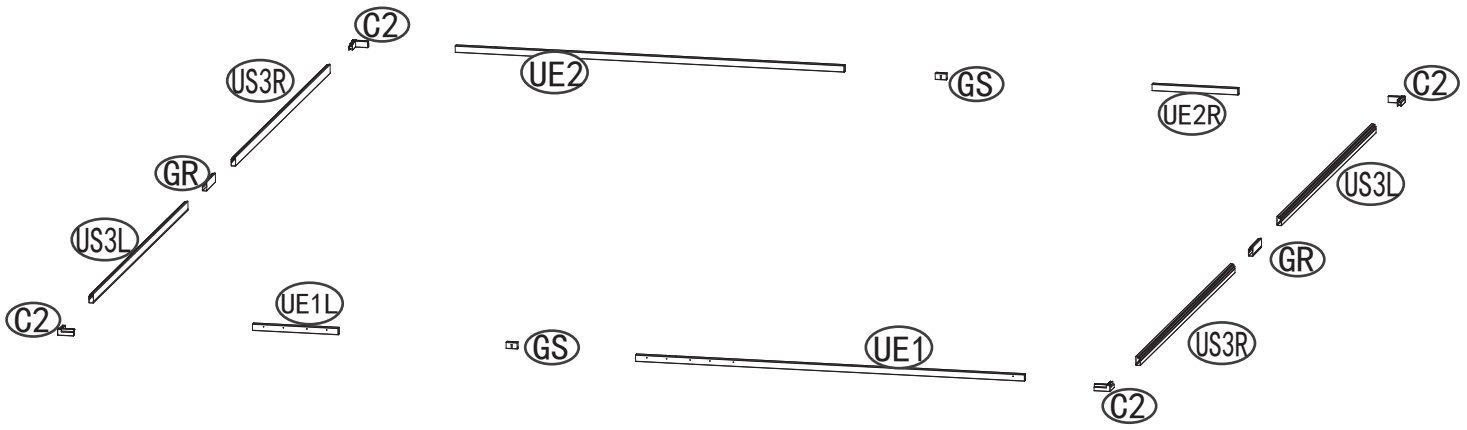


Thank you for purchasing this item, please read this instruction guide carefully before assembly and keep it for future reference.

WHAT DO YOU GET?

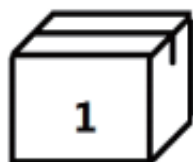

BOX 1

+

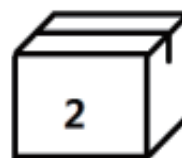

BOX 2

Attention: These 2 boxes may arrive at different times, please wait patiently.

THE TOOLS YOU NEED TO PREPARE
















WARNING

- Remove all parts from the 2 boxes and sort them by number. Ensure all parts are present before assembly.
- Wear work gloves, long sleeves and safety goggles during assembly. Some components contain sharp edges that may cause damage.
- Set your drill's torque limit to prevent damage to the metal parts.
- Ensure ground stability is adequate when necessary to use a ladder. Never rest your entire weight on the roof or on any other part of the storage shed.
- Do not attempt to assemble the storage shed in strong windy conditions.
- Keep children and animals away from the assembly site.




Part list

The parts are stacked together for easier transportation. When you think something is missing, please try to separate every part first and check.

NO.	PART	Qty.
A3		2
A4		2
BE1		1
BE1L		1
BE2		1
BE2L		1
BS3		2
BS3L		2
C2		4
C5		4
C4R		2
C4L		2
DLA		1
DRA		1
UE1		1
UE1L		1
UE2		1
UE2R		1
US3L		2
US3R		2


NO.	PART	Qty.
ULA		1
UR1		1
DC		2
V1		50
V2		309
20		4
DG		1
W1		4
W2		4
W3		2
W5		2
F6	 M10X100	4
F7		4
LOOK		1



Part list

NO.	PART	Qty.
W1A		12
WS2A		2
WS3A		2
PE3		2
PE5		2
PE6		2
PE4		4
M2		4
M2L		4
M13		2
M9		2
M10		2
M11		4
GC		4
GE		2
GS		2
GR		2

NO.	PART	Qty.
F1		343
F2		44
F3		32
DH		4
DX2		4
F4		5
DF		1


Step 1


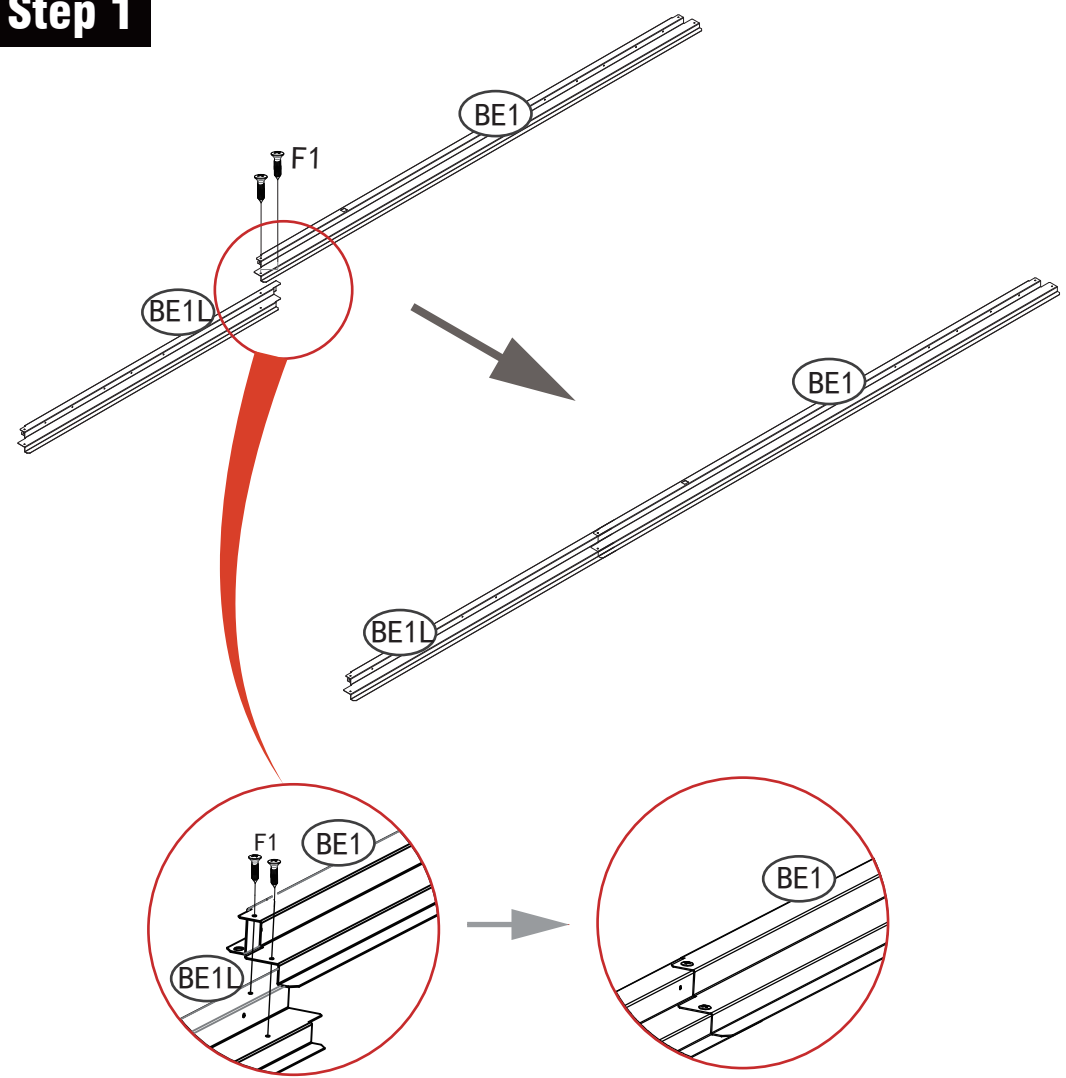


BE1

1 PC
BE1L

1 PC
F1

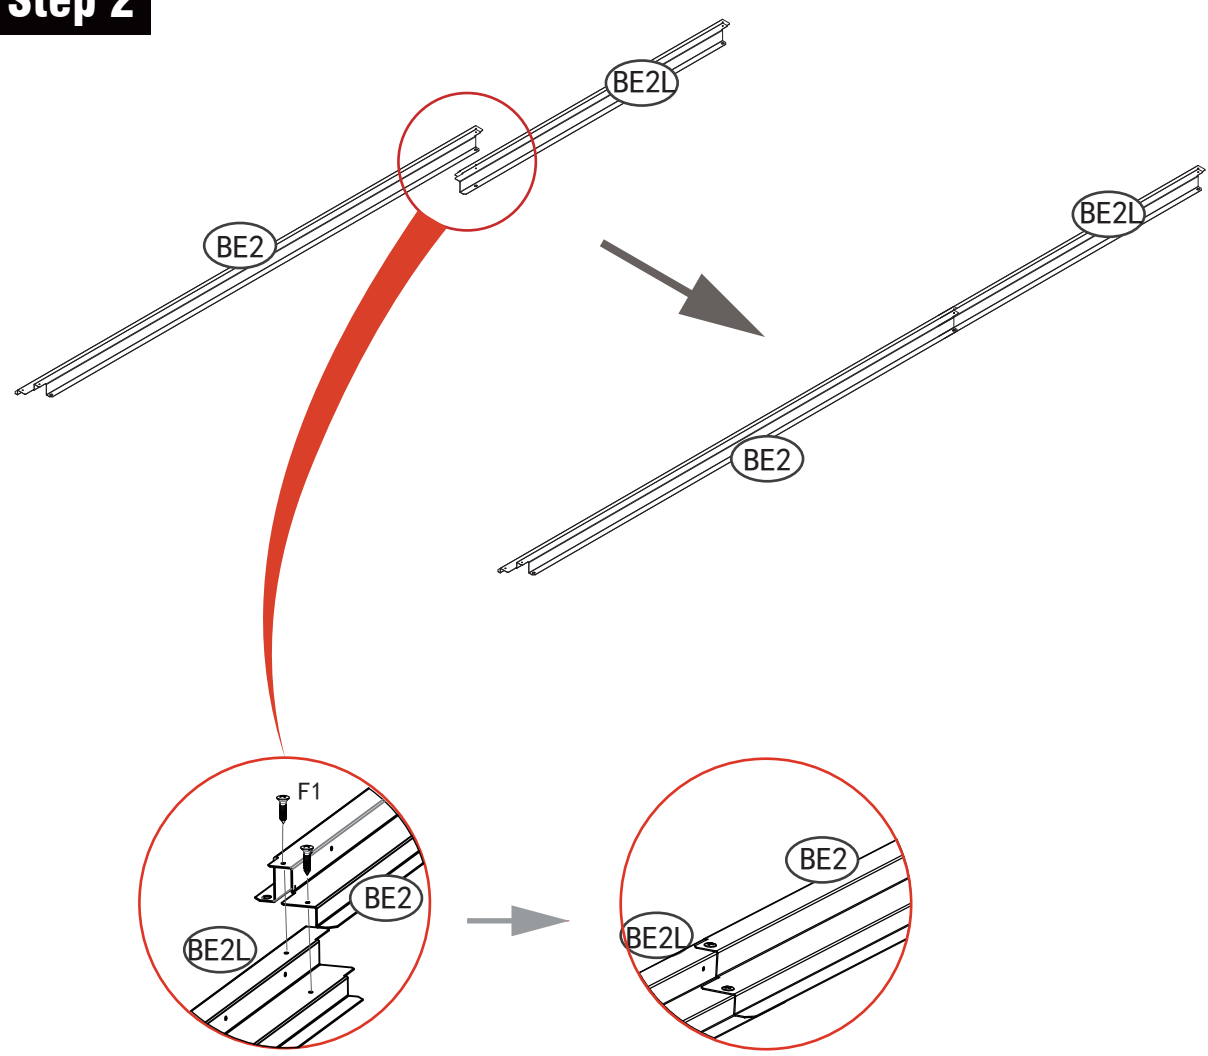2 PC


Step 2




BE2

1 PC
BE2L

1 PC
F1

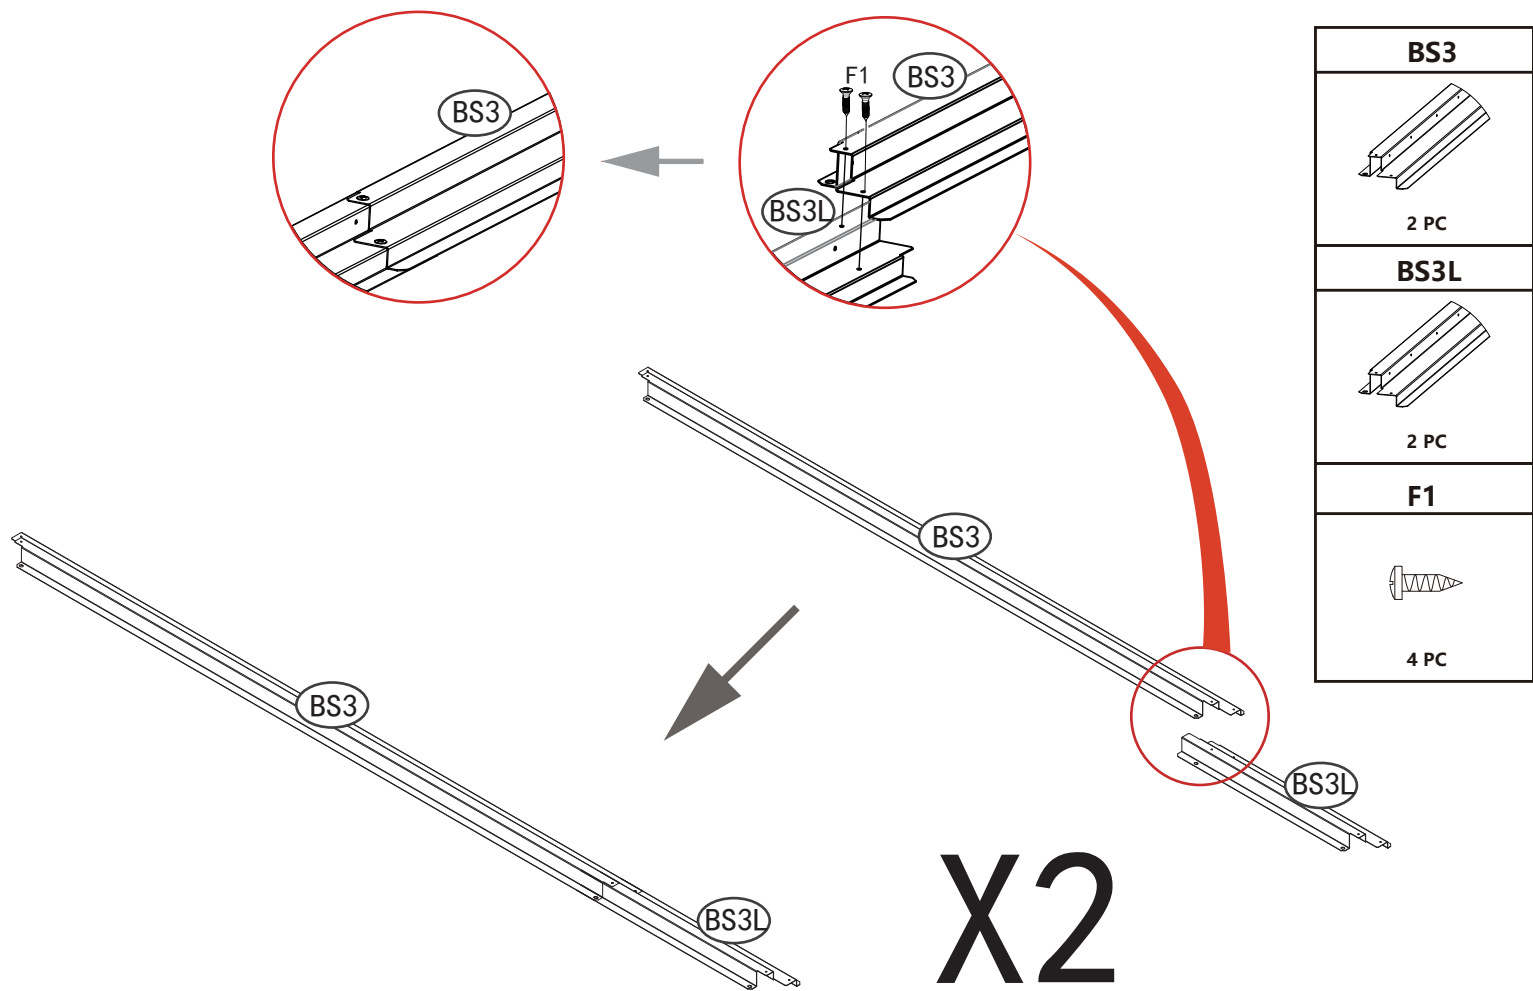2 PC


Step 3

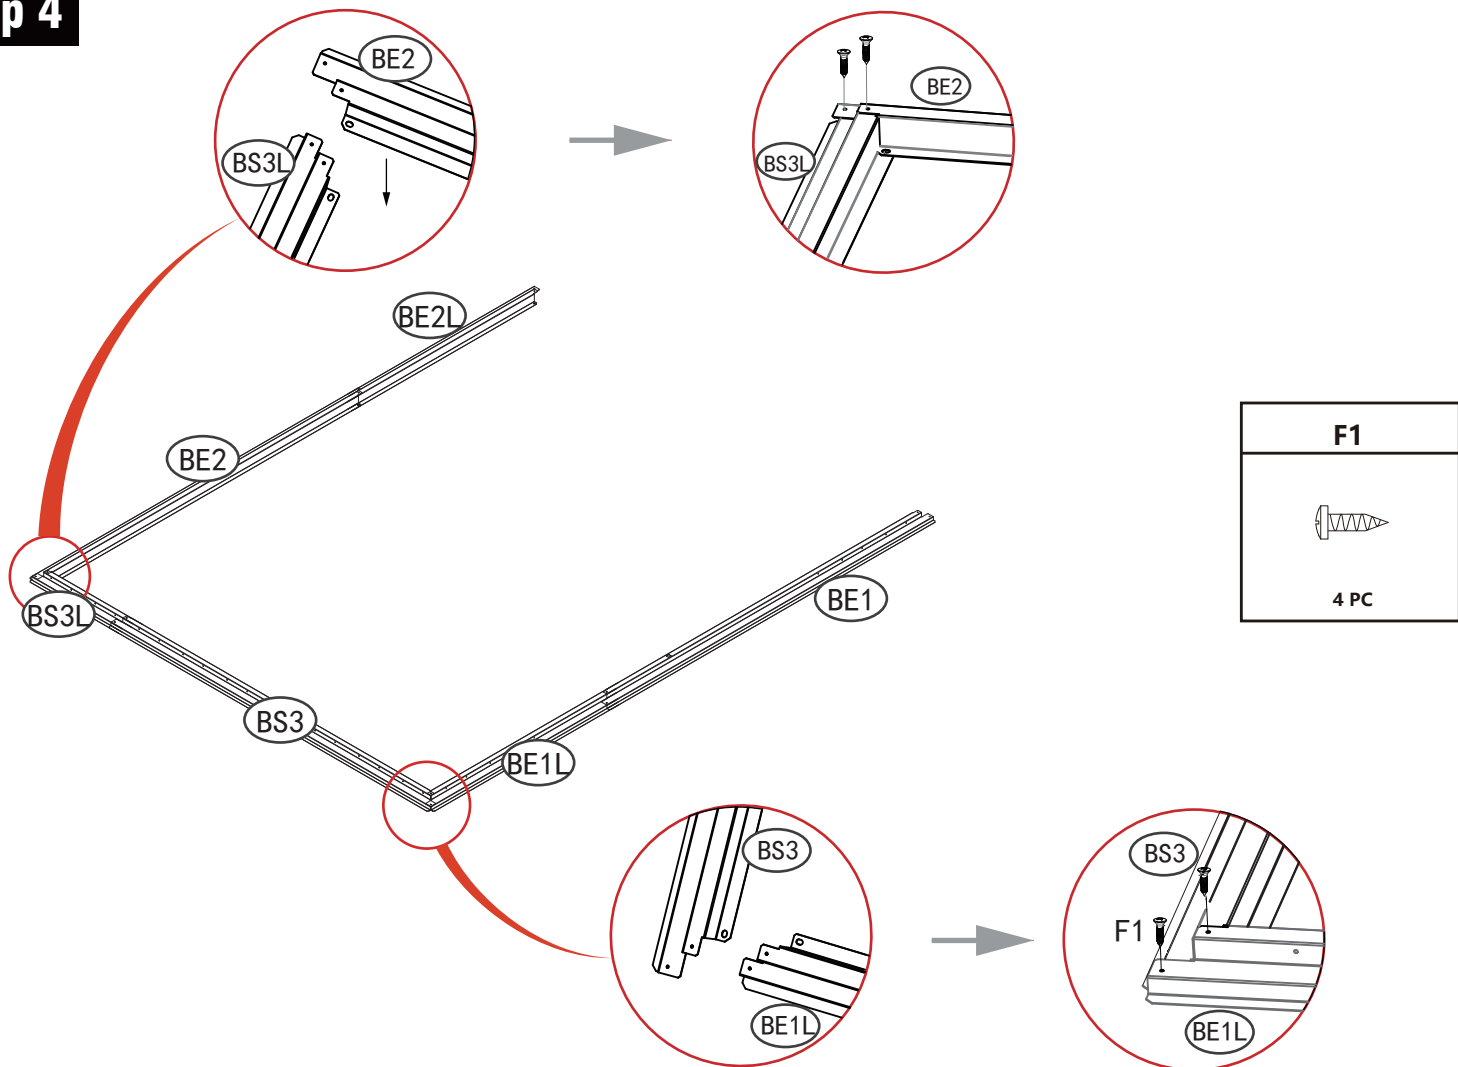


Step 4




Step 5

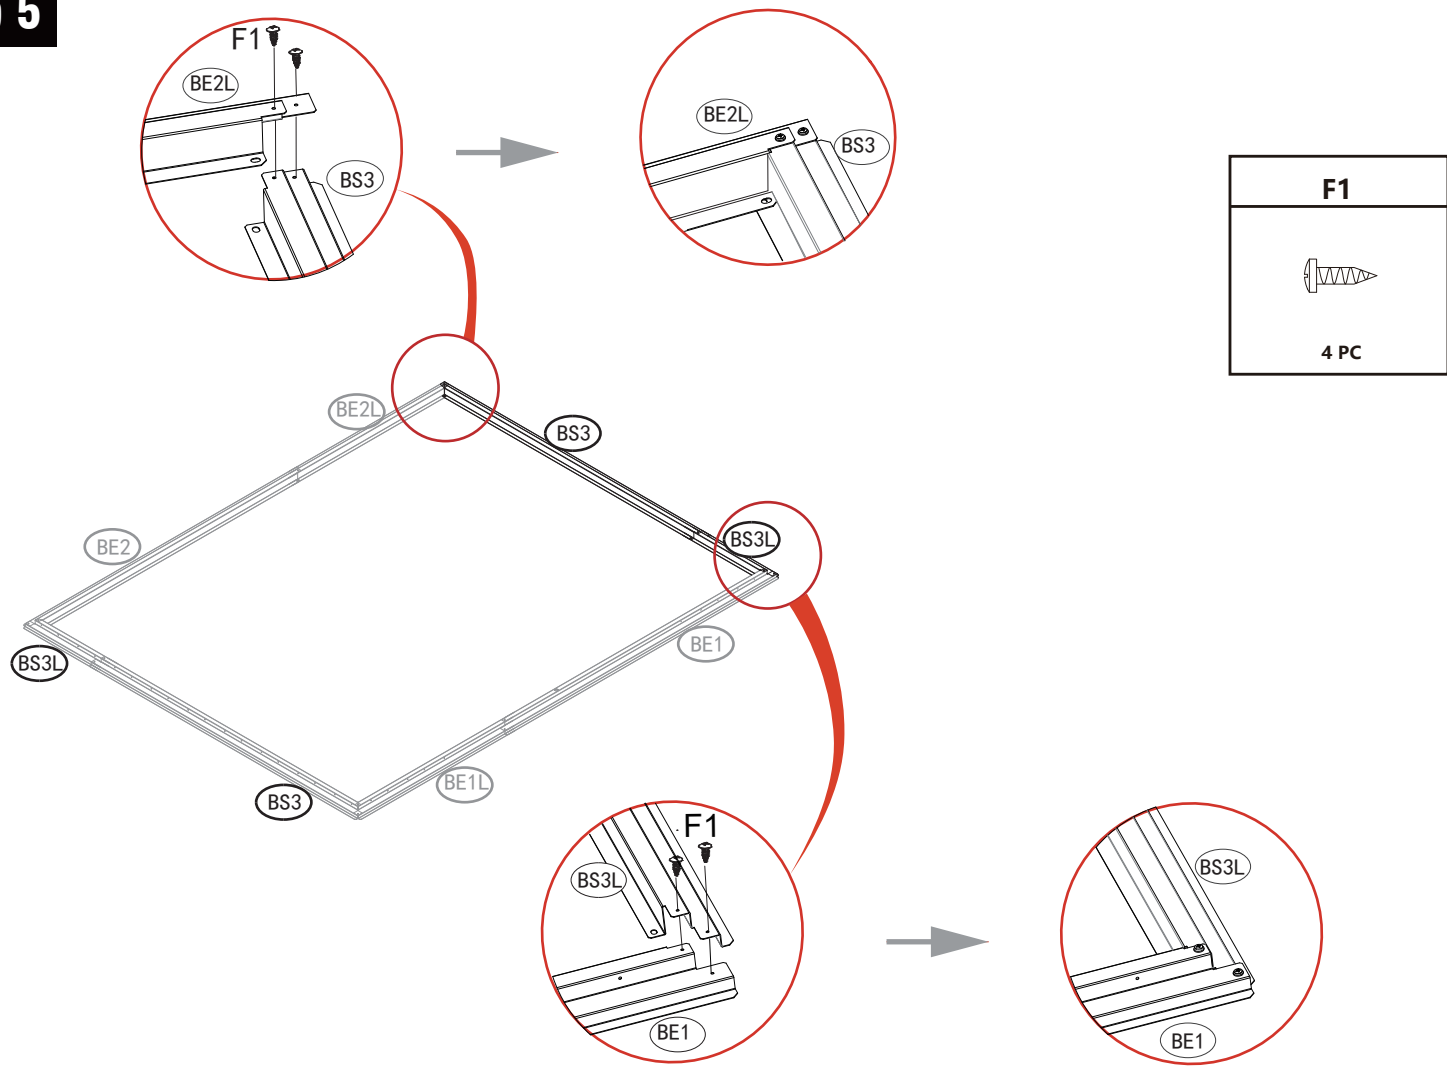


Step 6

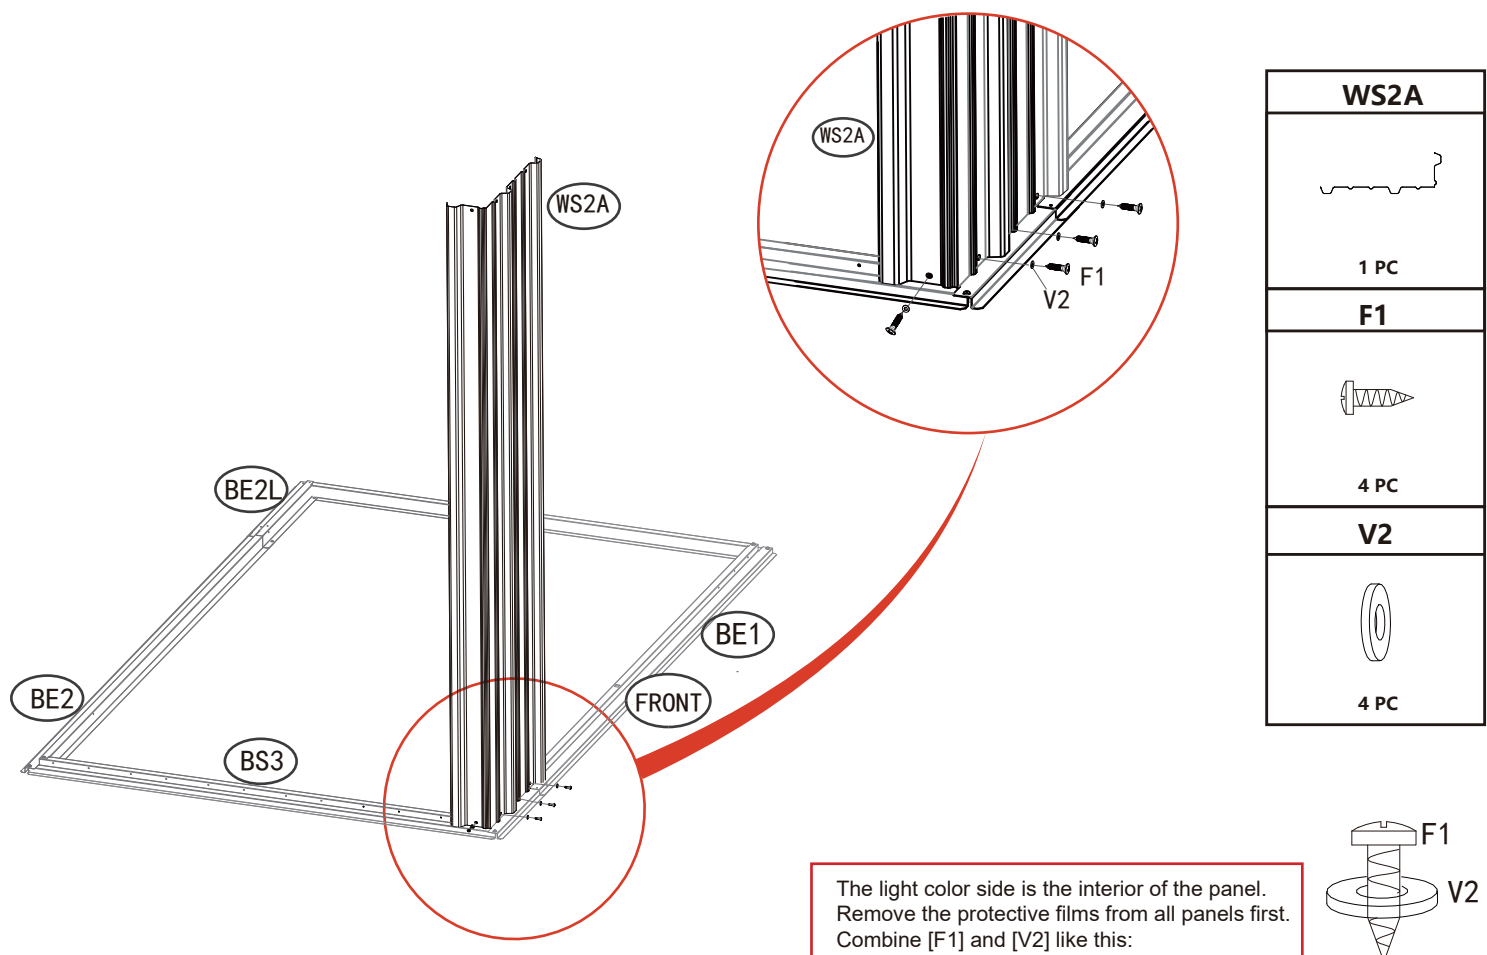

The light color side is the interior of the panel. Remove the protective films from all panels first. Combine [F1] and [V2] like this:

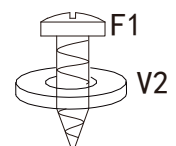

Step 7

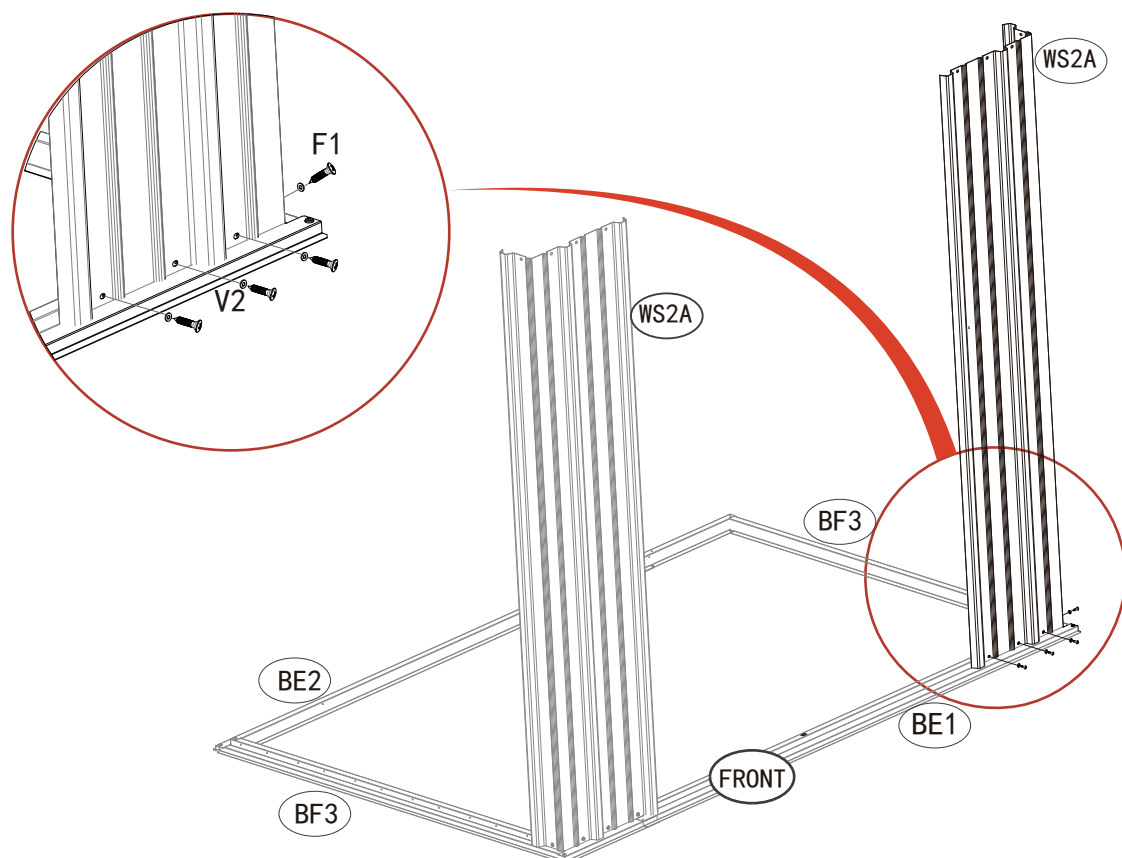


WS2A

1 PC
F1

4 PC
V2

4 PC

Step 8

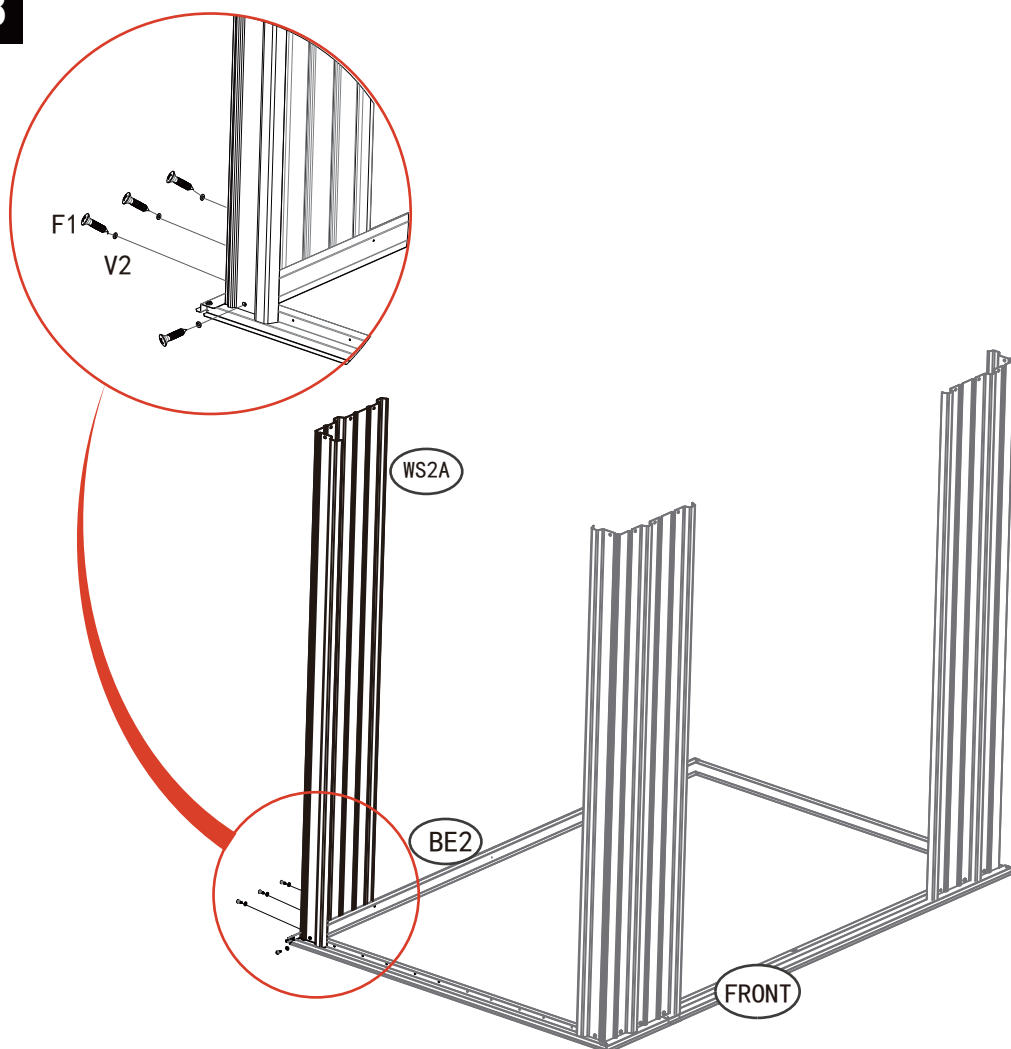



WS2A

1 PC
F1

4 PC
V2


4 PC

Step 9



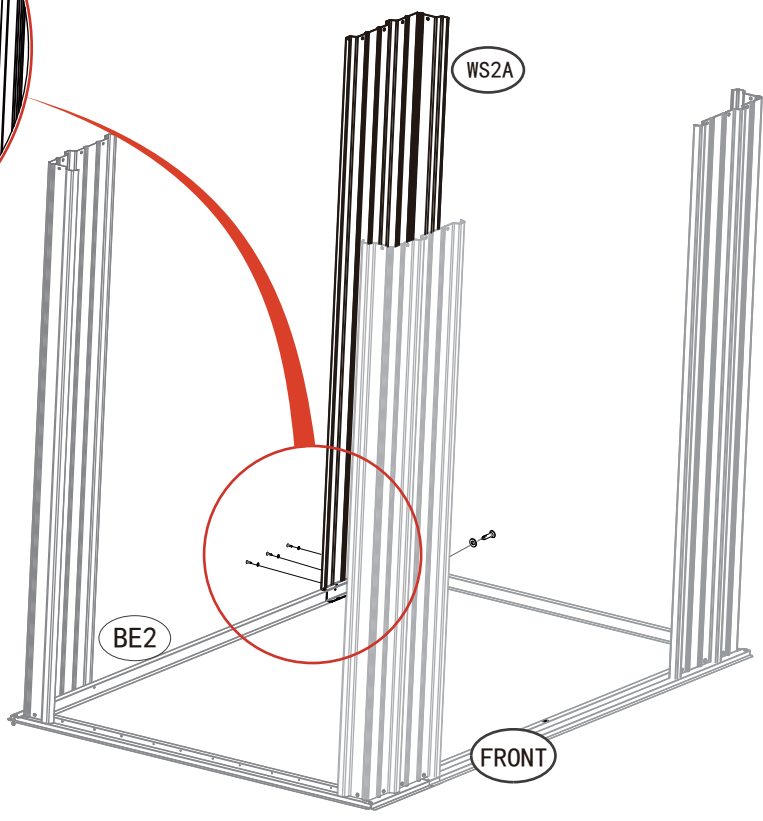
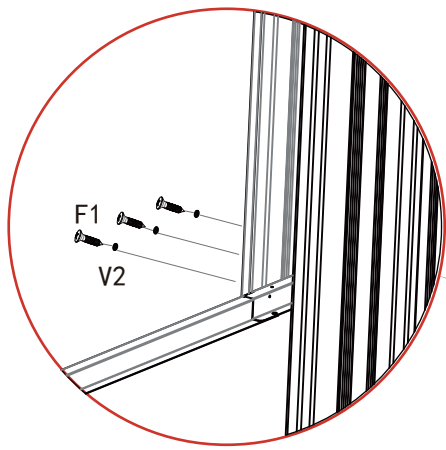


WS2A

1 PC
F1


4 PC
V2

4 PC

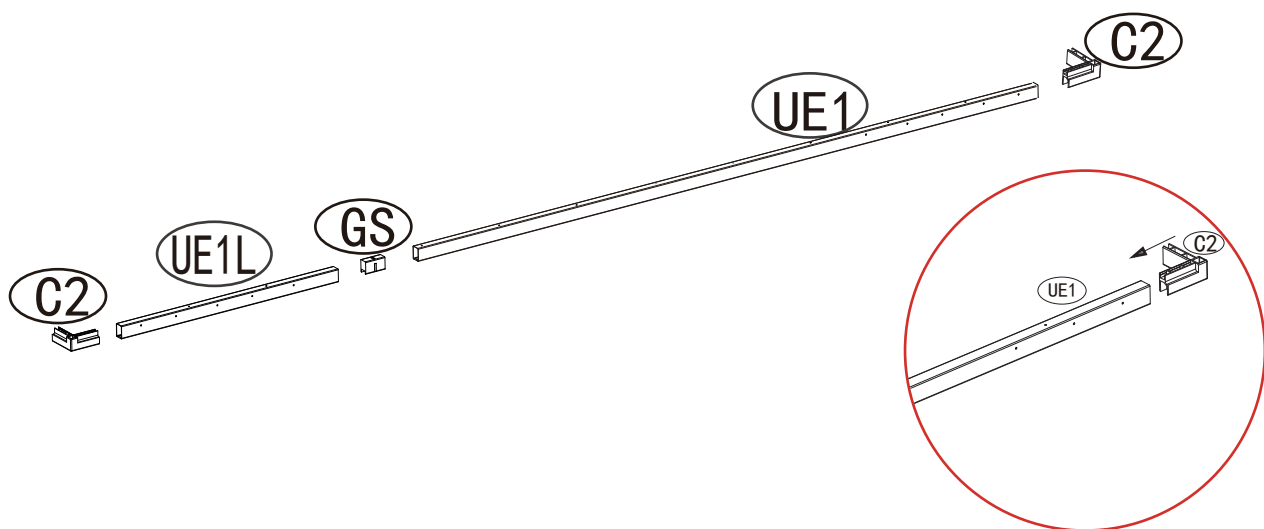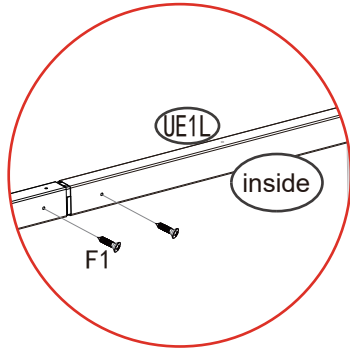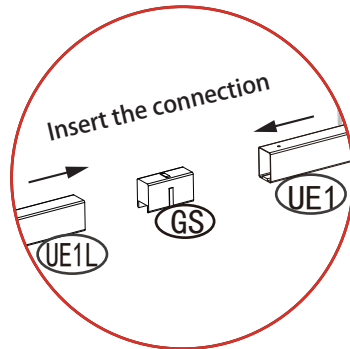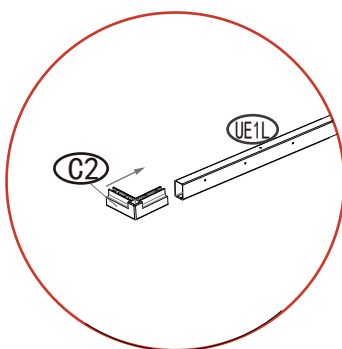Step 10



UE1L


1 PC
UE1

1 PC
C2

2 PC
GS

1 PC
F1

2 PC

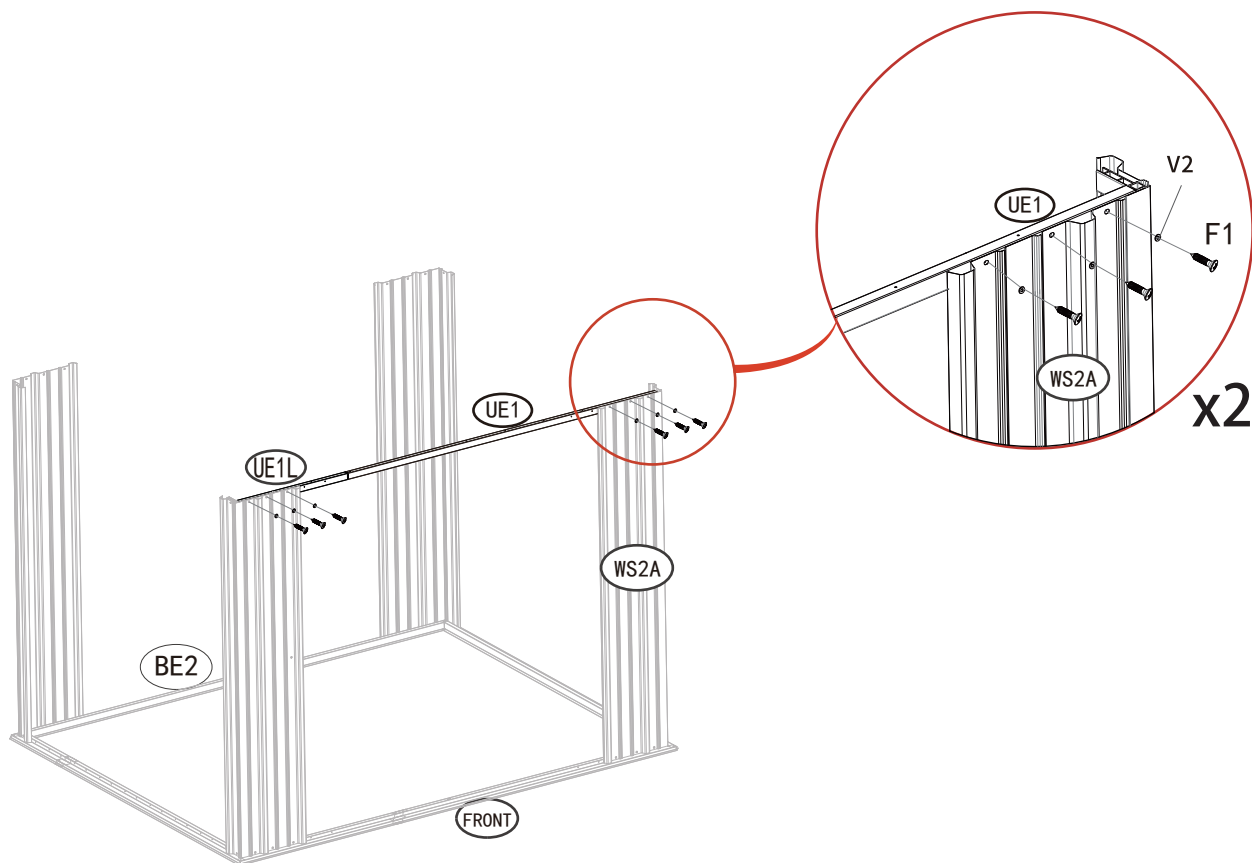Step 11




F1

6 PC
V2

6 PC

Step 12

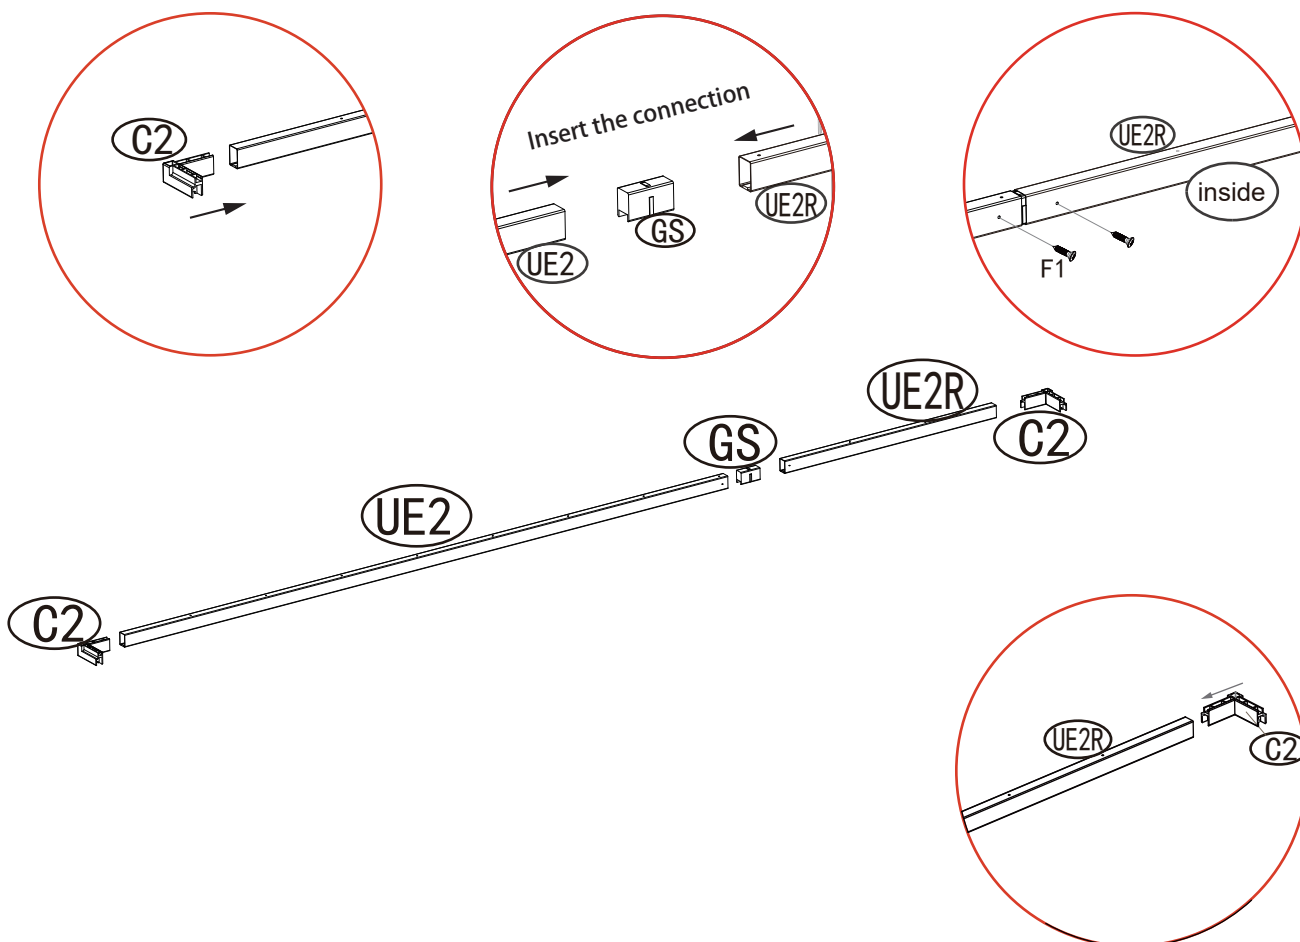

UE2R

1 PC
UE2


1 PC
C2

2 PC
GS

1 PC
F1

2 PC

Step 13

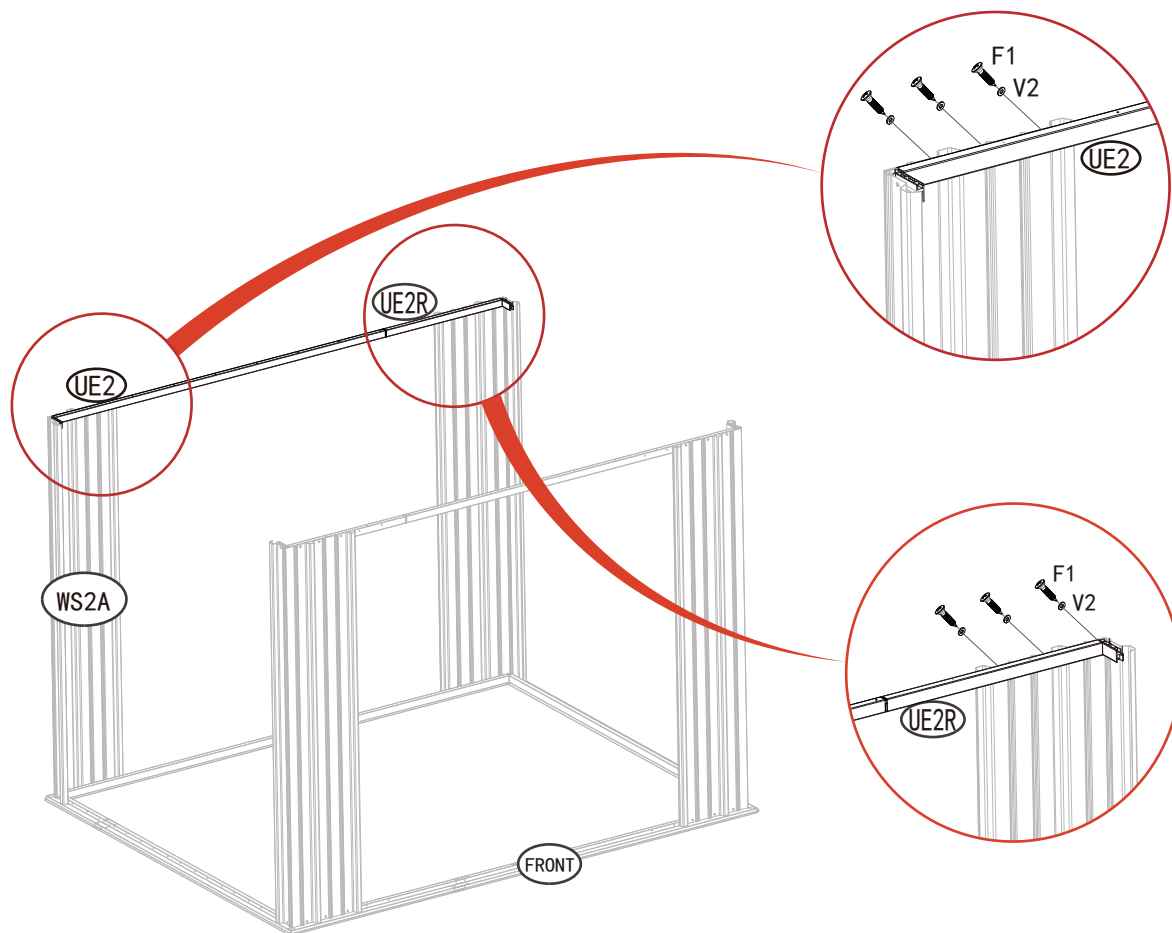


F1

6 PC
V2

6 PC

Step 14

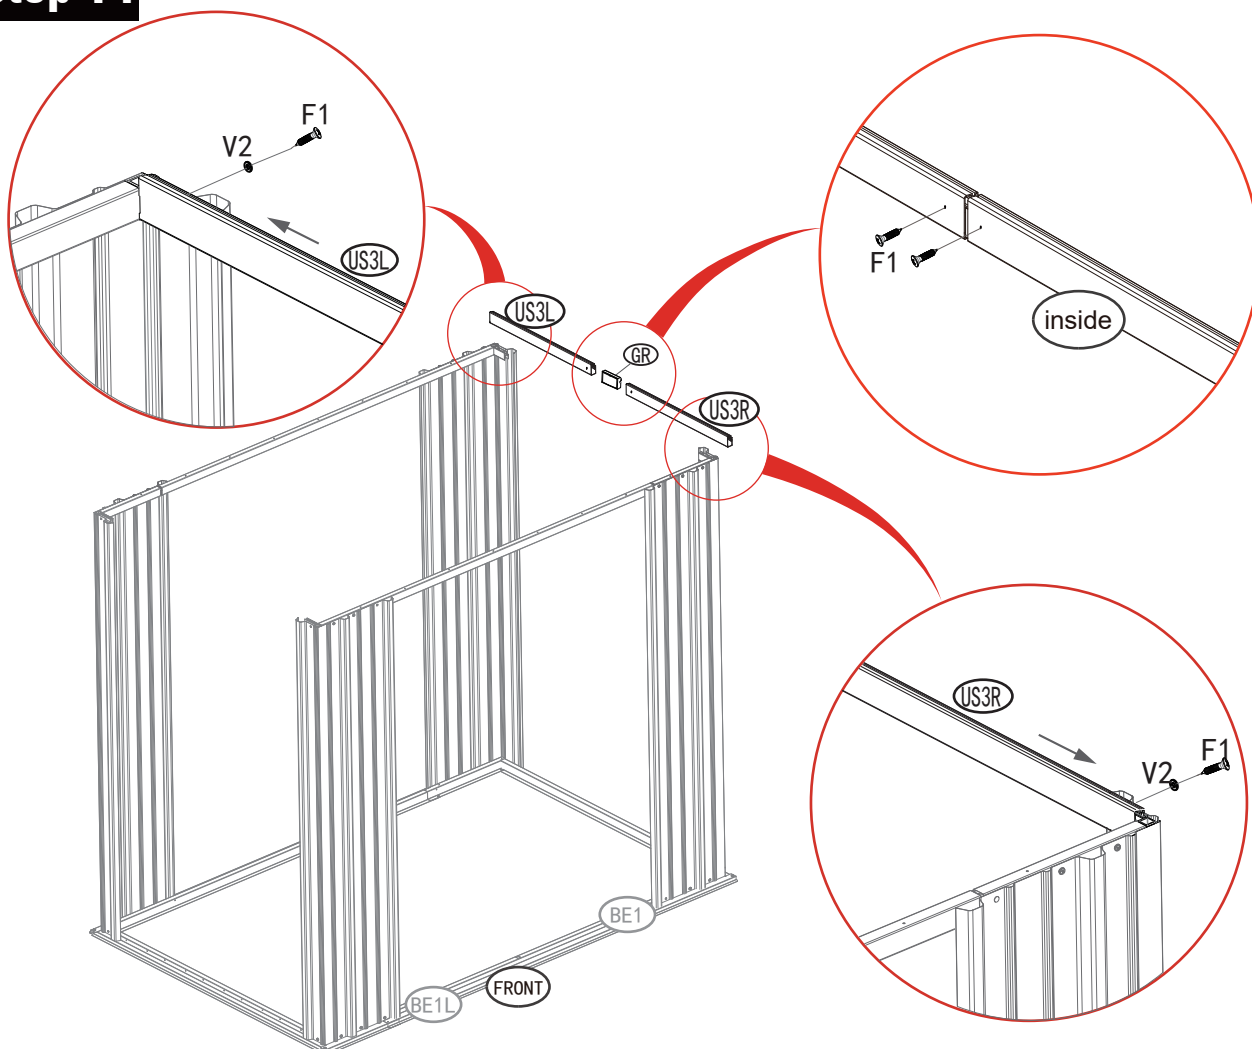

US3L

1 PC
US3R


1 PC
GR



1 PC
F1

4 PC
V2

2 PC

Step 15

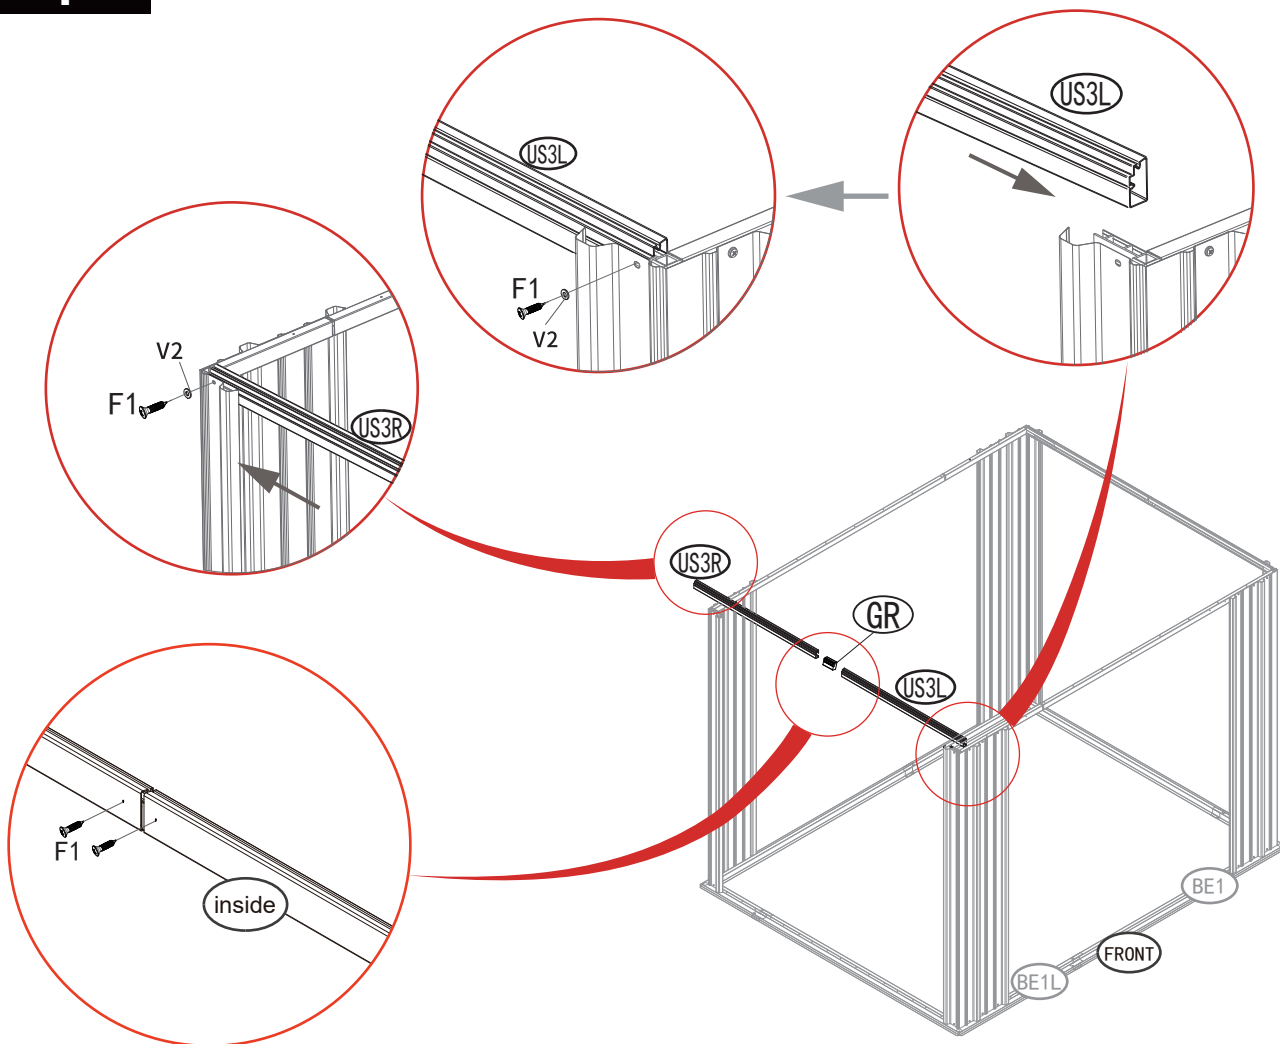


US3L

1 PC
US3R

1 PC
GR


1 PC
F1

4 PC
V2

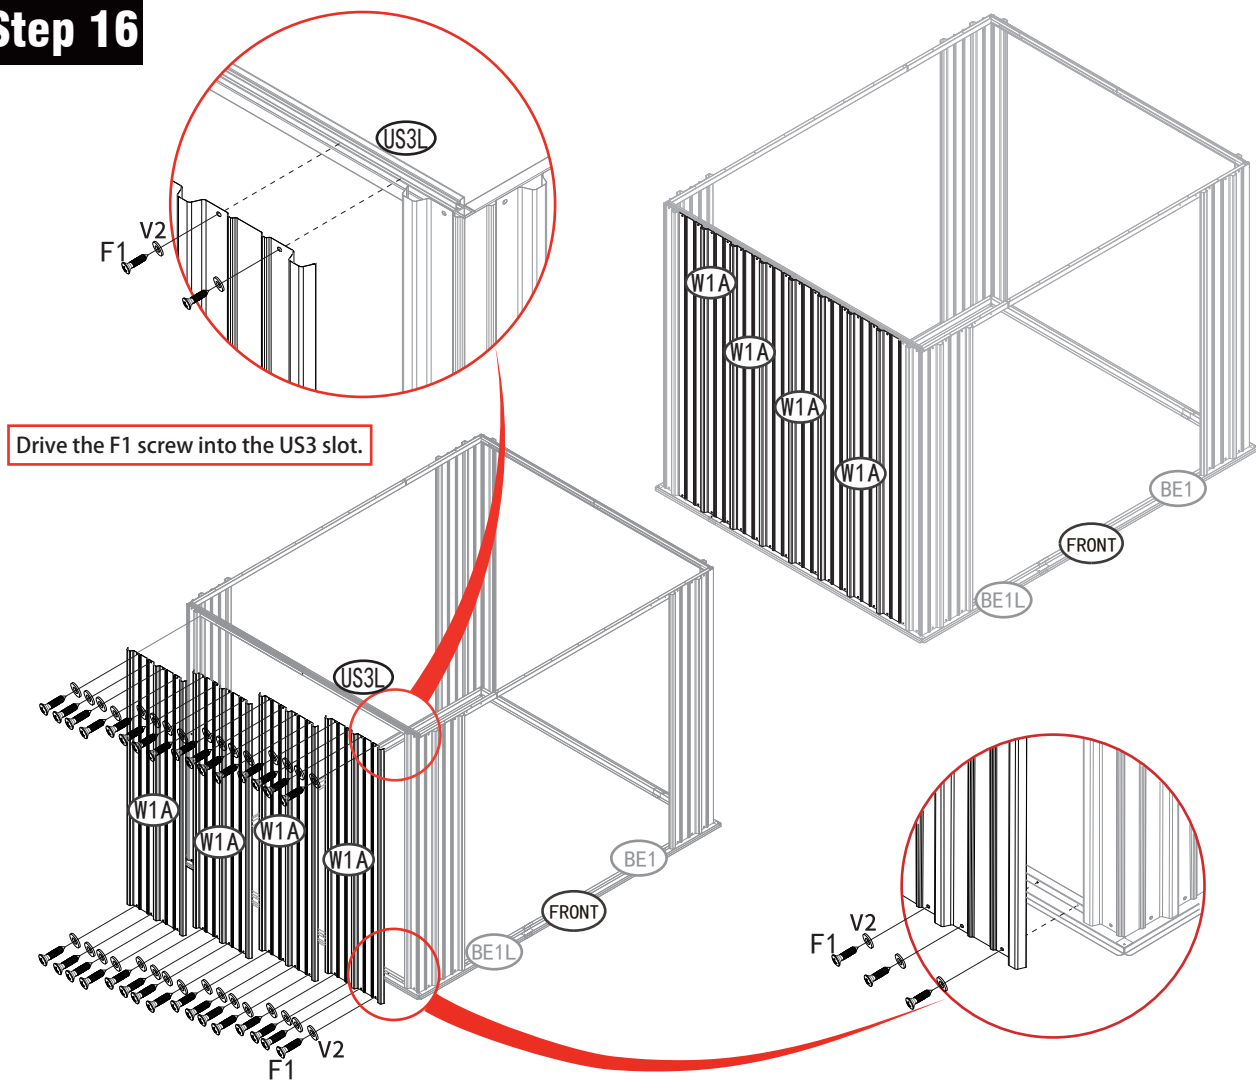2 PC

Step 16

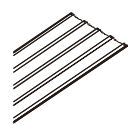



W1A

4 PC
F1

32 PC
V2


32 PC

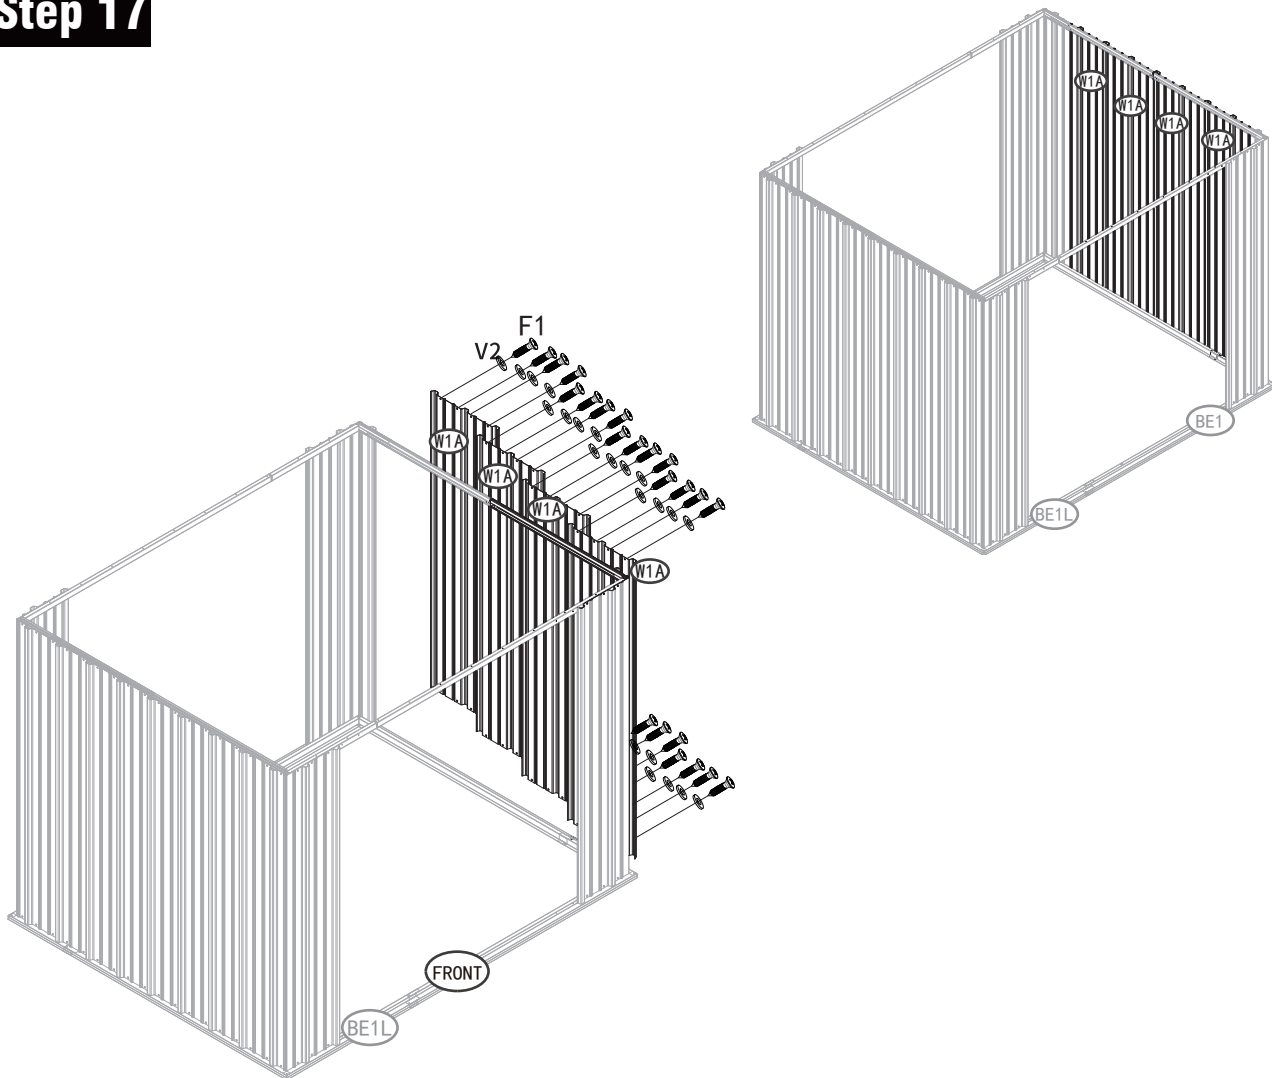
Step 17




W1A
 4 PC
F1
 32 PC
V2
 32 PC


Step 18

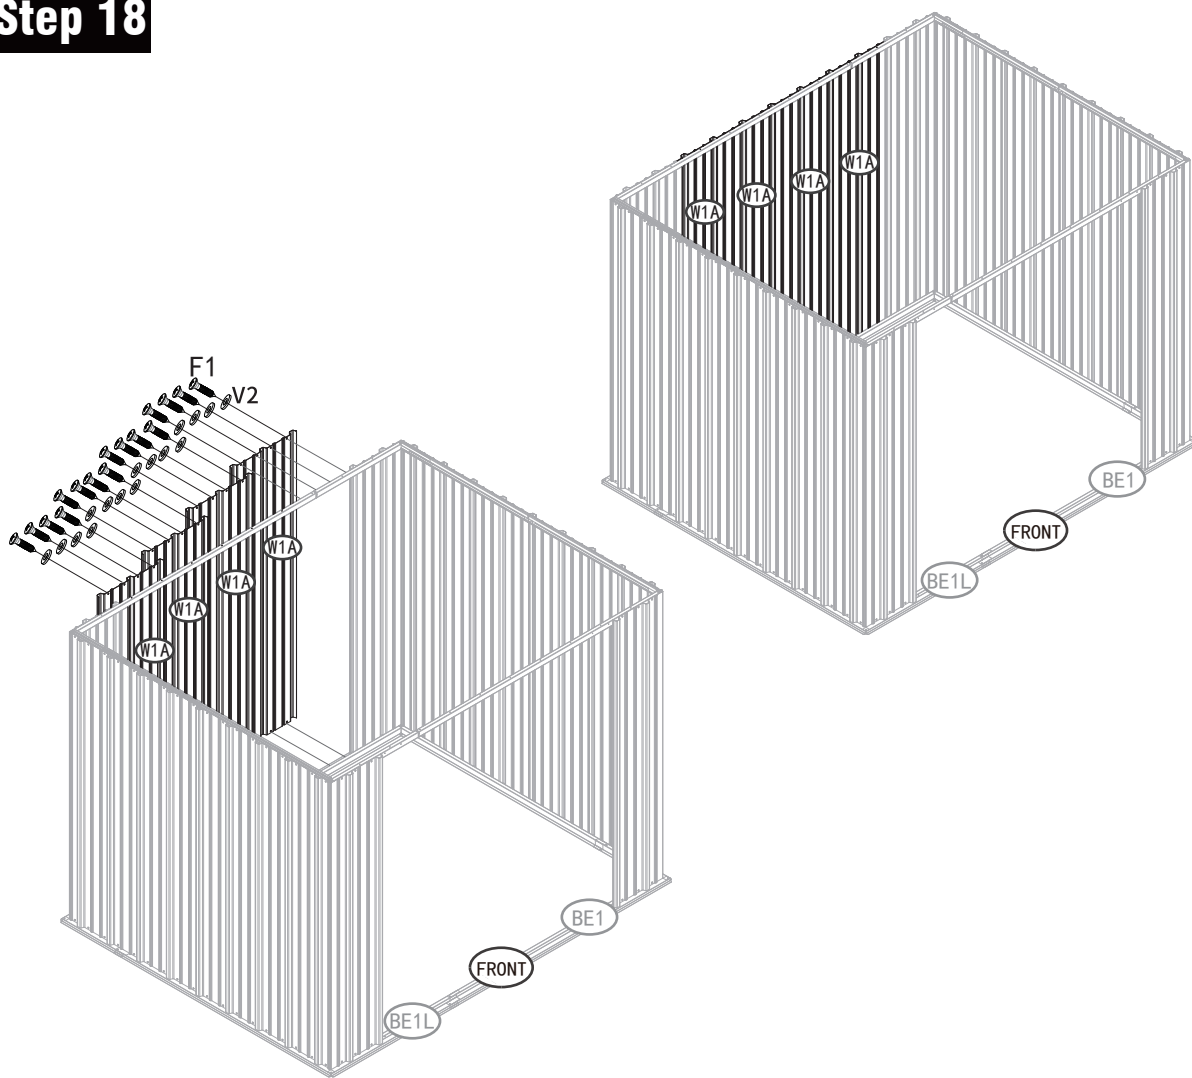

W1A
 4 PC
F1
 32 PC
V2
 32 PC

Step 19

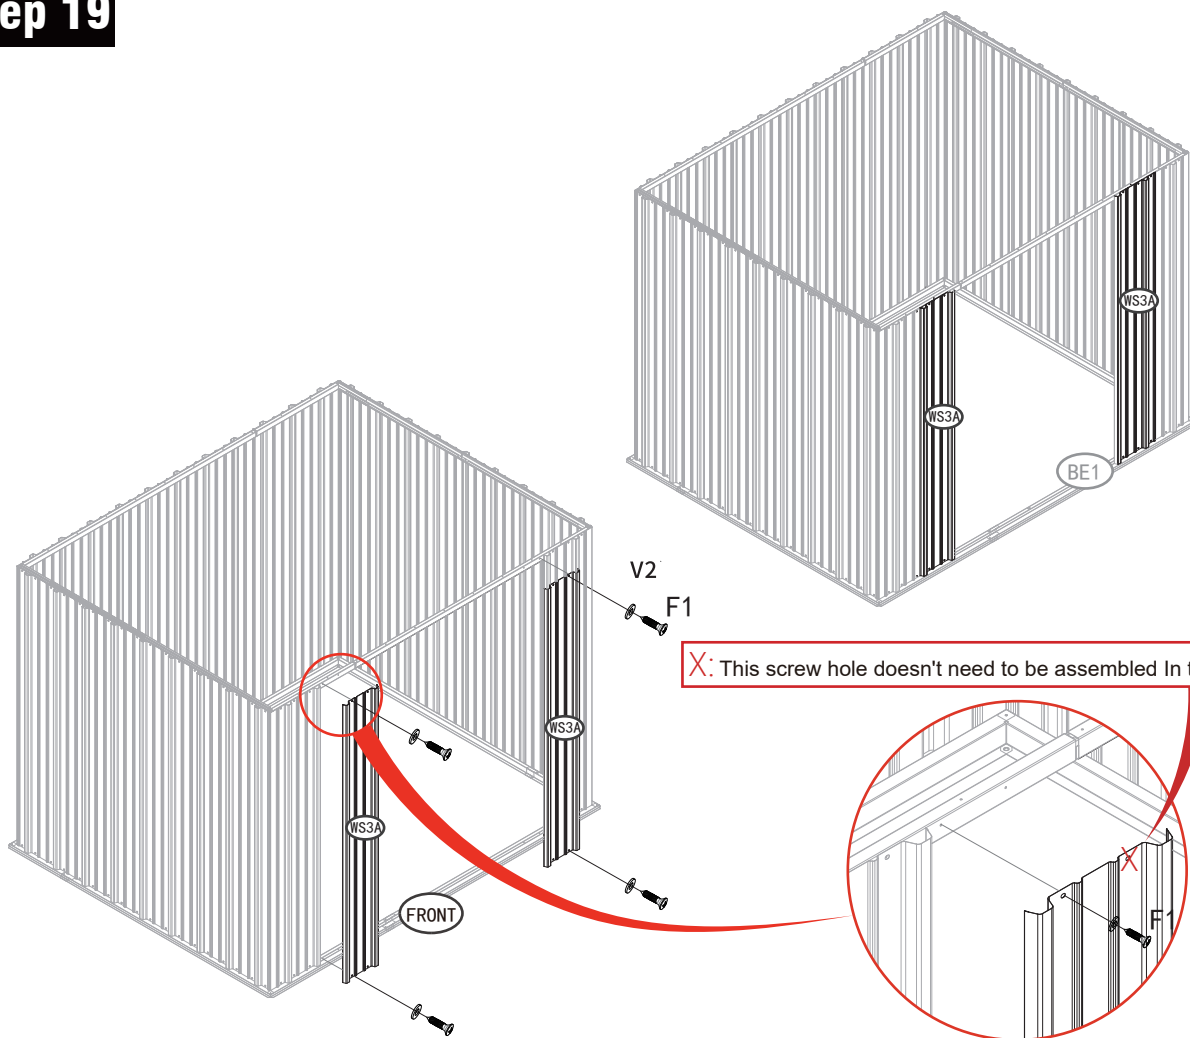


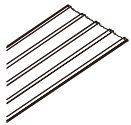
WS3A

1 PC
F1

4 PC
V2

4 PC

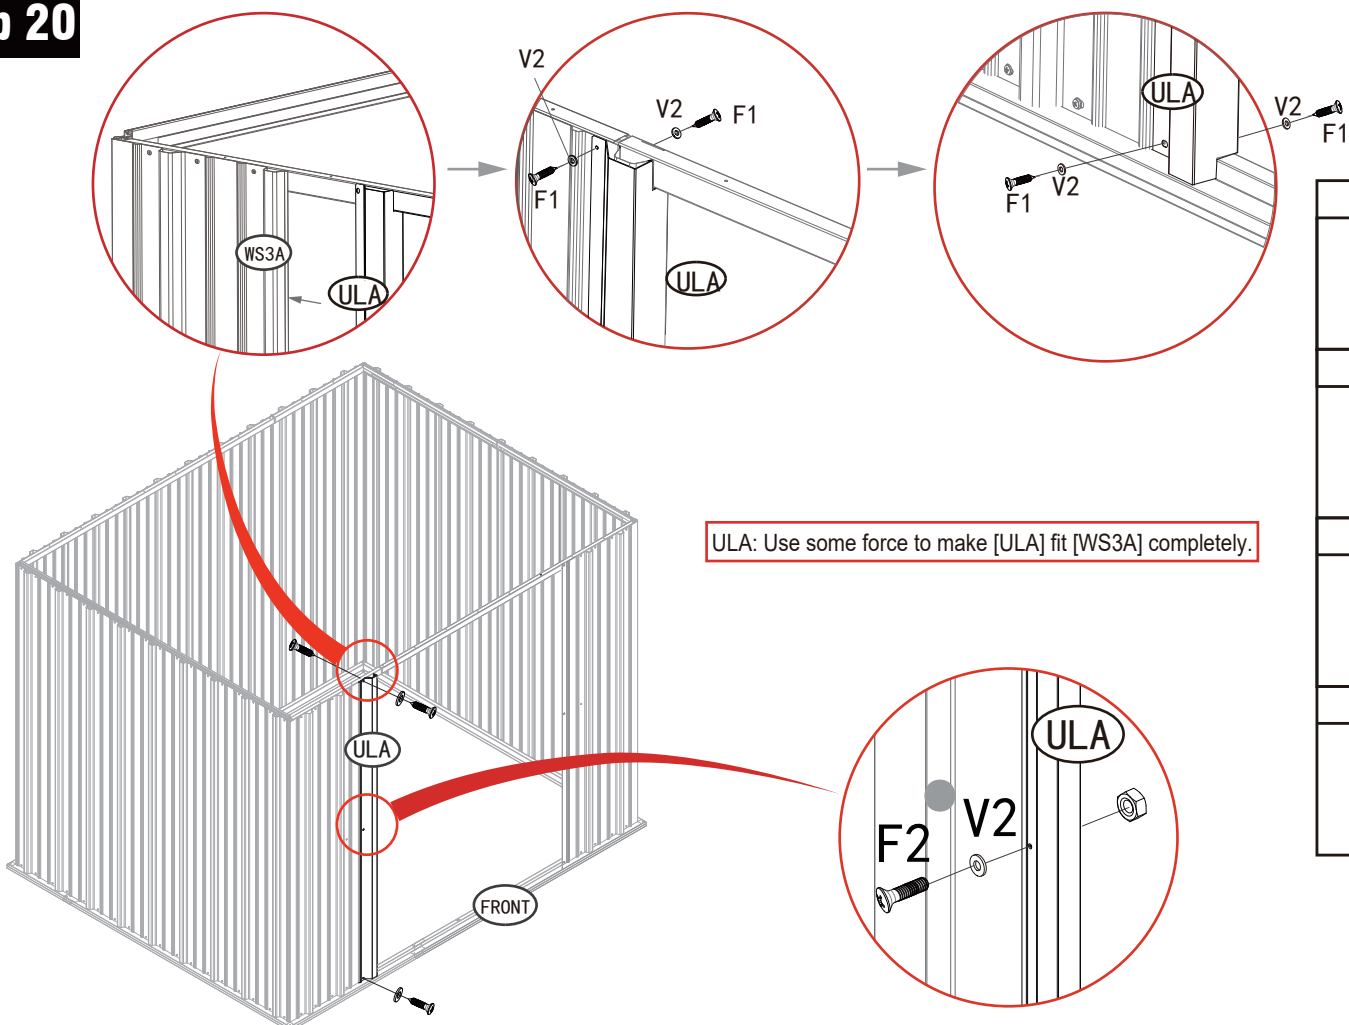Step 20



ULA

1 PC
F1


4 PC
V2

5 PC
F2


1 PC

ULA: Use some force to make [ULA] fit [WS3A] completely.

Step 21

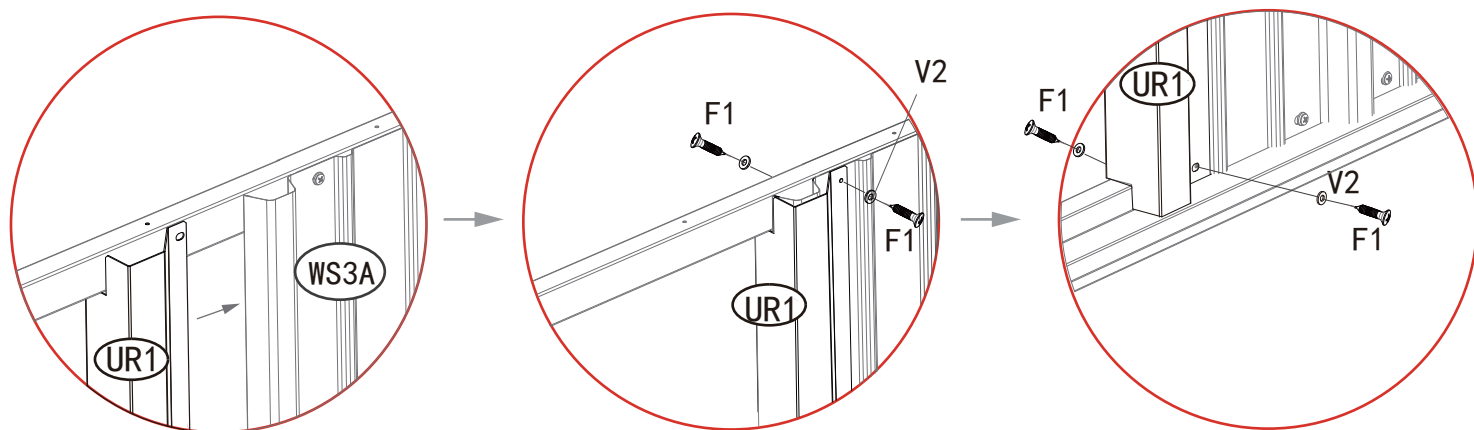

UR1: Use some force to make [UR1] fit [WS3A] completely.

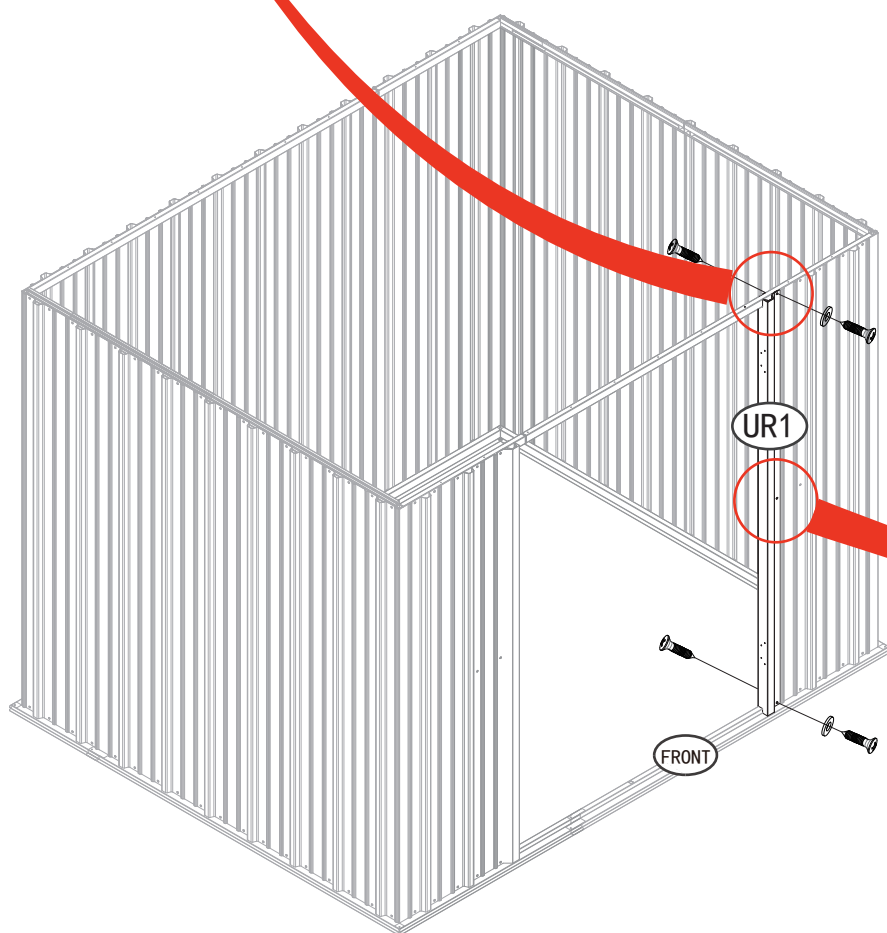


UR1

1 PC
F1



4 PC
V2

5 PC
F2





1 PC

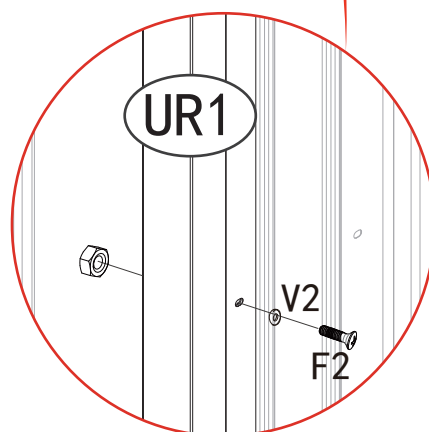


Step 22

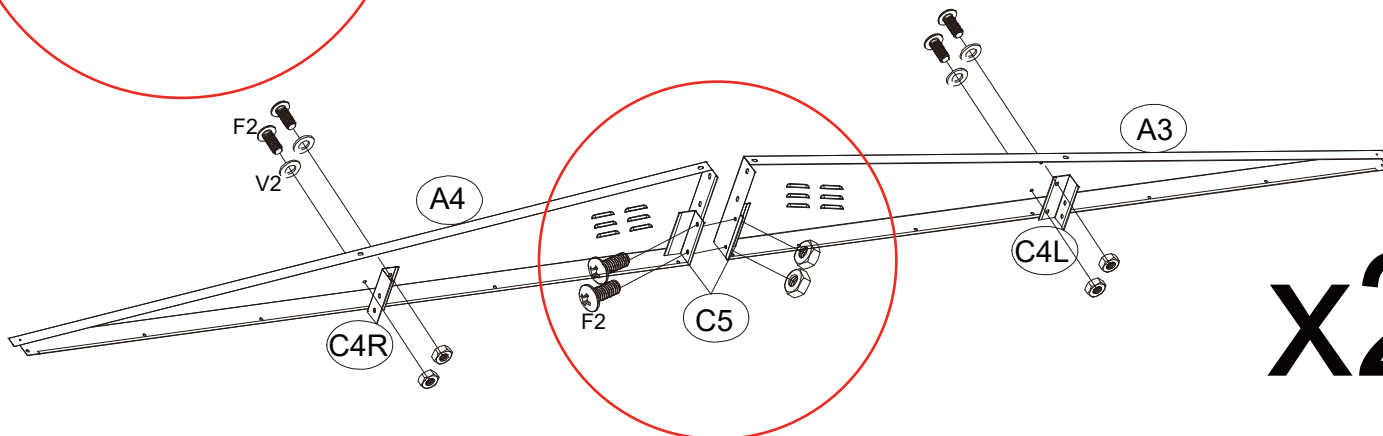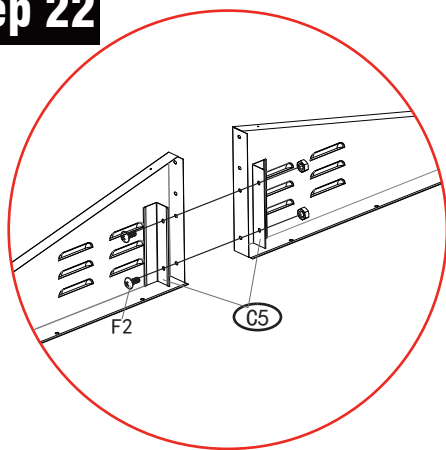

x2

A3	A4	C4L	C4R	C5	F2	V2
						
2 PC	2 PC	2 PC	2 PC	4 PC	12 PC	8 PC

Step 23

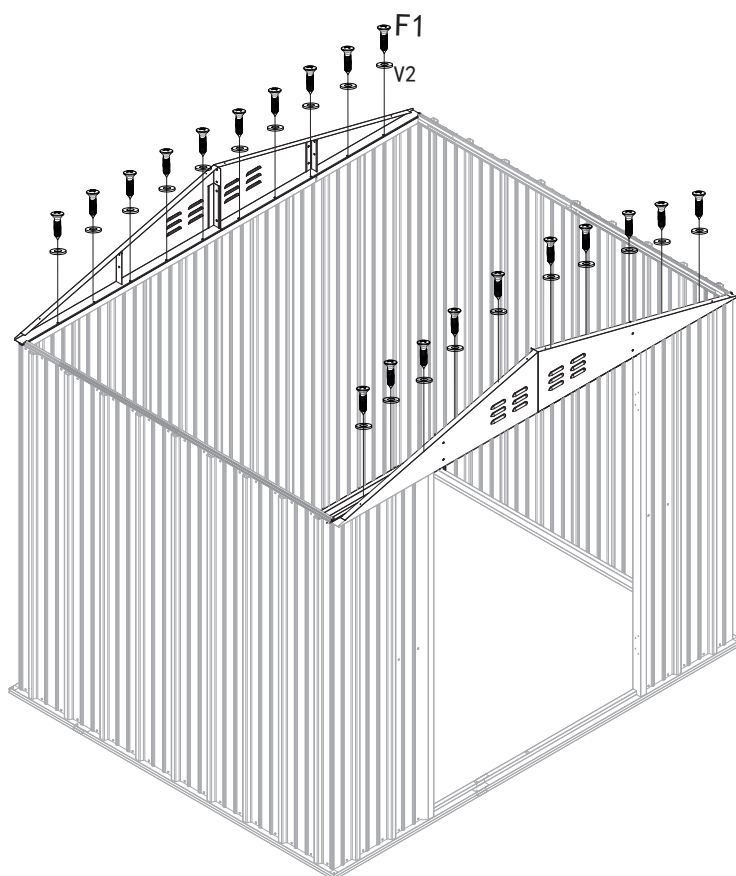



F1

20 PC
V2


20 PC

Step 24

M2	M2L	F2	F7
			
2 PC	2 PC	12 PC	4 PC

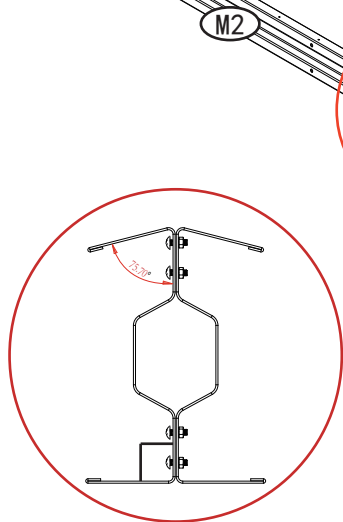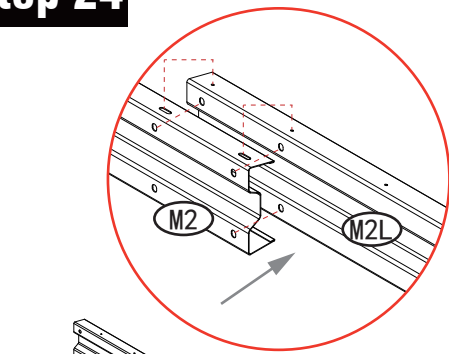



Cross-sectional view: Please place M2L and M2 beveled side up.

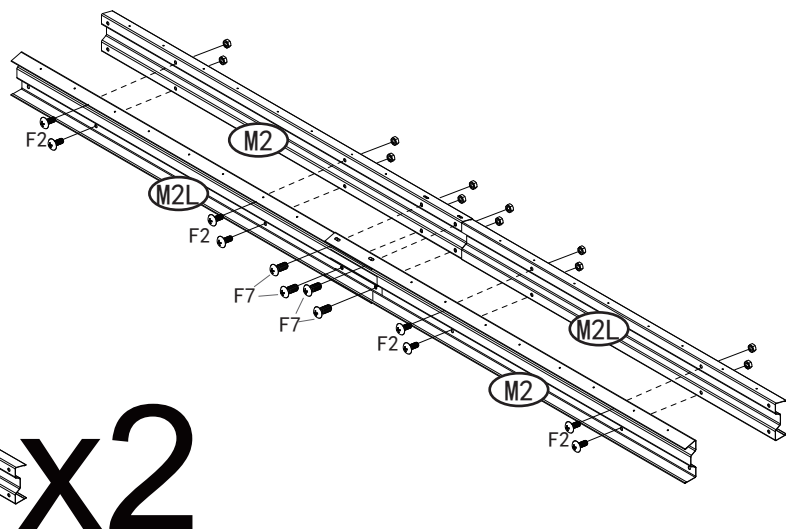


Step 25


F2

4 PC

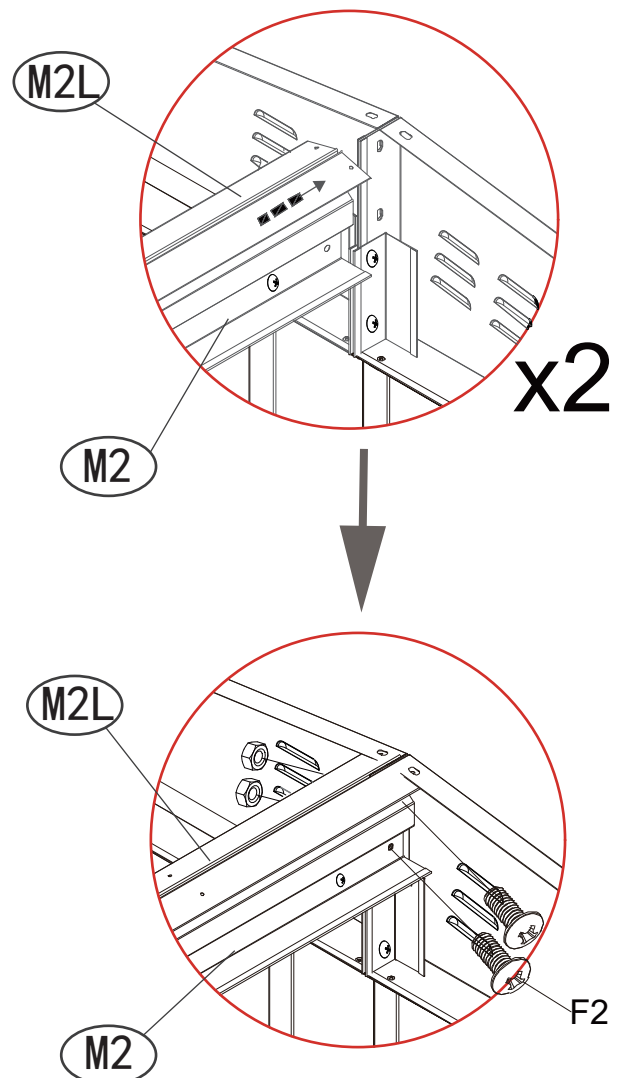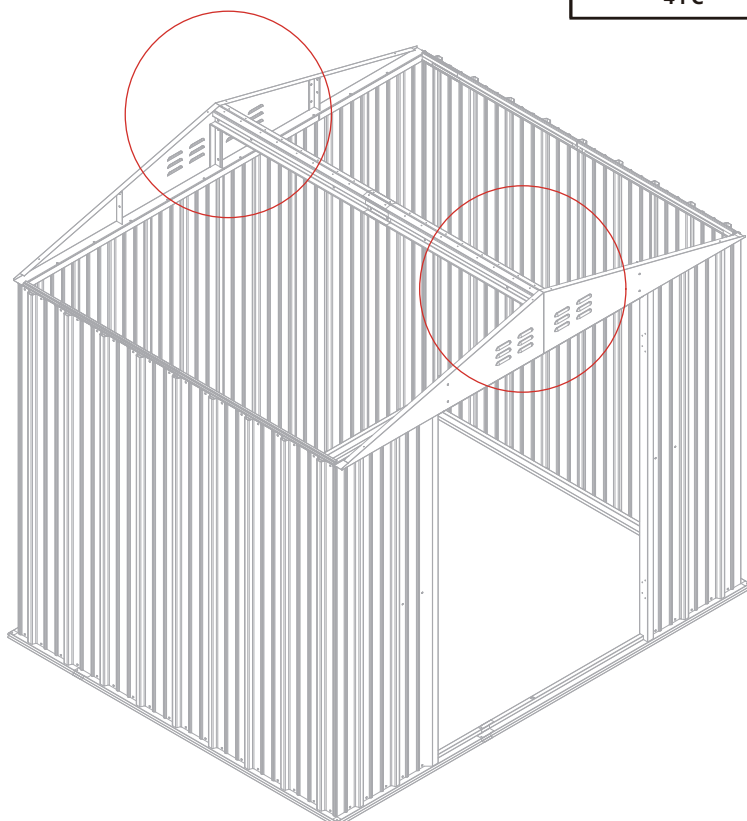

Step 26


M2	M2L	F2
		
2 PC	2 PC	8 PC

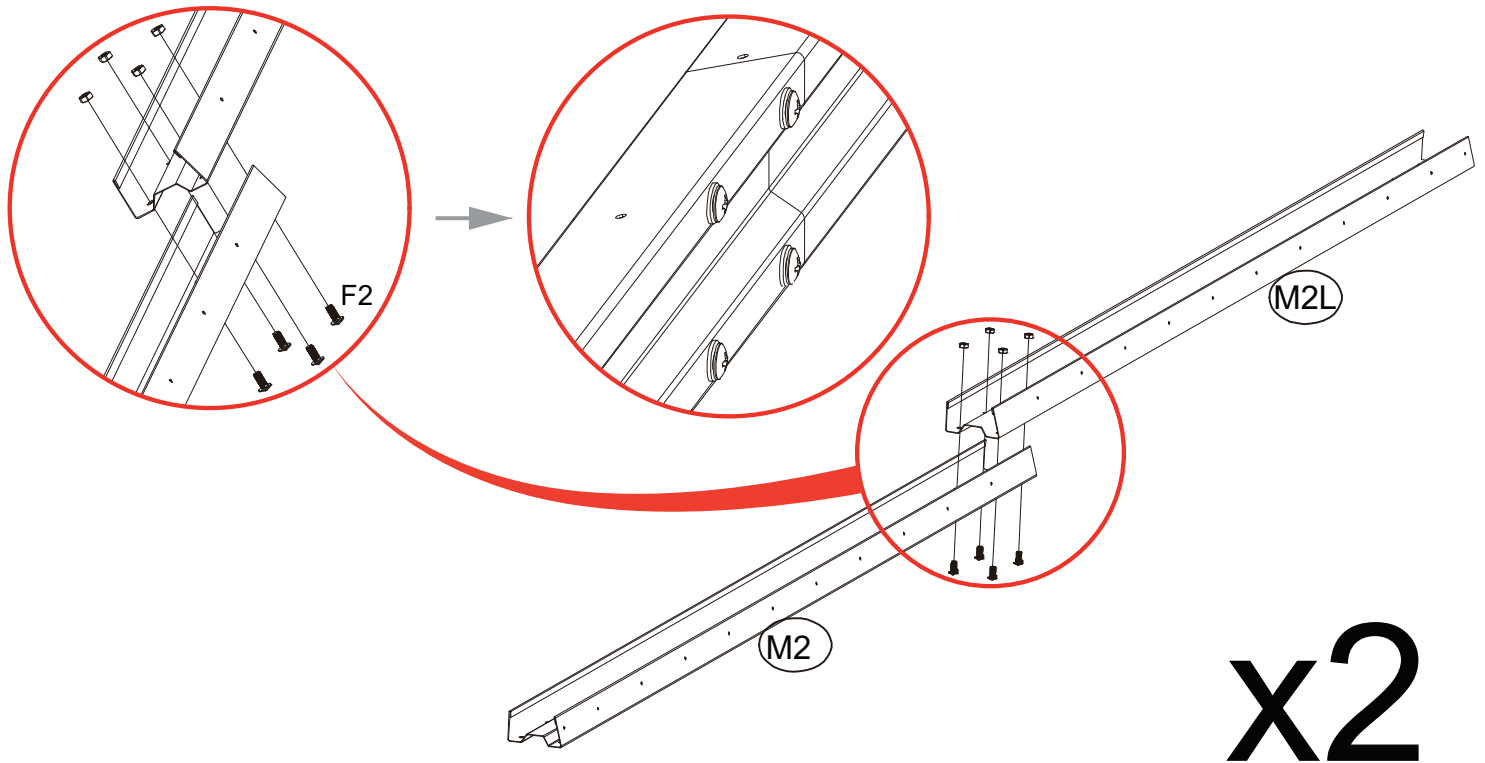

Step 27


F2


8 PC

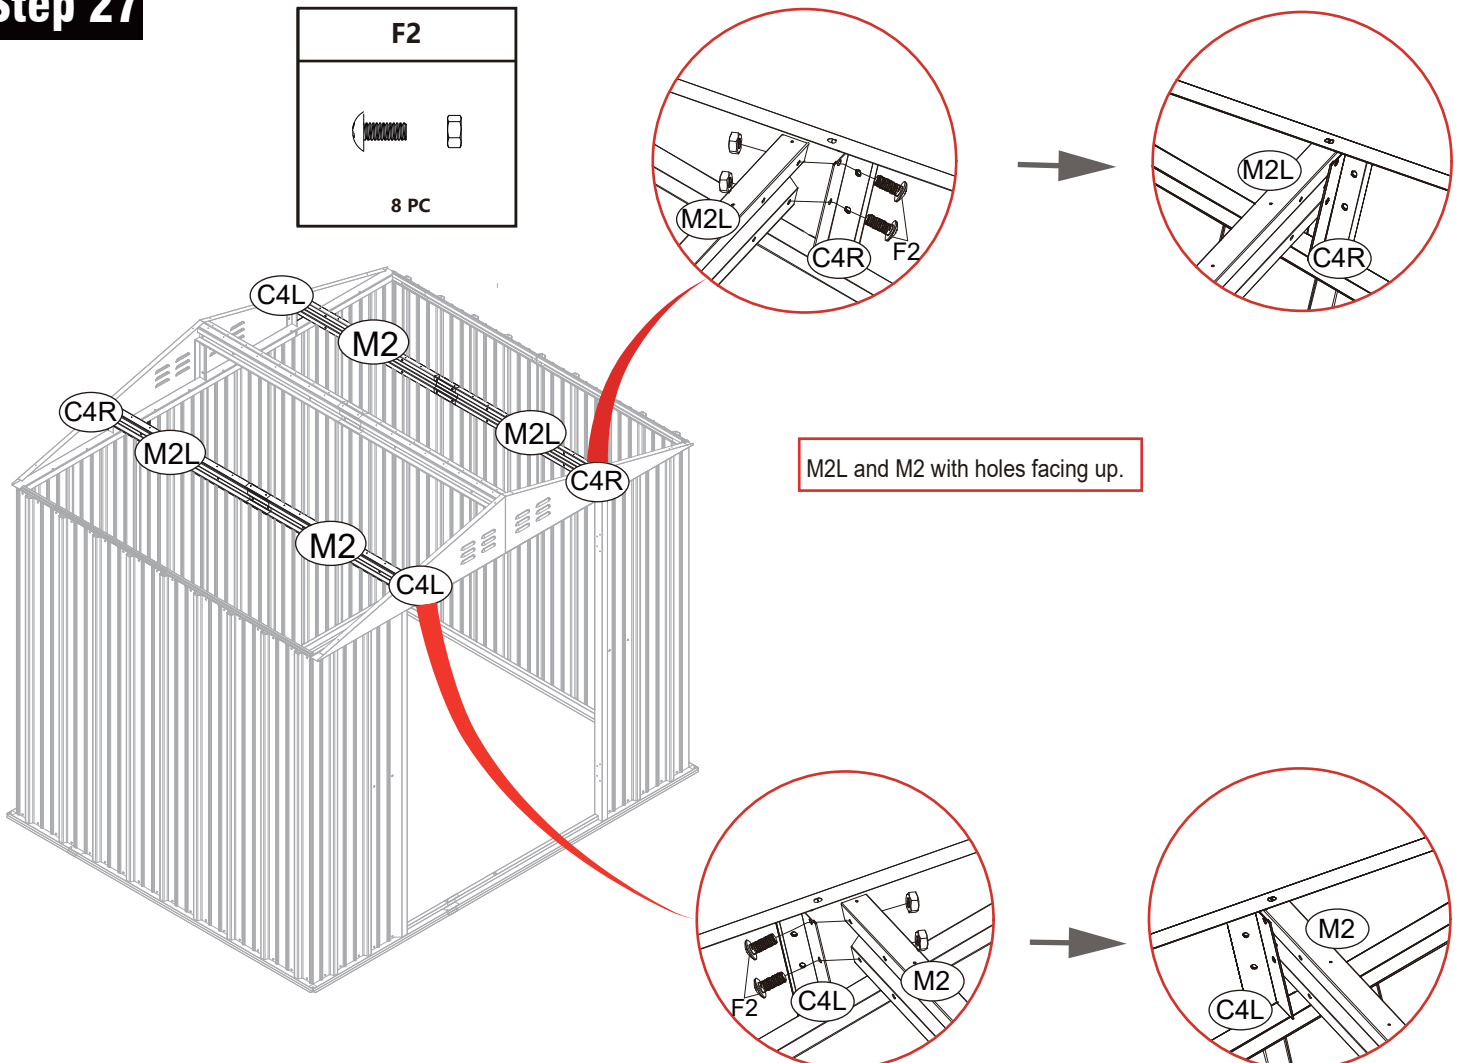


Step 28


Note: It's different between both sides of [PE5] and [PE6].
The flat side faces outside.

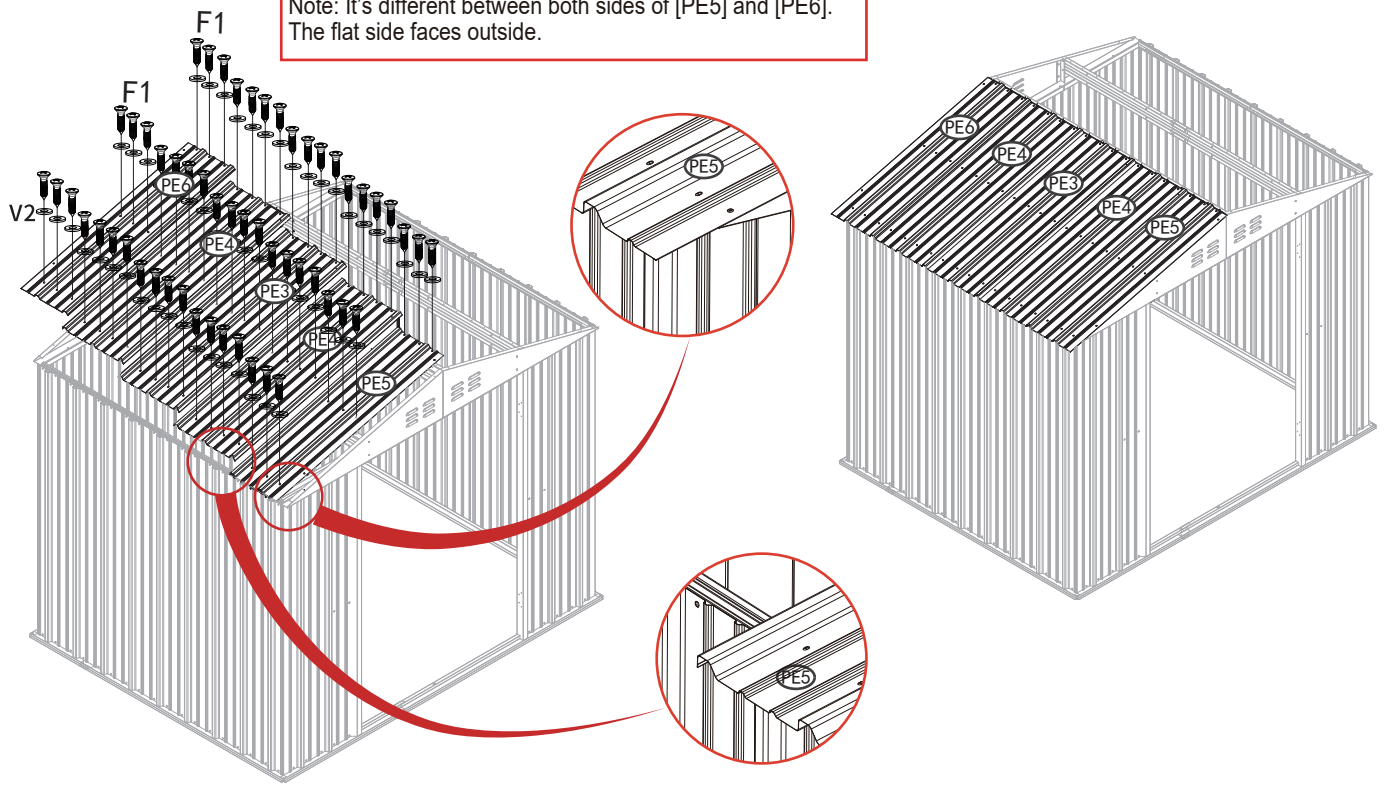


PE3	PE4	PE5	PE6	F1	V2
					
1 PC	2 PC	1 PC	1 PC	54 PC	54 PC



Step 29

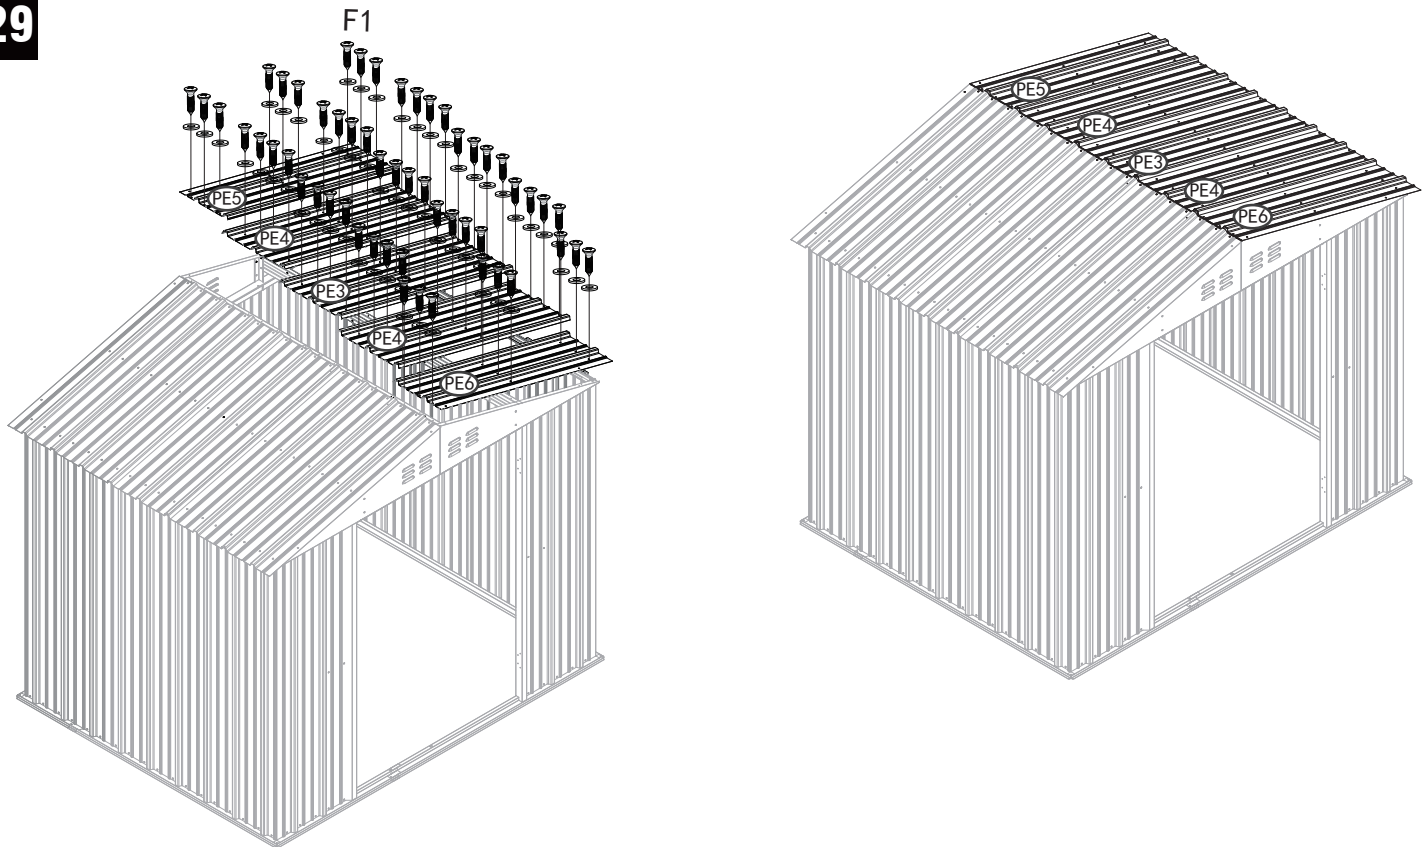

PE3	PE4	PE5	PE6	F1	V2
					
1 PC	2 PC	1 PC	1 PC	54 PC	54 PC

Step 30

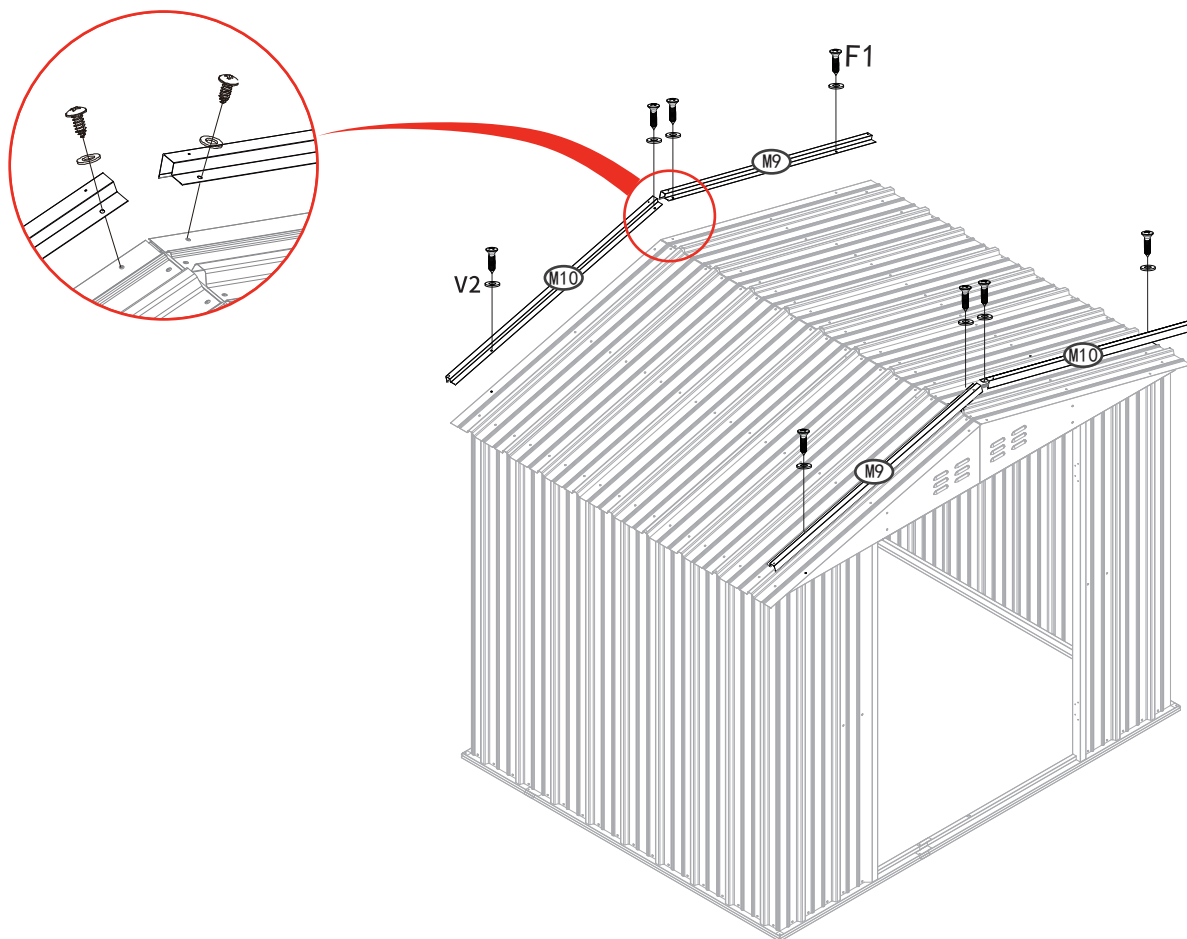



M9

2 PC
M10

2 PC
F1

8 PC
V2

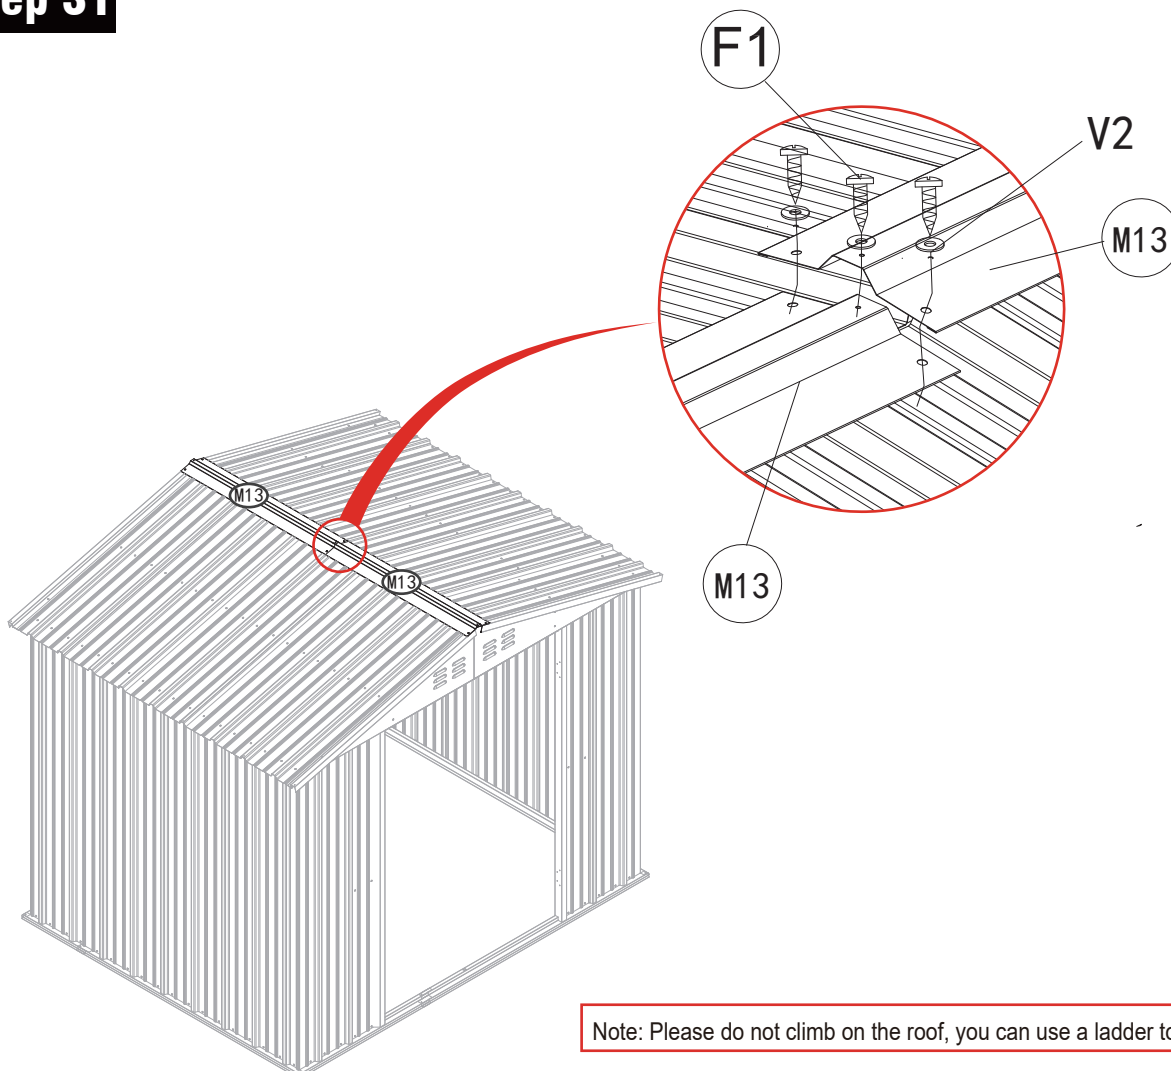8 PC

Step 31




M13

2 PC
F1


3 PC
V2

3 PC

Note: Please do not climb on the roof, you can use a ladder to install.

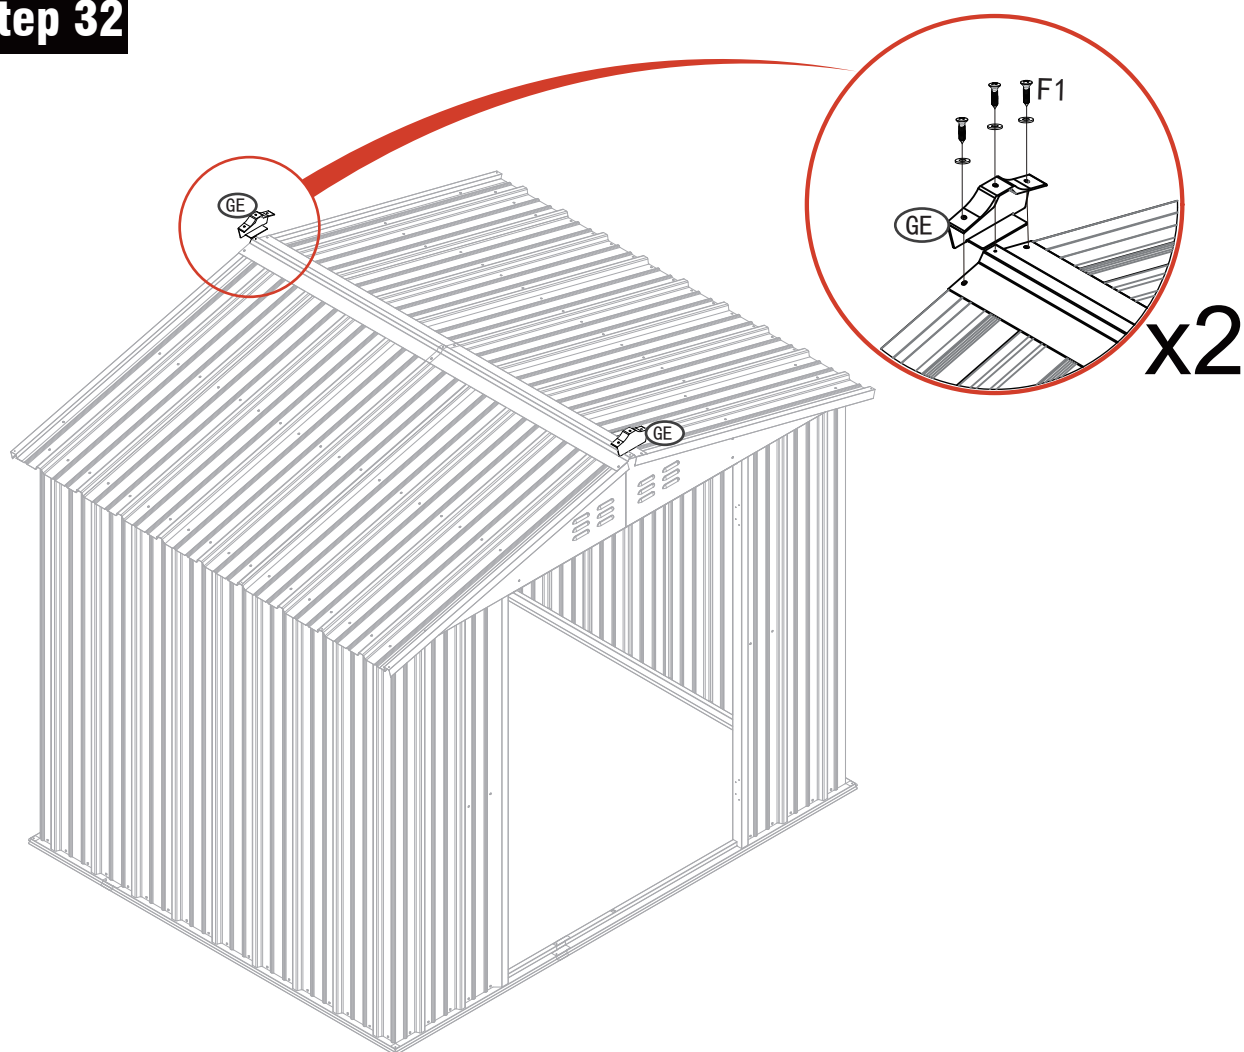Step 32





GE

2 PC
F1

6 PC
V2

6 PC

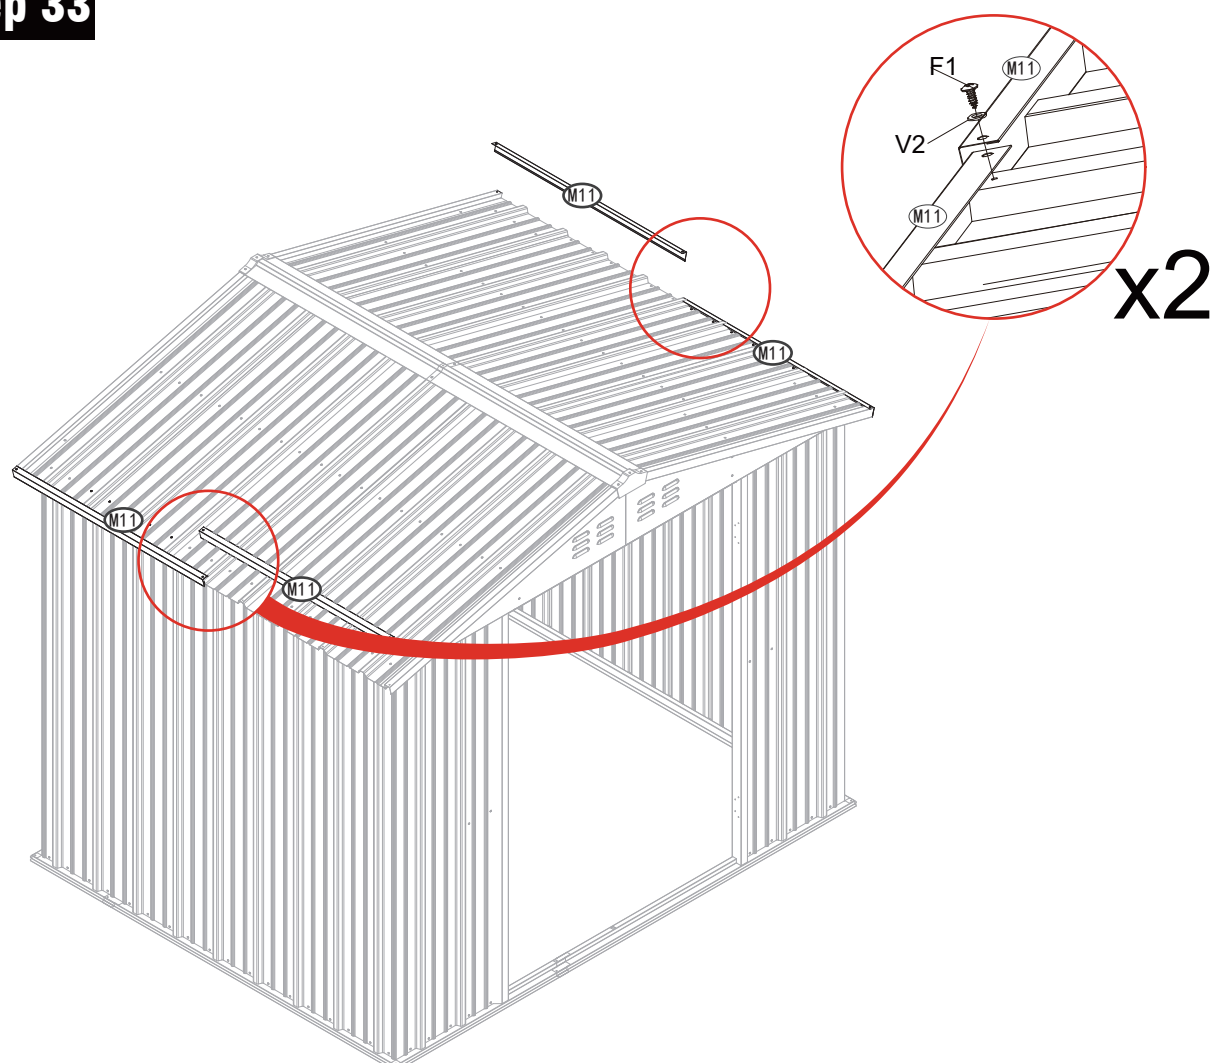Step 33




M11

4 PC
F1

2 PC
V2

2 PC

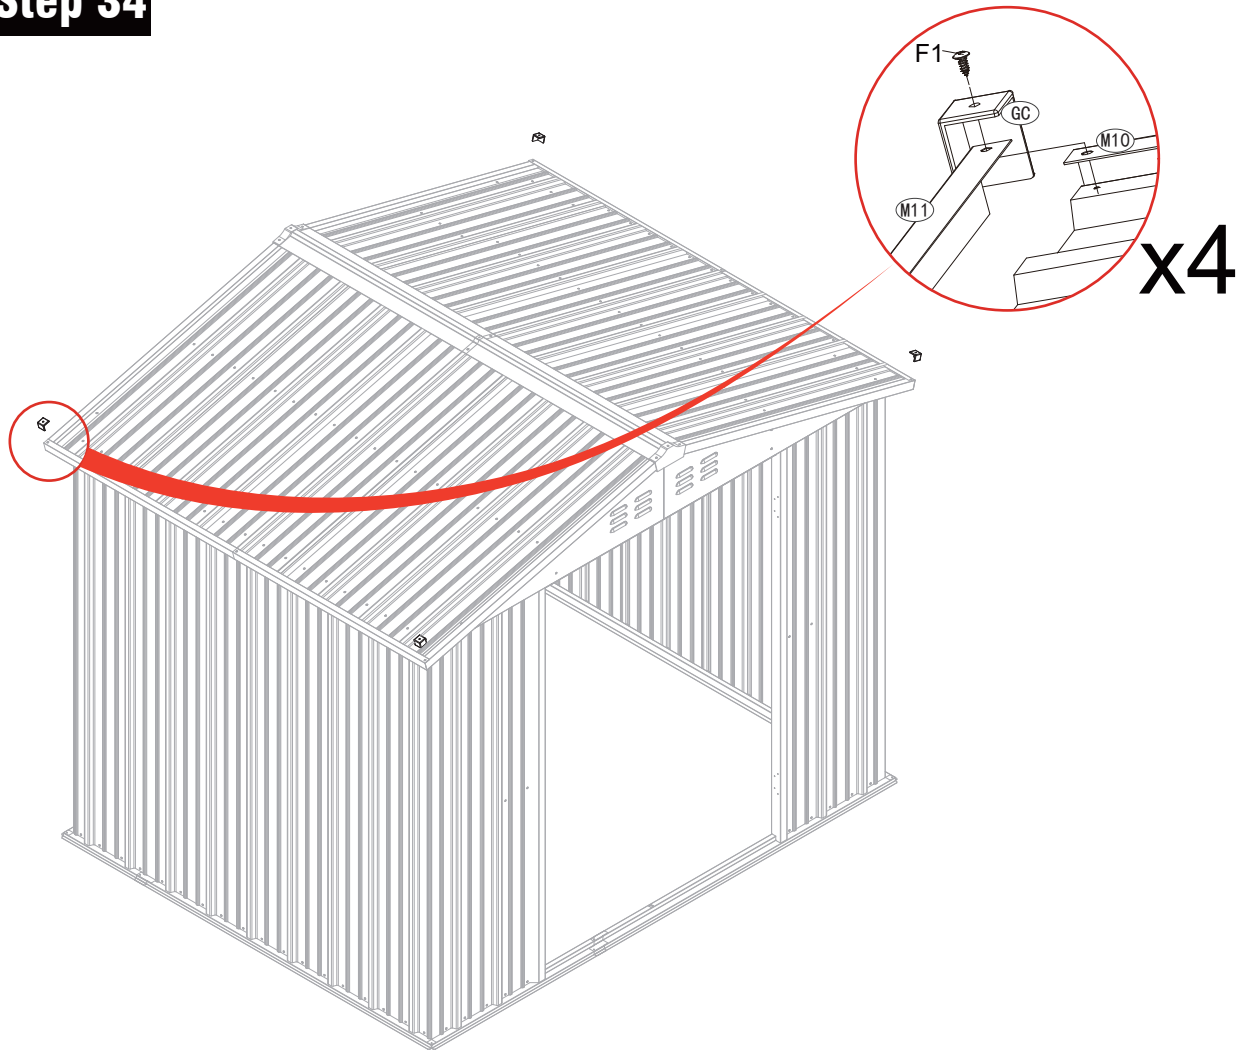Step 34




GC

4 PC
F1


4 PC

Step 35

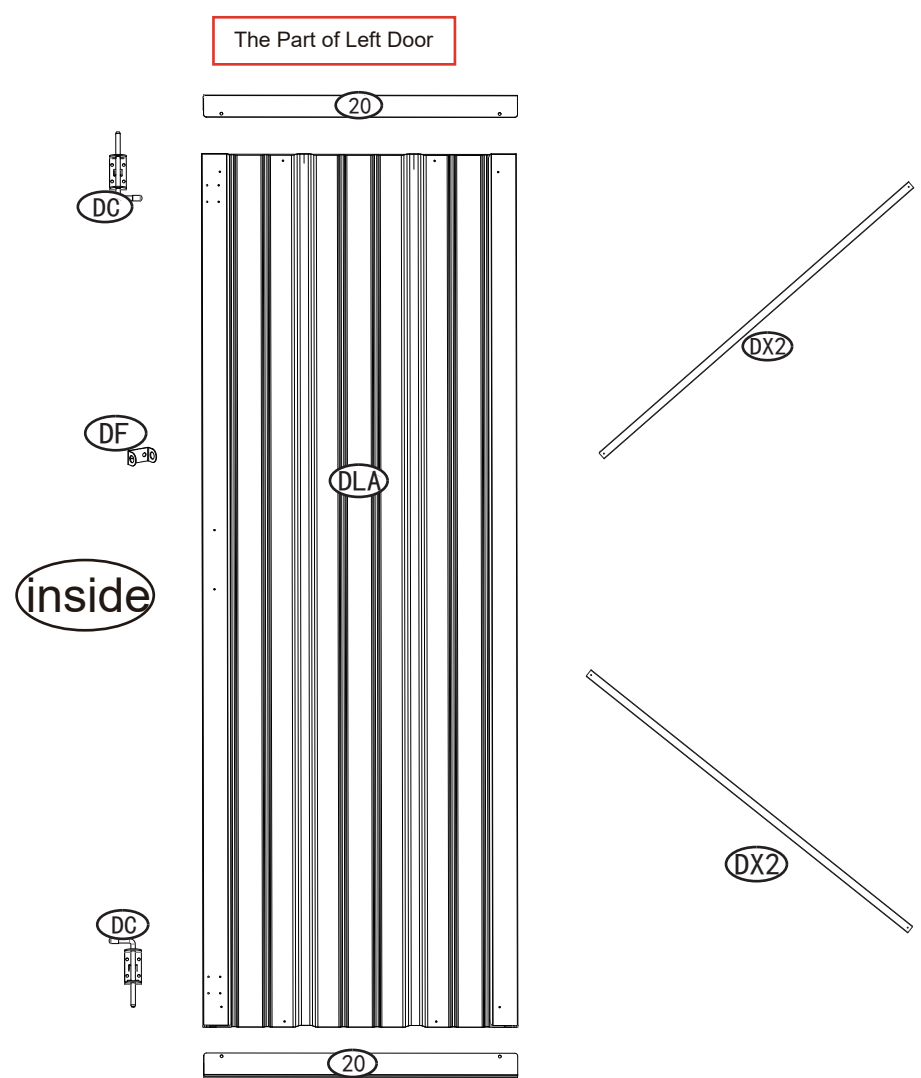


Step 36

The light color is the inside of the door,
facing the [20] side with only 2 screw holes.

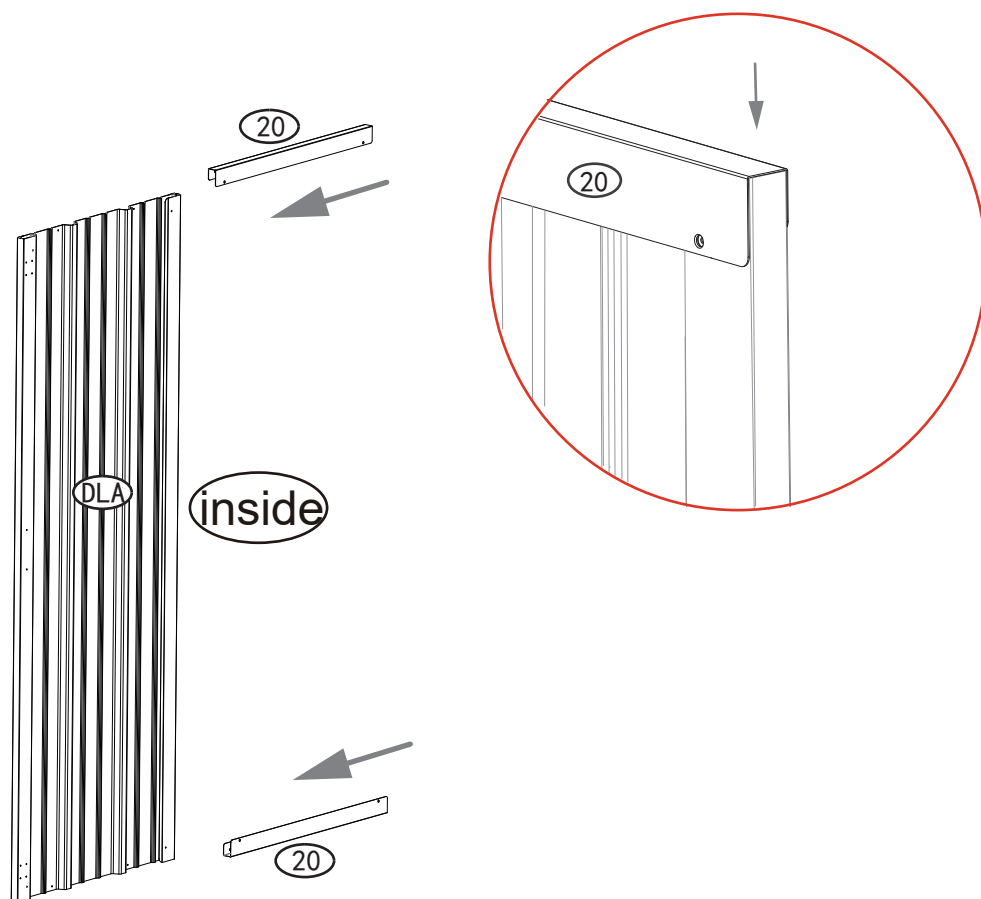

20
2 PC
DLA
1 PC
F1
10 PC



Step 37

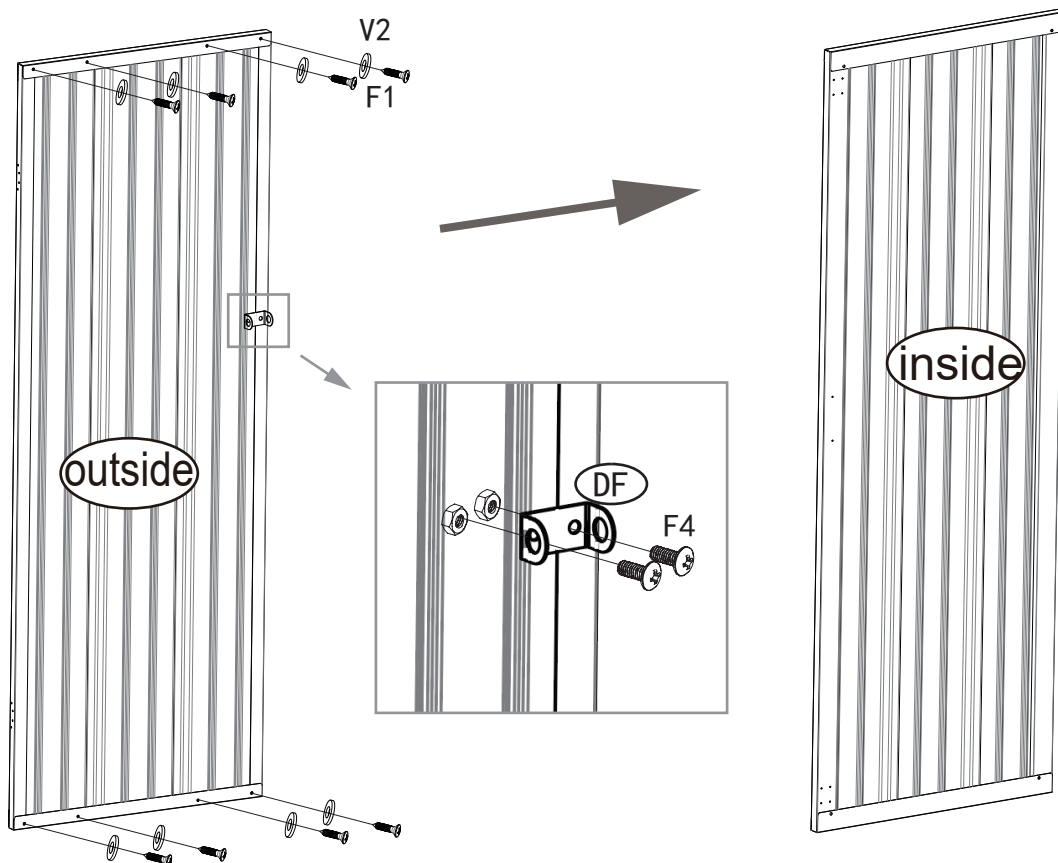

DF
1 PC
F4
2 PC
F1
8 PC
V2
8 PC


Step 38

DX2	DH	F1	F3
			
2 PC	2 PC	6 PC	8 PC

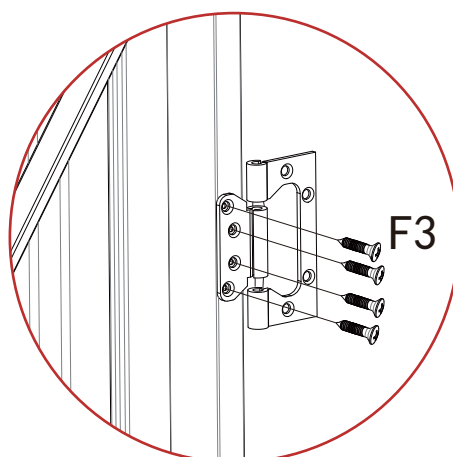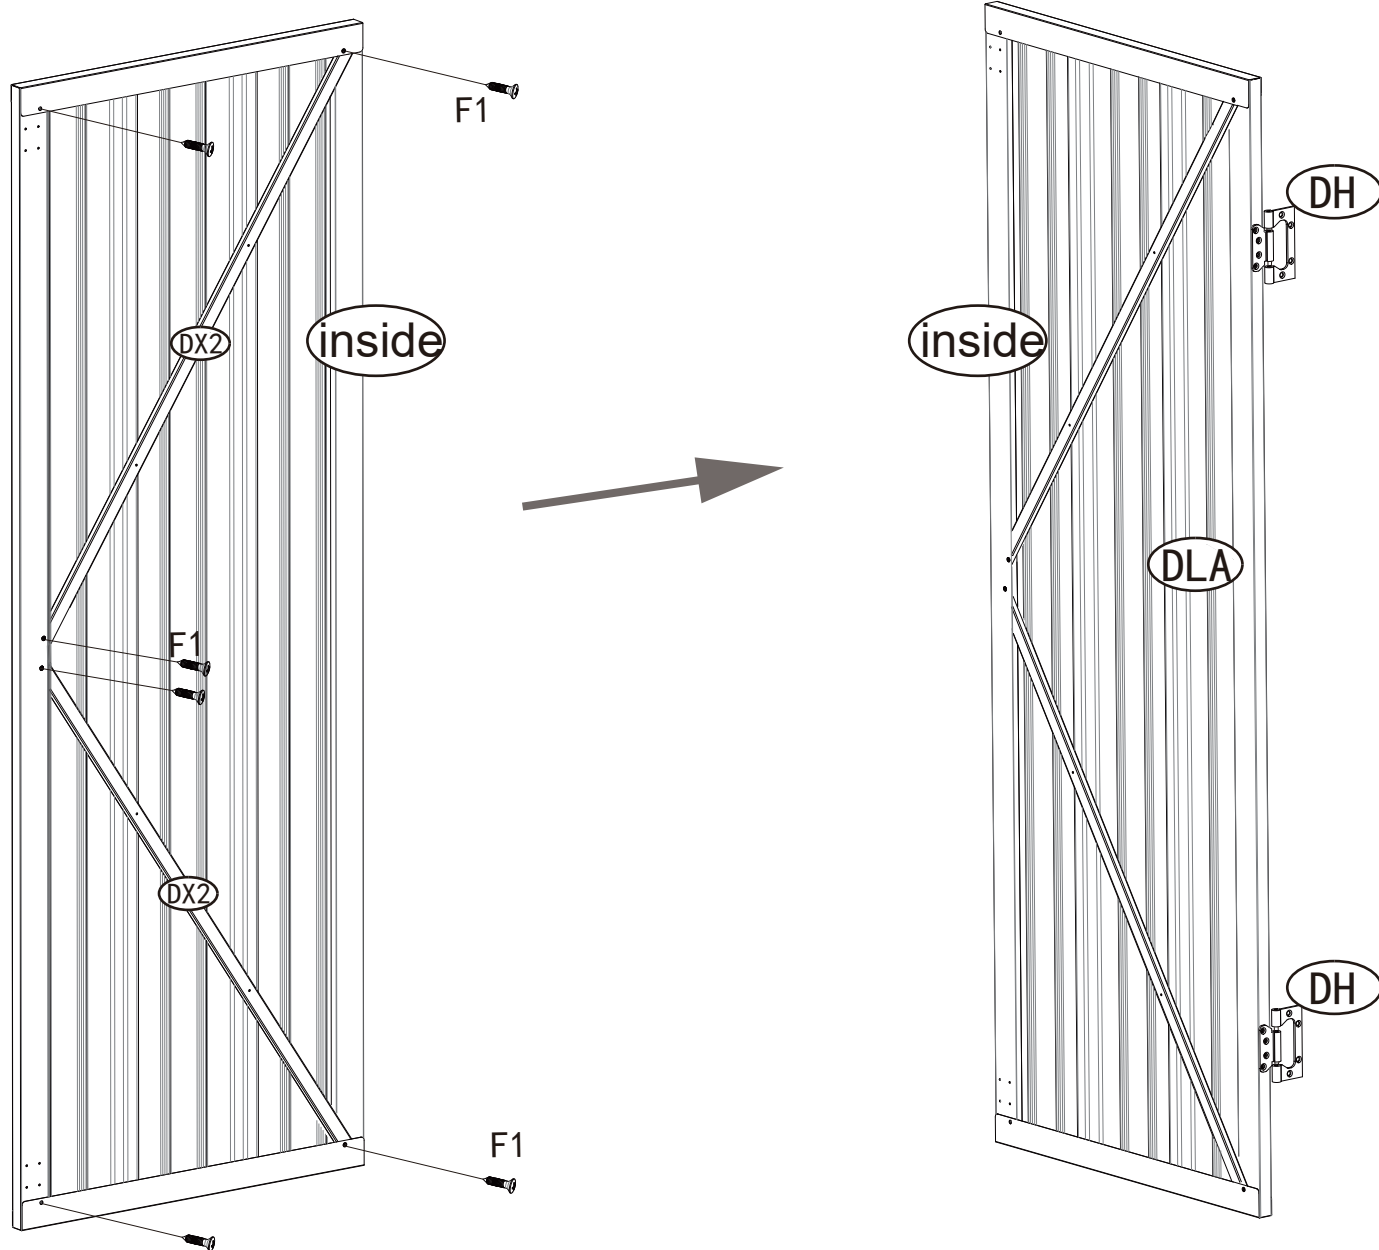

X2

Step 39

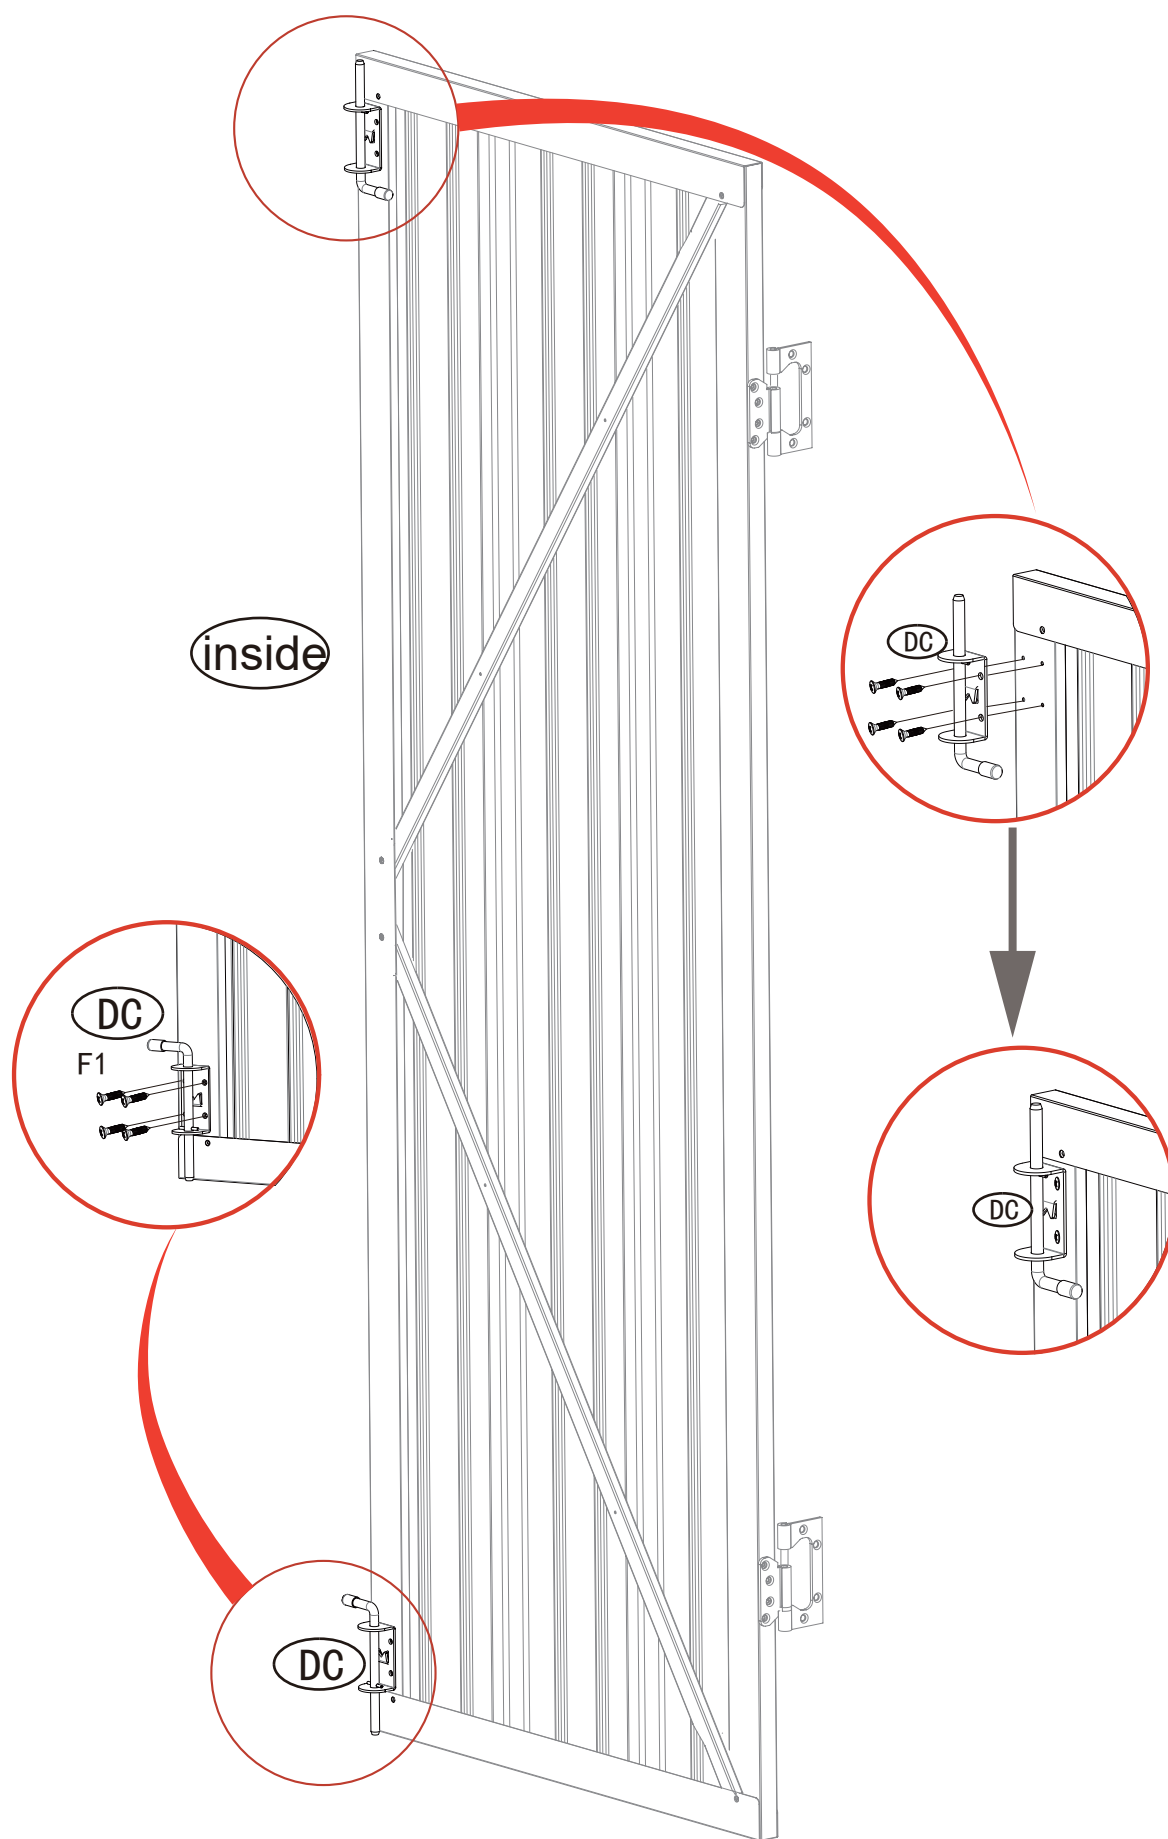

DC




2 PC
F1

8 PC

The Part List of Right Door




inside

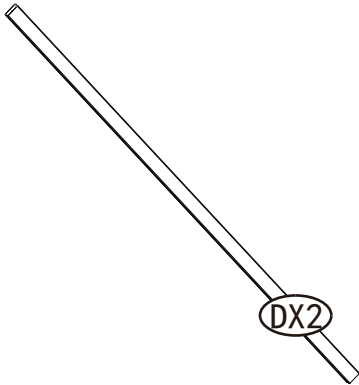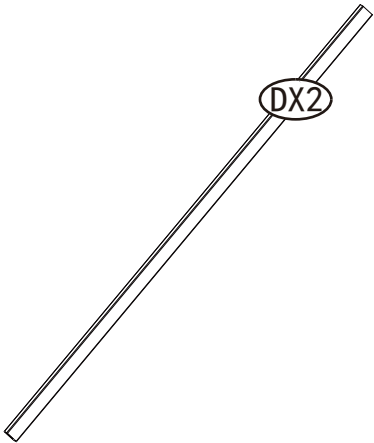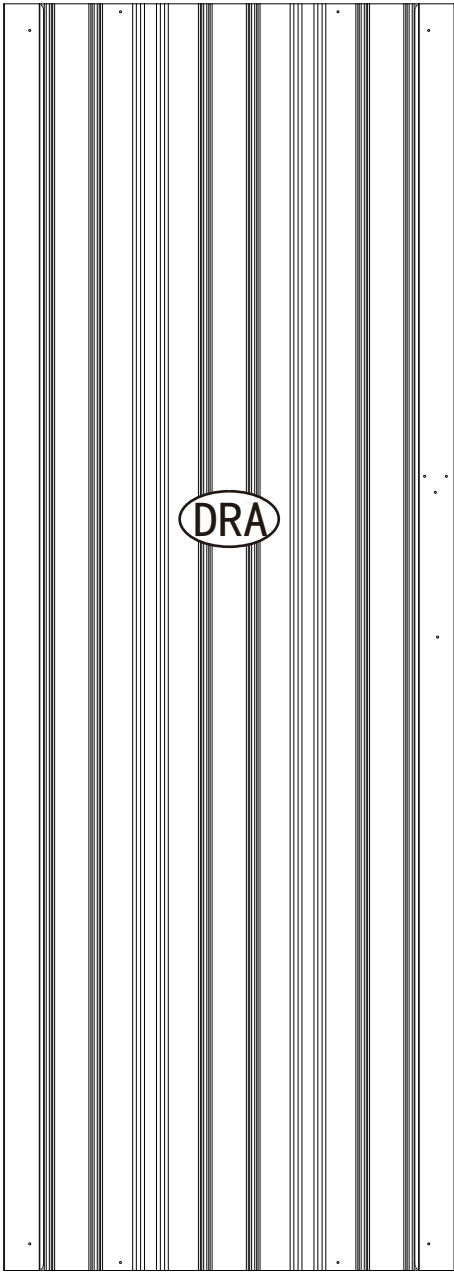


Step 41

The light color is the inside of the door,
facing the [20] side with only 2 screw holes.

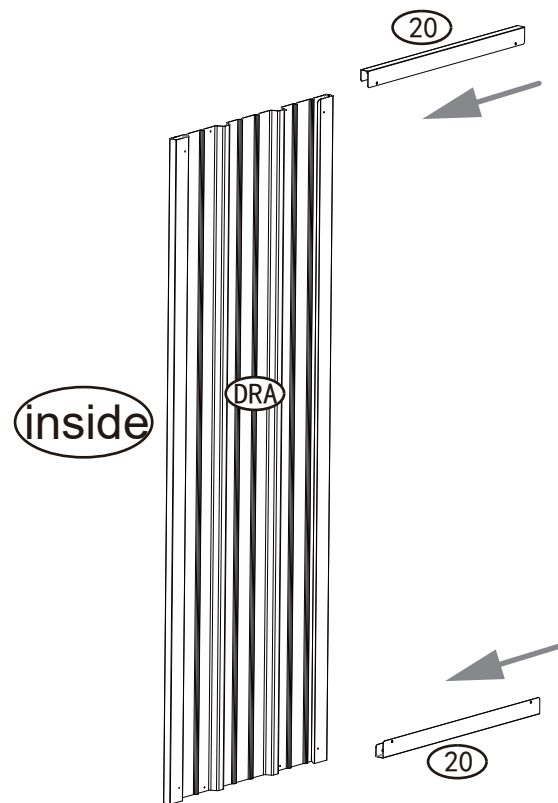

20
2 PC
DRA
1 PC
F1
10 PC


Step 42

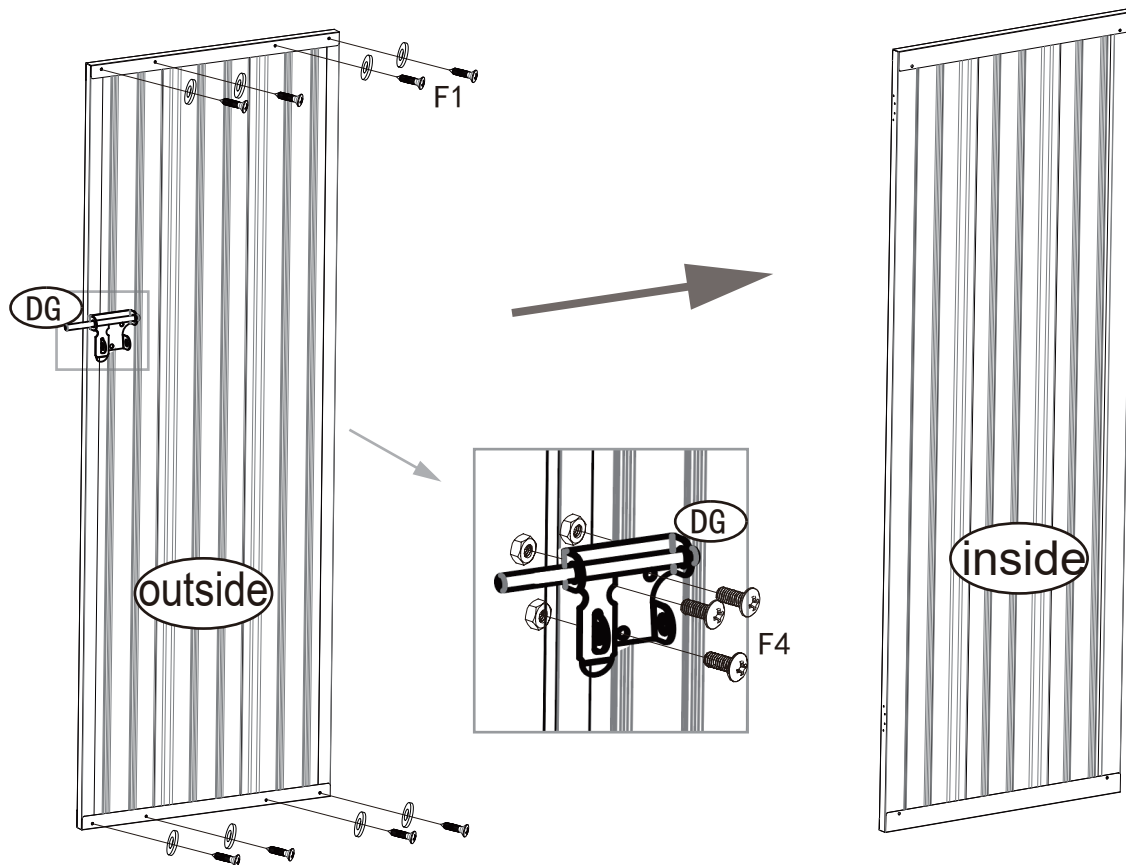

DG
1 PC
F4
3 PC
F1
8 PC
V2
8 PC


Step 43

DX2	DH	F1	F3
			
2 PC	2 PC	6 PC	8 PC

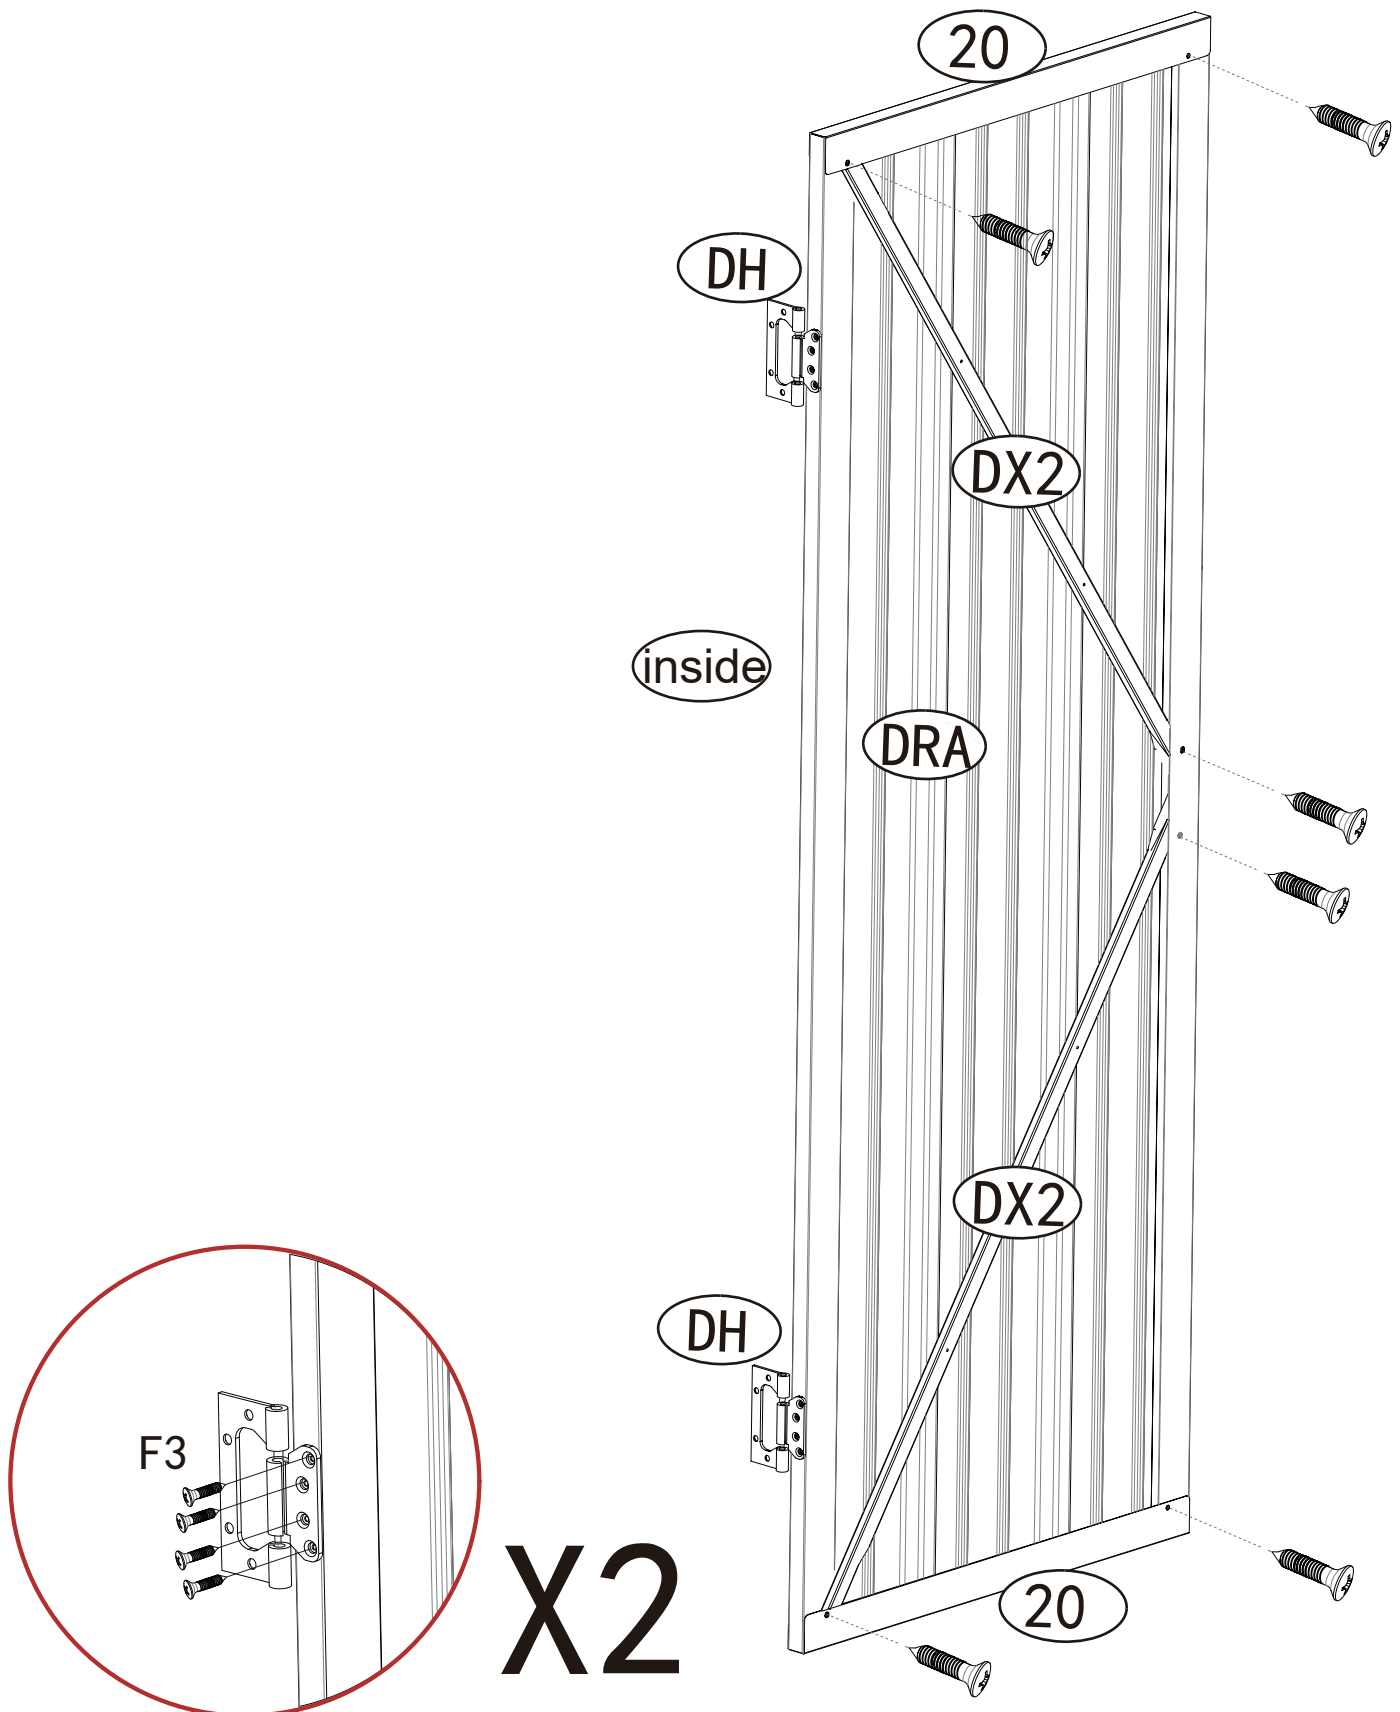






Step 44

DRA	DLA	F3
		
1 PC	1 PC	16 PC

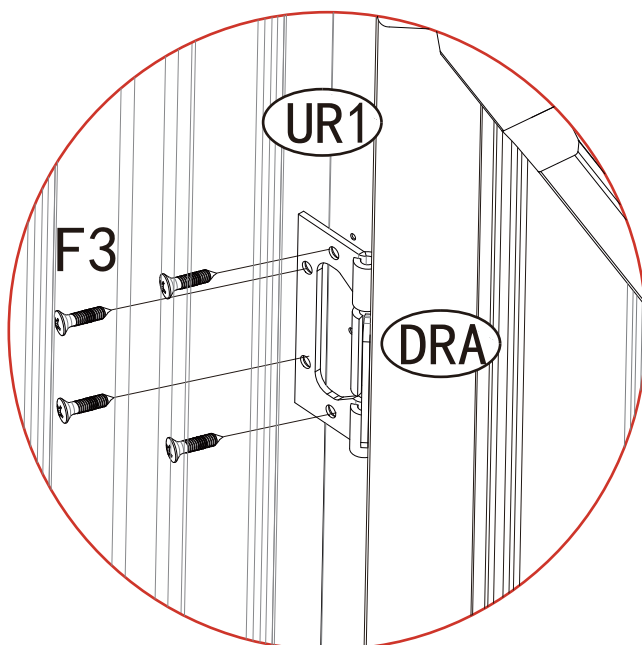


X4

Step 45



W1	W2	W3	W5	F1	F6
					
4 PC	4 PC	2 PC	2 PC	8 PC	4 PC

After confirming the placement of the shed, use F6 screws to fix the 4 holes on the corner of the base frame to floor as needed.

Side panels and roof are hidden for better visibility.

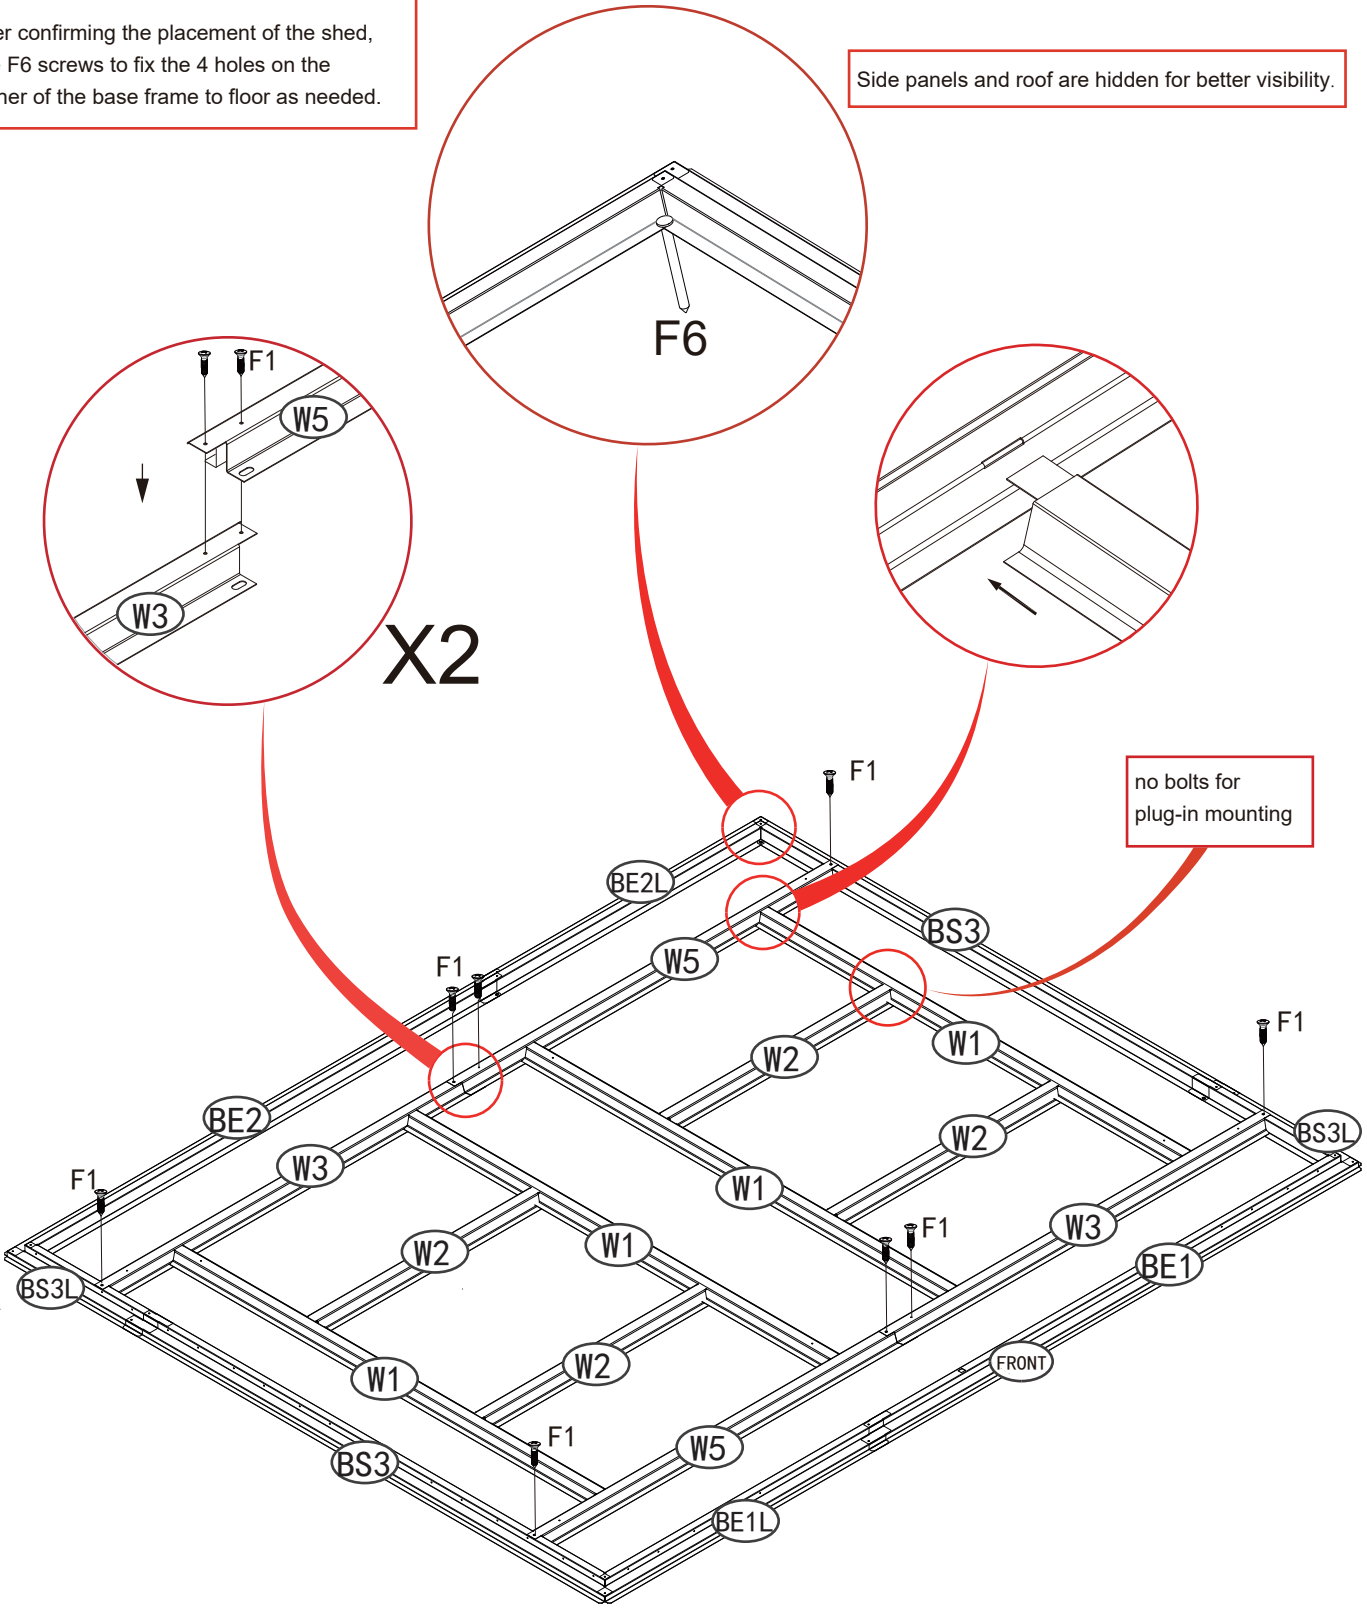

Instructions for use: After completion of assembly, you could add a suitable size board or put cement on the frame to enhance the stability of the garden shed.

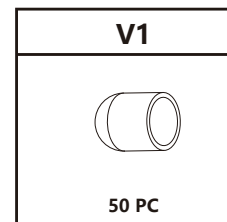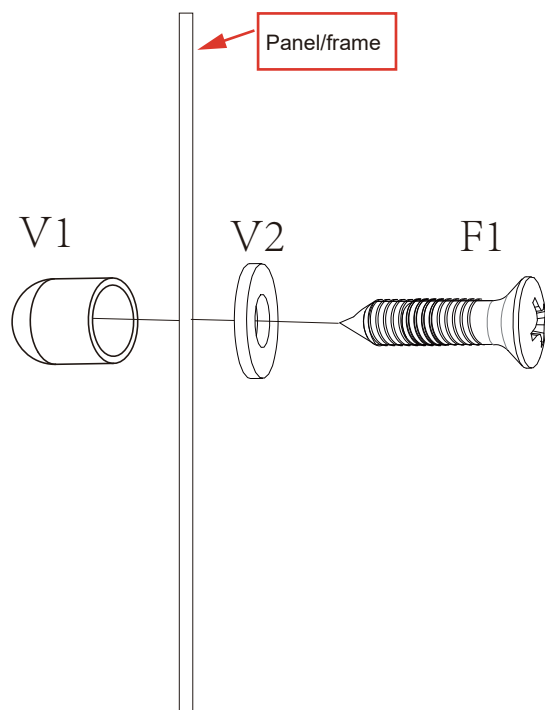

After completing the installation, cover the protruding screw tips with [V1] to prevent injury.

