











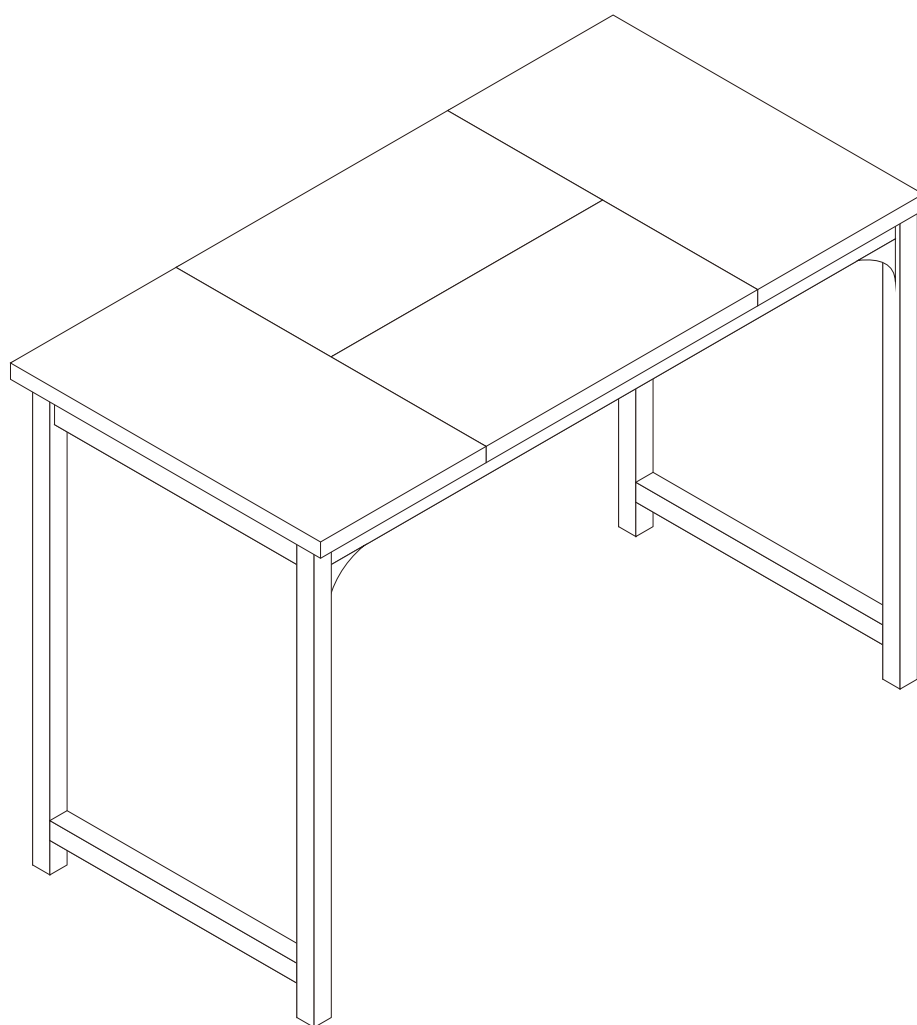


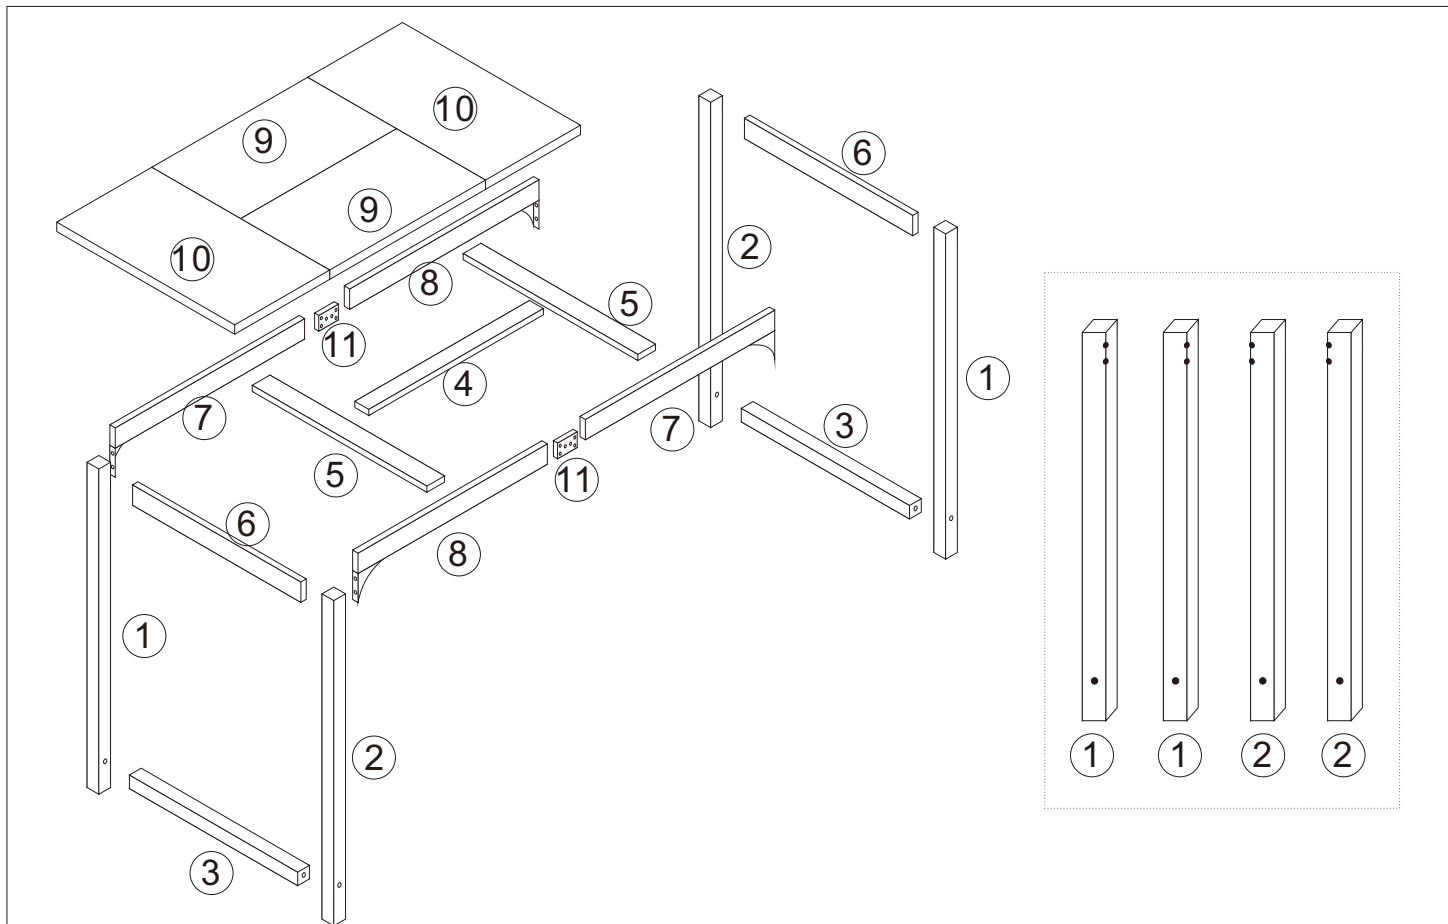










Installation instructions

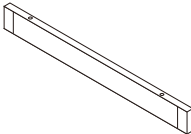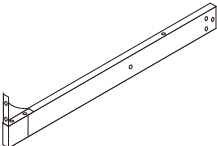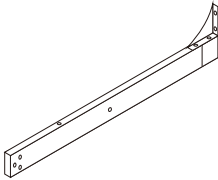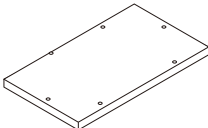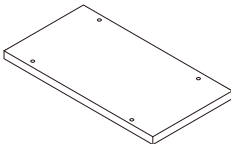






<div>1</div> <div></div> <div>x2</div>	<div>2</div> <div></div> <div>x2</div>	<div>3</div> <div></div> <div>x2</div>	<div>4</div> <div></div> <div>x1</div>	<div>5</div> <div></div> <div>x2</div>	<div>6</div> <div></div> <div>x2</div>
<div>7</div> <div></div> <div>x2</div>	<div>8</div> <div></div> <div>x2</div>	<div>9</div> <div></div> <div>x2</div>	<div>10</div> <div></div> <div>x2</div>	<div>11</div> <div></div> <div>x2</div>	
<div>A</div> <div></div> <div>8x70mm</div> <div>x6</div>	<div>B</div> <div></div> <div>8x40mm</div> <div>x12</div>	<div>C</div> <div></div> <div>x4</div>	<div>D</div> <div></div> <div>x4</div>	<div>E</div> <div></div> <div>8x20mm</div> <div>x28</div>	
<div>F</div> <div></div> <div>6x35mm</div> <div>x12</div>	<div>G</div> <div></div> <div>6x60mm</div> <div>x8</div>	<div>H</div> <div></div> <div>x20</div>	<div>J</div> <div></div> <div>x1</div>	<div>K</div> <div></div> <div>x1</div>	

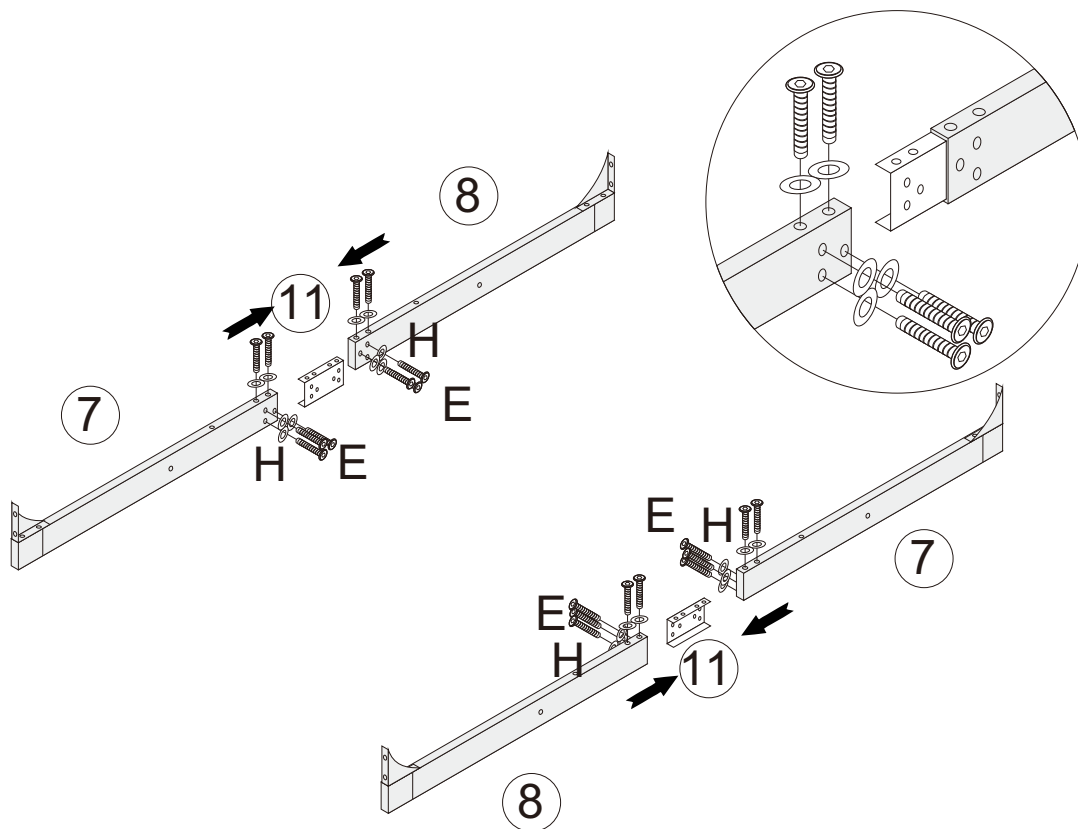
01




E	H
	
8x20mm	
x20	x20

02

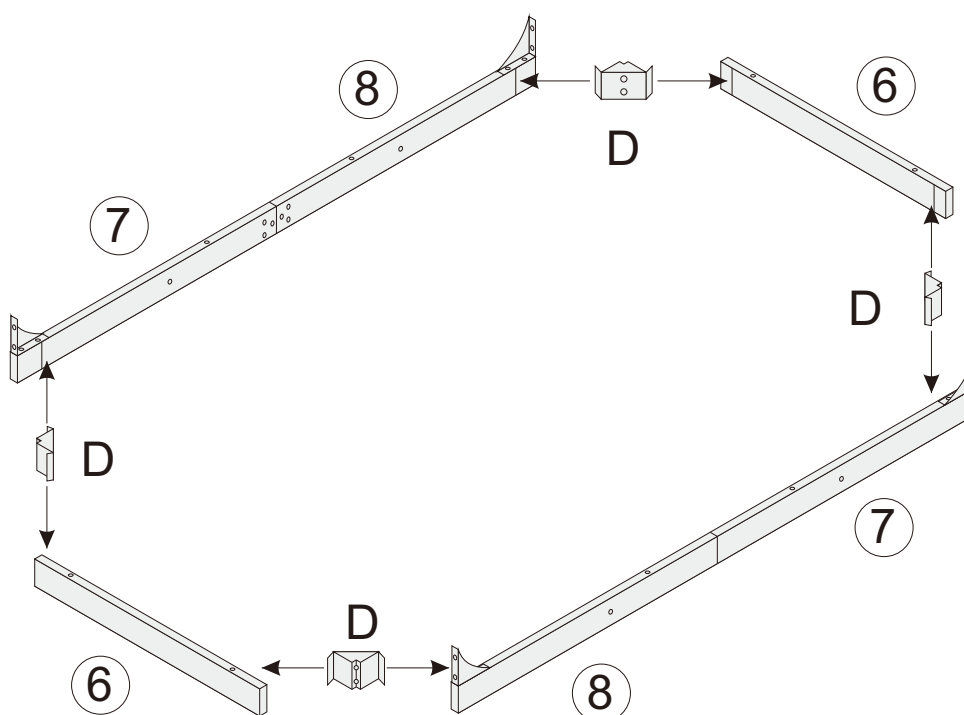


D

x4

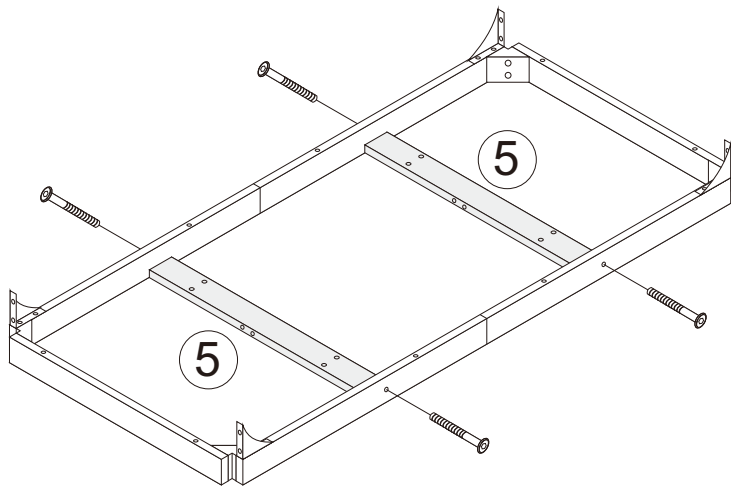03



Friendly Tips: DO NOT fully tighten all screws until assembly is completed.


B



8x40mm

x4

04

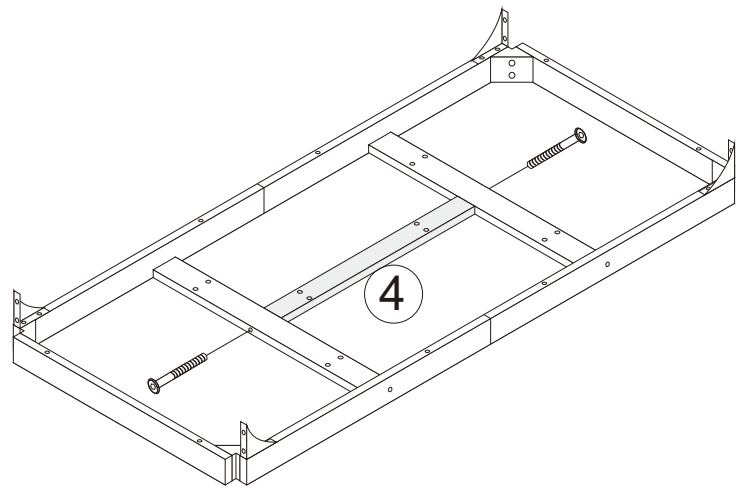

A




8x70mm


x2

05

Friendly tip: the corresponding hole distance at the 9 #, 10 # connection is relatively small.
The outer margin is relatively larger.

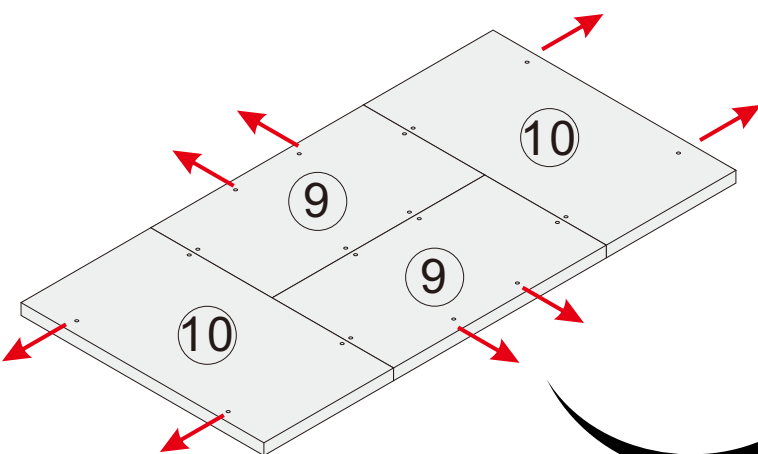

the plates with the larger hole pitch is mounted on the outside

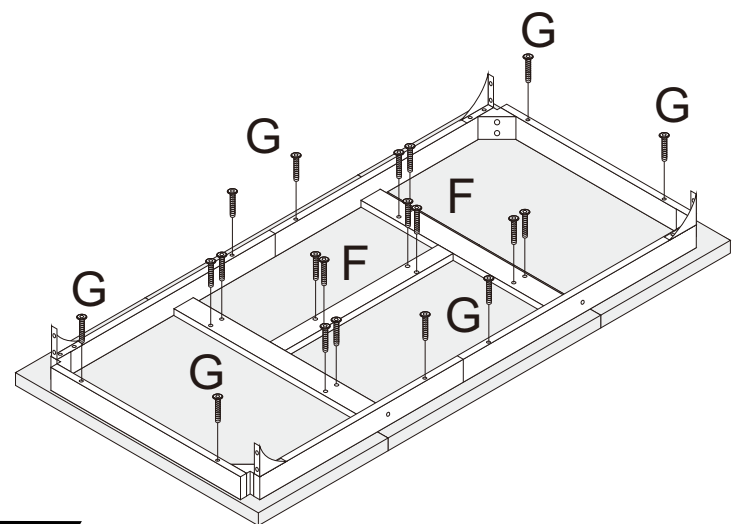

Friendly Tips: Don't tighten the F and G screws in step 5, wait until finish step 7 to fine-tune the desktop, and then align the screws and tighten them!

F



6x35mm

x12

G





6x60mm


x8

06

Pay attention to the direction of the hole

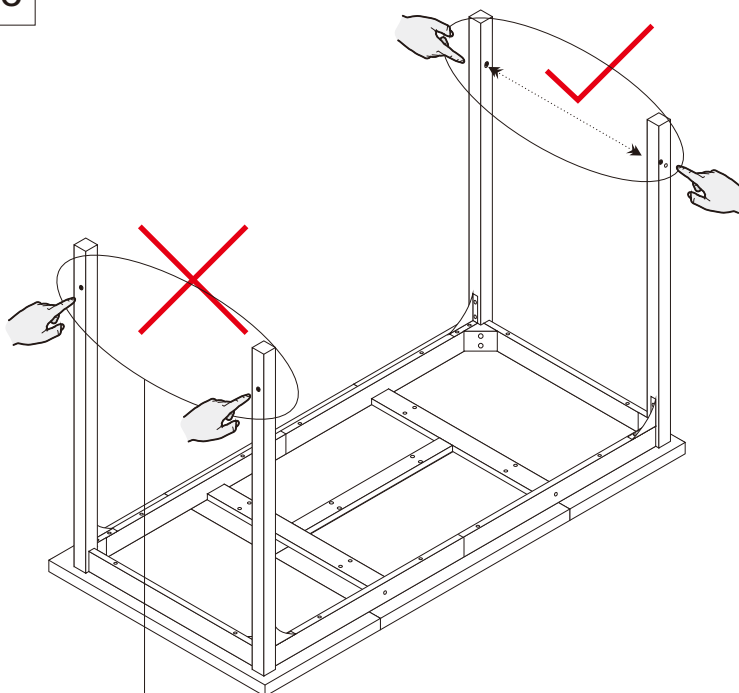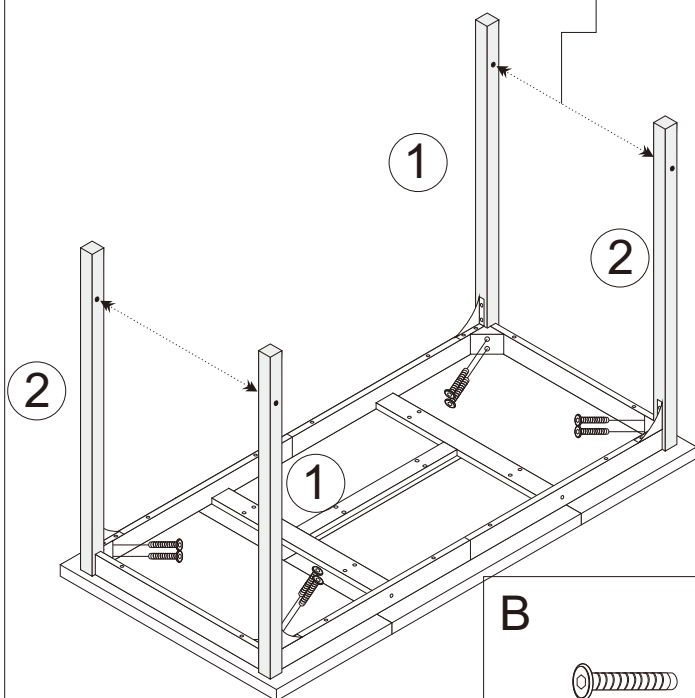

B




8x40mm

x8

If this happens, just switch the two steel legs left and right to install it.

07

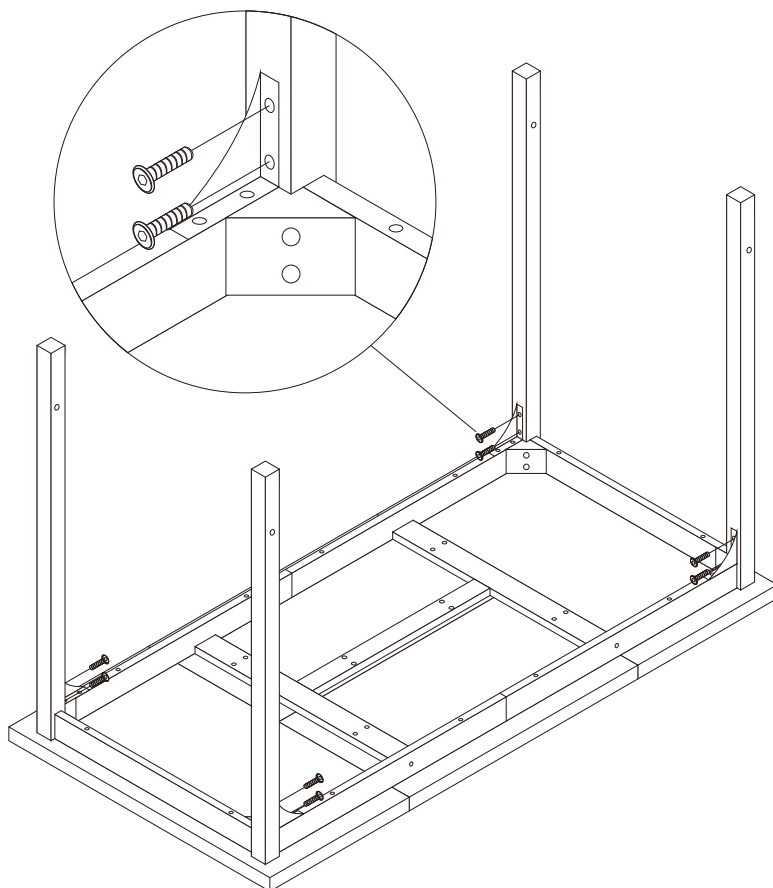


E




8x20mm

x8

08

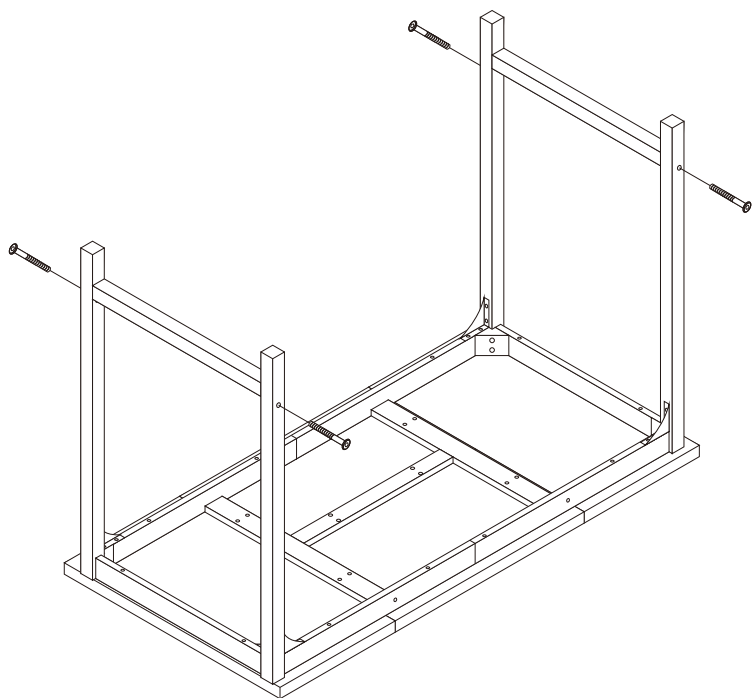


A



8x70mm

x4


09

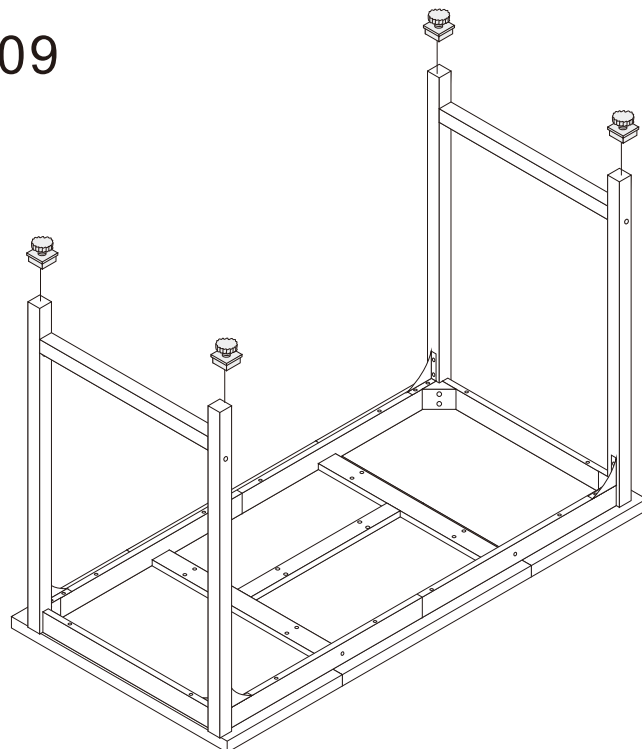

C



x4

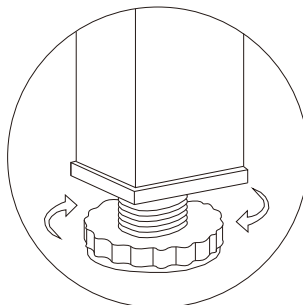

10

