
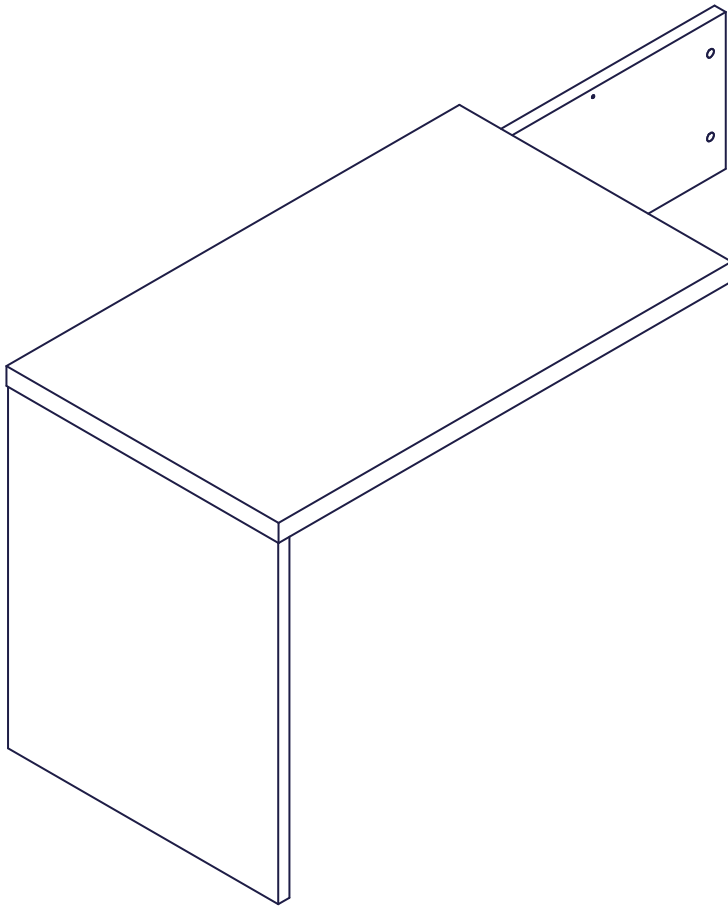
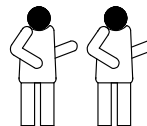
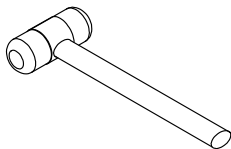




**B x 1**

FI6062

**D x 1**

CA2289

**F x 1**

FS1587

**G57 x 7**



FG0057

**H1 x 7**



FH0001

**H15 x 4**



FH0015

**H141 x 3**




FH0141

**P16 x 2**




FP0016

**T28 x 7**




FT0028

**T92 x 7**



FT0092

**W37 x 2**







FW0037

| BU2127 | mm | 0 | 10 | 20 | <b>V10 x 14</b><br>FV0010 |
|--------|----|---|----|----|---------------------------|
|        |    |   |    |    |                           |




**SX**

**DX**

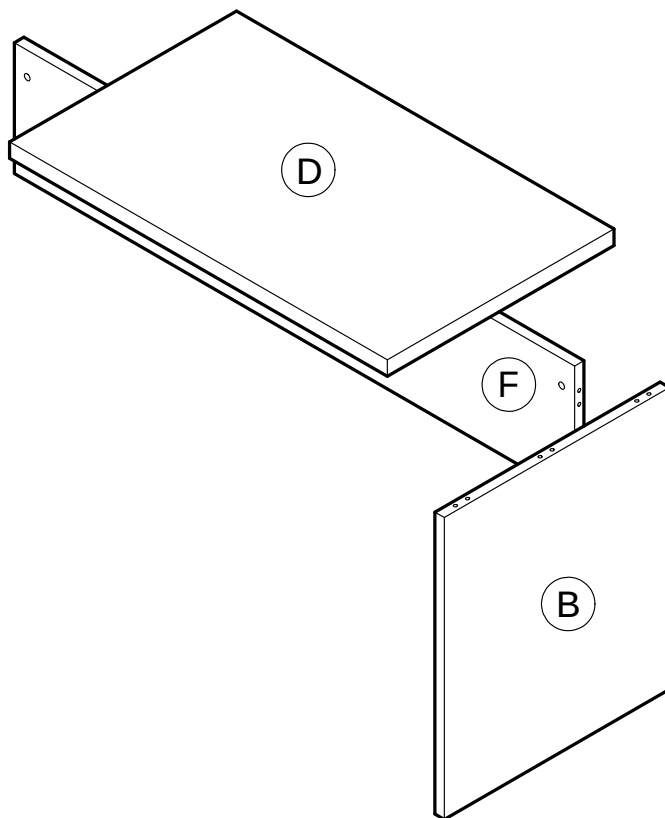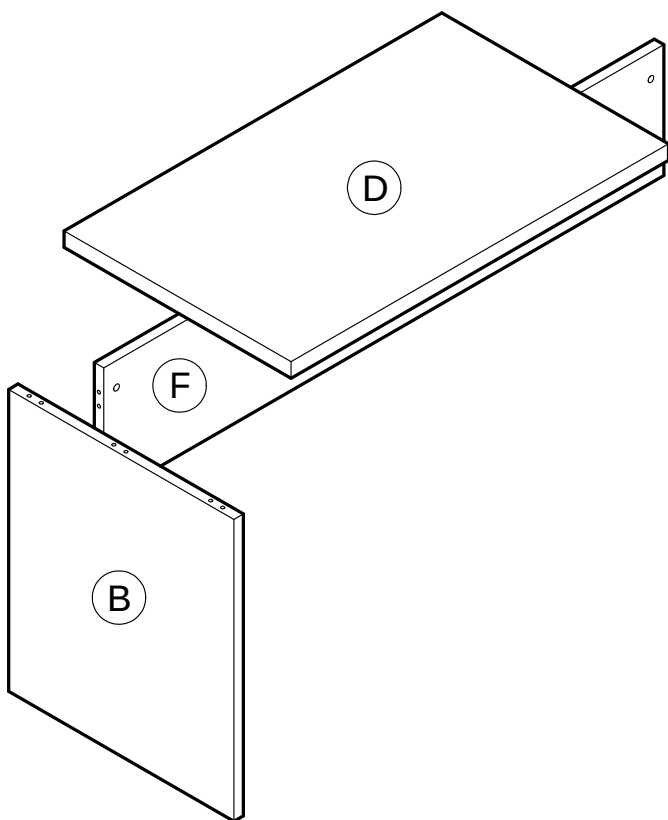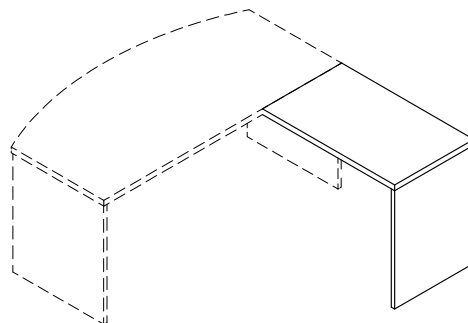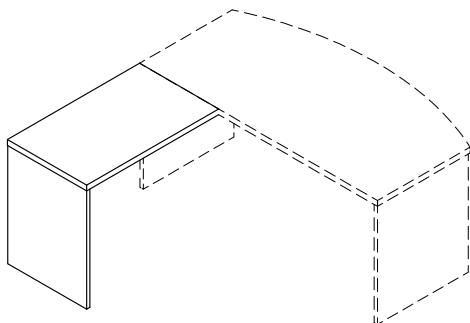


# 1

H1 x 7

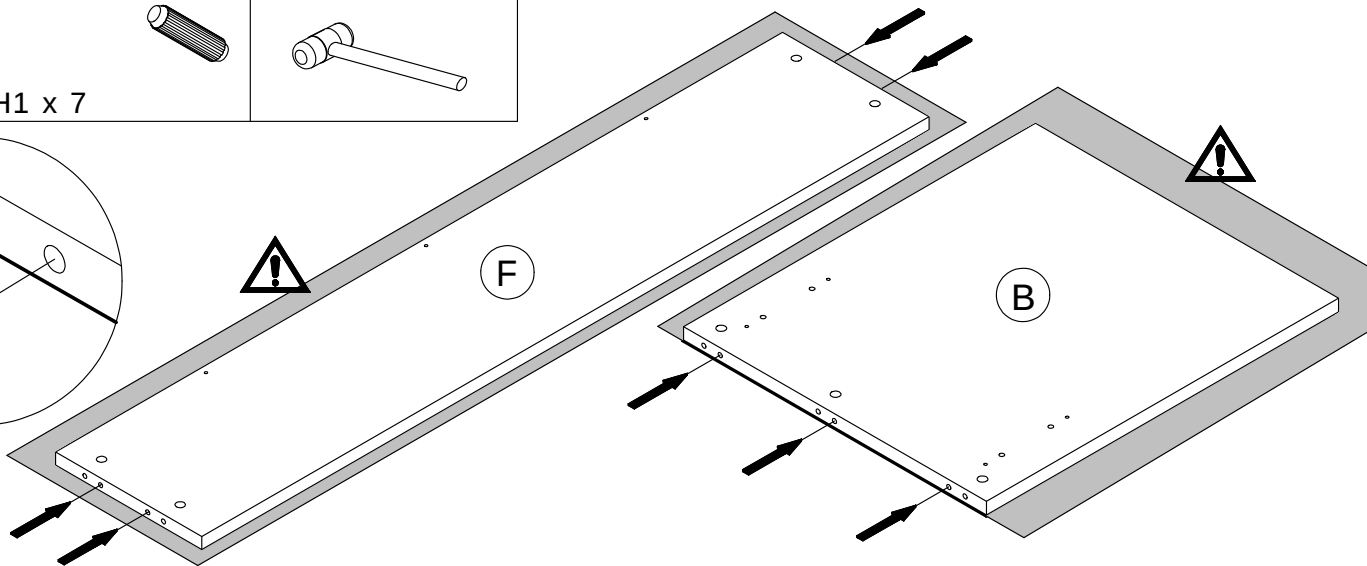
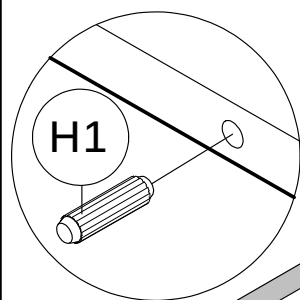



# 2

P16 x 2



H15 x 4


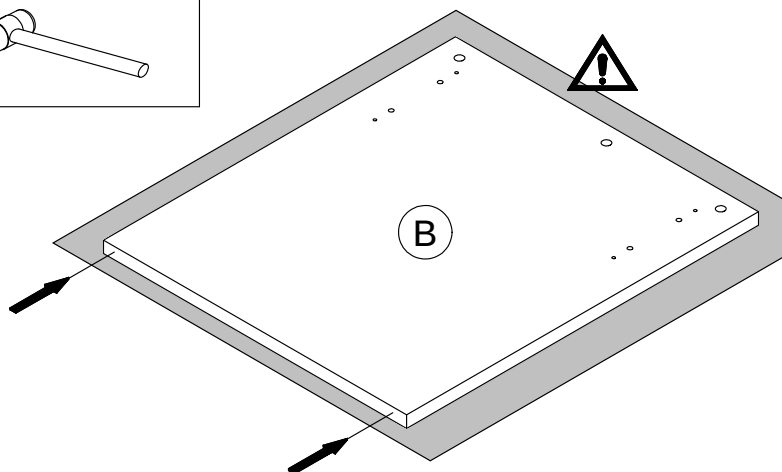
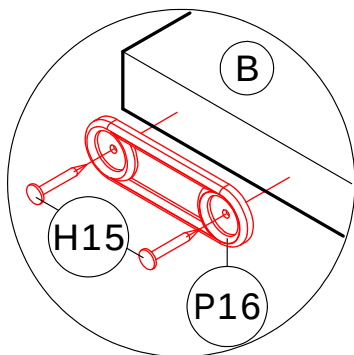



# 3

H141 x 3






V10 x 3

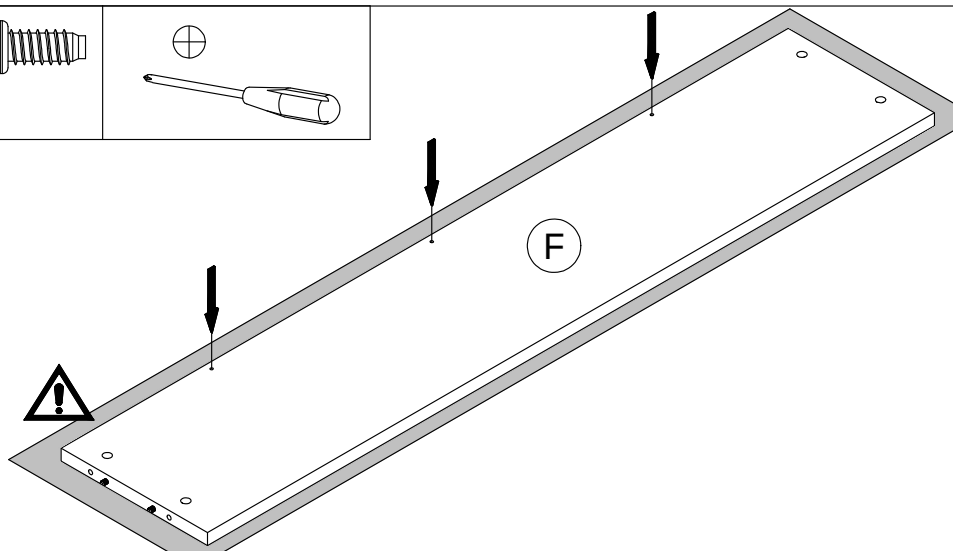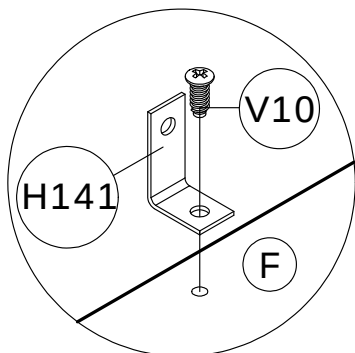


# 4

T28 x 3

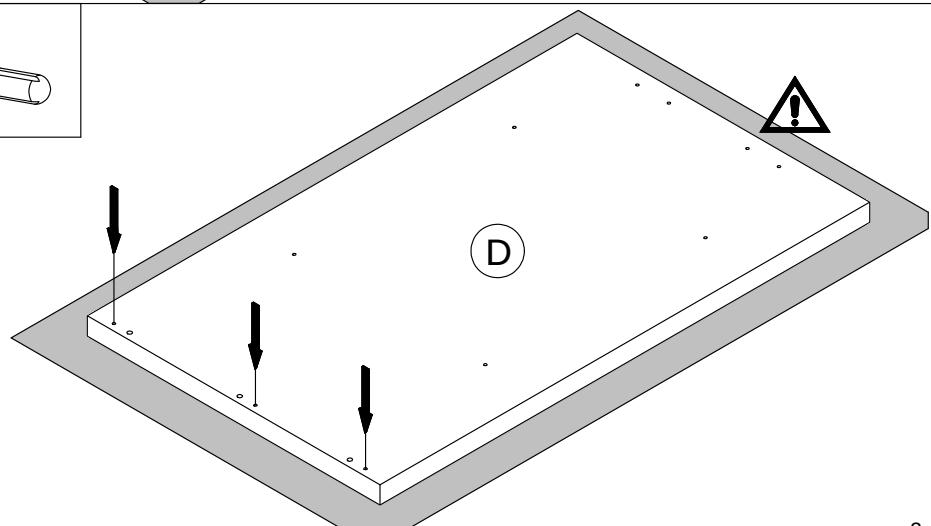
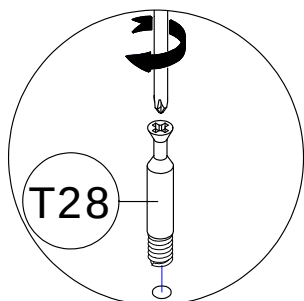



# 5

W37 x 2





V10 x 4

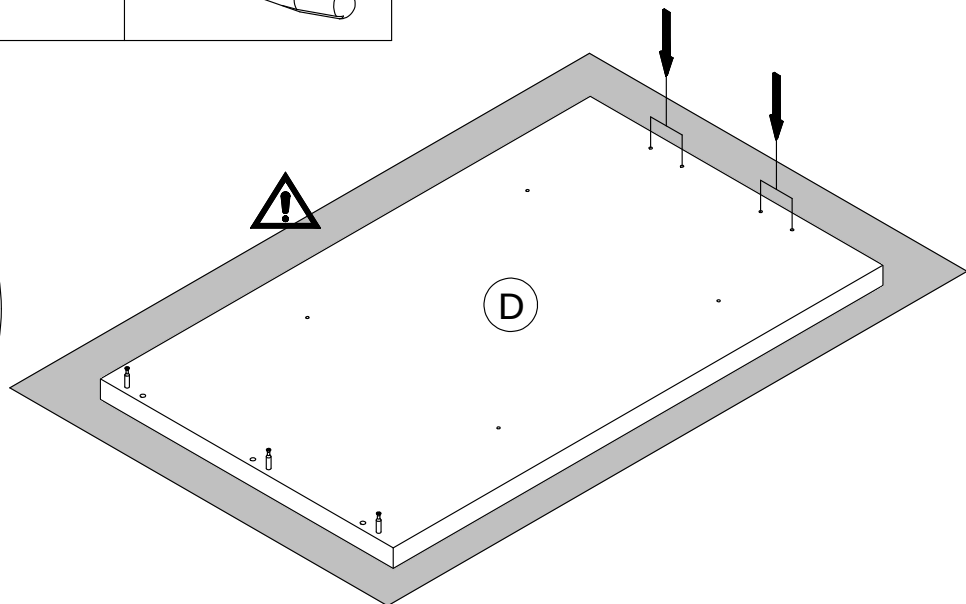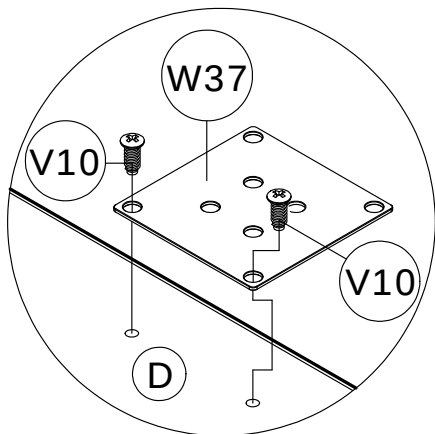


# 6





T28 x 2



SX



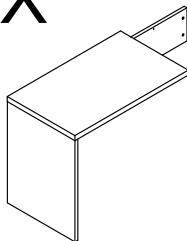


DX

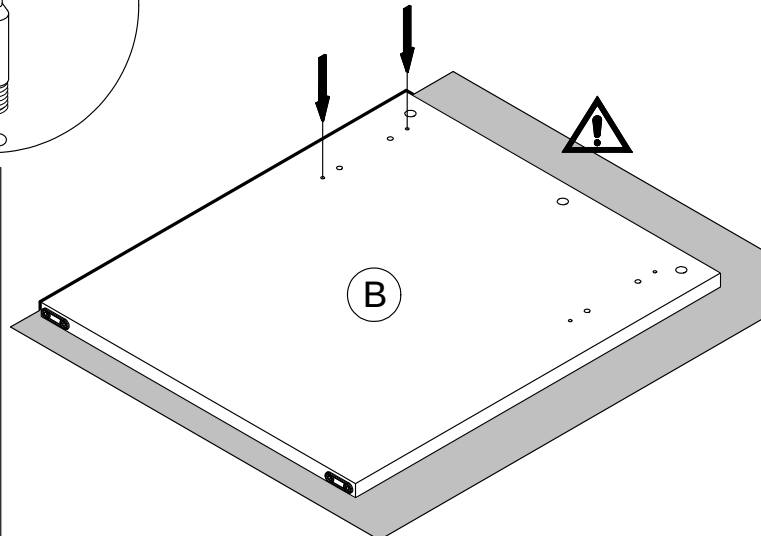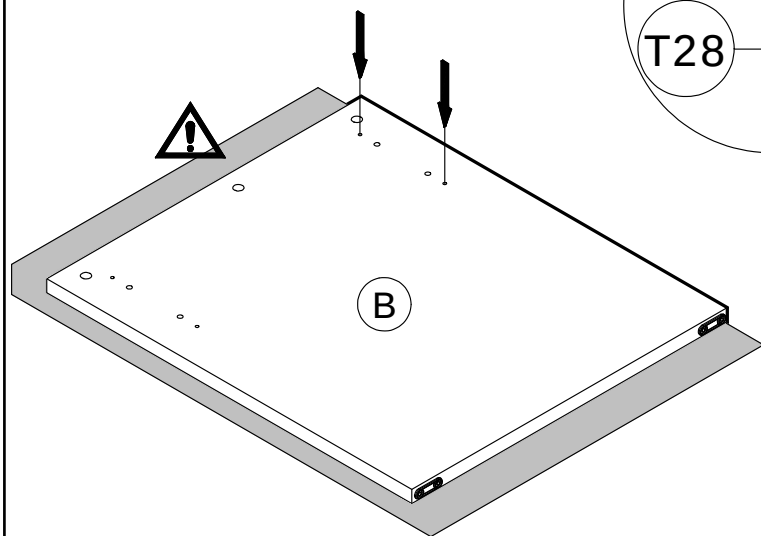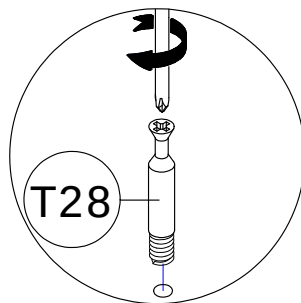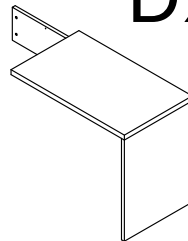


# 7



T92 x 2

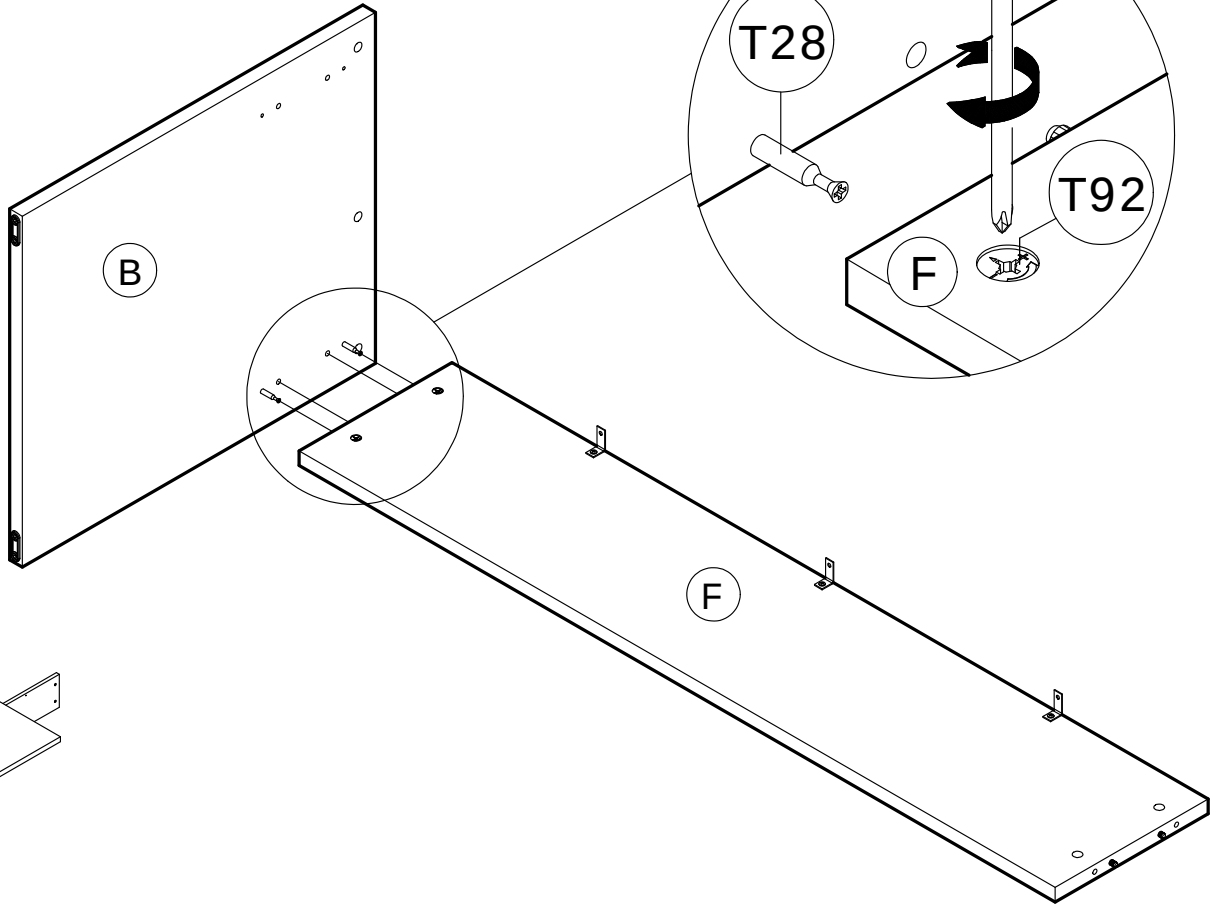

## SX


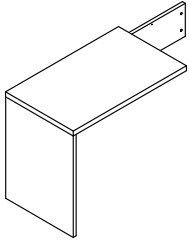


## DX

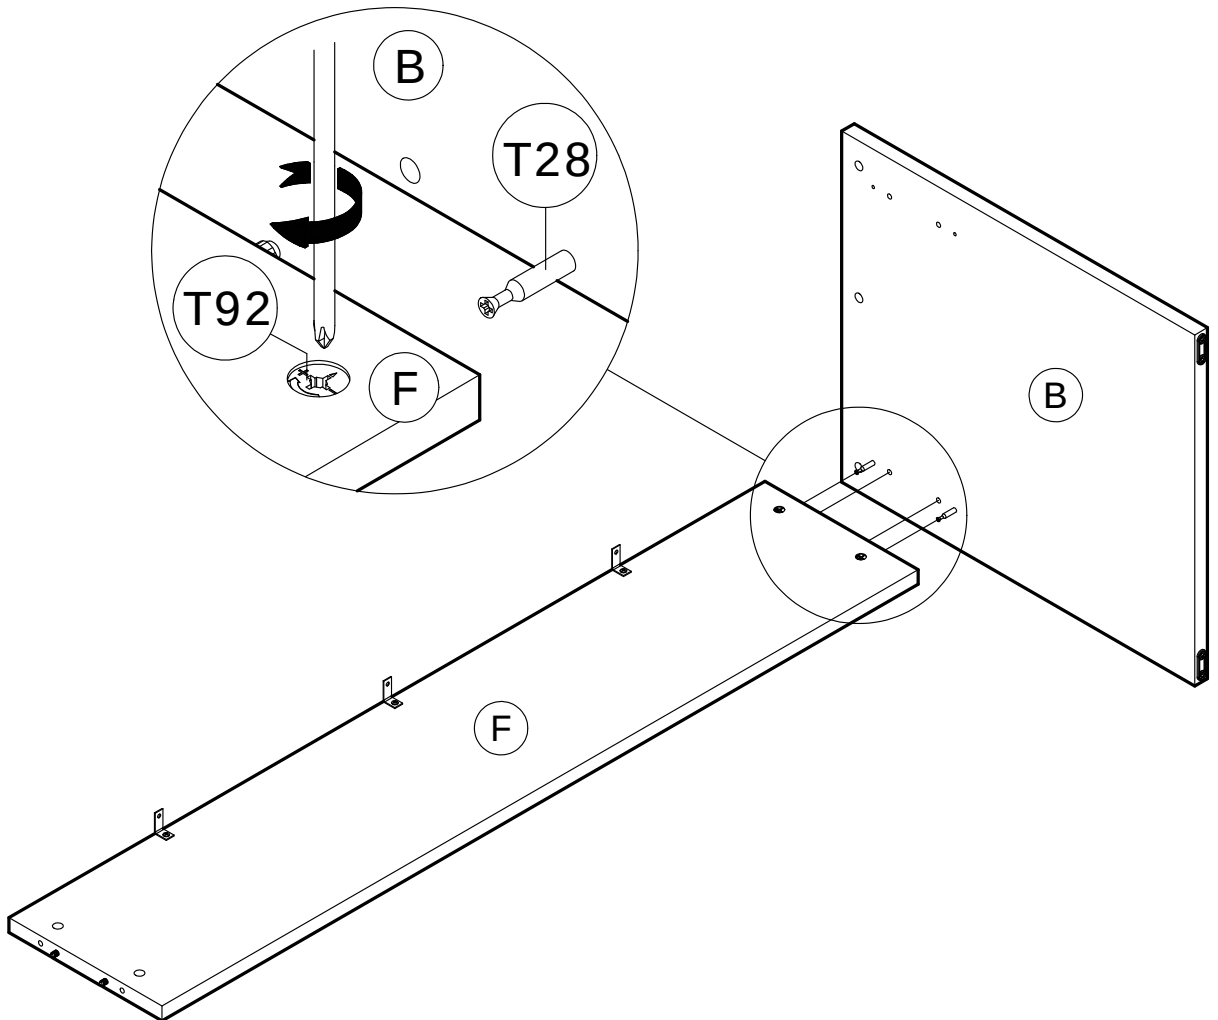
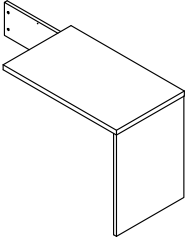


# 8



T92 x 3







V10 x 2

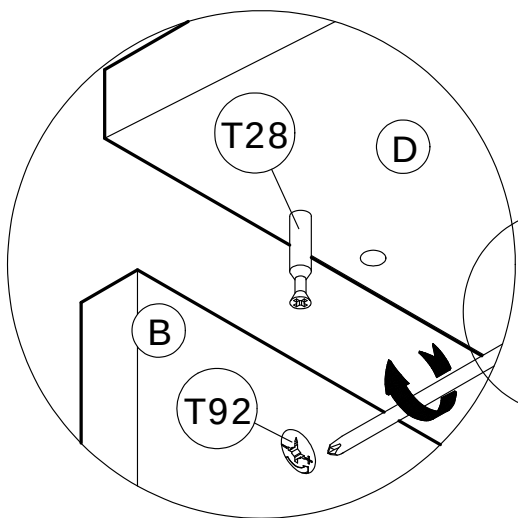

## SX

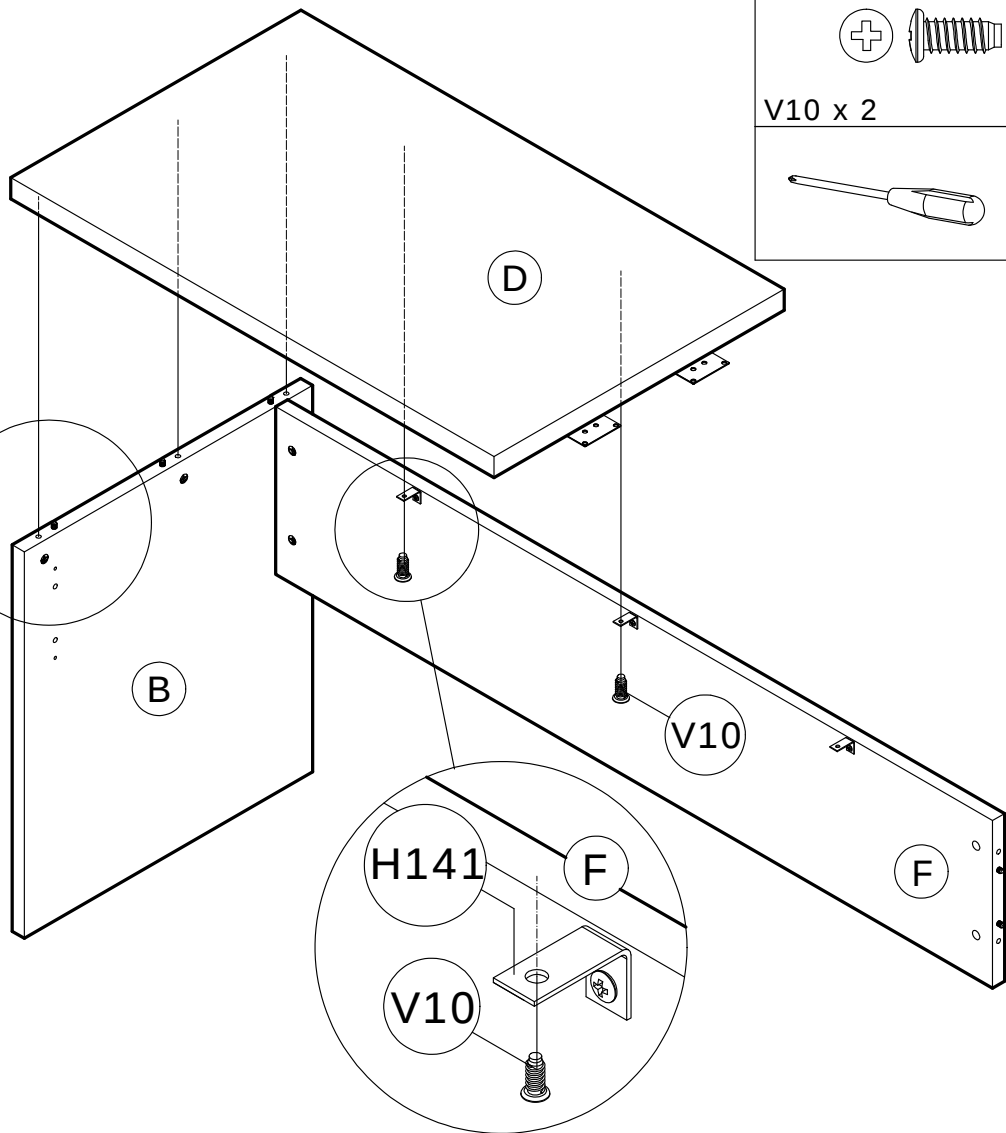
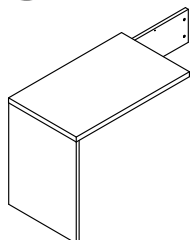


## DX

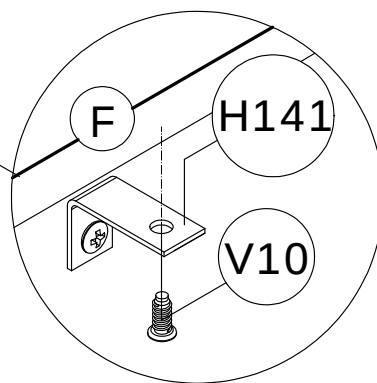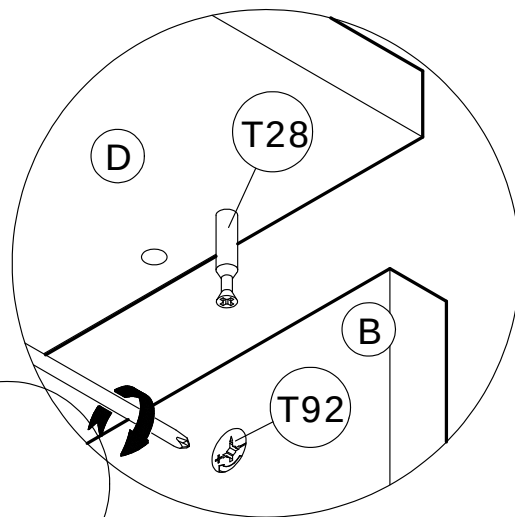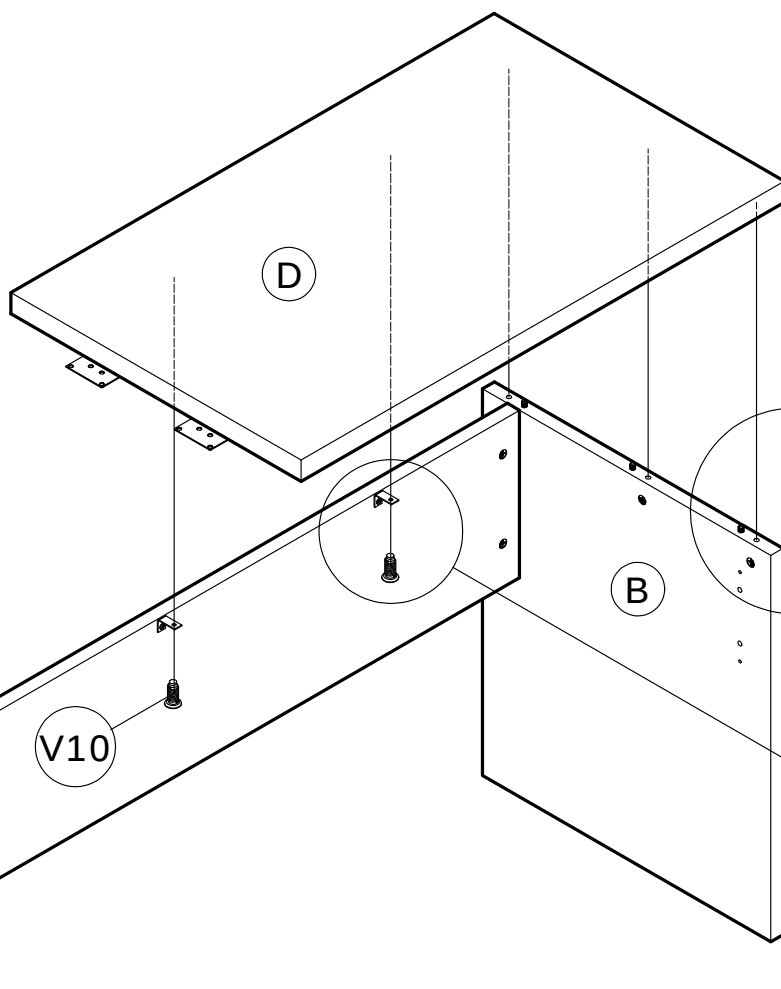
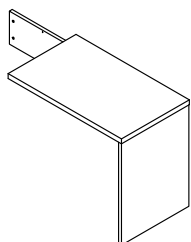


# 9



T28 x 2



T92 x 2



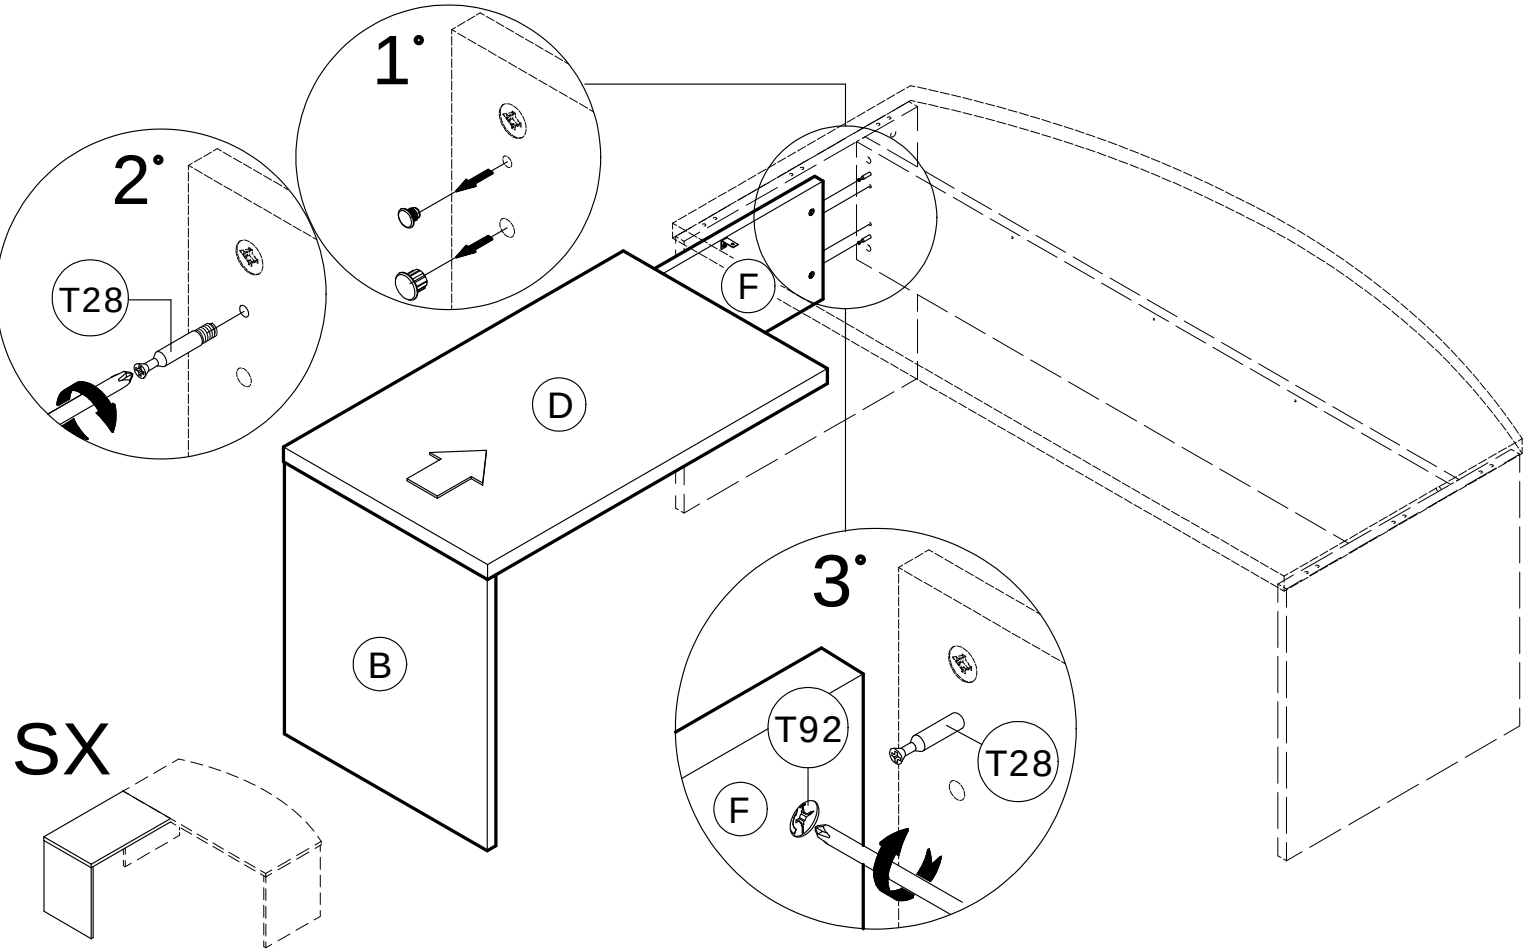



# DX

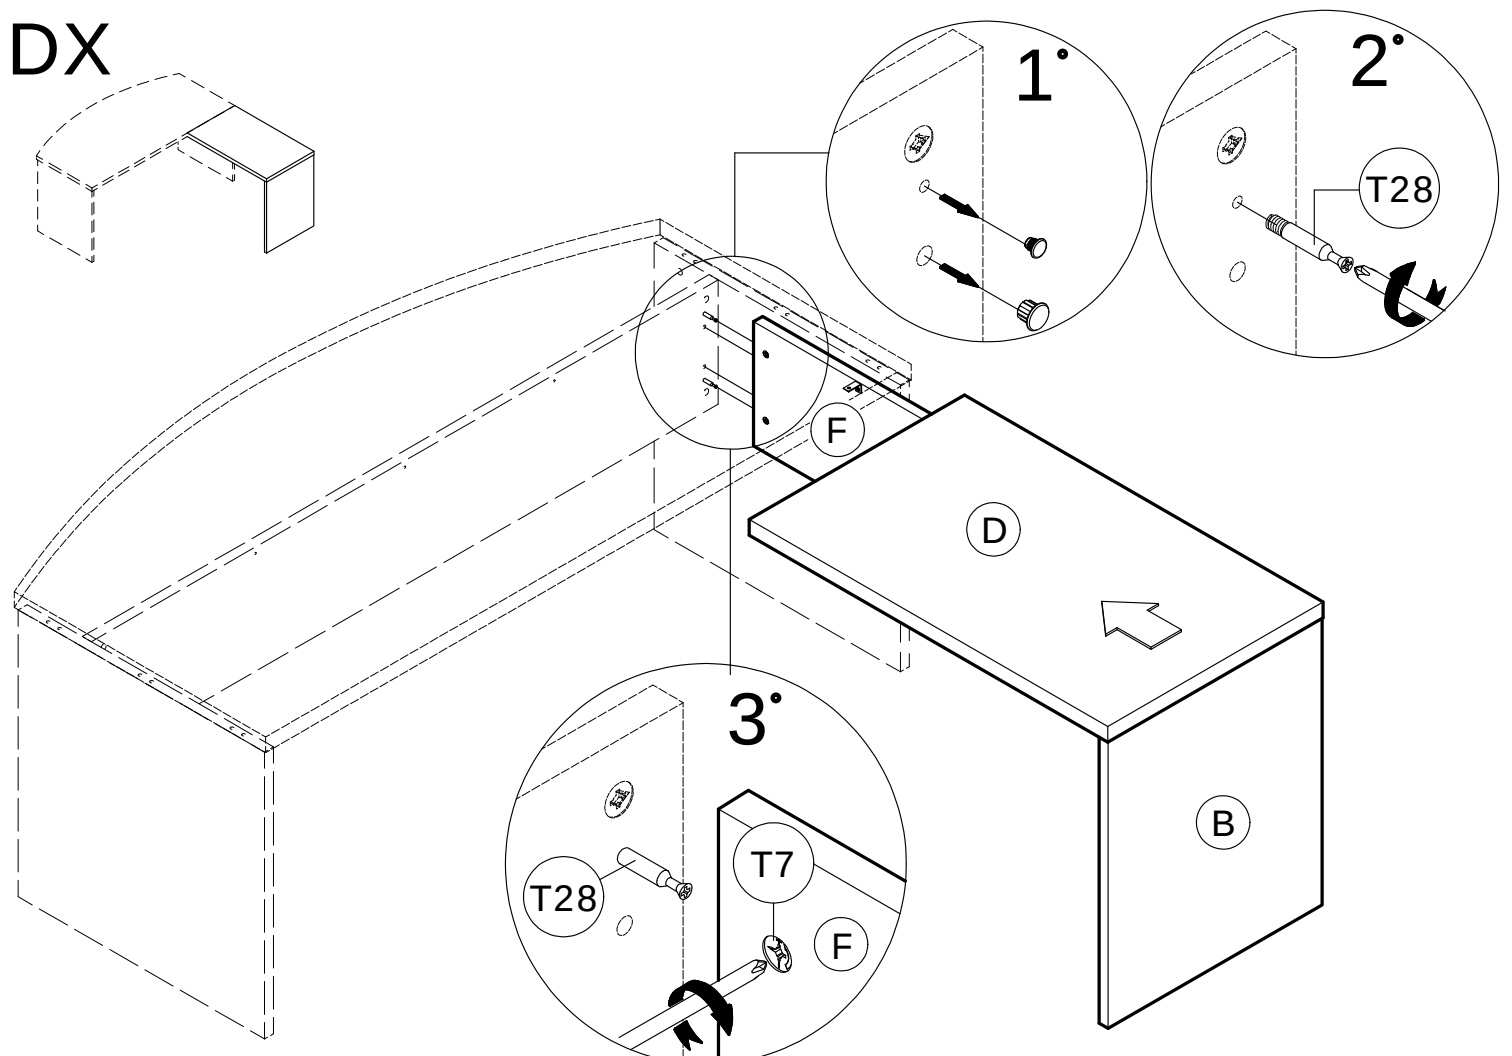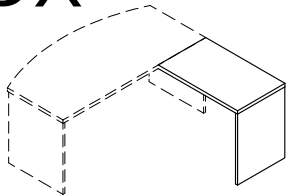


# 10



V10 x 5

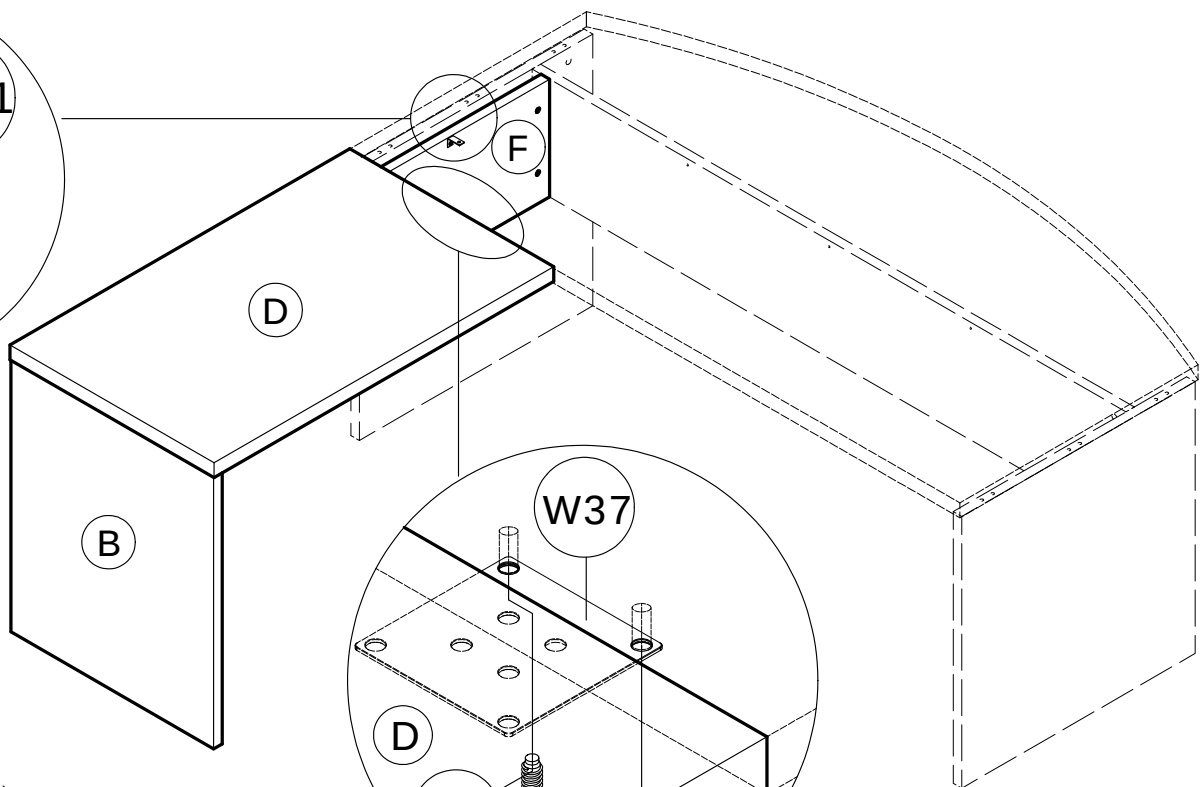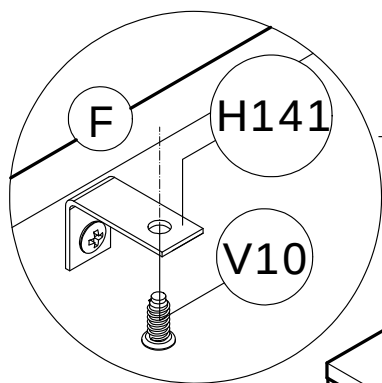

SX

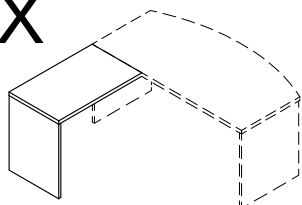


DX

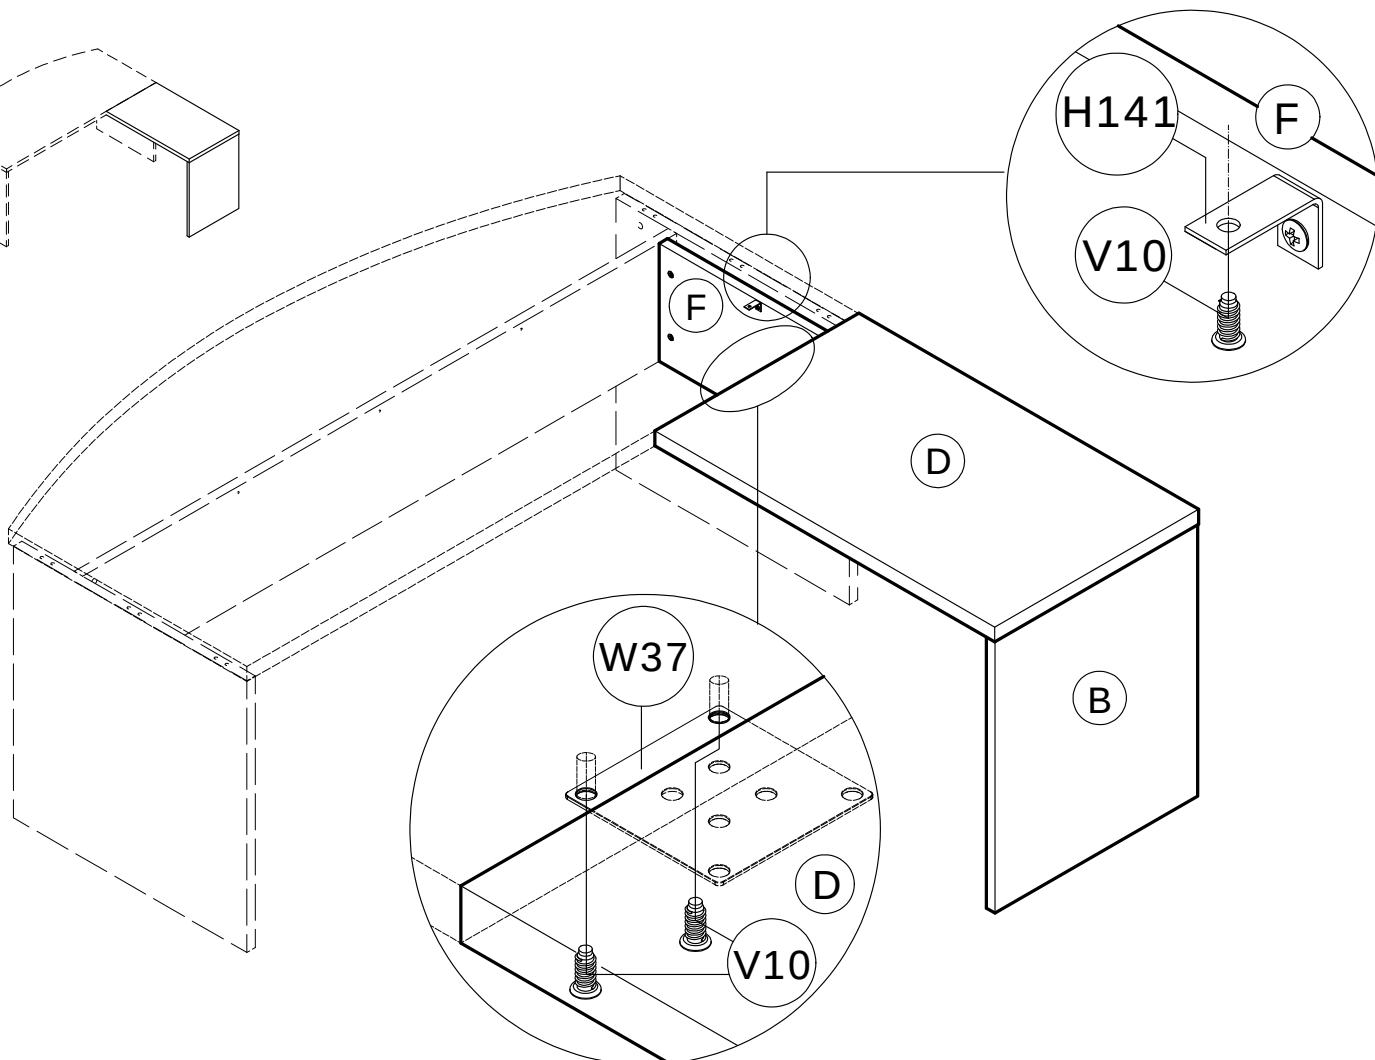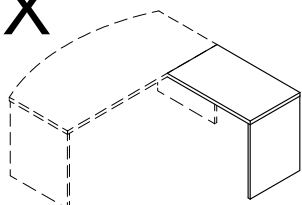



# 11

G57 x 7

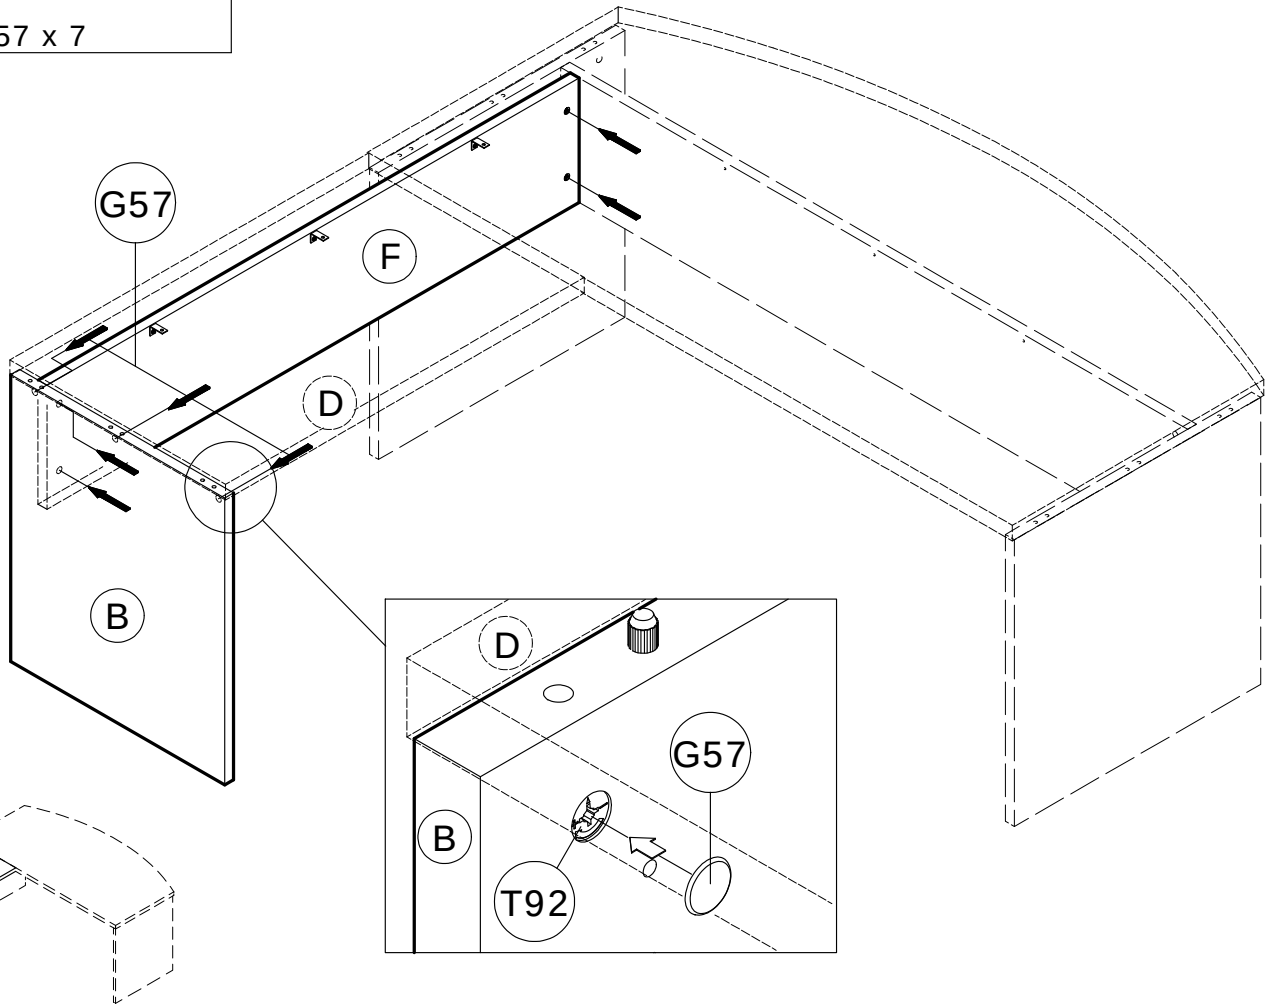

SX

DX

