

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside. For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in N778P421419 for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.






QUEEN SIZED WOODEN BED







N778P421418

N778P421419



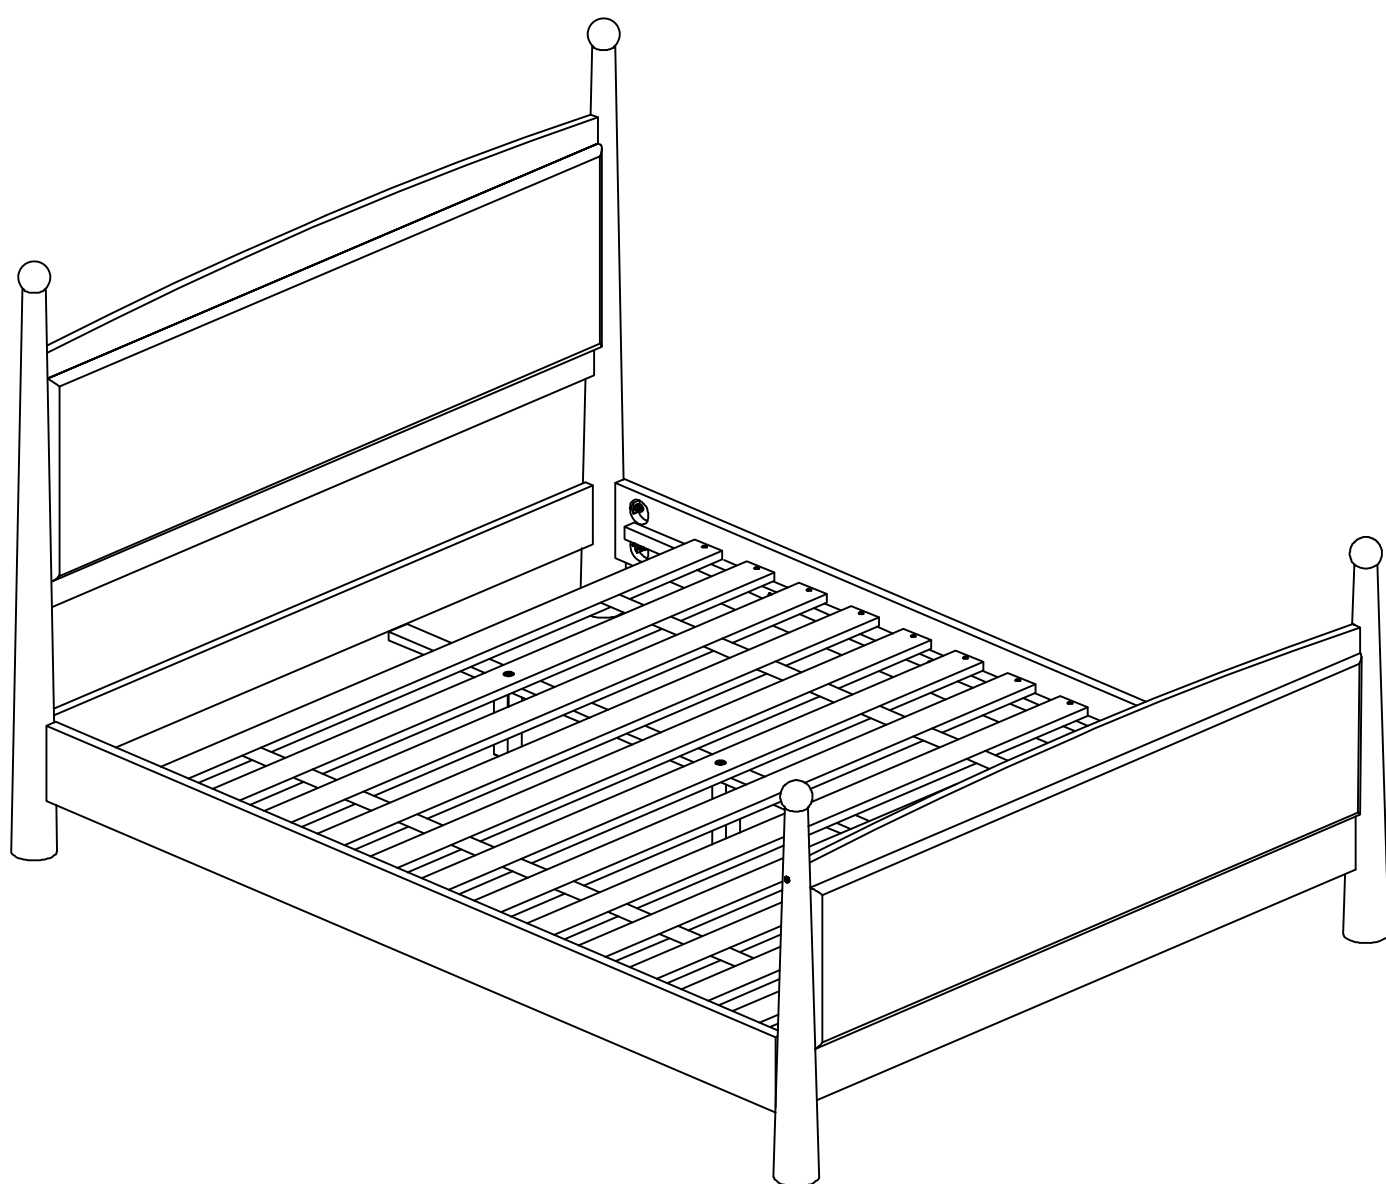


Parts List

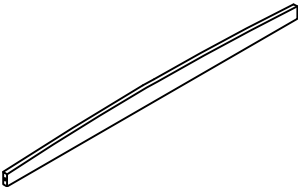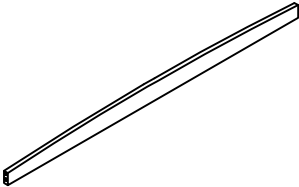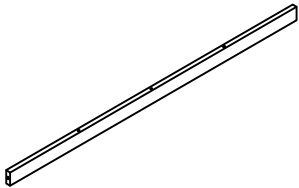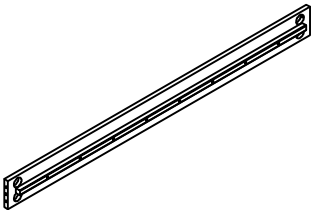Label	Picture	Description	QTY
A		HB POST (A)	1 PC
B		HB POST (B)	1 PC
C		FB POST (A)	1 PC
D		FB POST (B)	1 PC
E		HB HORIZONTAL	1 PC
F		FB HORIZONTAL	1 PC
G		HB CENTRE HORIZONTAL	1 PC
H		SIDE RAIL	2 PCS

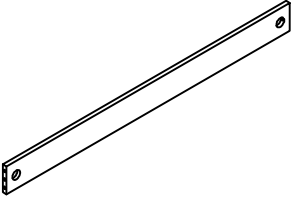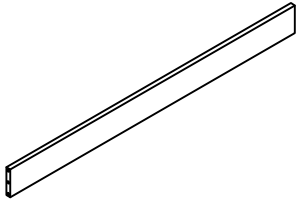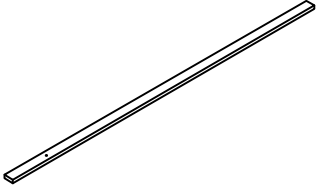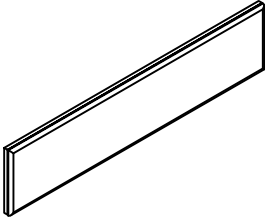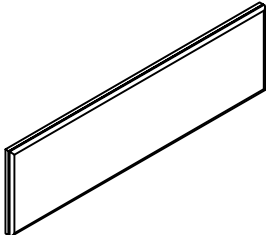
I		HB BOTTOM HORIZONTAL	1 PC
J		FB BOTTOM HORIZONTAL	1 PC
K		SLAT (A)	1 PC
L		CENTRE SUPPORT	1 PC
M		HEADBOARD PANEL	1 PC
N		SUPPORT LEG	3 PCS
O		FOOTBOARD PANEL	1 PC

Hardware

Label	Picture	Description	QTY
1		STUD BOLT M8 X 60MM	16 PCS
2		FLAT WASHER M8 0D16 x ID8,5 x T1,5	16 PCS
3		SPRING WASHER 0,5/1M x 13MM	16 PCS
4		HEX NUT 0.5/1M x 13MM	16 PCS
5		CRESCENT NUT 0.5/1M x 13MM	16 PCS
6		MINIFIX 8.5MM x 15MM	14 PCS
7		JCBB BOLT M8 X 60MM	3 PCS
8		ADJUSTABLE M6 X 18MM	3 PCS
9		PANHEAD SCREW M4 X 25MM	24 PCS
10		WOOD DOWEL M10 X 40 MM	18 PCS
11		ALLEN KEY M4	1 PC
12		SPANNER	1 PC
13		ALLEN KEY M5	1 PC
14		JCBC BOLT M5 X 90MM	2 PCS
15		BURREL NUT M6 X 13MM	2 PCS

Assembly Preparation

Before Beginning Assembly:

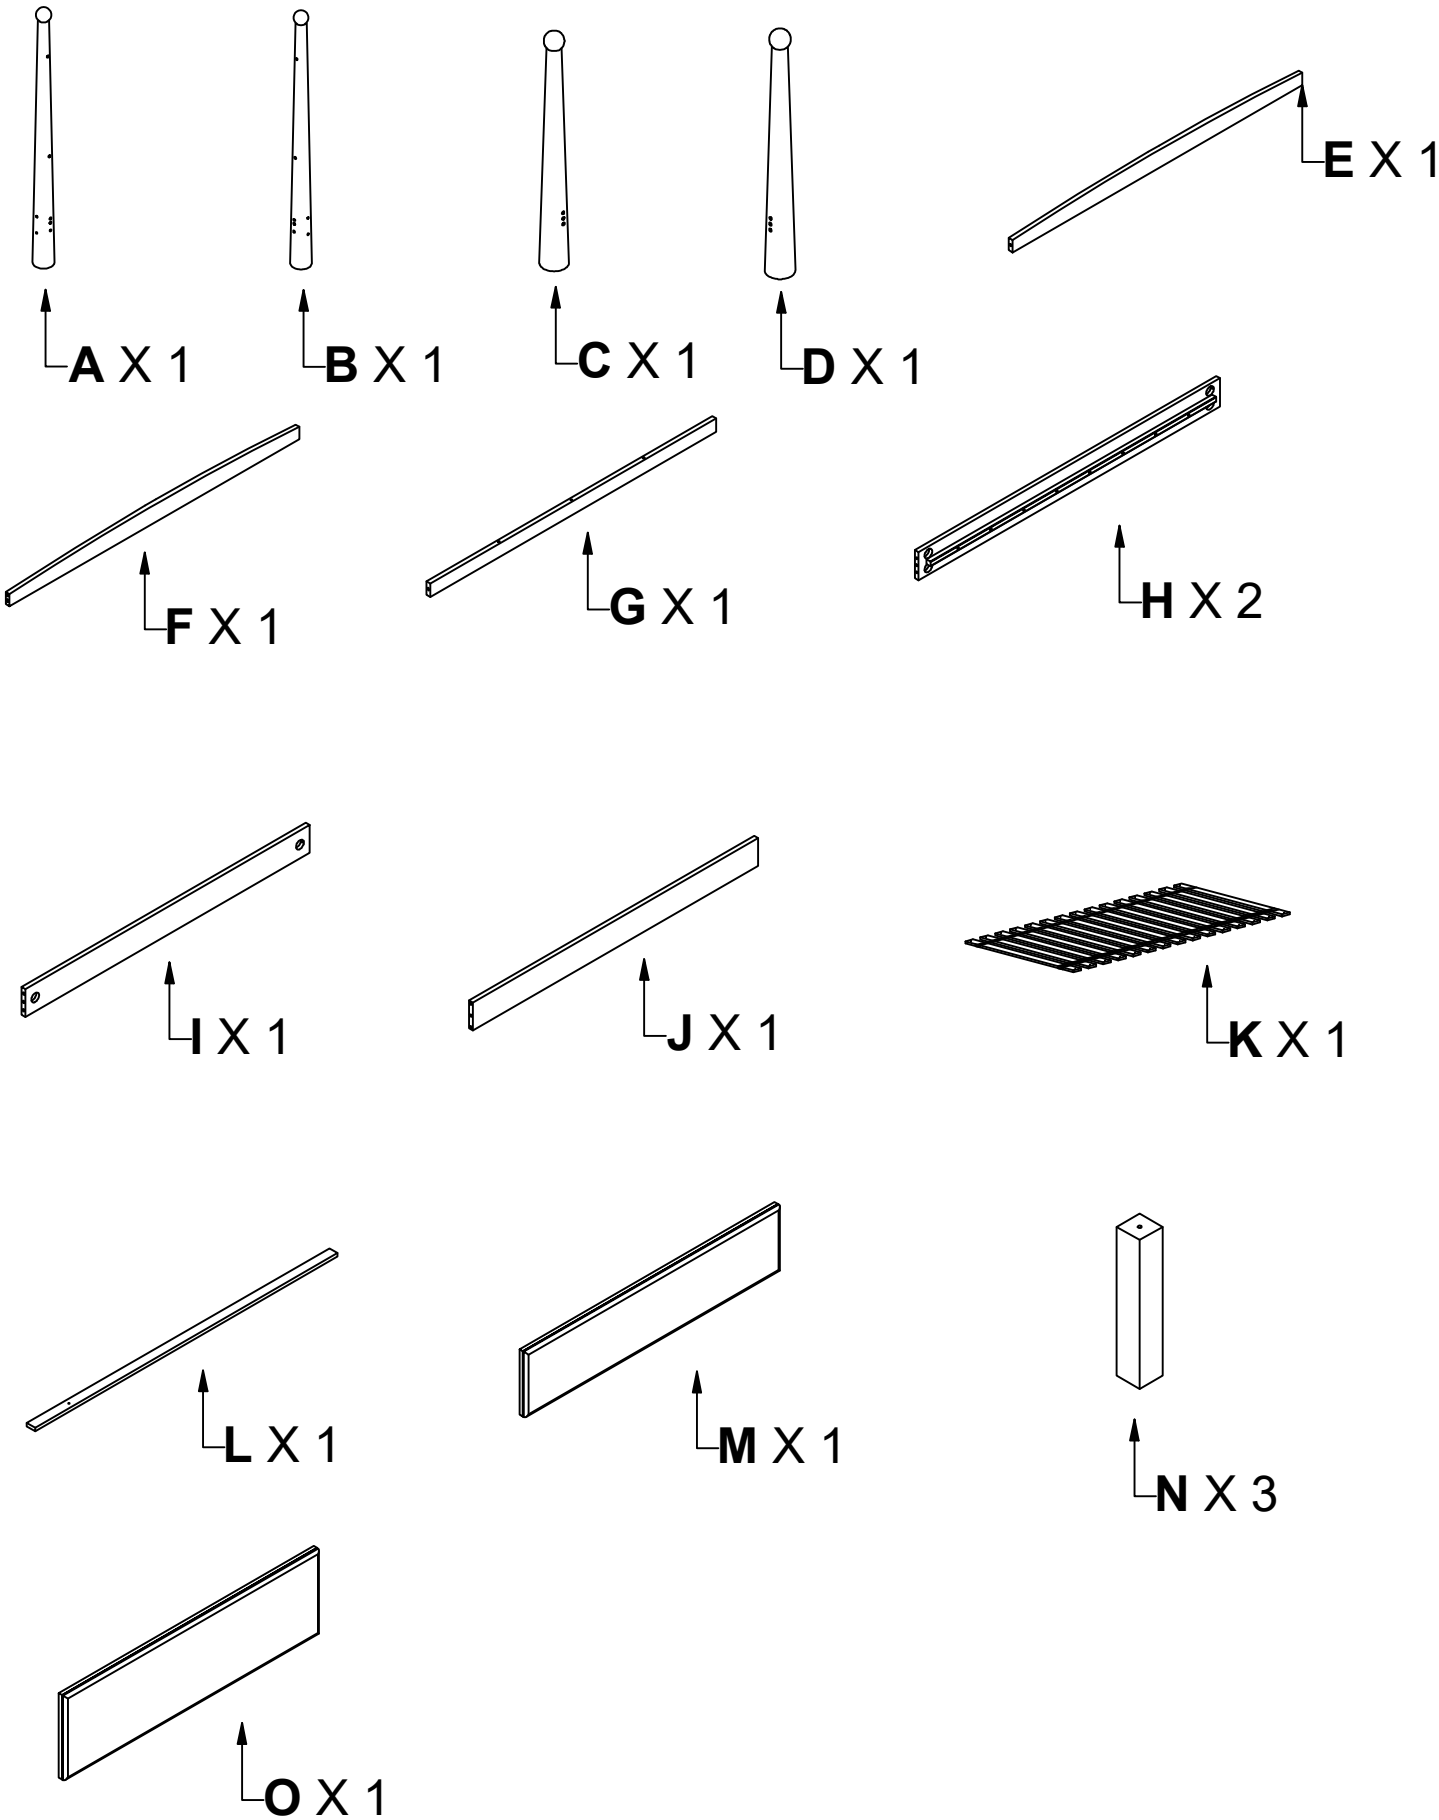



- Read instruction, cover to cover-



- Assembly by two adult-



- Do not assemble on flooring or carpet-




- Assembly on a clean non-marring surface (packing form)-



- Read instruction, cover to cover-


Overview

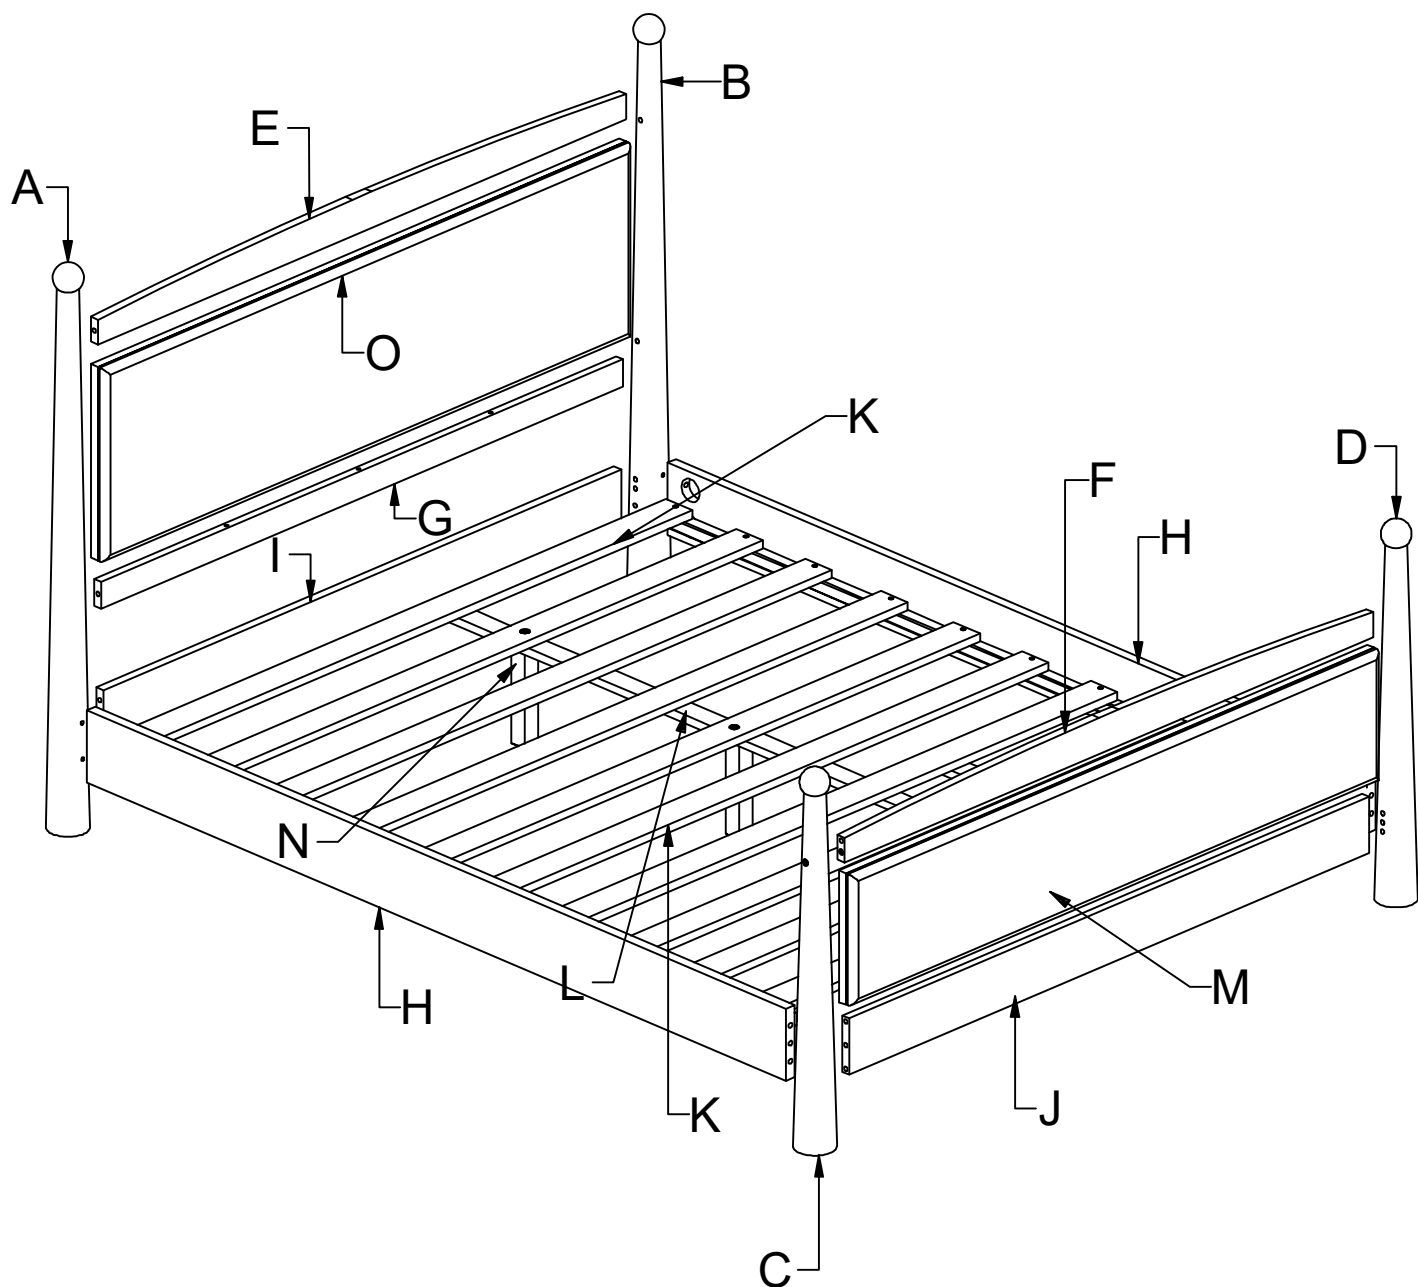

This Queen Bed has multiple parts and may require up to some 60 minutes to assemble. To give you an overview of the Queen Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly

STEP 1


6B	6A
	
7 PCS	7 PCS

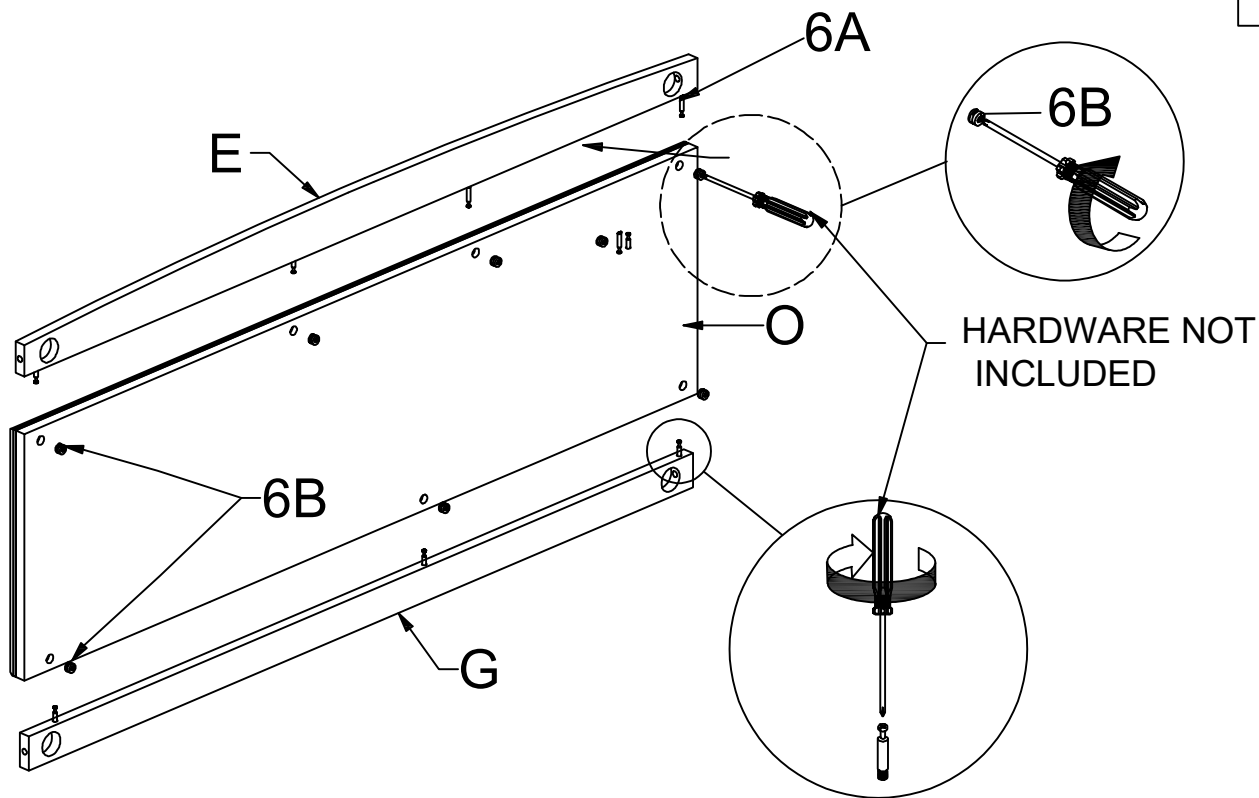

Part E & G need to assembly with **Hardware 6A**, **Part E** need to assembly with **Part O** and **G** as shown and tighten the **Hardware 6B** at **Part O** as shown. Headboard done assembly.

STEP 2


4	2	3	5	1	12	10
						
6 PCS	6 PCS	6 PCS	6 PCS	6 PCS	1 PC	4 PCS

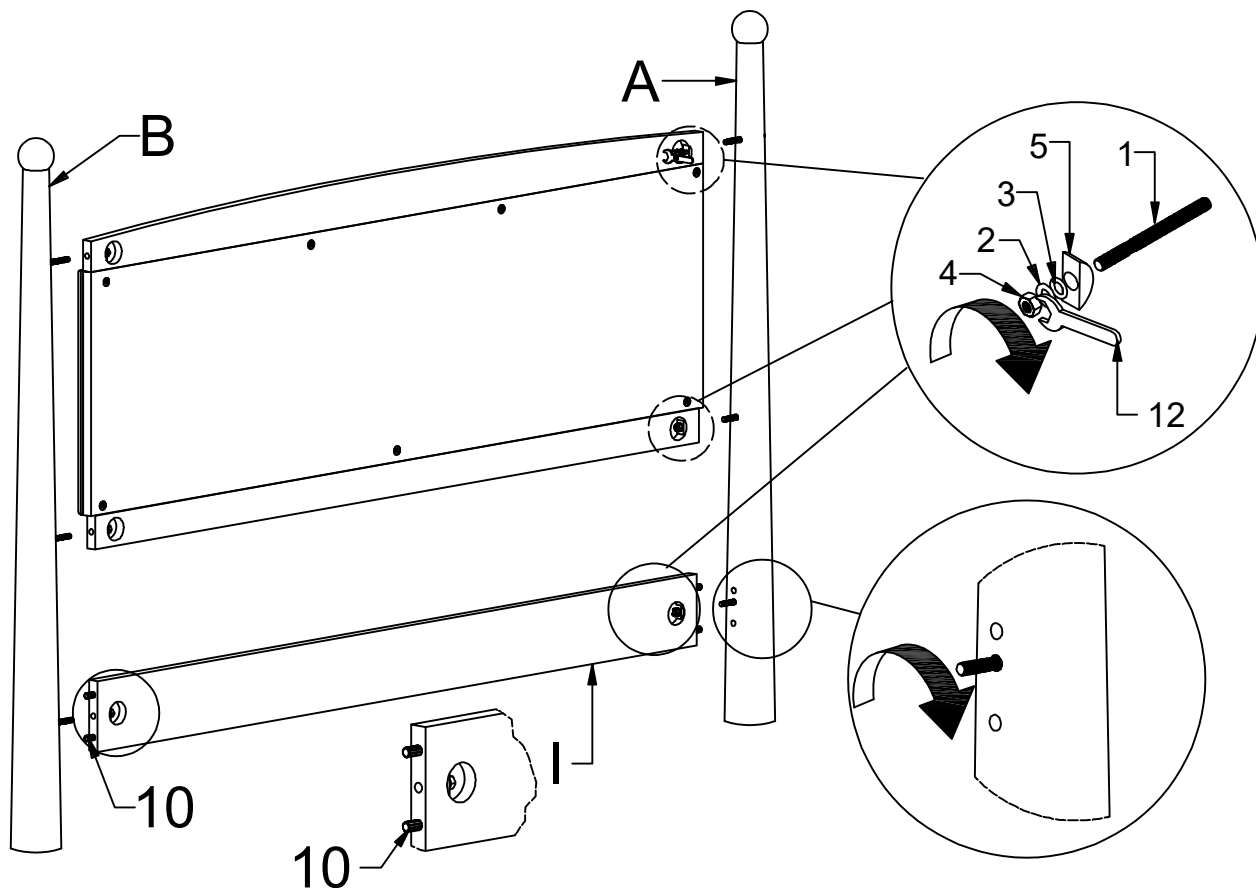

Part B and A need to assembly with headboard using **Hardware 1,2,3,4 and 5** using **Spanner 12**.
Part I need to assembly with **Hardware 10** and attach to **Part A & B** using **Hardware 1,2,3,4 and 5** using **Spanner 12** as shown.

STEP 3


10	6B	6A
		
4 PCS	7 PCS	7 PCS

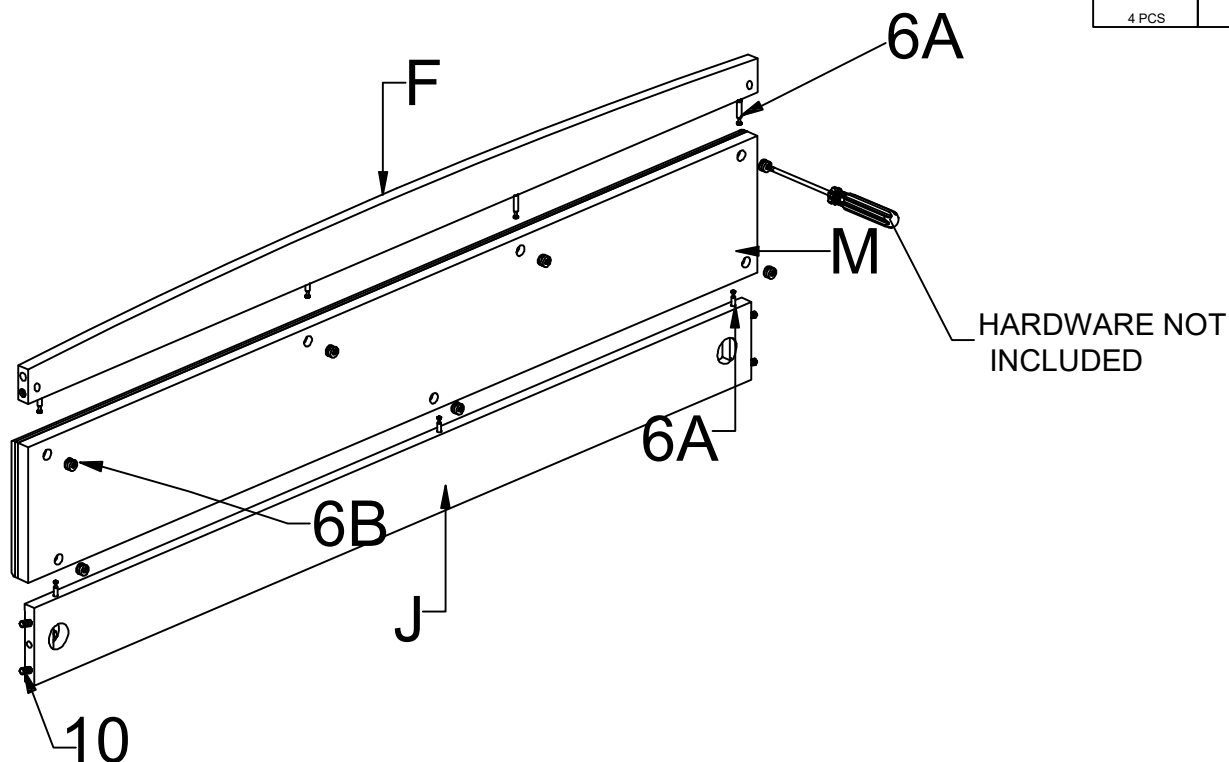

Part F and J need to assembly with Hardware 6A, **Part M** need to assembly with **Part F** and **J** as shown and tighten the **Hardware 6B** at **Part M** as shown. Footboard done assembly.

STEP 4

15	10	13	14	4	2	3	5	1	12
									
2 PCS	2 PCS	1 PC	2 PCS	4 PCS	4 PCS	4 PCS	4 PCS	4 PCS	1 PC

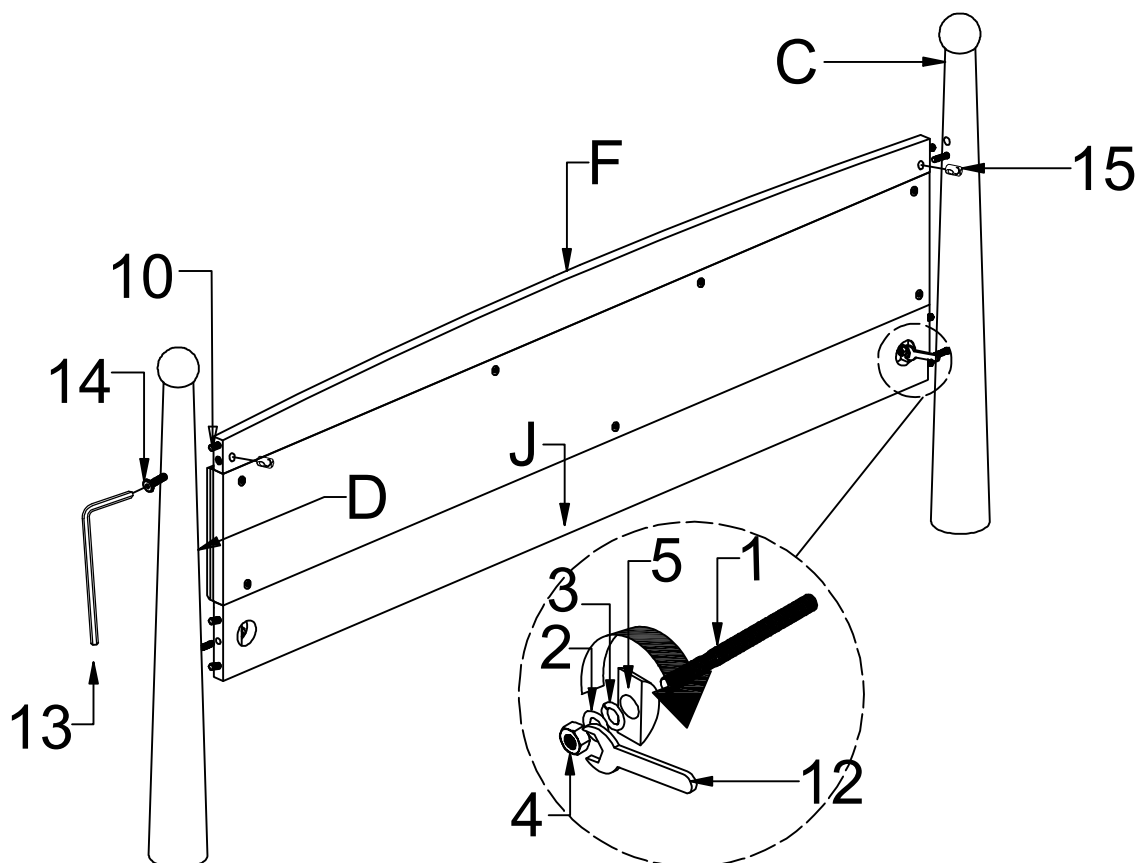


Part F and J need to assembly with **Hardware 10** and attach to **Part C & D** using **Hardware 14** using **Allen Key 13** and use **Hardware 1,2,3,4 and 5** using **Spanner 12** as shown.

Part D and C need to assembly with headboard using **Hardware 1,2,3,4 and 5** using **Spanner 12**.


STEP 5

4	2	3	5	1	12	10
						
8 PCS	8 PCS	8 PCS	8 PCS	8 PCS	1 PC	4 PCS

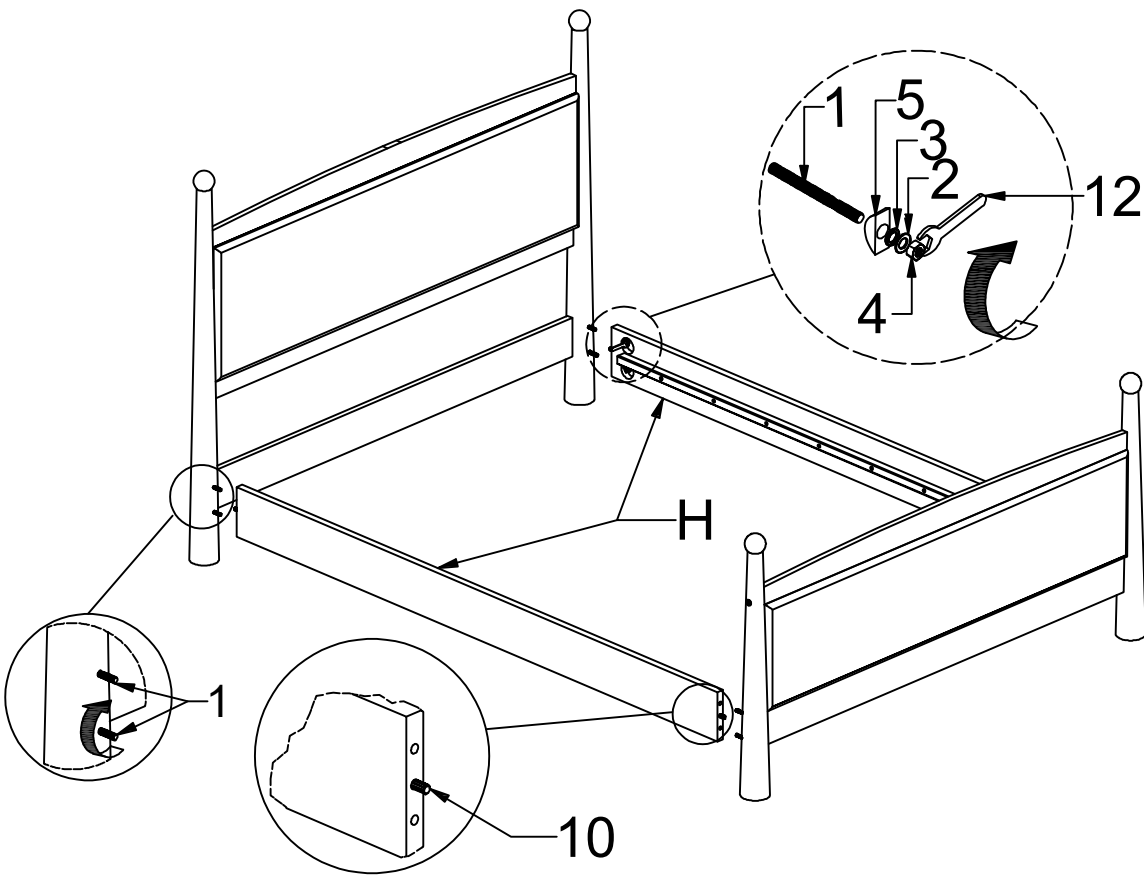


Part H need to assembly with **Hardware 10** and attach to **Part A** and **C**, on the next side attach to **Part B** and **D** as shown using **Hardware 1,2,3,4 and 5**

STEP 6

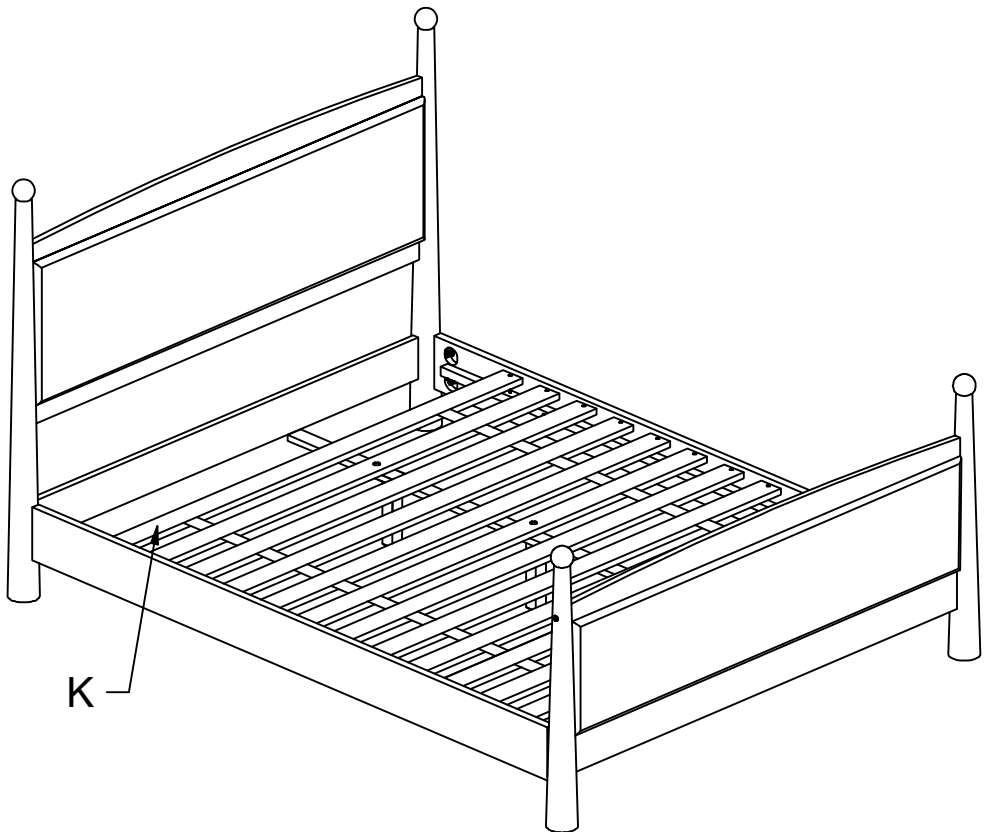

Place **Part K** as shown. **DO NOT SCREW!**



STEP 7

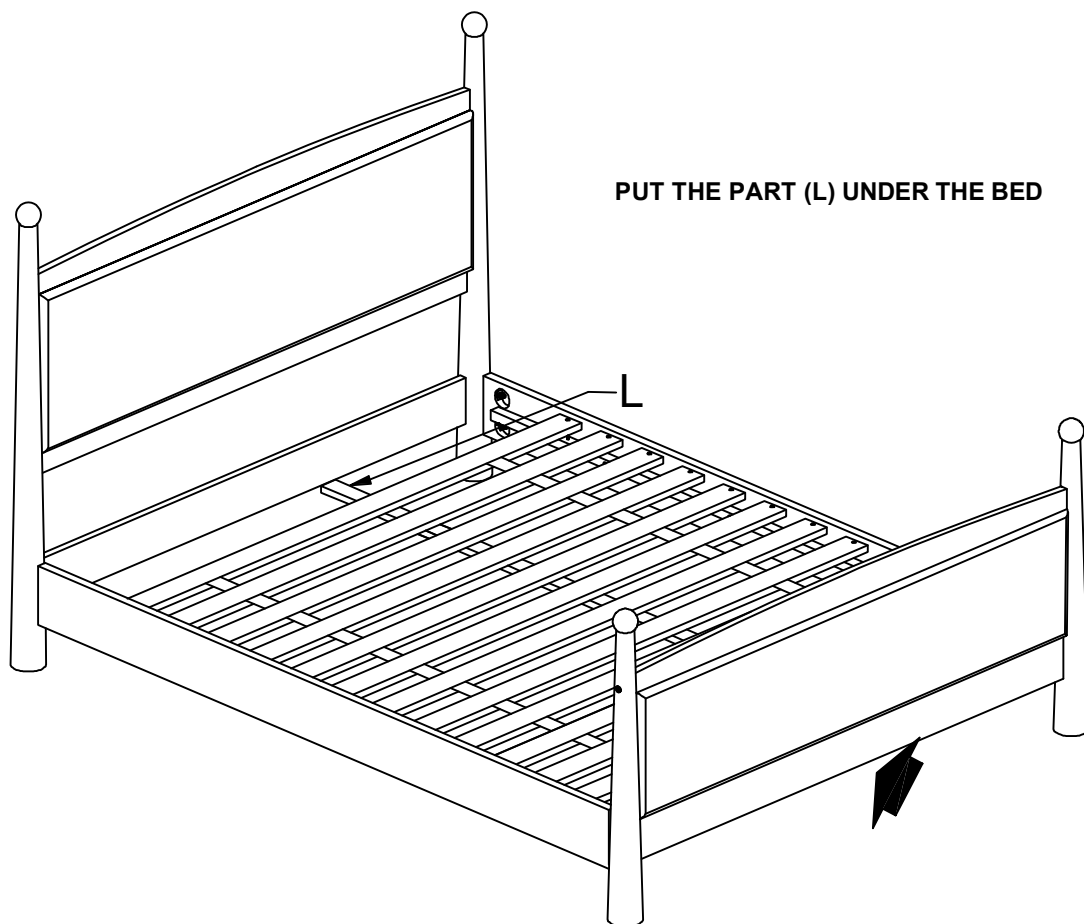

Insert **Part L** under the bed.

STEP 8

7	11	8
3 PCS	1 PC	3 PCS

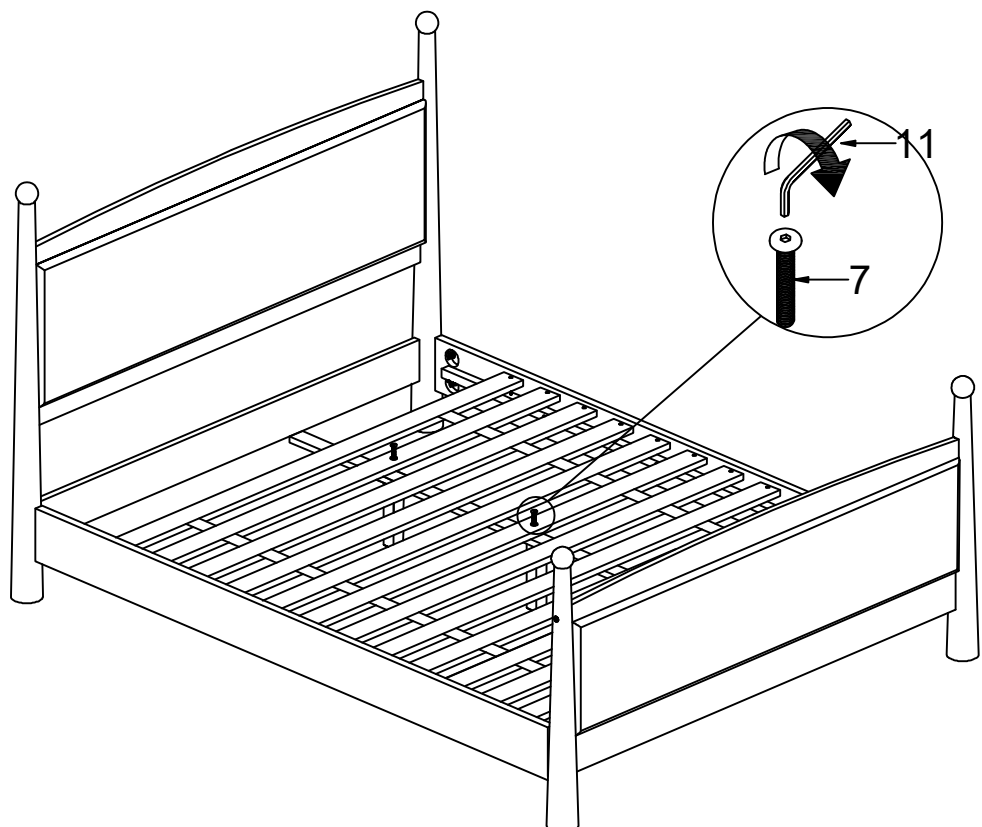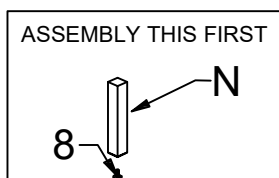


Part N need to assembly with **Hardware 8** as shown.

After inserting the **Part L**, place the **Part N** between the slats. Lift the support wood and slide the support leg underneath it, then fasten using **Hardware 7** using **Allen Key 11** as shown in the picture below.

STEP 9


9


24 PCS

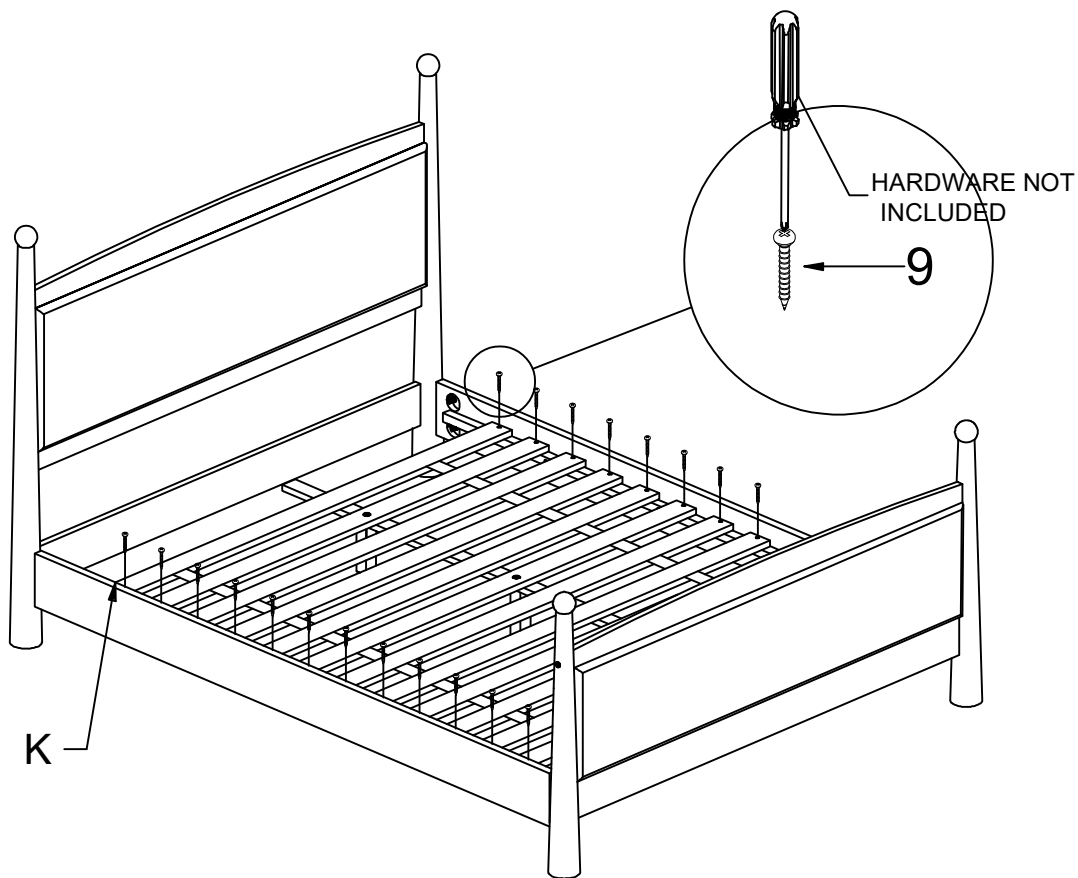

Screw the **Part K** using **Hardware 9** as shown.

STEP 10

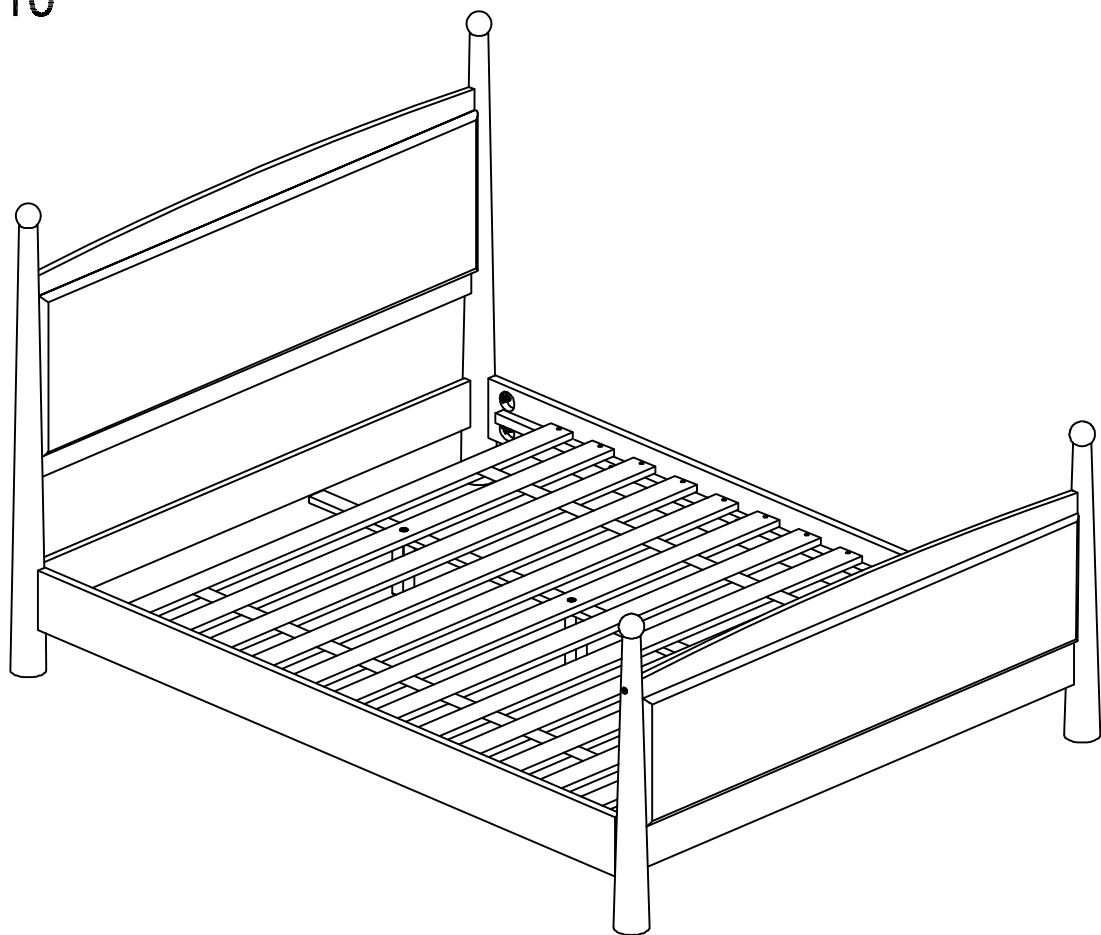

This Queen Sized Wooden Bed can only used on a flat, level surface. Assembly done