
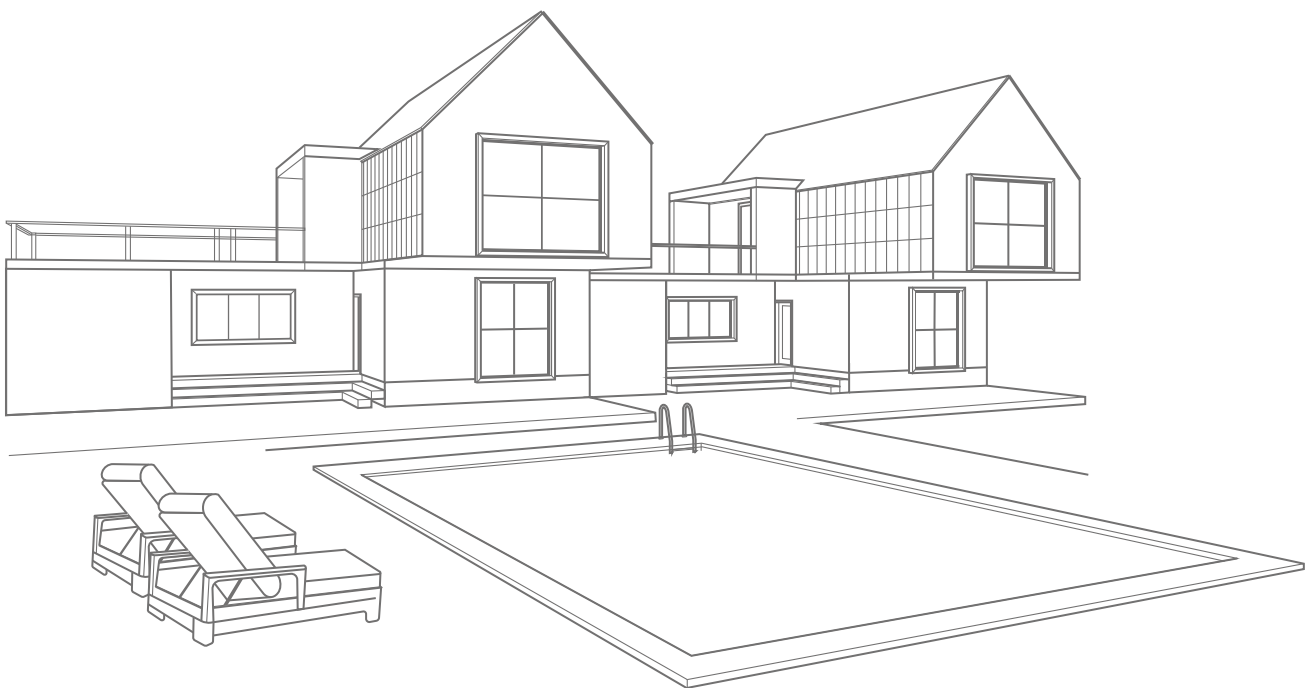

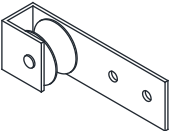


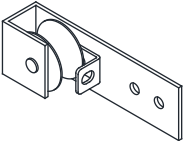

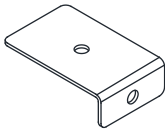
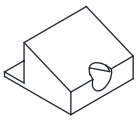









Coffee Hutch Cabinet




Please check that you have all the parts listed below


Ⓐ x 52pcs  M6*32mm	Ⓑ x 52pcs  Ø15*9mm	Ⓒ x 52pcs  Ø25mm	Ⓓ x 56pcs  Ø6*30mm
Ⓔ x 4pcs  96*30*22mm	Ⓕ x 4pcs  20*14*12mm	Ⓖ x 4pcs  56*19*9.5mm	Ⓗ x 2pcs  96*30*22mm
Ⓙ x 8pcs  Ø5*7.5+1+7.5mm	Ⓚ x 4pcs  56*36*16mm	Ⓛ x 24pcs  17.5*15.5*9mm	Ⓝ x 6pcs 
Ⓜ x 1pcs  M4*55mm	Ⓟ x 1pcs  M3*55mm	Ⓢ x 1pcs  M2.5*55mm	Ⓡ x 2pcs  M6*10+1+29mm
Ⓢ x 28pcs  M5*35mm	Ⓣ x 8pcs  M6*28mm	Ⓤ x 5pcs  M4*30mm	Ⓦ x 60pcs  M4*12mm
ⓧ x 8pcs  M4*12mm	Ⓨ x 32pcs  M3*15mm	⑨6 x 2pcs 	

1

Ⓐ x 4pcs




Ⓓ x 8pcs

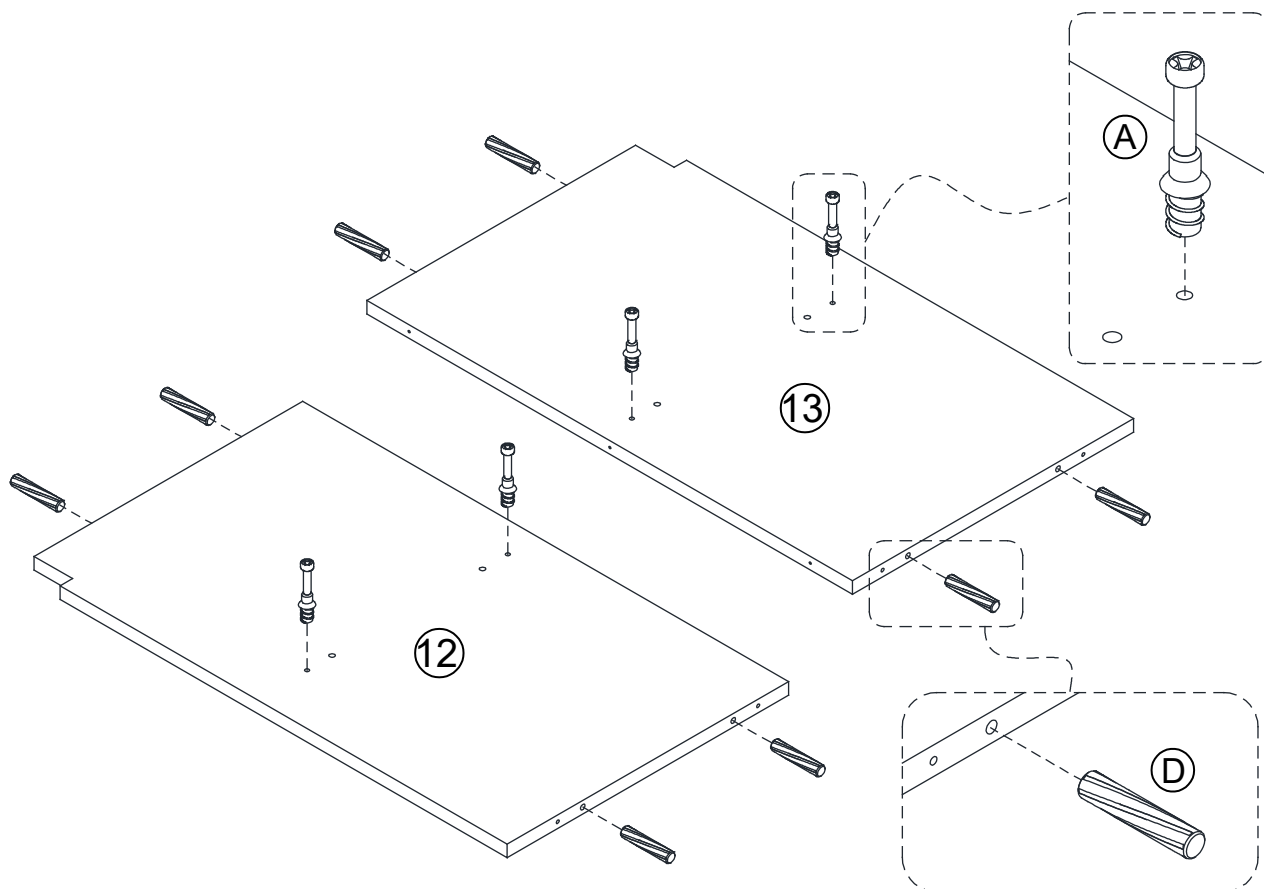


2

Ⓓ x 4pcs




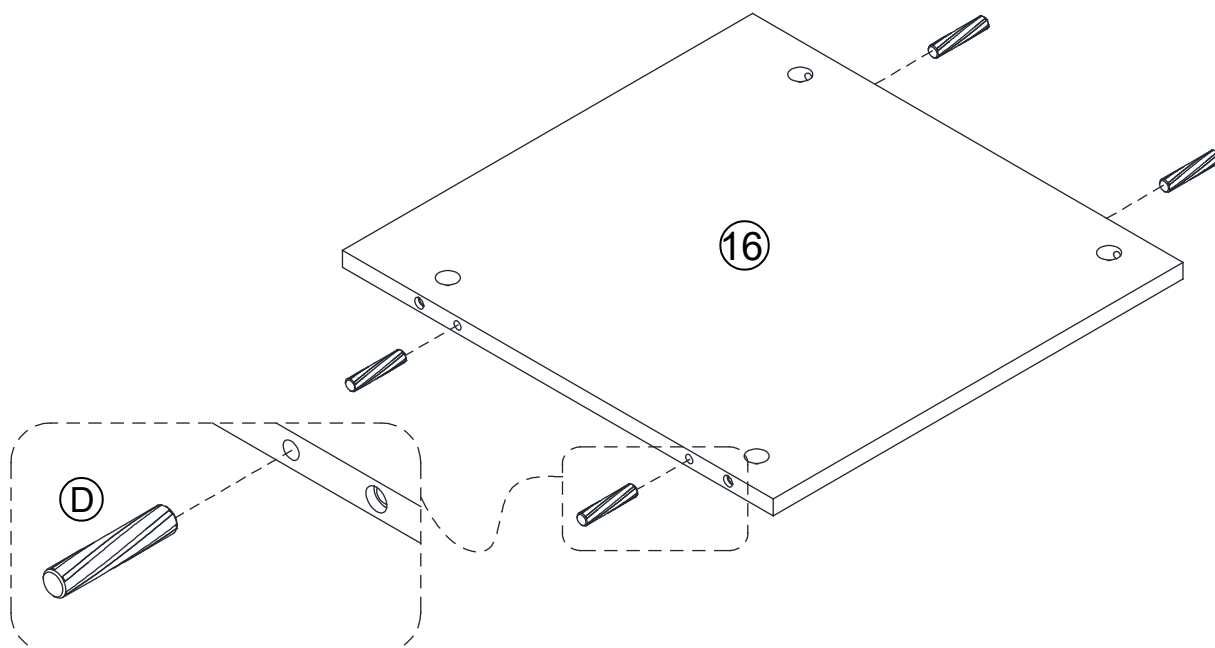


3

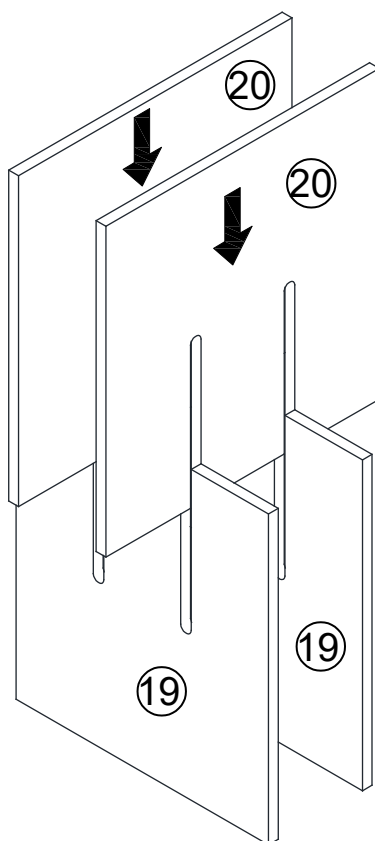


4

Ⓑ x 4pcs

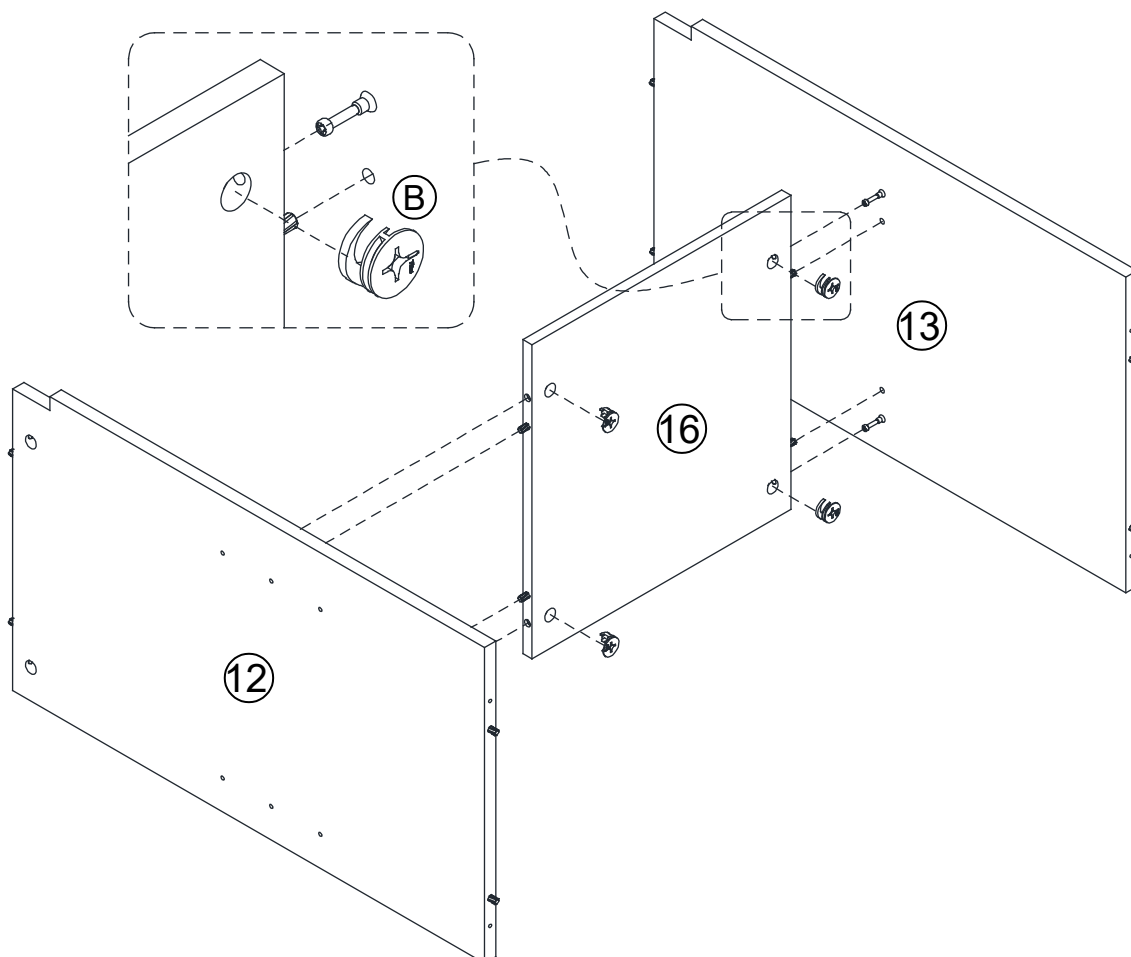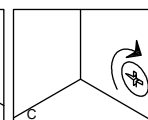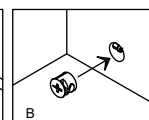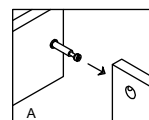


5

(A) x 4pcs



(D) x 6pcs


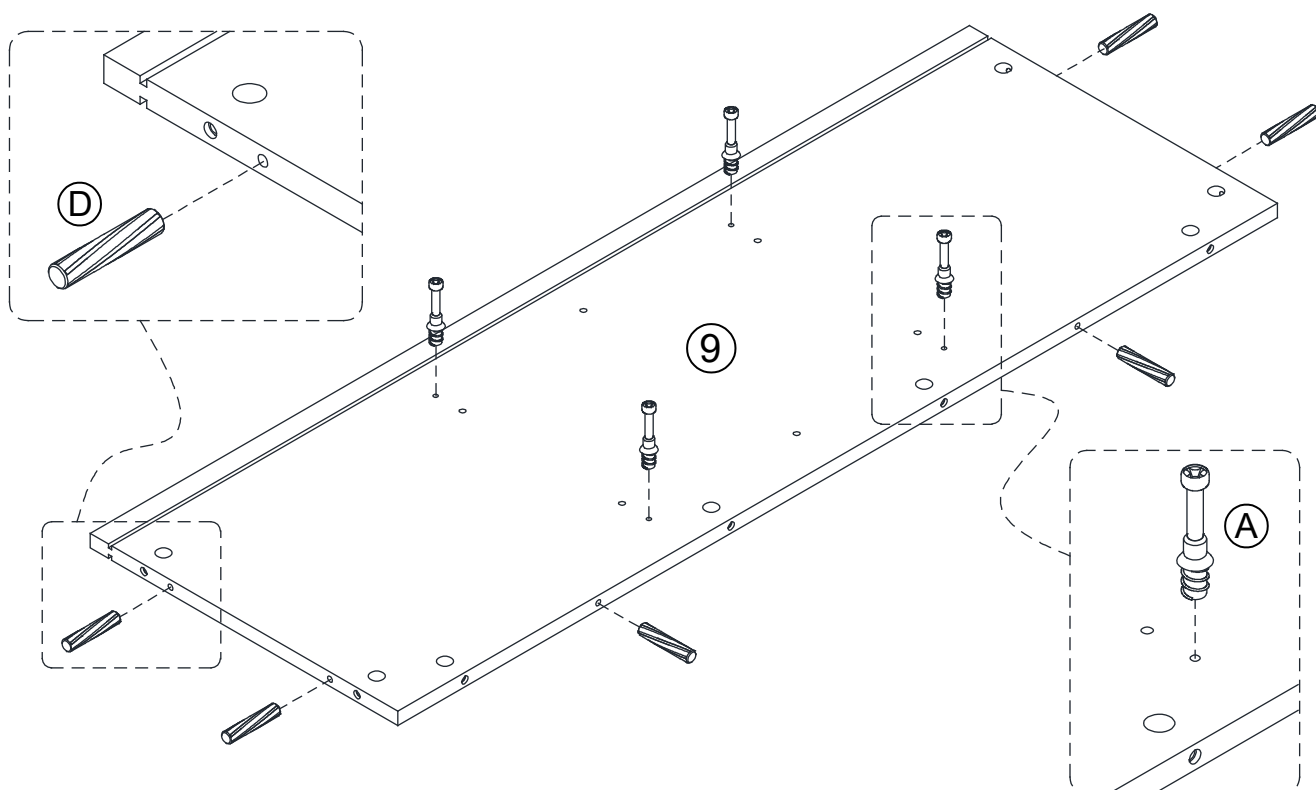


6

(X) x 4pcs




(F) x 4pcs

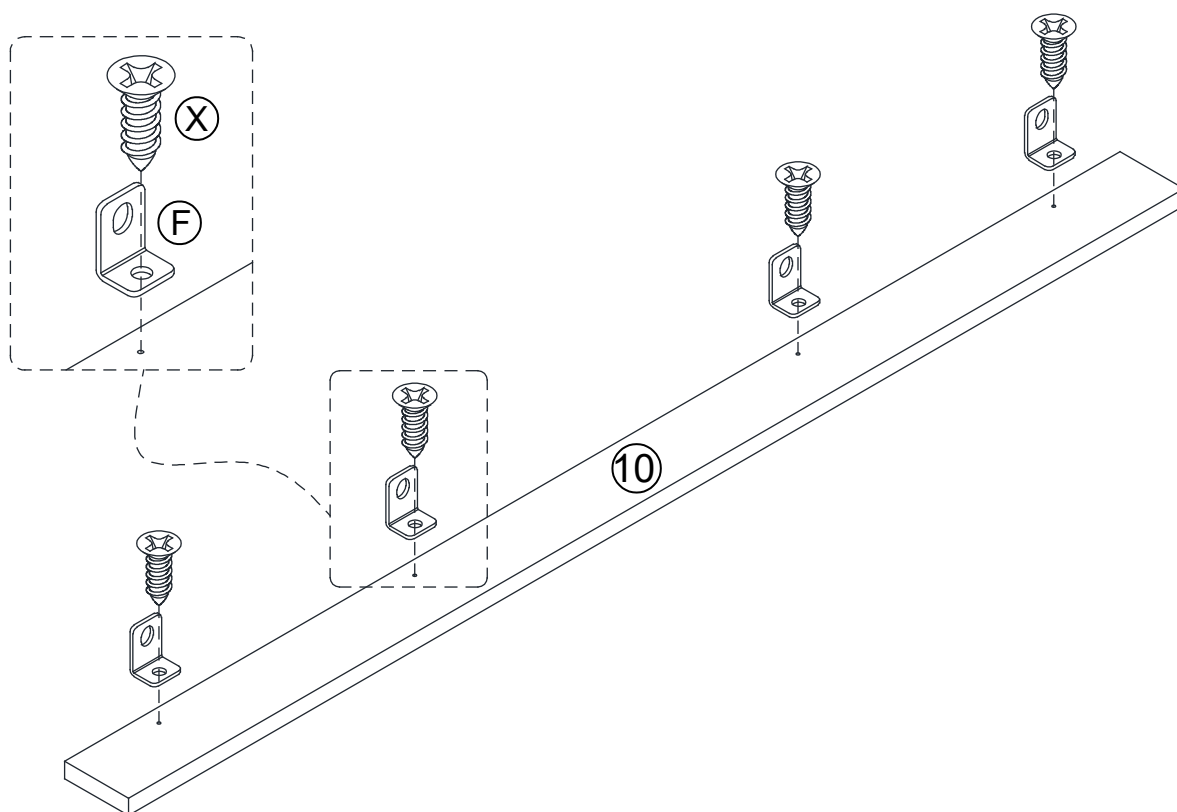



7

ⓧ x 4pcs

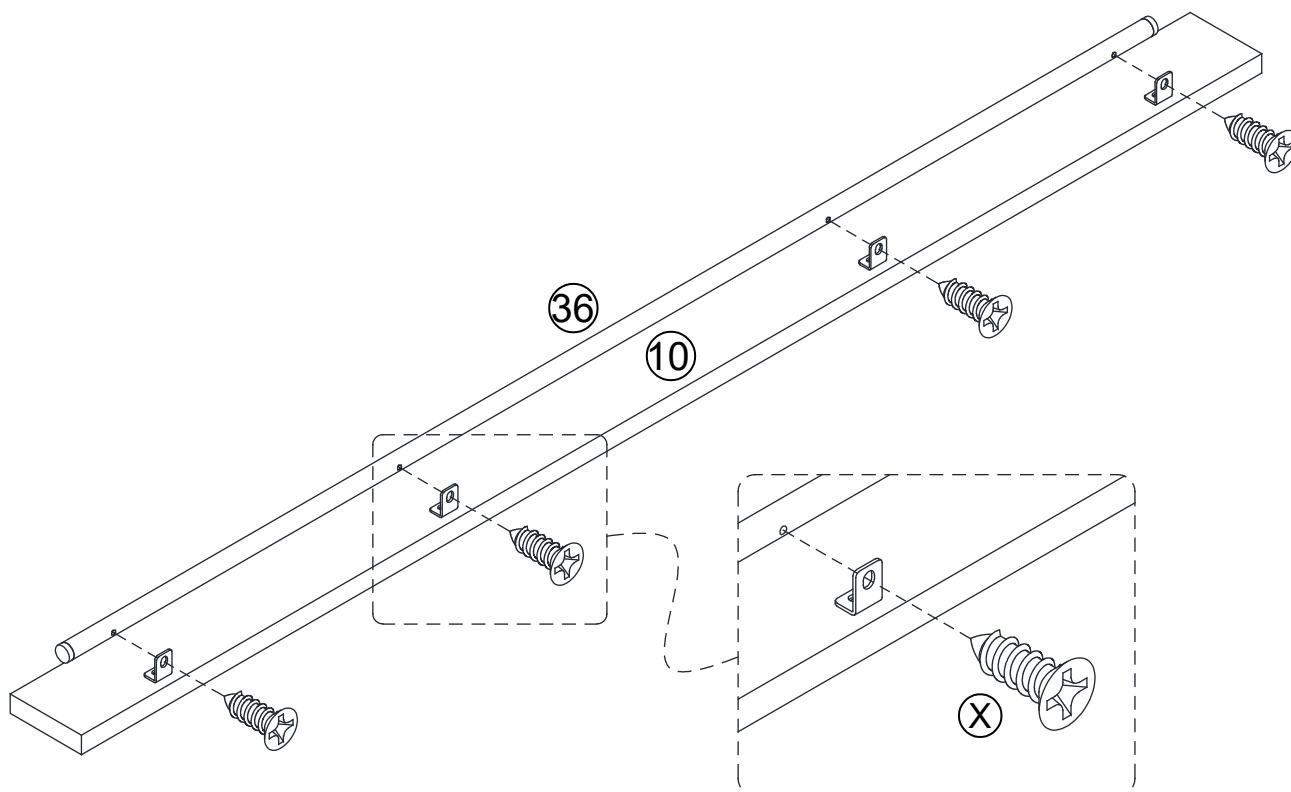



8

Ⓐ x 4pcs

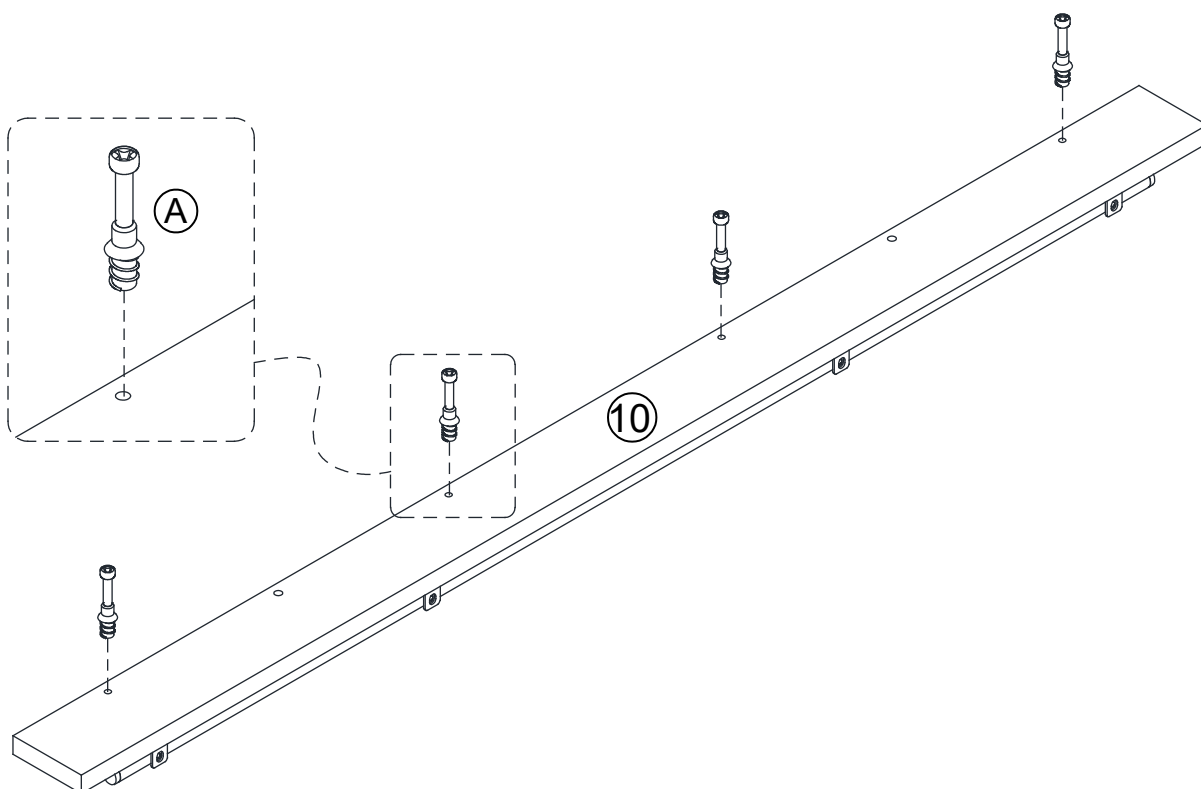

9

Ⓑ x 4pcs

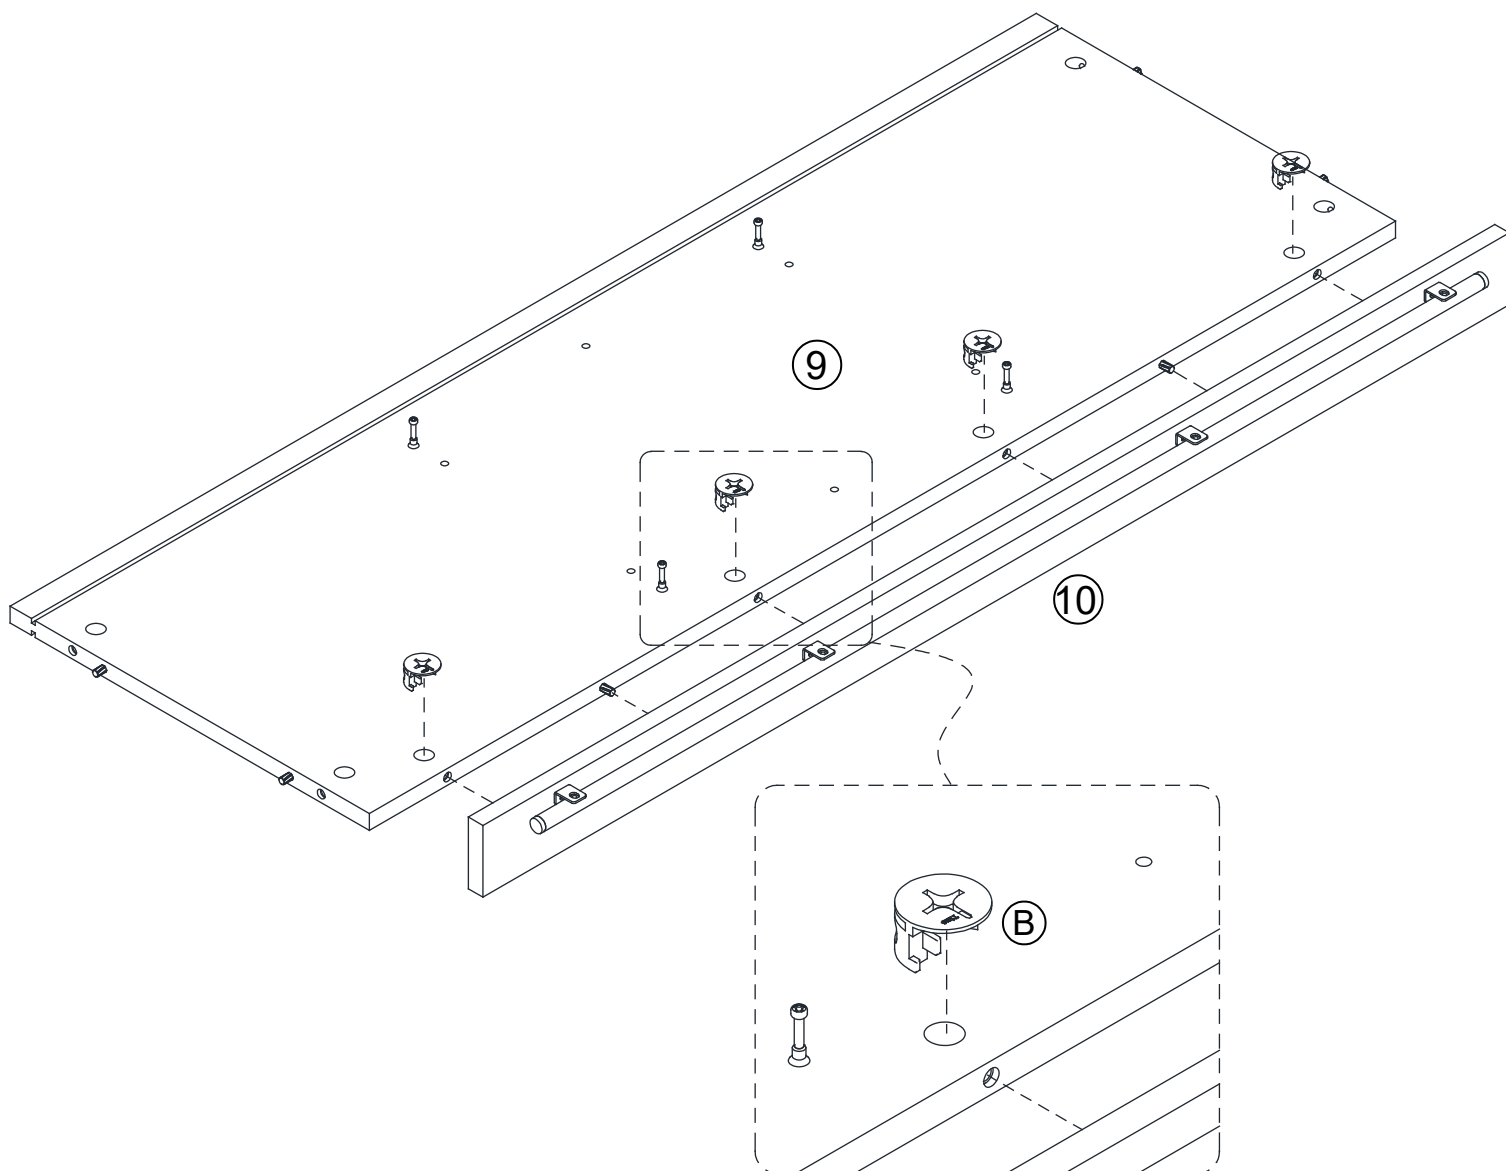



10

Ⓢ x 8pcs





Ⓚ x 4pcs

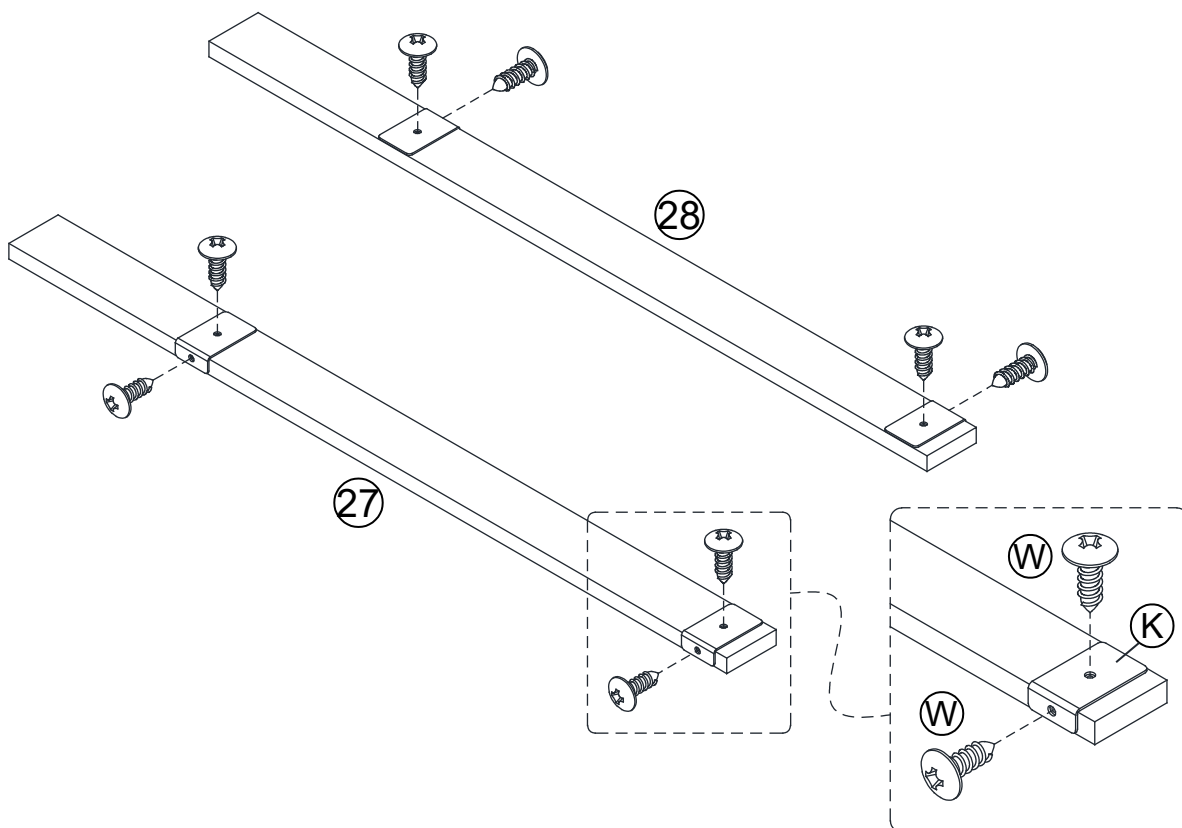


11

Ⓐ x 6pcs

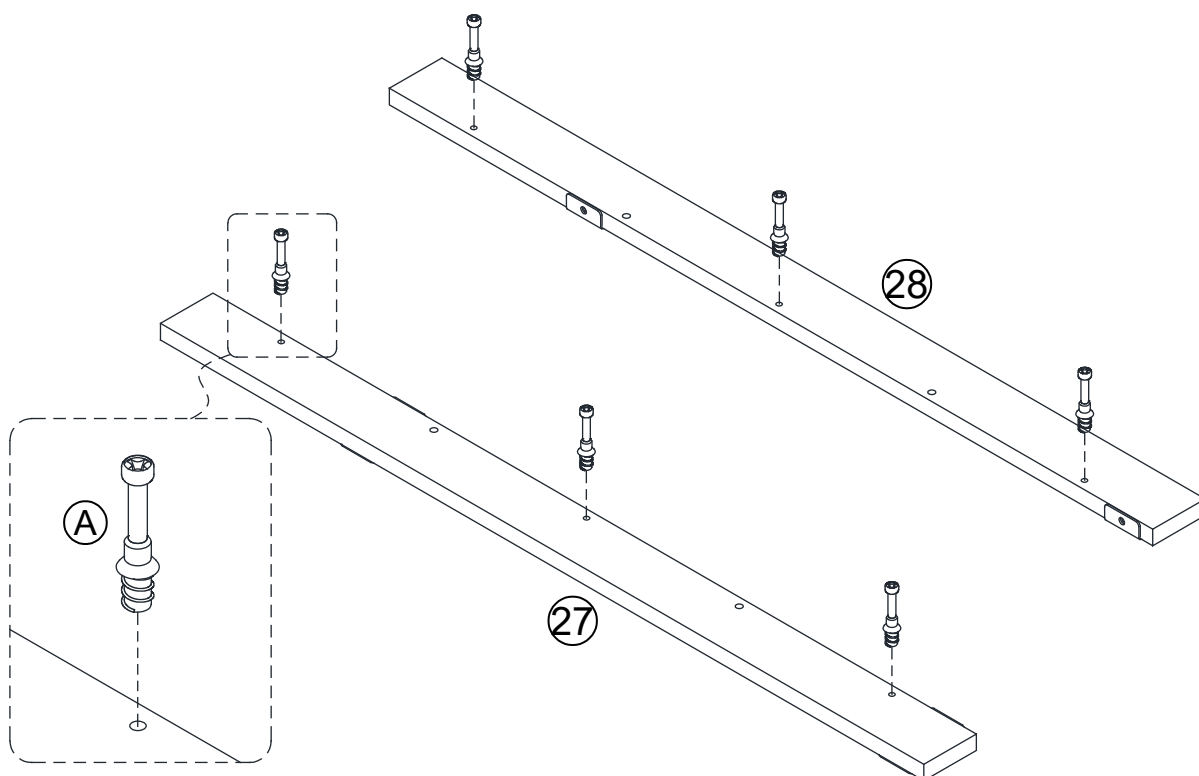


12

(A) x 4pcs





(D) x 12pcs

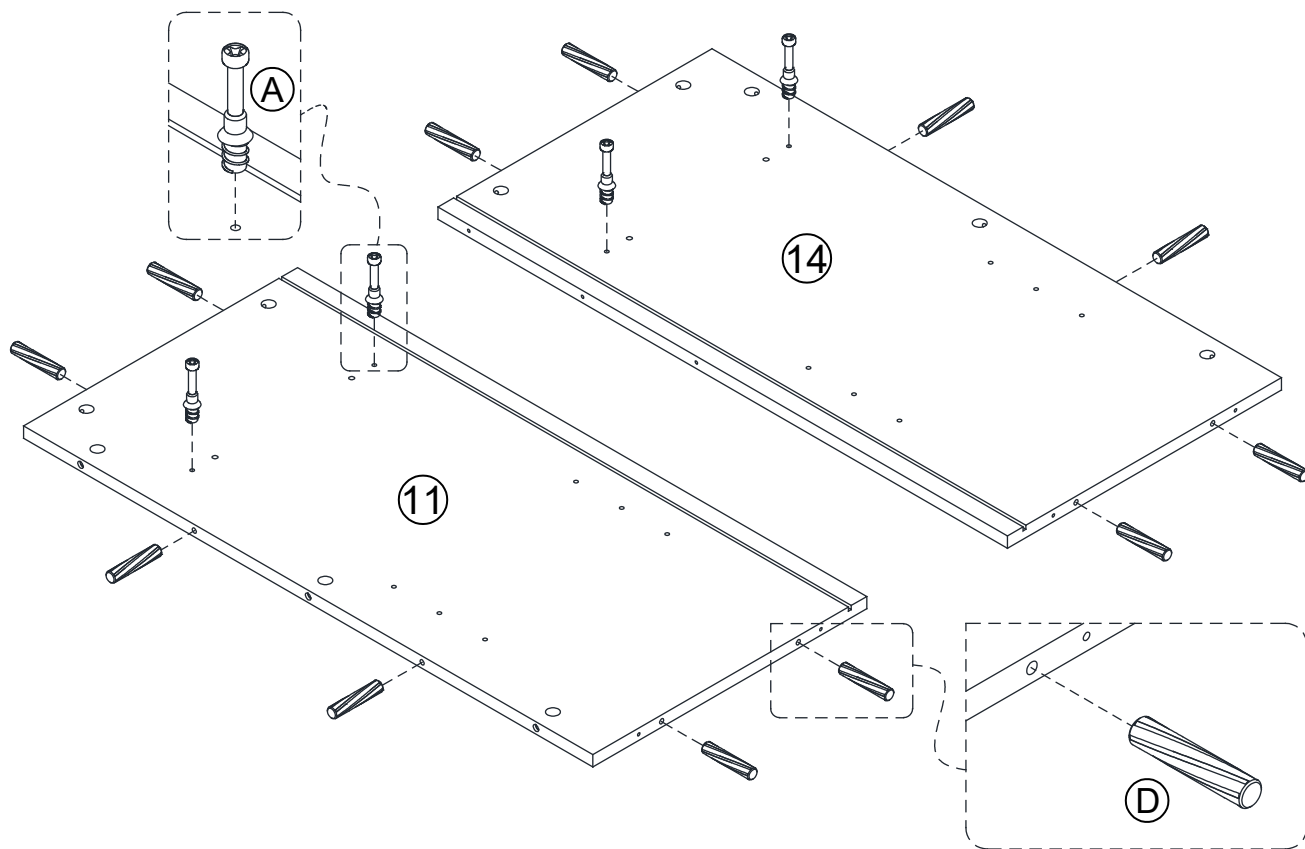



13

(B) x 6pcs

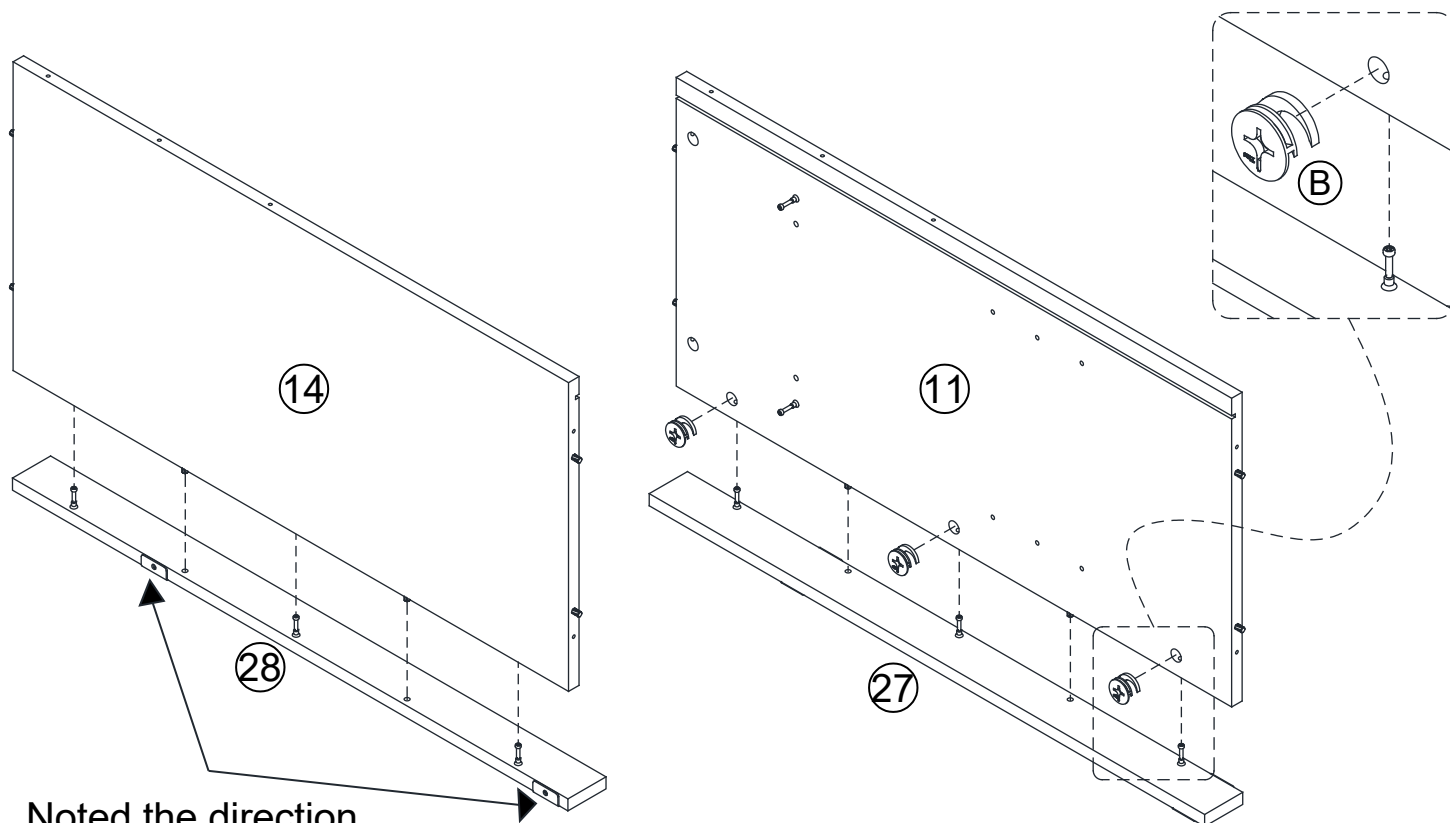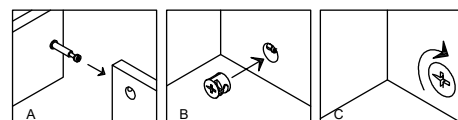


14

Ⓑ x 4pcs

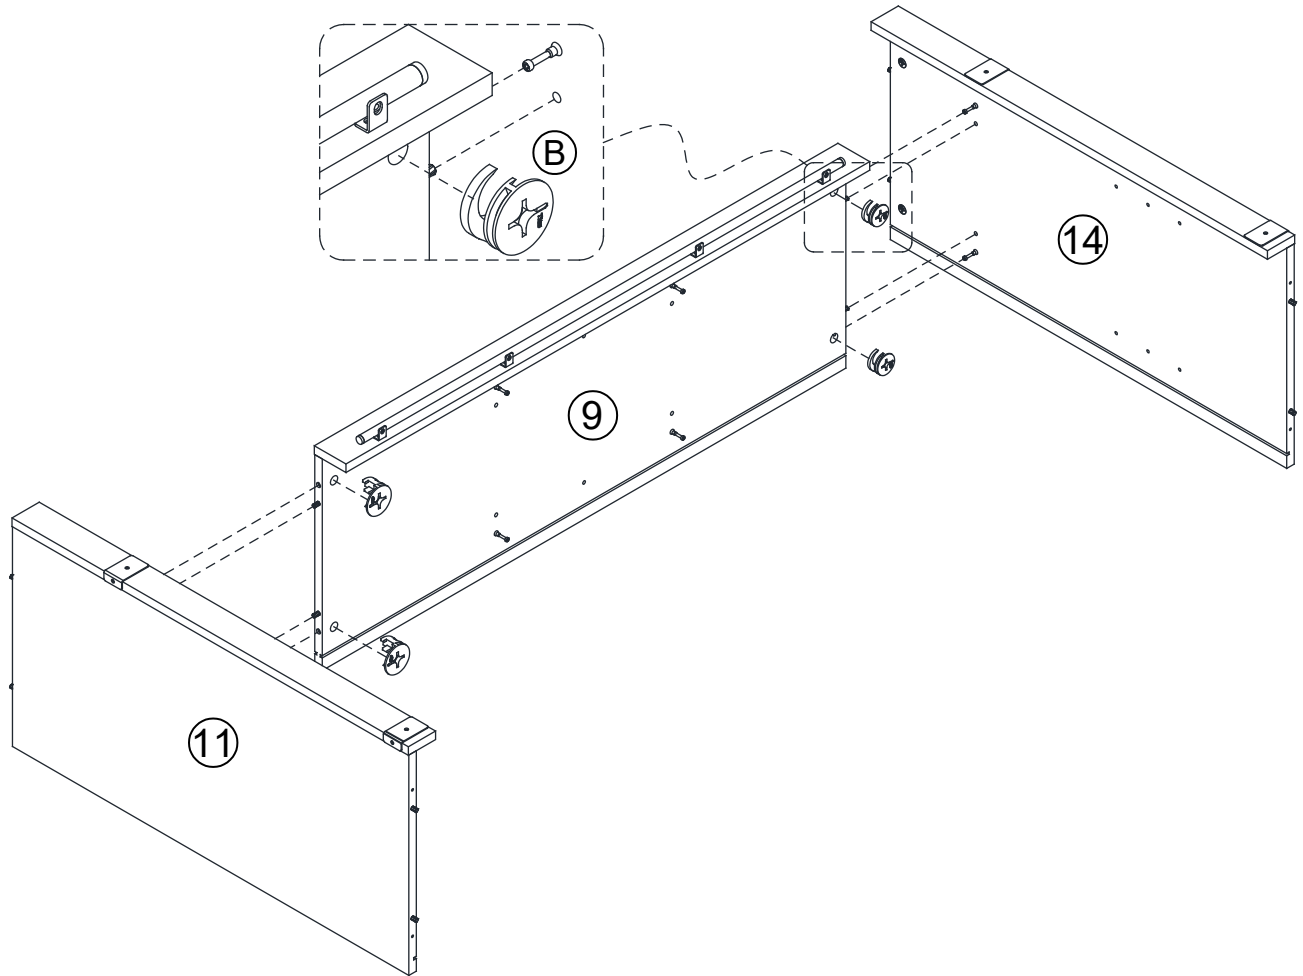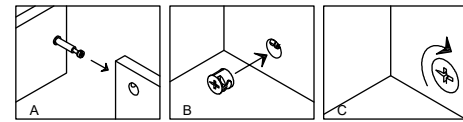



15

Ⓓ x 4pcs

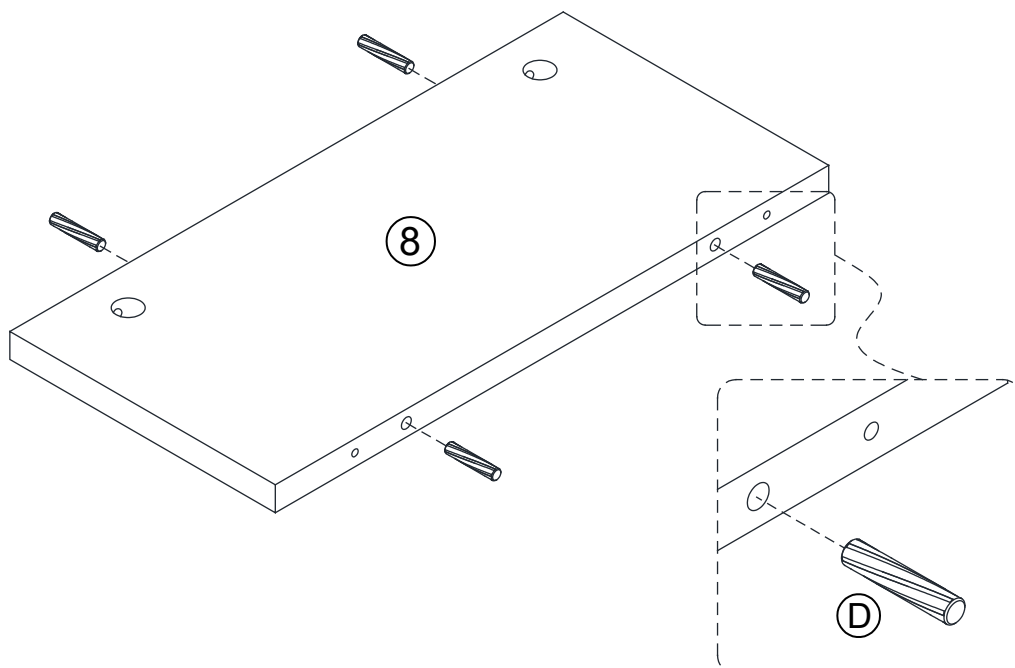


16

Ⓢ x 2pcs

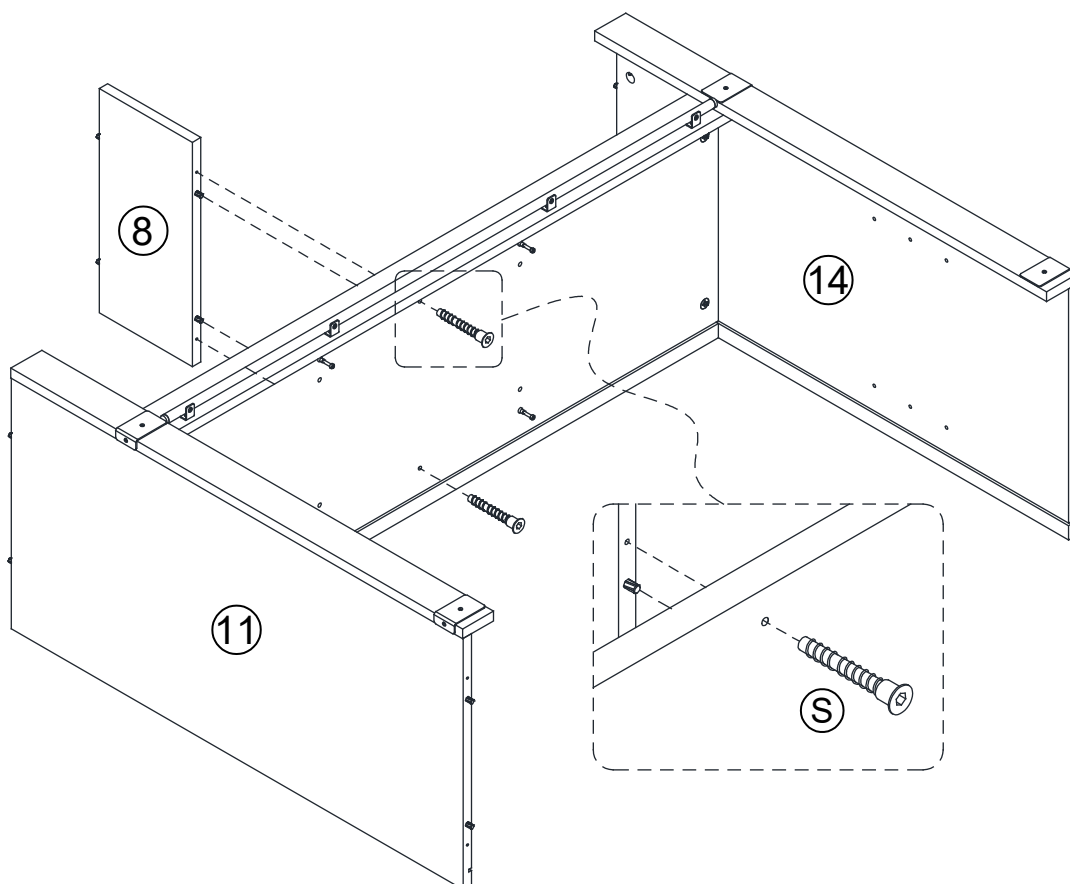



17

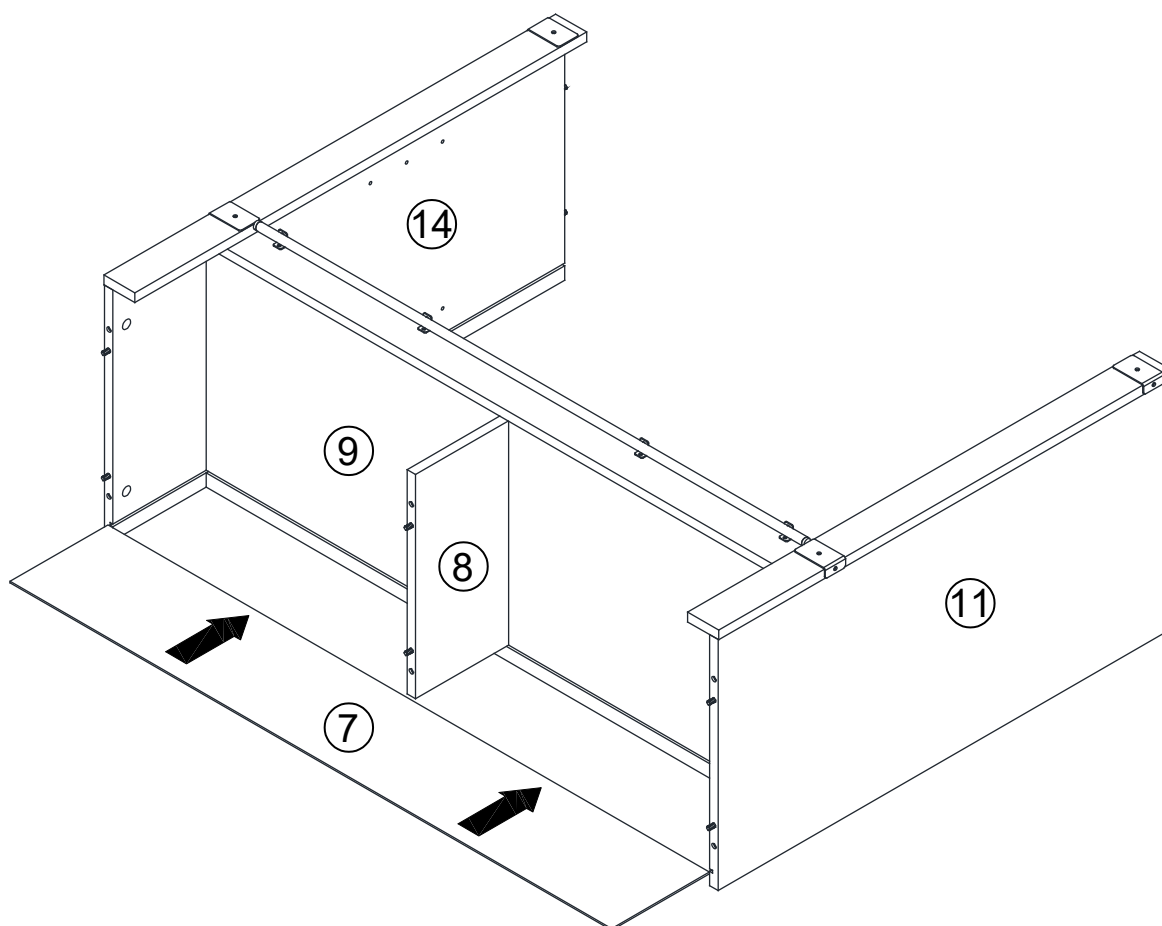



18

(A) x 6pcs

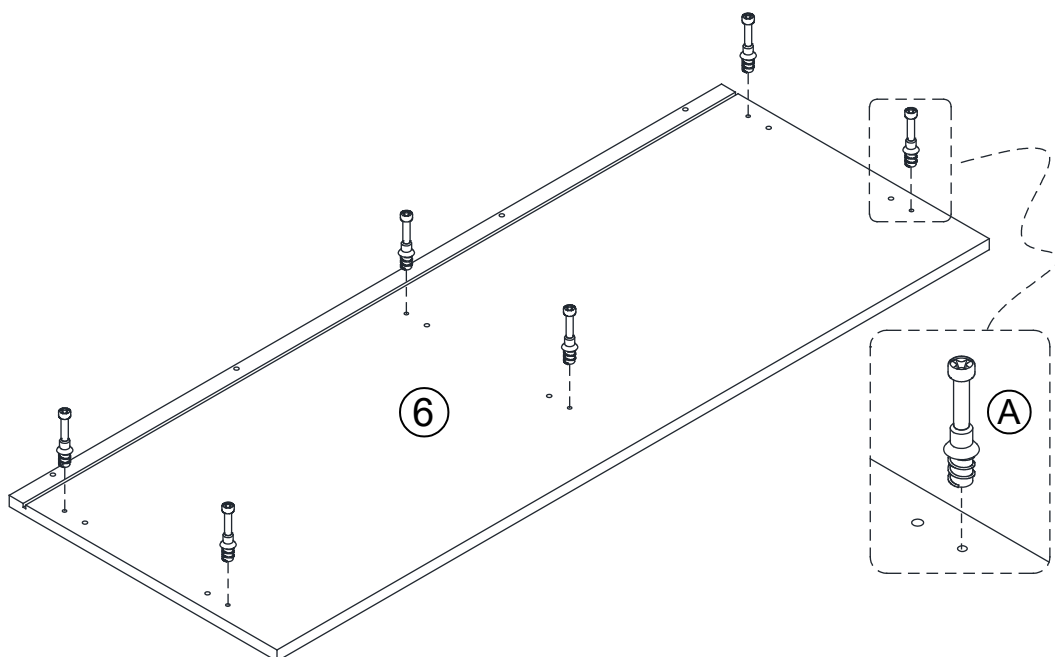


19

(B) x 6pcs

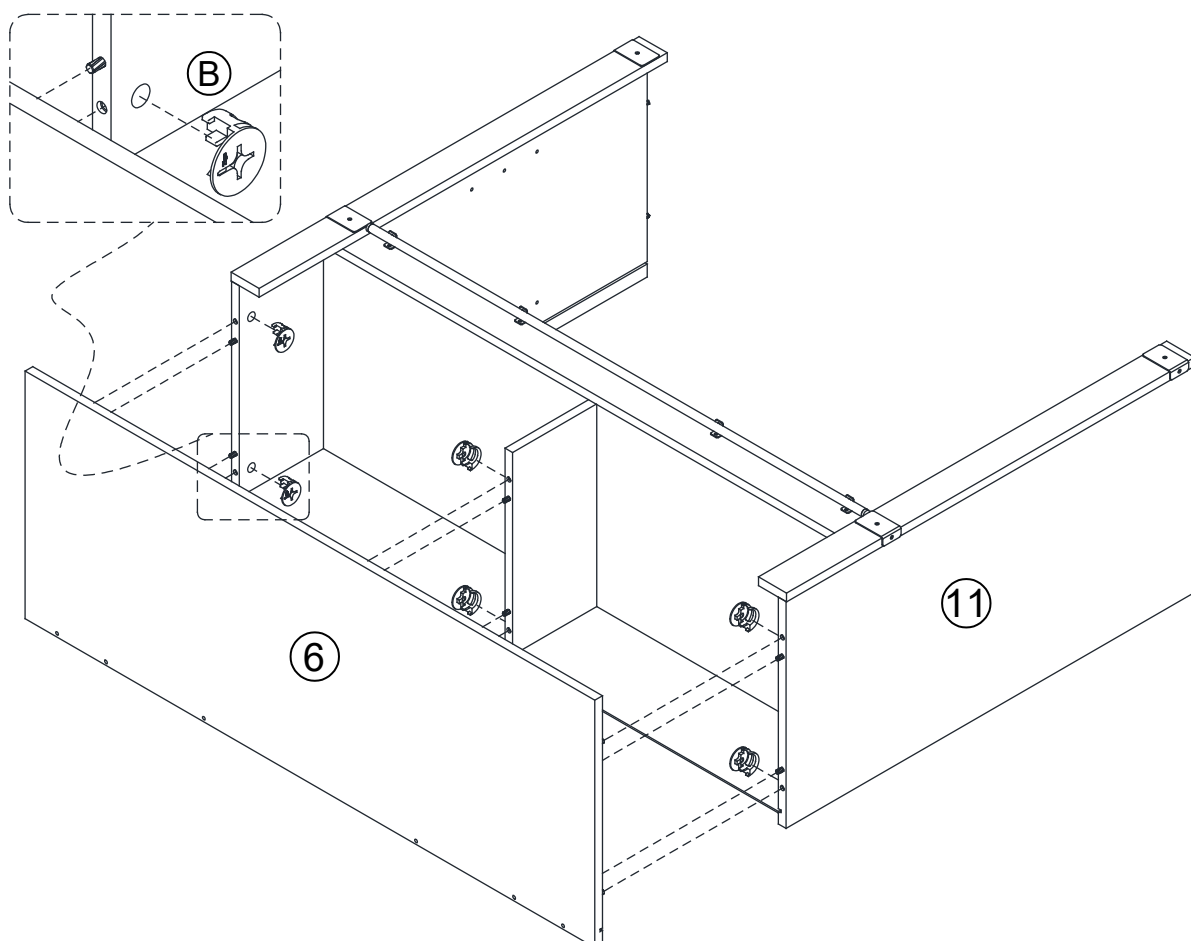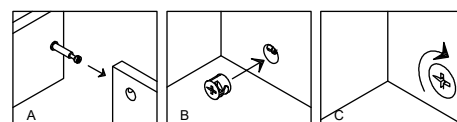



20

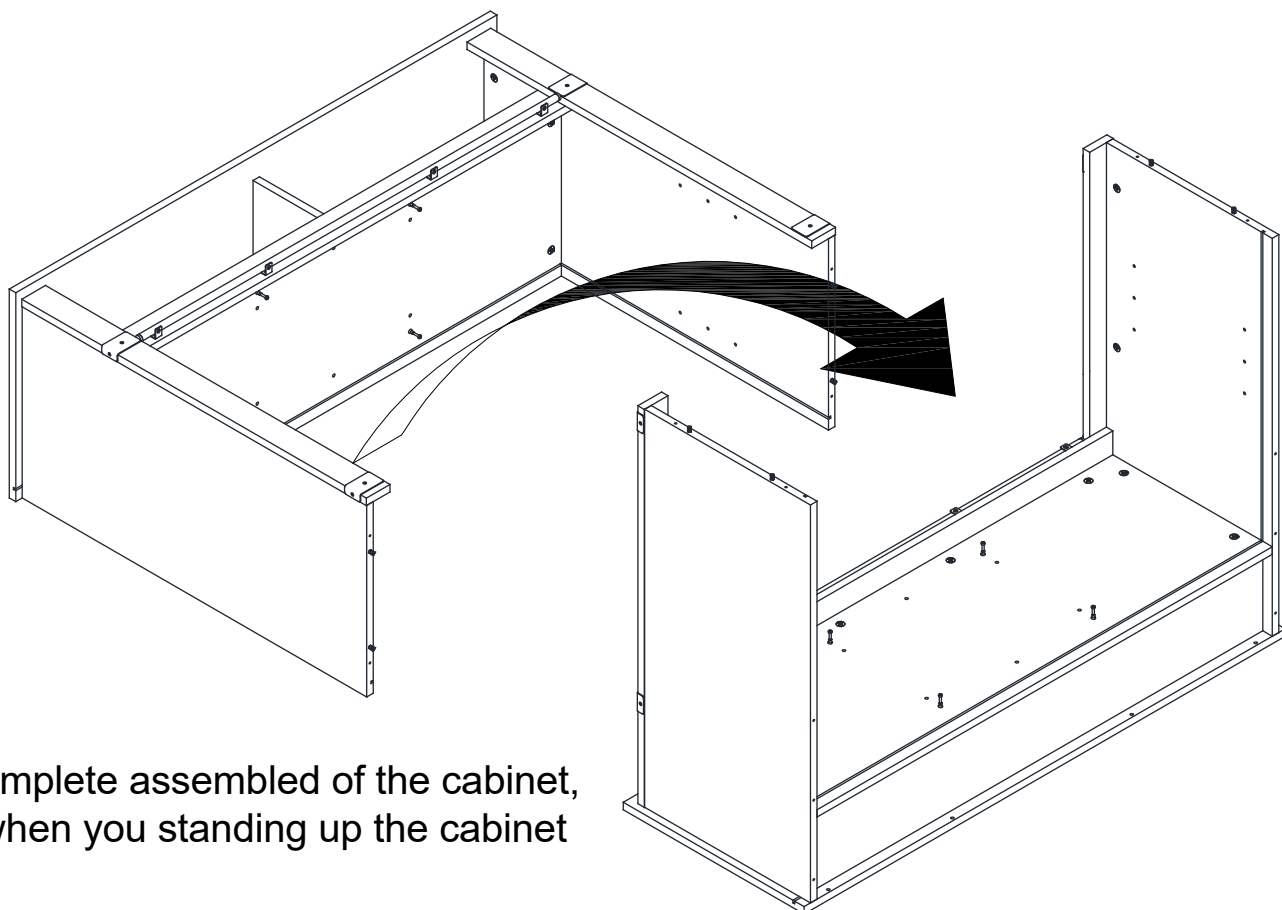


Due to incomplete assembled of the cabinet,
Becareful when you standing up the cabinet

21

Ⓑ x 4pcs

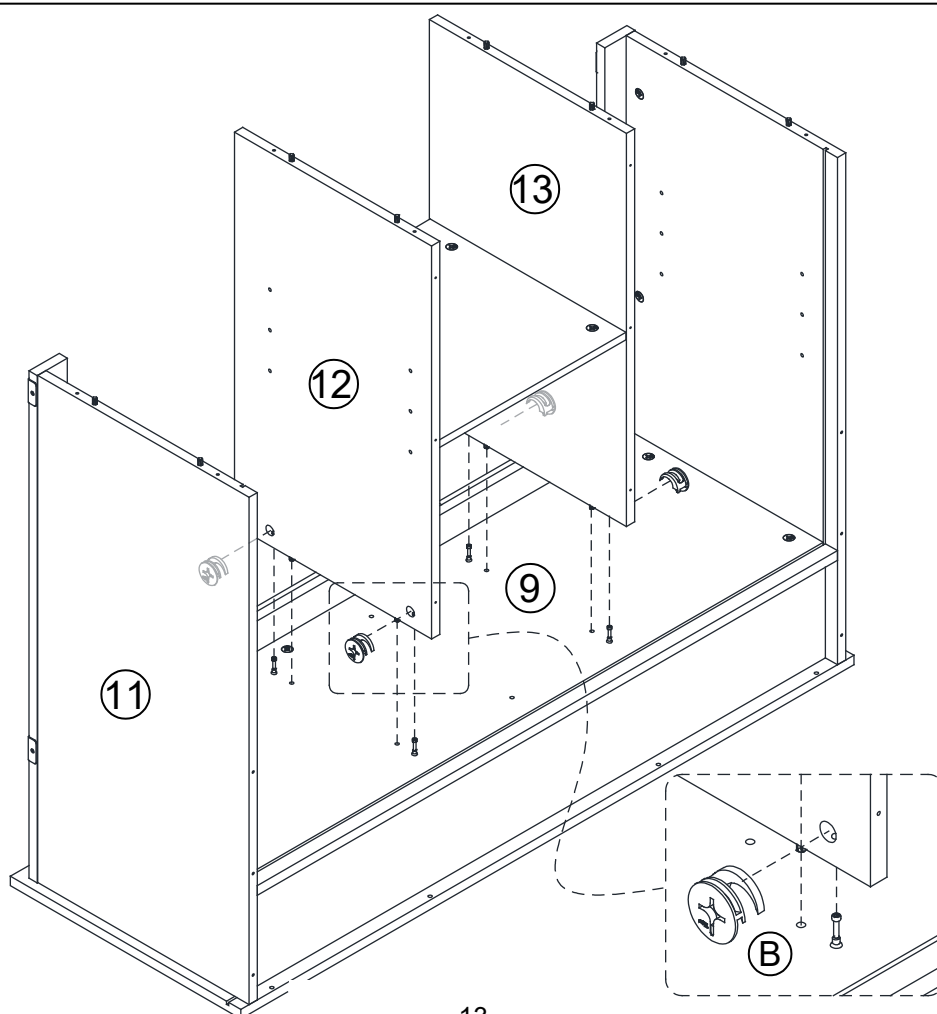
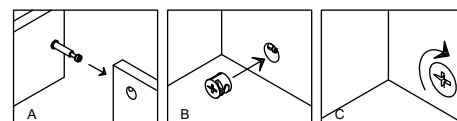


22

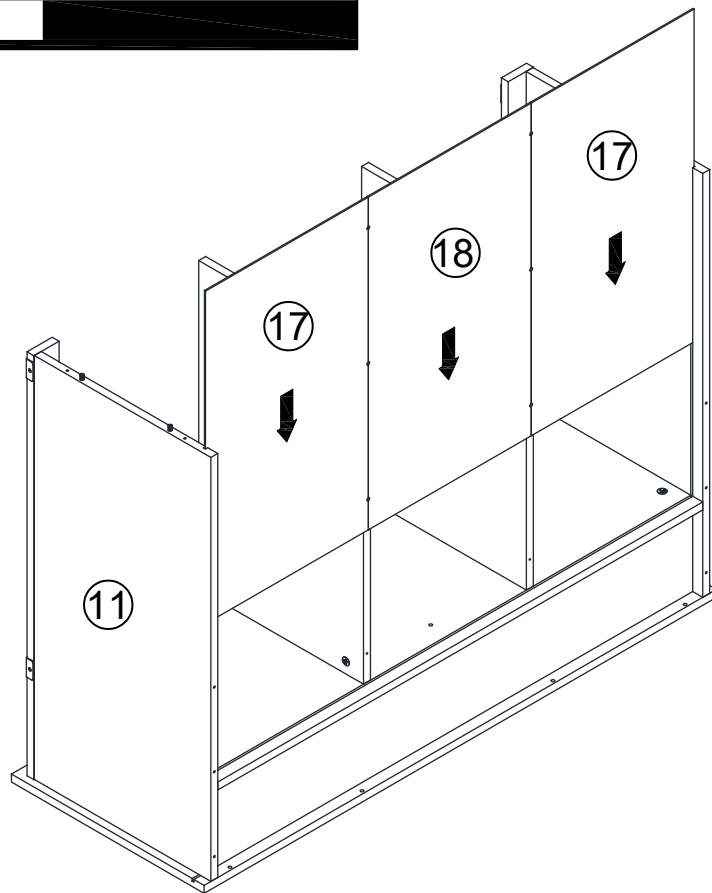



23

Ⓜ x 6pcs

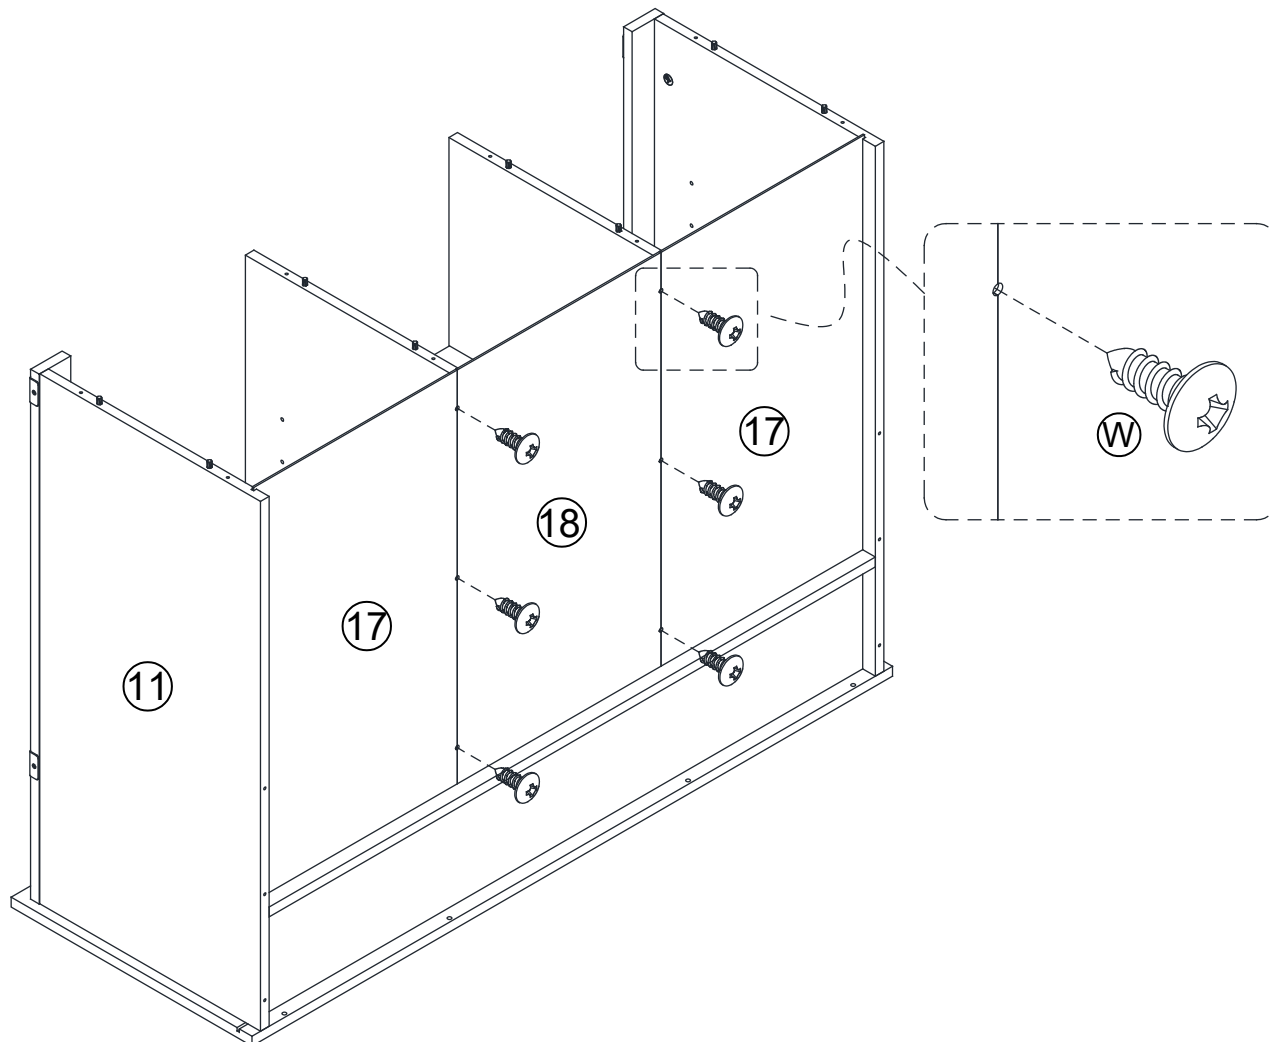



24

Ⓢ x 8pcs

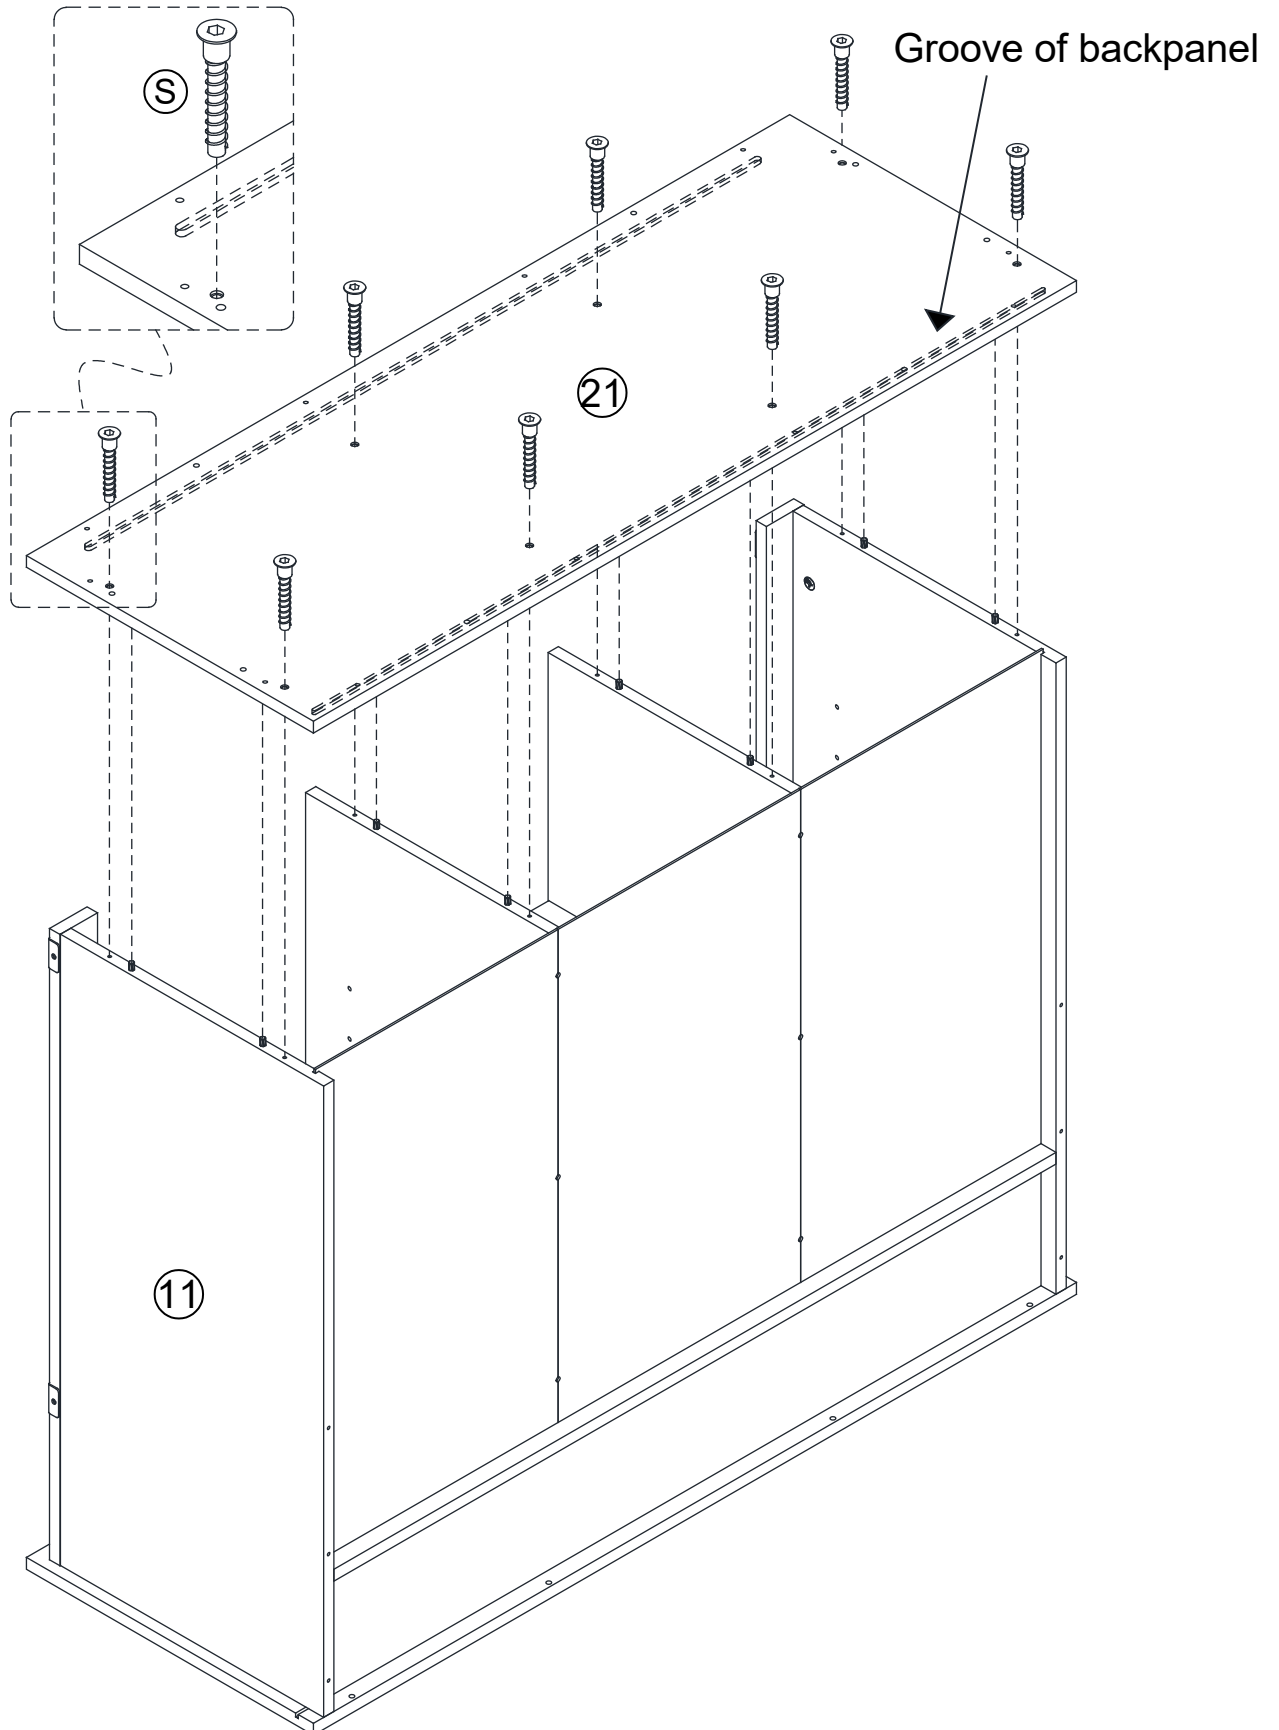


25

Ⓐ x 12pcs

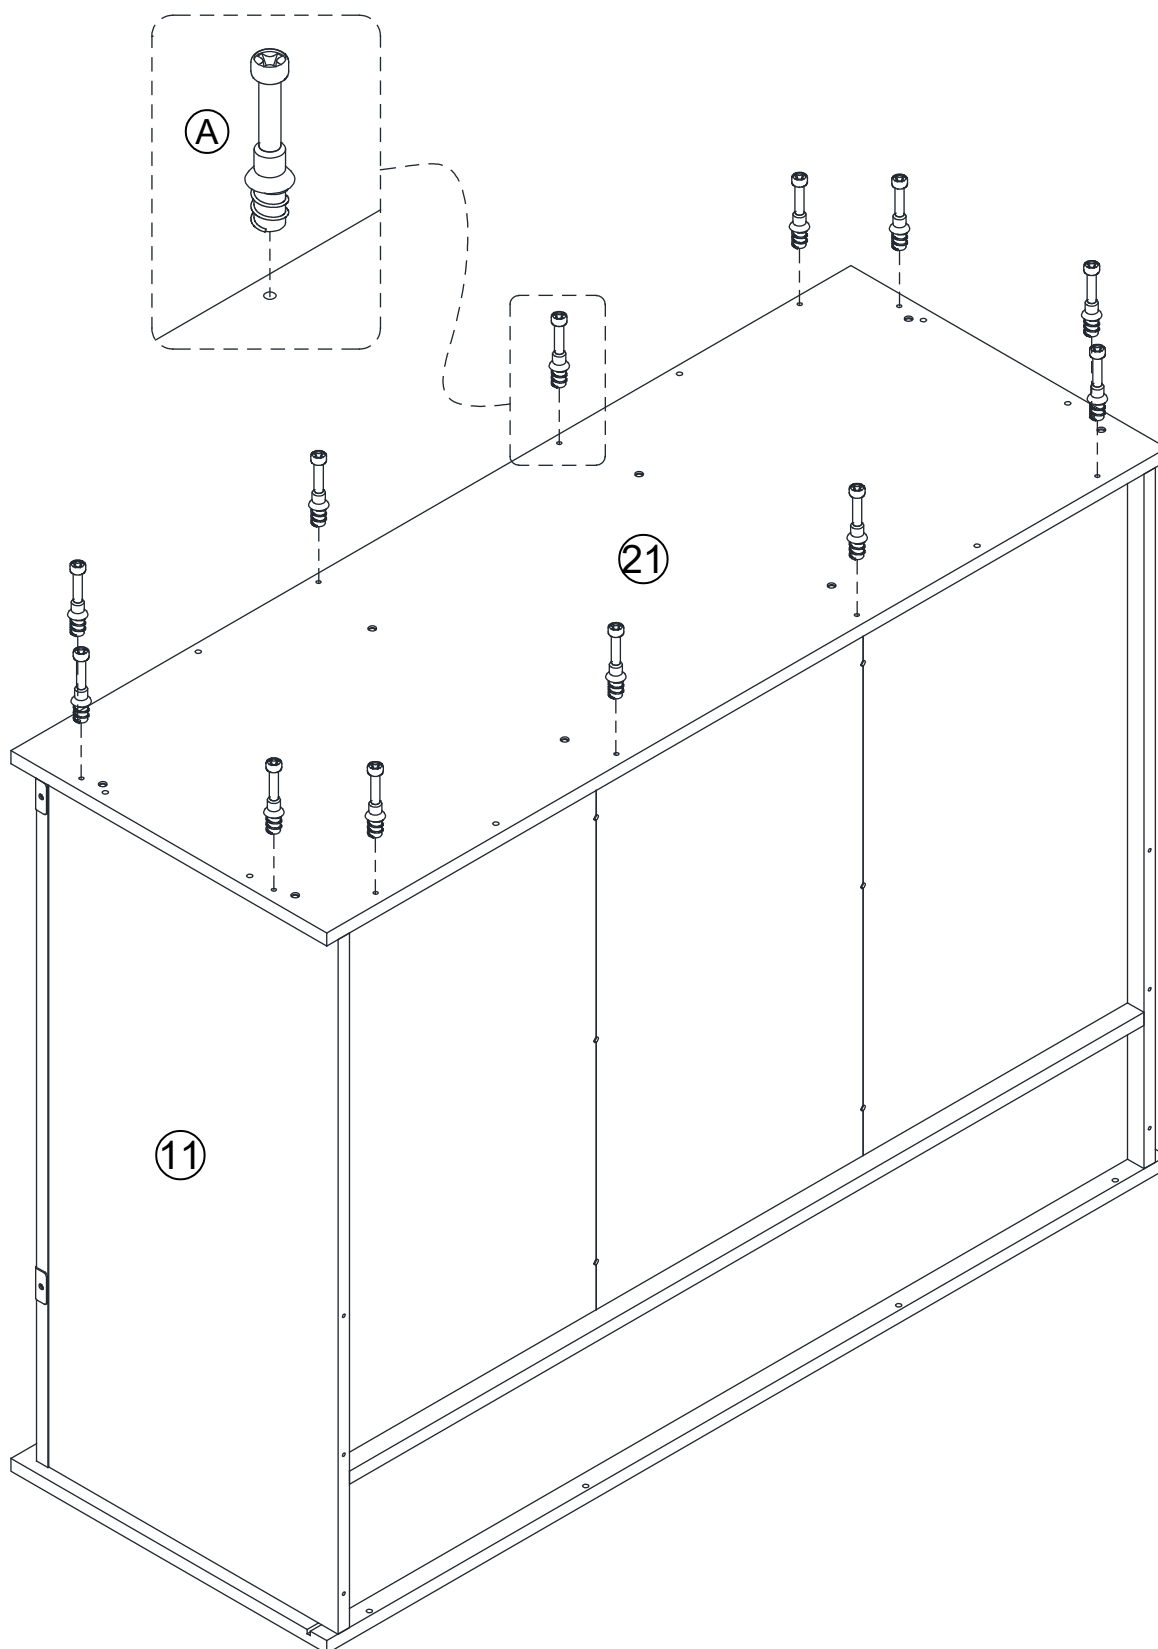


26

Ⓐ x 2pcs




Ⓓ x 6pcs

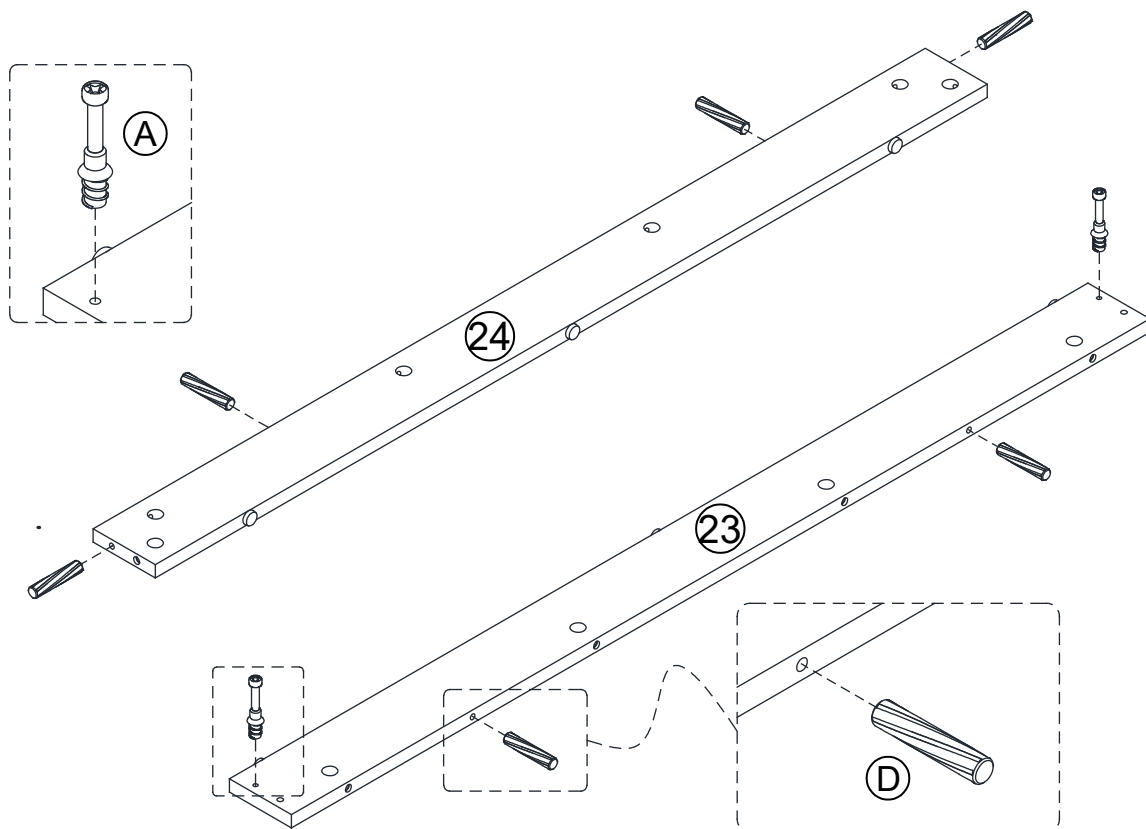


27

Ⓐ x 2pcs





Ⓓ x 6pcs

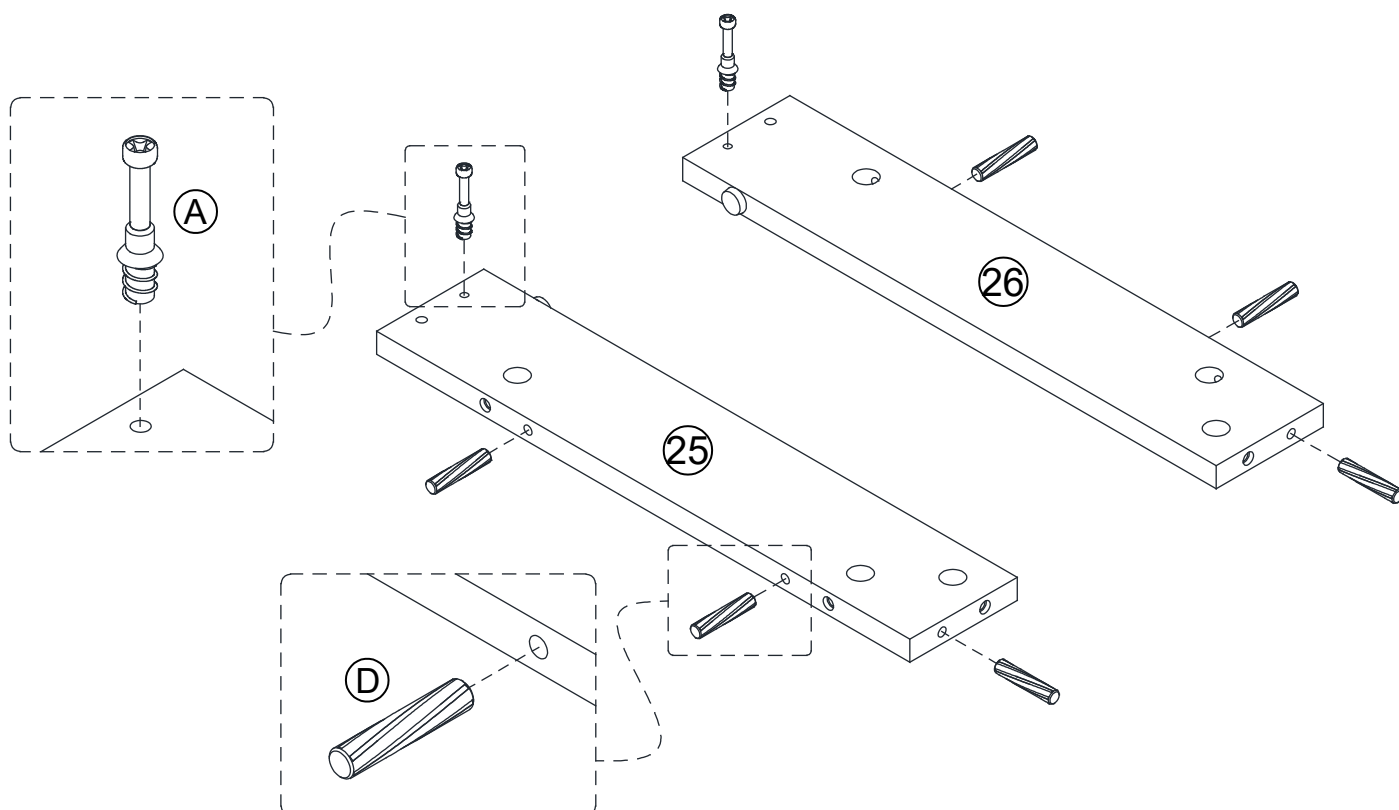



28

Ⓑ x 2pcs

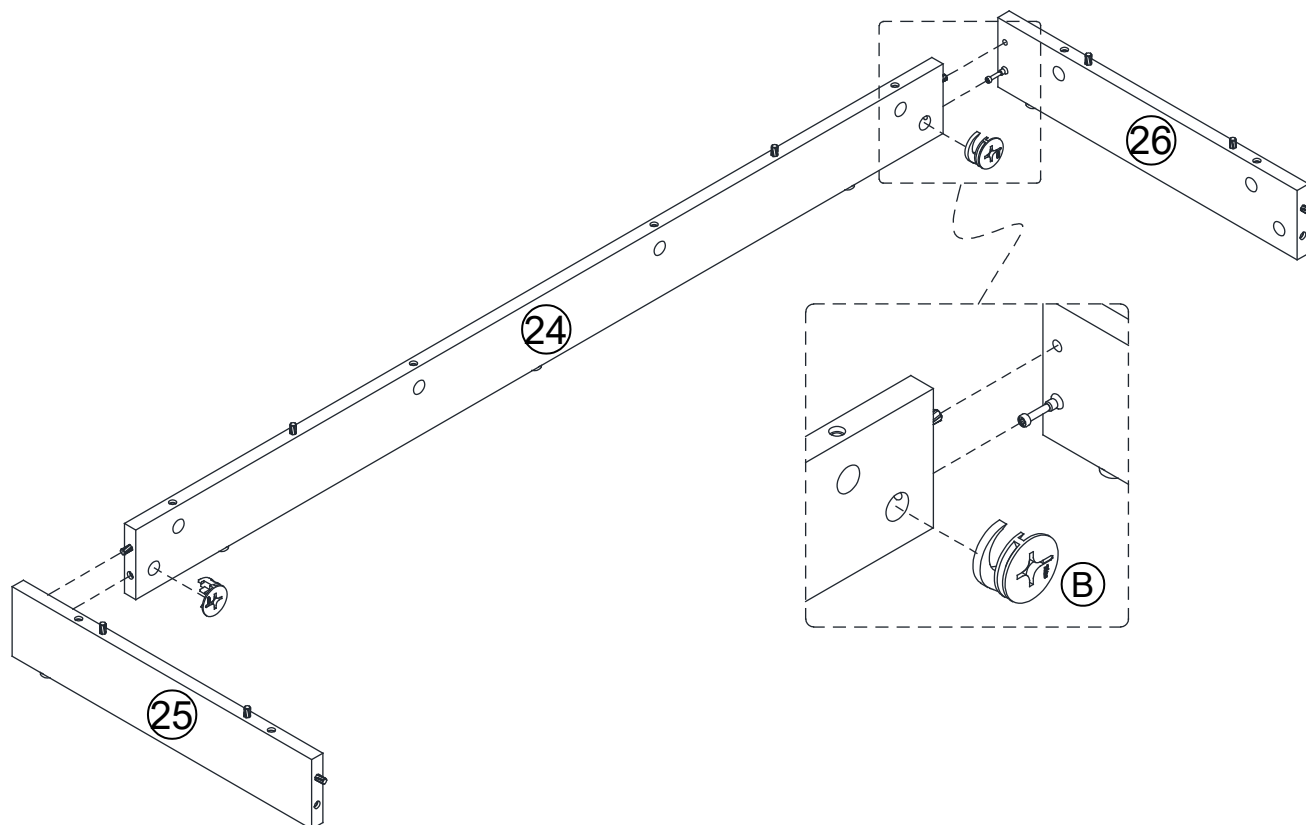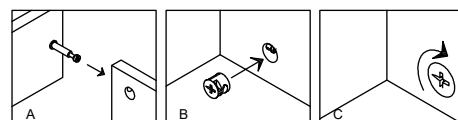





29

Ⓑ x 2pcs

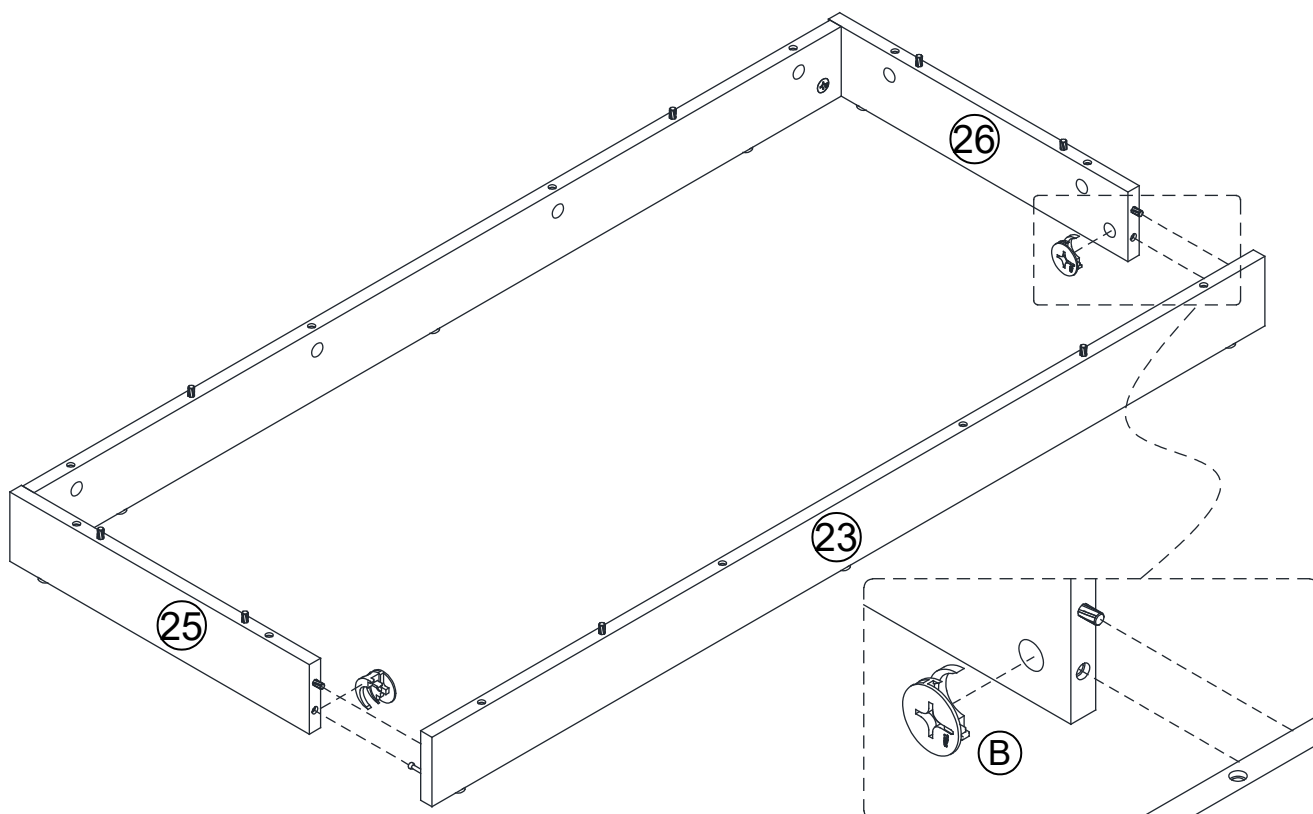

30


Ⓑ x 12pcs

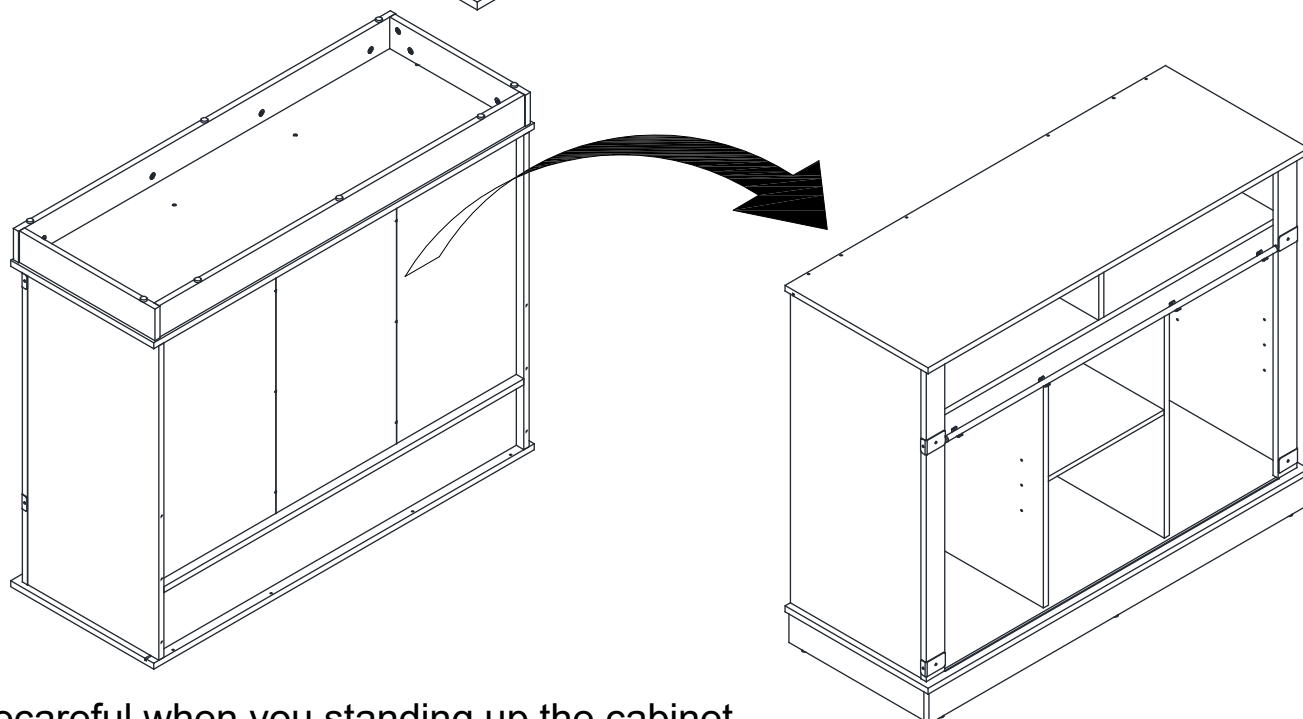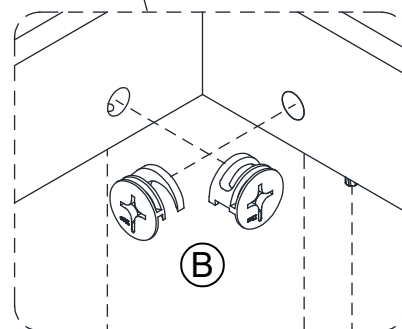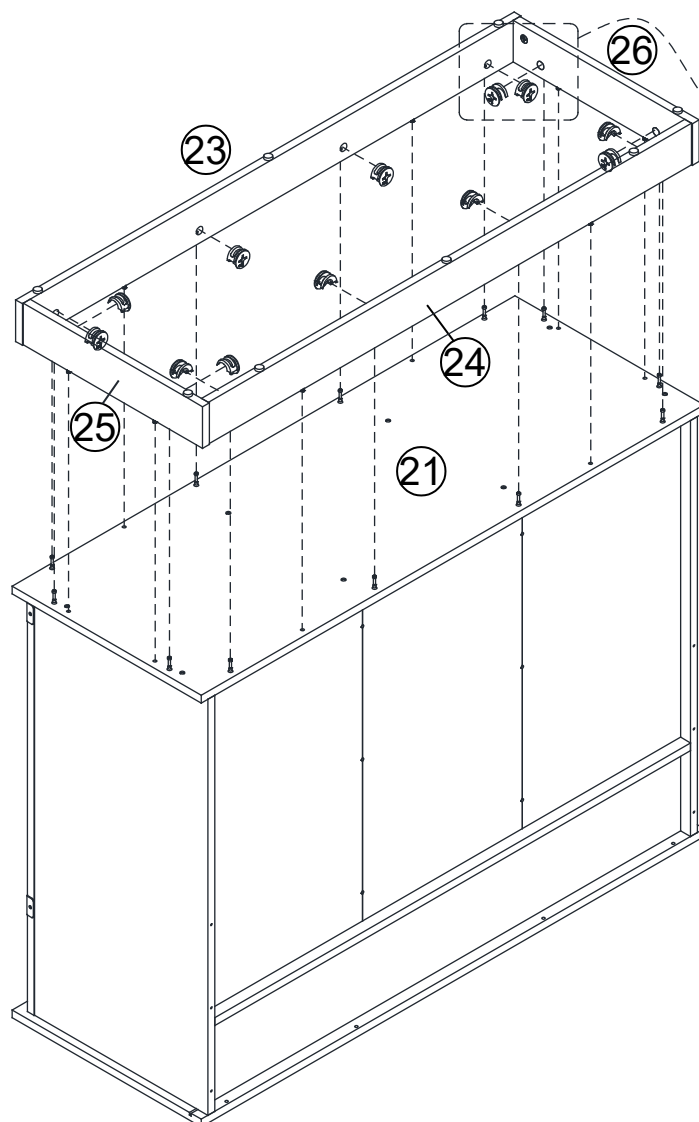

Becareful when you standing up the cabinet


31

ⓓ x 4pcs

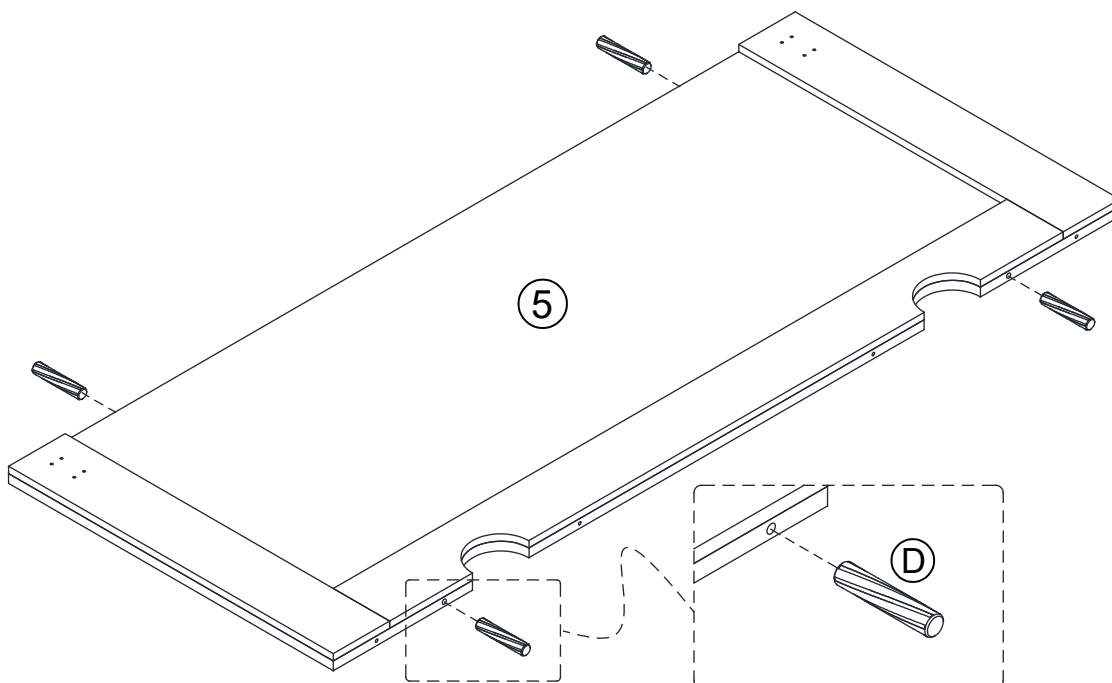



32

Ⓦ x 8pcs

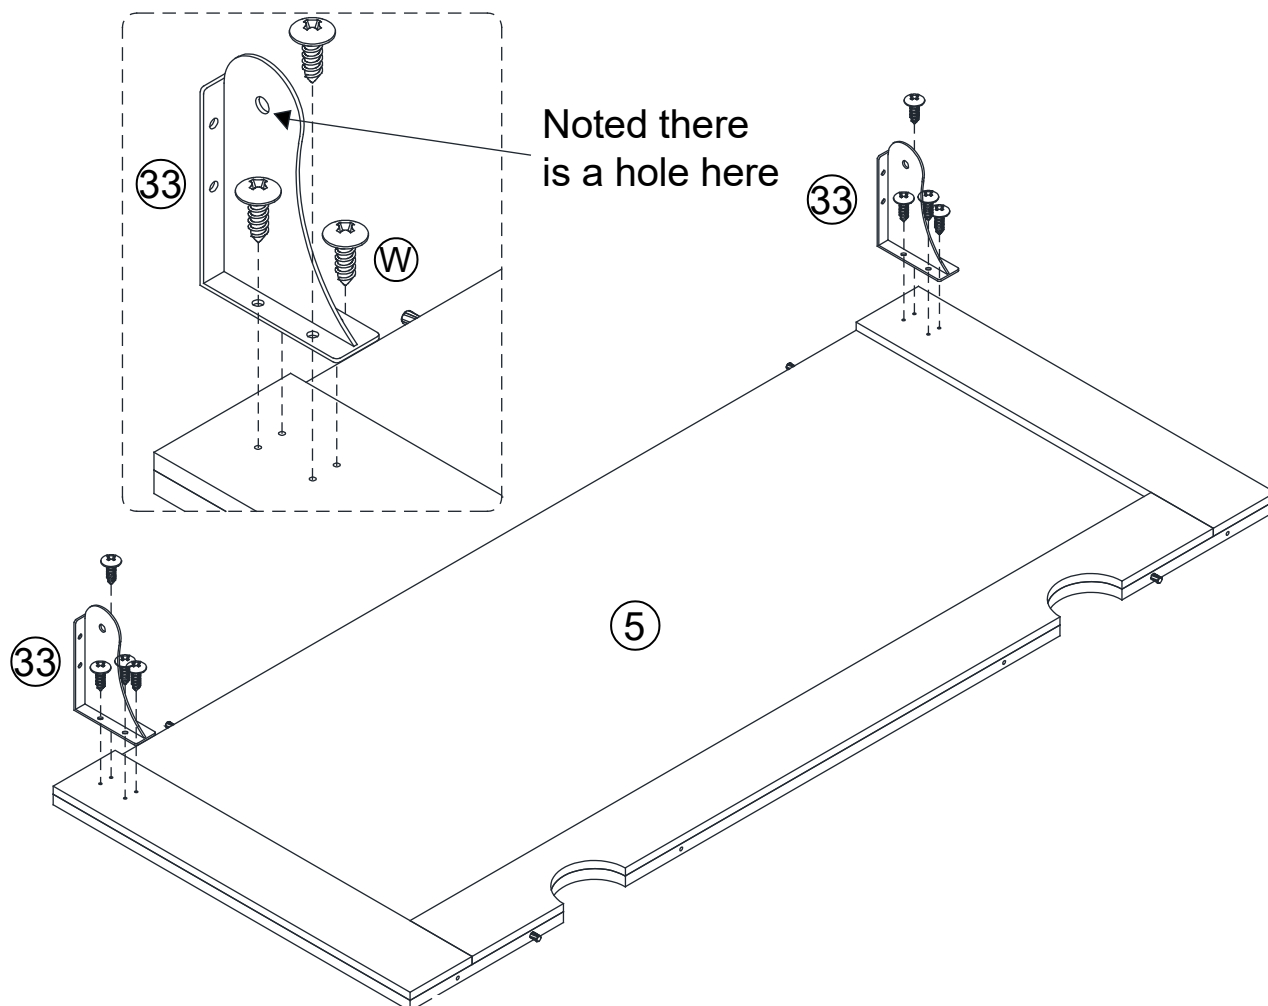


33

Ⓐ x 4pcs

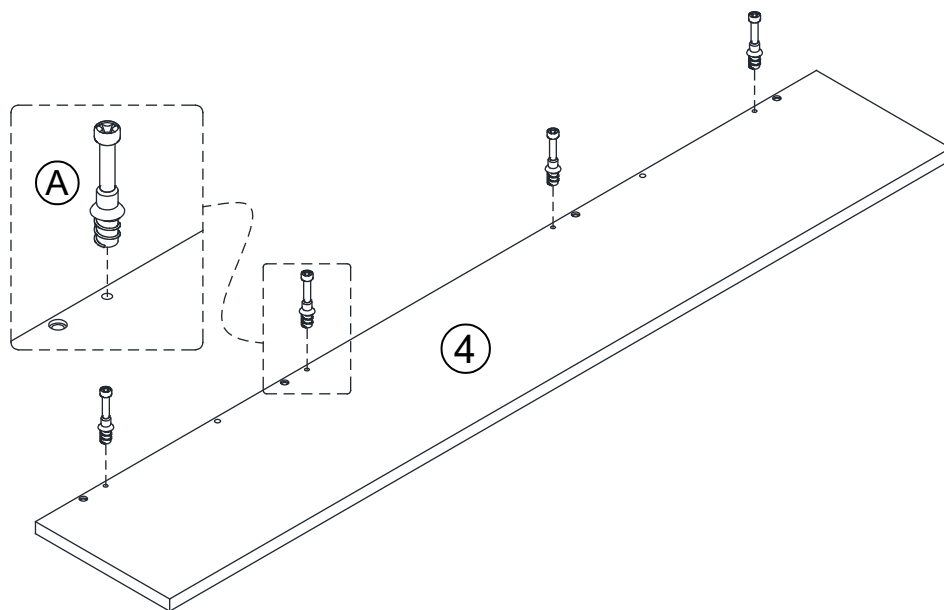


34

Ⓔ x 4pcs





Ⓦ x 8pcs

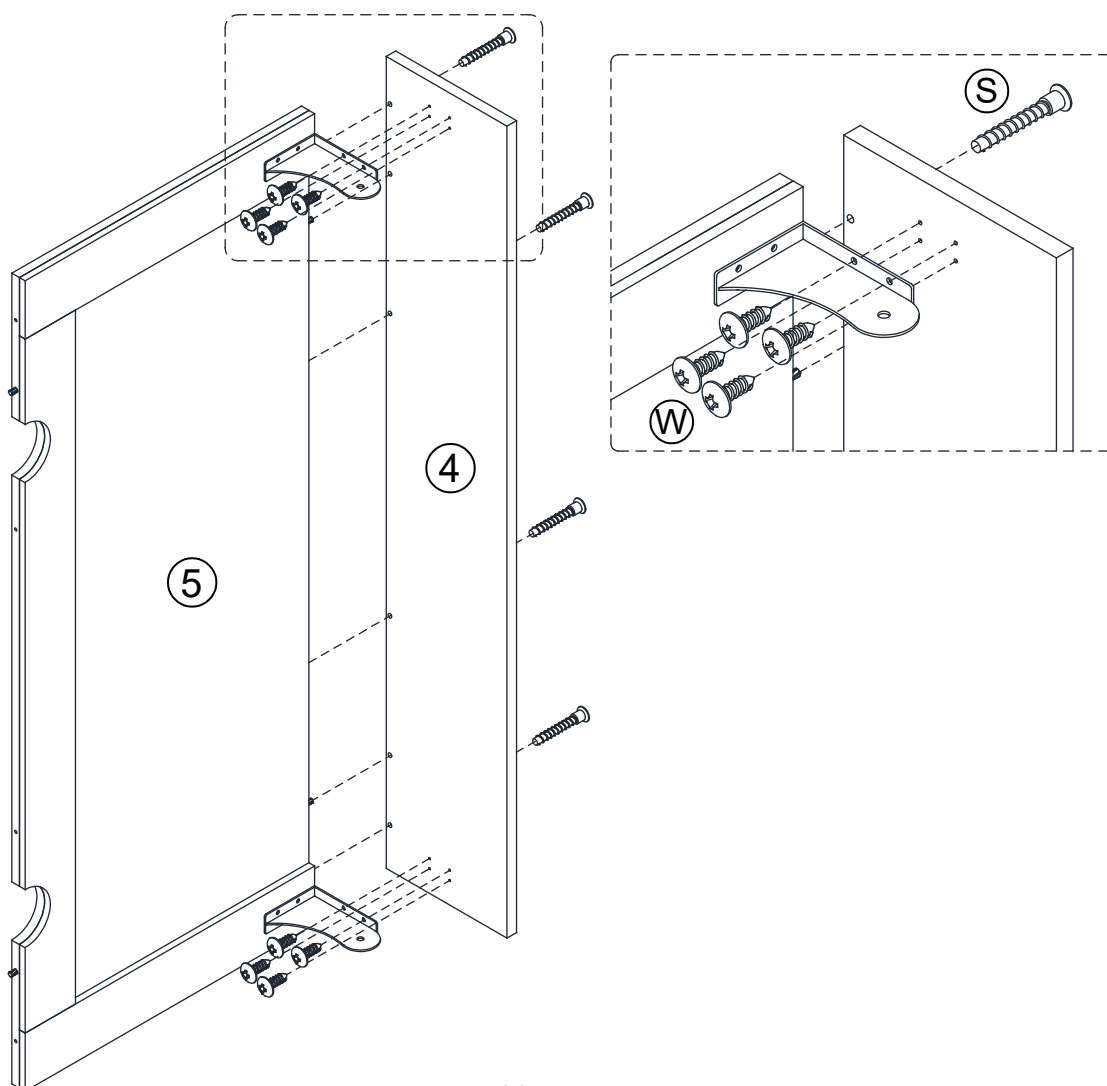



35

Ⓡ x 2pcs

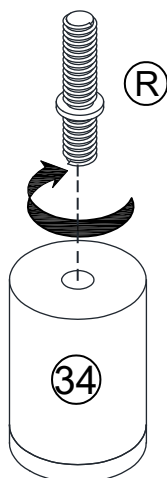


36

x 2

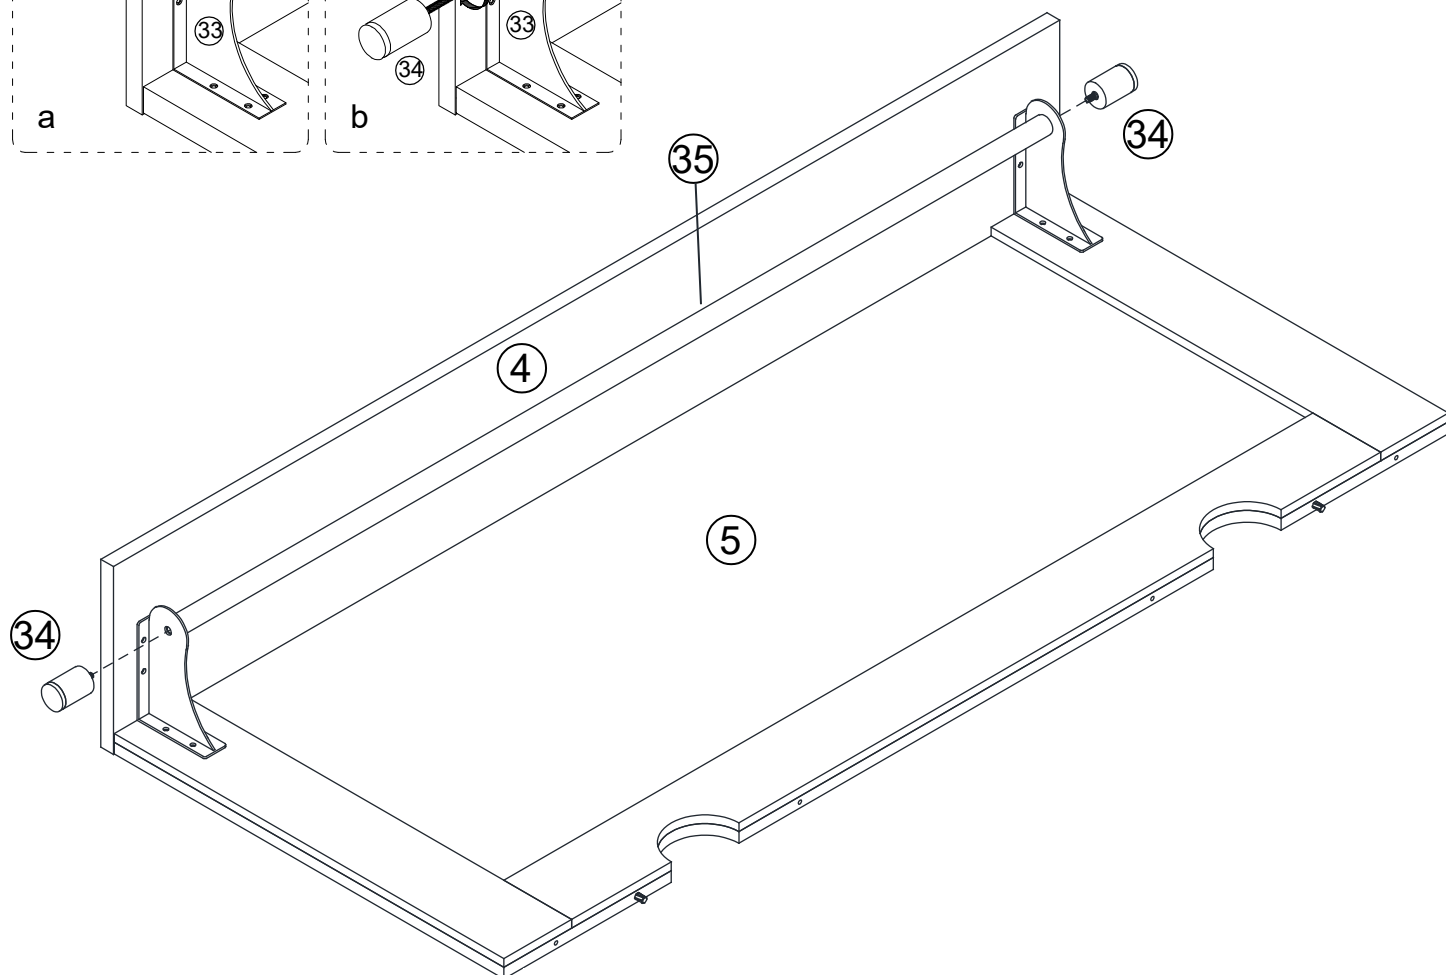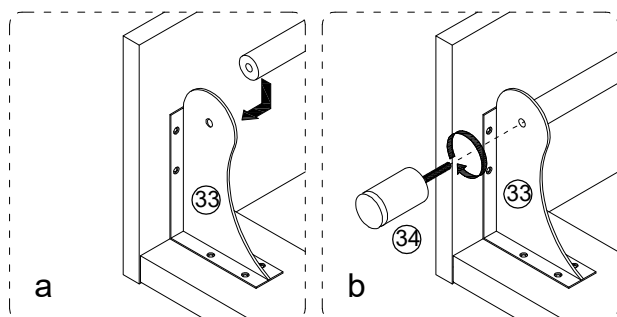


37

Ⓢ x 4pcs




Ⓟ x 1pcs

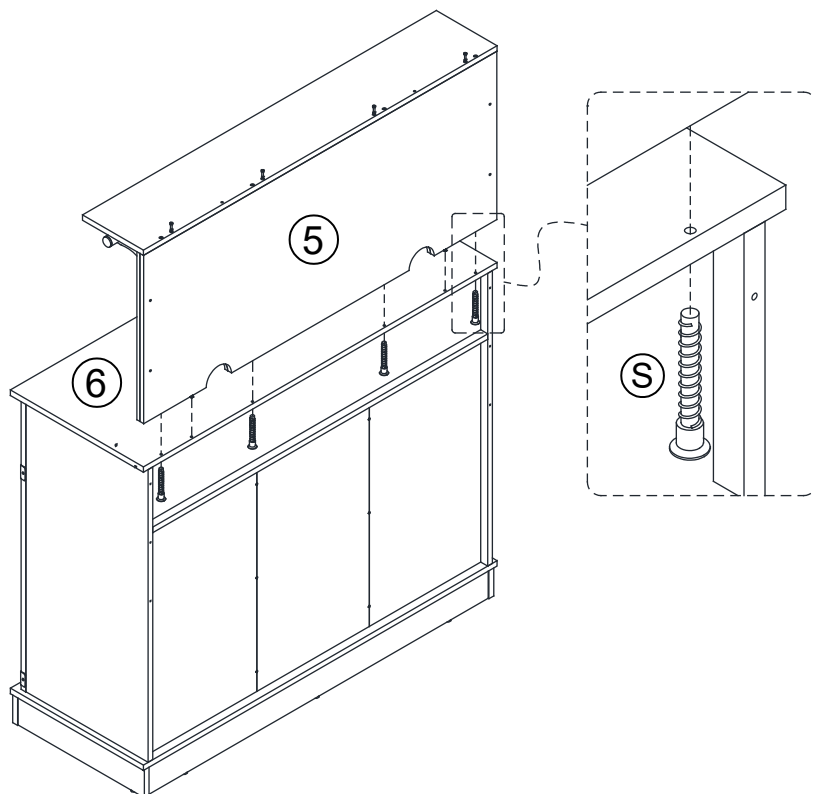


38

Ⓢ x 6pcs




Ⓣ x 4pcs



Ⓜ x 1pcs





Ⓟ x 1pcs

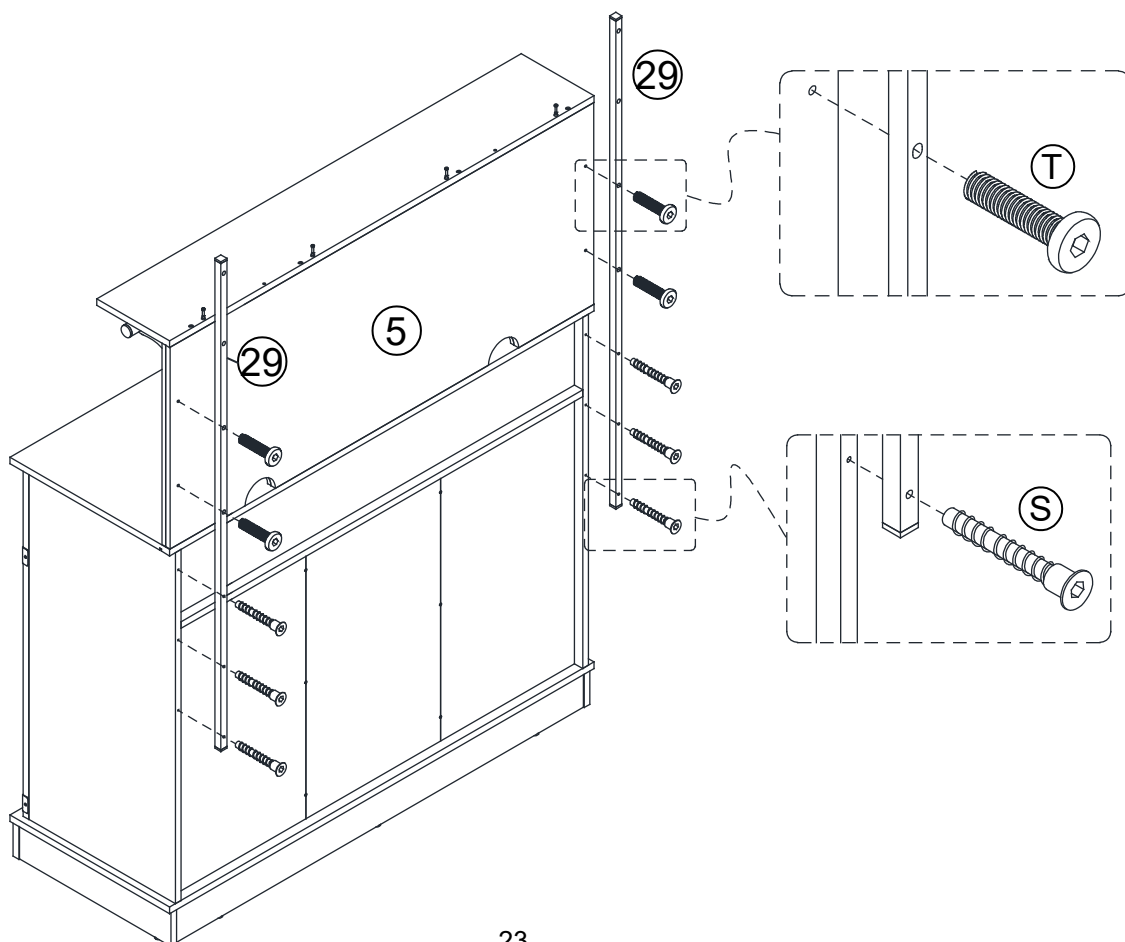


39

Ⓐ x 4pcs

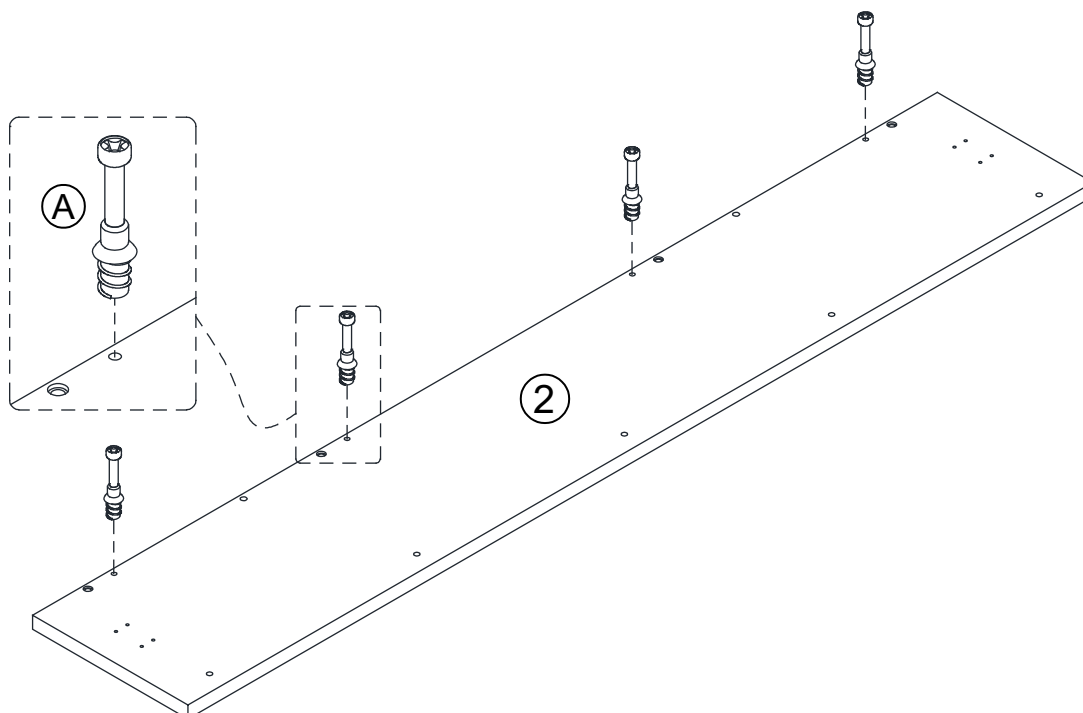



40

ⓤ x 5pcs



Ⓚ x 1pcs

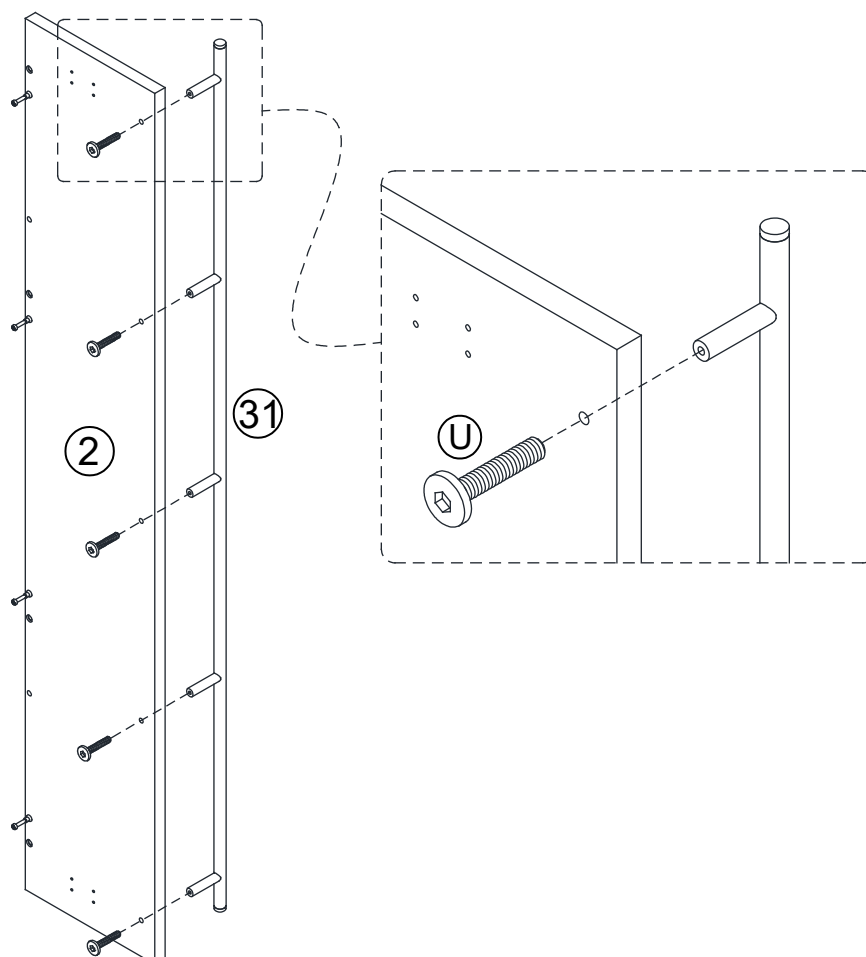



41

Ⓜ x 2pcs



ⓓ x 2pcs

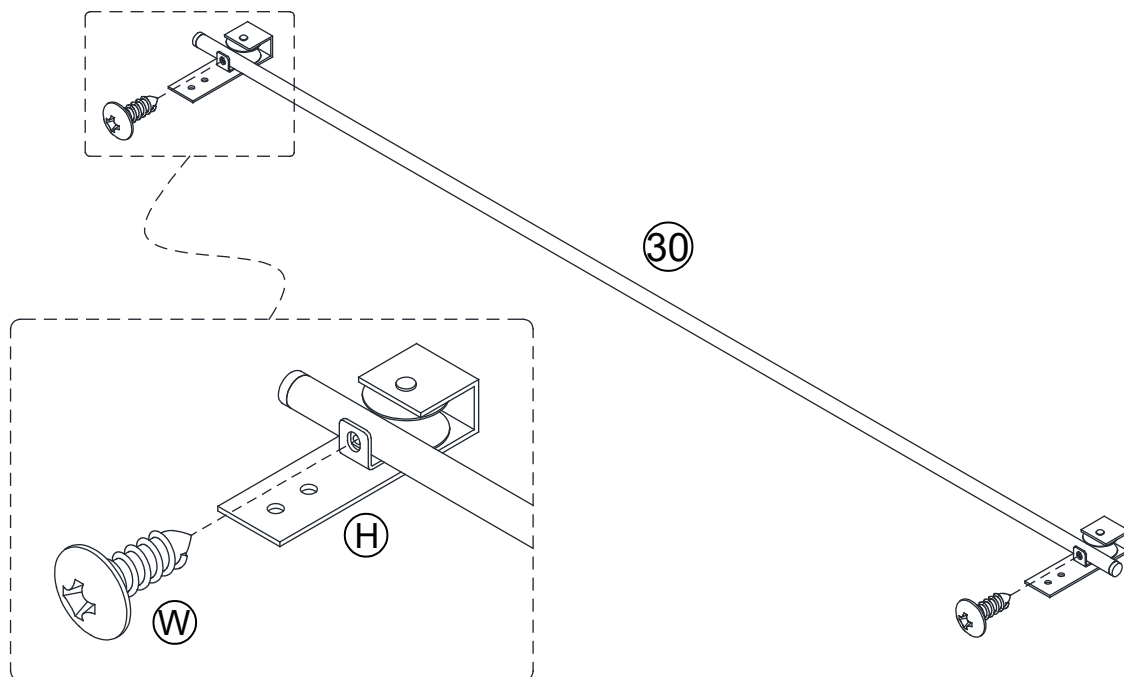


42

Ⓜ x 4pcs






ⓓ x 2pcs

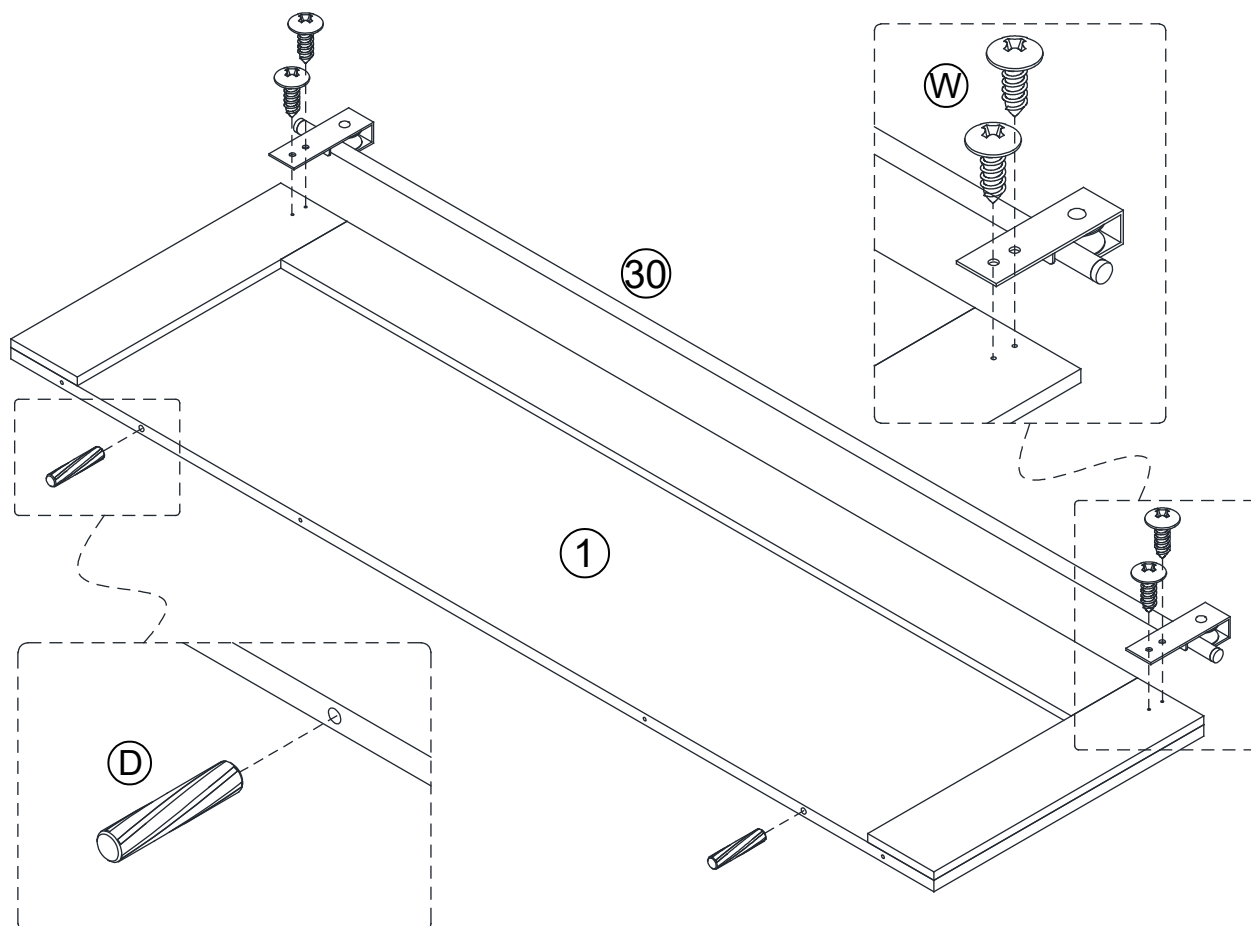

43

Ⓢ x 4pcs

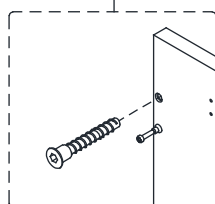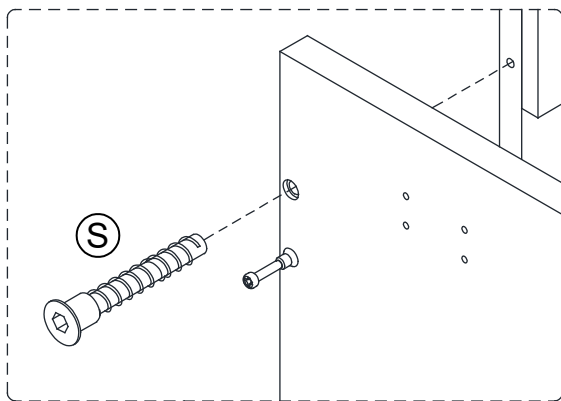


②






①

44

Ⓜ x 8pcs



ⓓ x 2pcs

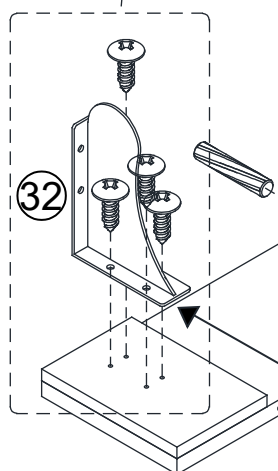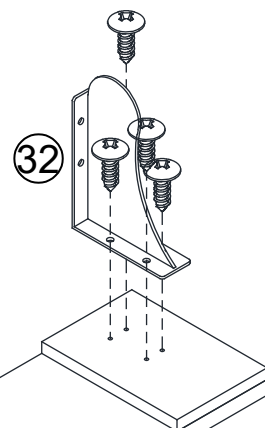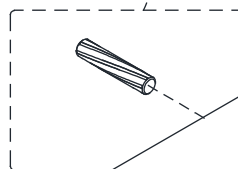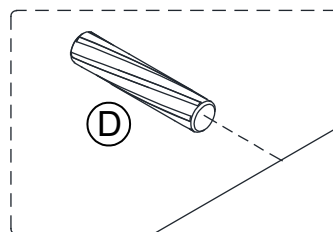
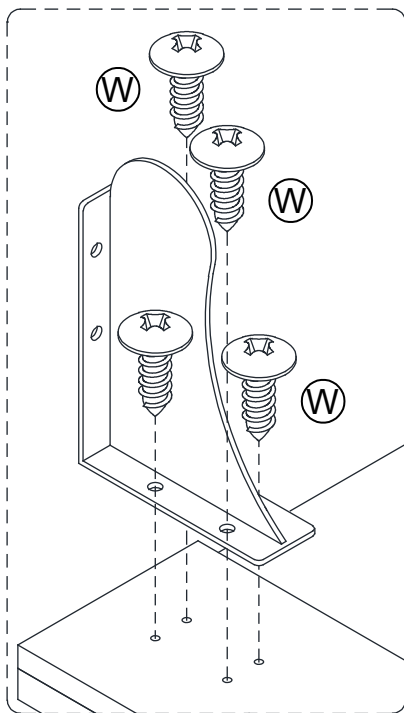


Noted the direction

3


45

Ⓑ x 4pcs

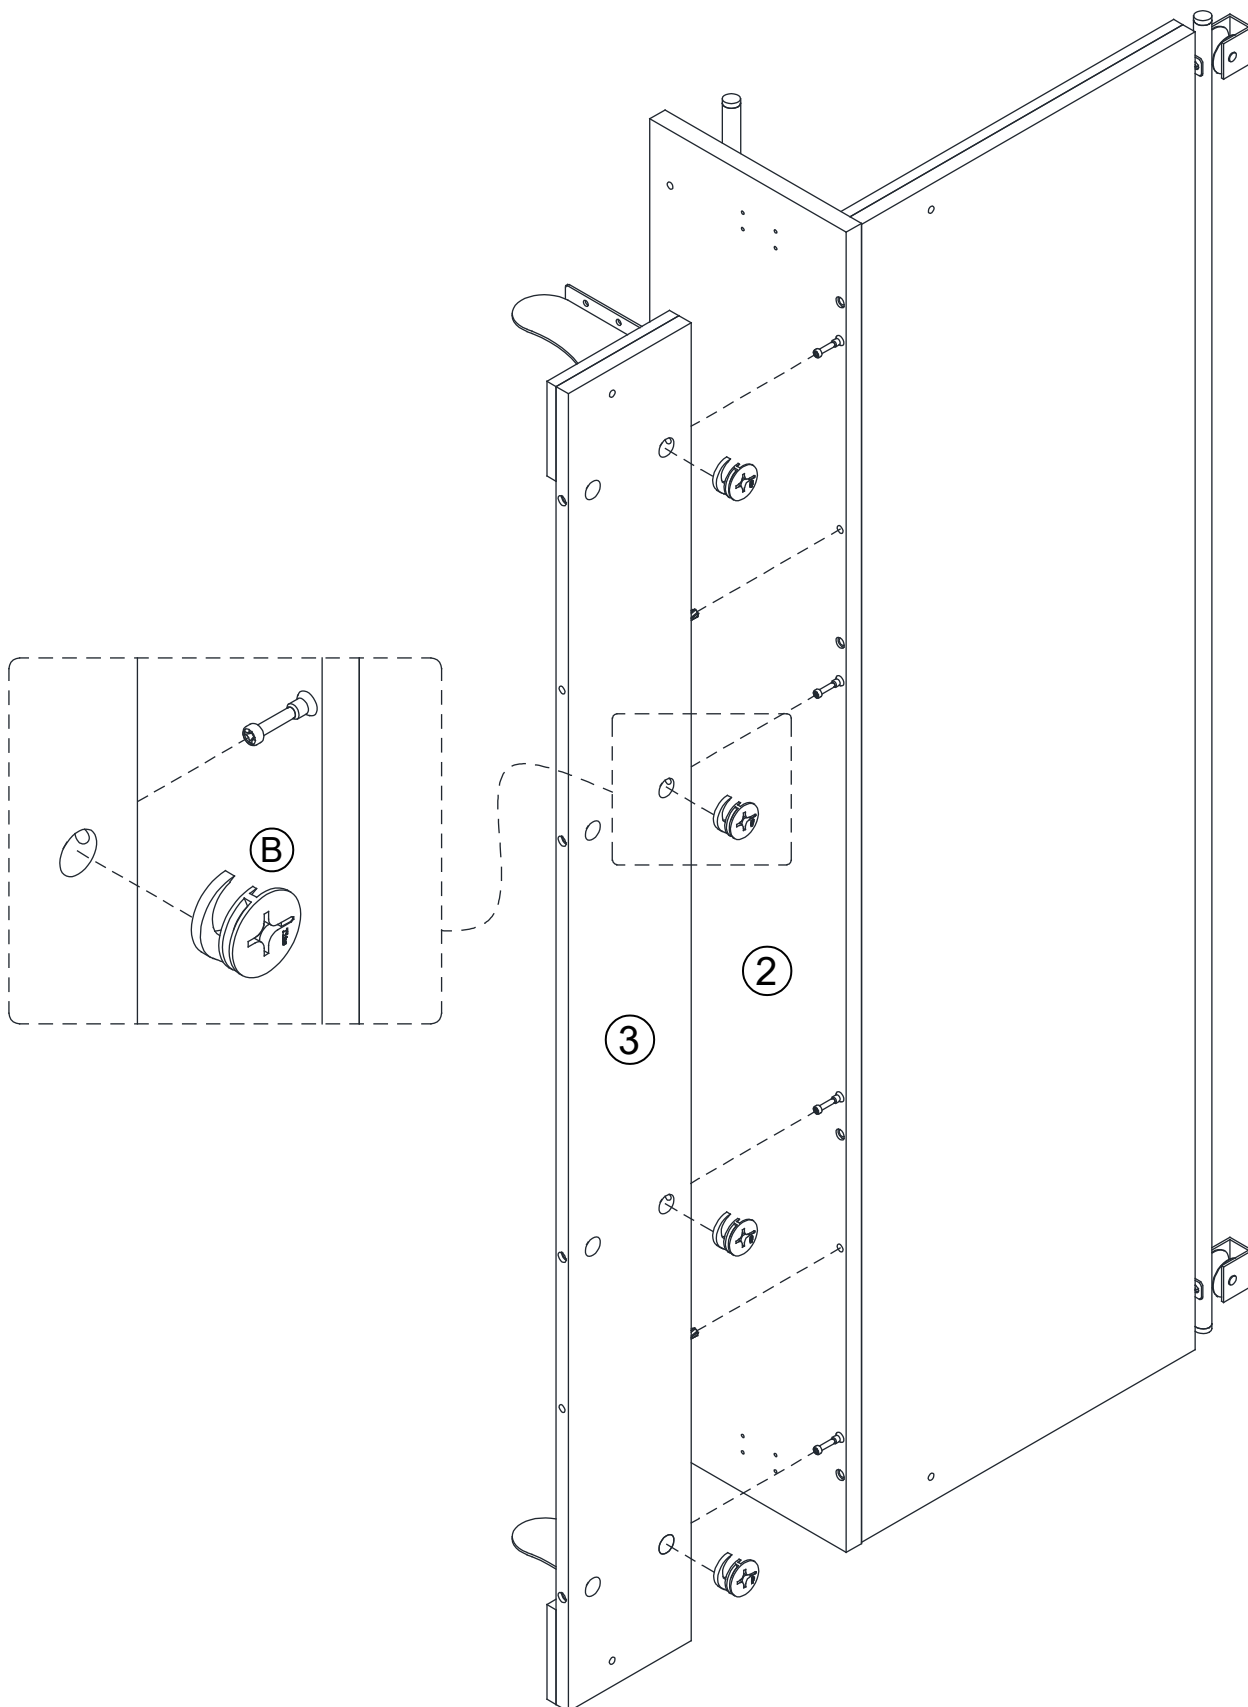


46

W x 8pcs





D x 2pcs

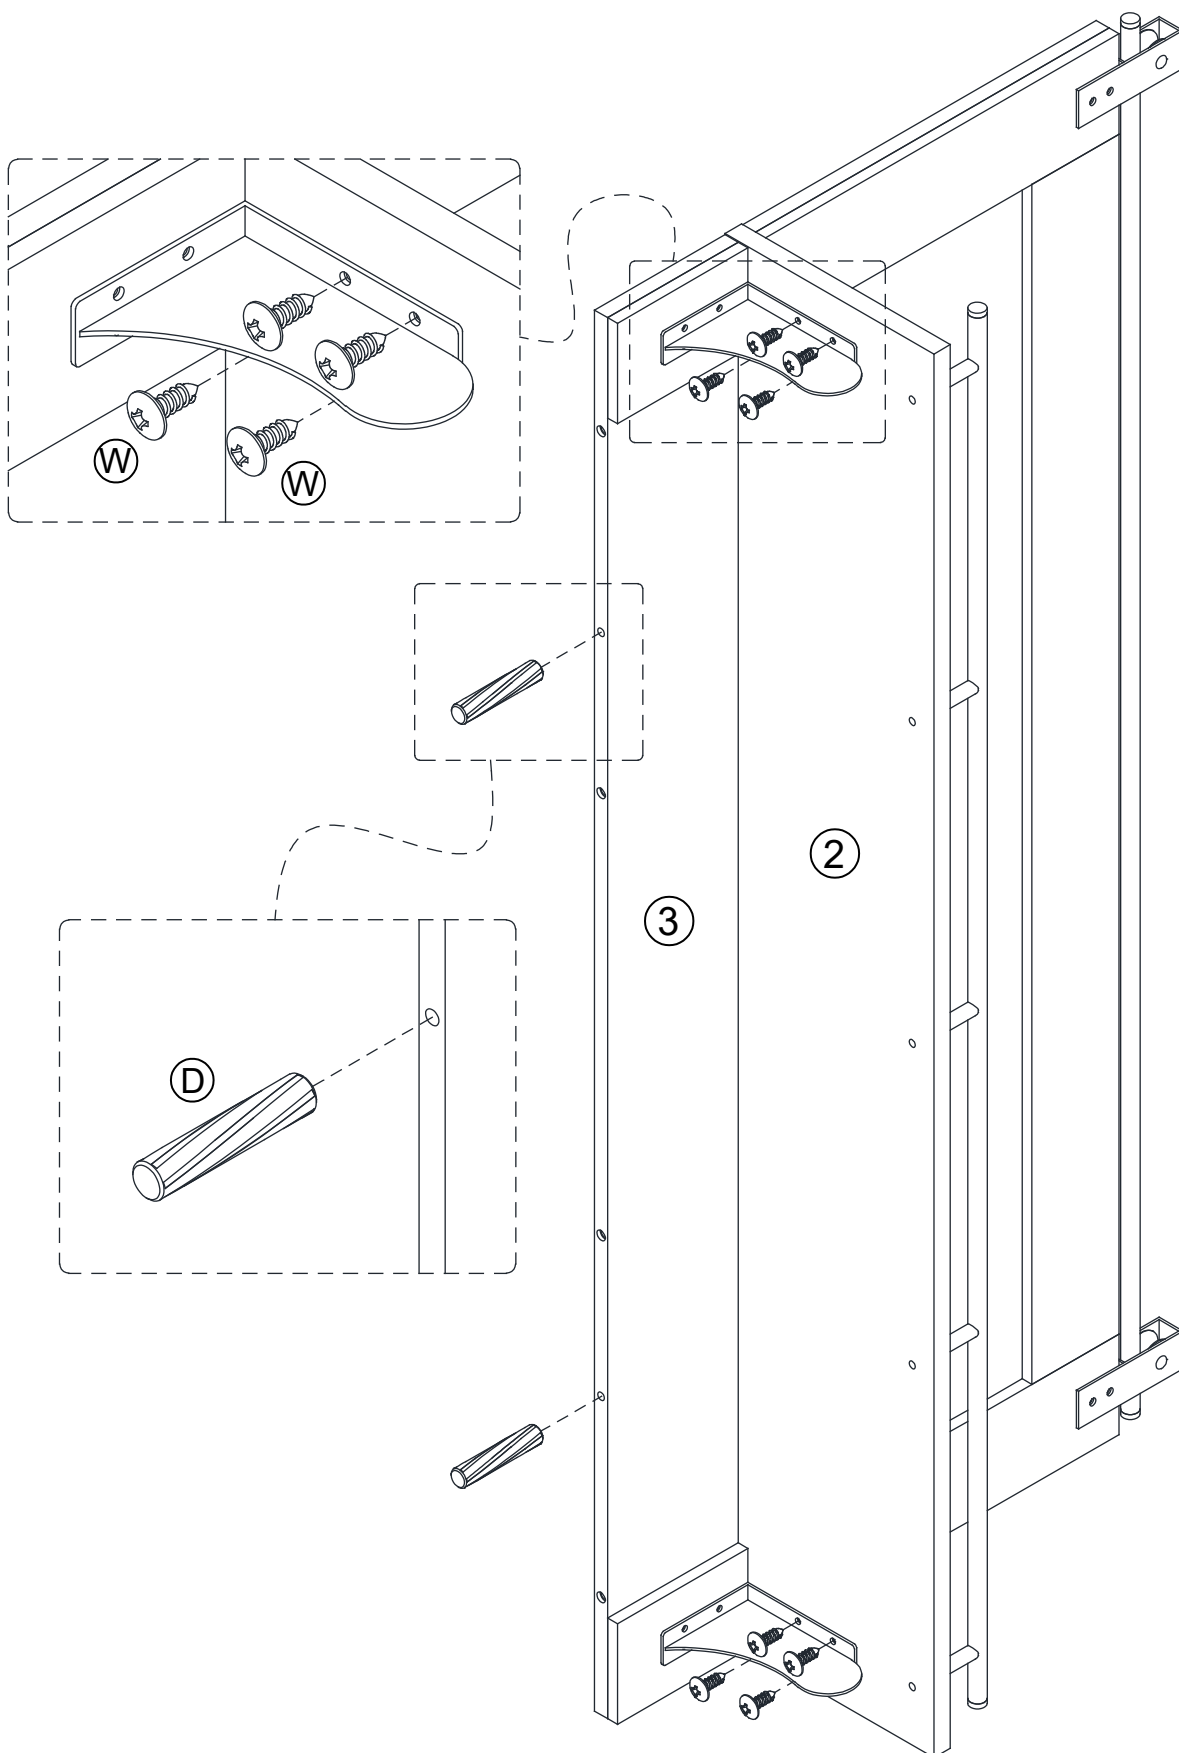



47

Ⓑ x 4pcs

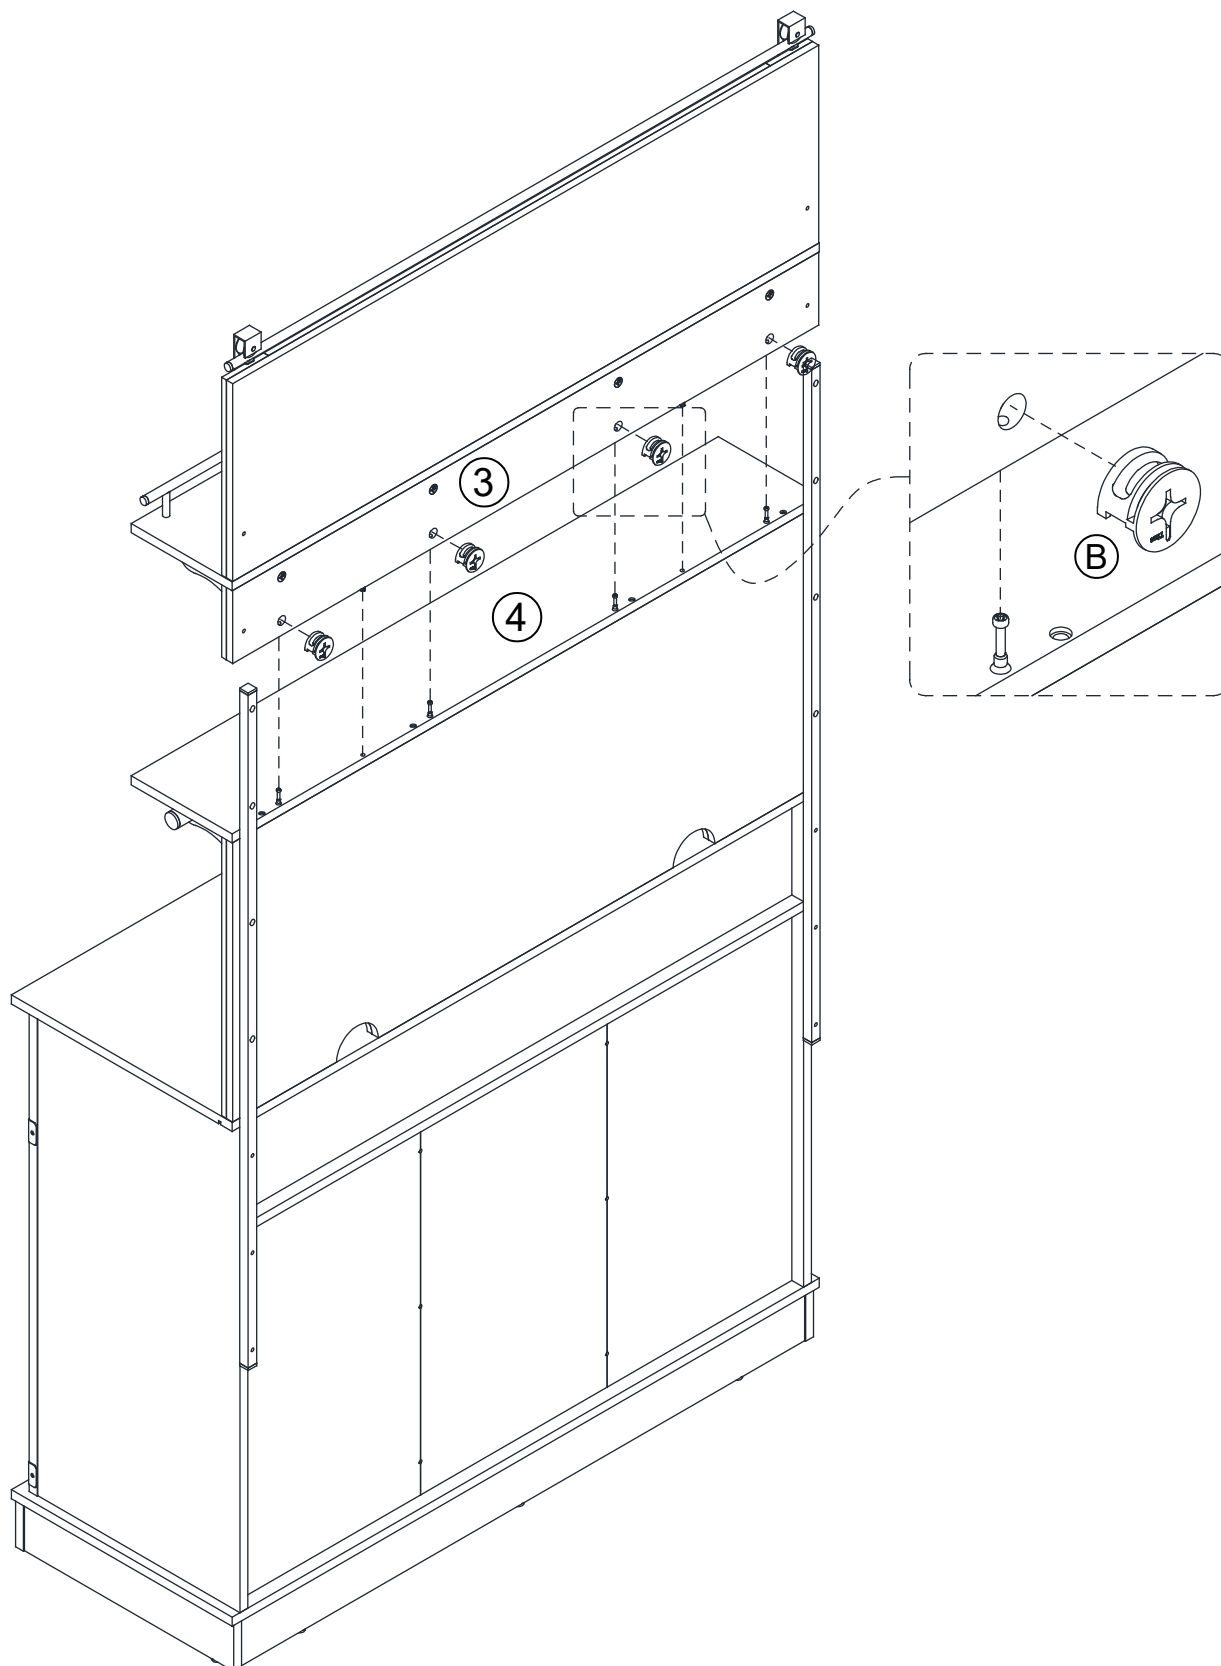





48

Ⓣ x 4pcs

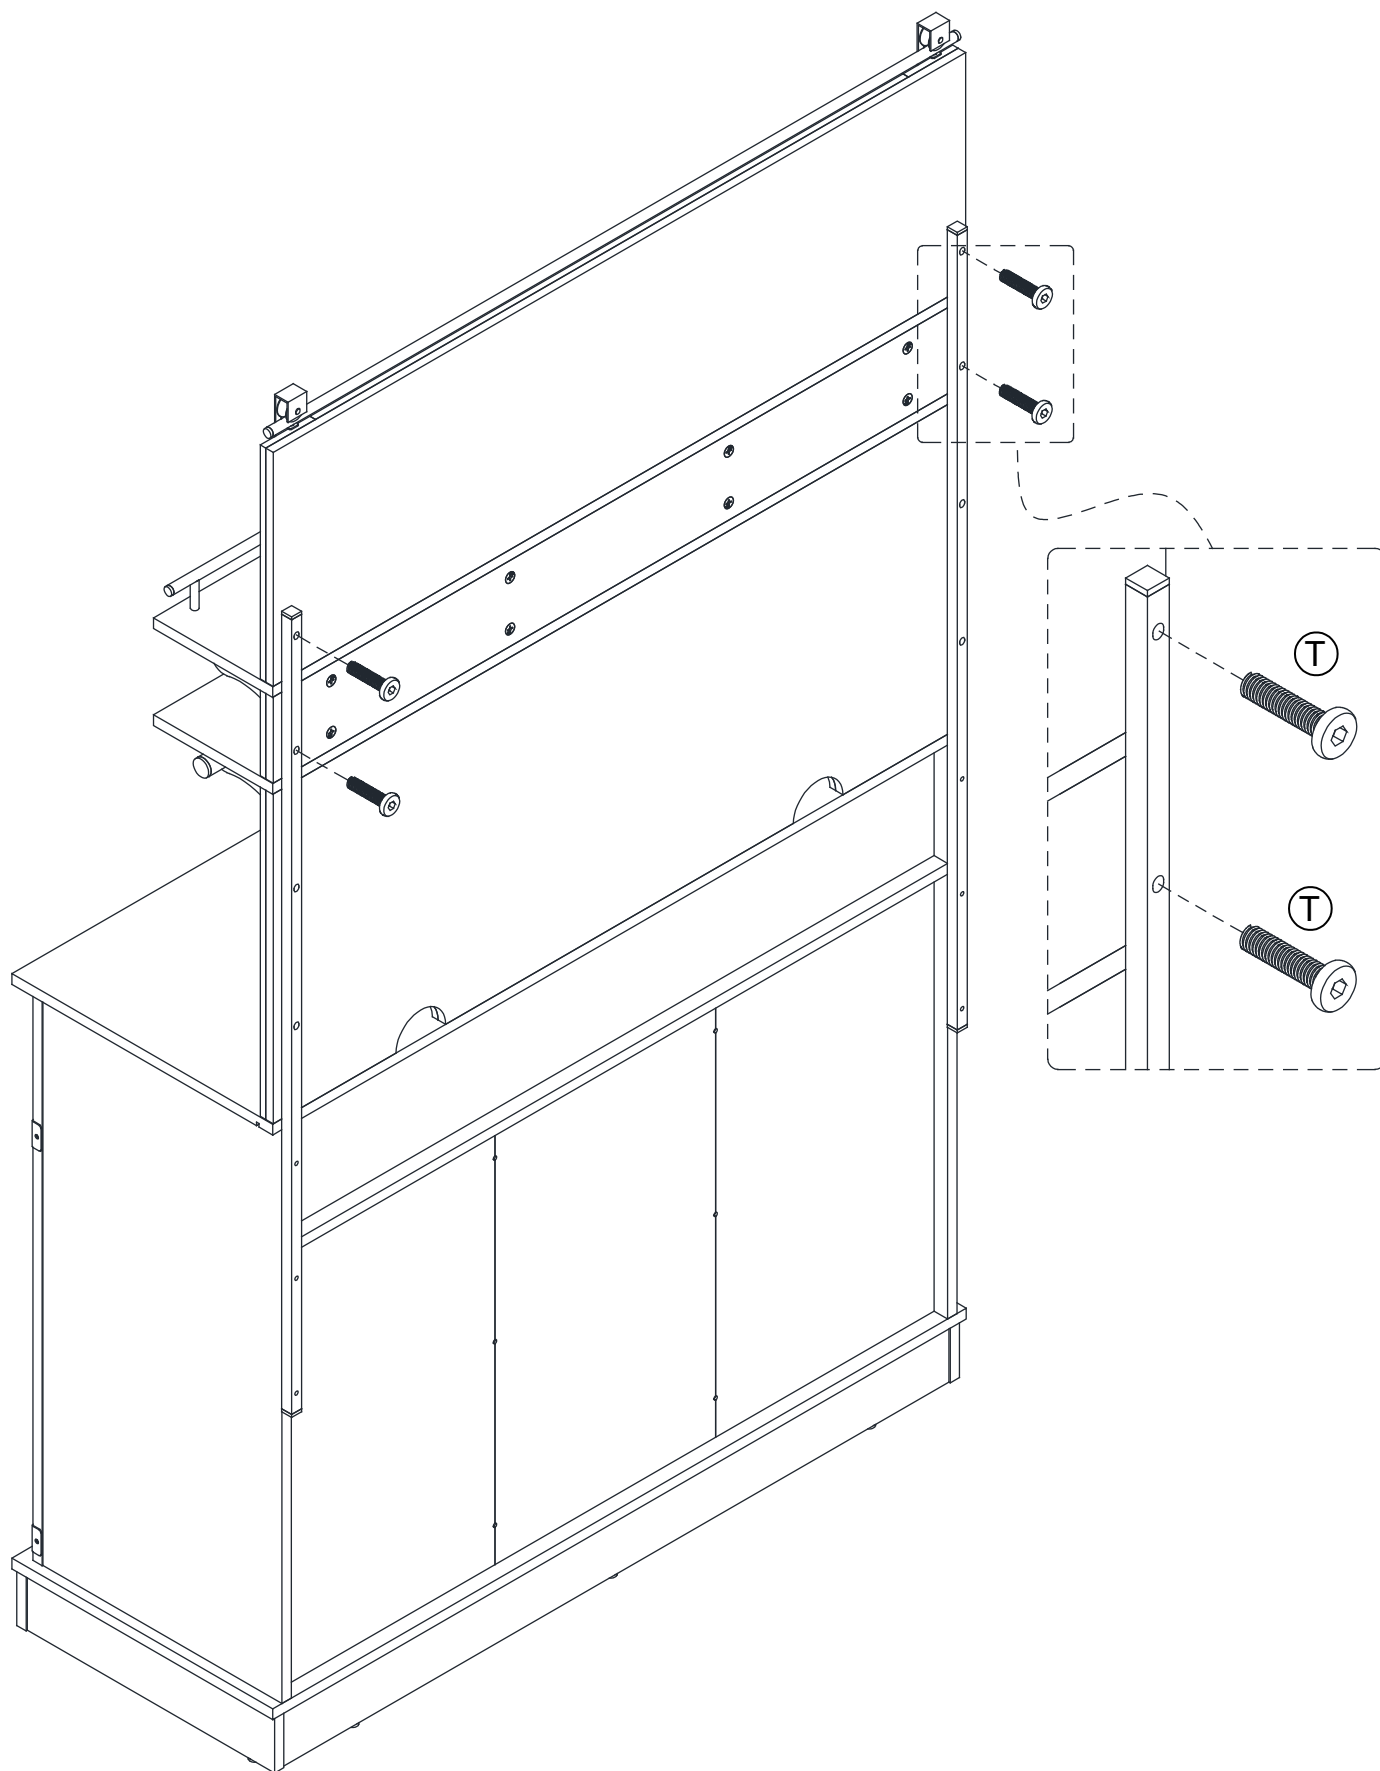


49

ⓐ x 8pcs

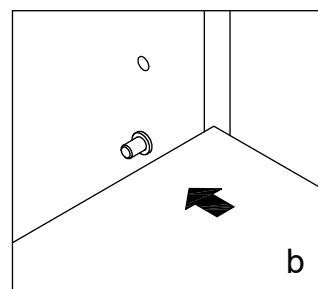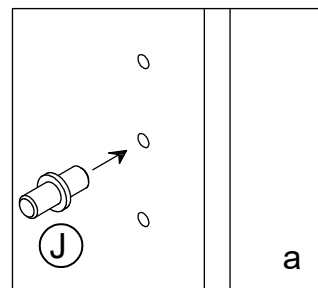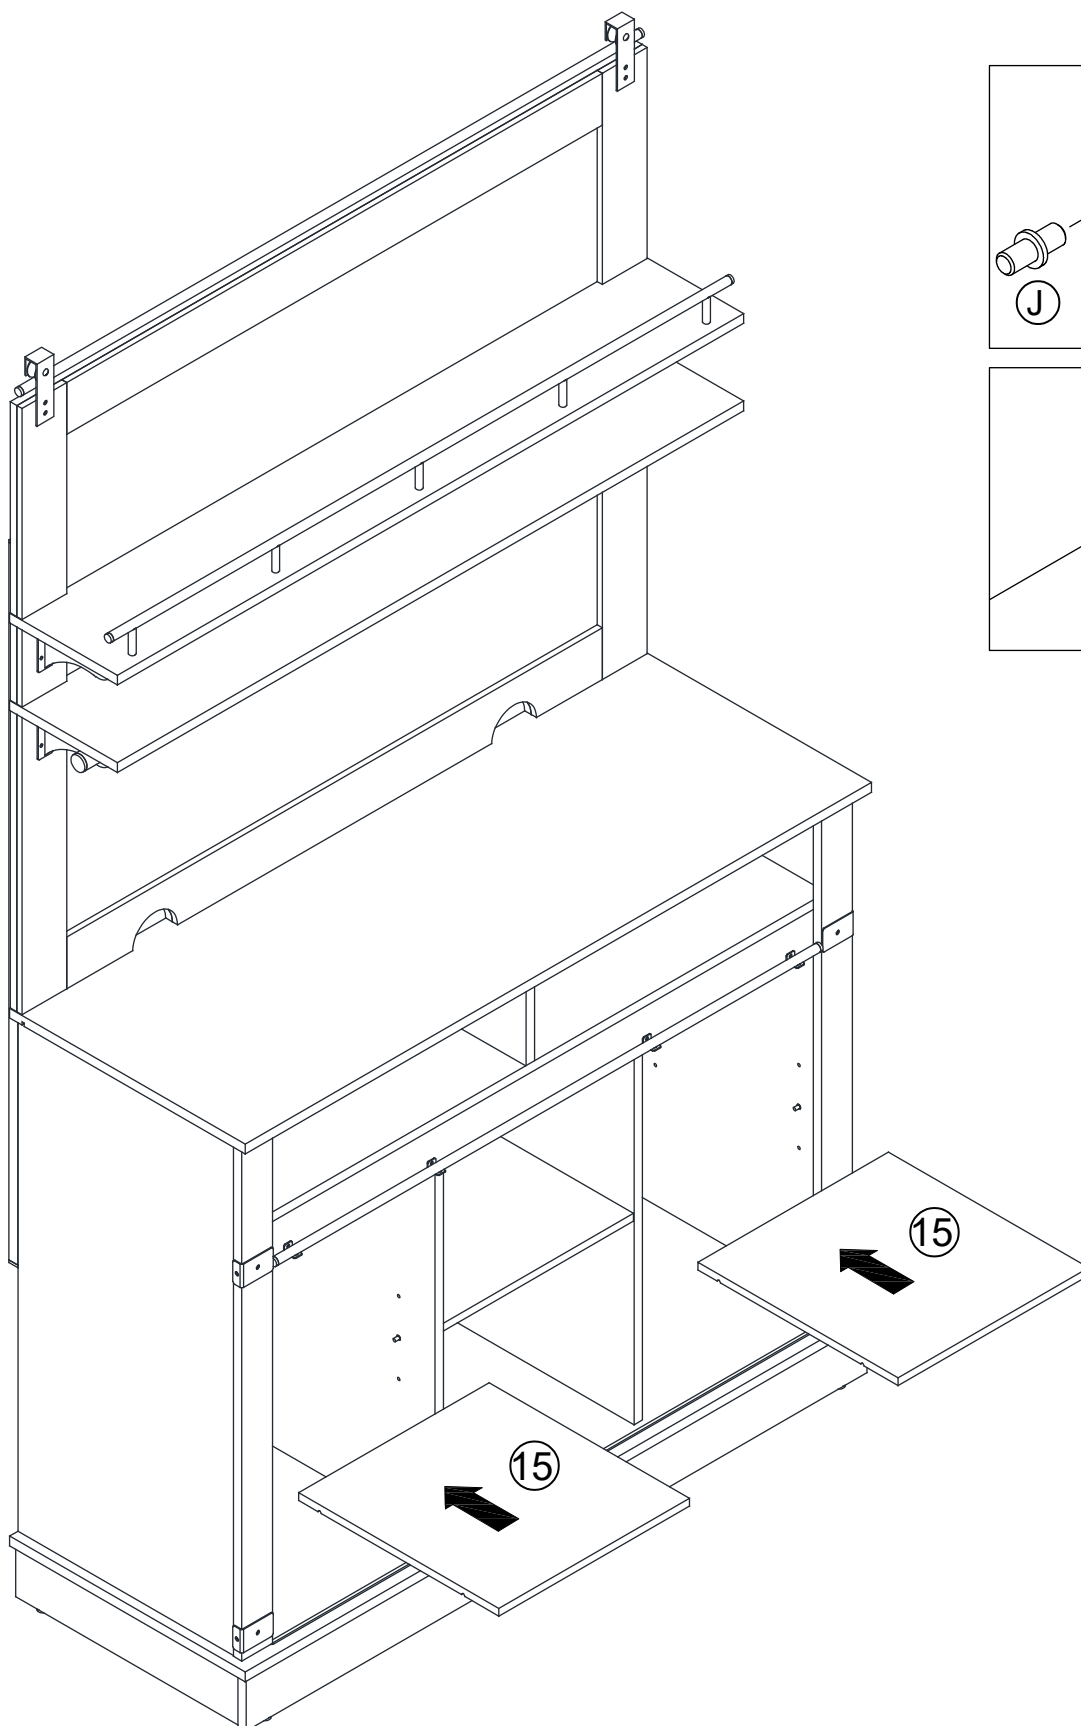



50


Y x 8pcs



G x 4pcs

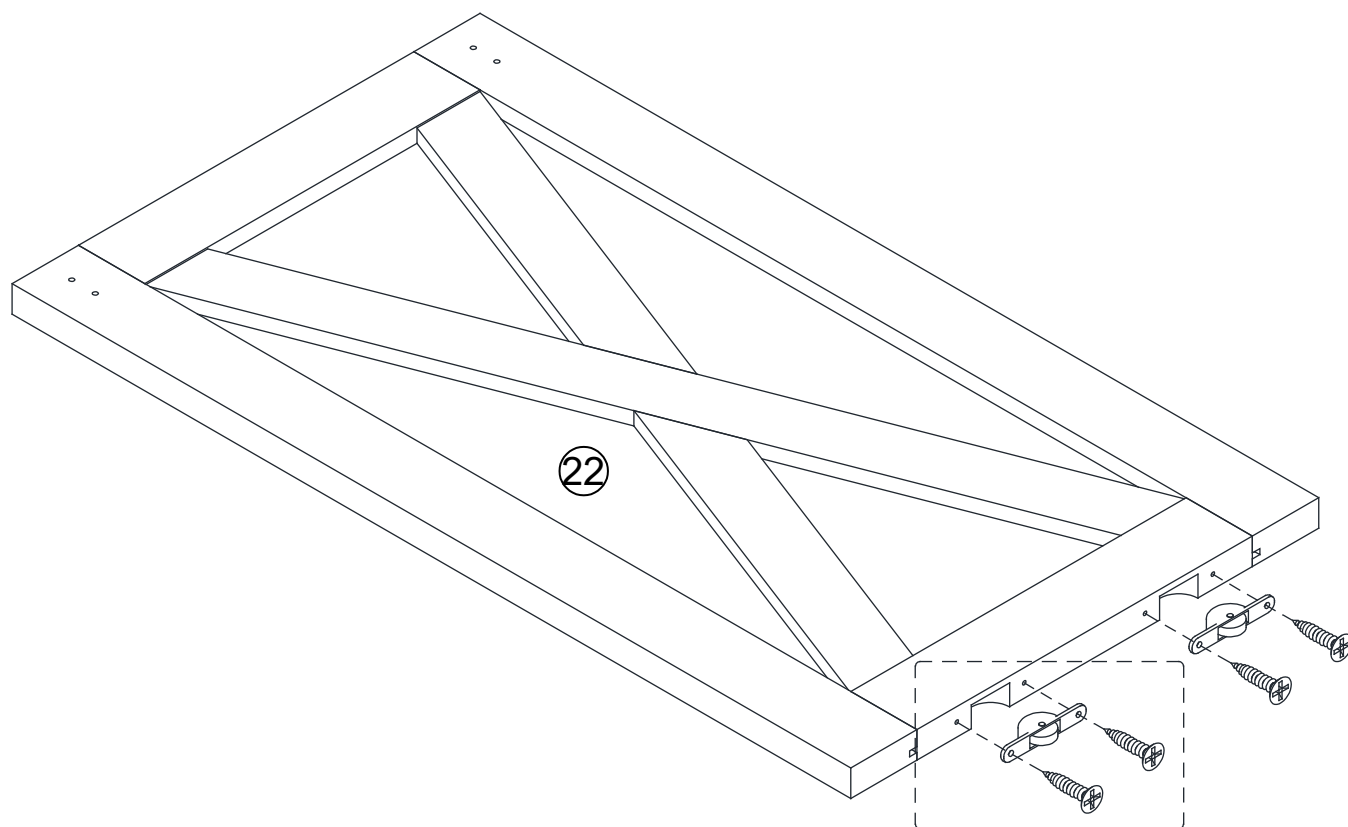

x 2




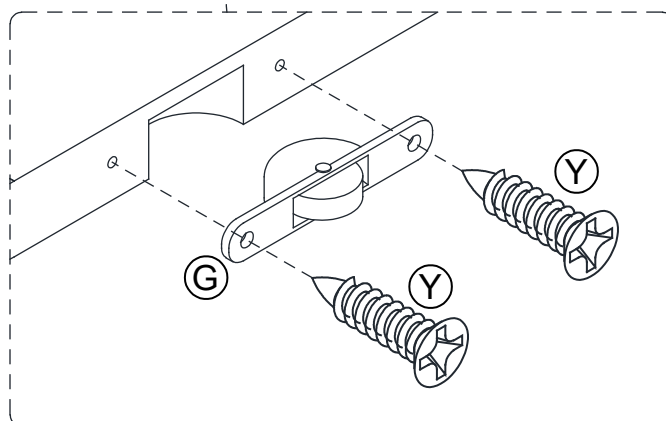


51

Ⓢ x 8pcs




ⓔ x 4pcs

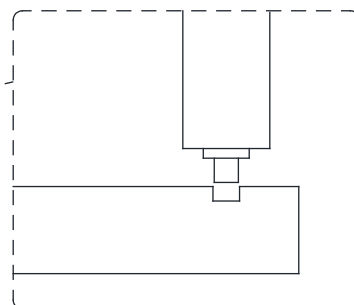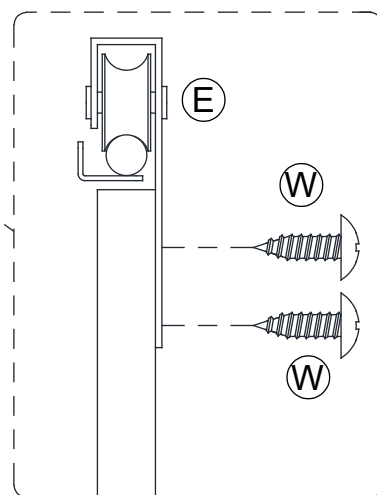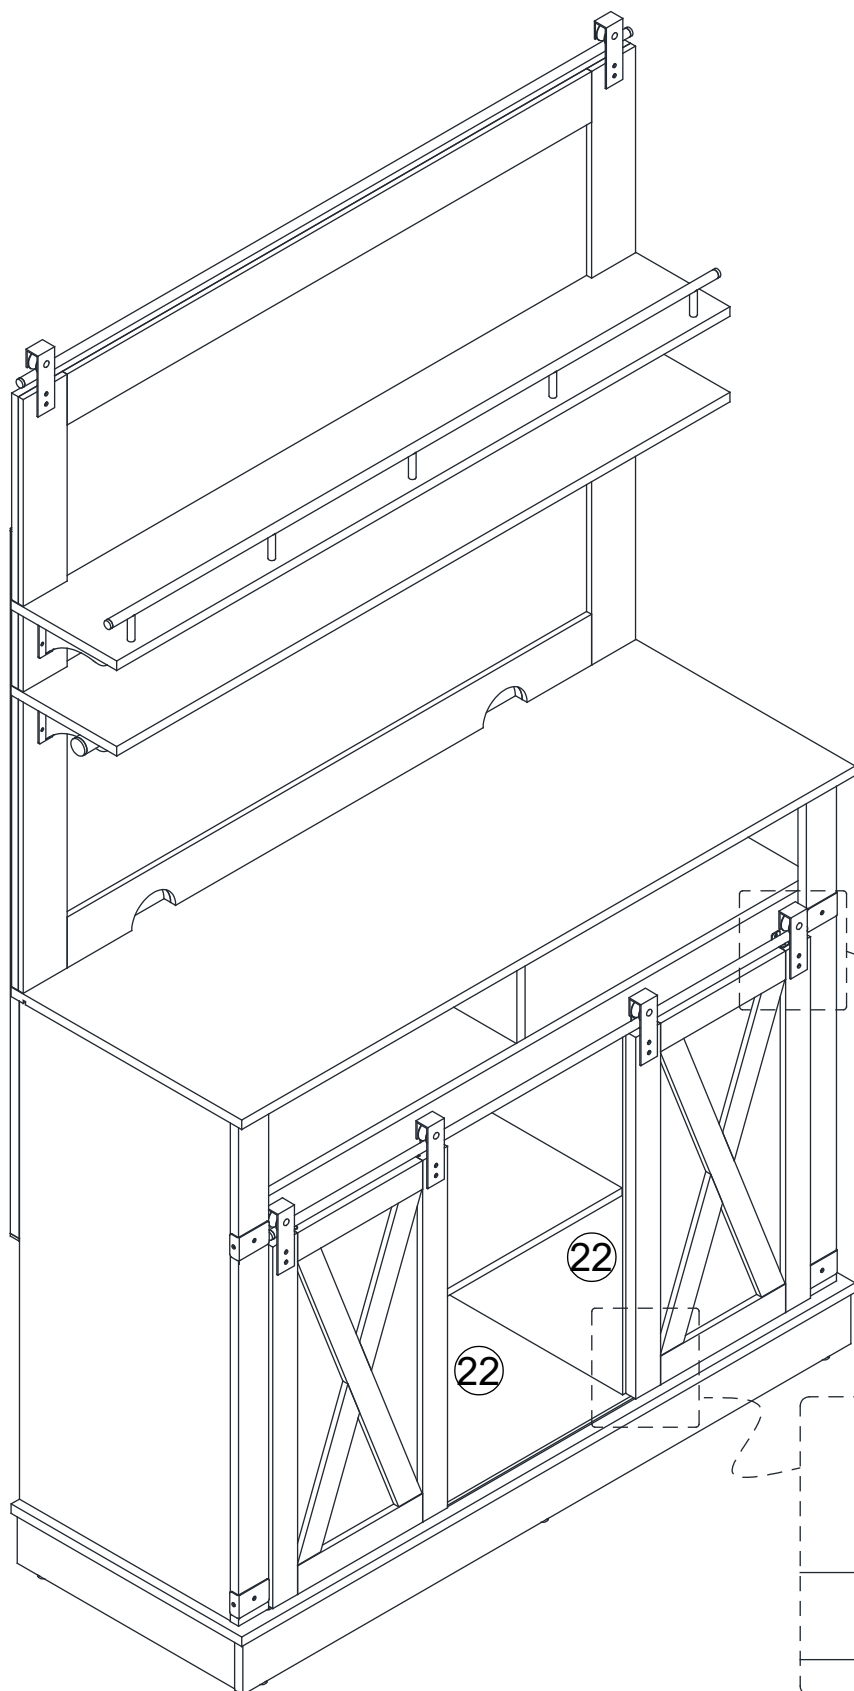


52


Y x 24pcs



L x 24pcs

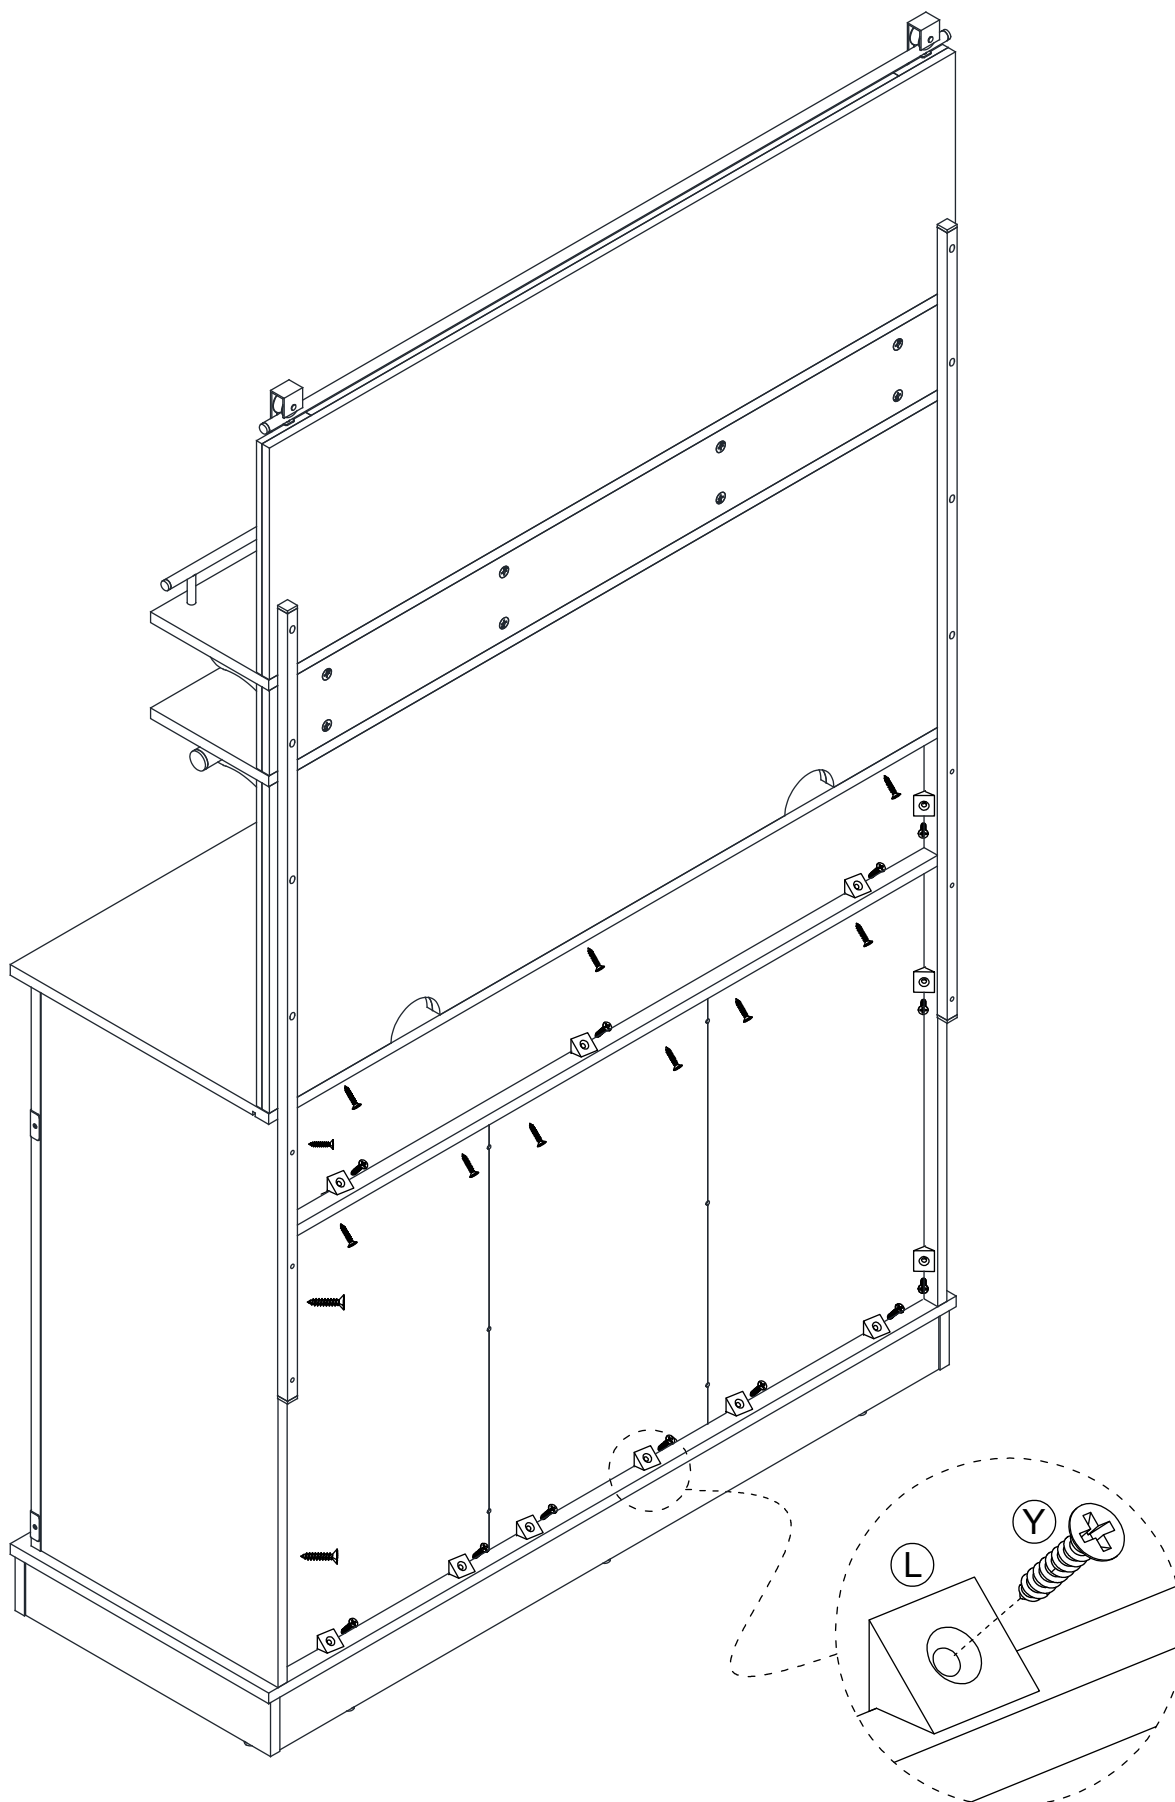


53

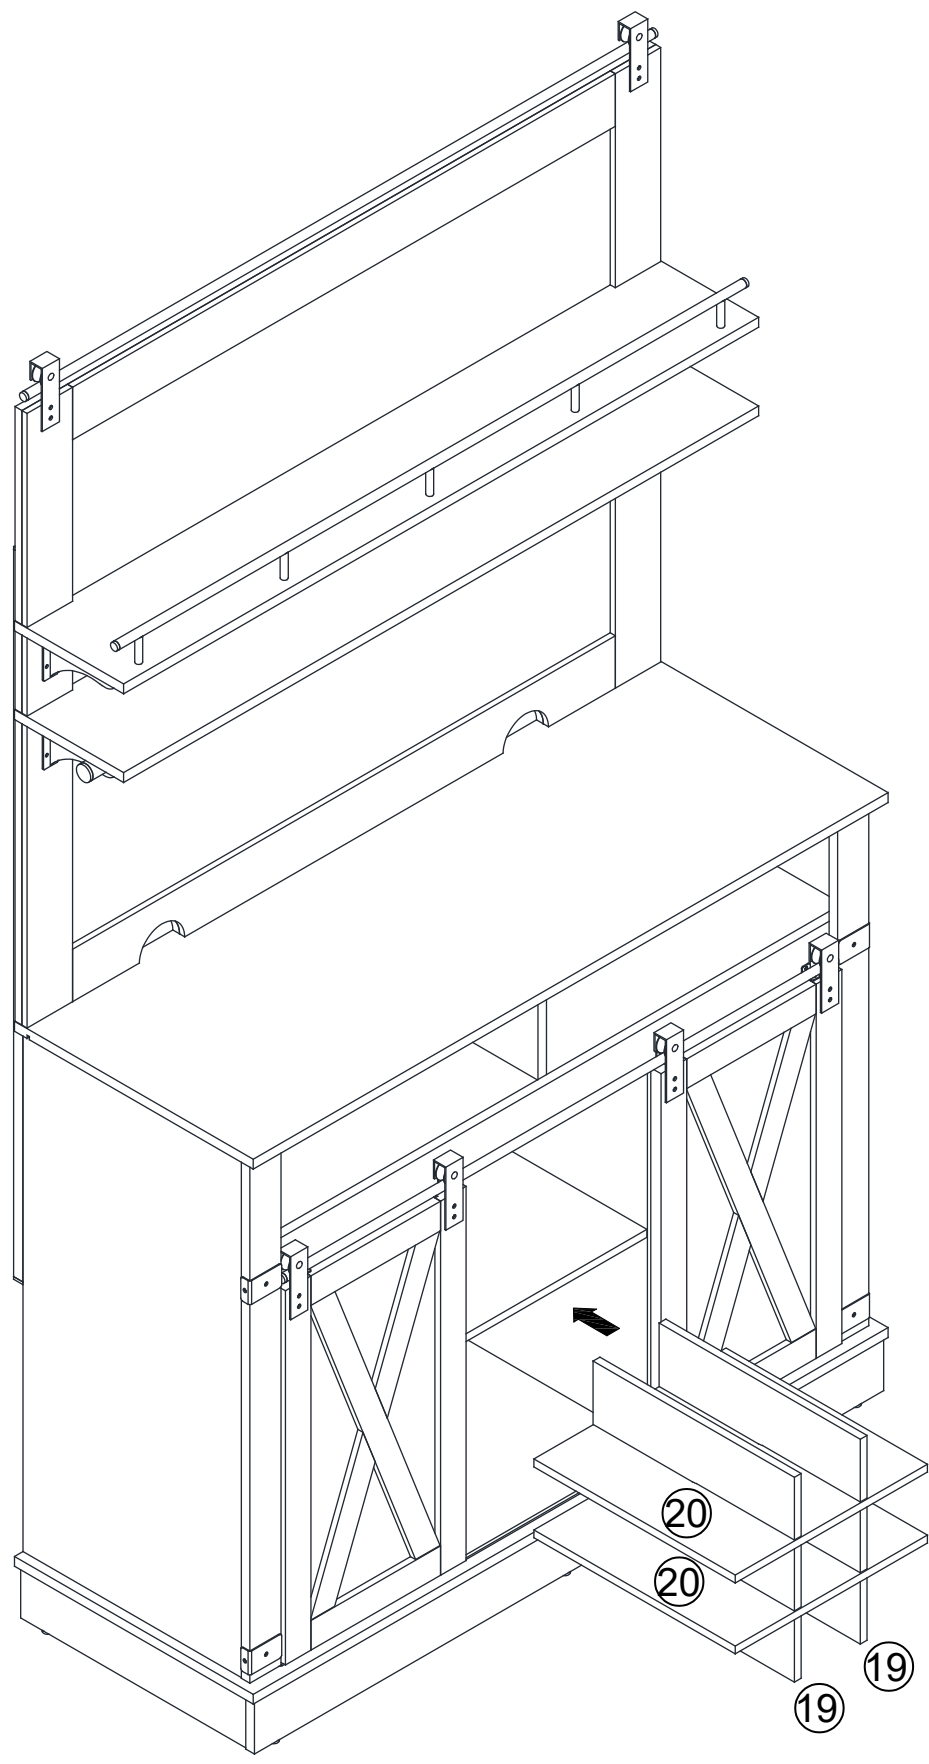



54

Ⓝ x 6pcs

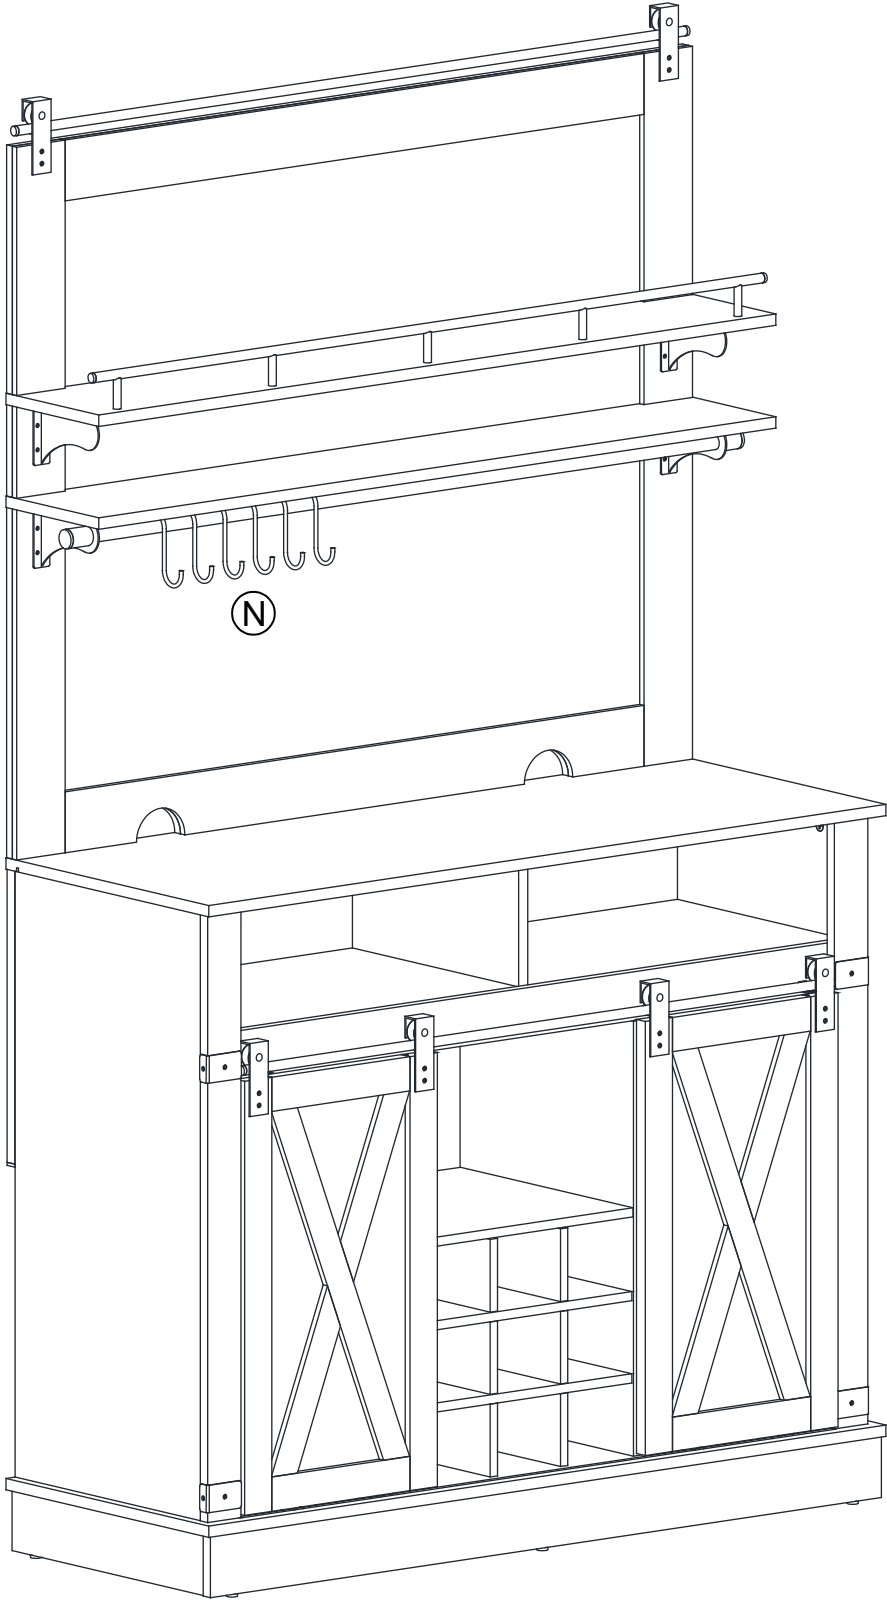

55

Ⓒ x 52pcs

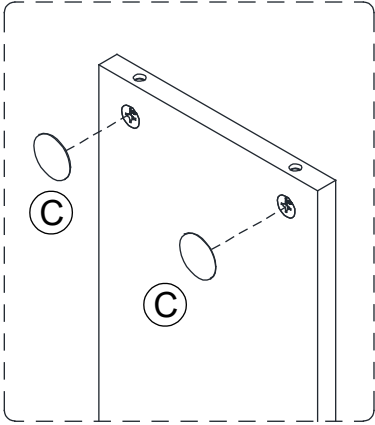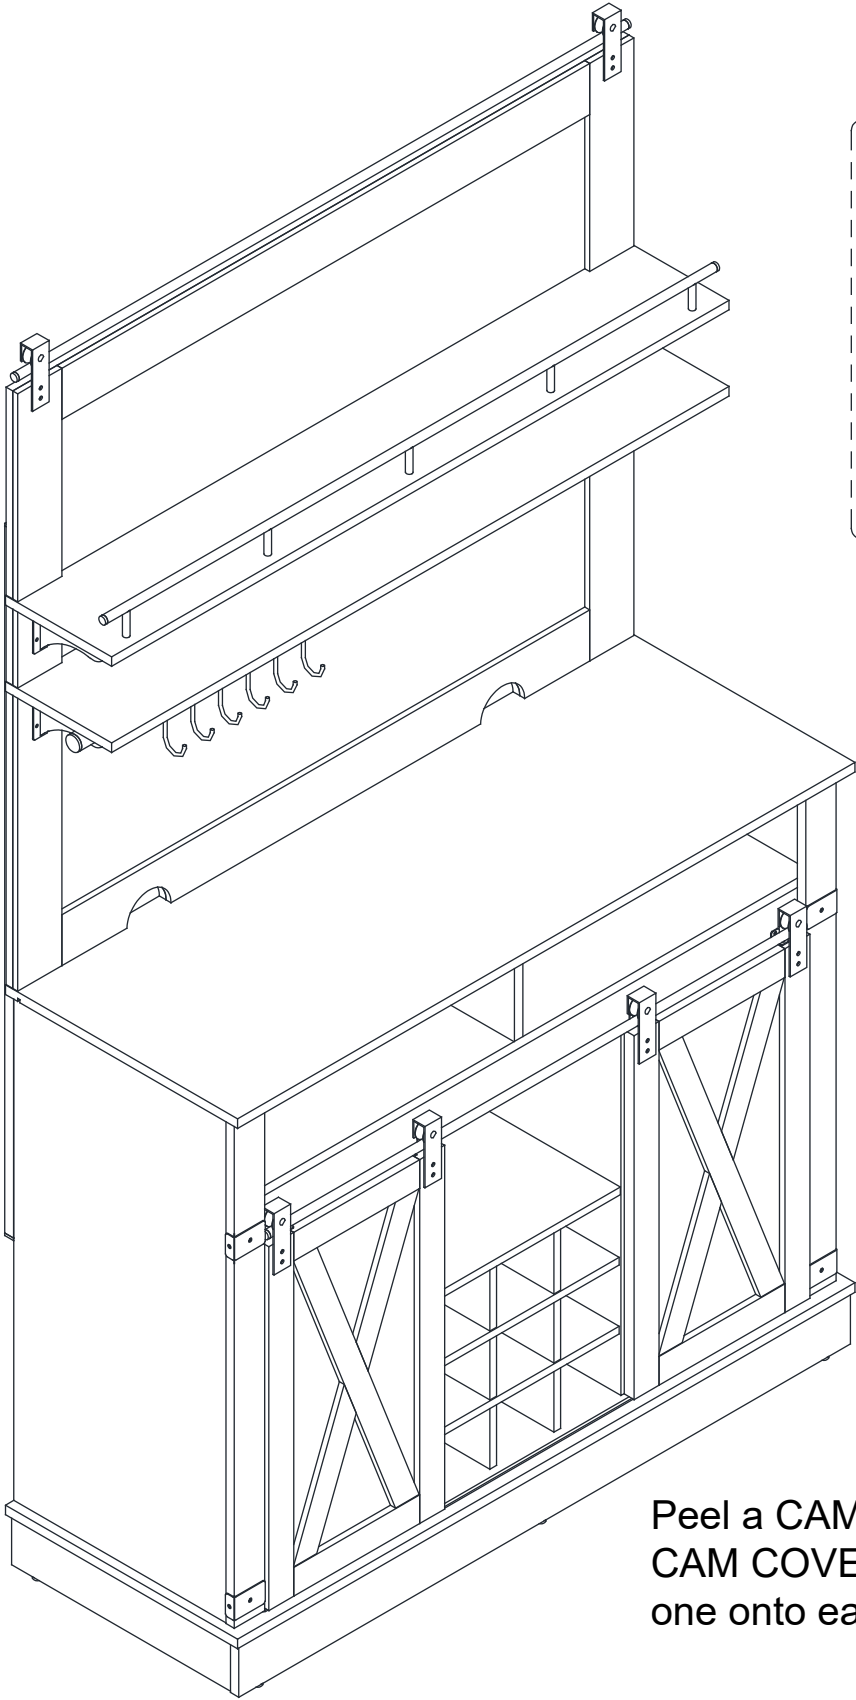

Peel a CAM COVER from the CAM COVER CARD and stick one onto each visible HIDDEN CAM.

56


Open the FURNITURE TIPPING RESTRAINT KIT (96) and fasten the SAFETY STRAP to the TOP (A). Use the SHORT SCREW through the hole in the strap and into the top surface of the TOP (1). Place your unit in its final location.

NOTE: The following instructions show your unit being fastened to a wall stud. If you are not fastening your unit wall stud, go to the next step now.

1st- Locate the center of a stud in your wall near your unit and mark it with a pencil.

2nd- Drill a 1/8" hole on the mark and into the stud in your wall.

3rd- Fasten the unit to the wall. Use the LONG SCREW through the other end of the SAFETY STRAP and into the 1/8" hole.

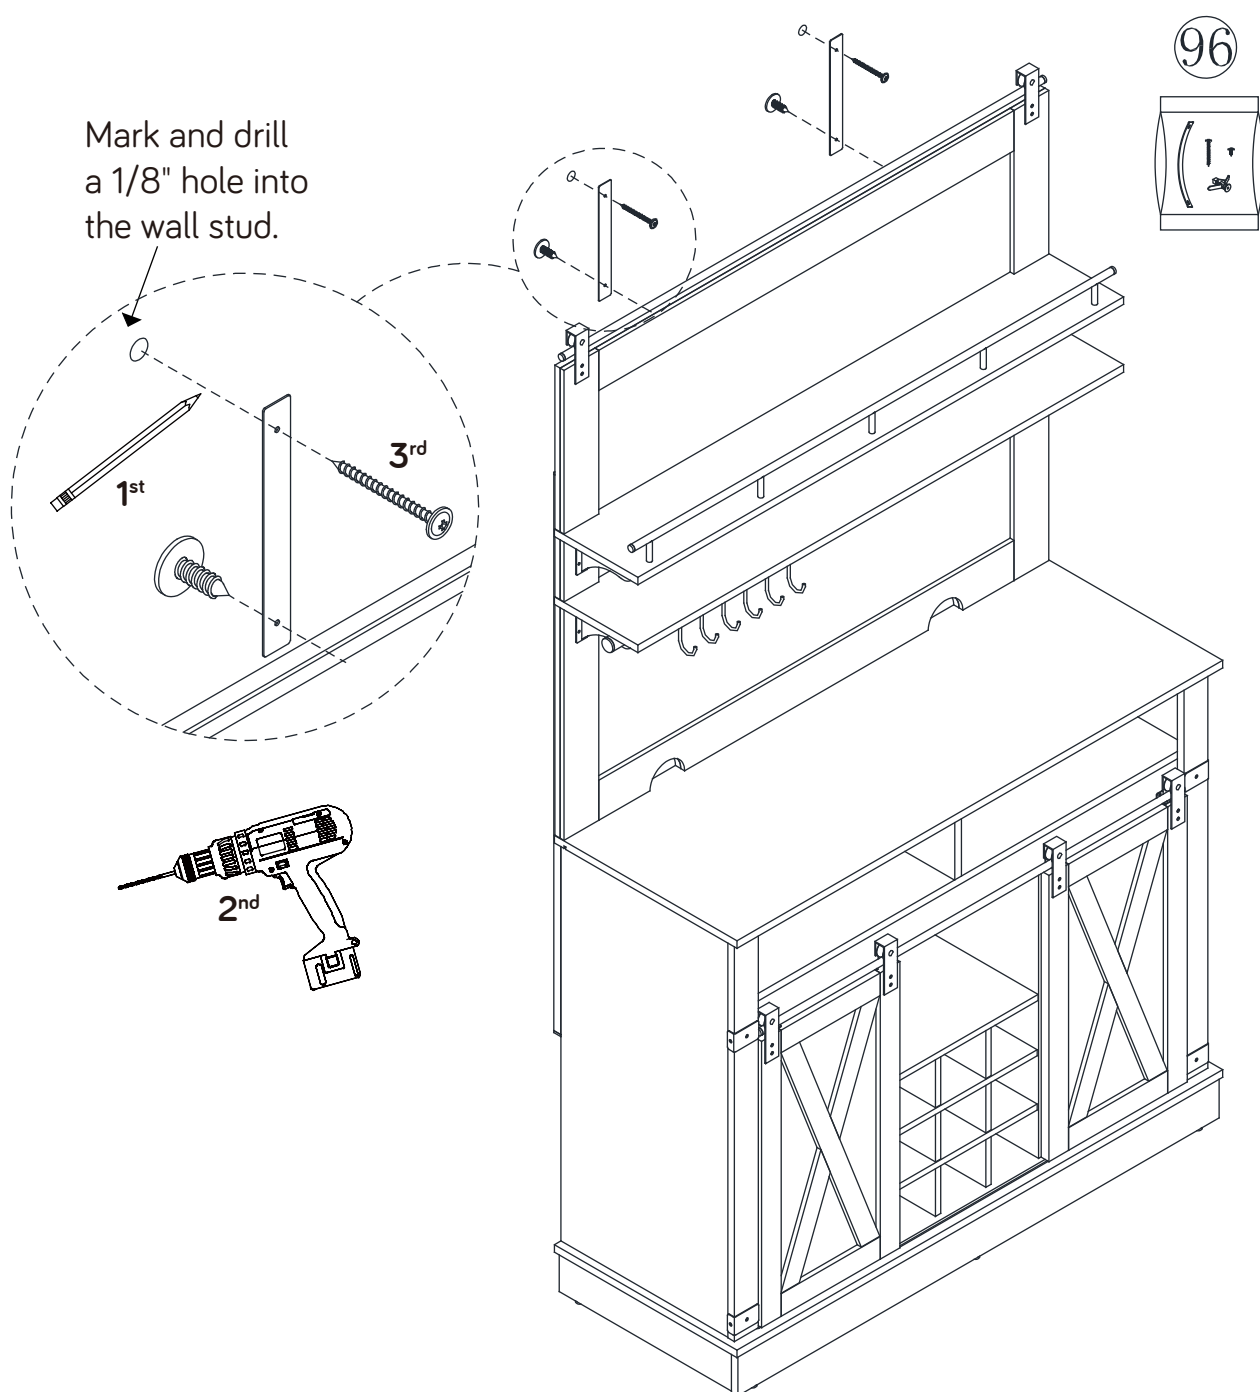

57

1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- While you squeeze the wings together, gently tap the WALL ANCHOR from the FURNITURE TIPPING RESTRAINT KIT (96) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

