
Assembly Instructions

INSTRUCTIONS DE MONTAGE


CHAIR
CHAISE
N762P507671

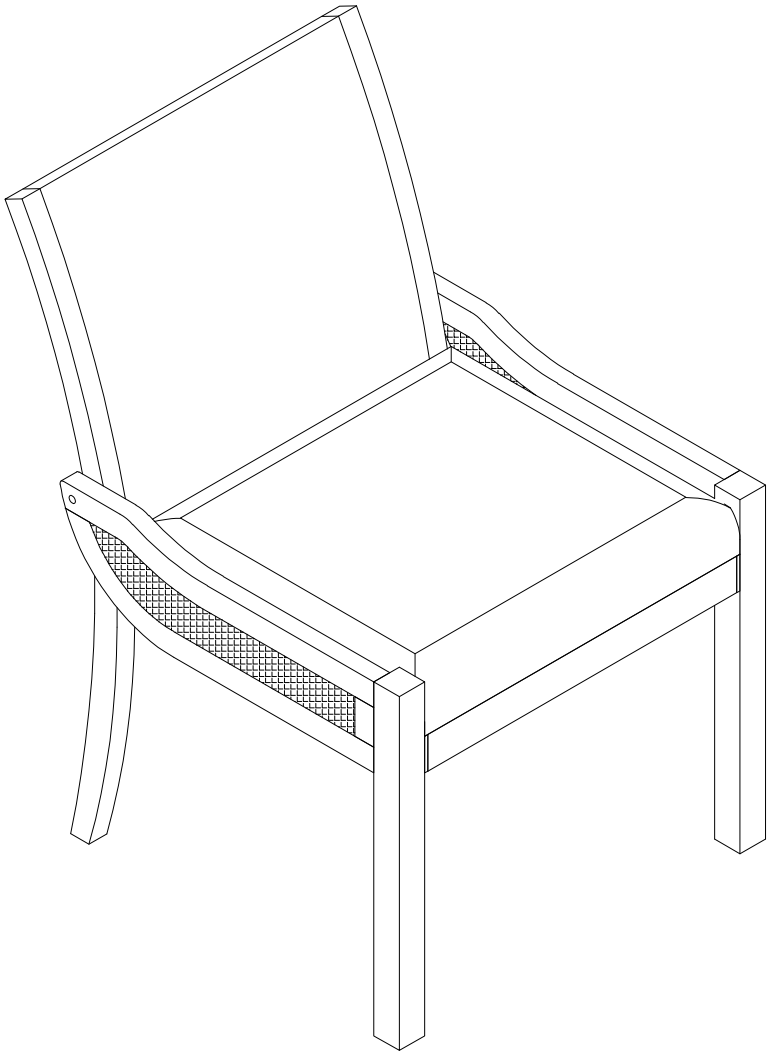





IMPORTANT NOTE:
1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPETTO AVOID THE PARTS FROM BEING SCRATCHED.
2 BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
3 DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP NOTE IMPORTANTE:
1 PLACEZ TOUTES LES PIÈCES SUR UNE SURFACE PROPRE ET LISSE COMME UN TAPIS OU UNTAPIS POUR ÉVITER QUE LES PIÈCES SOIENT RAYÉES.
2 AVANT DE COMMENCER, VEUILLEZ SUIVRE LES INSTRUCTIONS DE MONTAGE ÉTAPE PAR ÉTAPE.
3 NE SERREZ PAS TOUTES LES VIS ET TOUS LES BOULONS JUSQU'À CE QUE LA TABLE SOIT COMPLÈTEMENT INSTALLÉE

Detail View



Vue Détaillée

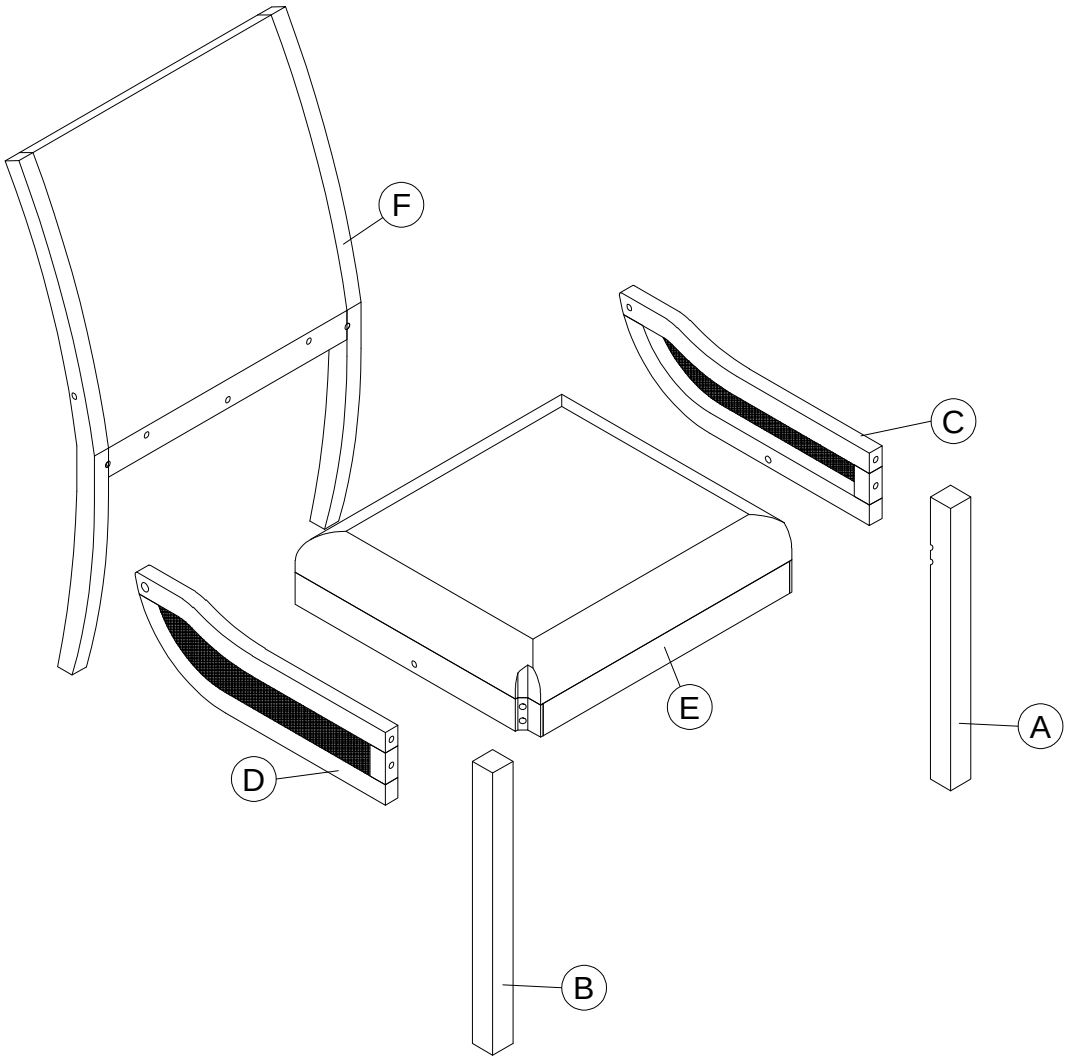

Part List
Liste des Pièces

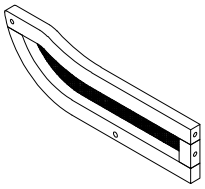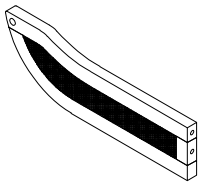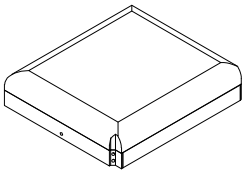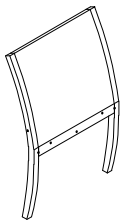
A  Front Right Leg Pied avant droit	B  Front Left Leg Pied avant gauche	C  Right Arm Accoudoir droit
D  Left Arm Accoudoir droit	E  Upholstered Seat Assise rembourrée	F  Chair Back Dossier de chaise

Hardware List
Liste des Accessoires

① x 6+1PCS  M6*80mm	② x 2+1PCS  M6*50mm	③ x 7+1PCS  M6*40mm	④ x 15+1PCS  Ø1/4*10mm
BOLT Boulon	BOLT Boulon	BOLT Boulon	Spring Washer Rondelle élastique
⑤ x 13+1PCS  Ø1/4*16mm	⑥ x 2+1PCS  Ø1/4*13mm	⑦ x 2+1PCS  Ø8*30mm	⑧ x 1PC  4mm
Flat Washer Rondelle plate	Flat Washer Rondelle plate	Wood dowel cheville en bois	Allen Key Clé hexagonale
⑨ x 2+1PCS  16*7mm	Tools Reqired 		
Wooden Plugs Bouchons en bois			

STEP 1:

ÉTAPE 1

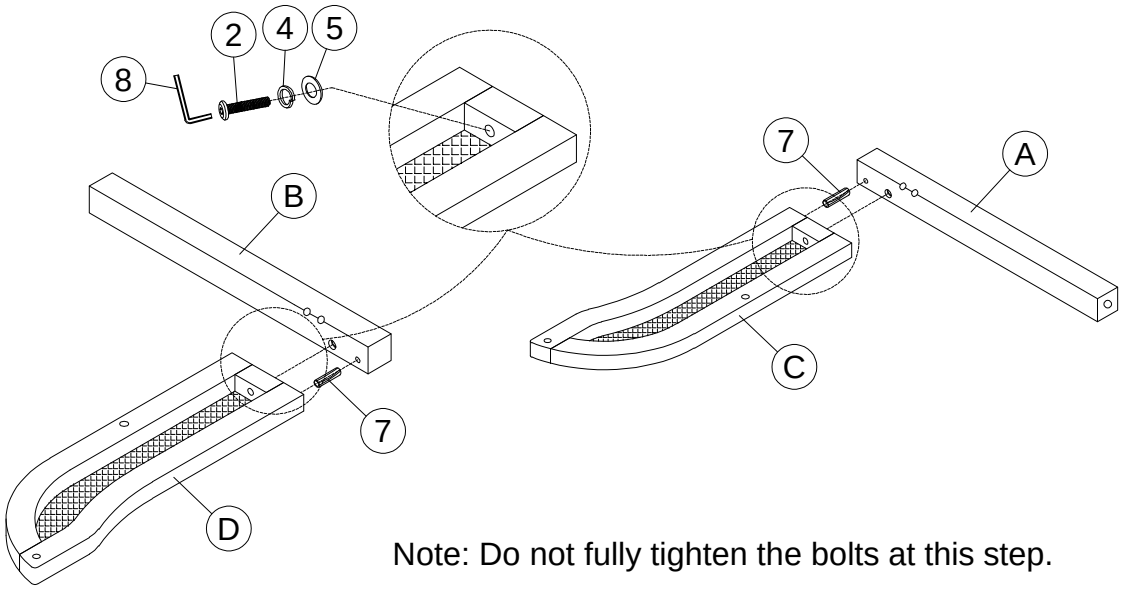


Note: Do not fully tighten the bolts at this step.

2	M6*50mm	2PCS	4	Ø1/4*10mm	2PCS
5	Ø1/4*16mm	2PCS	7	Ø8*30mm	2PCS
8	4mm	1PC			

STEP 2:

ÉTAPE 2

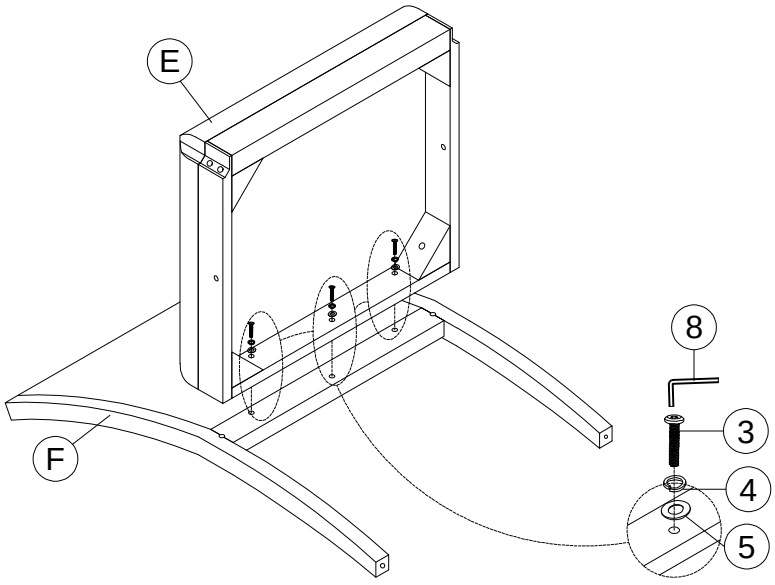


Note: Do not fully tighten the bolts at this step.

3	M6*40mm	3PCS	4	Ø1/4*10mm	3PCS
5	Ø1/4*16mm	3PCS	8	4mm	1PC

STEP 3:

ÉTAPE 3

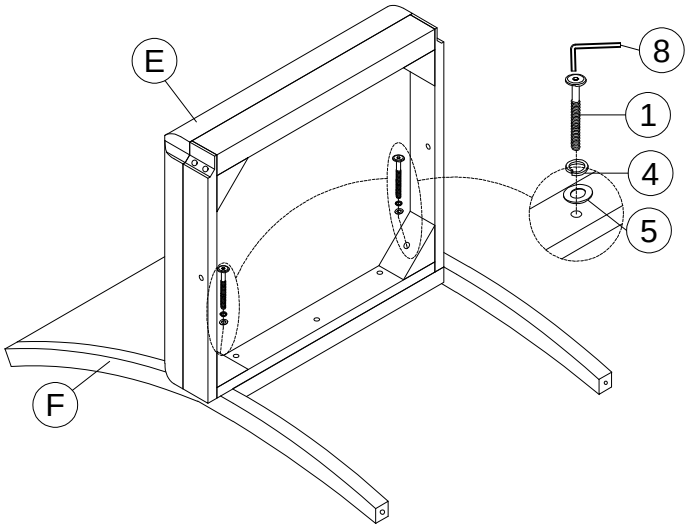


Note: Do not fully tighten the bolts at this step.

1	M6*80mm	2PCS	4	Ø1/4*10mm	2PCS
5	Ø1/4*16mm	2PCS	8	4mm	1PC

STEP 4:

ÉTAPE 4

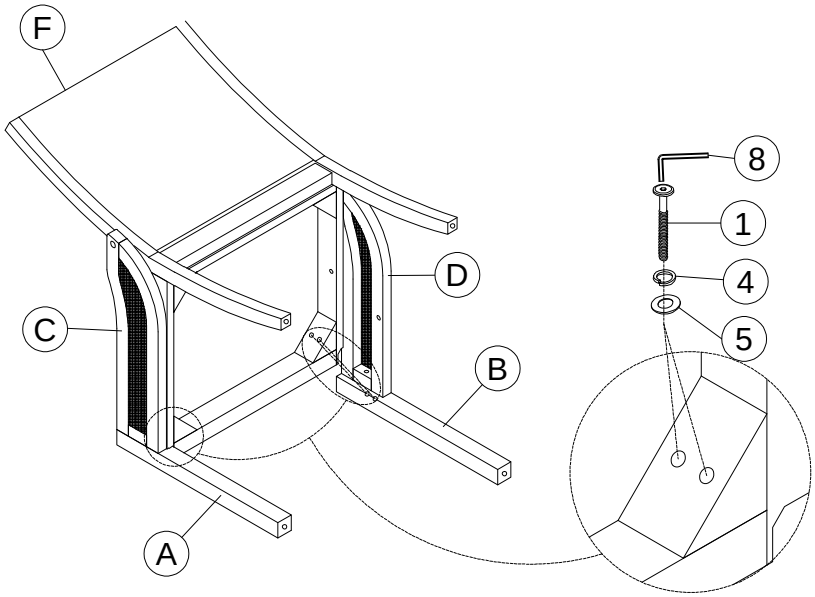


1	M6*80mm	4PCS	4	Ø1/4*10mm	4PCS
5	Ø1/4*16mm	4PCS	8	4mm	1PC

STEP 5:

ÉTAPE 5


Note: Do not fully tighten the bolts at this step.

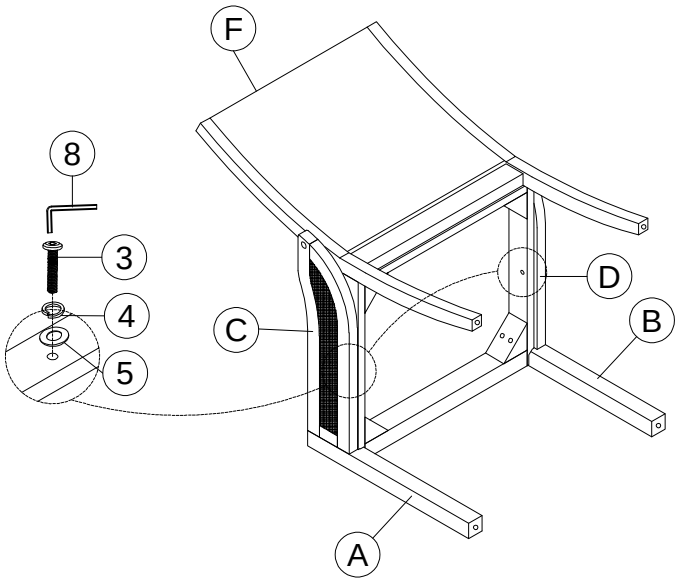

3	M6*40mm	2PCS	4	Ø1/4*10mm	2PCS
5	Ø1/4*16mm	2PCS	8	4mm	1PC

STEP 6:

ÉTAPE 6

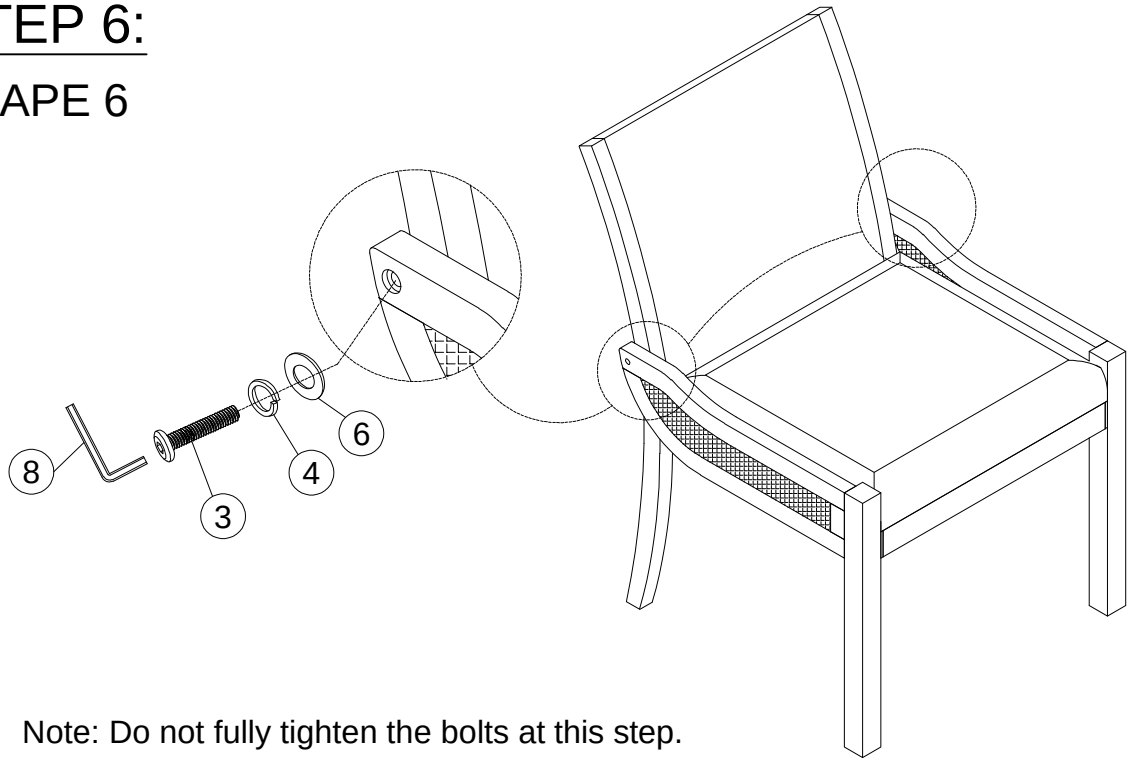


Note: Do not fully tighten the bolts at this step.

3	M6*40mm	2PCS	4	Ø1/4*10mm	2PCS
6	Ø1/4*13mm	2PCS	8	4mm	1PC

STEP 7:


ÉTAPE 7

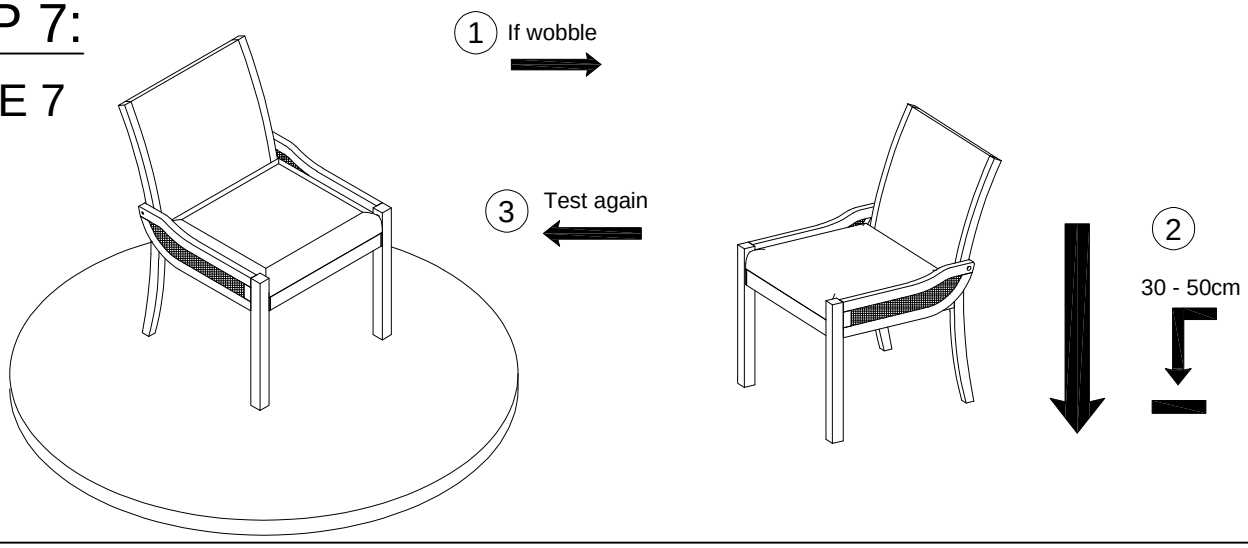

Place the Chair on a Level Surface to check for wobbles.
If it wobbles, lift the Chair some 30 to 50 cm high from the ground, keep your feet and toes well away from the drop zone, and drop the Chair vertically with all four Legs, hitting the ground at the same time.
The Drop Test will help to ensure that all Bolts and gaps reach full alignment.
Test again for evenness on a Level Surface.
If no wobbles are found, proceed to tighten all the Bolts.
When tightening the Bolts, tighten sequentially. Do not tighten any Bolt fully and then move on to the next one, this could cause the frame to warp. If it still wobbles, loosen the Bolts and execute this same drop test. If the Chair is not Stable it could lead to damage to the product.

STEP 8:

ÉTAPE 8

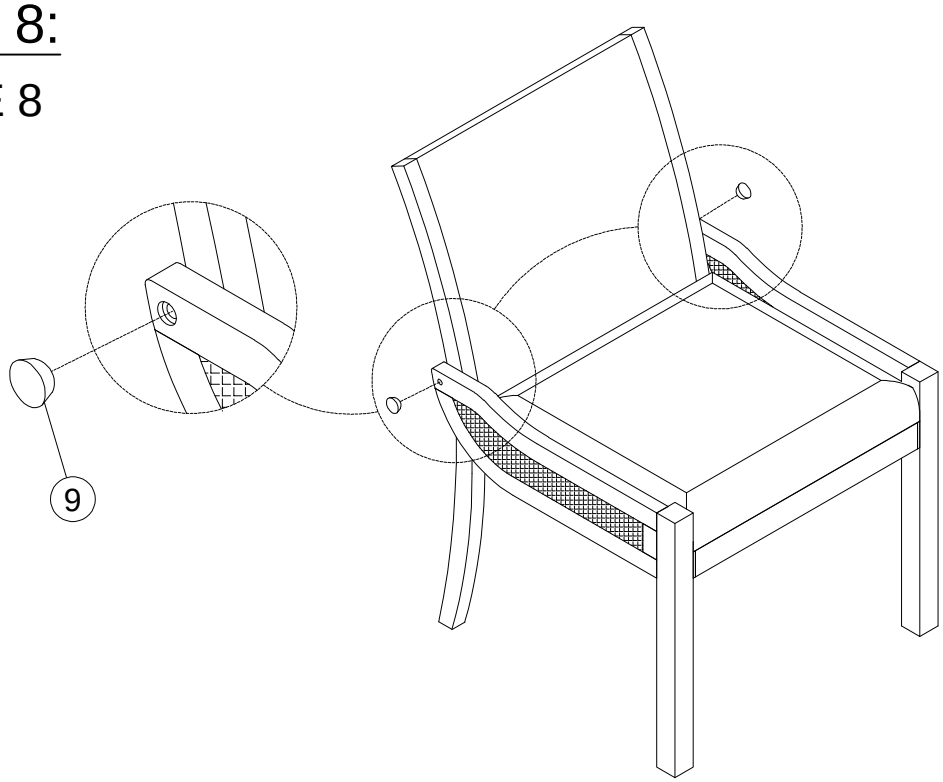

9	16*7mm		2PCS		

STEP 9:

ÉTAPE 9

