

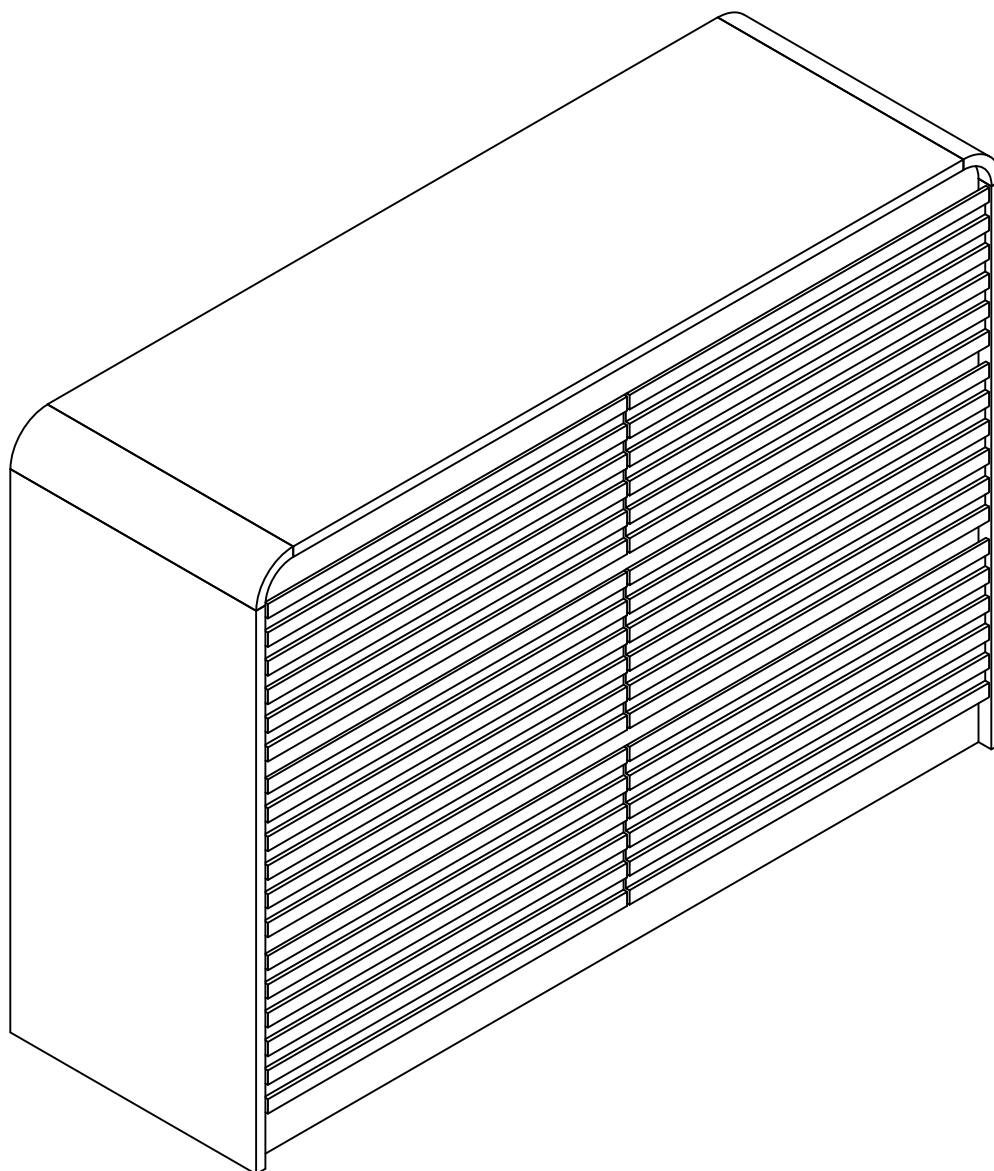
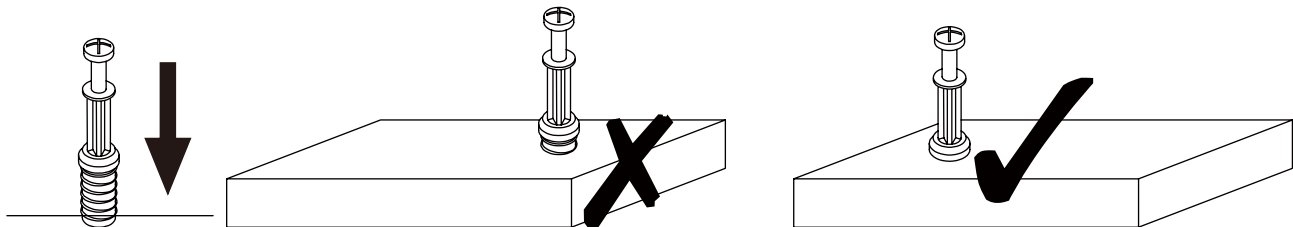
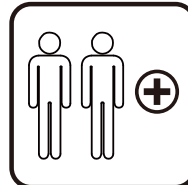



# Installation & Assembly

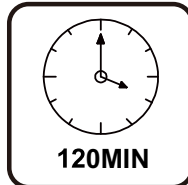


**As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.  
If you have any questions about the product and installation, please contact us.  
Our professional after-sales team will serve you online all day.**

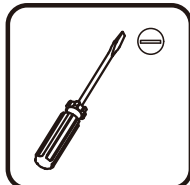


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

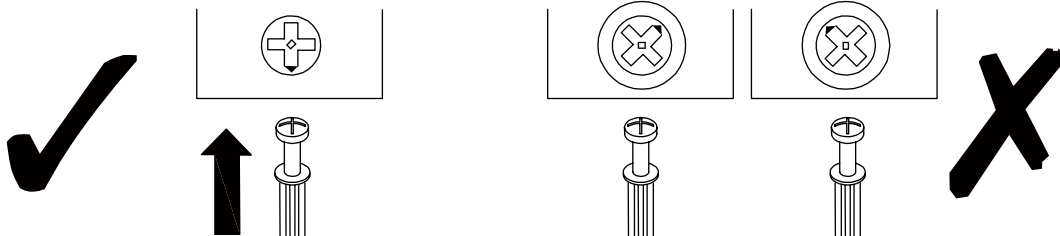











**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









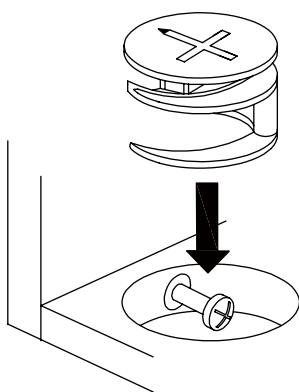





**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.






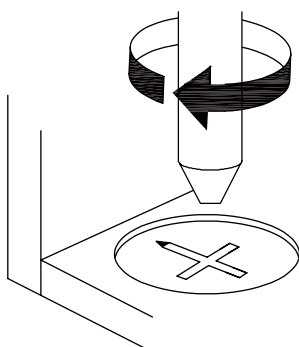




**EN\_Turn** cam lock clockwise to tighten.
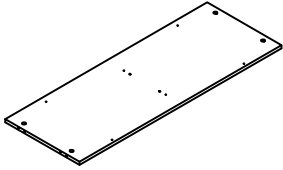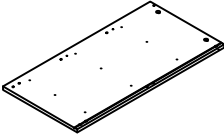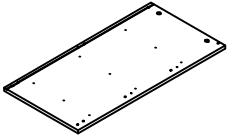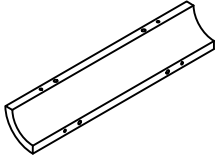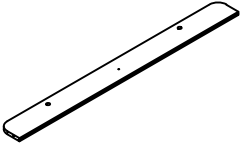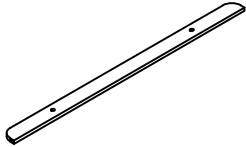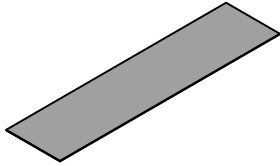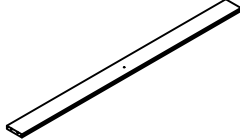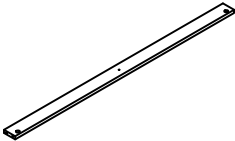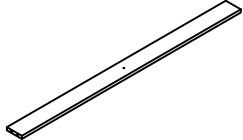
| NO. | PARTS                                                                               | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------|-----|-------|
| ①   |    | x1  |       |
| ②   |    | x1  |       |
| ③   |    | x1  |       |
| ④   |    | x2  |       |
| ⑤   |  | x1  |       |
| ⑥   |  | x1  |       |
| ⑦   |  | x2  |       |
| ⑧   |  | x1  |       |
| ⑨   |  | x2  |       |
| ⑩   |  | x1  |       |

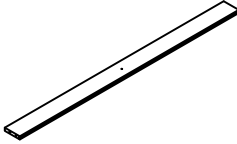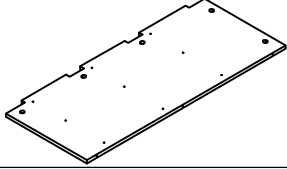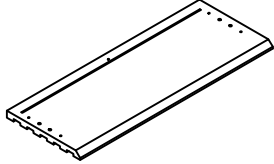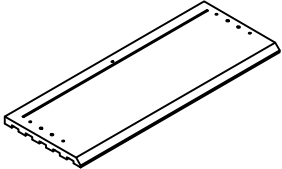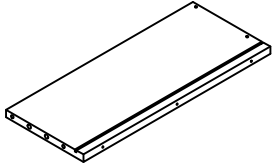
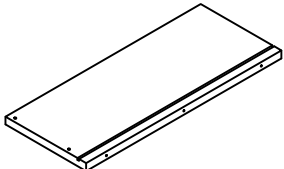
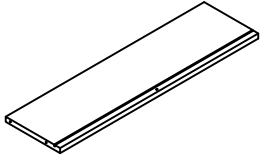
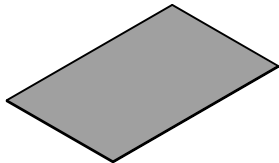
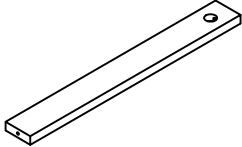
| NO. |                                                                                                      | QTY | SPARE |
|-----|------------------------------------------------------------------------------------------------------|-----|-------|
| ⑪   |                    | x1  |       |
| ⑫   |                    | x1  |       |
| ⑬   |                    | x3  |       |
| ⑭   |                    | x3  |       |
| ⑮   |                  | x6  |       |
| ⑯   |                  | x6  |       |
| ⑰   |                  | x6  |       |
| ⑱   |                  | x6  |       |
| ⑲   |                  | x6  |       |
|     | <br>Hardware Kit | x1  |       |

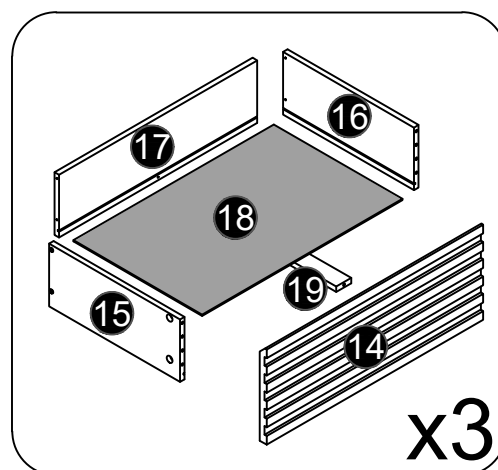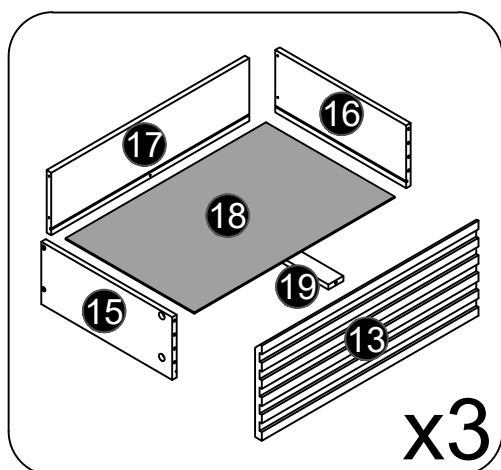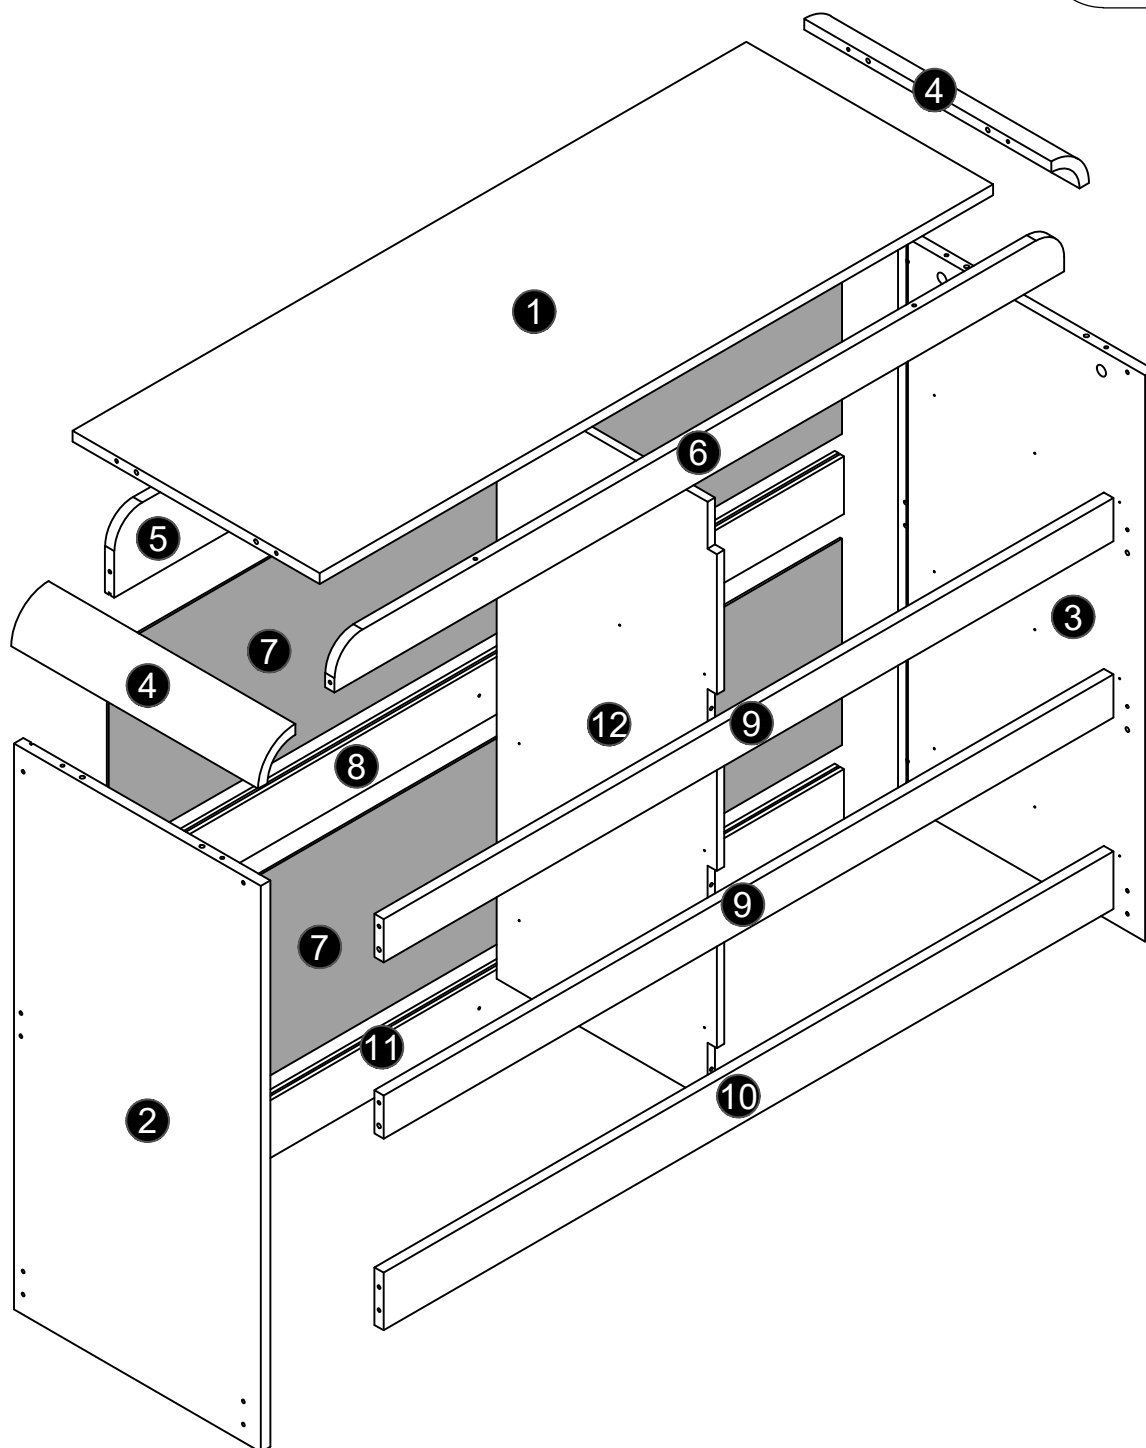

|                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                             |                                                                                                                           |                                                                                                                           |                                                                                                                               |                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <br><b>A</b> x43<br>Ø6x35mm<br>+3(spare)                                                                                          | <br><b>B</b> x51<br>Ø15x10mm<br>+3(spare)                                                                                                                                                                                  | <br><b>C</b> x38<br>Ø6x30mm<br>+3(spare) | <br><b>D</b> x32<br>Ø4x35mm<br>+3(spare) | <br><b>E</b> x72<br>Ø3.5x12mm<br>+4(spare) | <br><b>F</b> x19<br>Ø5x35mm<br>+1(spare) |
| <br><b>G-1</b><br><br><b>G-2</b> x8<br>+1(spare) | <br><b>H-1</b> x2<br><br><b>H-2</b> x2<br><br><b>H-3</b> | <br><b>I</b> x16<br>+2(spare)            | <br><b>J</b> x8<br>Ø6x40mm               |                                                                                                                               |                                                                                                                             |
| <br><b>CL</b> x6<br>L350mm                                                                                                        | <br><b>CR</b> x6<br>L350mm                                                                                                                                                                                                 | <br><b>DL</b> x6<br>L350mm               | <br><b>DR</b> x6<br>L350mm              |                                                                                                                               |                                                                                                                             |

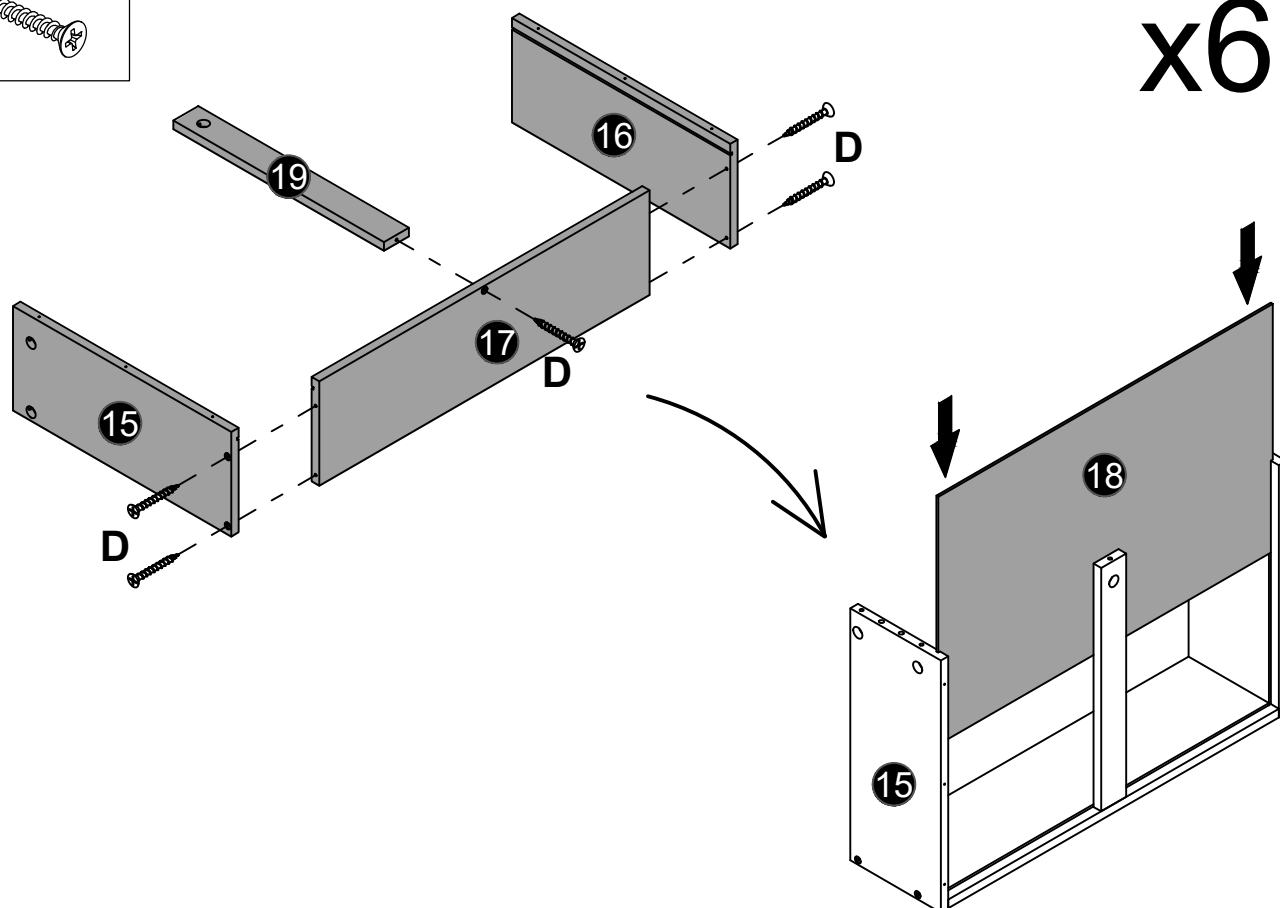**D** x30**01****x6**



x3

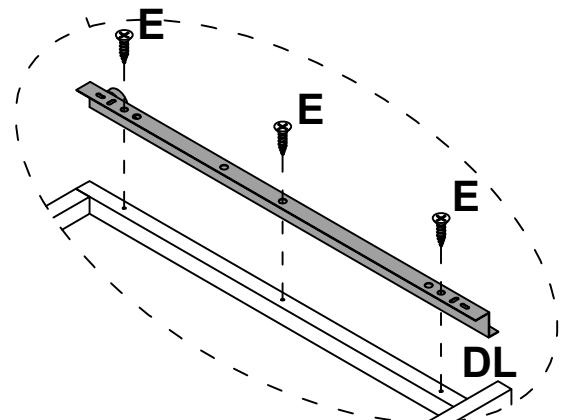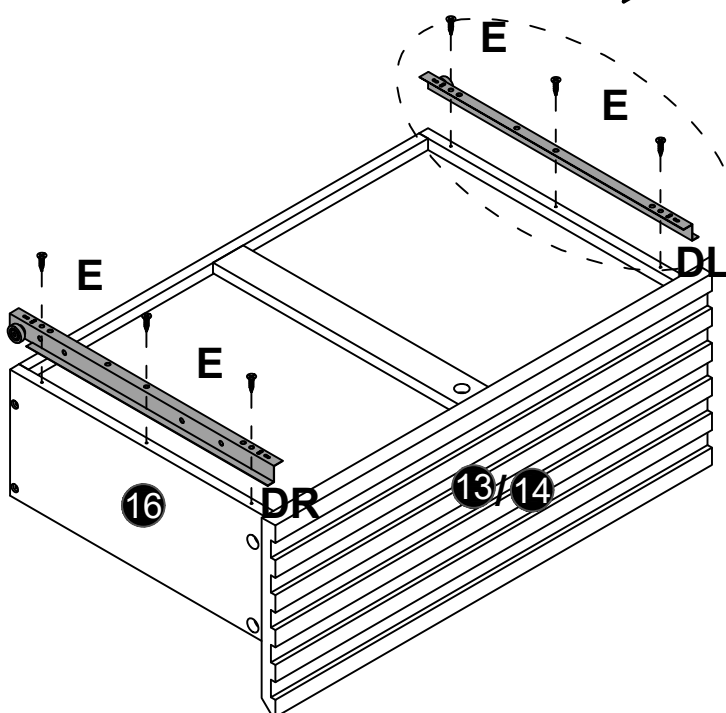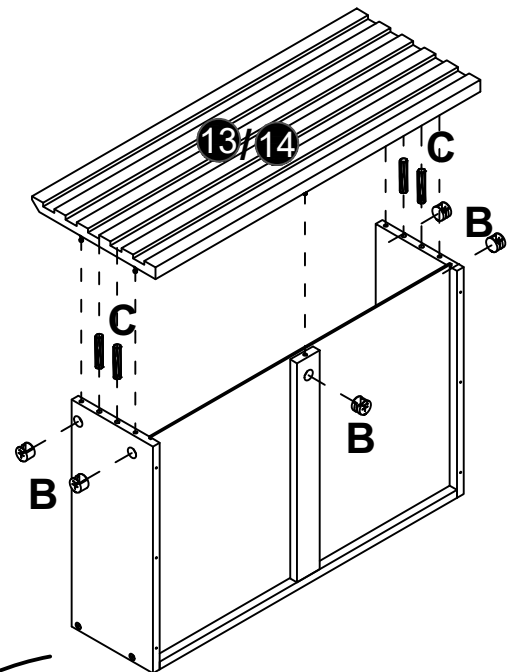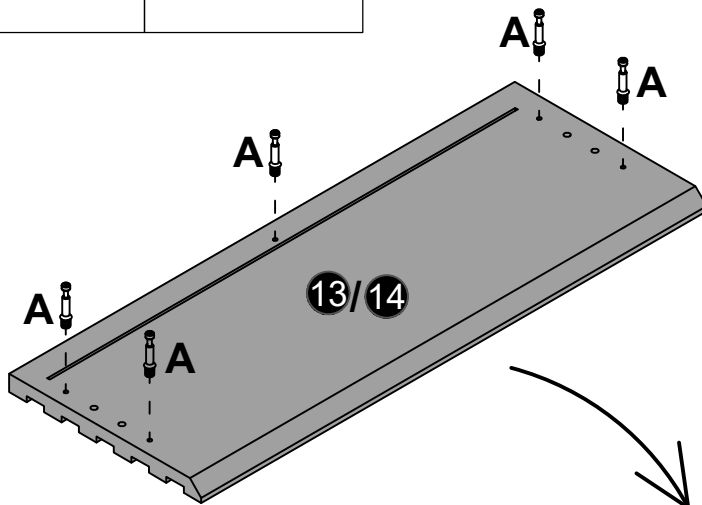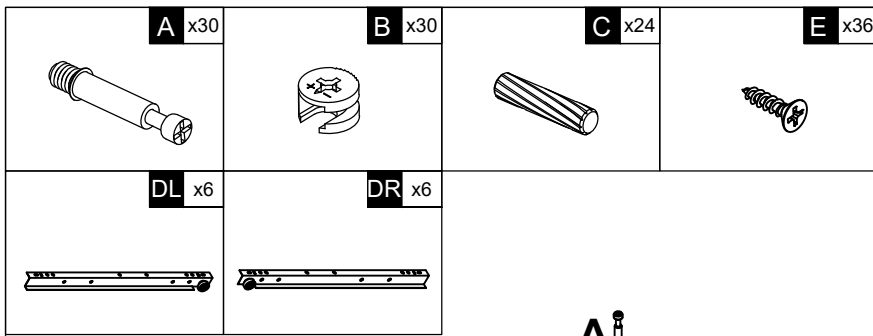

A x2

E x9



CL x3

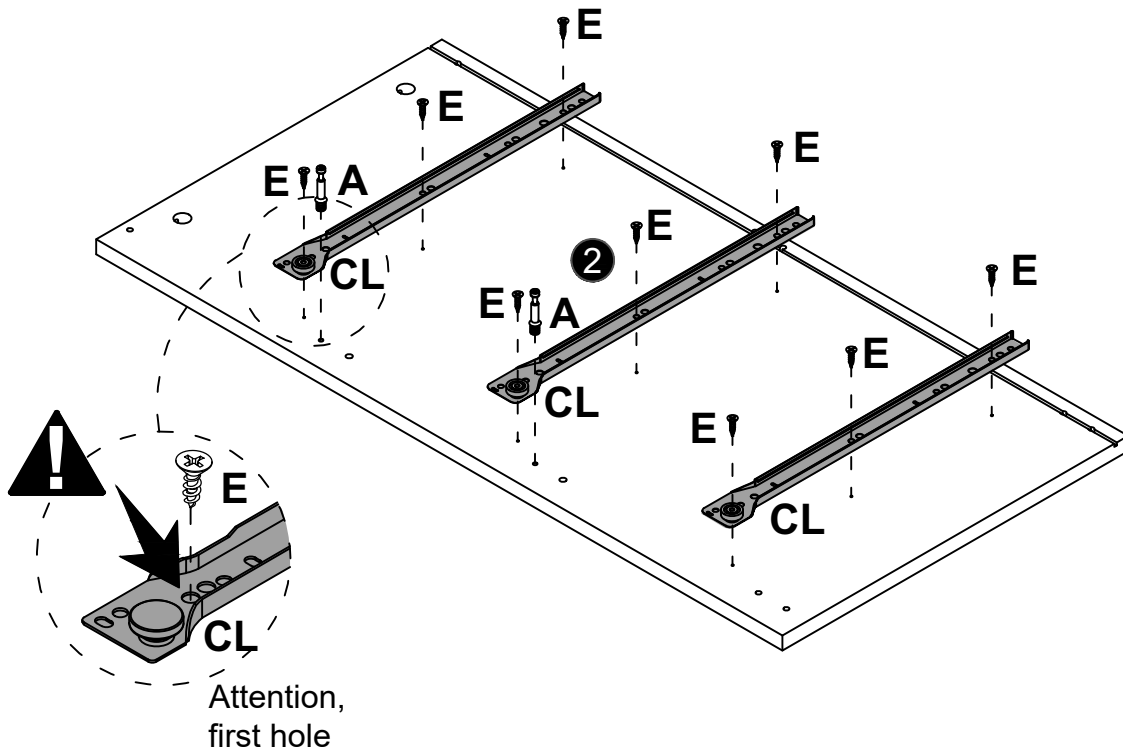

A x2

E x9


CR x3

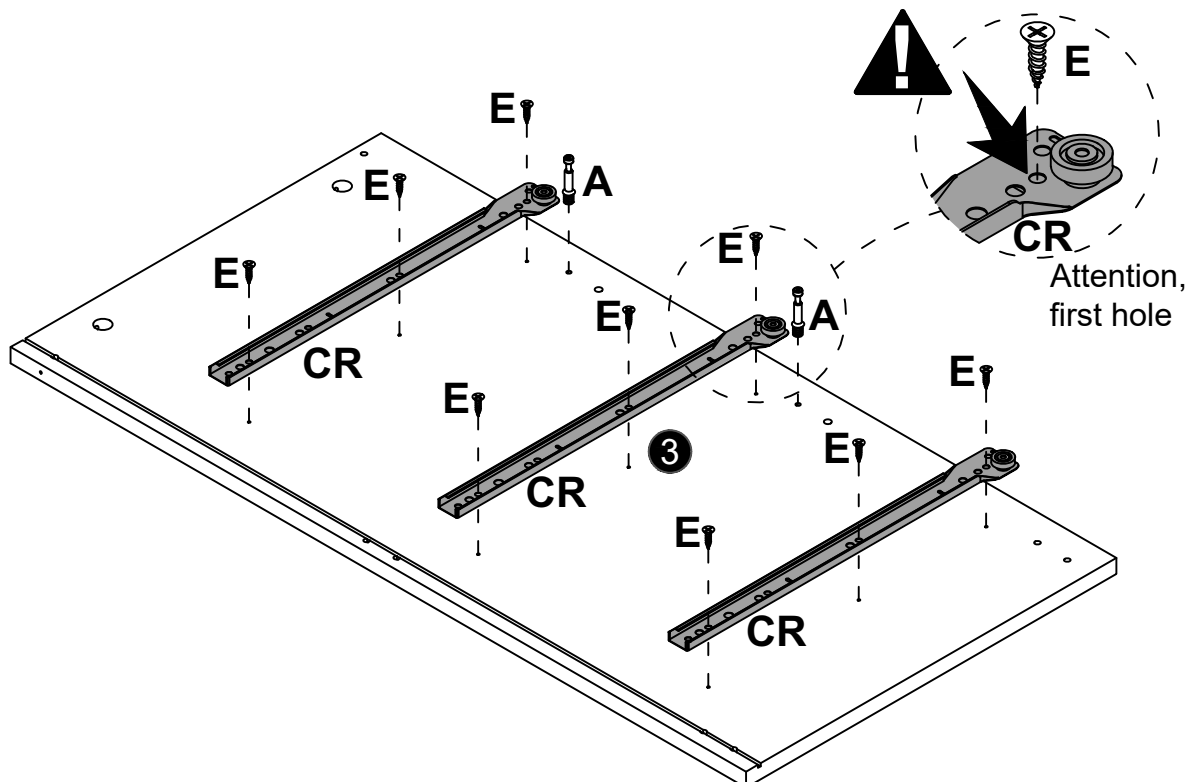



E x18

CL x3

CR x3

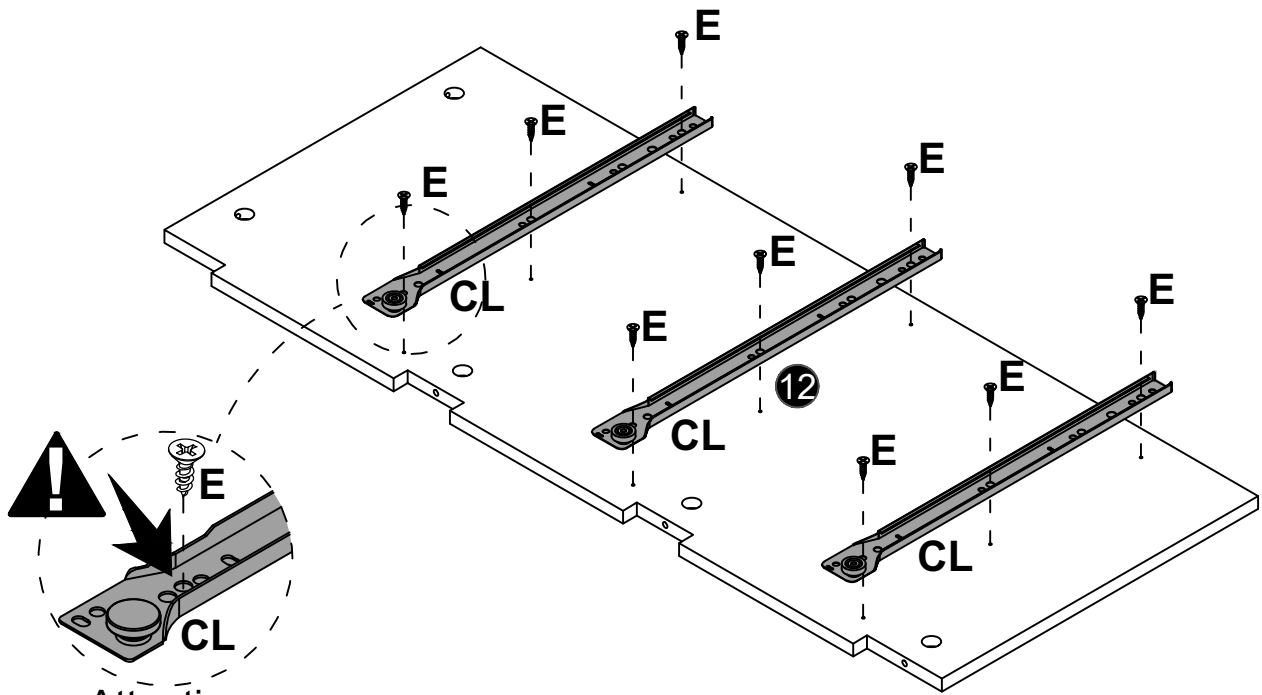


Attention,  
second hole

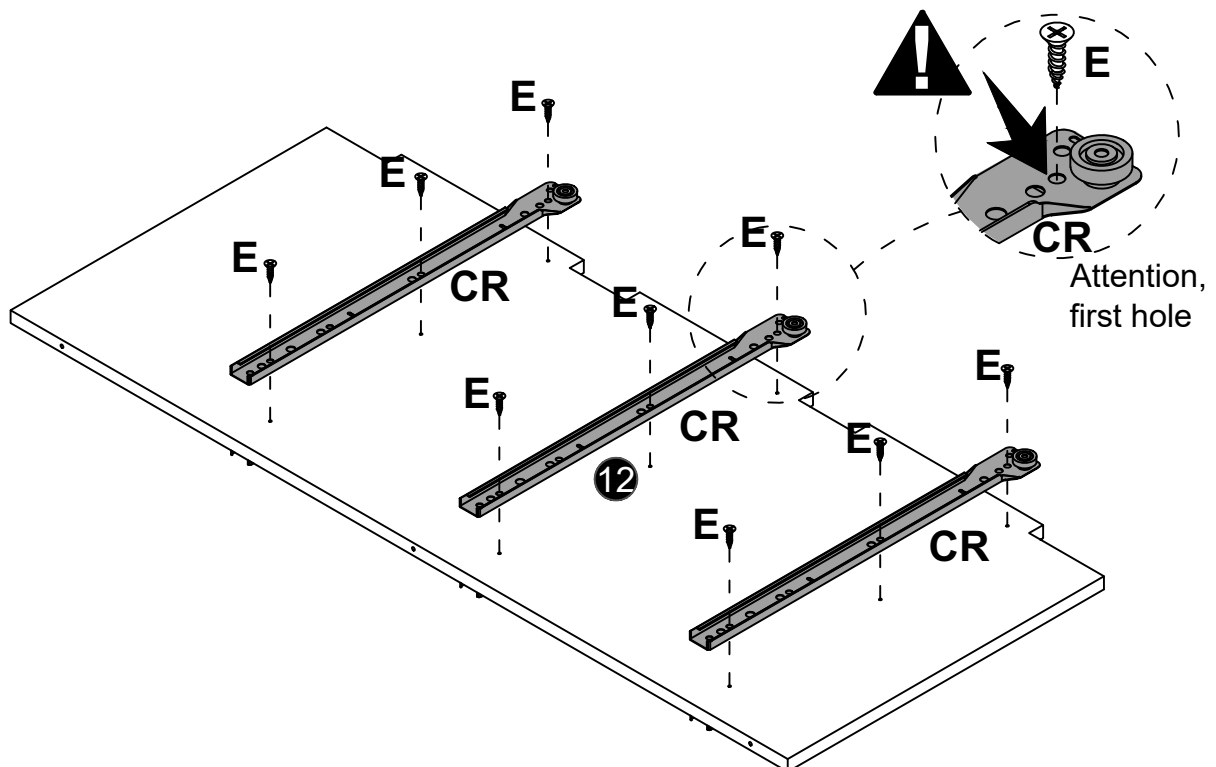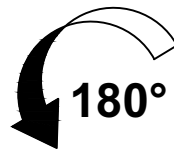


Attention,  
first hole

A x3




06


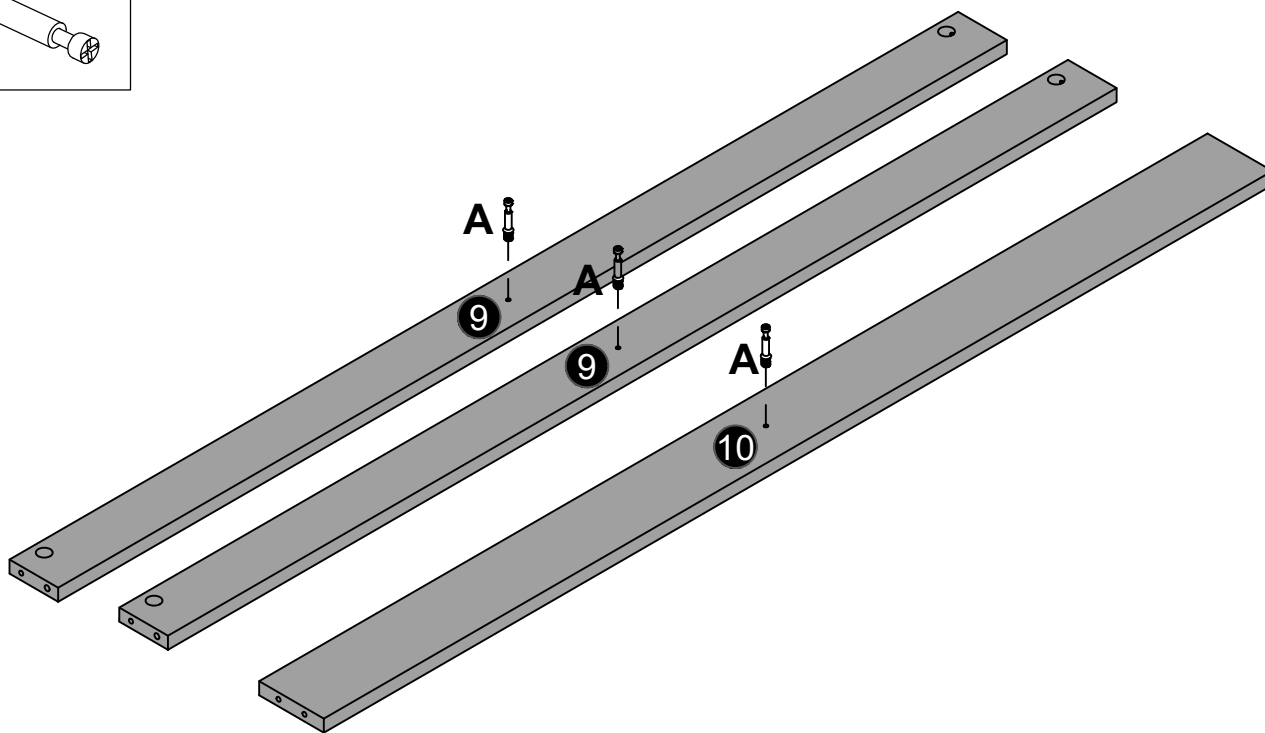


B x3



07

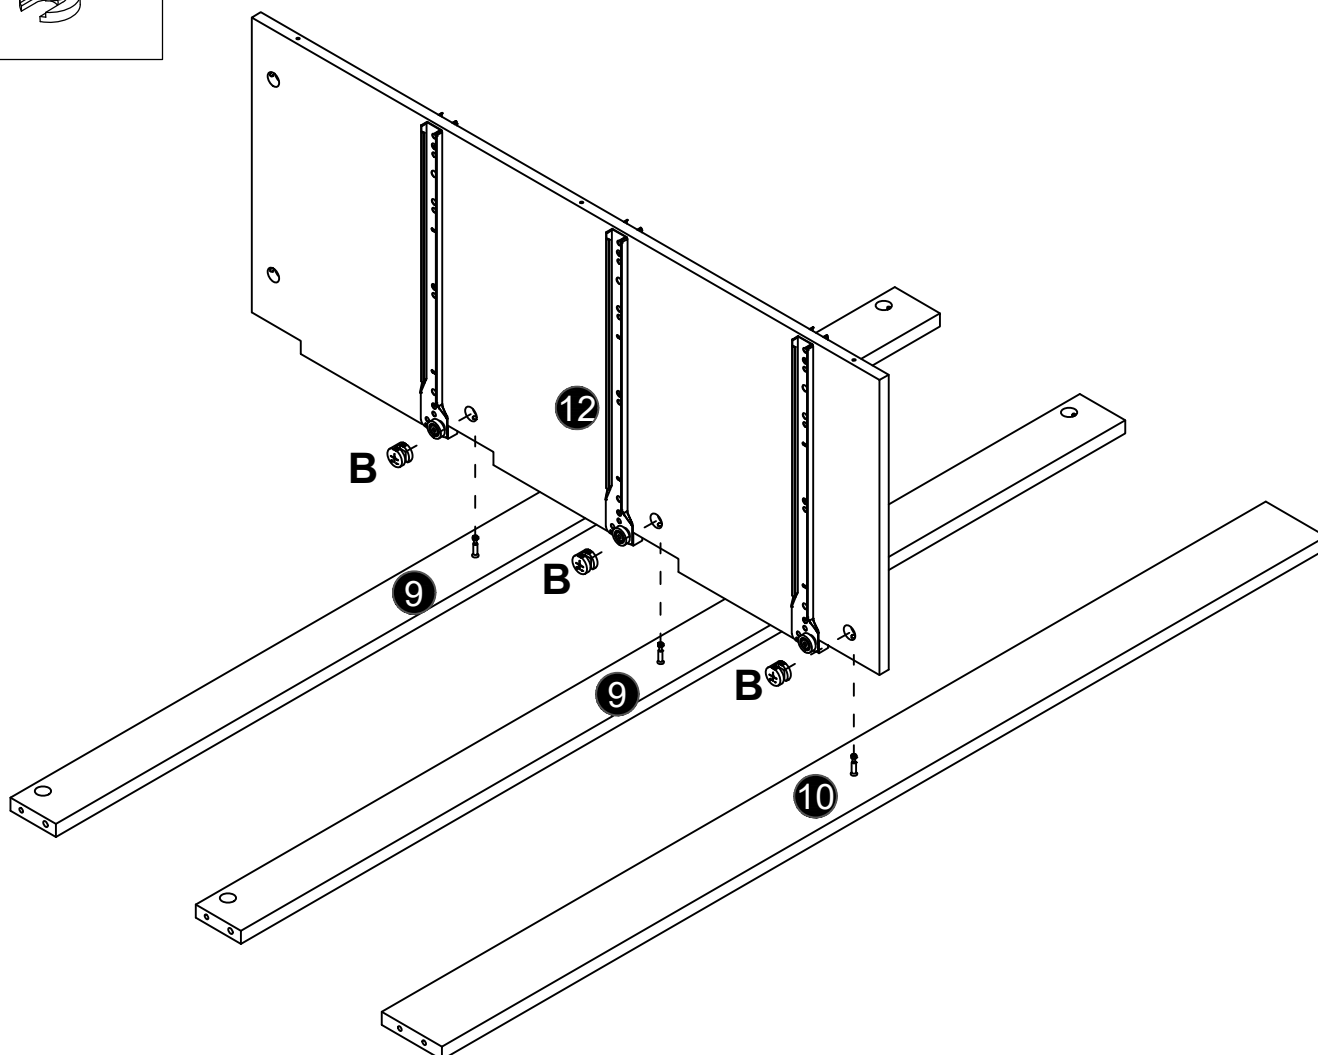

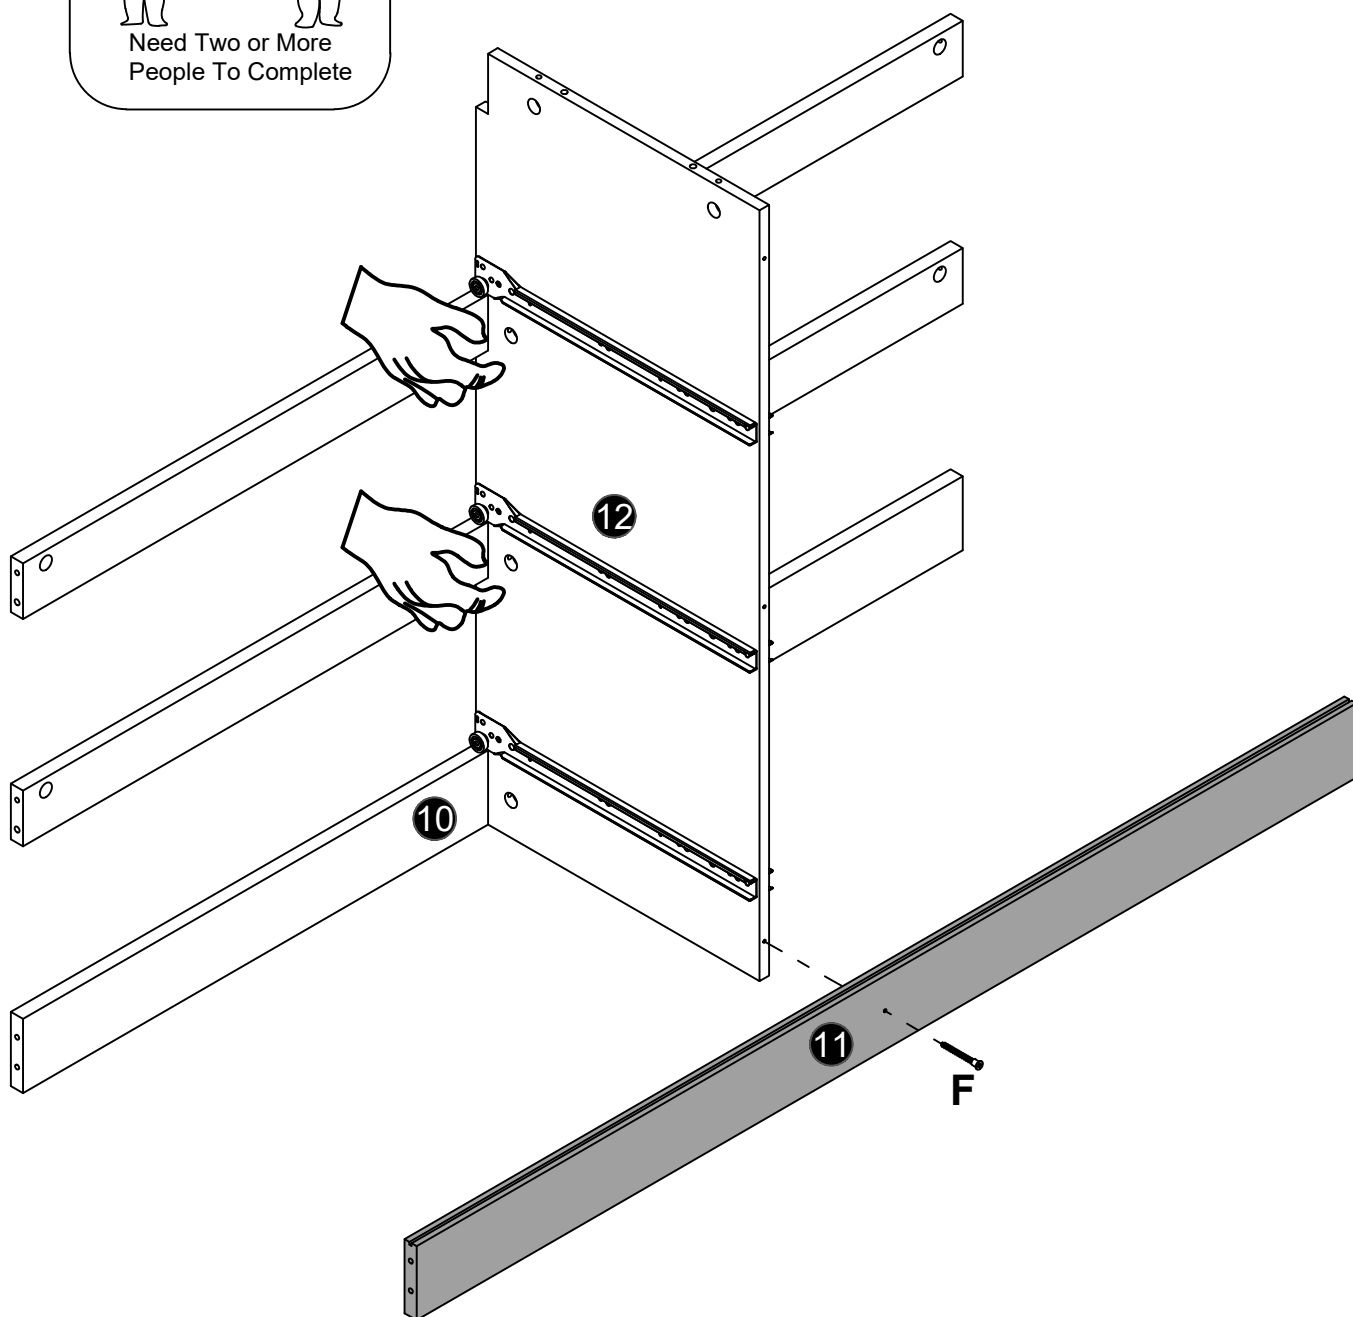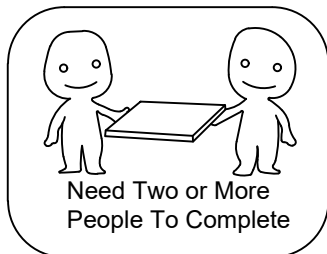




B x2



C x2



F x4

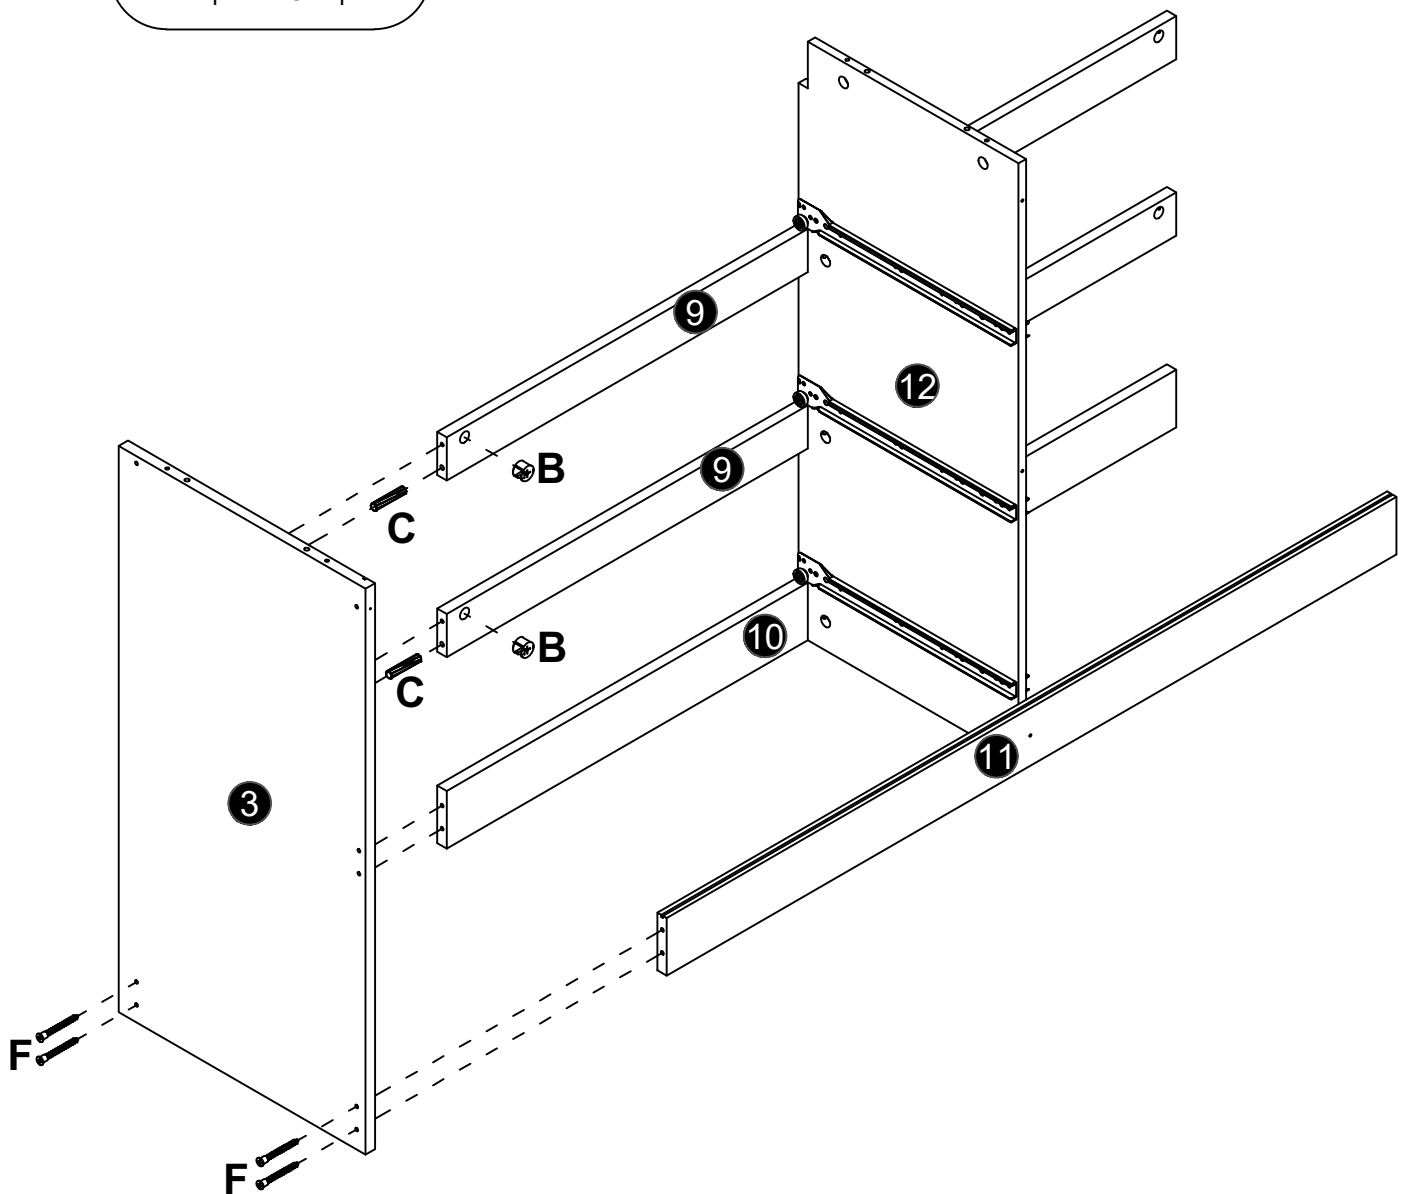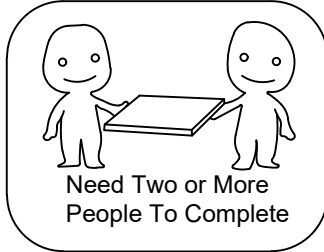




B x2






C x2




F x4

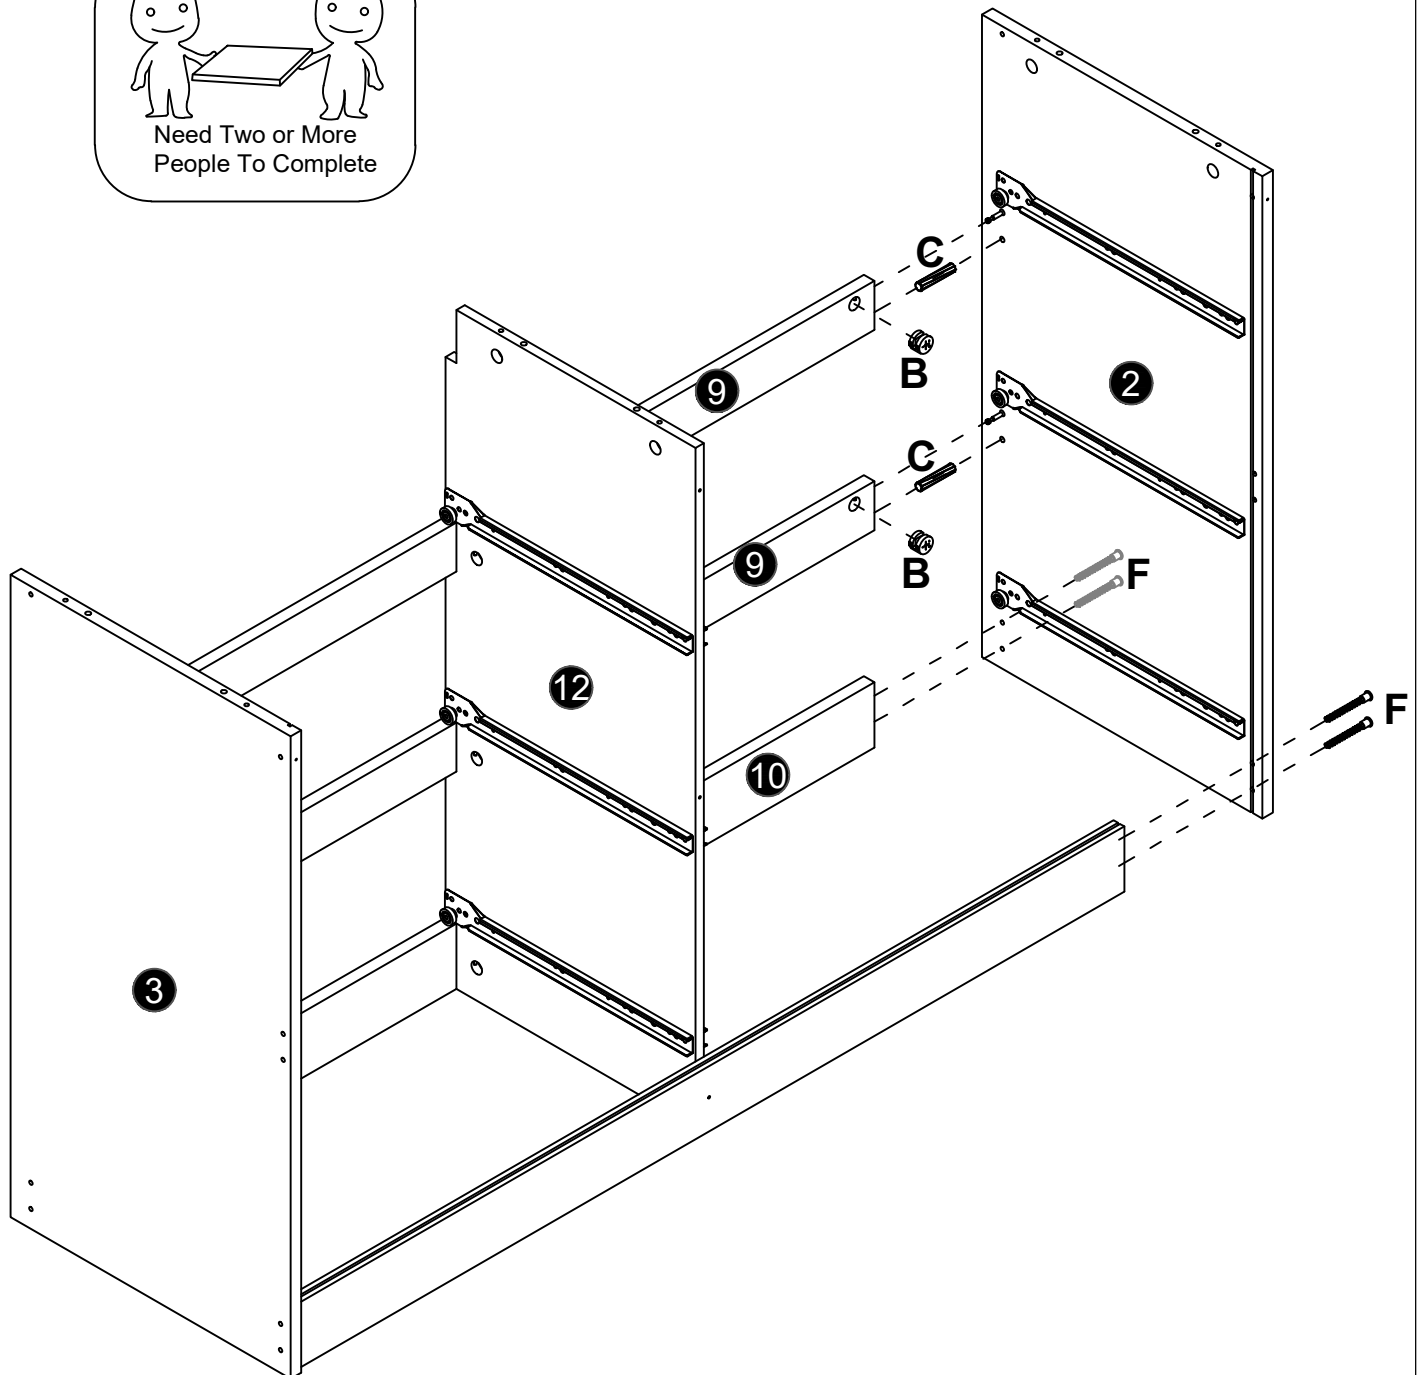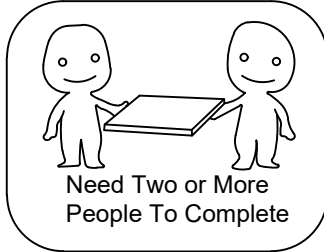


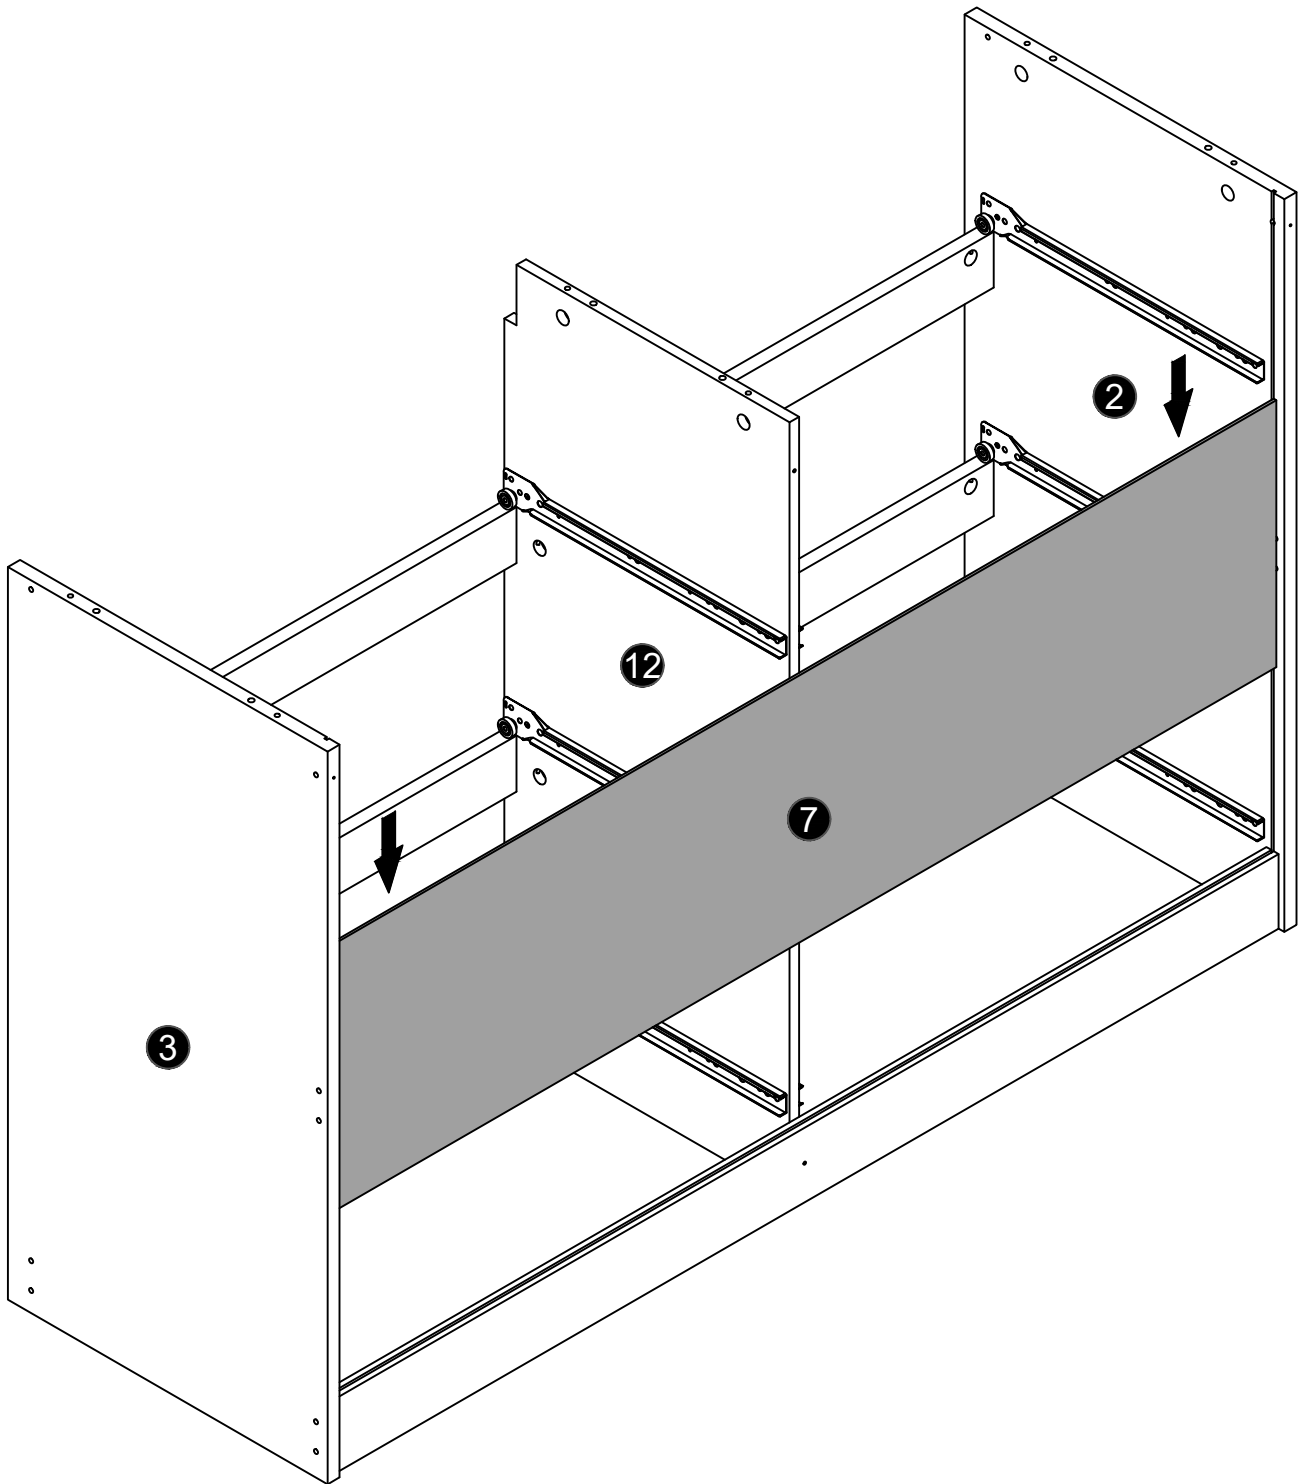

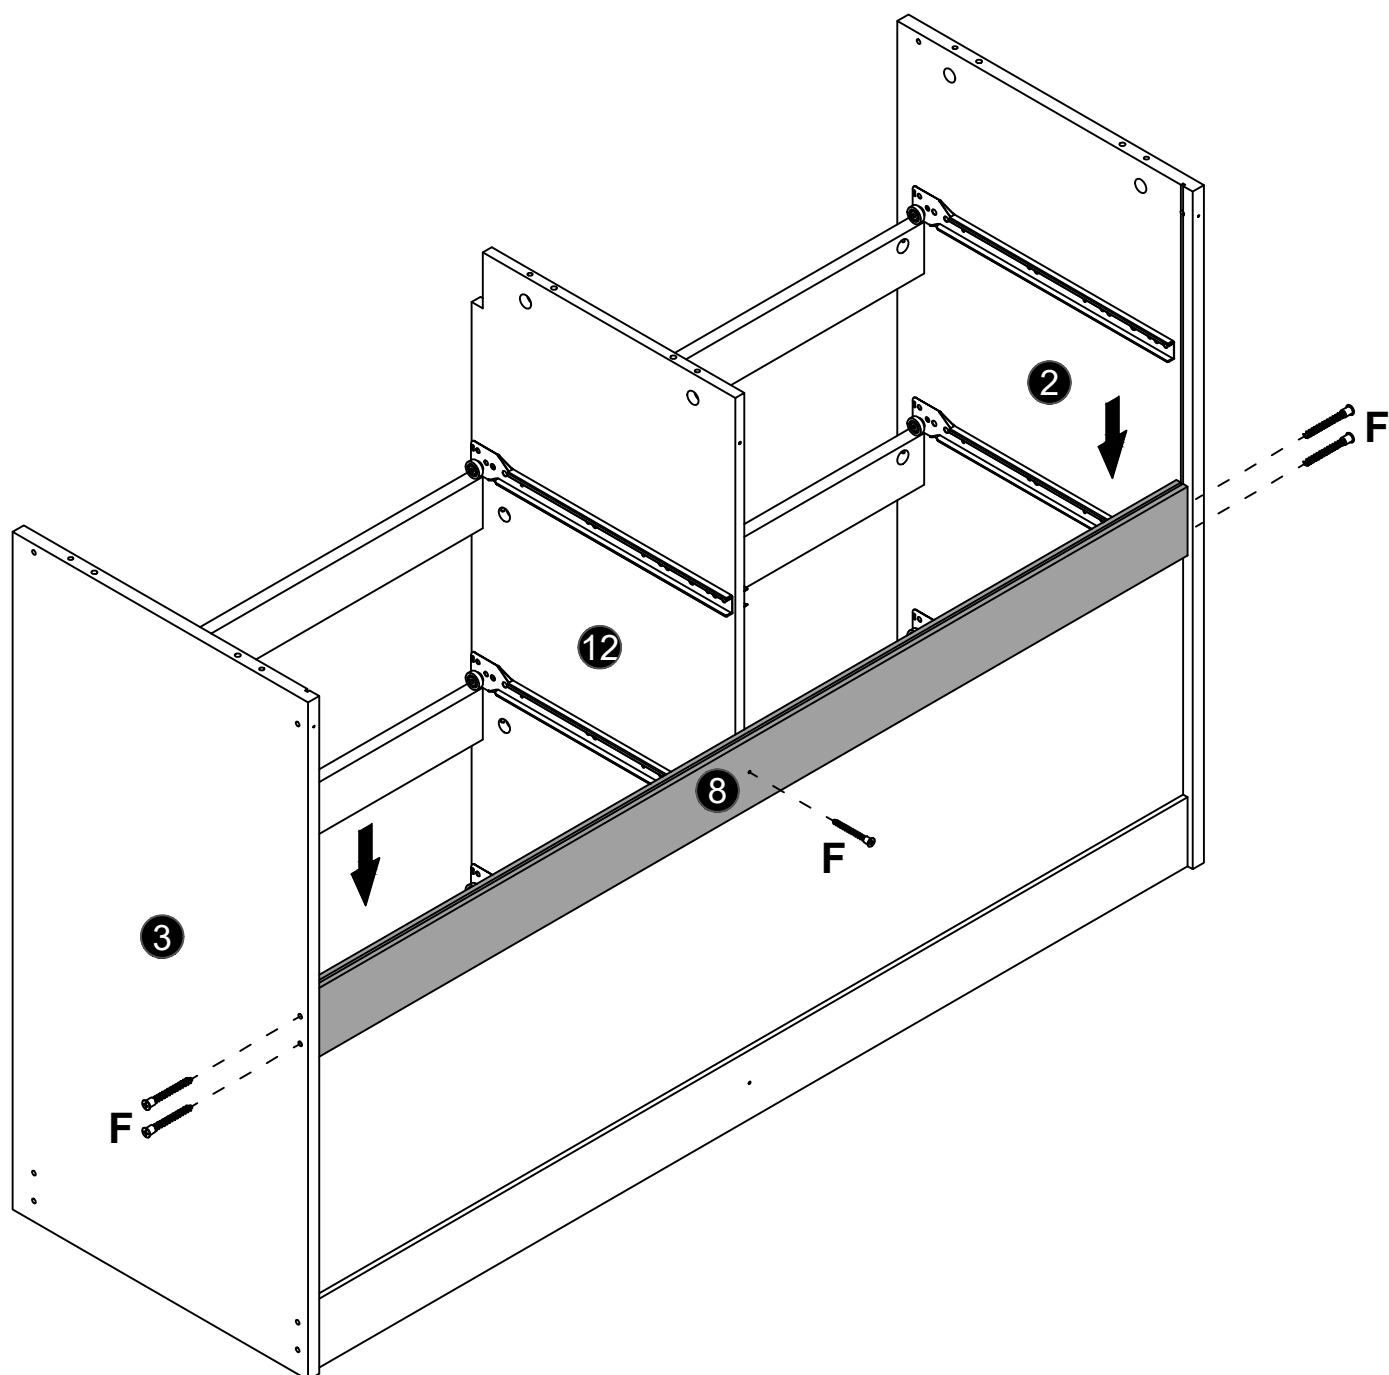


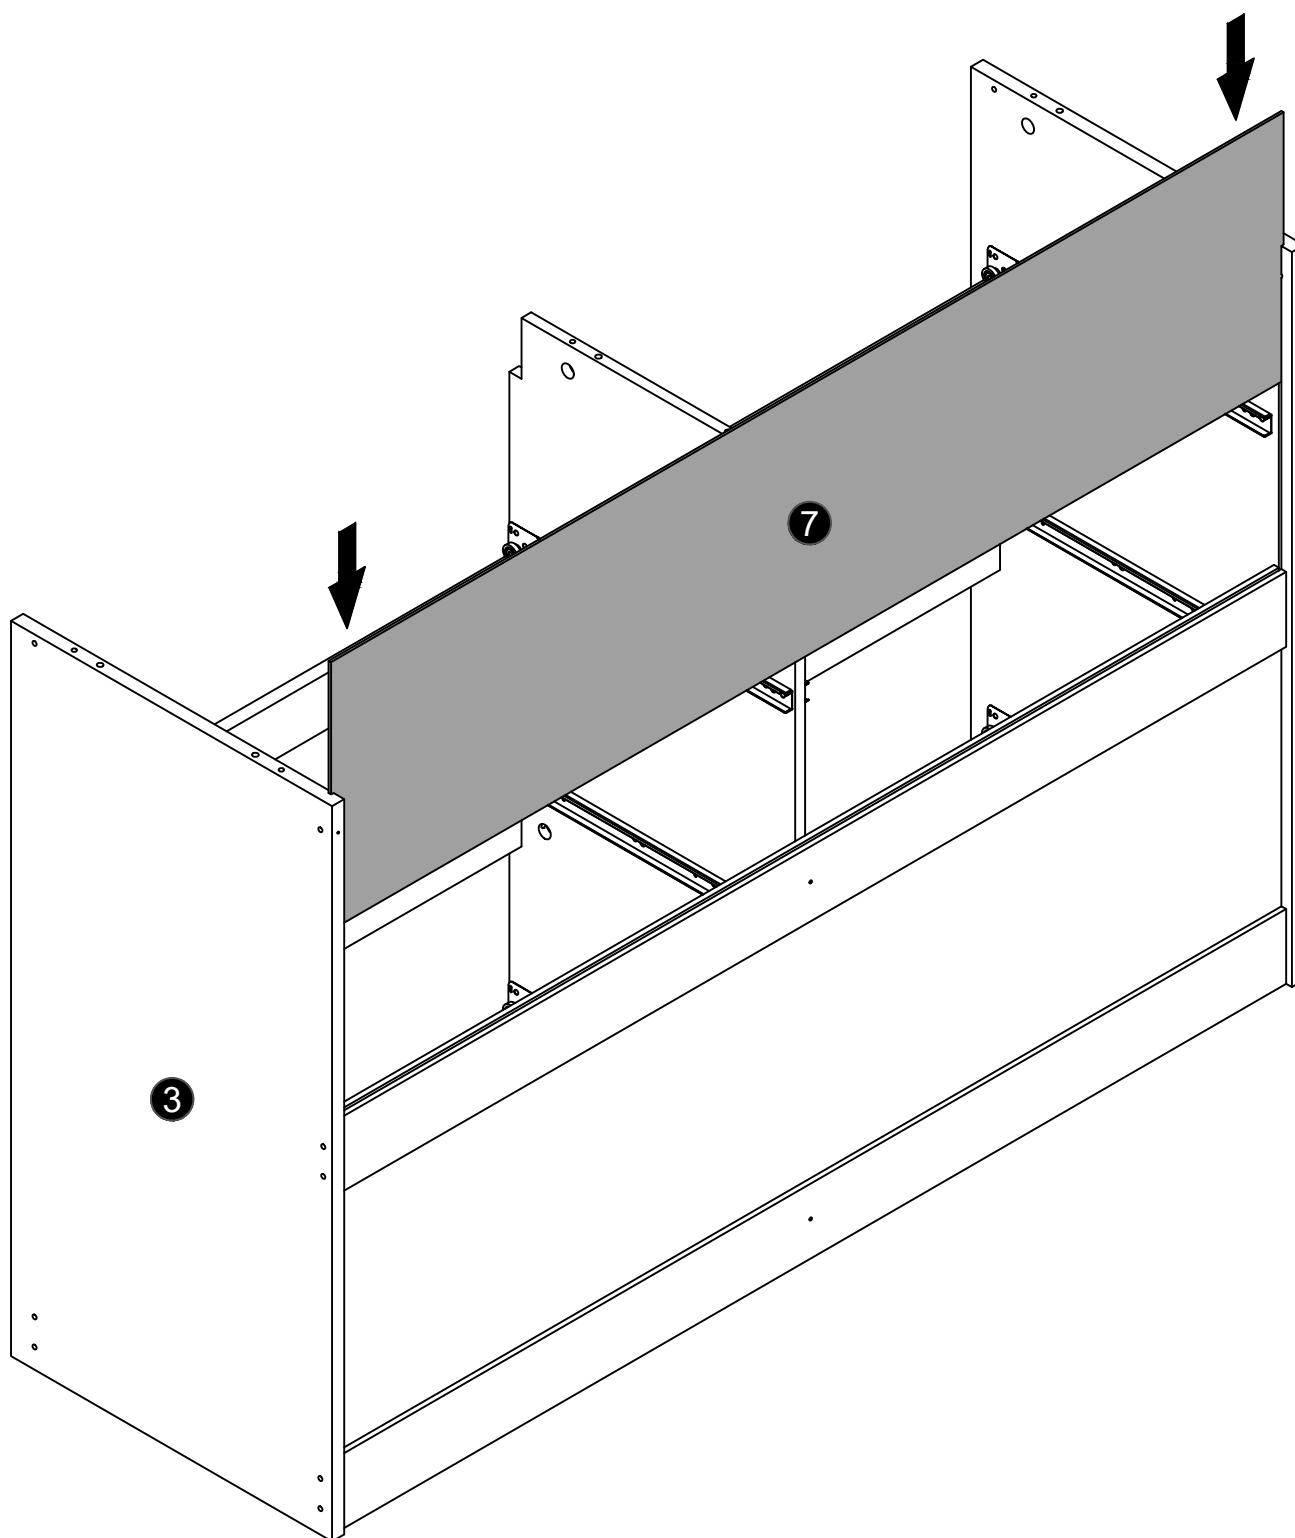



C x6




F x5

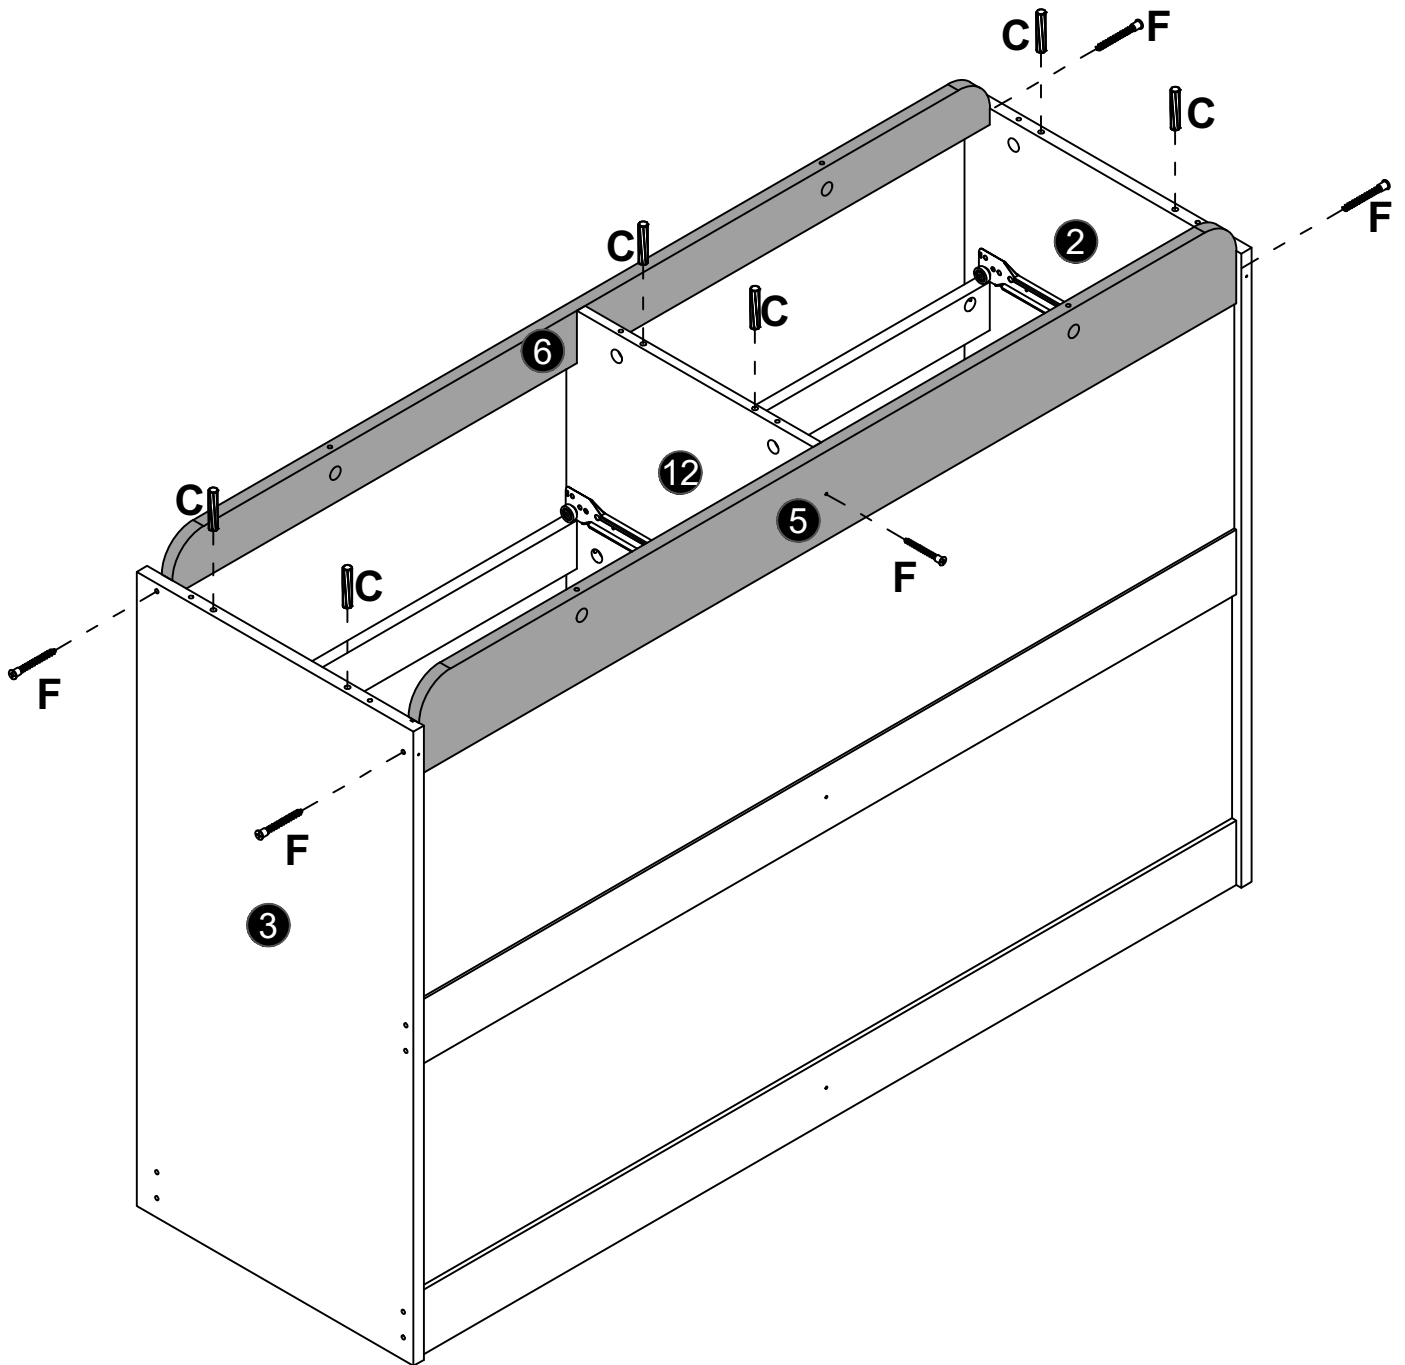

J x8

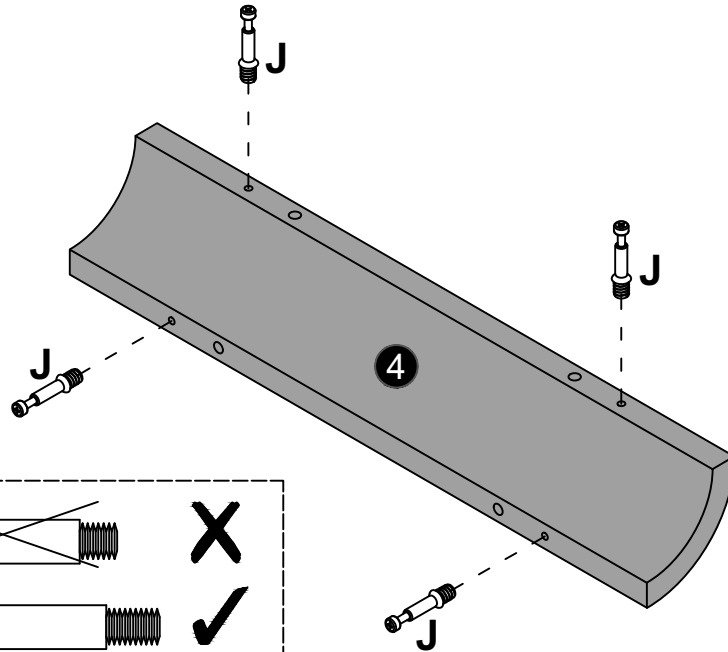


x2

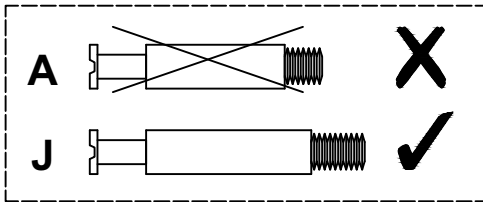

Caution :Need to use the correct part #J instead of part #A.


A x6



B x4





C x4

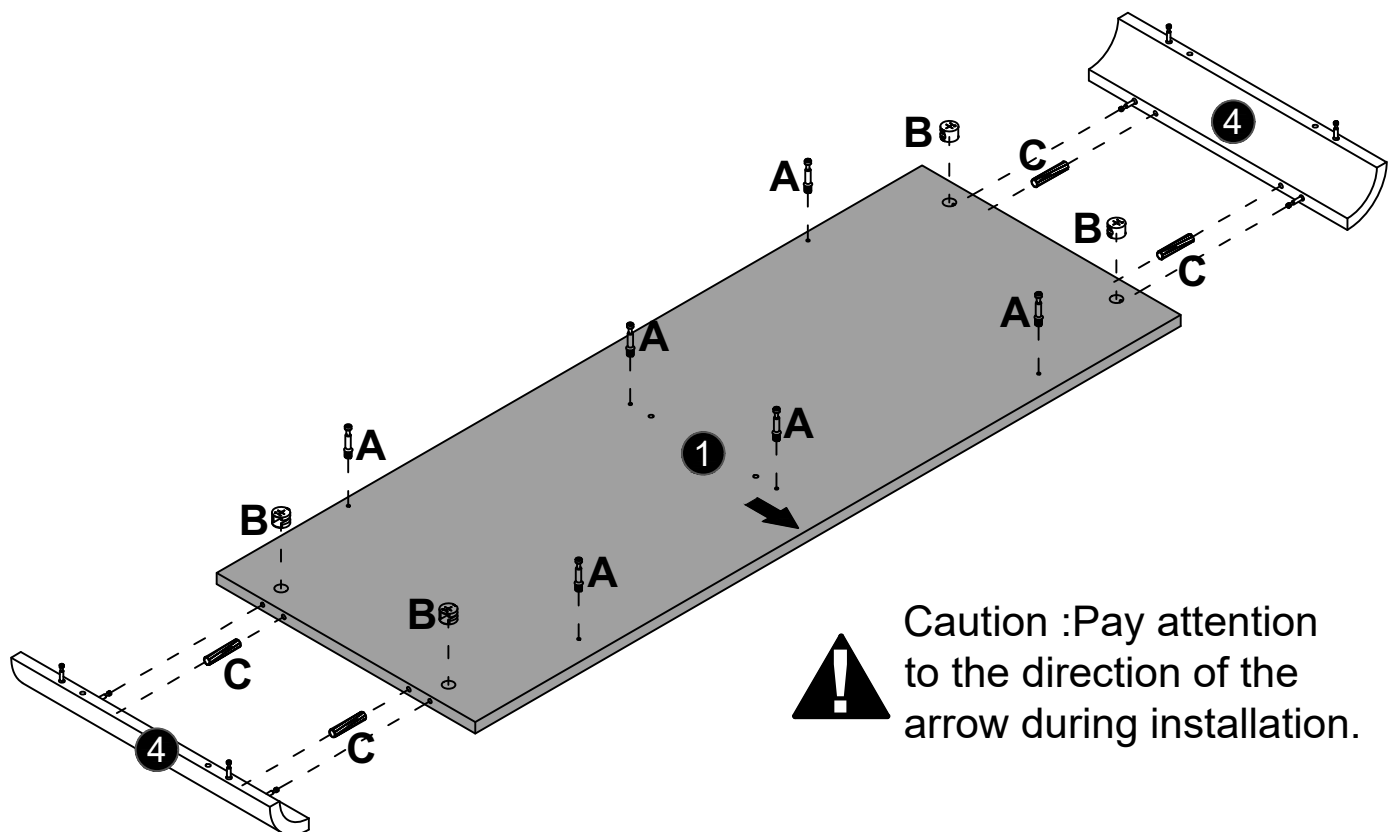


Caution :Pay attention to the direction of the arrow during installation.



Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

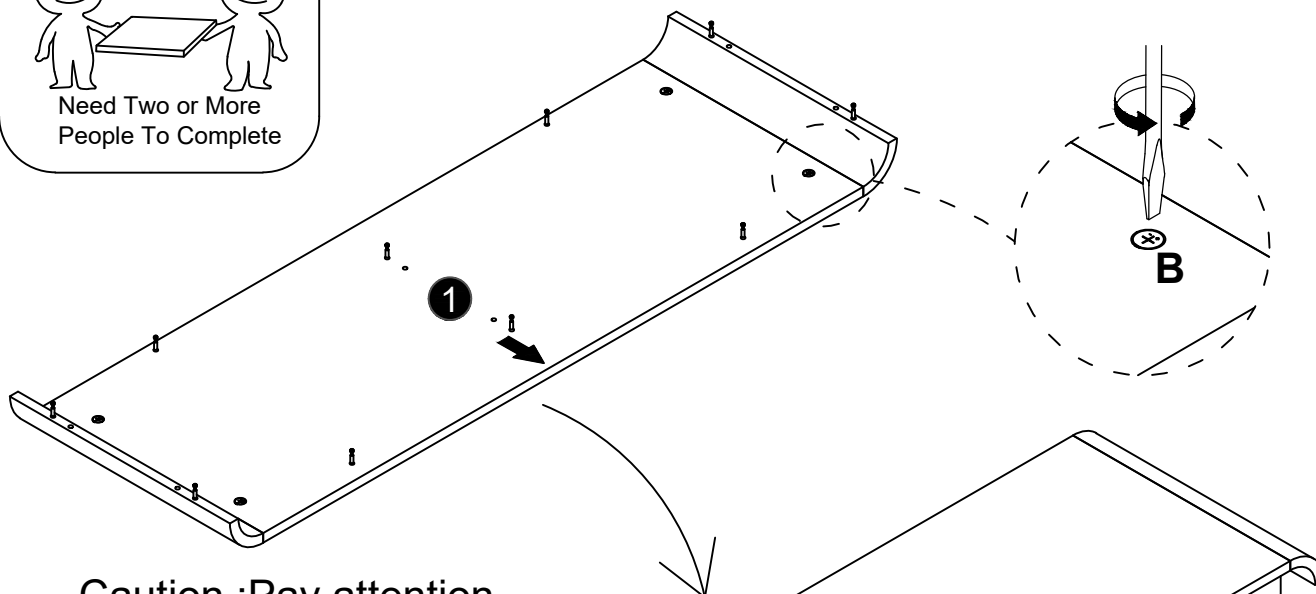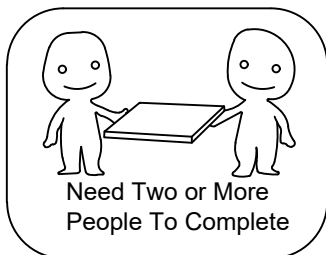

Caution : Pay attention to the direction of the arrow during installation.

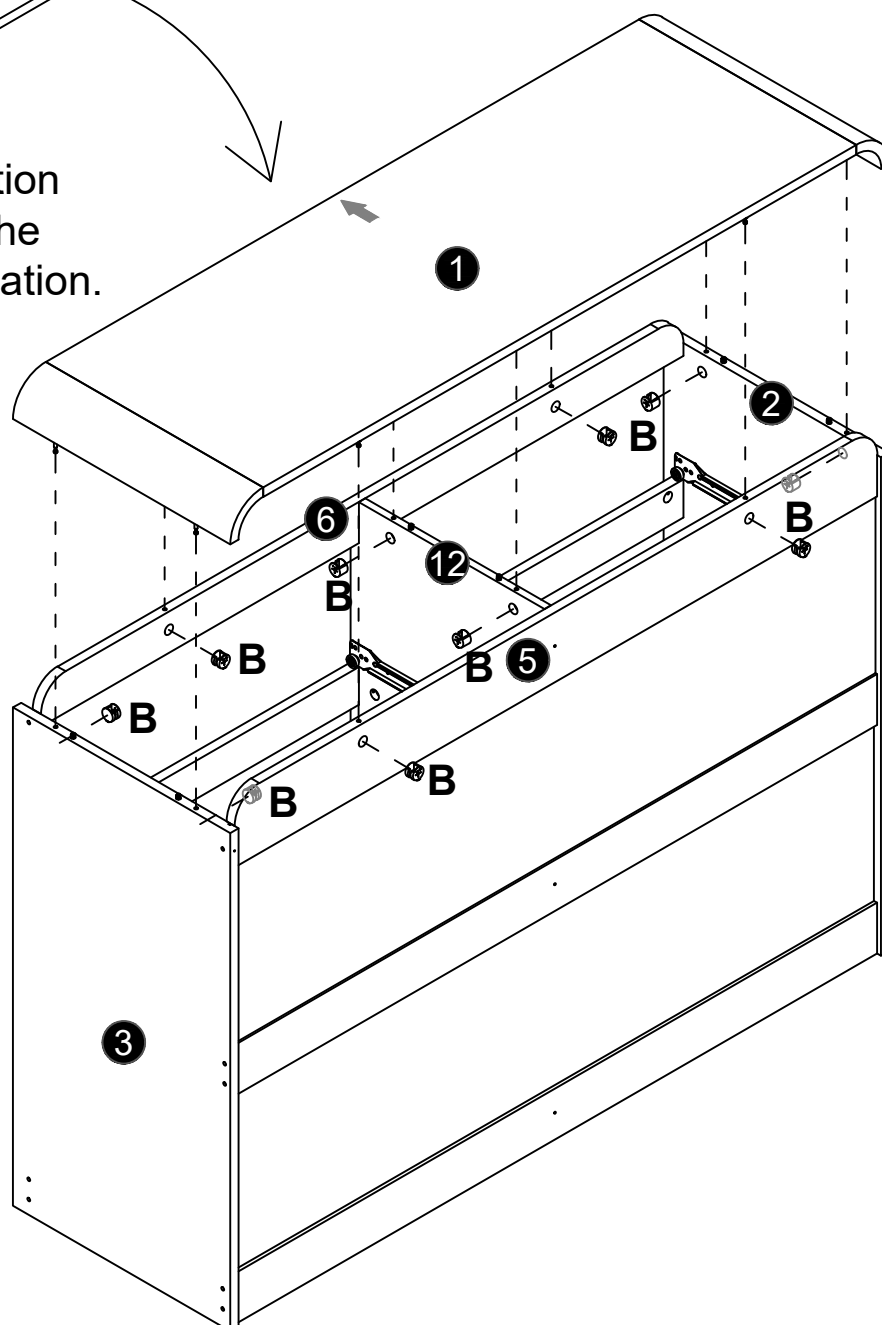


G x8






G-1





G-2

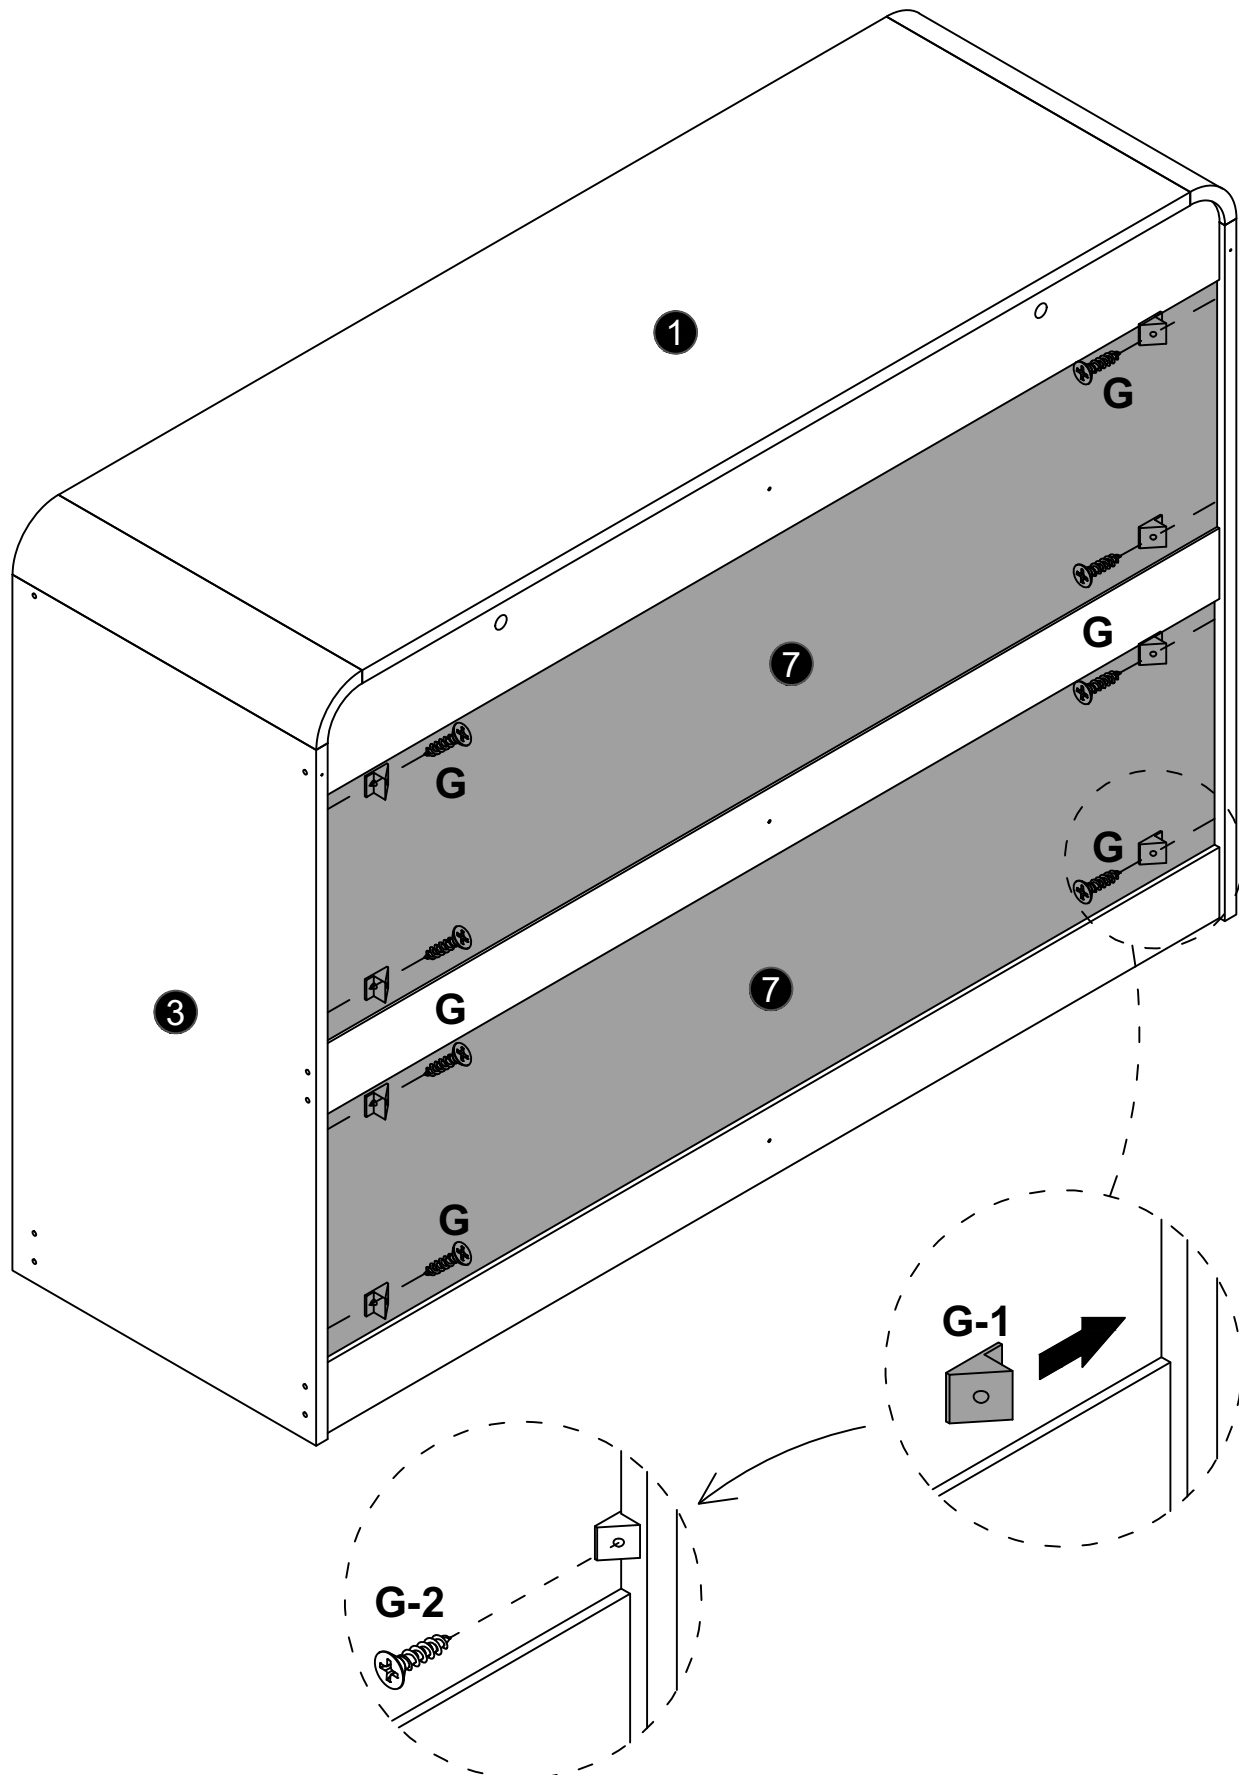


**Attention:** The drawers are divided into left drawer, middle drawer, and right drawer.  
 The picture shows the left drawer installed in the cabinet.

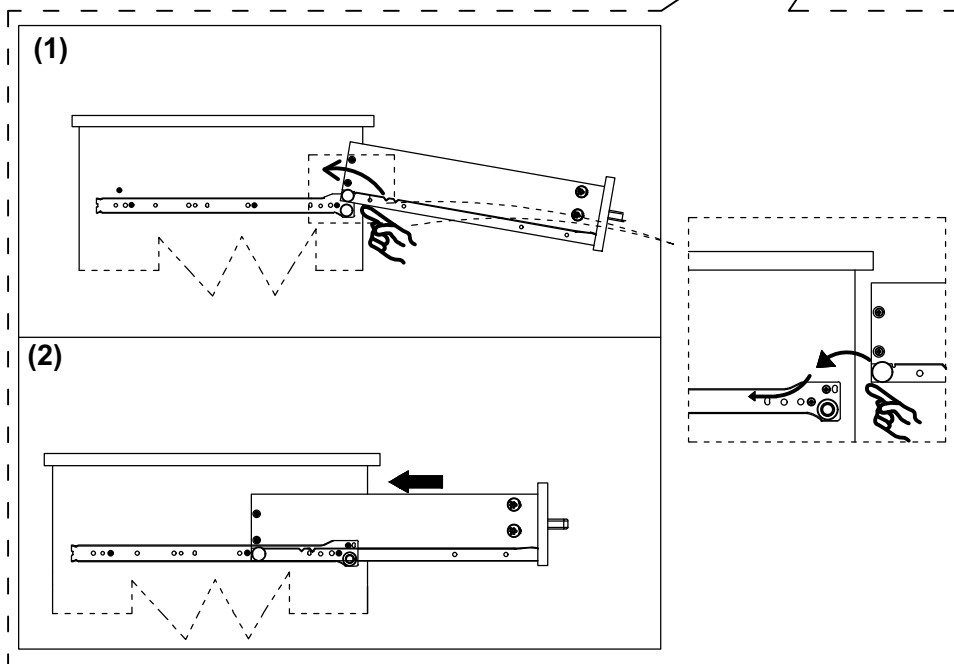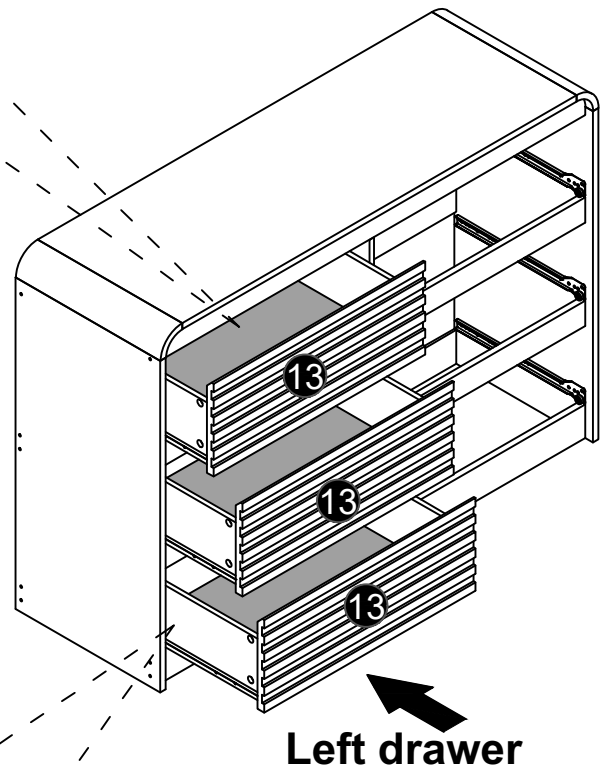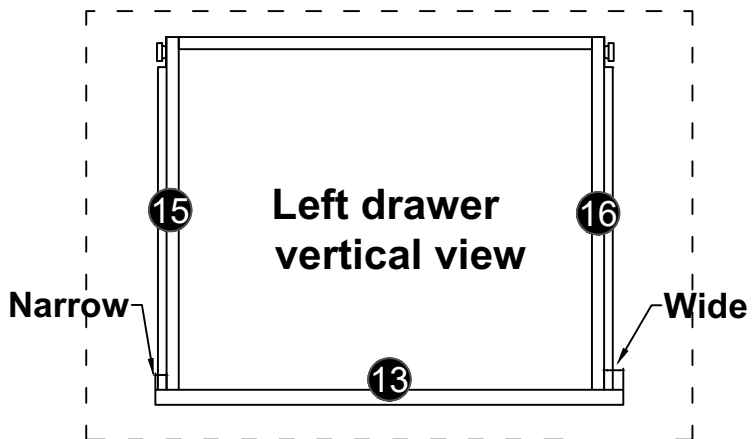


**Attention:** The drawers are divided into left drawer, middle drawer, and right drawer.  
**The picture shows the right drawer installed in the cabinet.**

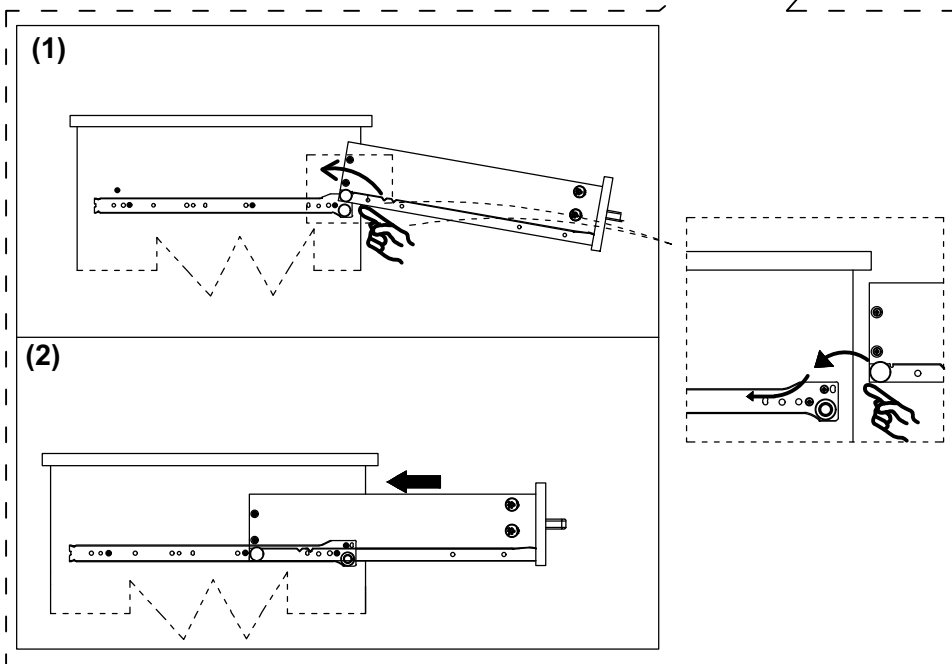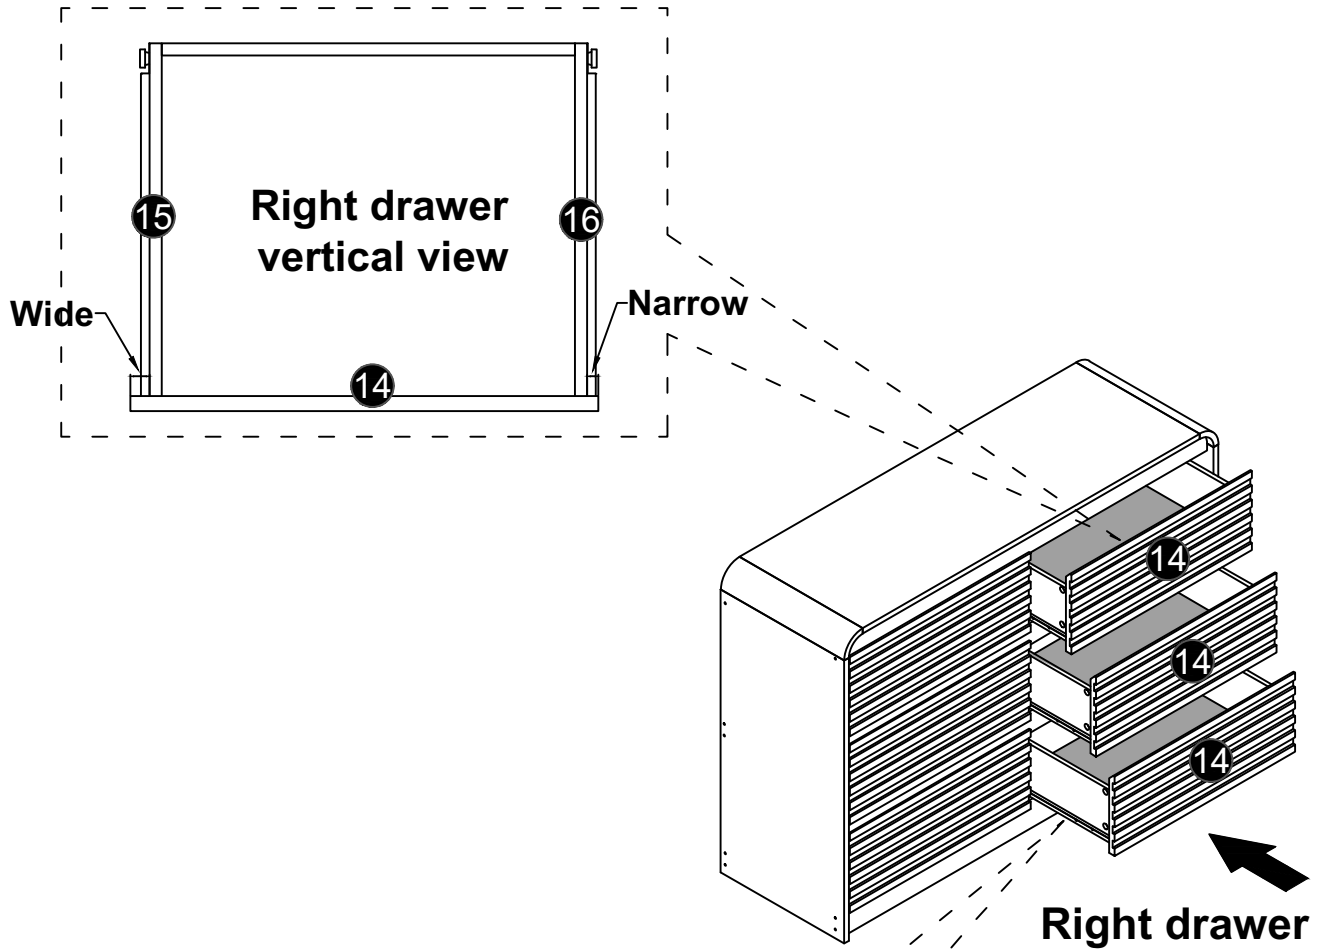

I x16

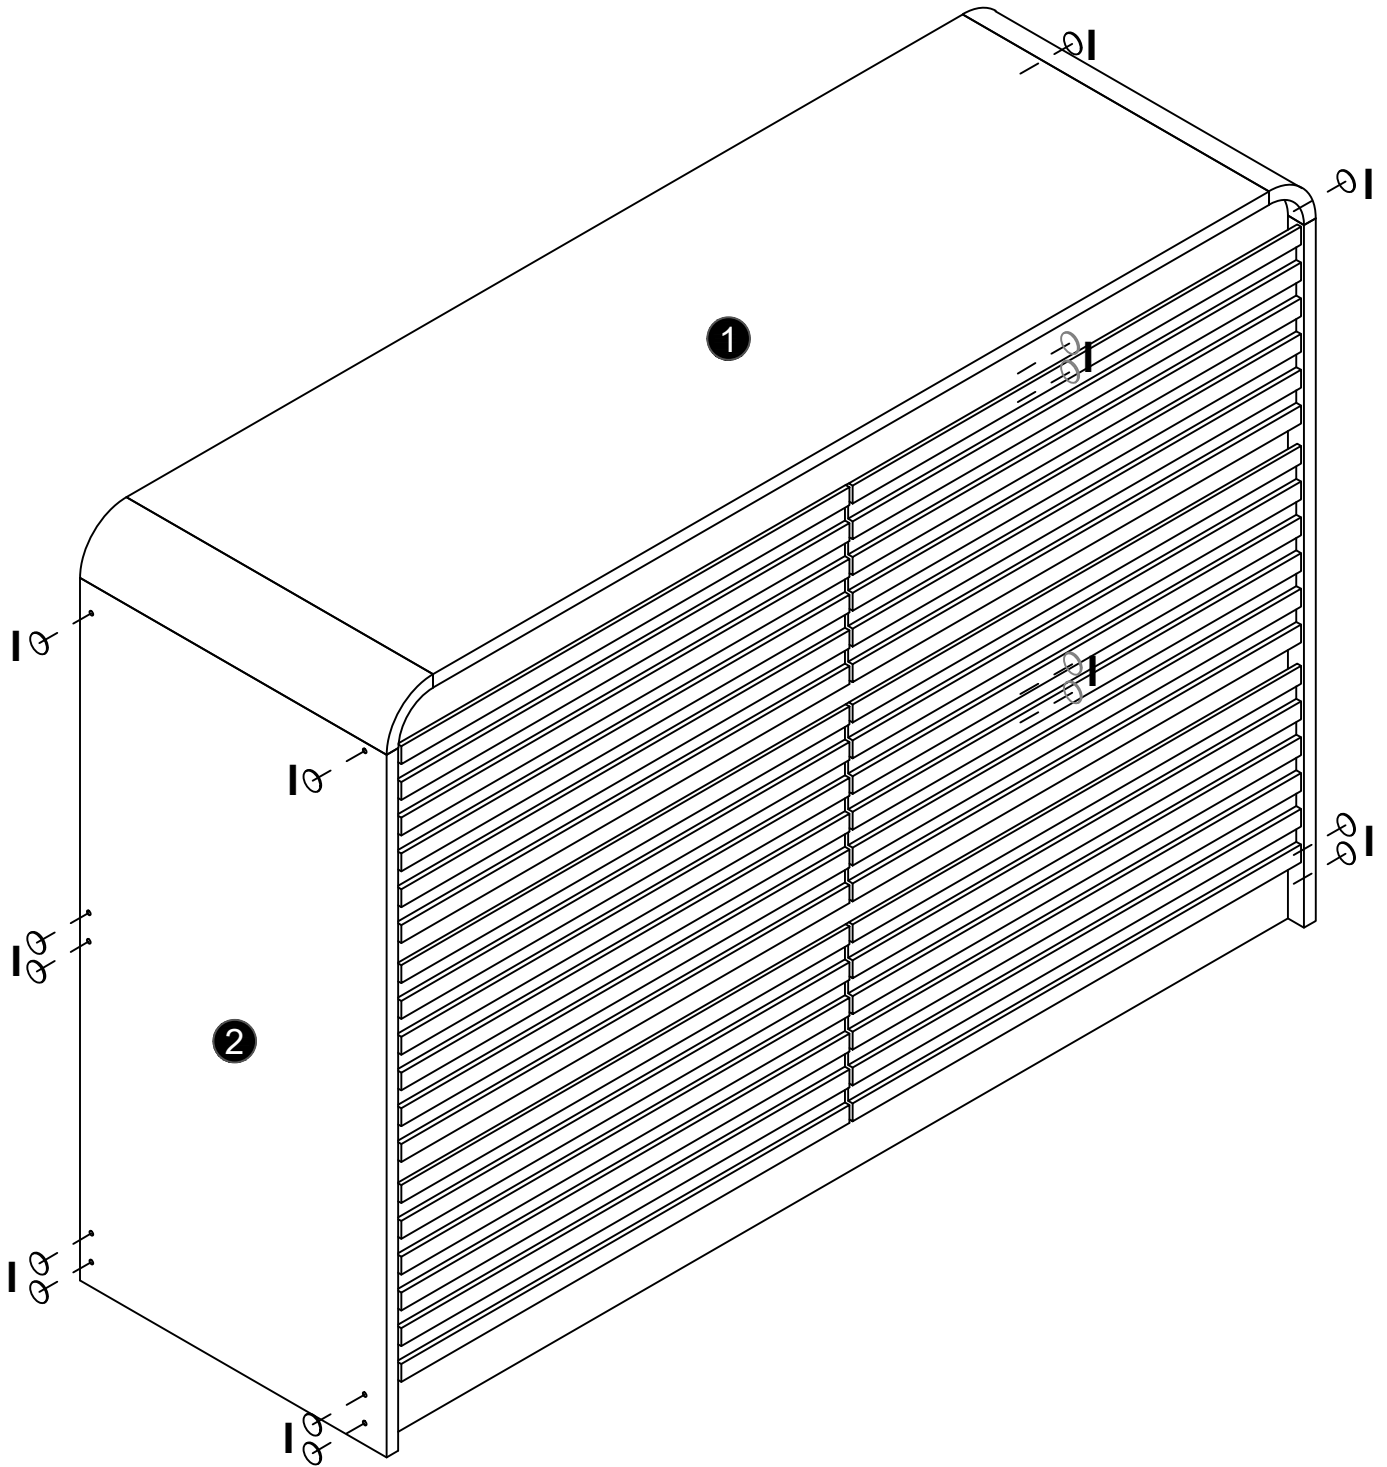

D x2



H x2



H-1



H-2




H-3

H-1

First fix the anti-rewind screw in the reserved hole of the product.

H-2

(1)x2

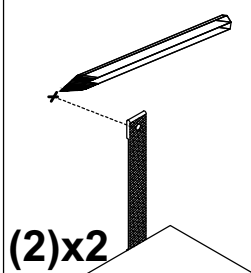

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

+  
drilling hole  
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

H-3

(4)x2

WALL

H-3

D

(5)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

