

Tall Cabinet with Glass Door

ASSEMBLY INSTRUCTIONS





IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER
FOR DOMESTIC USE ONLY
CARE AND MAINTENANCE

DO NOT USE AS BEDROOM FURNITURE!

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is Wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use soft cotton or micro fibre cloth and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.


Create thousands of unique looks with this versatile range! Designed to complement every part of your home—living room, entrance hall, office, library, laundry, and beyond. Discover your perfect combination today!

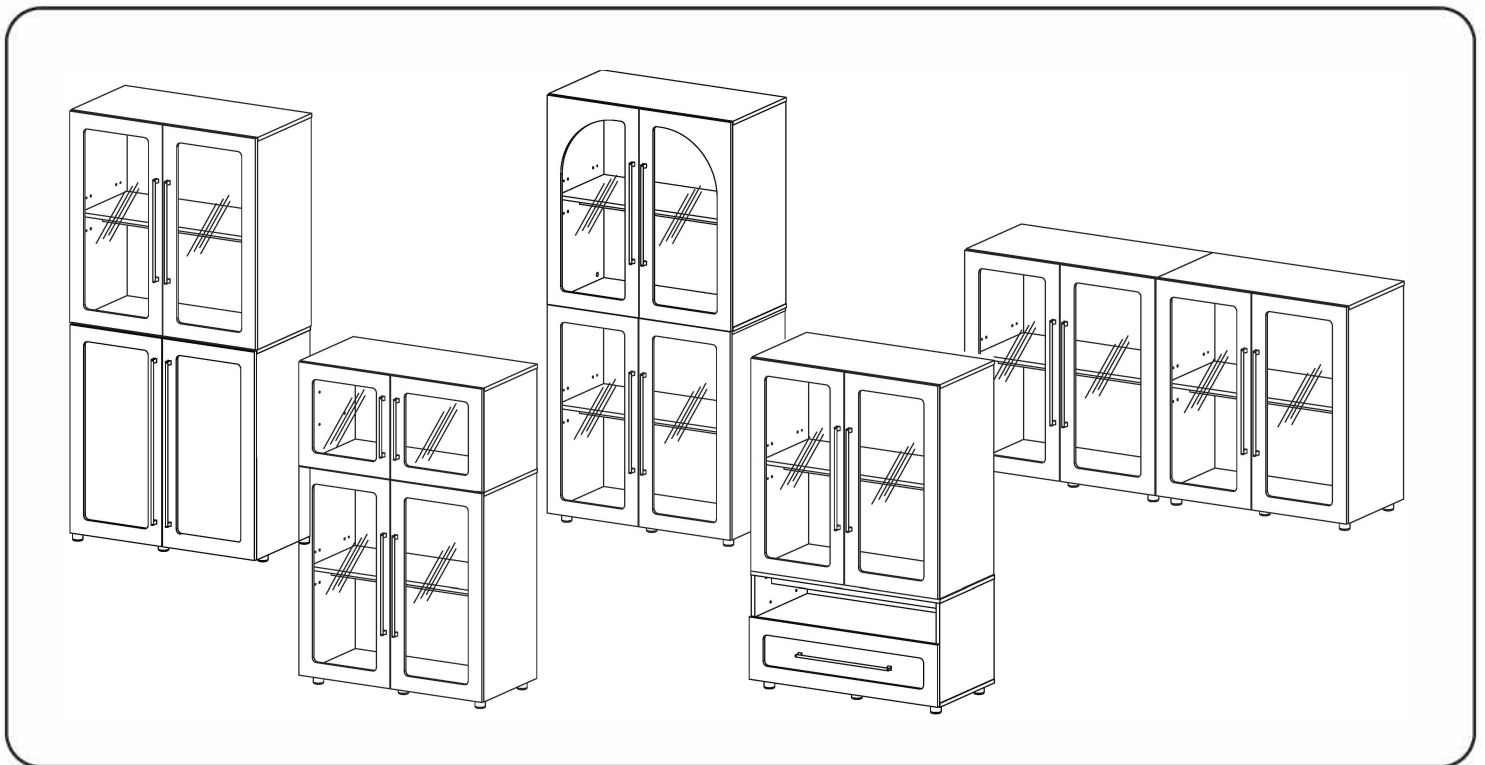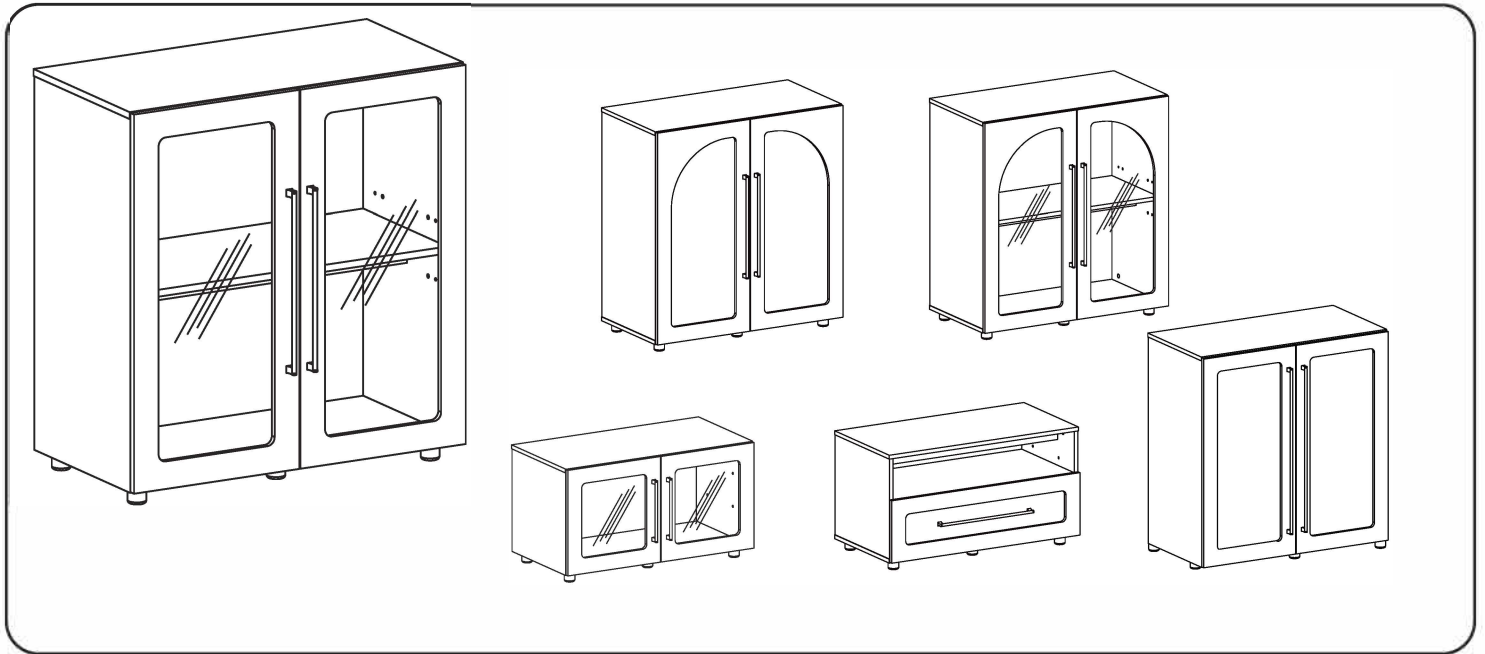










Parts List

Part Number	Description	Quantity
01	Bottom Panel	1
02	Left Panel	1
03	Top Panel	1
04	Right Panel	1
05	Shelf	1
06	Back Panel	1
07	Foot	5
08	Door	2
09	Glass Door Front	2
10	Top Rail	1
11	Shelf Rail	1

EPA TSCA Title VI and California 93120
Phase 2 compliant for formaldehyde

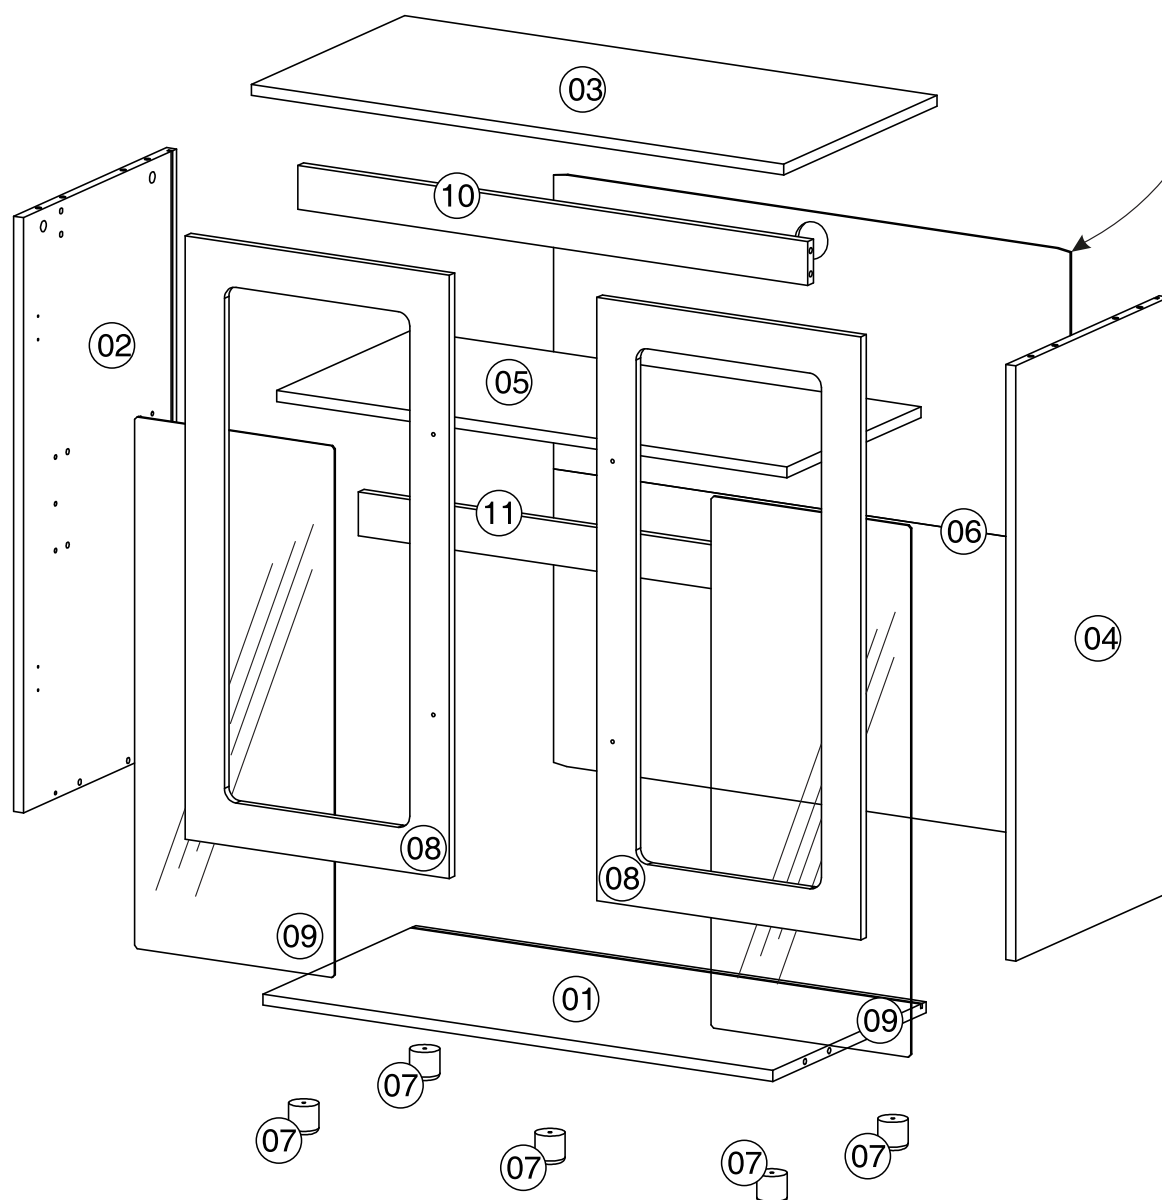


Hardware List

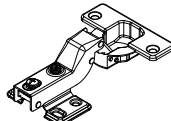Part	Size	Name	Quantity
A 	8x30mm	Wooden dowel	14
B 	Ø7x30mm	Cam Bolt	11
C 	Ø15x10mm	Cam Lock	11
D 	Ø3.5x12mm	Screw	20
E 	Ø3.5x25mm	Screw	4
F 	Ø4x14mm	Screw	24
G 	Ø4x20mm	Screw	5
H 	Ø5x40mm	Screw	5
I 	Ø3x16mm	Screw	8
J 	Ø 19mm	Sticker	19
K 	14.7x30mm	Support	8
L 	384mm	Handle	2
M 	Ø35mm	Metal Hinge	4
N 	25x12mm	Door Latch	20
O 	1/4x5/8	Washer	2
P 	20x200mm	Wall Anchor	1
Q 	6x18mm	Shelf Support	4

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*


Step 1

Let's get started! Insert Wooden Dowels (A) into Bottom Panel (1), Left Panel (2), Right Panel (4), Top Rail (10) and Shelf Rail (11). Also, attach Cam Bolts (B) to Left Panel (2), Top Panel (3) Right Panel (4) and Shelf (5) using a Phillips screwdriver.

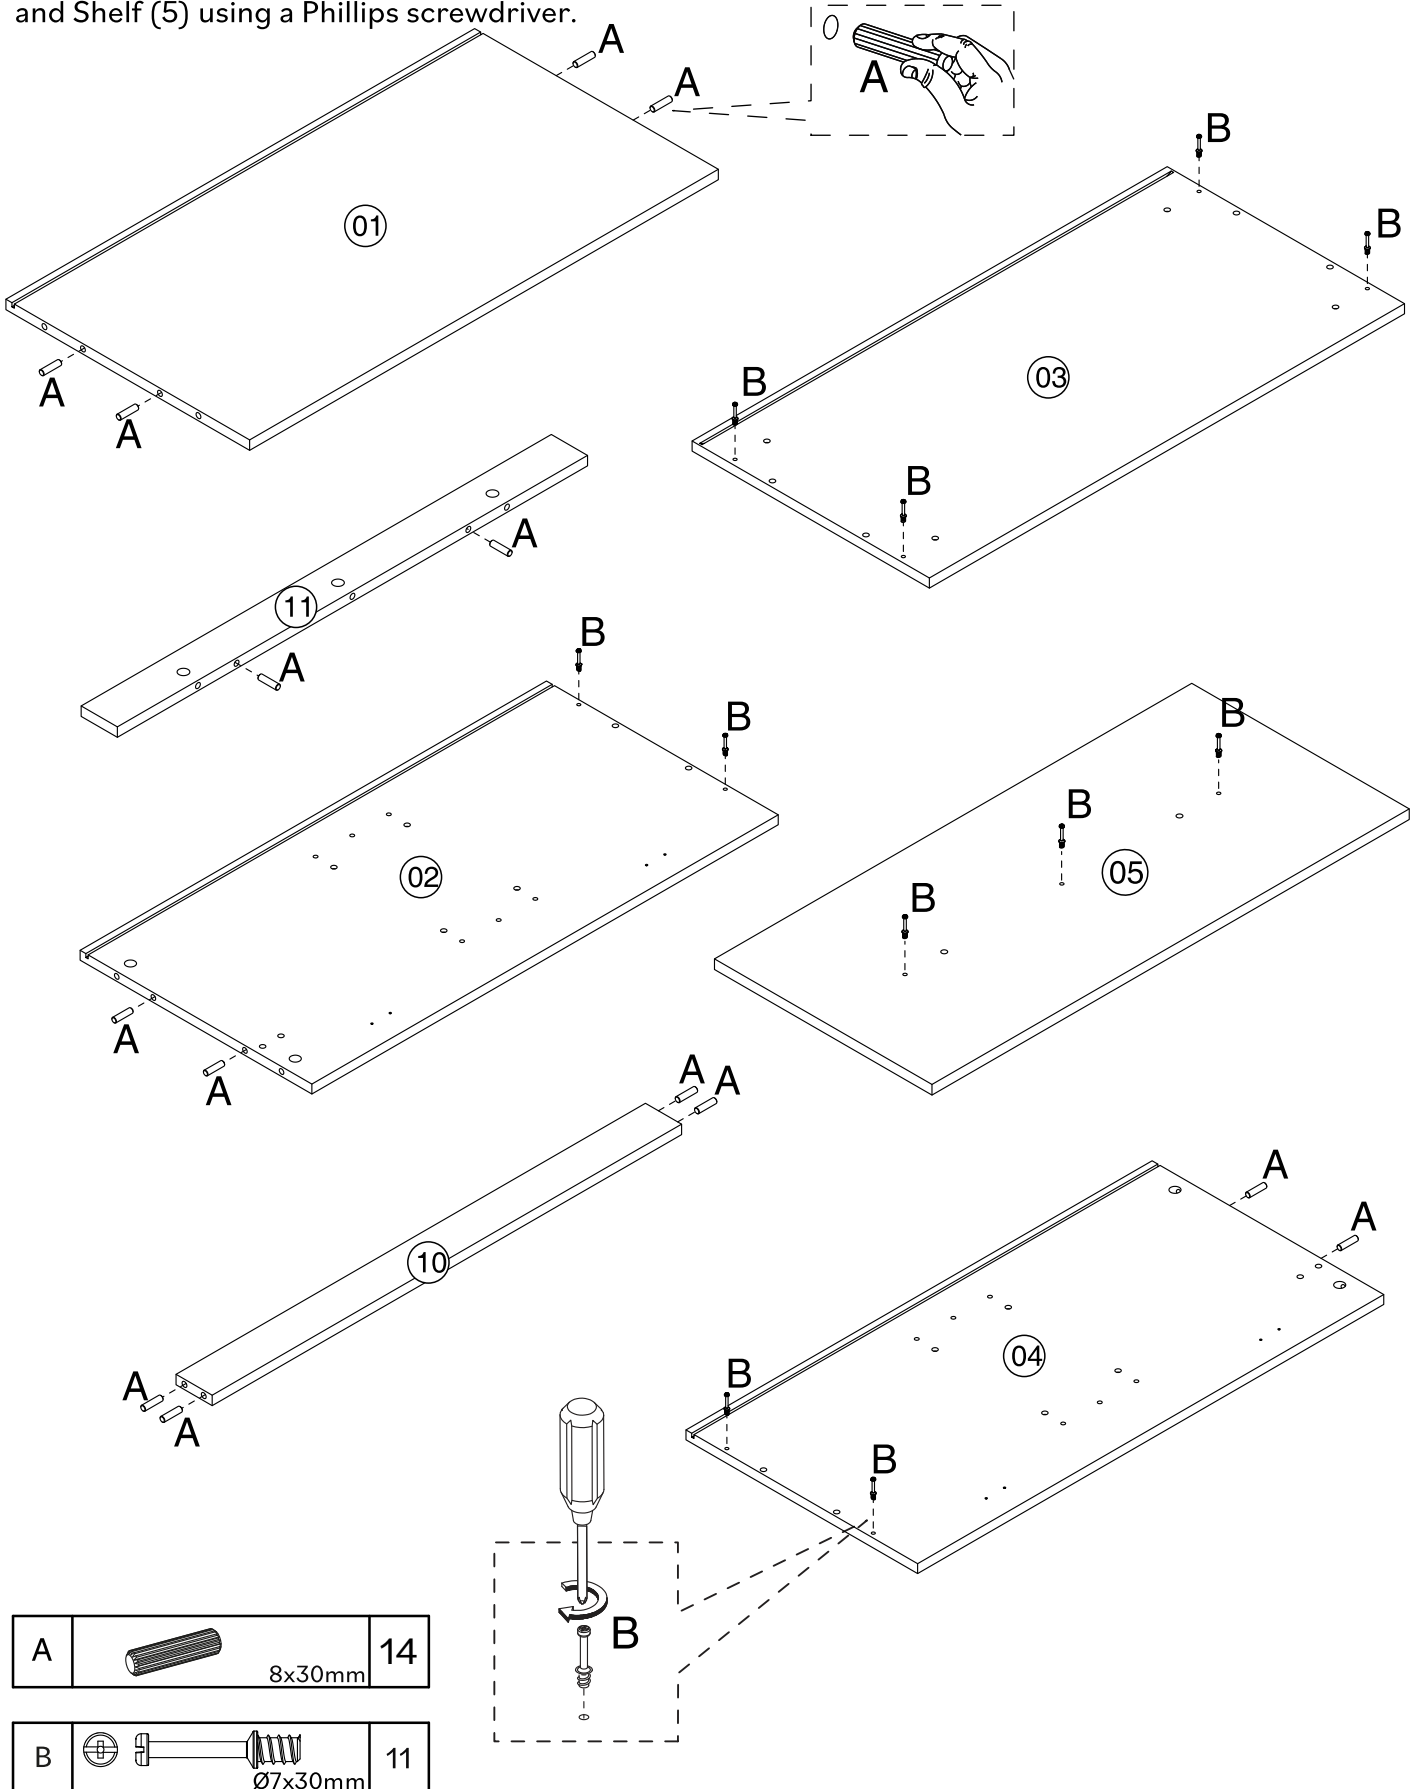

Step 2A

Remove the safety tape and insert Glass Door Front (9) in Doors (8) and secure using Door Latch (N), Screw (D) and a Phillips screwdriver.

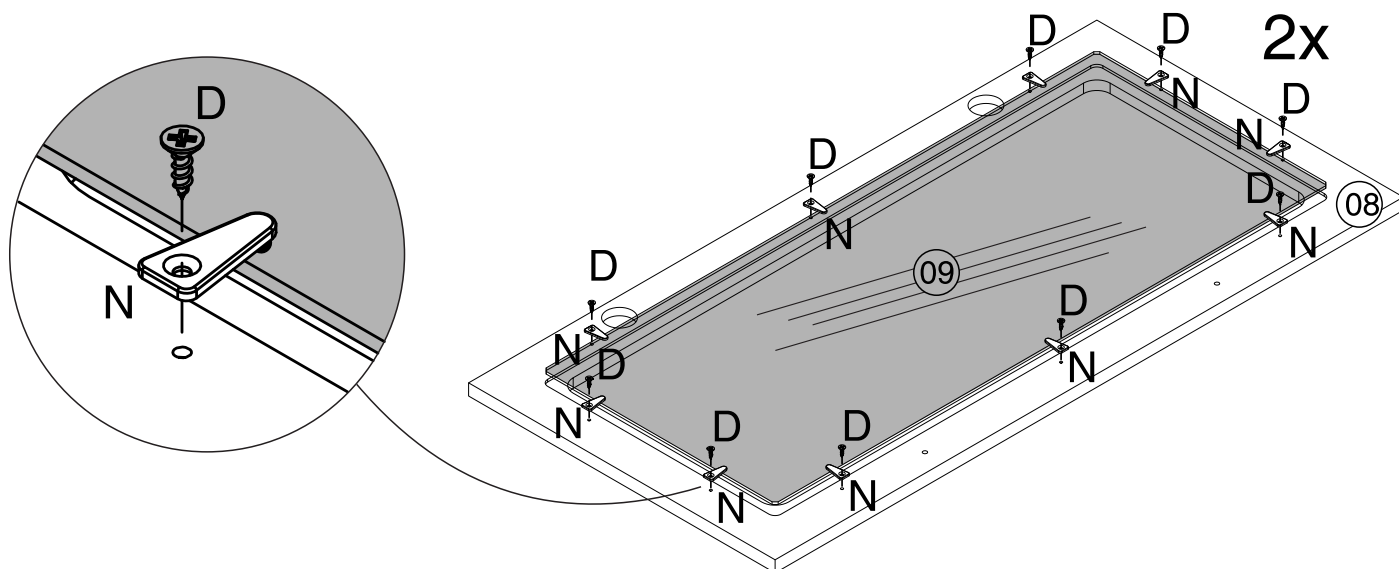


D		Ø3.5x12mm	20
---	--	-----------	----

N		25x12mm	20
---	--	---------	----

Step 2B

Attach Hinges (M) to Doors (8) using Screw (F) and a Phillips screwdriver.


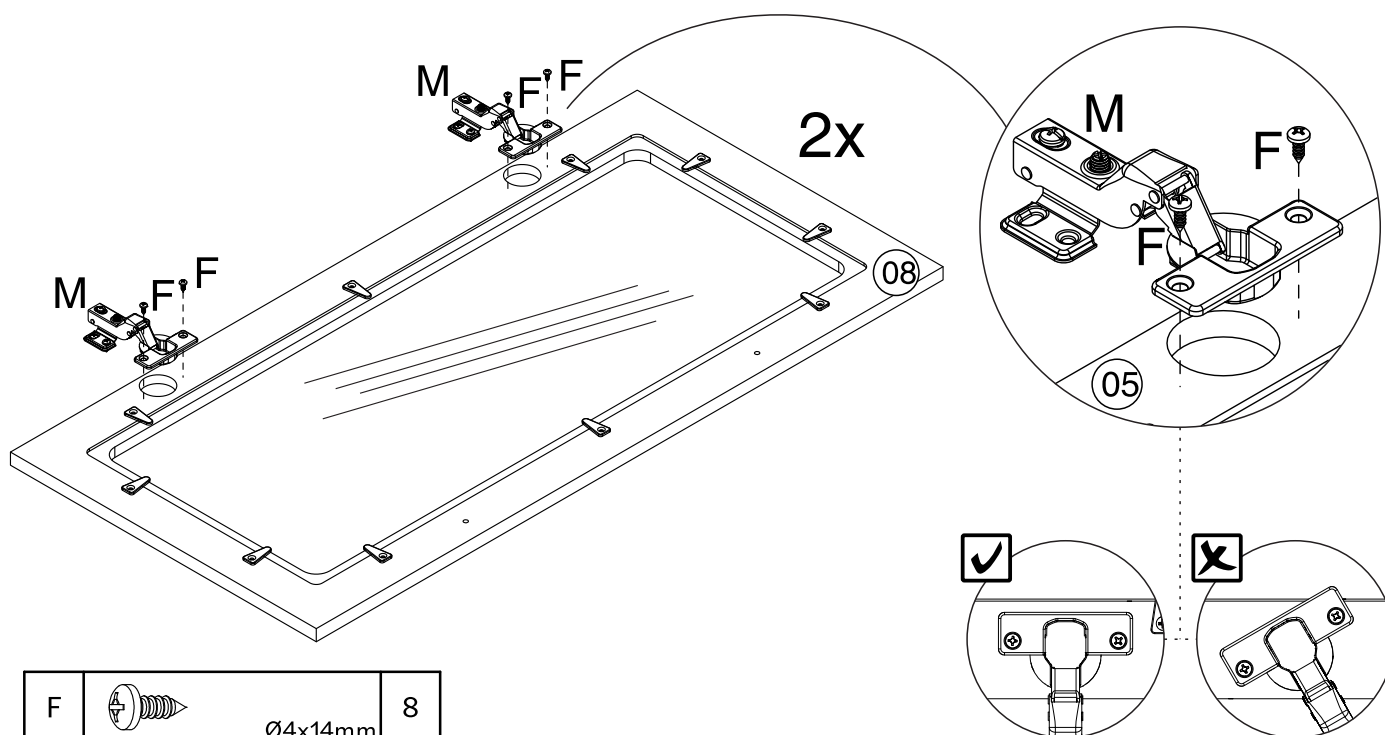


F		Ø4x14mm	8
---	--	---------	---

M		Ø35mm	4
---	--	-------	---


Step 3

Join Bottom Panel (1) and Left Panel (2) using Cam Locks (C) and a Phillips screwdriver add sticker.

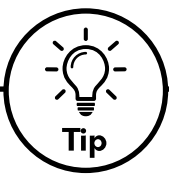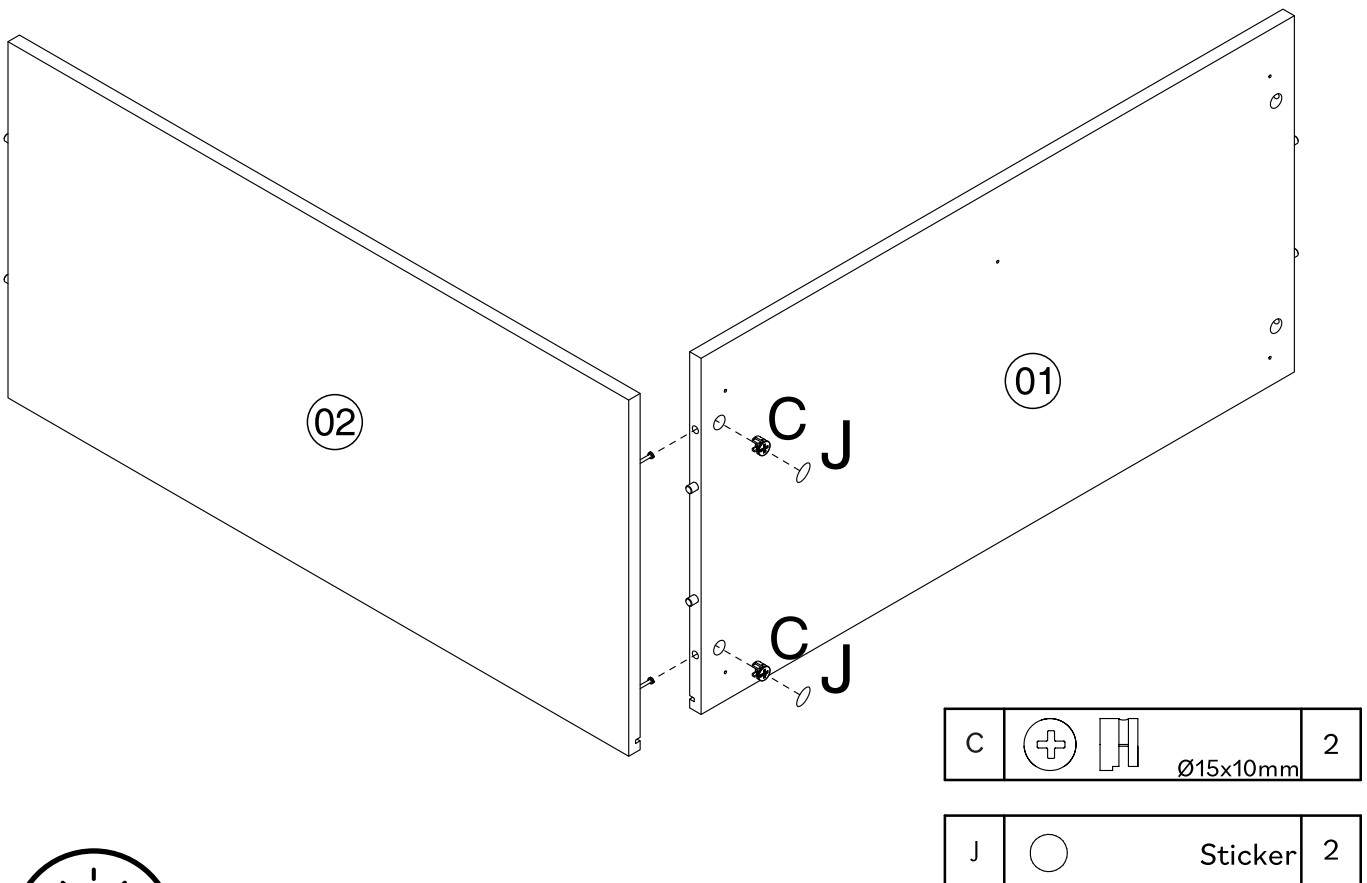


Cam Locks


Cam Locks help to securely join two pieces together.
Follow these easy steps.

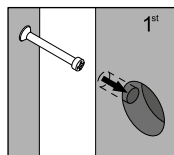

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

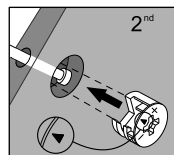


2: Assemble both parts together. The cam bolts go in the drill holes that have a circular hole on the side, you should be able to see the cam bolts through it. After fitting parts together insert the cam lock on the side holes.

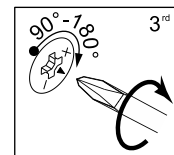


3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with


Step 4





Secure Top Rail (10) and Right Panel (4) using dowels, Cam Locks (C) and a Phillips screwdriver add sticker.

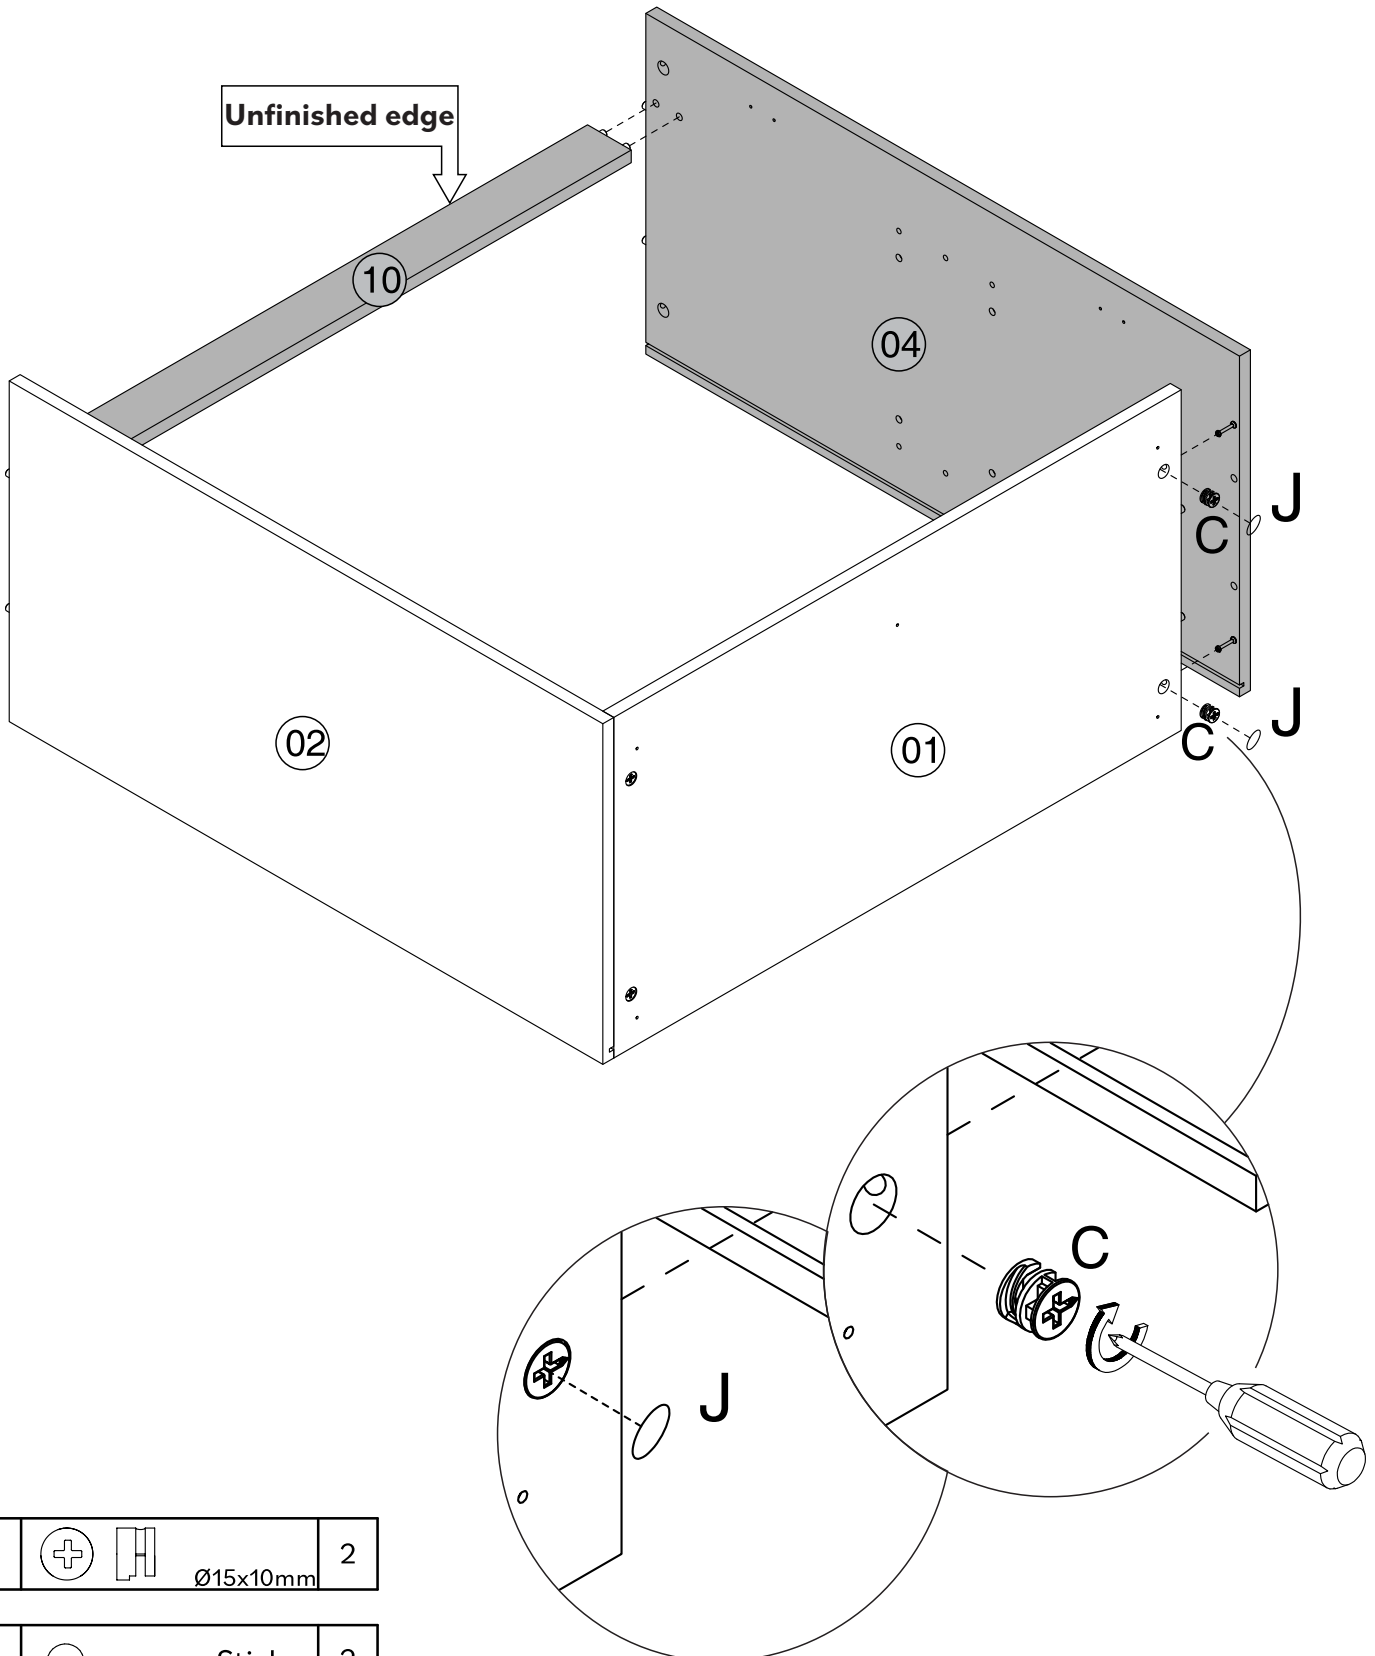

Step 5




Slide Back Panel (6) between the grooves on Left Panel (2) and Right Panel (4) fitting in Bottom Panel (1).

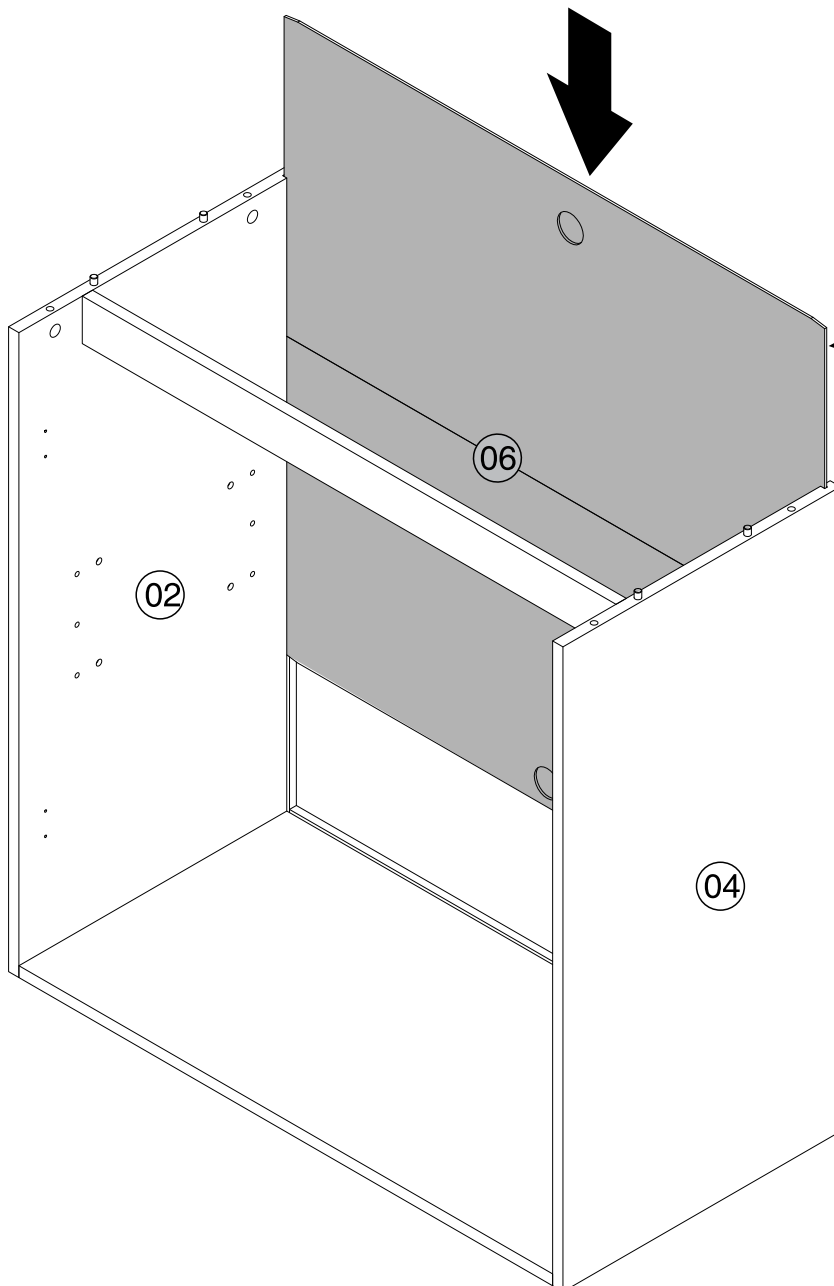
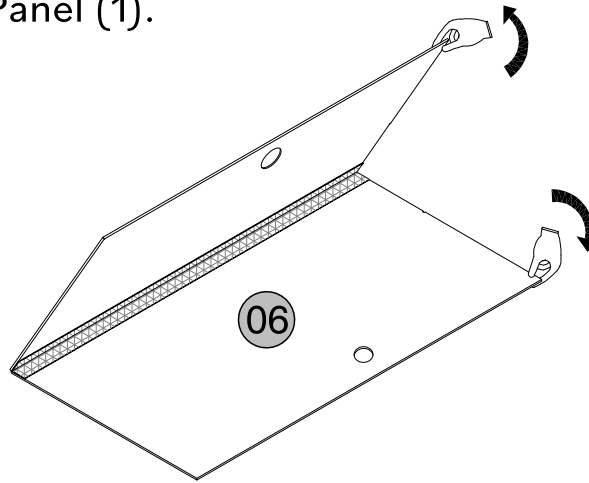


Distributed By:
Seconique-US Corporation
806 Verona Street
34741 Kissimmee - Florida-USA
SKU: XXXXX
PC: XXXX
Date: XXXX/XX/XX
Rev. XXXX/XX/XX
EPA TSCA Title VI and California 93120
Phase 2 compliant for formaldehyde

Step 6




Attach Top Panel (3) to Left Panel (2) and Right Panel (4) using Cam Locks (C) and a Phillips screwdriver add sticker.

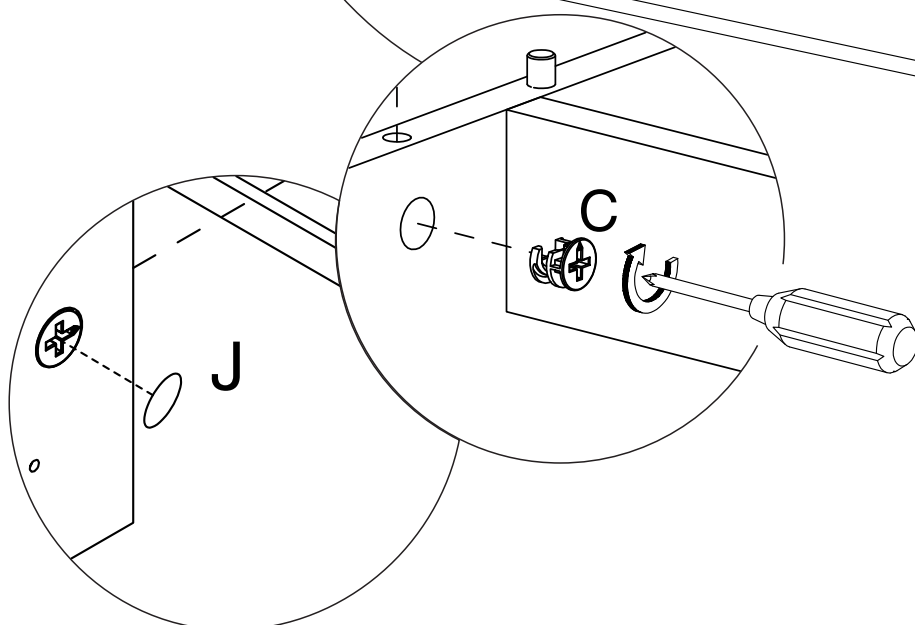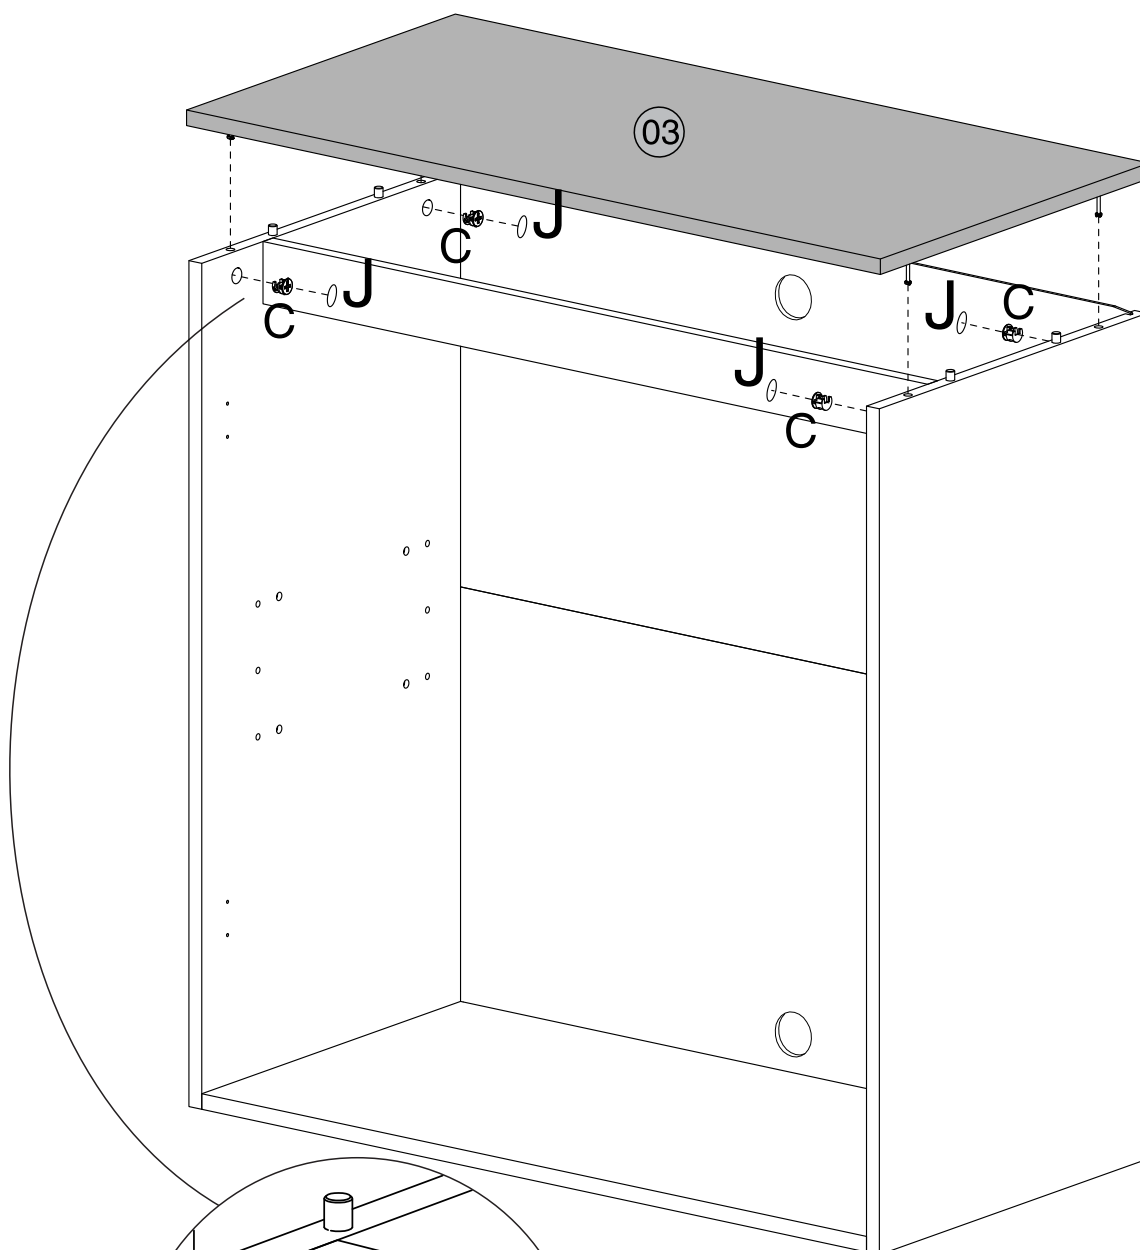


C			Ø15x10mm	4
---	---	---	----------	---

J		Sticker	4
---	---	---------	---

Step 7




Secure Shelf Rail (11) to Shelf (5) using Cam Locks (C) and a Phillips screwdriver add sticker.

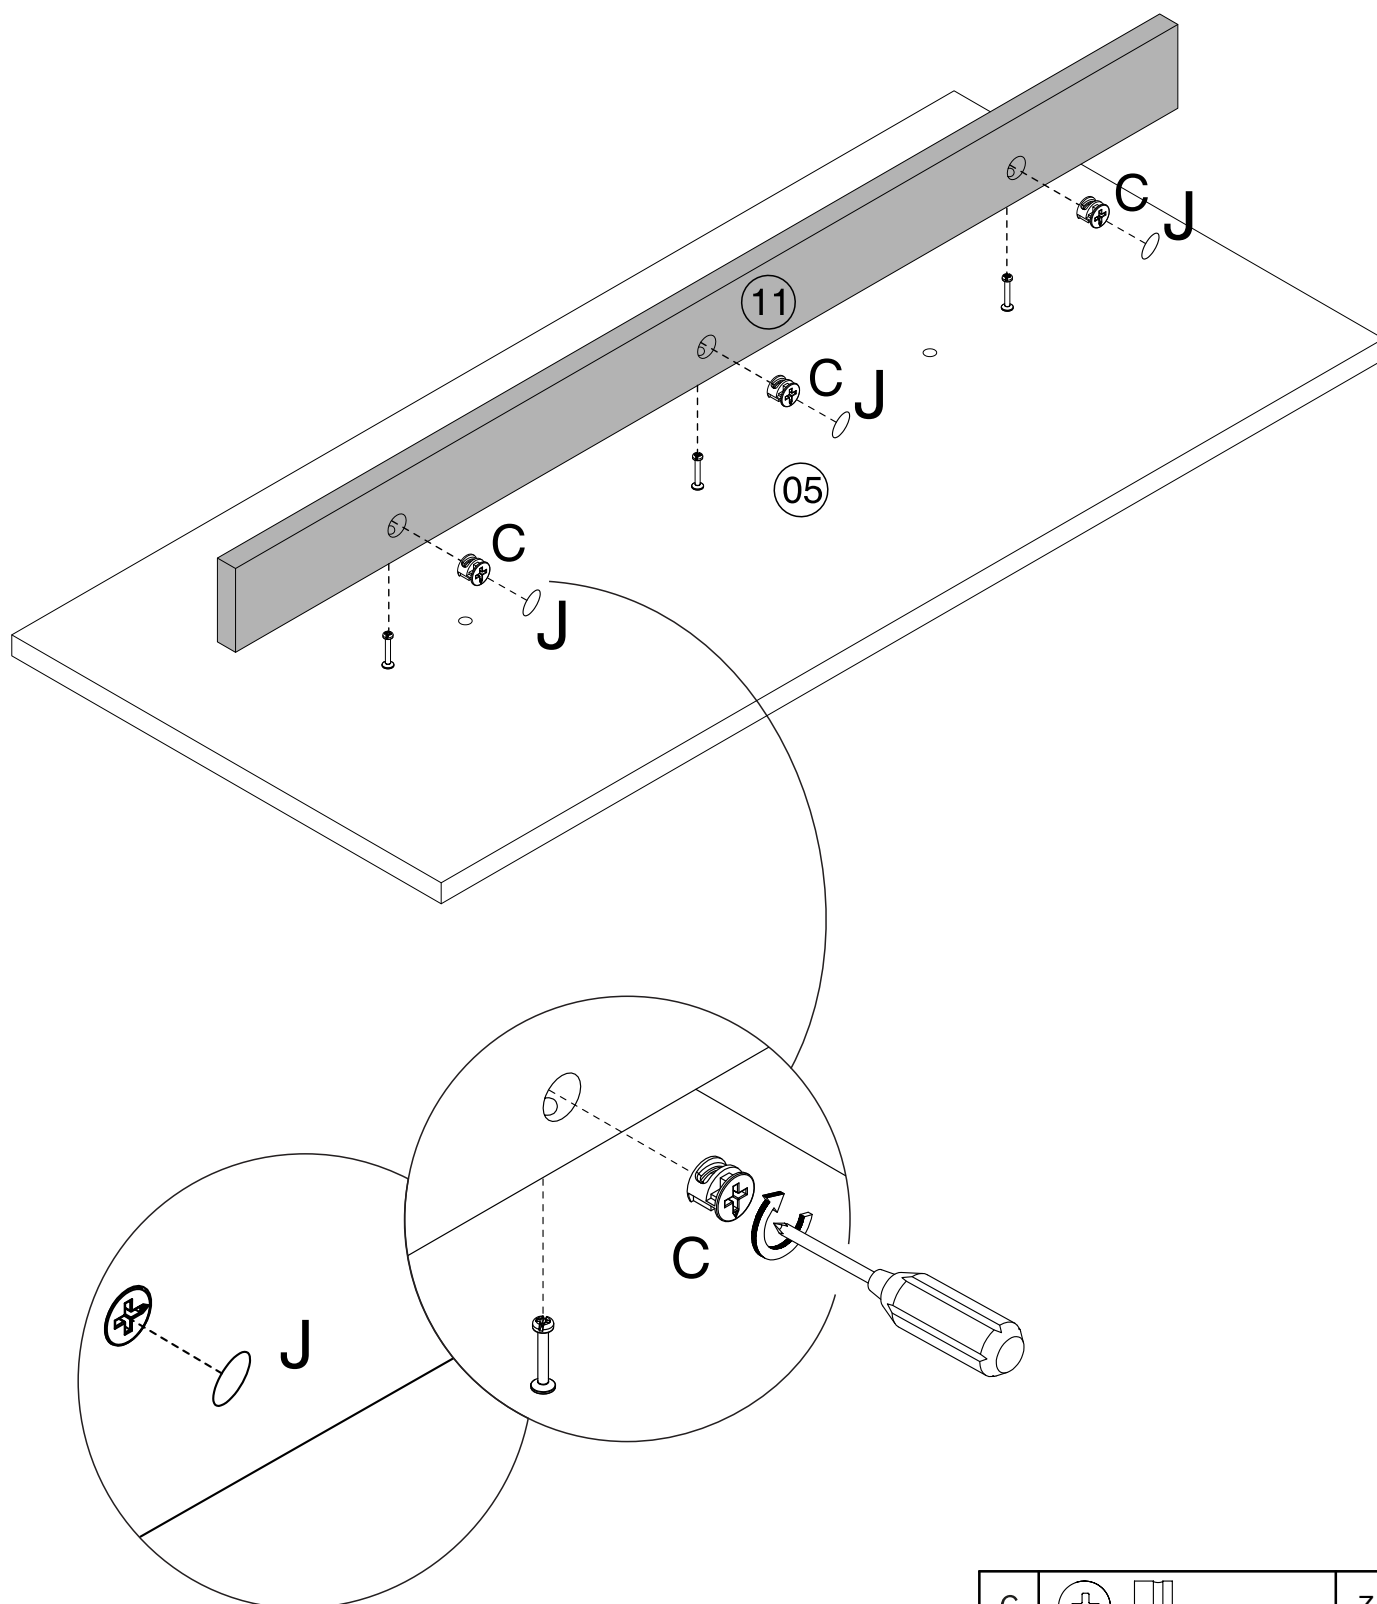




C			Ø15x10mm	3
---	---	---	----------	---

J		Sticker	3
---	---	---------	---

Step 8







Insert Shelf Support (Q) on the holes in the middle of Side Panels. Then, place Shelf (5).

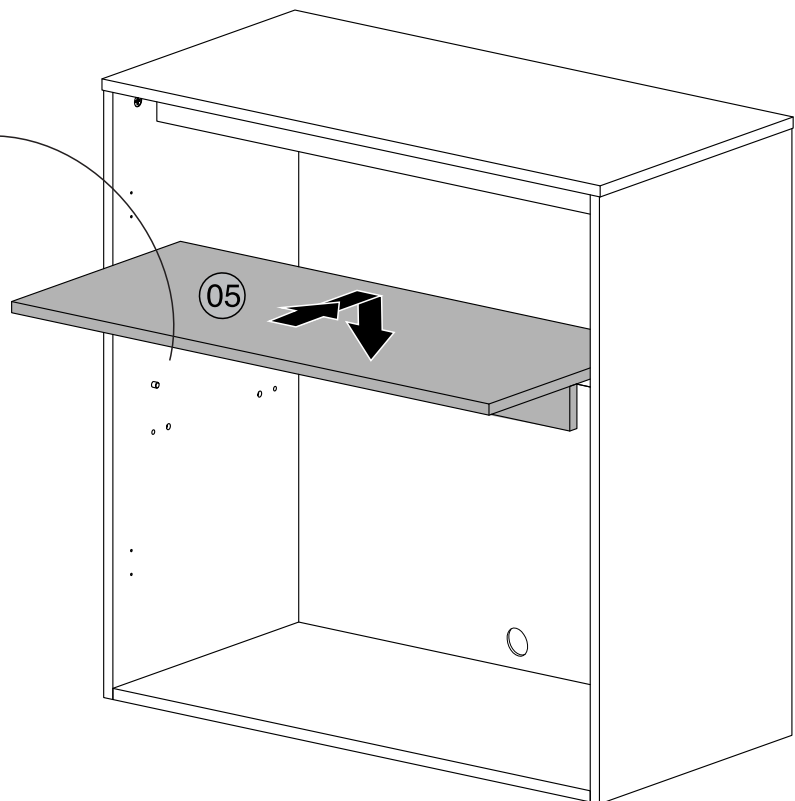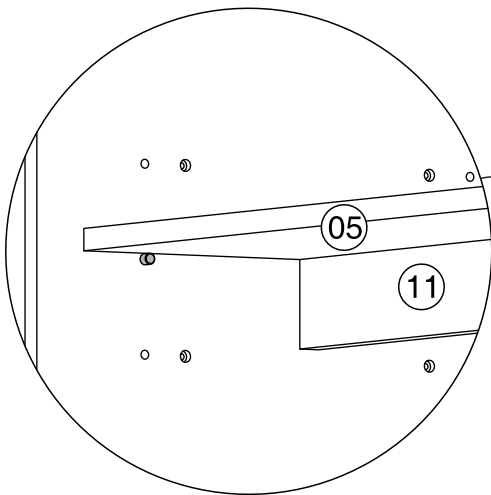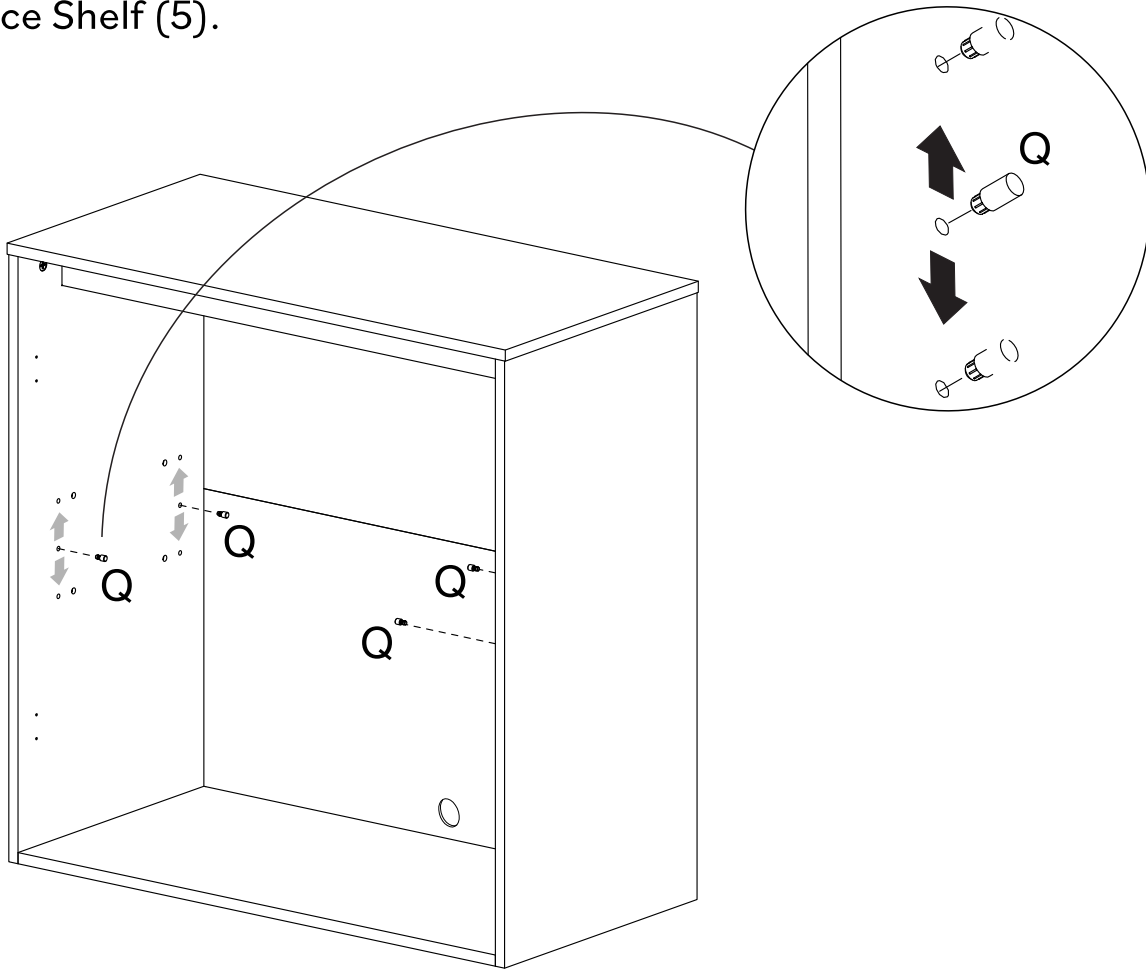

Q		6x18mm	4
---	---	--------	---

Step 9


Secure Back Panel (6) using Support (K), Screw (I) and a Phillips screwdriver.

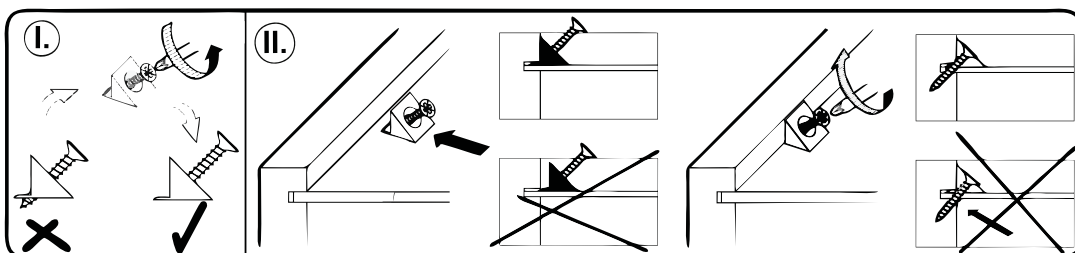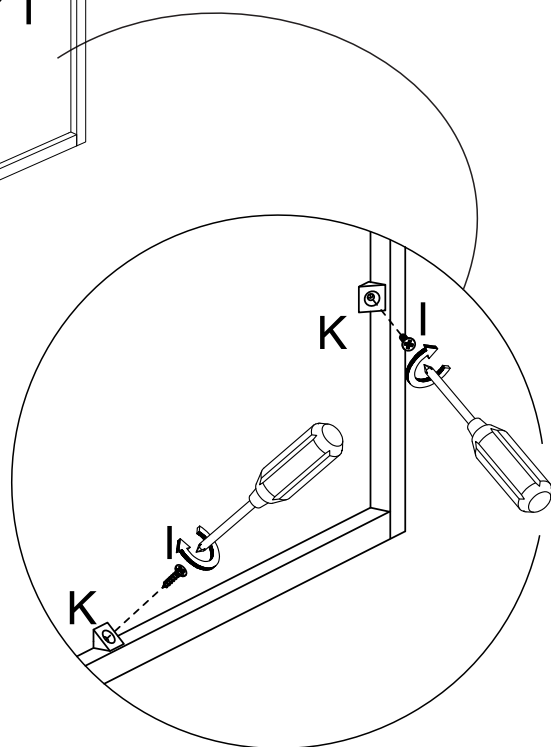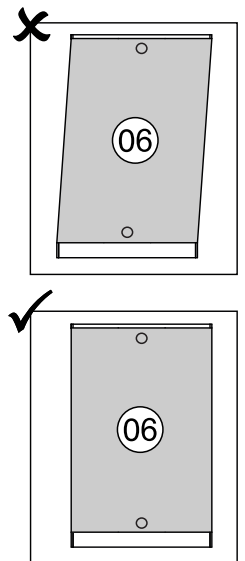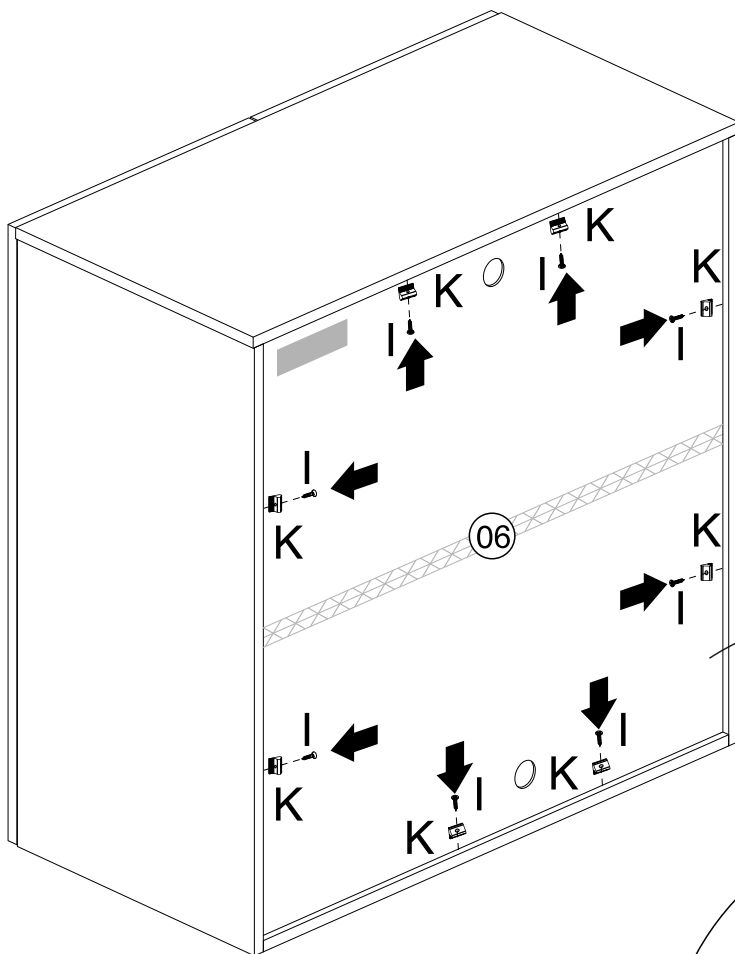


I		Ø3x16mm	8
---	--	---------	---

K		14.7x30mm	8
---	--	-----------	---

Step 10




Attach Door (8) on Left Panel (2) using Screws (F) and a Phillips screwdriver.


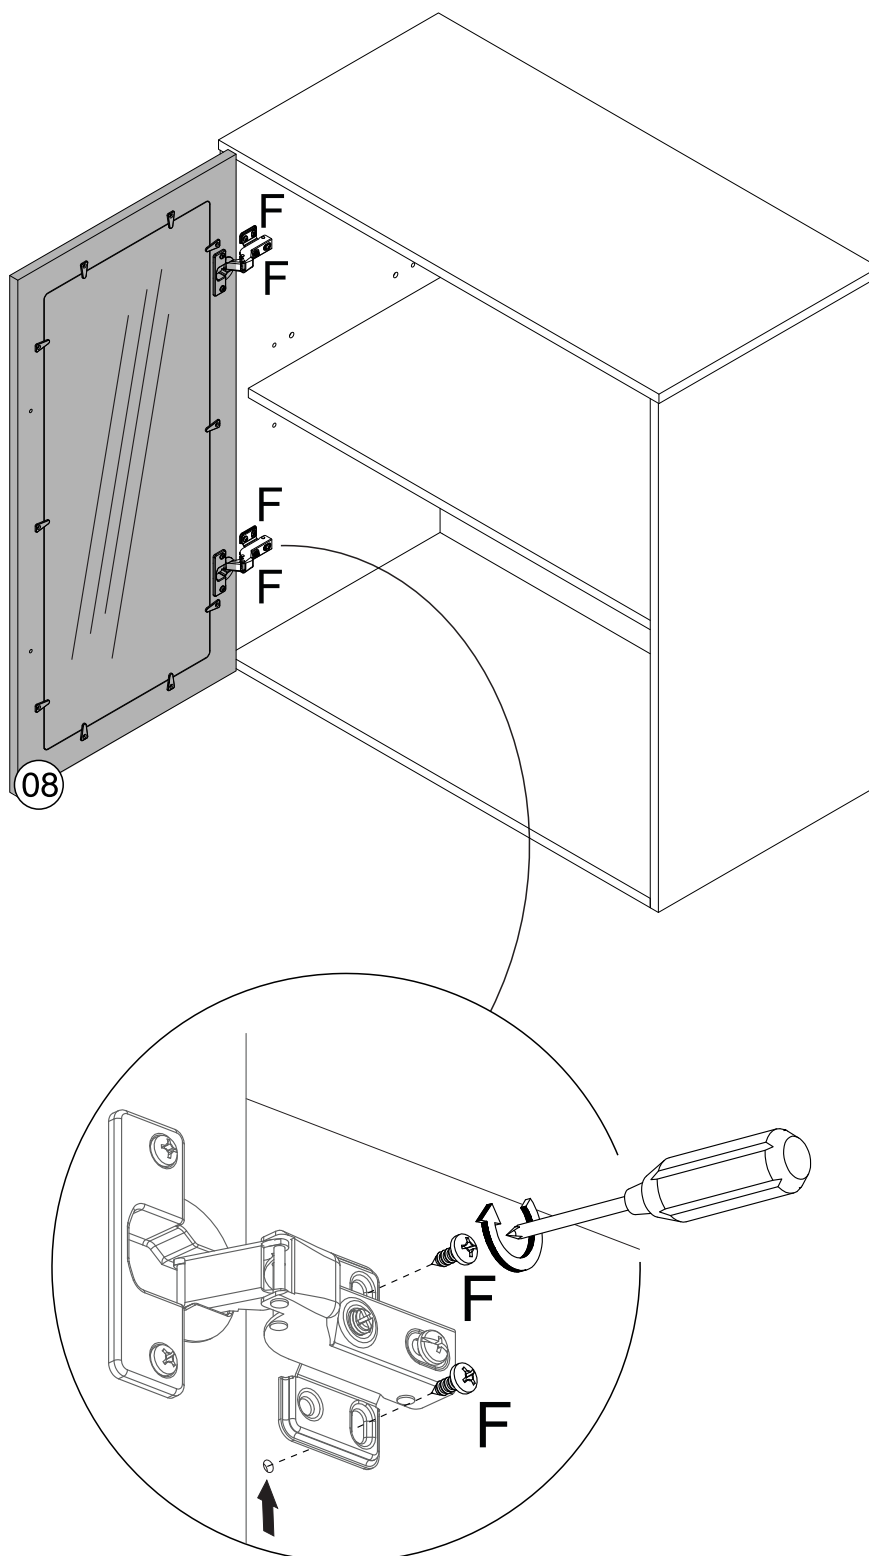


F		Ø4x14mm	4
---	---	---------	---

Step 11




Attach Door (8) on Right Panel (4) using Screws (F) and a Phillips screwdriver.

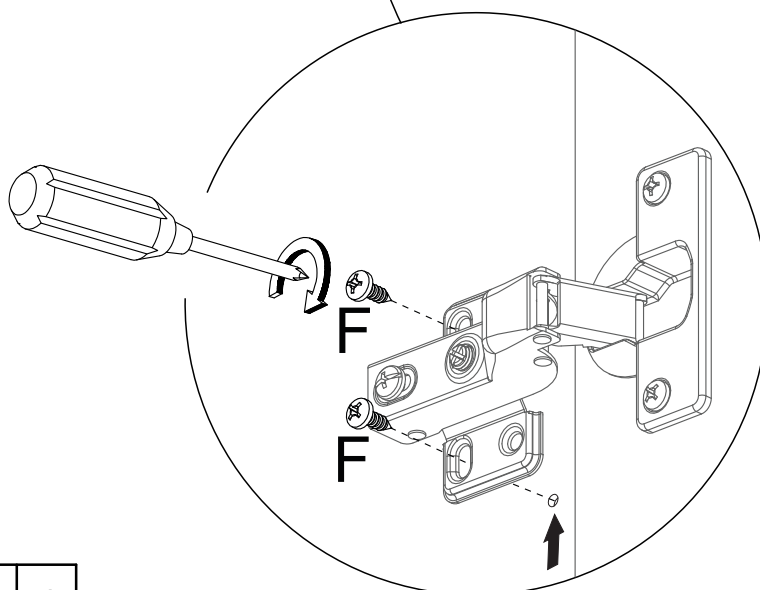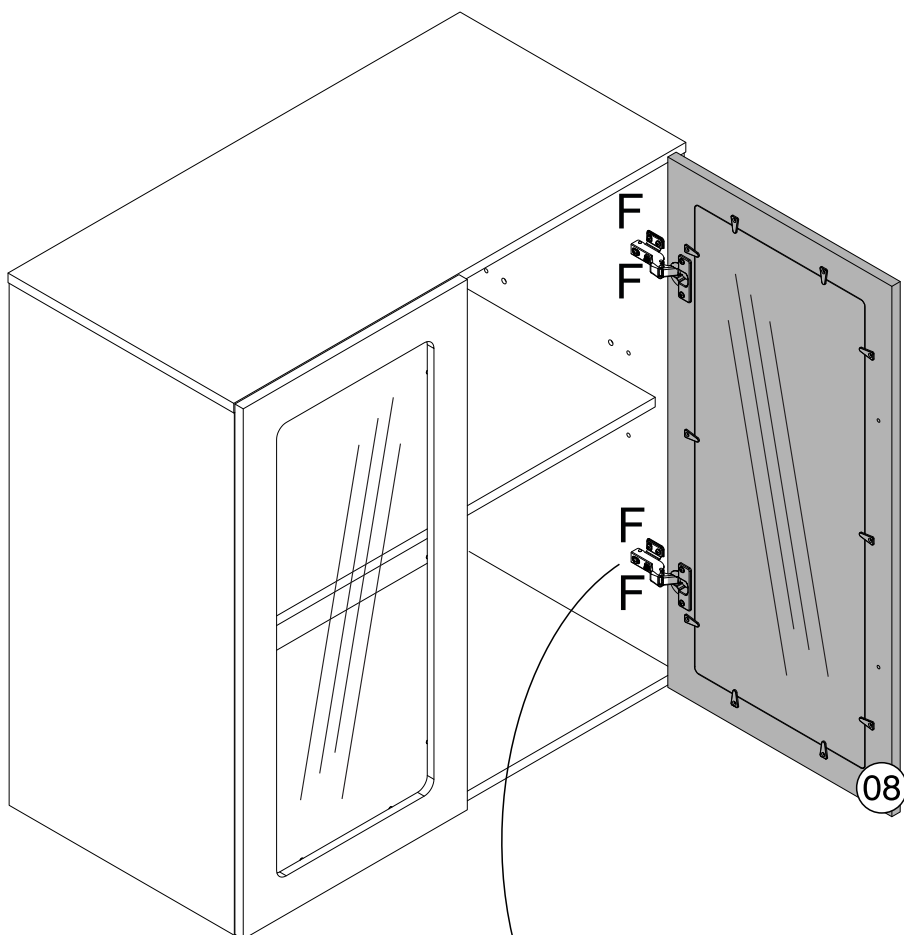


F		Ø4x14mm	4
---	---	---------	---


Step 12



Secure Handle (L) using Screw (E) and a Phillips screwdriver.

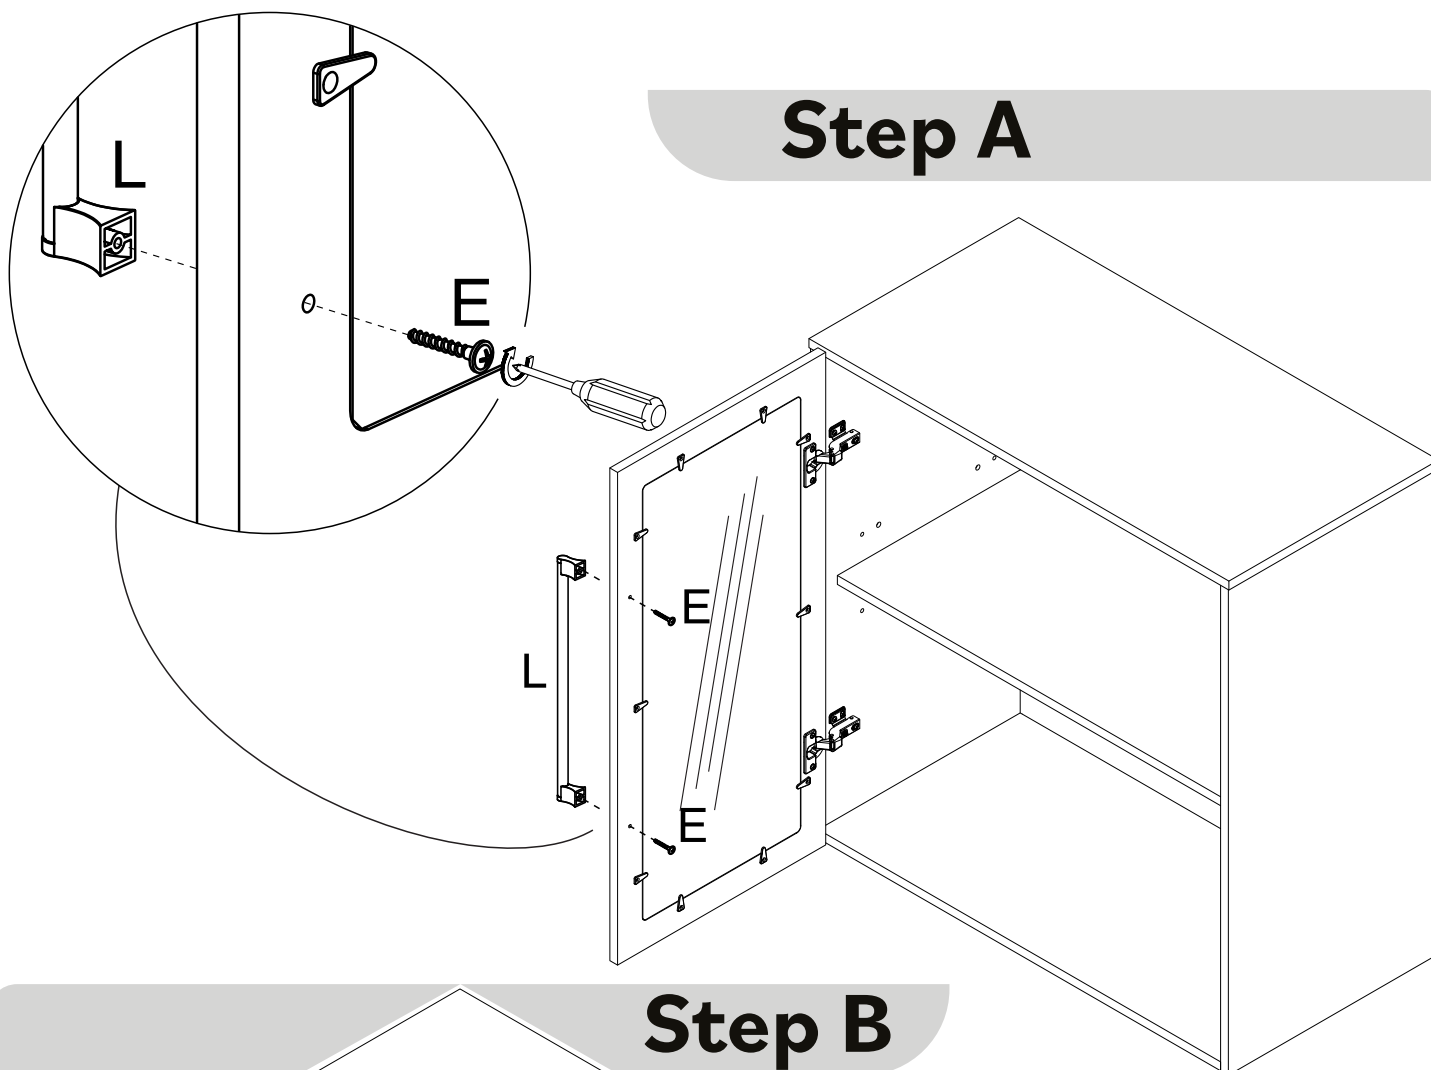


Step B

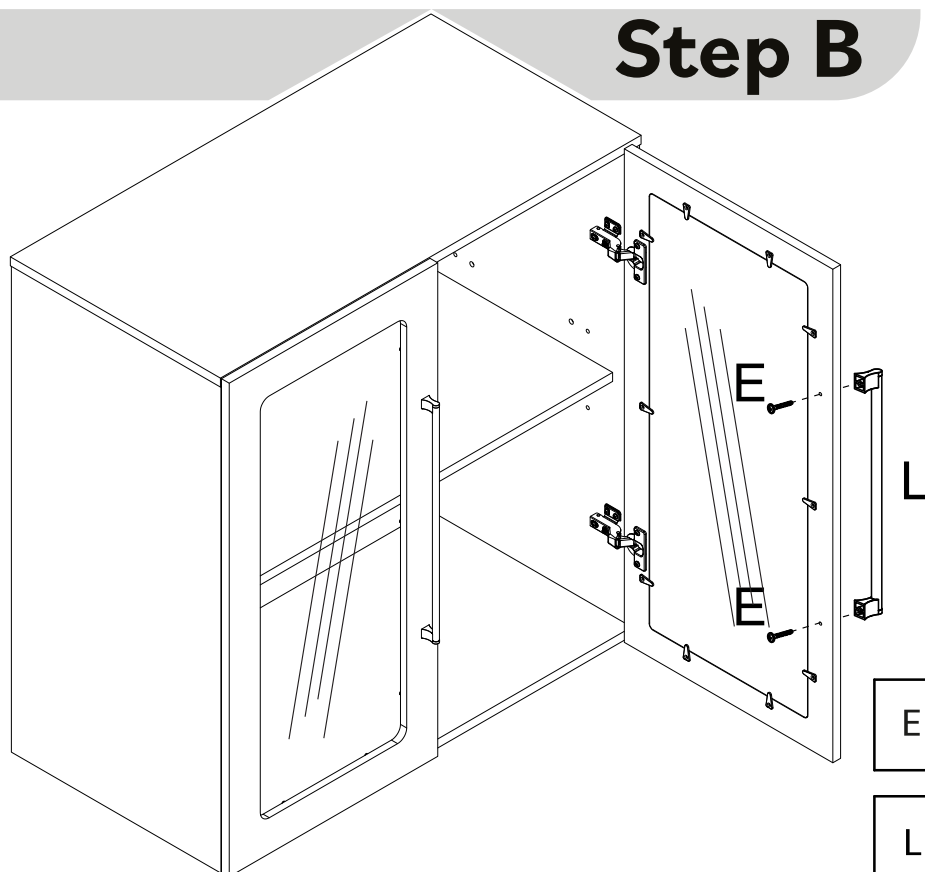

E		Ø3.5x25mm	4
L		384mm	2

Step 13

Adjust the doors using Screw (F) and a Phillips screwdriver.

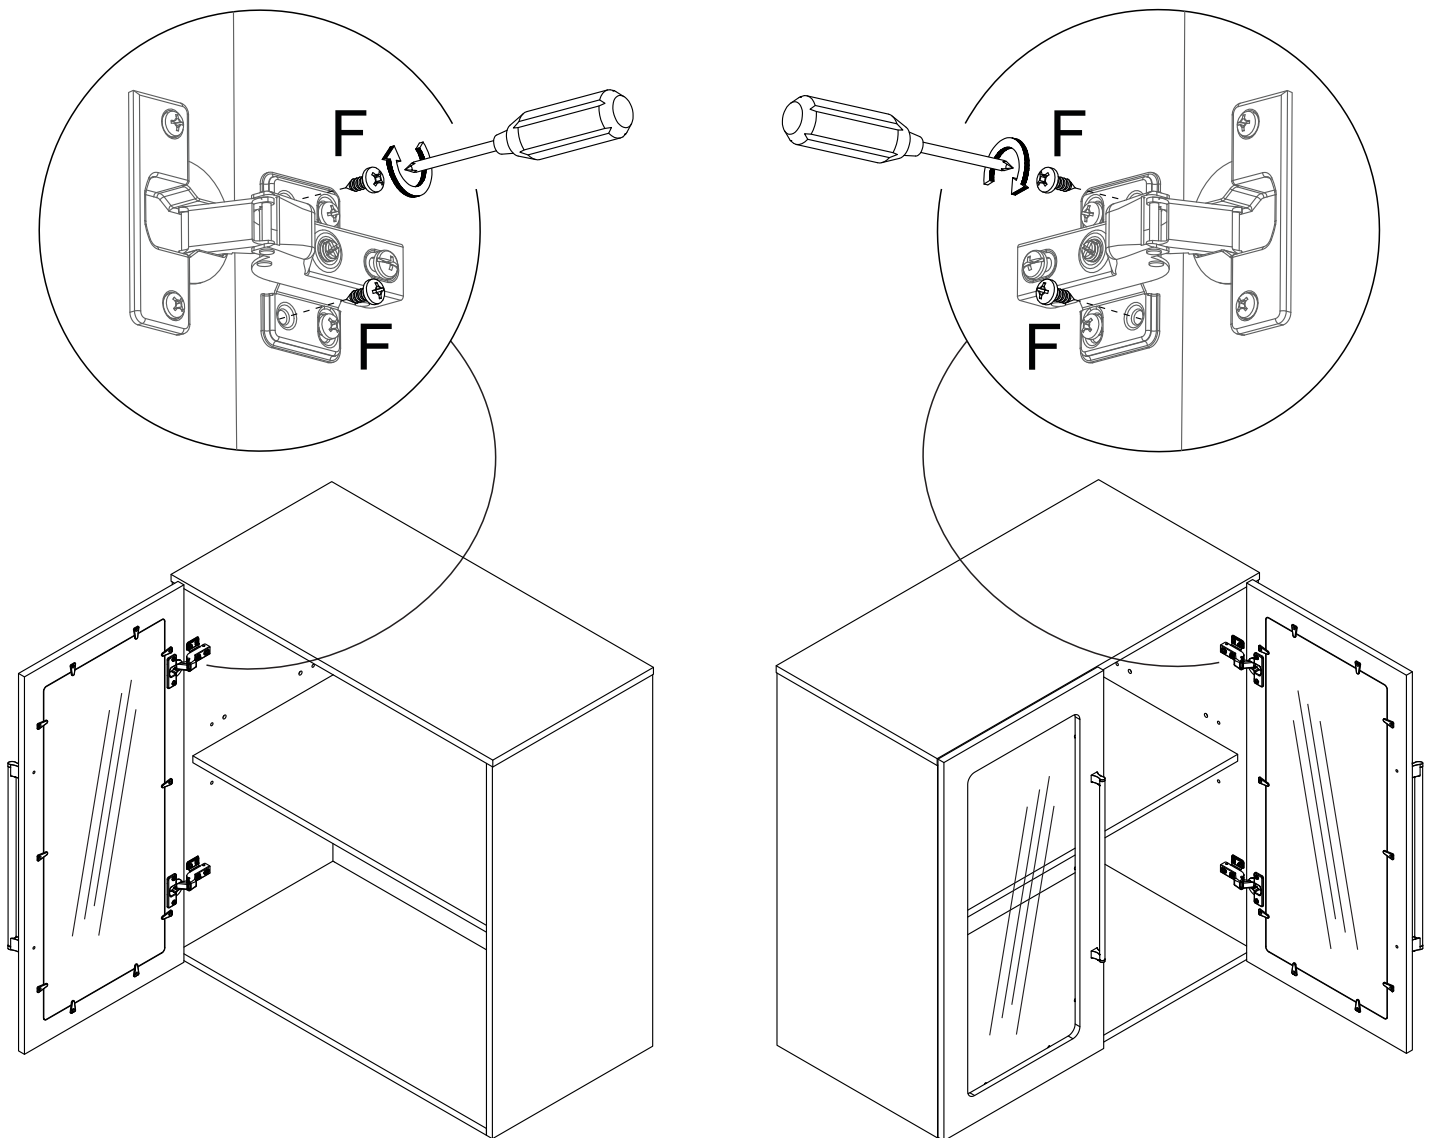


F		Ø4x14mm	8
---	---	---------	---




Tip


Adjusting The Cabinet Doors

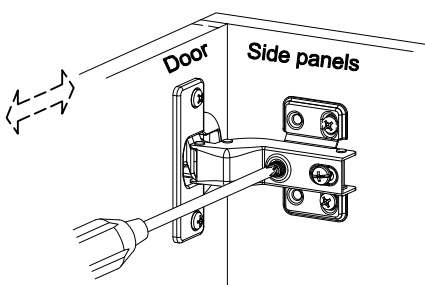

Adjust horizontal width
with this screw

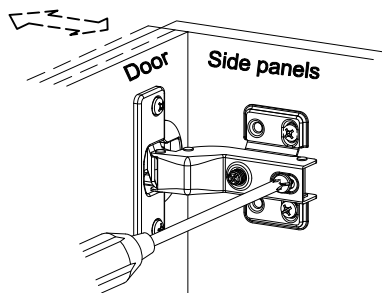


Adjust depth position
by loosening the hinge
arm mounting screw

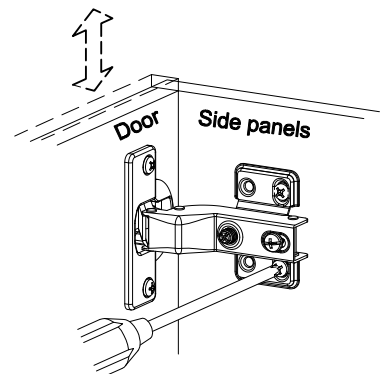

Adjust vertical height
via the screws in the
mounting plate


Step 14

If you are not using your new cabinet on top of another Modular Cabinet, you can attach Feet (7) using Screw (H) and a Phillips screwdriver.


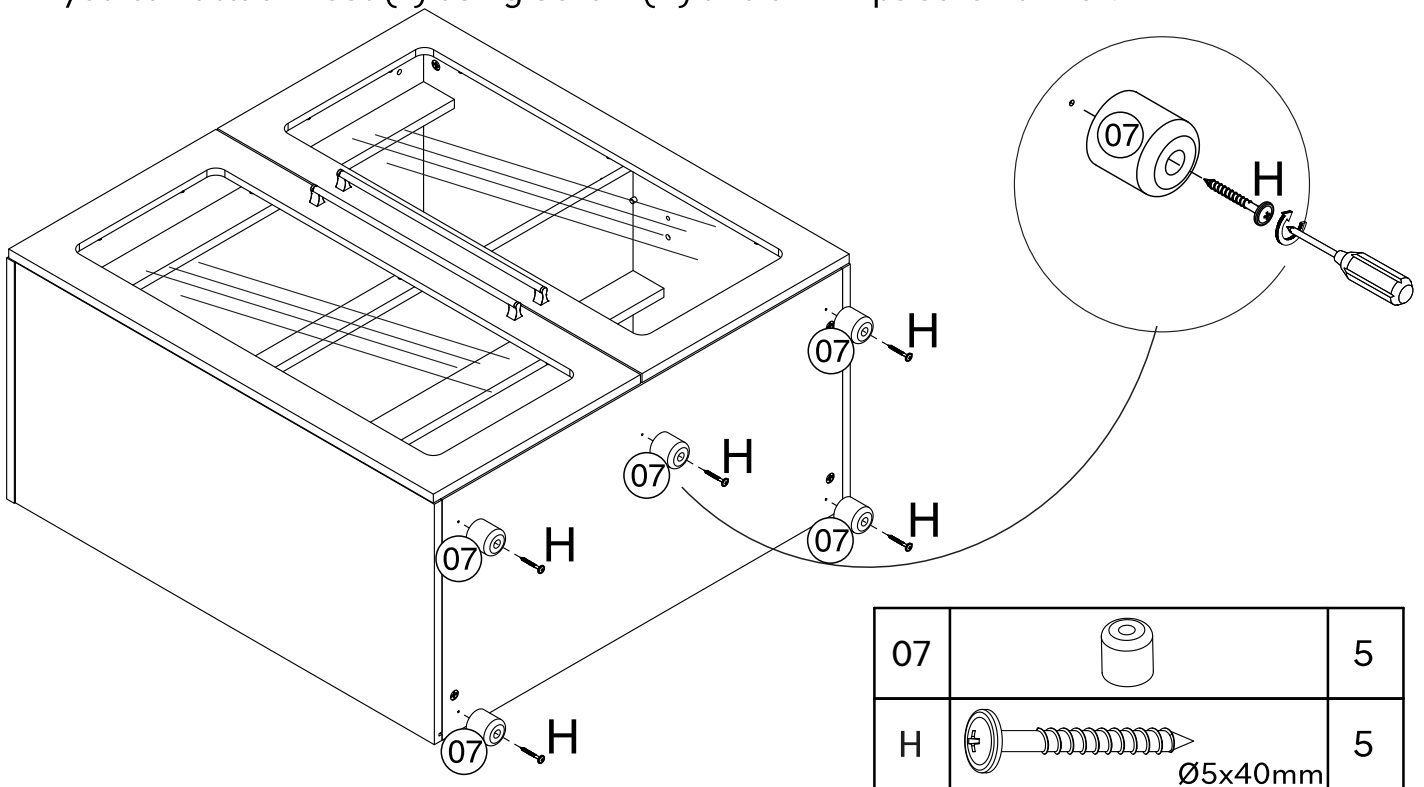


Modular Assembly Options

Step 15


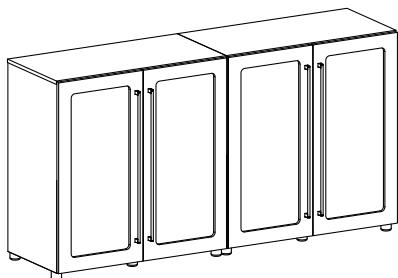



Step 16

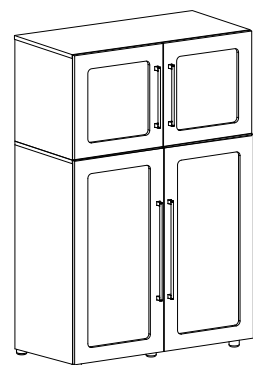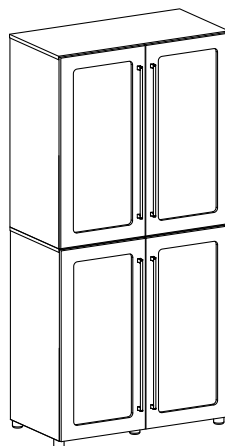

Step 15



Attach your cabinets side by side using Screws (G) and a Phillips screwdriver. The holes as pre drilled.

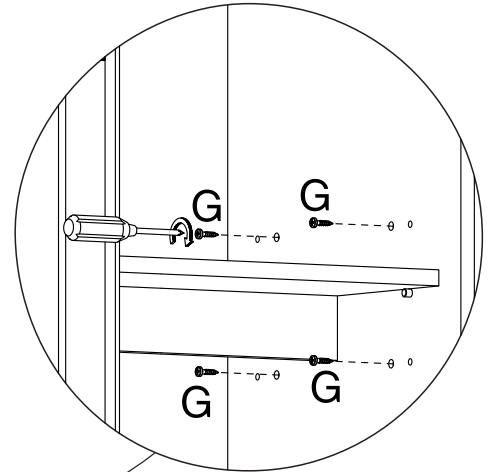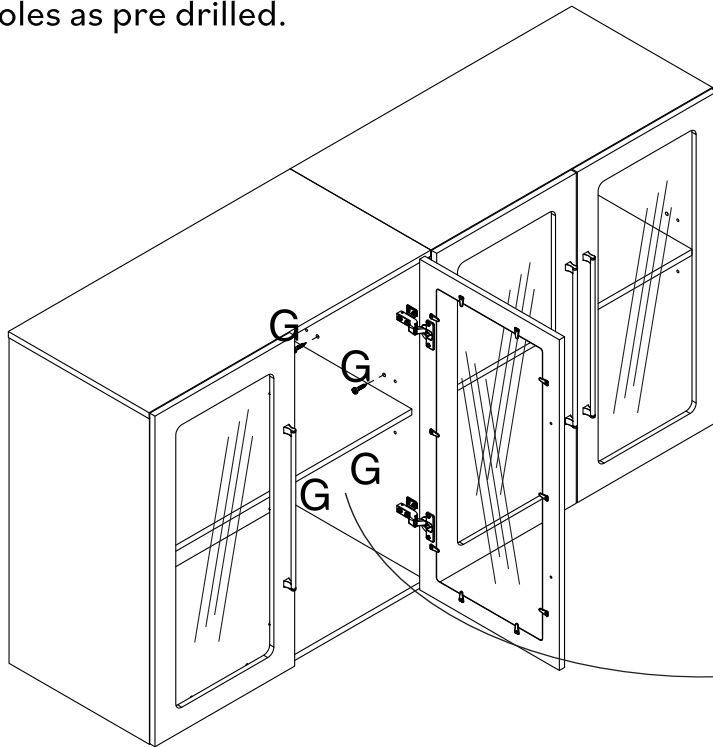


G		Ø4x20mm	4
---	--	---------	---

Step 16

If assembling your cabinets on top of each other, use Screws (G) and a Phillips screwdriver to join them through the top and bottom panels. The holes are predrilled

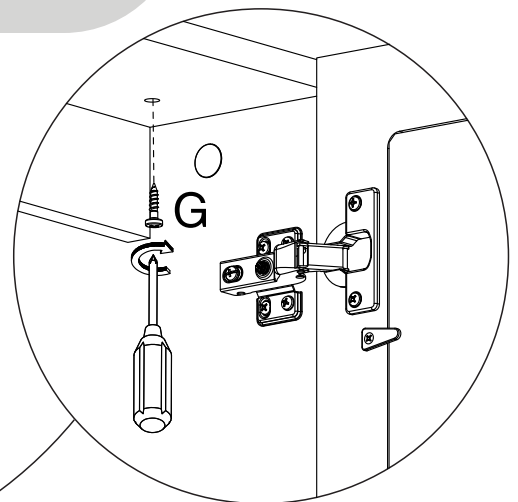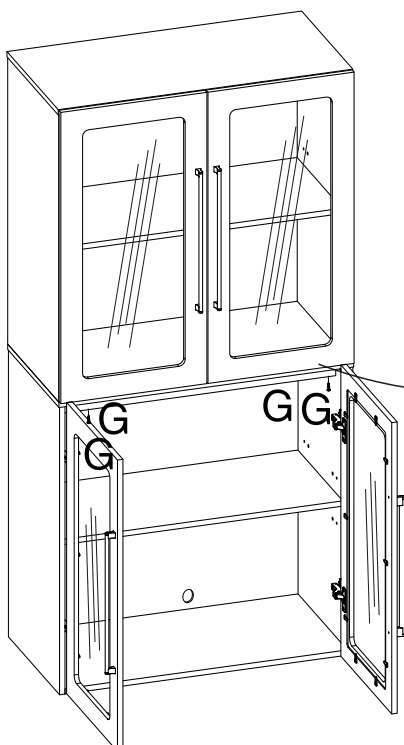


Assembly Option

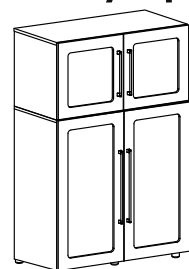

G		Ø4x20mm	4
---	---	---------	---

Step 17


With everything in place use Stickers (J) to cover the extra holes.

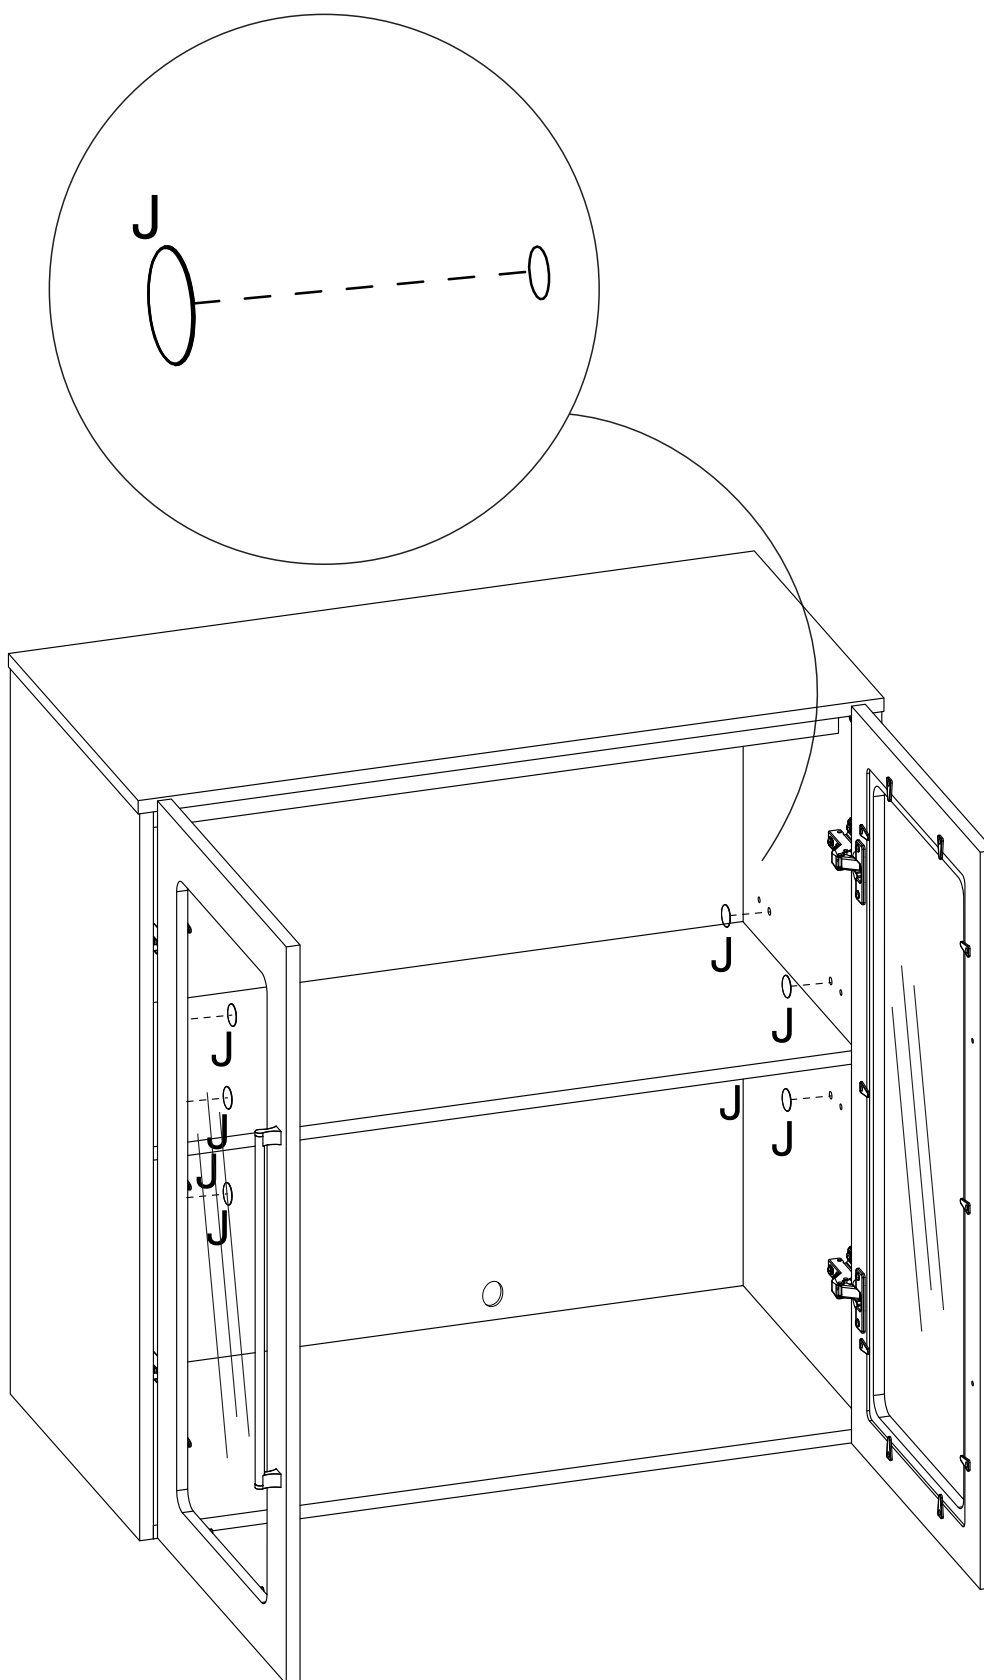

J		Sticker	8
---	---	---------	---

Step 18

Attach your Cabinet to the wall. Secure Wall Anchor (P) to your cabinet using Washer (O), Screw (G) and a Phillips screwdriver.

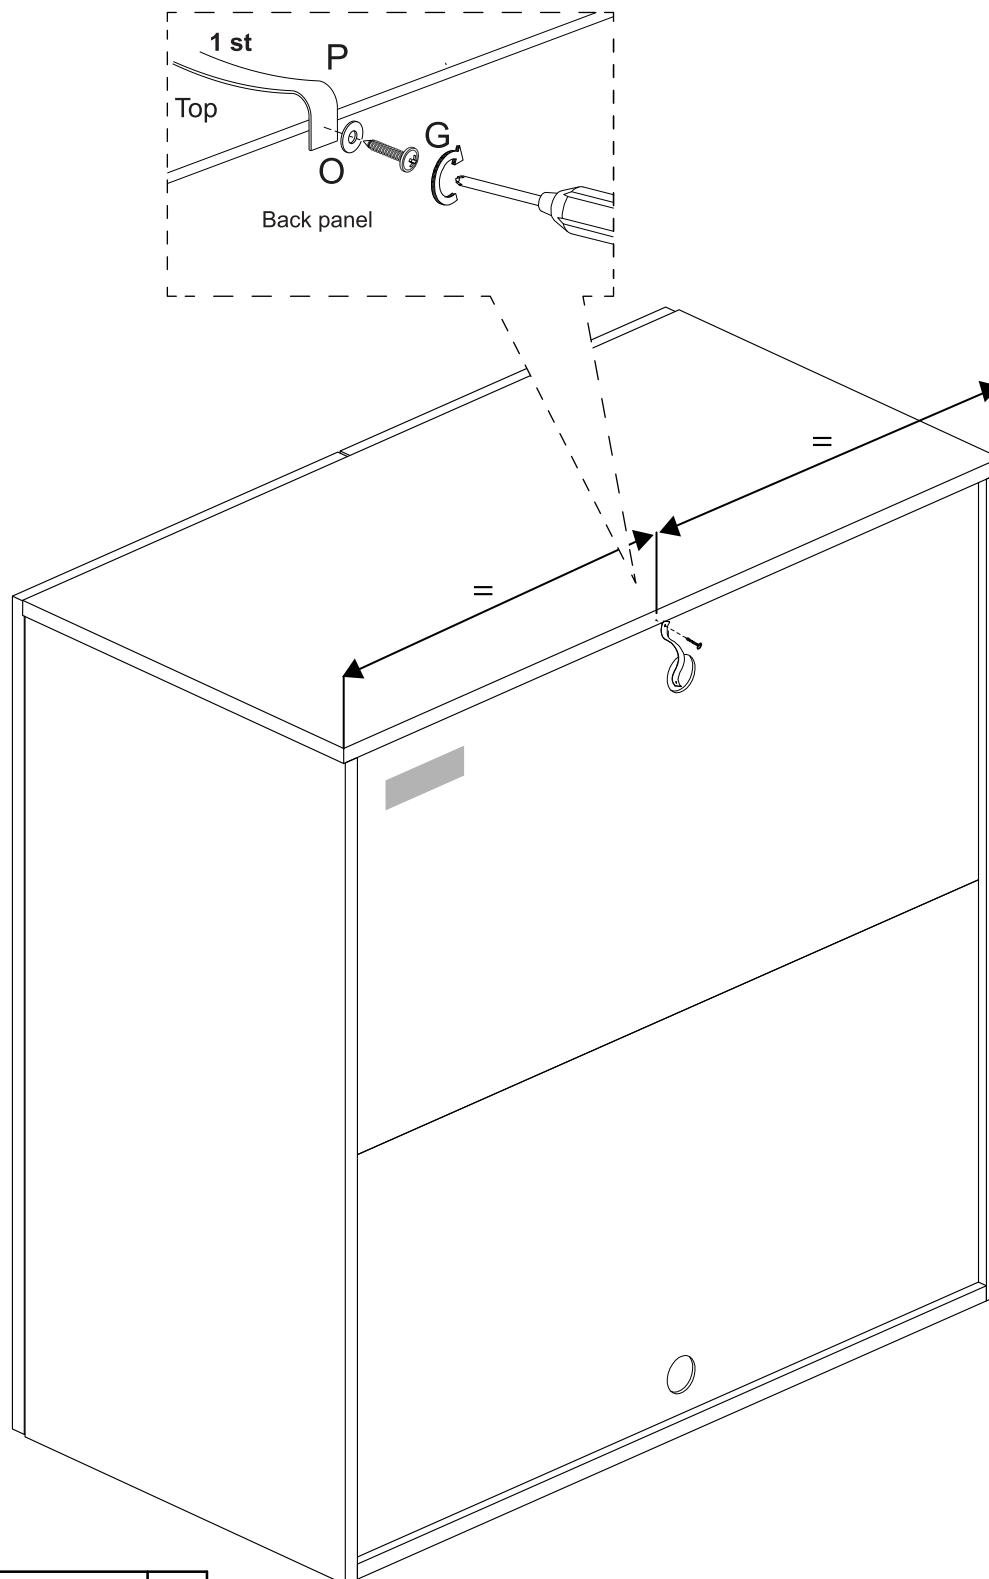


G		Ø4x20mm	1
---	---	---------	---

O		1/4x5/8	1
---	---	---------	---

P		20x200mm	1
---	---	----------	---

Step 19


To finish this up use a plastic bush suitable for your wall. Then, secure the Wall anchor (P) to the wall using Washer (O) and a screw also suitable for your wall.

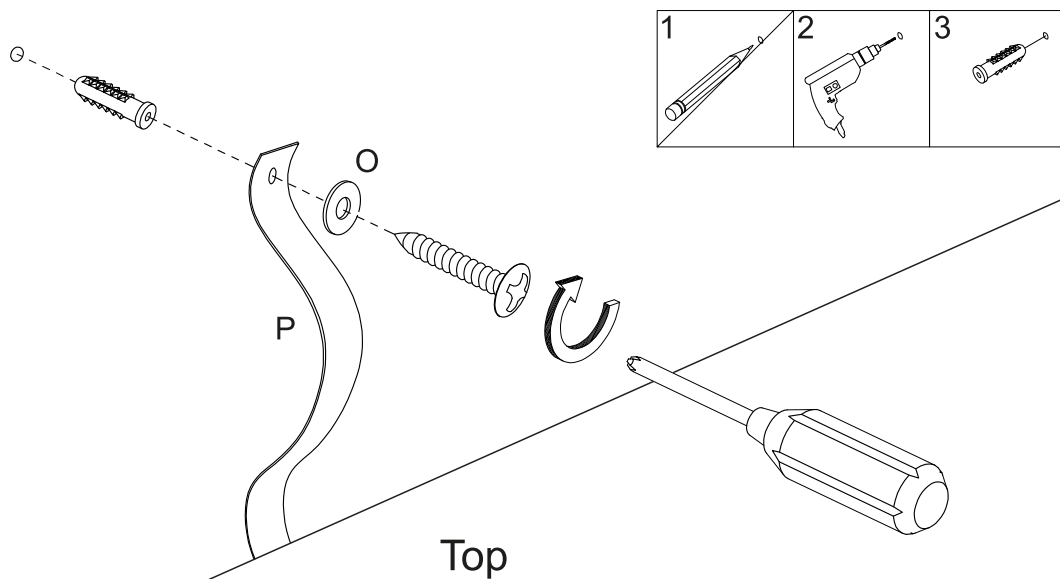


O		1/4x5/8	1
---	---	---------	---

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently attached to the wall. Wall anchor is included in this product. Please make sure the extra hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

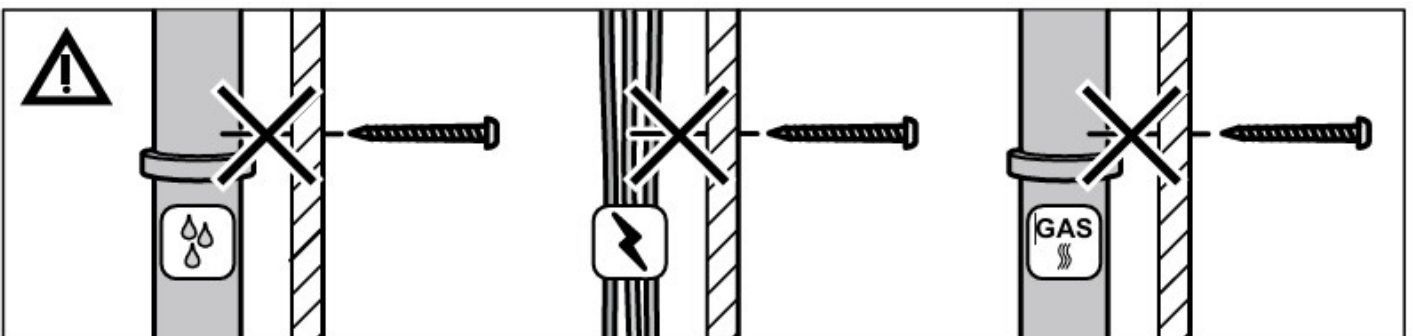

**You did it! Enjoy your new Modular
Cabinet!**

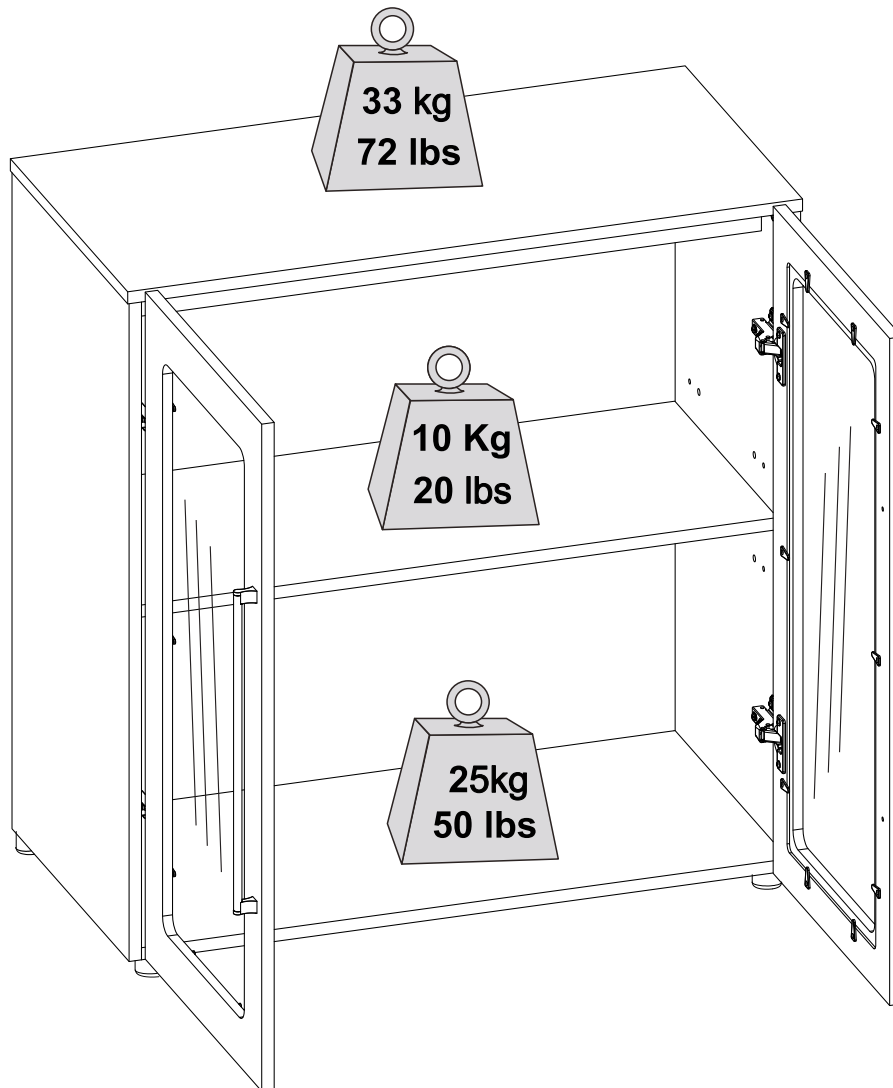

Congratulations on your new piece of furniture!