


ASSEMBLY INSTRUCTIONS

PDKG201

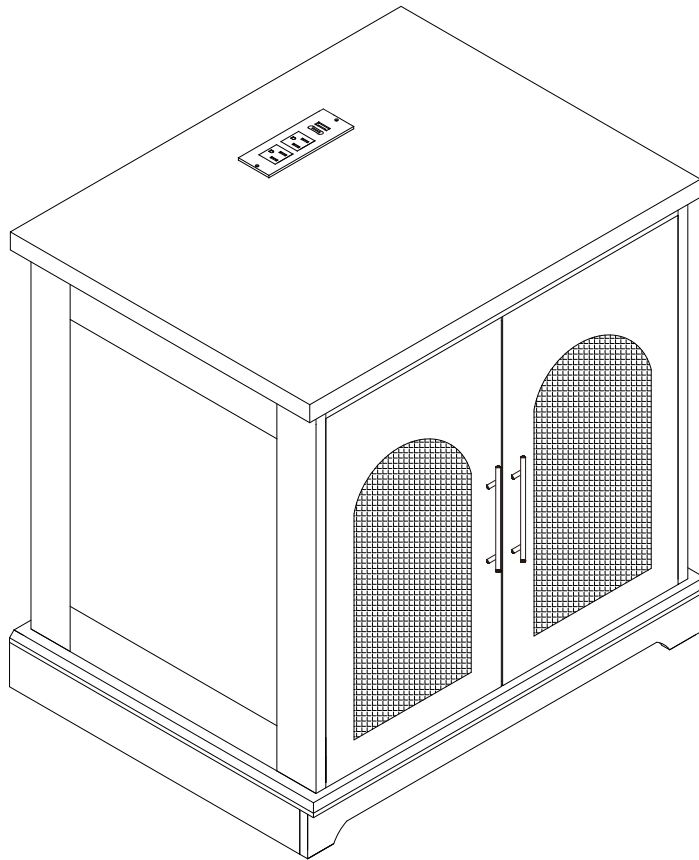

ATTENTION

Prior to assembly, please check and count all parts and hardware regarding to the list on page 4-5 of the instruction. If there is any part missing or damaged, please send us messages with the part name and number or send us pictures, we will send you the replacement asap.


If you have any questions about the product or assembly, please kindly contact us at anytime, we will solve your problem asap.

Service E-mail: cservice7@yeah.net

Be sure to provide your order ID so we can assist you better.

ASSEMBLY TIPS

1. Please follow each step in the manual to ensure the proper assembly of this product.
2. Assemble the product in a spacious space, and on a soft, clean surface to avoid damage and scratches.
3. 2 people are recommended for ease in the assembly of this product.
4. Ensure all parts and hardware are available before assembly. If you find any part is damaged or missing, please email us (cservice7@yeah.net), we will send you the replacement asap.
5. You will use the following tools: a Phillips head screwdriver, a rubber hammer

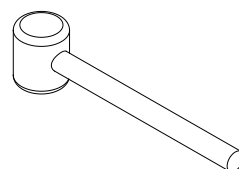


6. The wood dowels can be tapped in lightly with a hammer.
7. We don't recommend using the electric screwdriver, if you use the power screwdriver to tighten the screws, please be slow down, and stop if the screw is already tightened, excessive screwing may damage the screw and product surface.
















WARNINGS












1. Please be careful and slowly when opening and assembling the product, especially keep the parts and packaging away from children to avoid accidental injury.
2. Please avoid using aggressive chemicals/cleaners to avoid damaging the product surface.
3. Don't push or pull the product to avoid damaging your floor.
4. Attention: Don't throw away any packing materials and accessories until assembly is complete.

Exploded Drawing

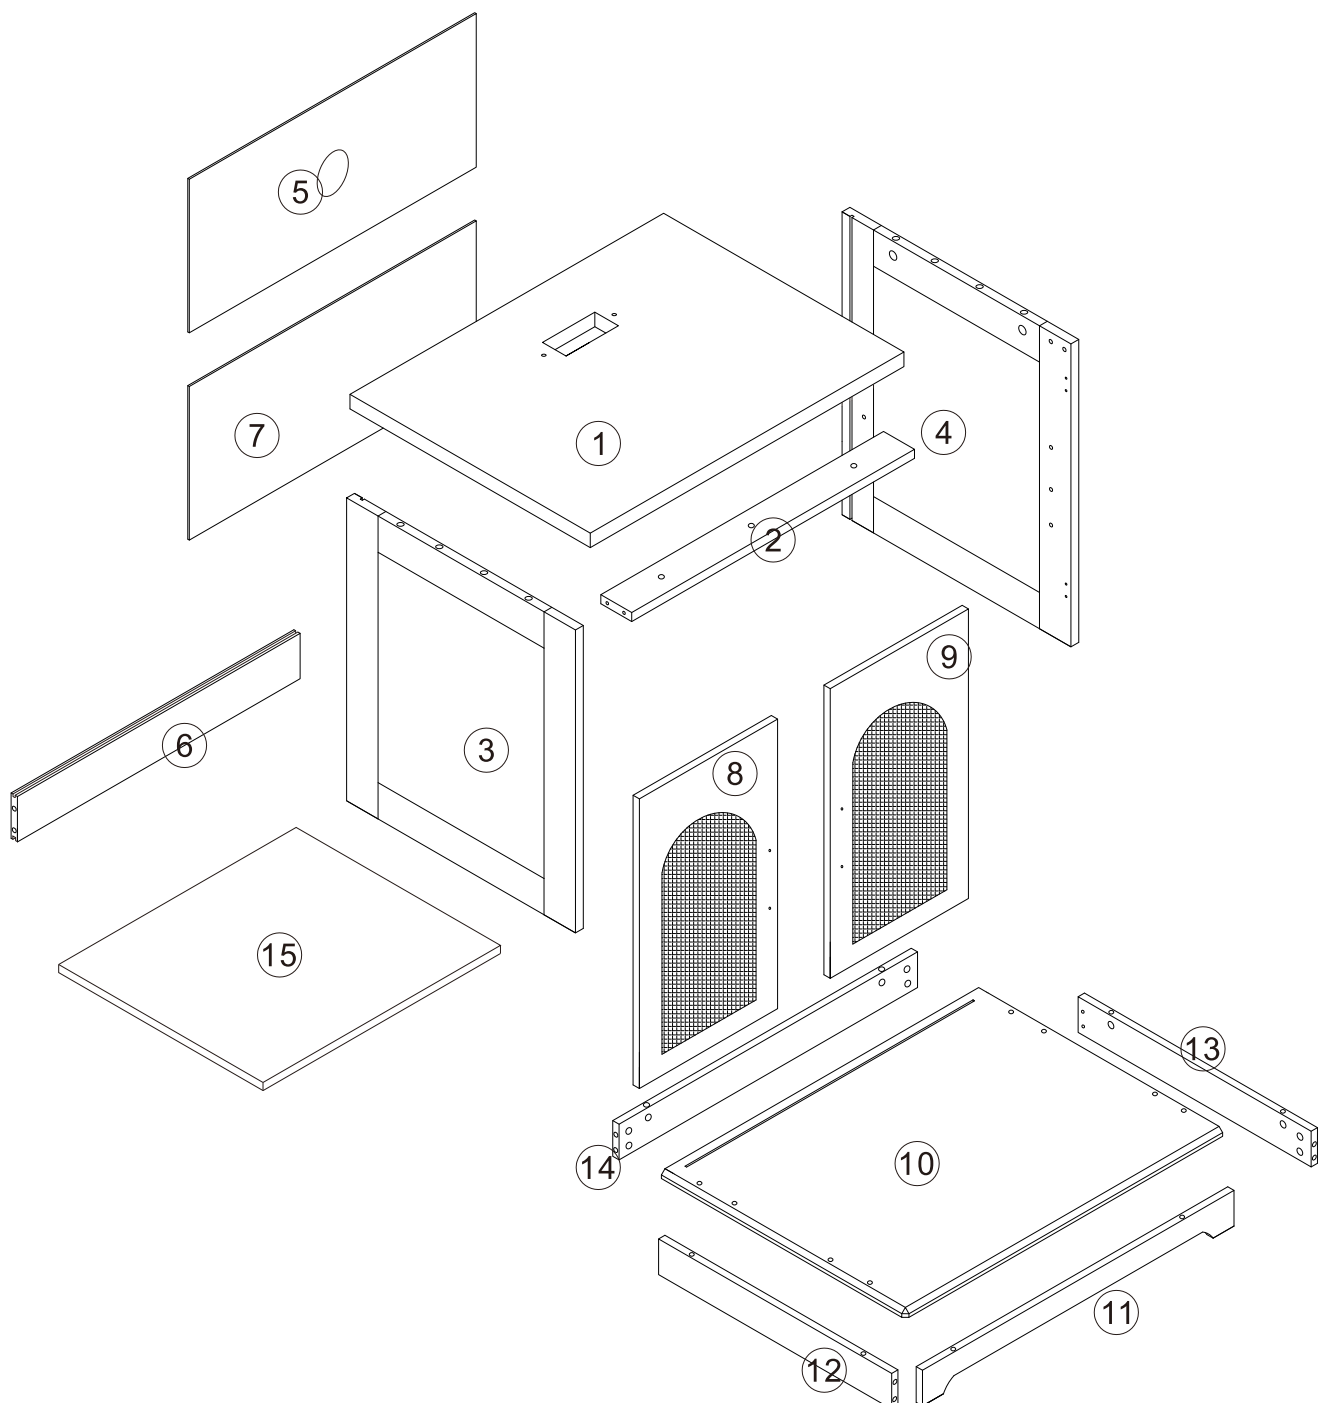





Board list

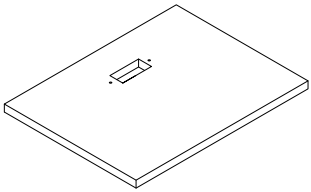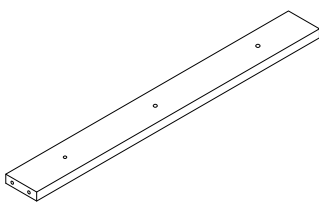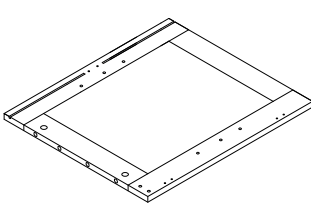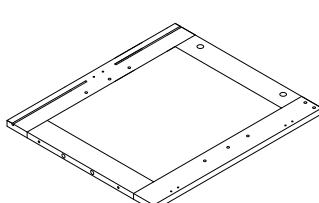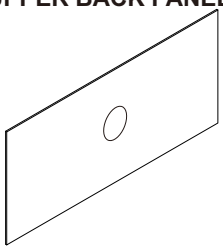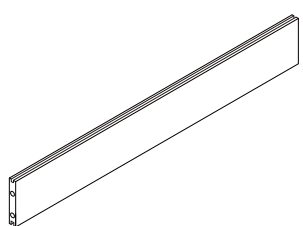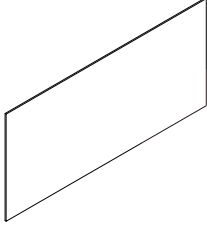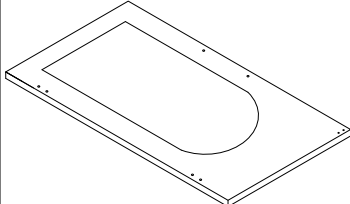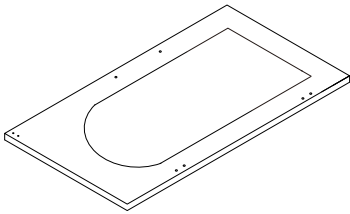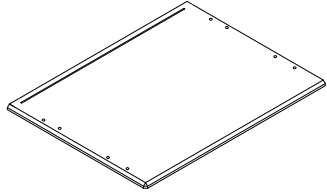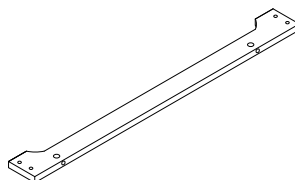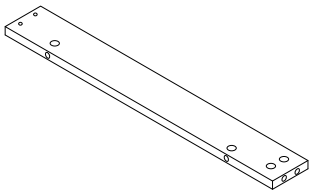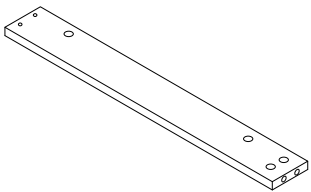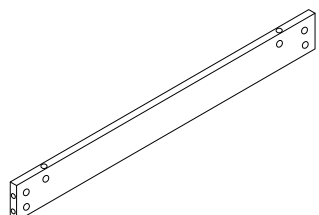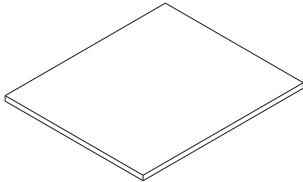1 TOP PANEL  1PCS	2 TOP FIXED PANEL  1PCS	3 LEFT SIDE PANEL  1PCS	4 RIGHT SIDE PANEL  1PCS
5 UPPER BACK PANEL  1PCS	6 MIDDLE BACK PANEL  1PCS	7 LOWER BACK PANEL  1PCS	8 LEFT DOOR  1PCS
9 RIGHT DOOR  1PCS	10 BOTTOM PANEL  1PCS	11 BOTTOM FRONT PANEL  1PCS	12 BOTTOM LEFT PANEL  1PCS
13 BOTTOM RIGHT PANEL  1PCS	14 BOTTOM BACK PANEL  1PCS	15 SHELF PANEL  1PCS	

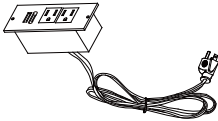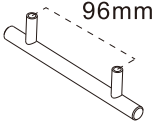
(A) CAM BOLT  ø6X35mm 26PCS spare:3	(B) CAM LOCK  Ø15X10mm 26PCS spare:3	(C) WOOD DOWEL  ø6X30mm 10PCS spare:1	(D) SCREW  ø 3x14mm 4PCS spare:1
(E) MAGNET  2PCS	(F) SCREW  M4x35mm 4PCS spare:1	(G) SCREW  M4x25mm 3PCS spare:1	(H) SOCKET  1PC
(J) SCREW black  Ø3X12mm 2PCS spare:1	(K) PANEL HOLDER  4PCS	(L) BACK PANEL BUCKLE AND SCREW  Ø3x14mm 8PCS spare:1	(M) HINGE  4PCS
(N) SUCTION IRON PLATE  2PCS	(P) SCREW  ø3.5X12mm 20PCS spare:3	(R) BOLT  M4x18mm 4PCS spare:1	(S) HANDLE  96mm 2PCS
(T) HOLE COVER  9PCS spare:1			

CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

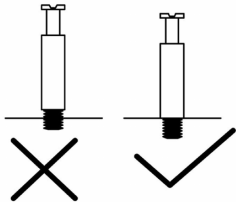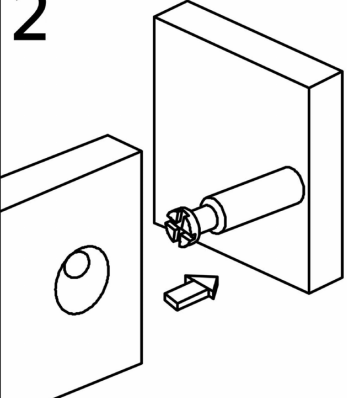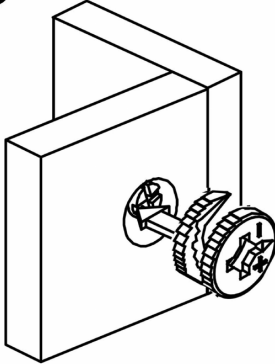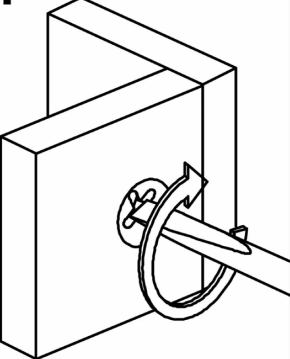1 	2 	3 	4 
1.Screw cam bolt into the threaded anchor gently. (Attention:don't screw cam bolt too deep or too shallow.)	2.Please connect the 2 boards you want connect by inserting cam bolt.	3.Insert the cam lock into the round hole of the board. (Attention:point the arrow on the top of the cam lock to the outer edge.)	4.Turn the cam lock clockwise until it is firmly tightened.




1.





Ø6 X 35mm

(A)


x 6

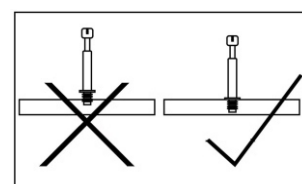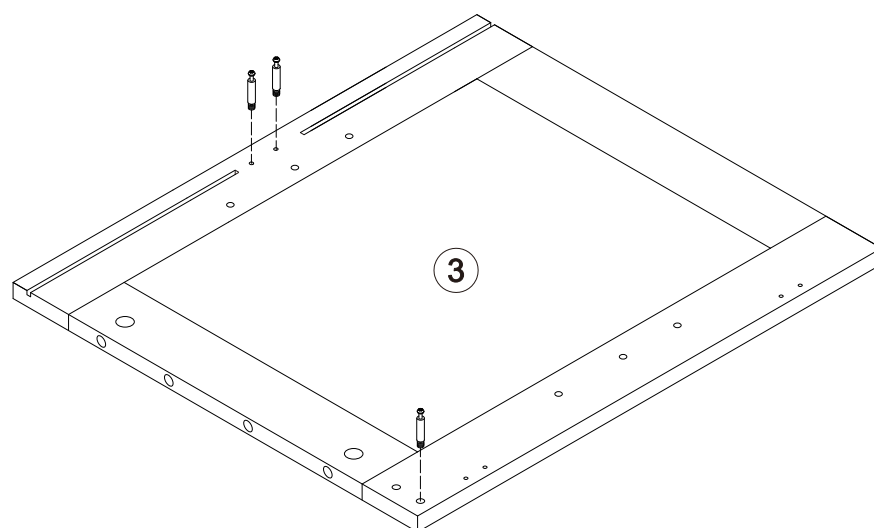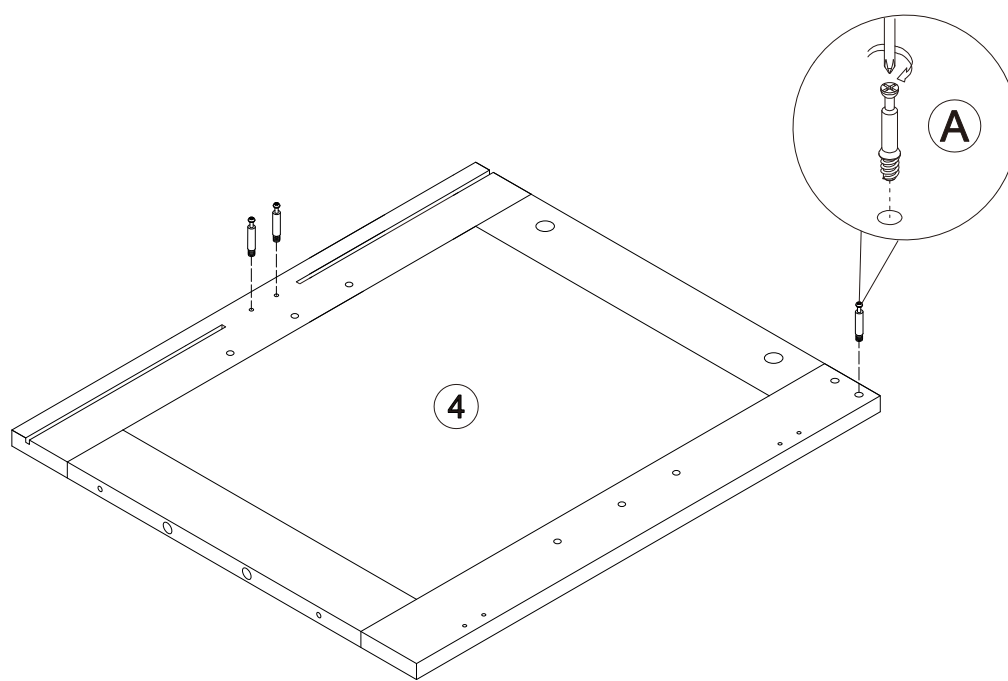


2.

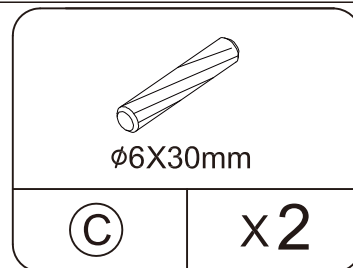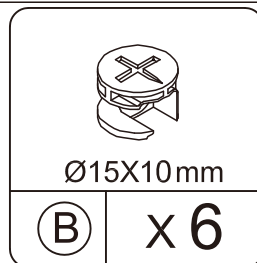

NOTE: It is recommended that 2 people assemble. One person needs to hold panel #4 and #6 to prevent them from falling over.

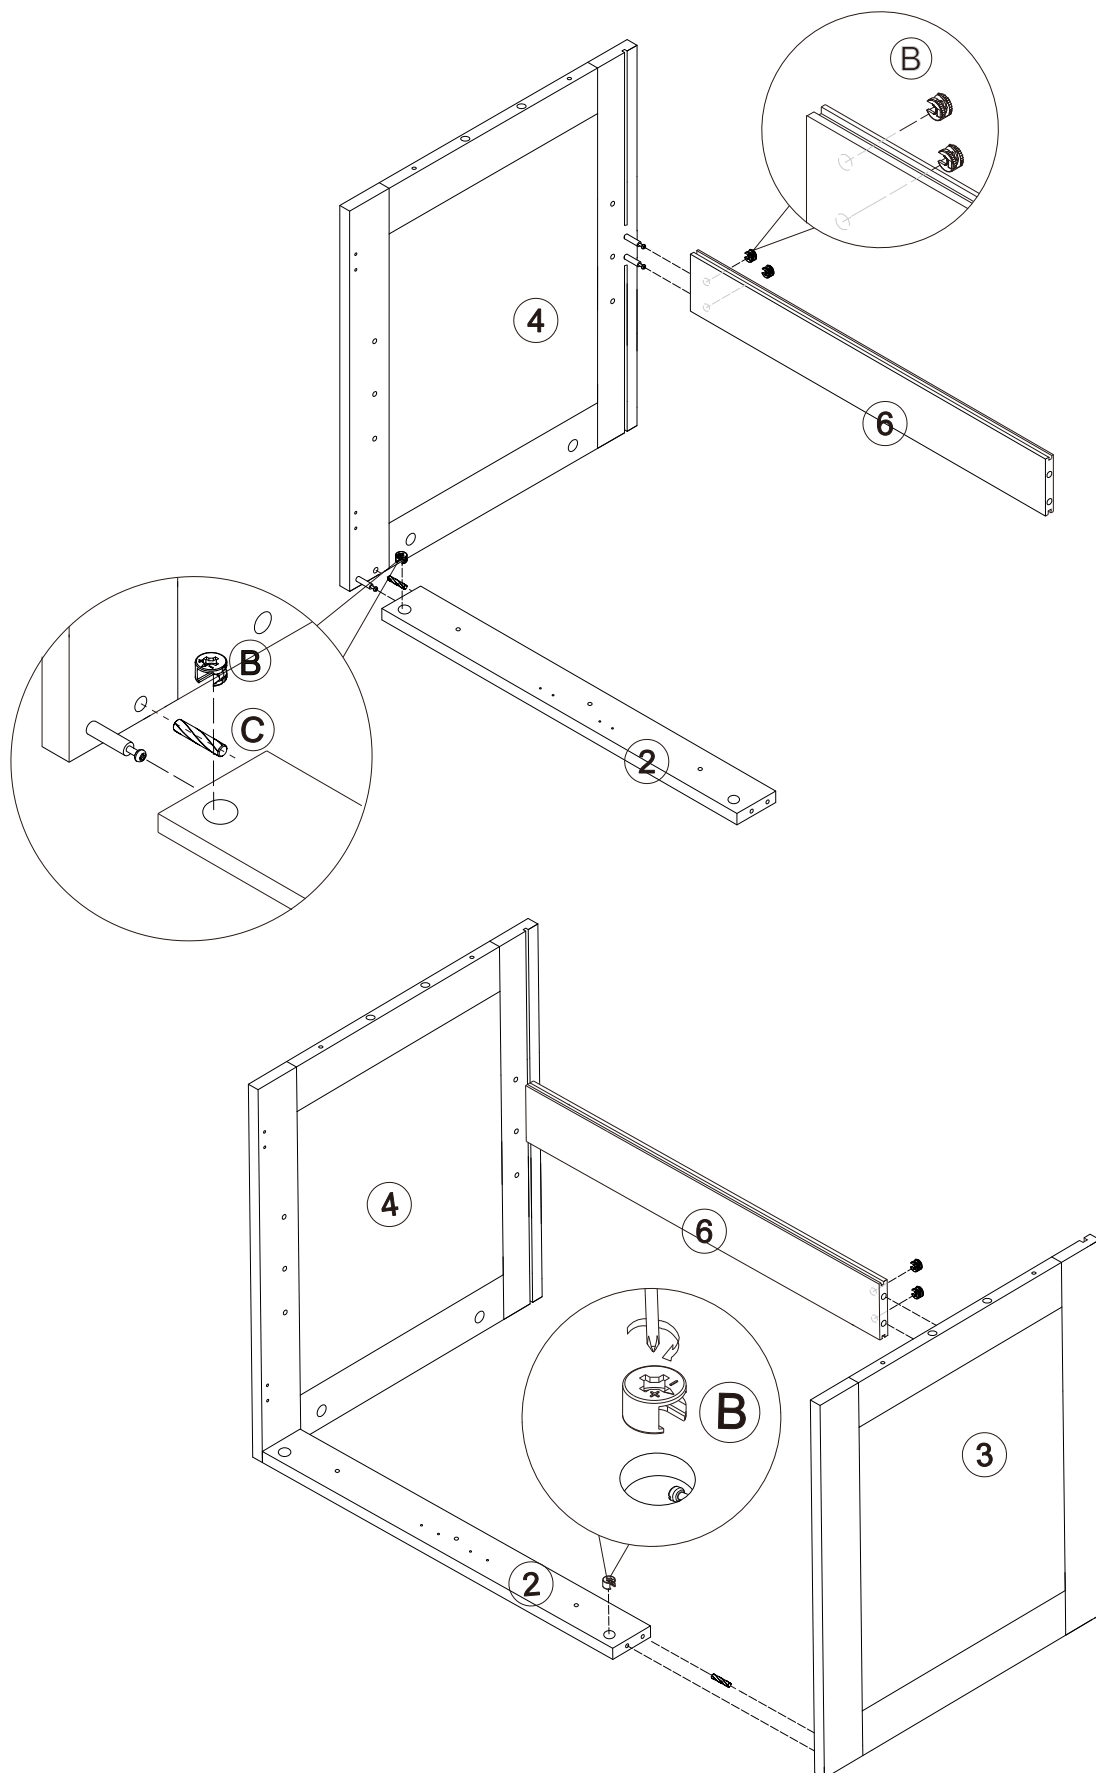





3.







Ø6 X 35mm

(A)



X 8

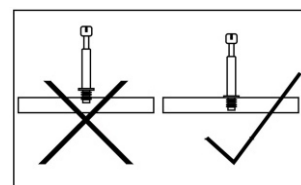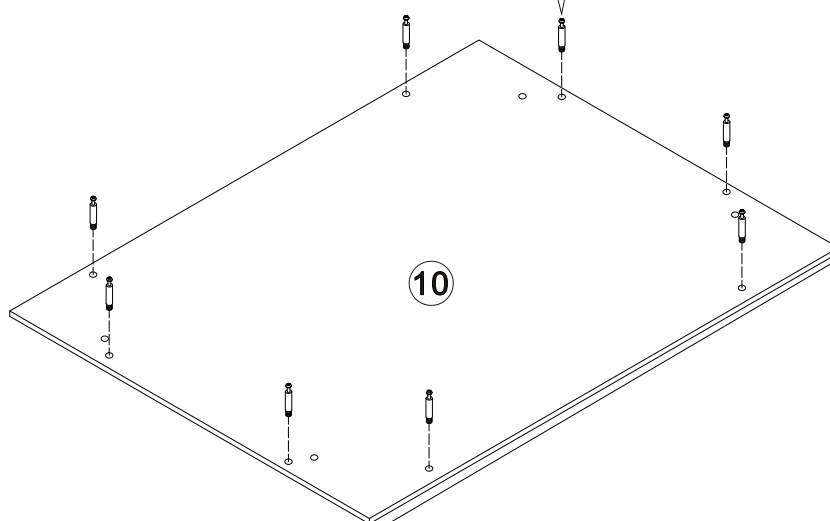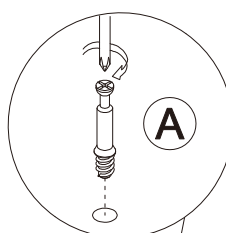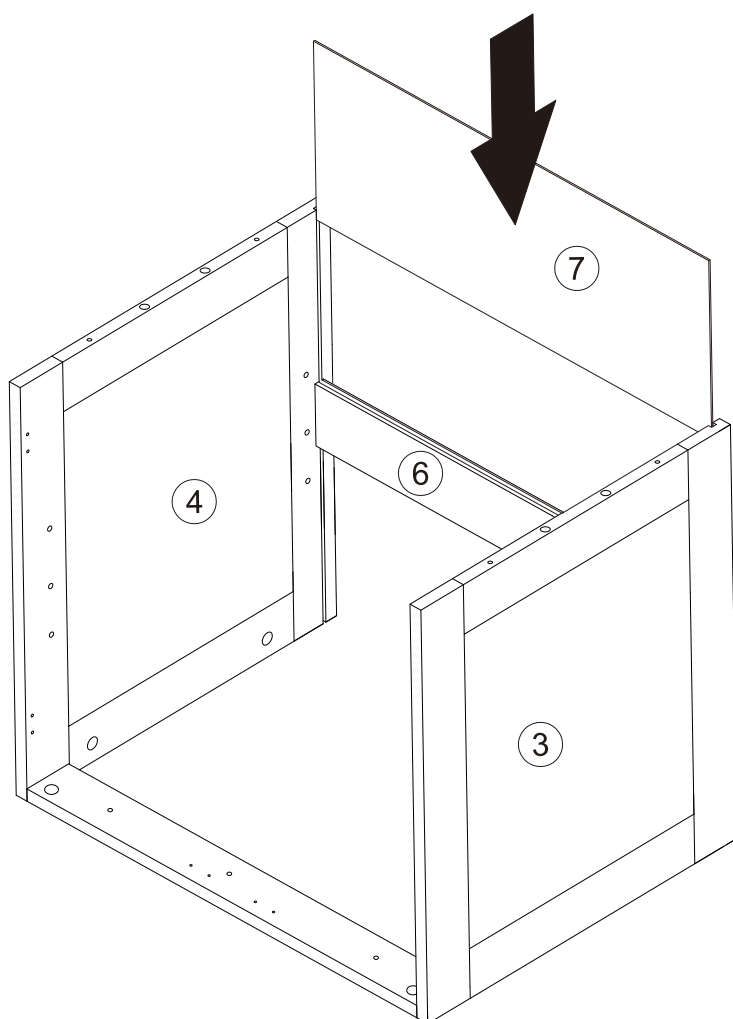


4.

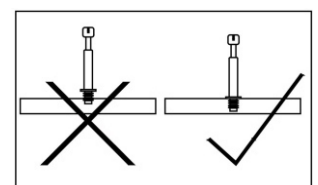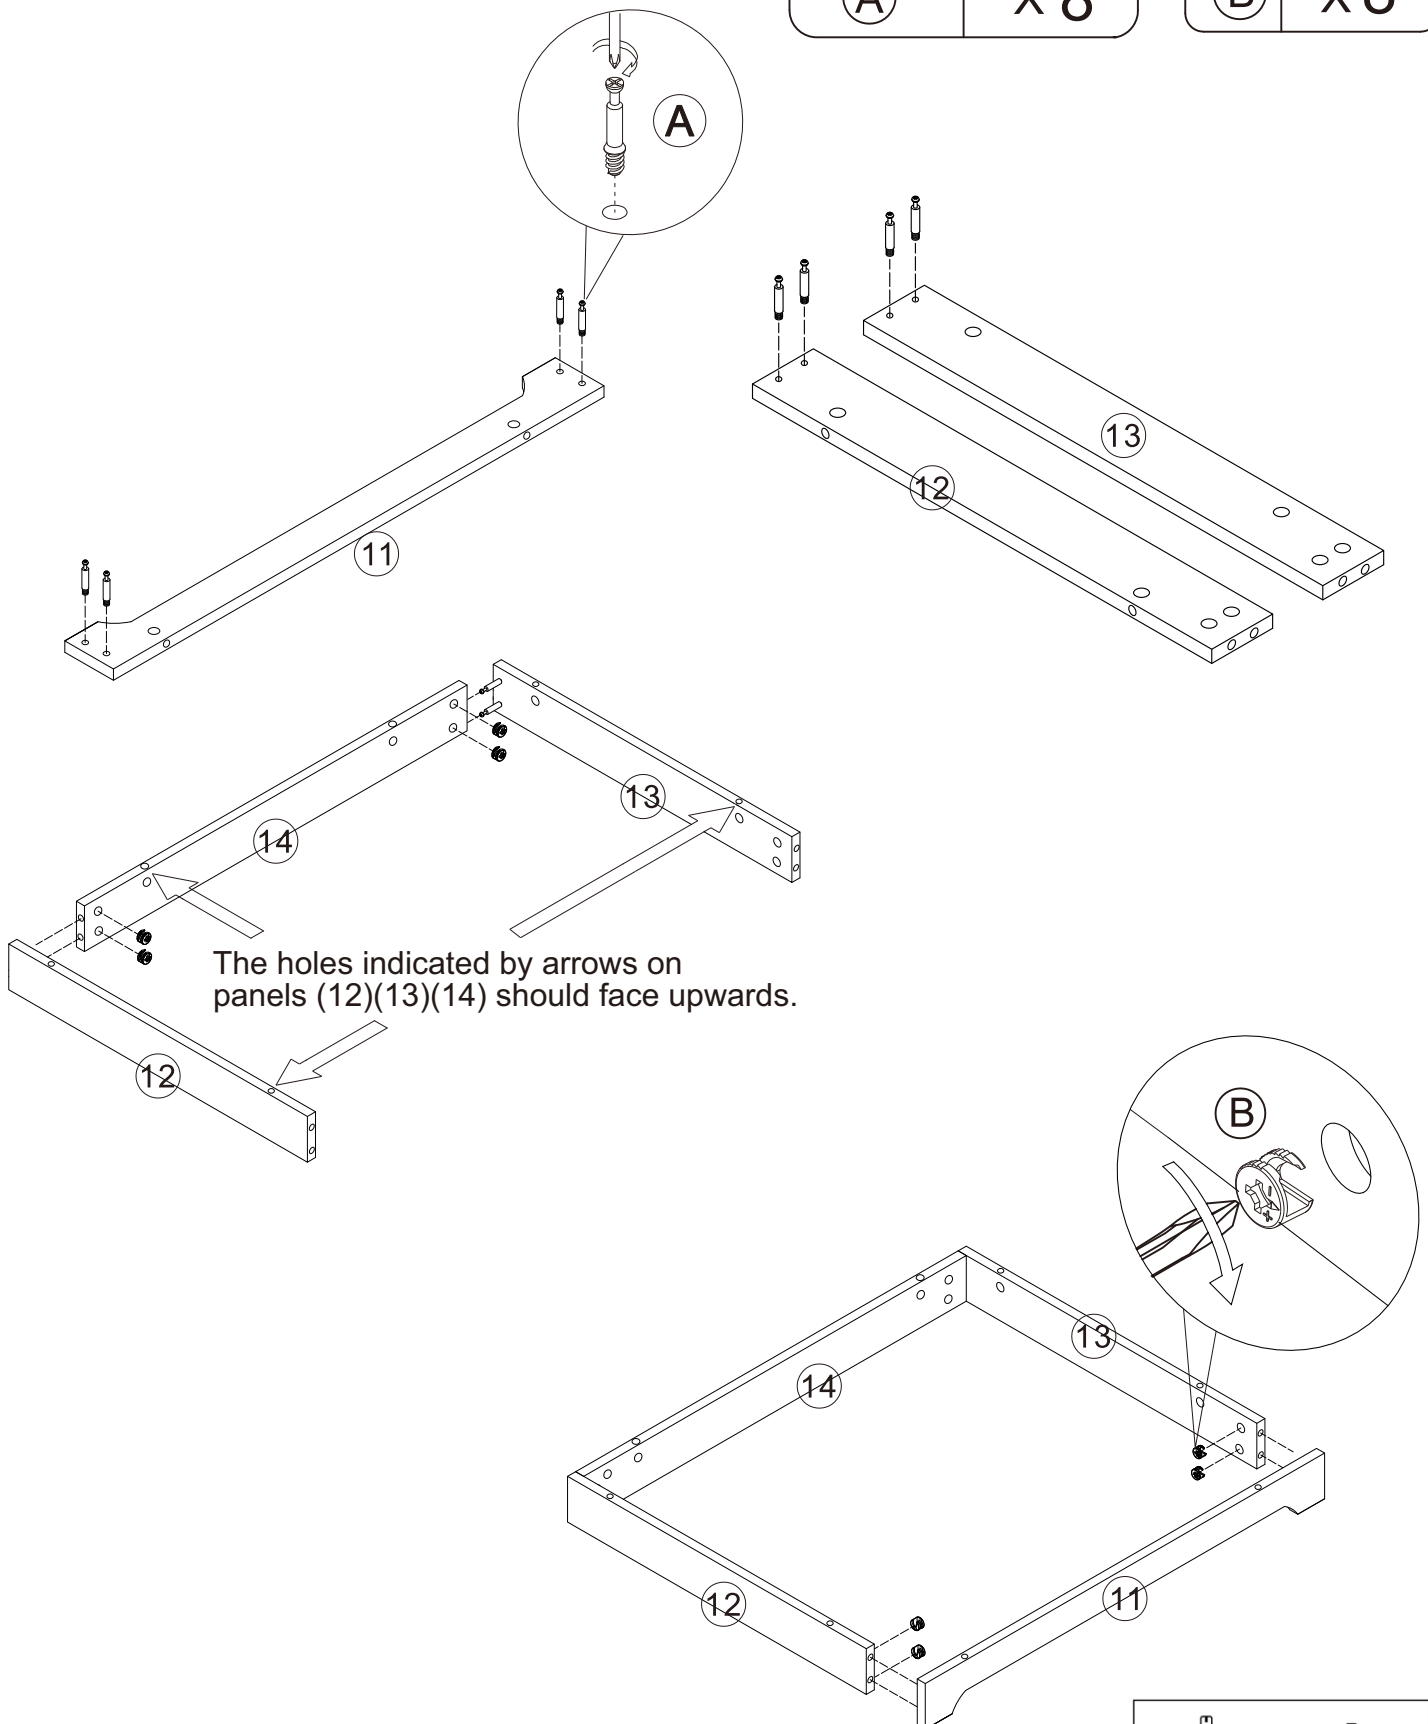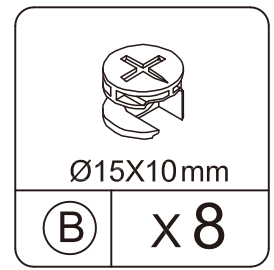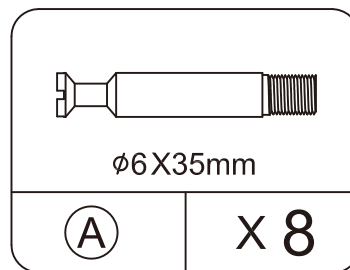





5.

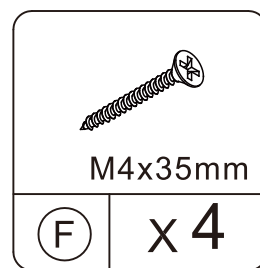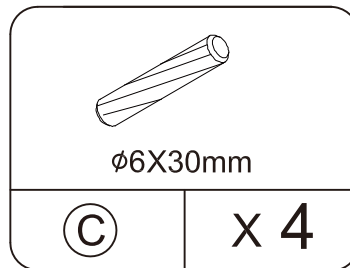

Note the groove position on the back of panel(10) and don't install it in reverse

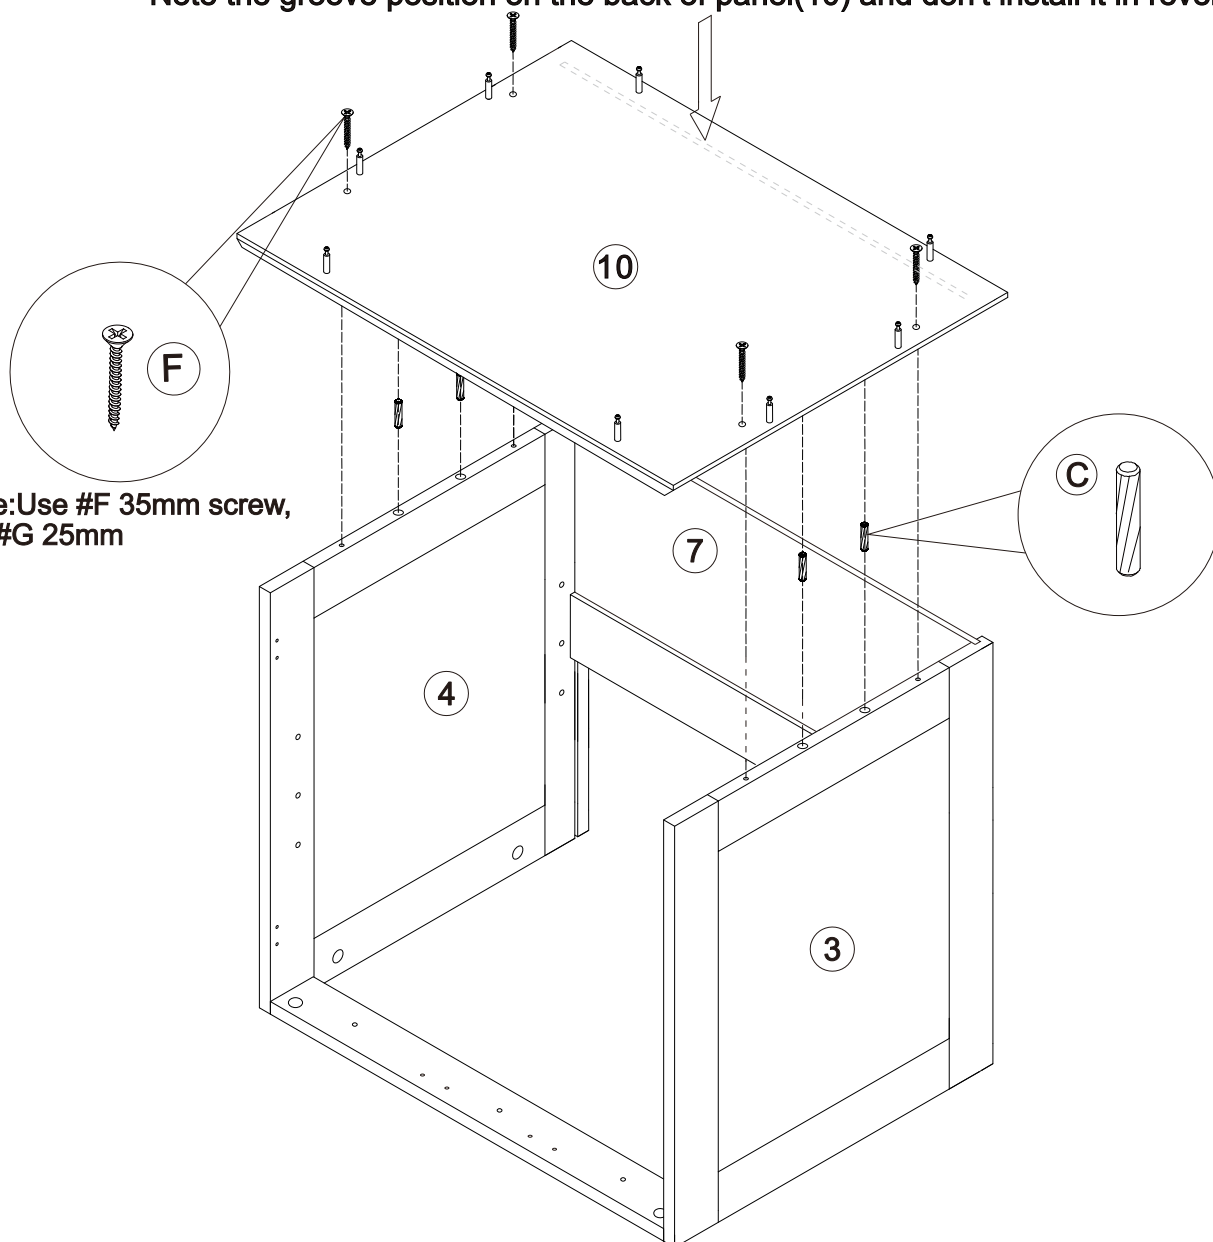


6.

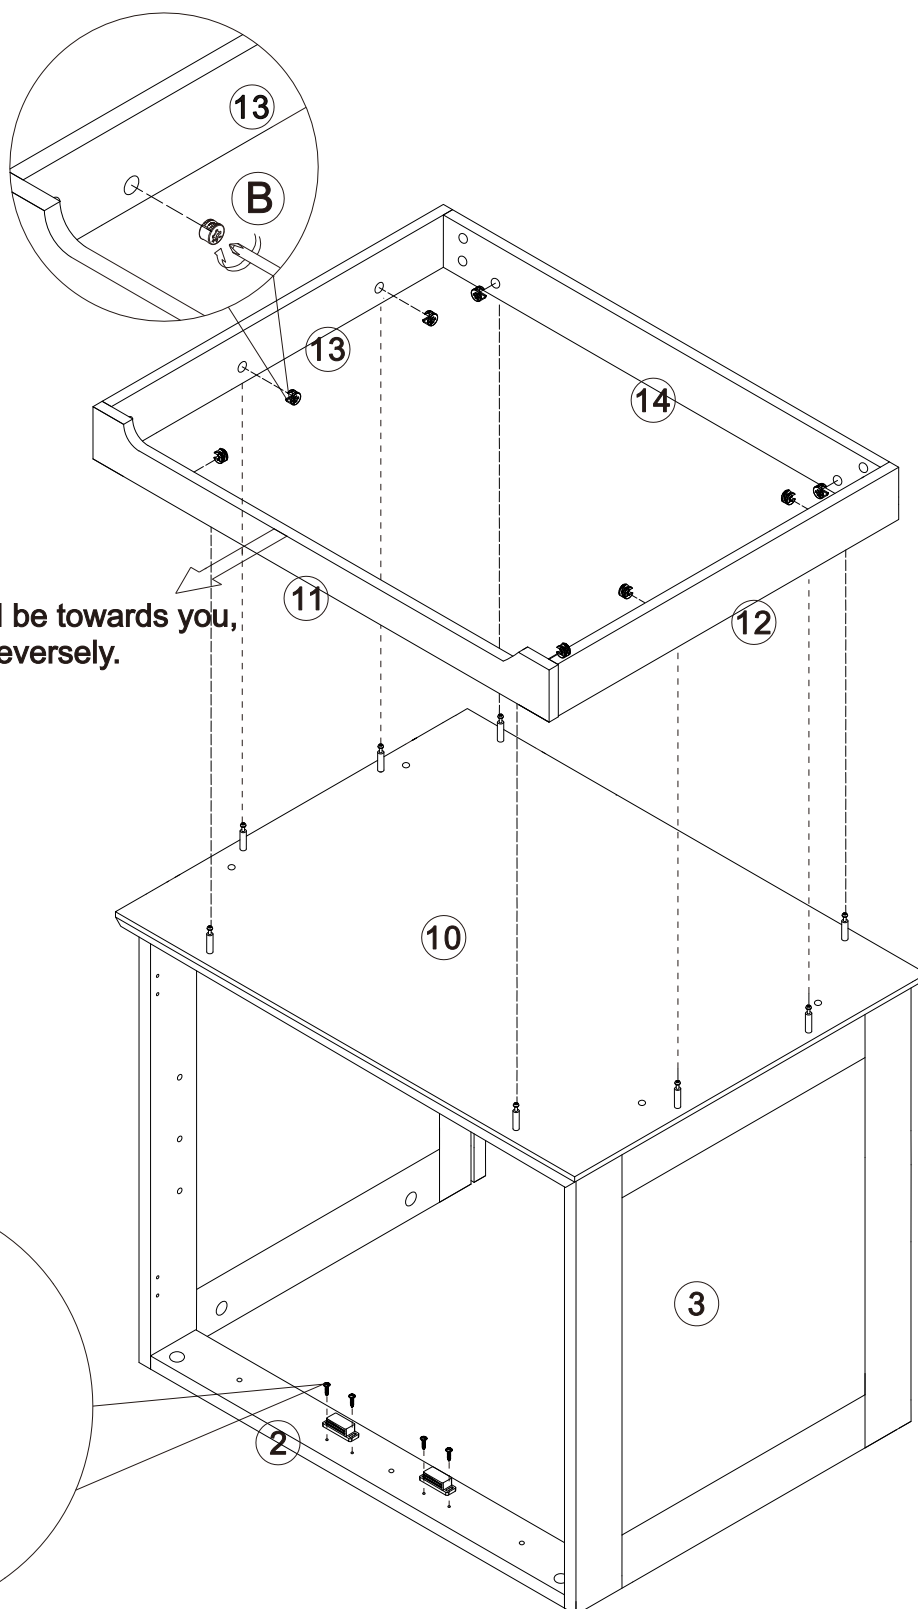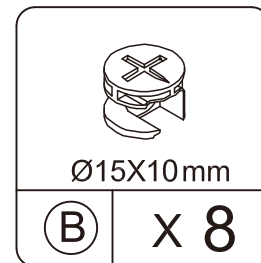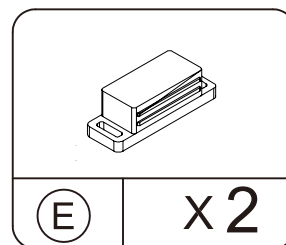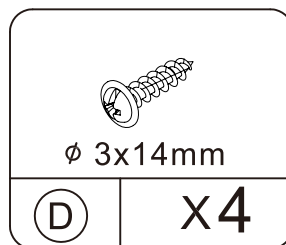

Note: Panel(11) should be towards you,
please don't install it reversely.

Magnet facing outwards

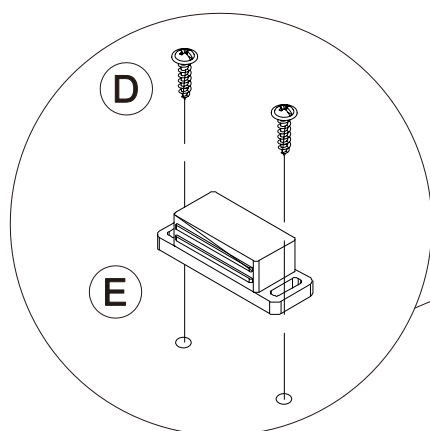




7.






Ø6 X 35mm

A


X 4

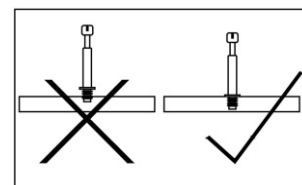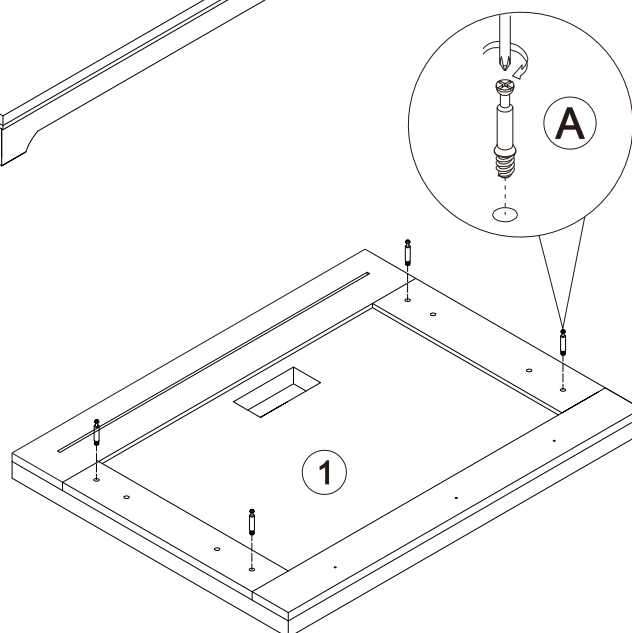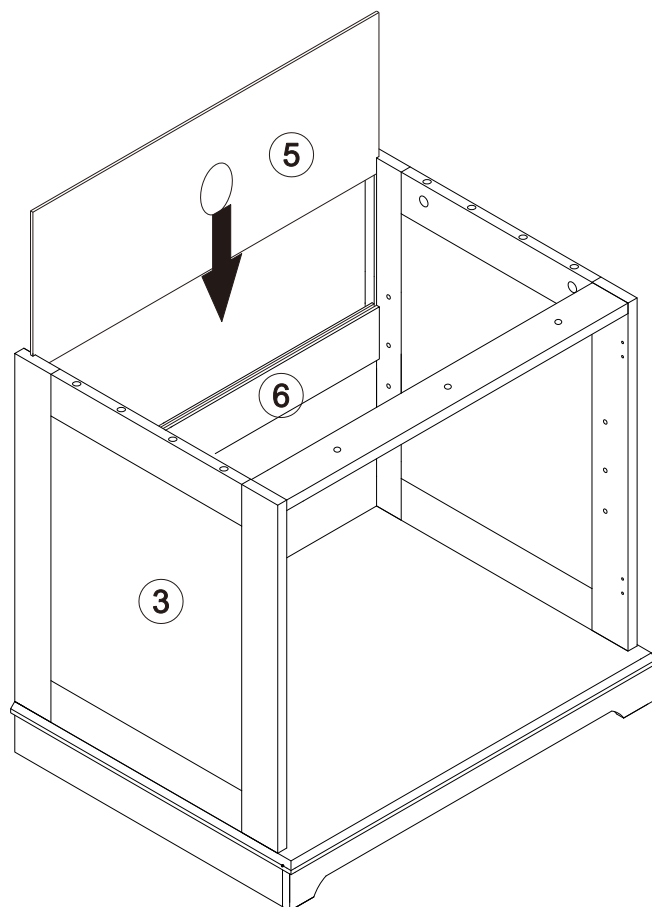

8.

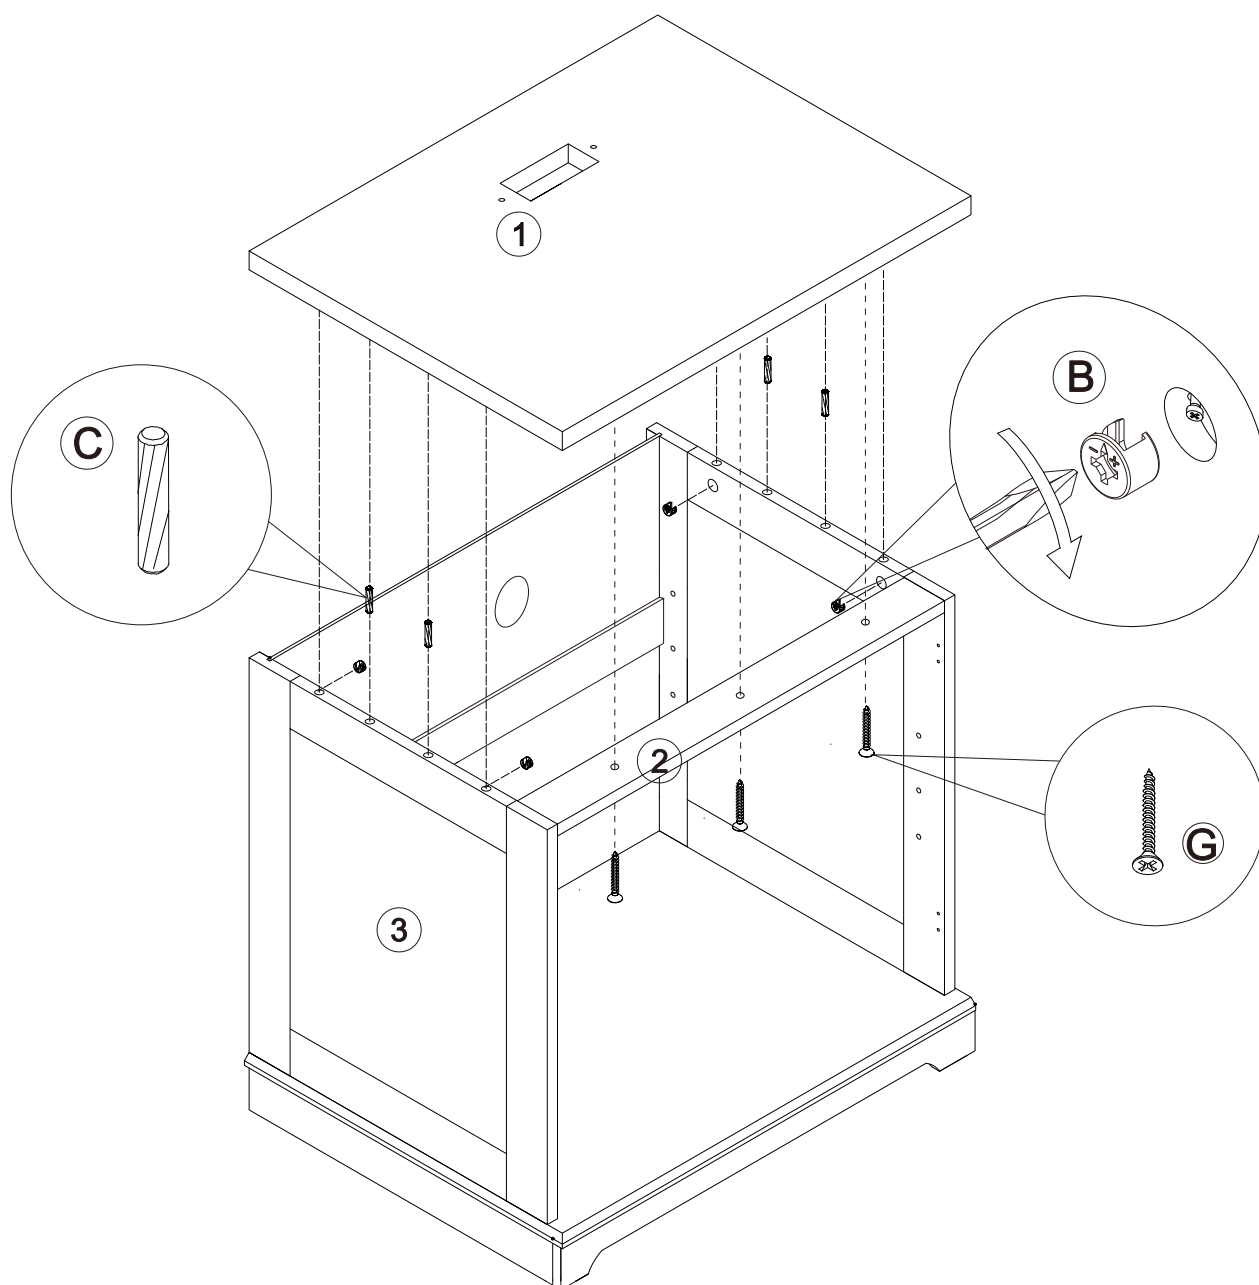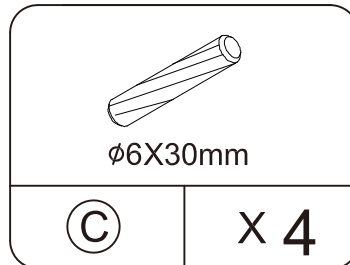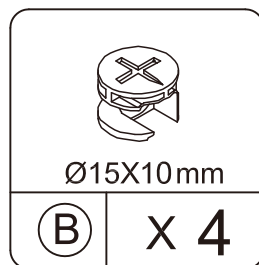


9.

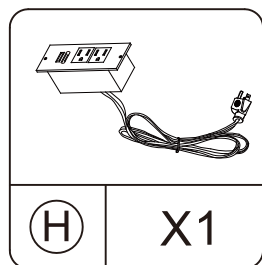


(H)

X1

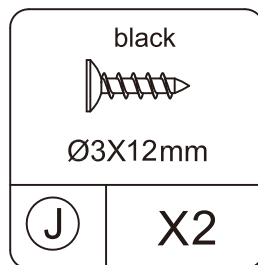


(J)

X2

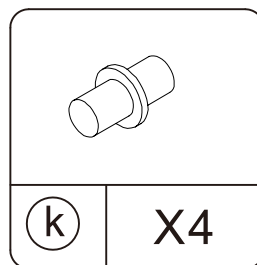


(k)

X4



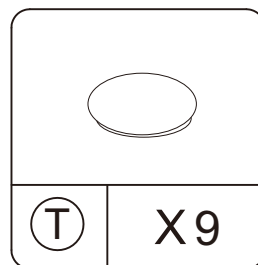


(T)





X9

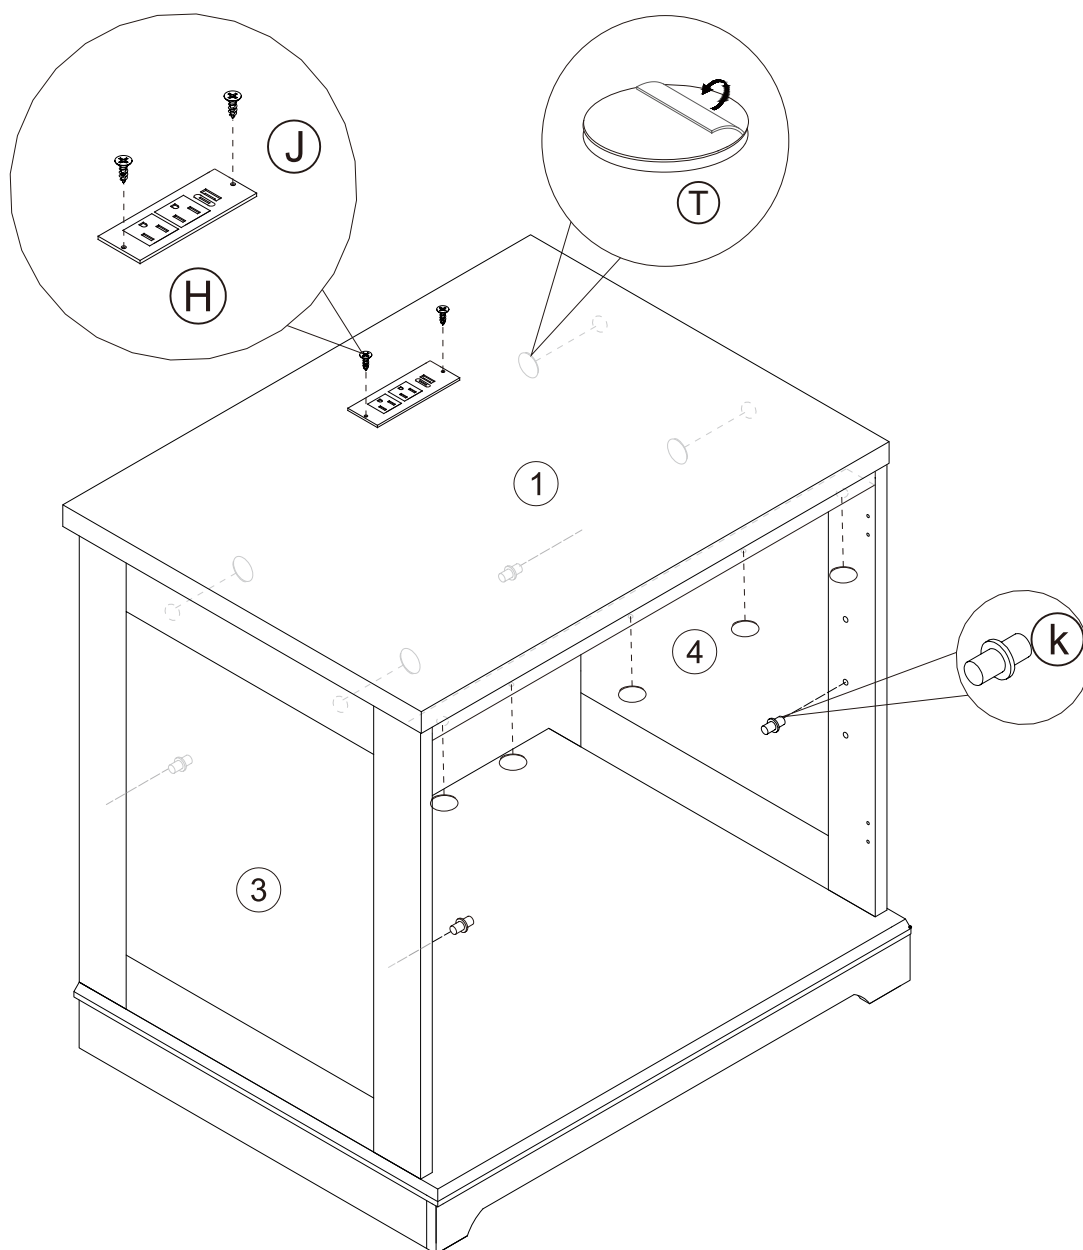




10.

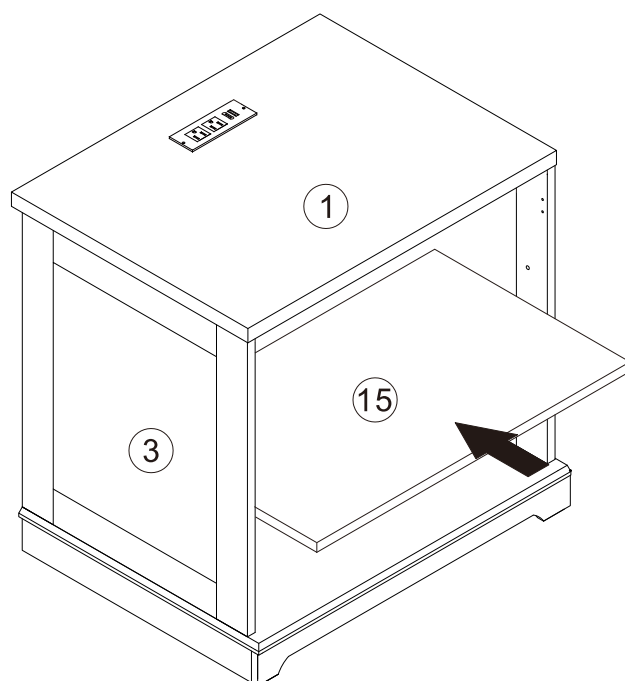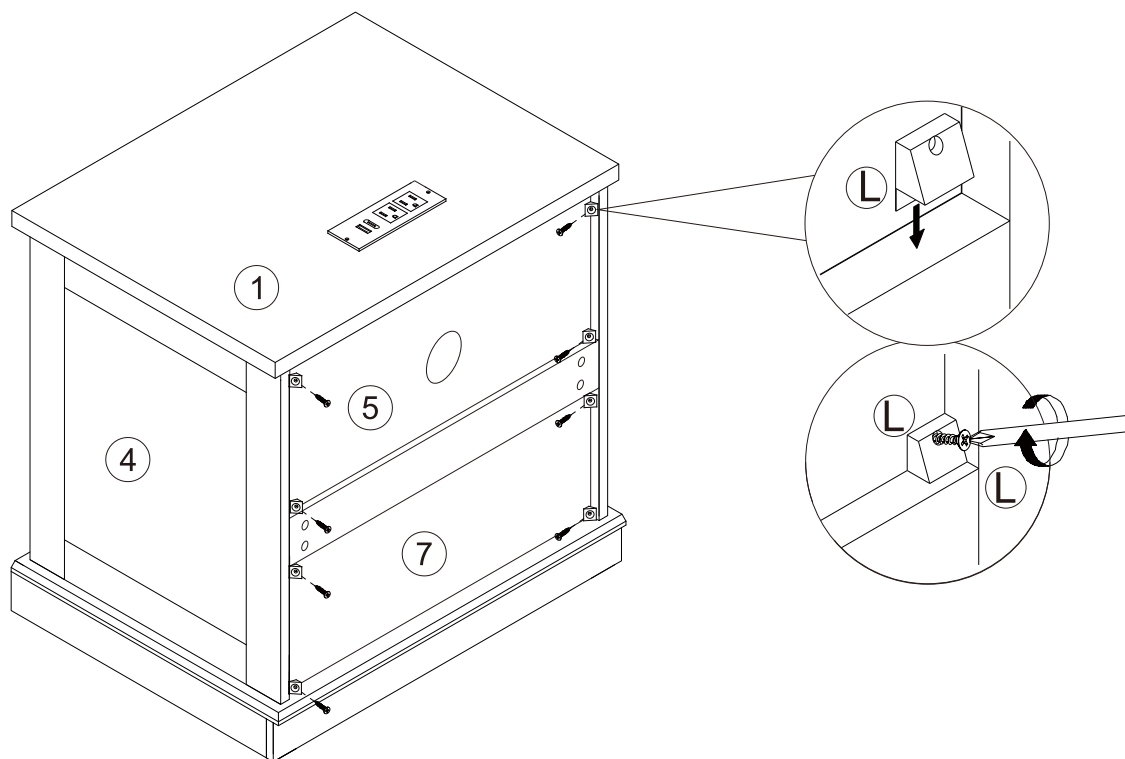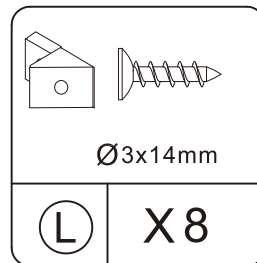


11.

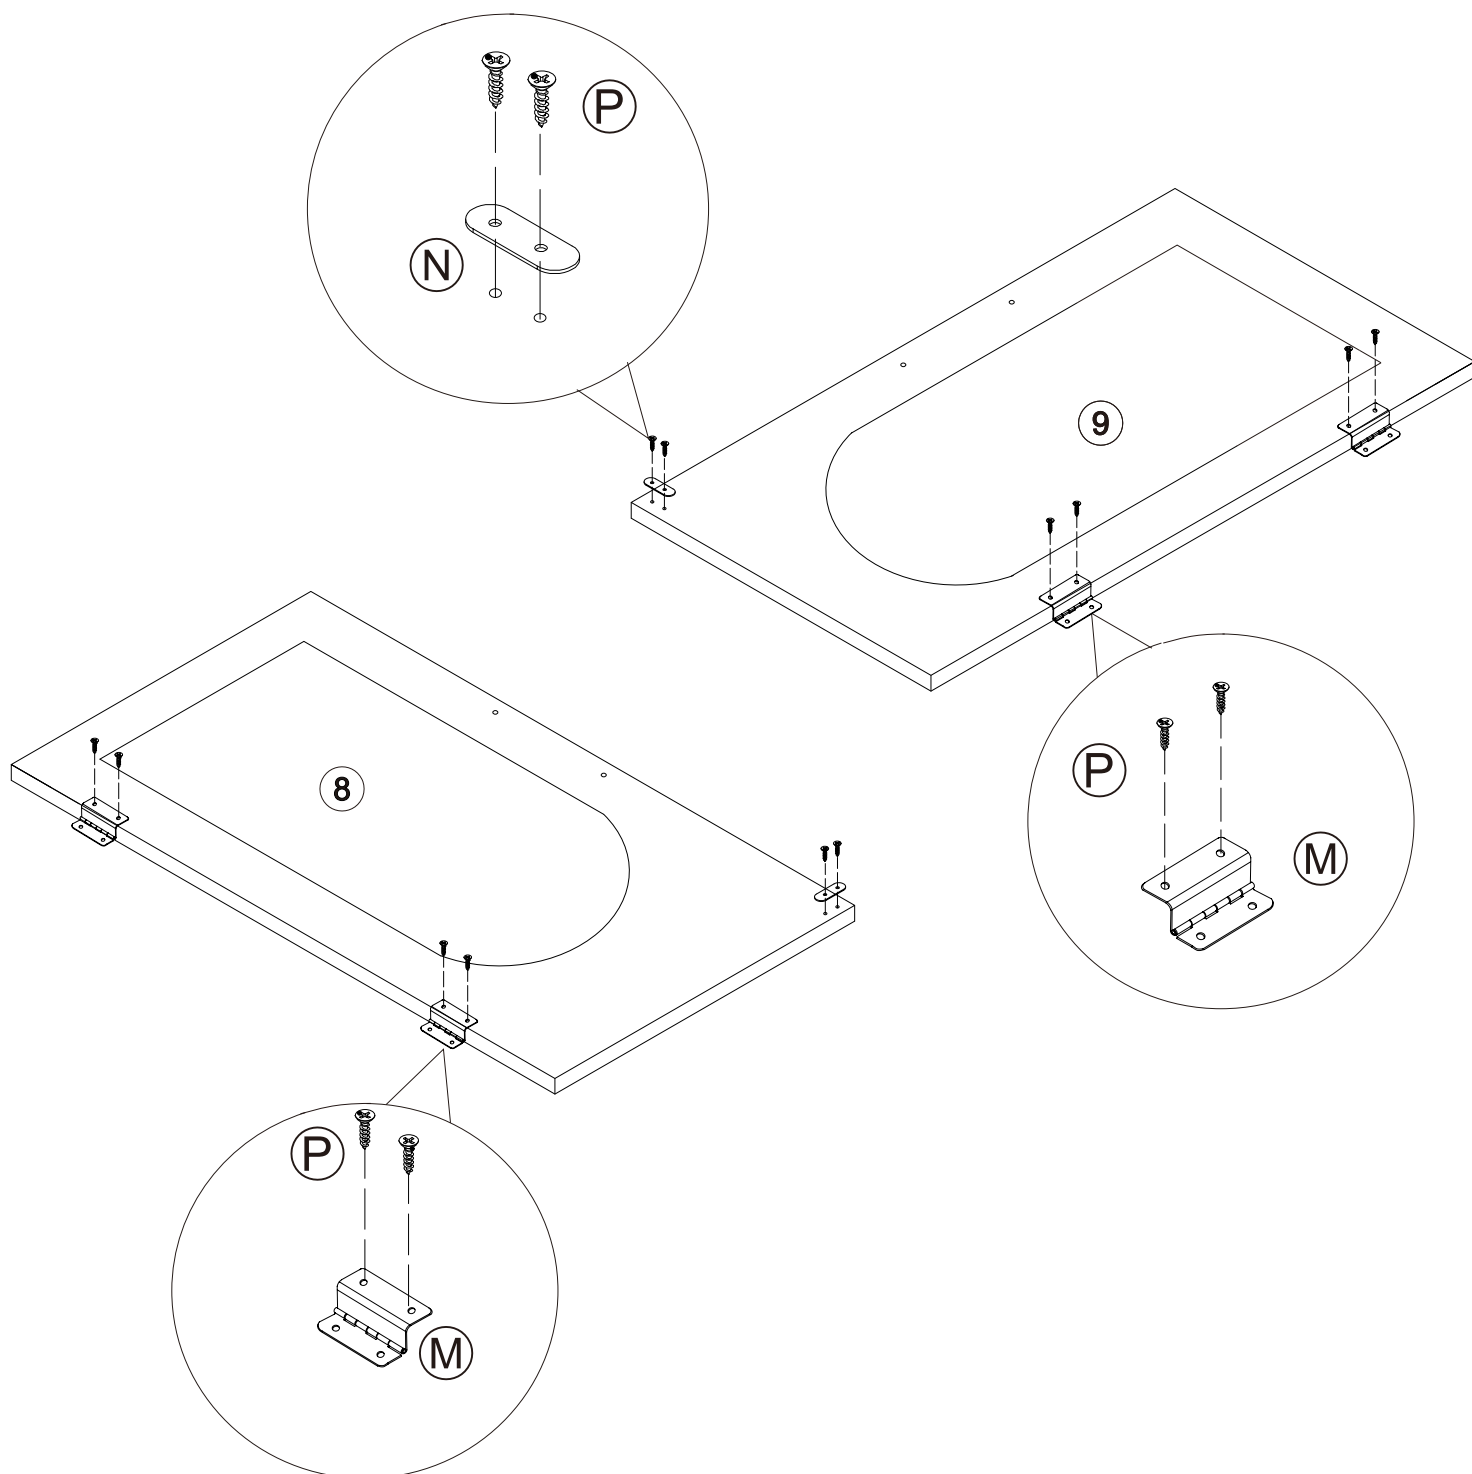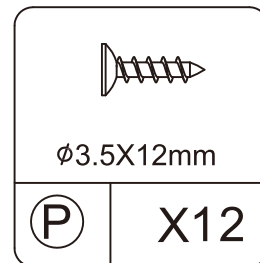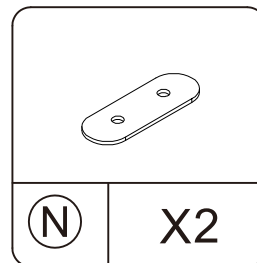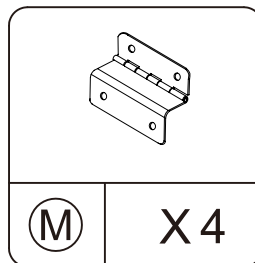

12.

 M4x18mm		 96mm		 ø3.5X12mm	
(R)	X4	(S)	X2	(P)	X8

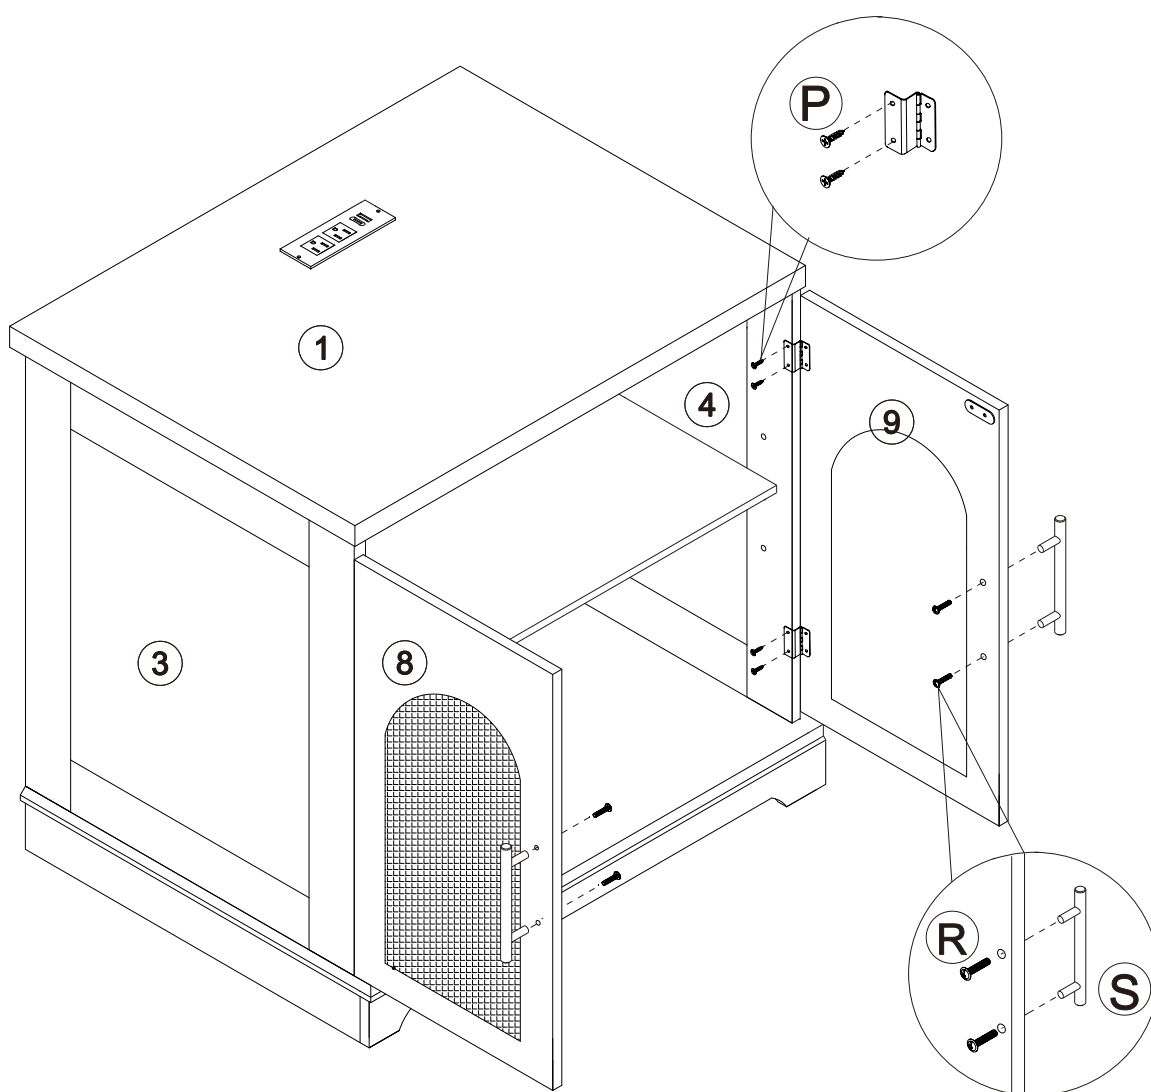

NOTE: The right door is #9 and the left door is #8.
the suction iron plate is located above the door