


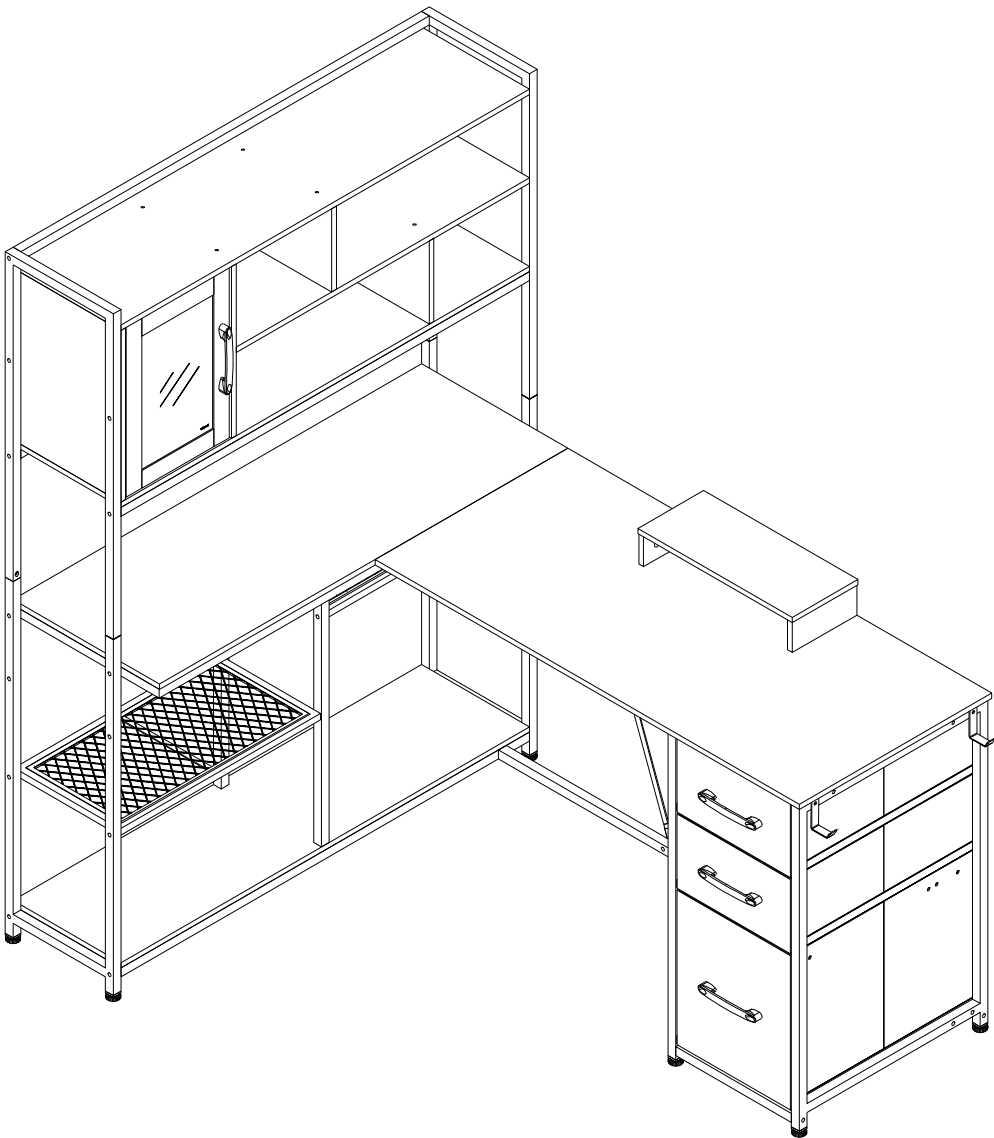
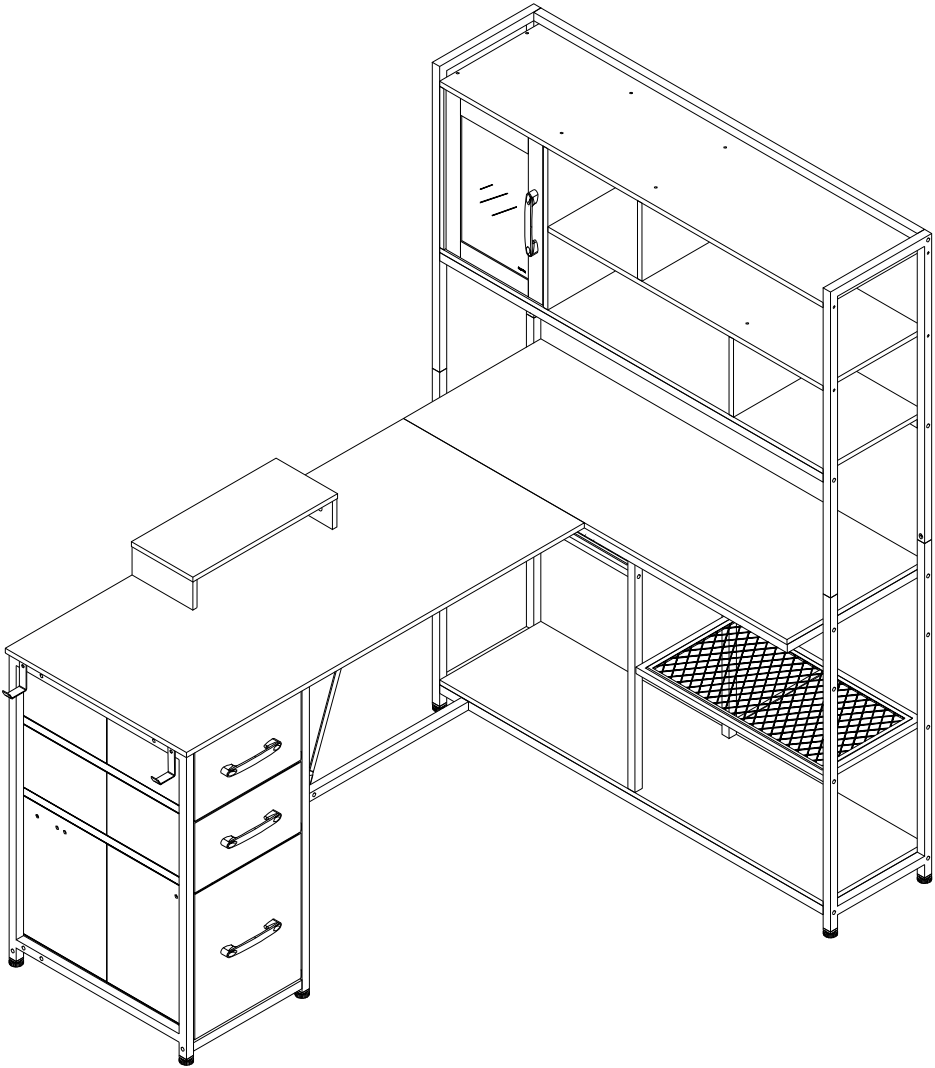












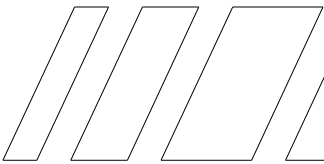


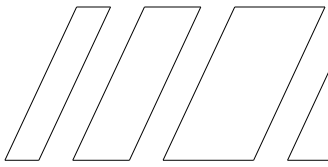


1	2
3	4
5	6
7	8
9	10


x 2

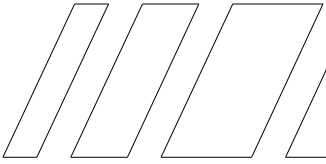

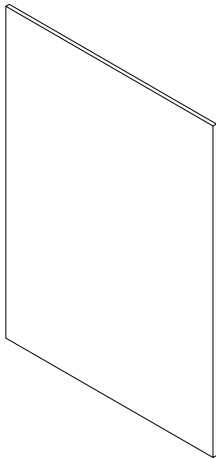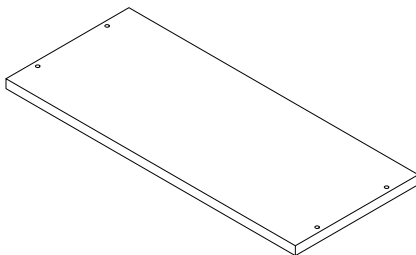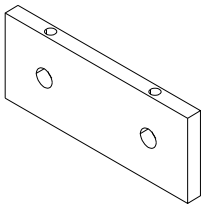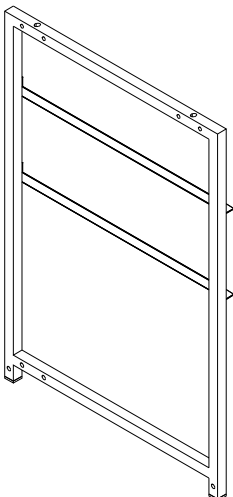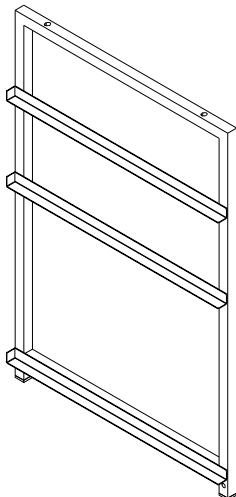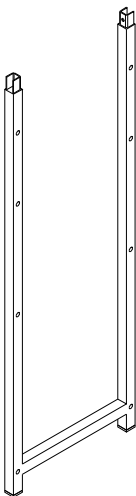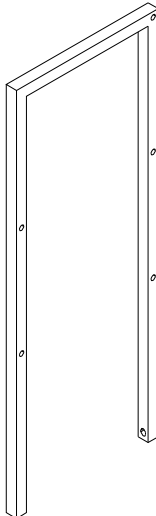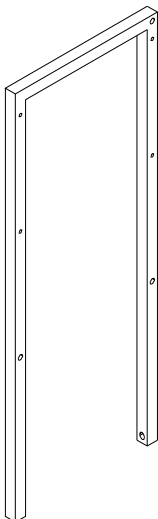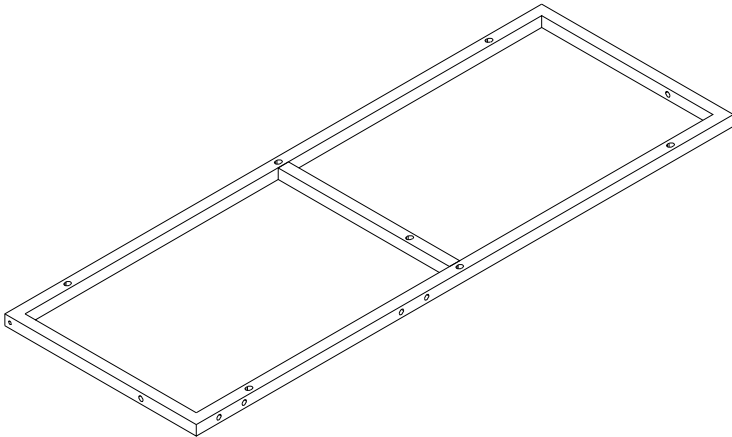
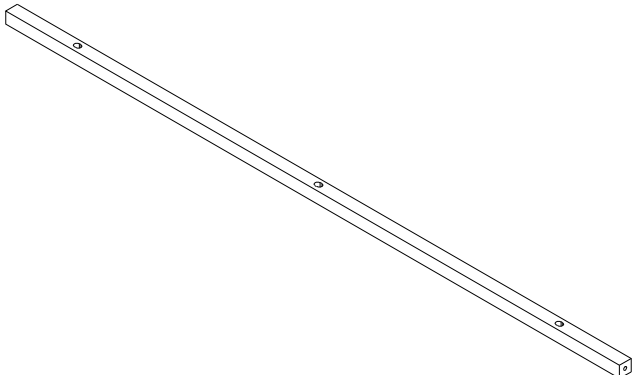
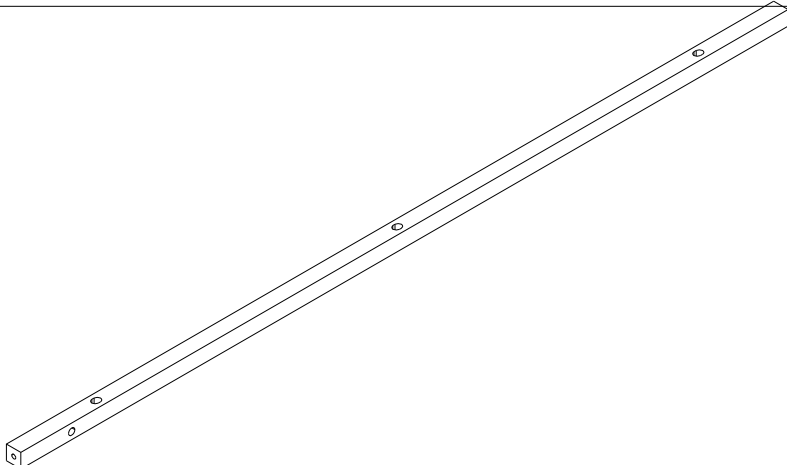
11 	12 	13  x 2
14 	15 	
16  x 2	17 	
18 	19 	
20  x 3	21 	

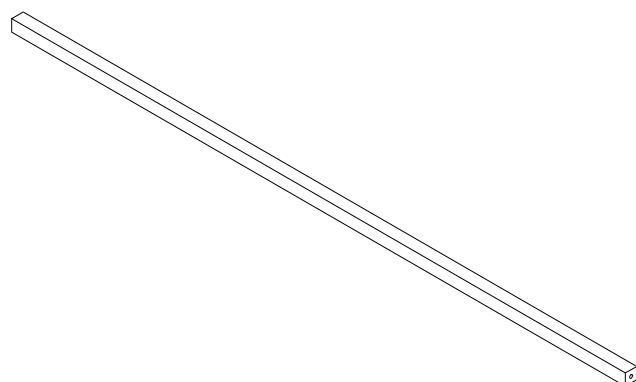


x 2

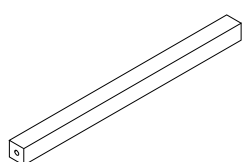



x 2

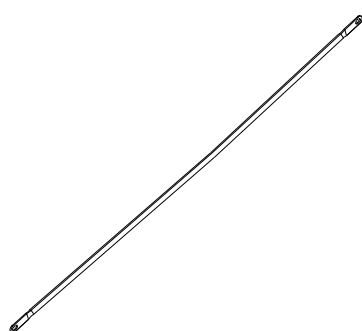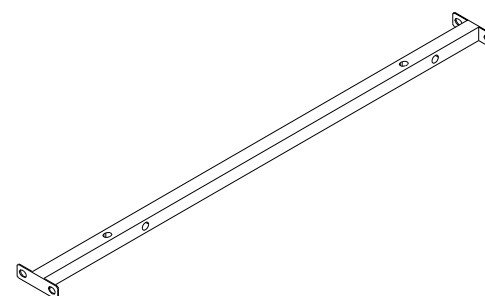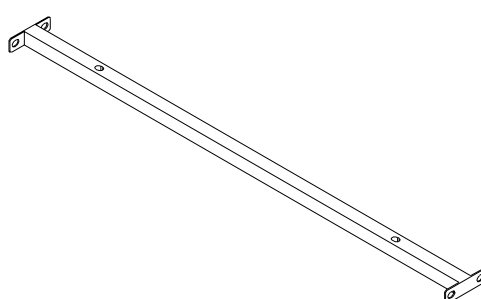




x 2

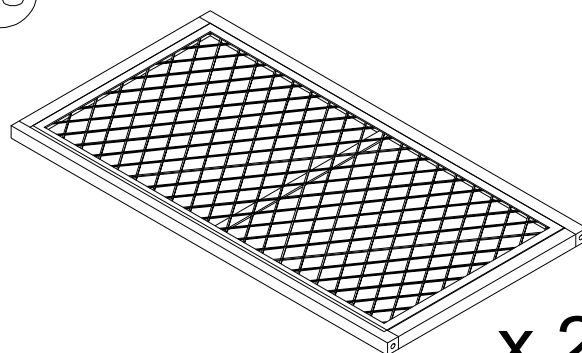




x 2

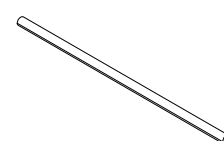 x^2 



x 2

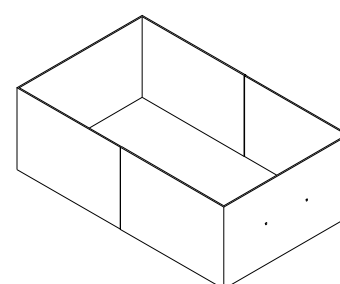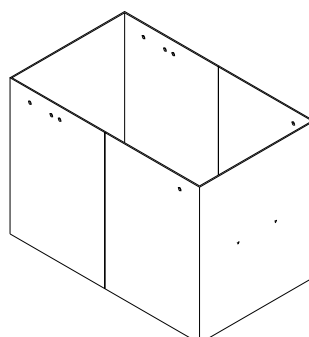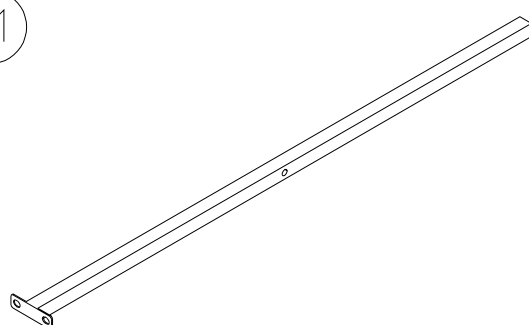


x 2

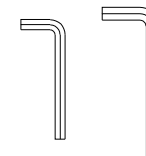


M6




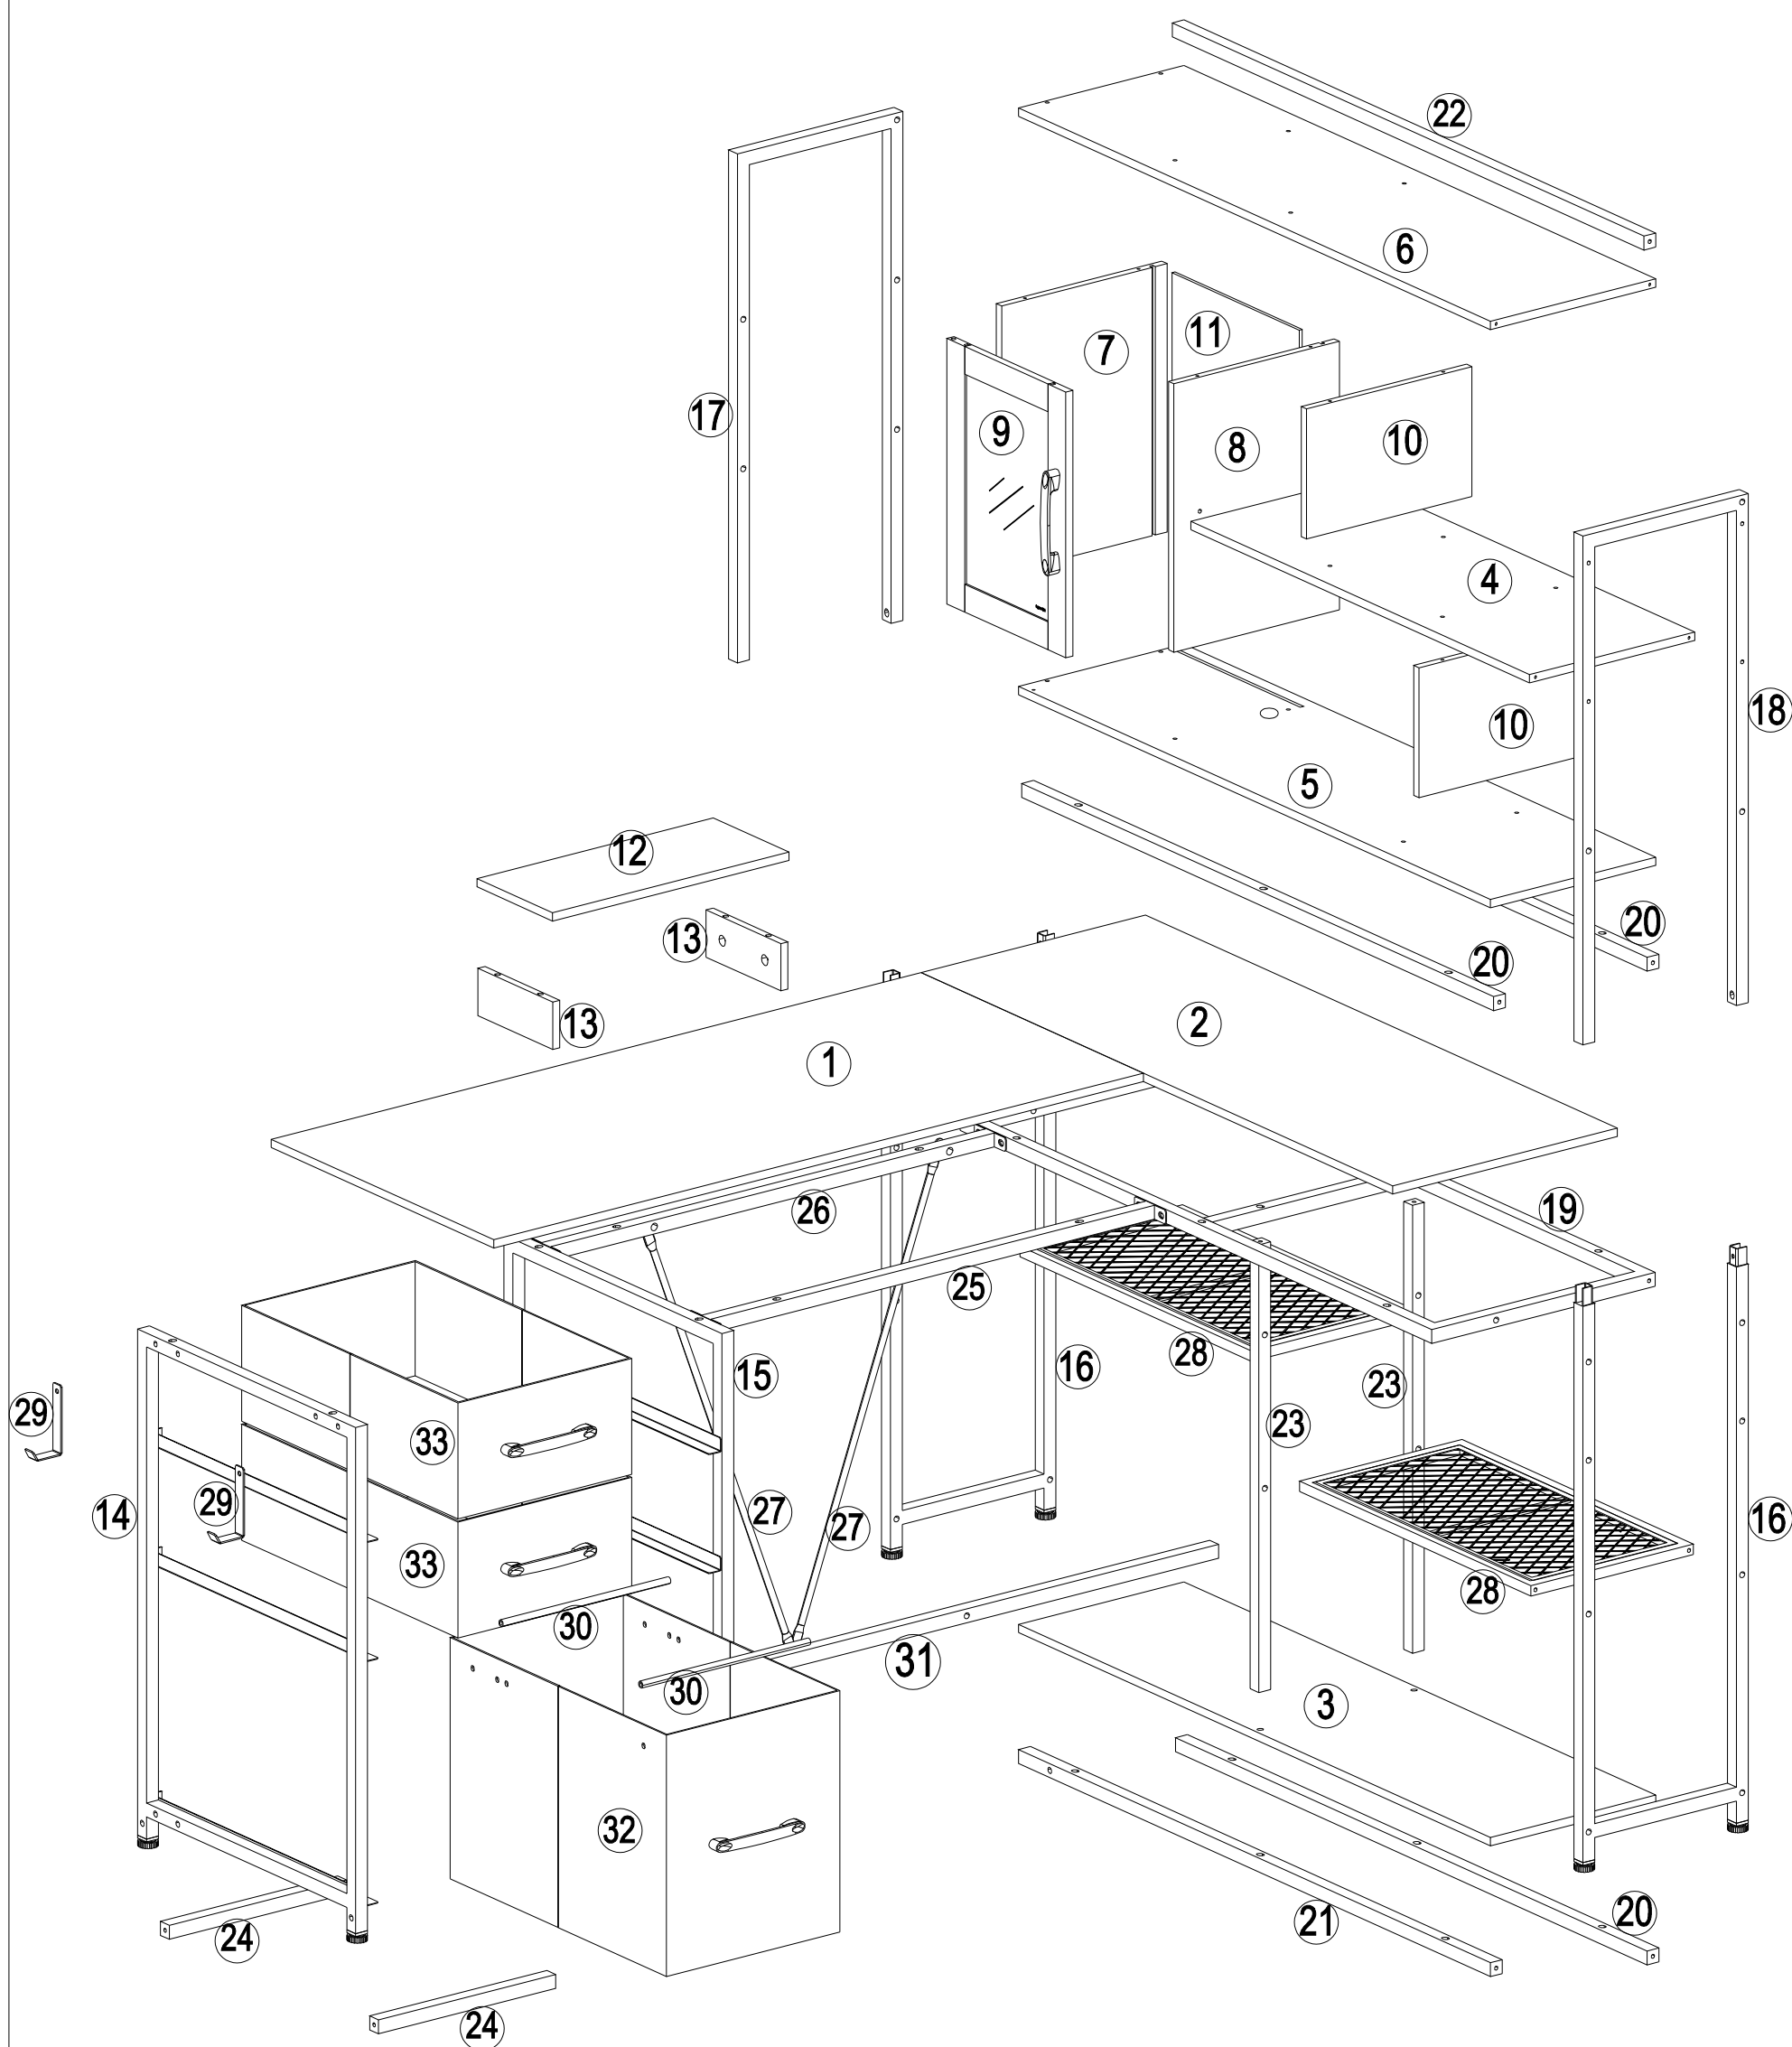


1. Matters needing attention

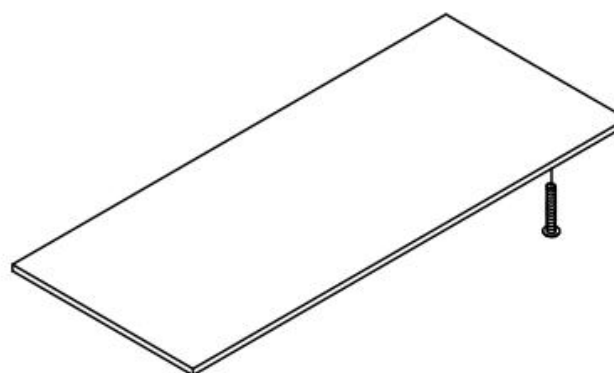

Be sure to use the proper screws to avoid damaging the parts

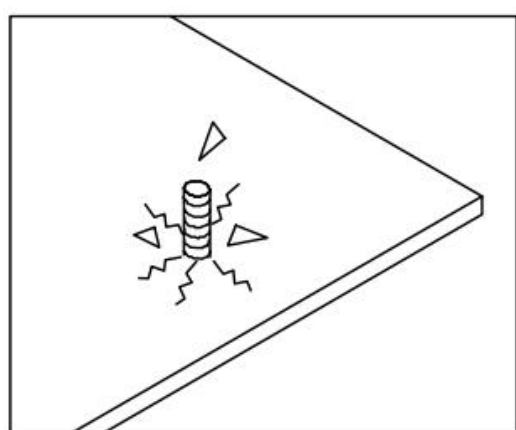



Wrong screws can cause the plank to crack

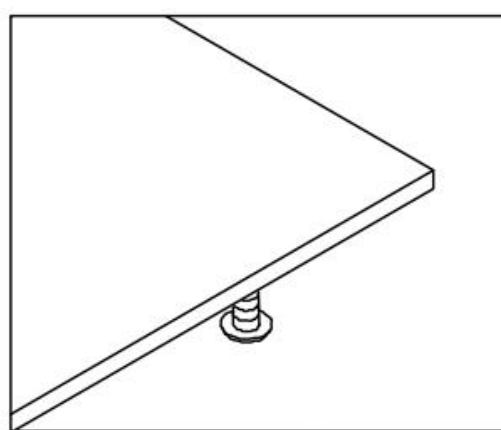


The right screw is the right size

Matters needing attention


- (1) When installing the screws in the installation step, the screws do not need to be tightened. After this installation step is confirmed and the holes are aligned, then tighten all the screws.
- (2) If the screws are tightened during the installation process, it will cause problems such as misalignment of the screw holes and misalignment of the board in subsequent installations.

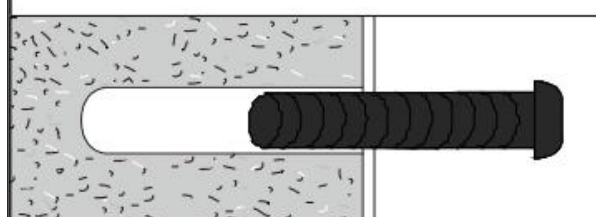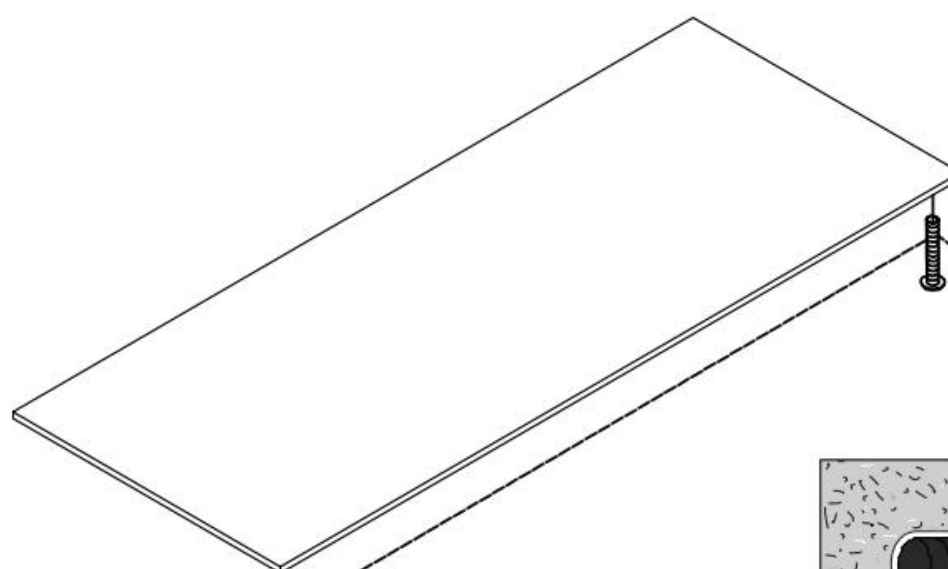


Do not tighten the screws

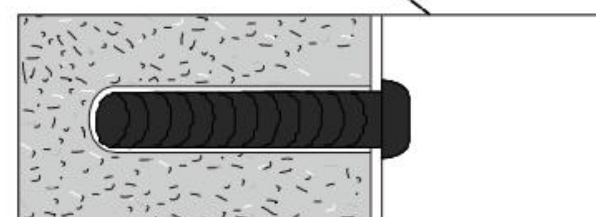


Screw down

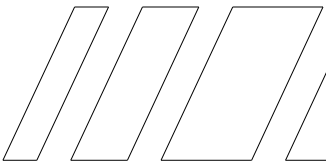


Option A

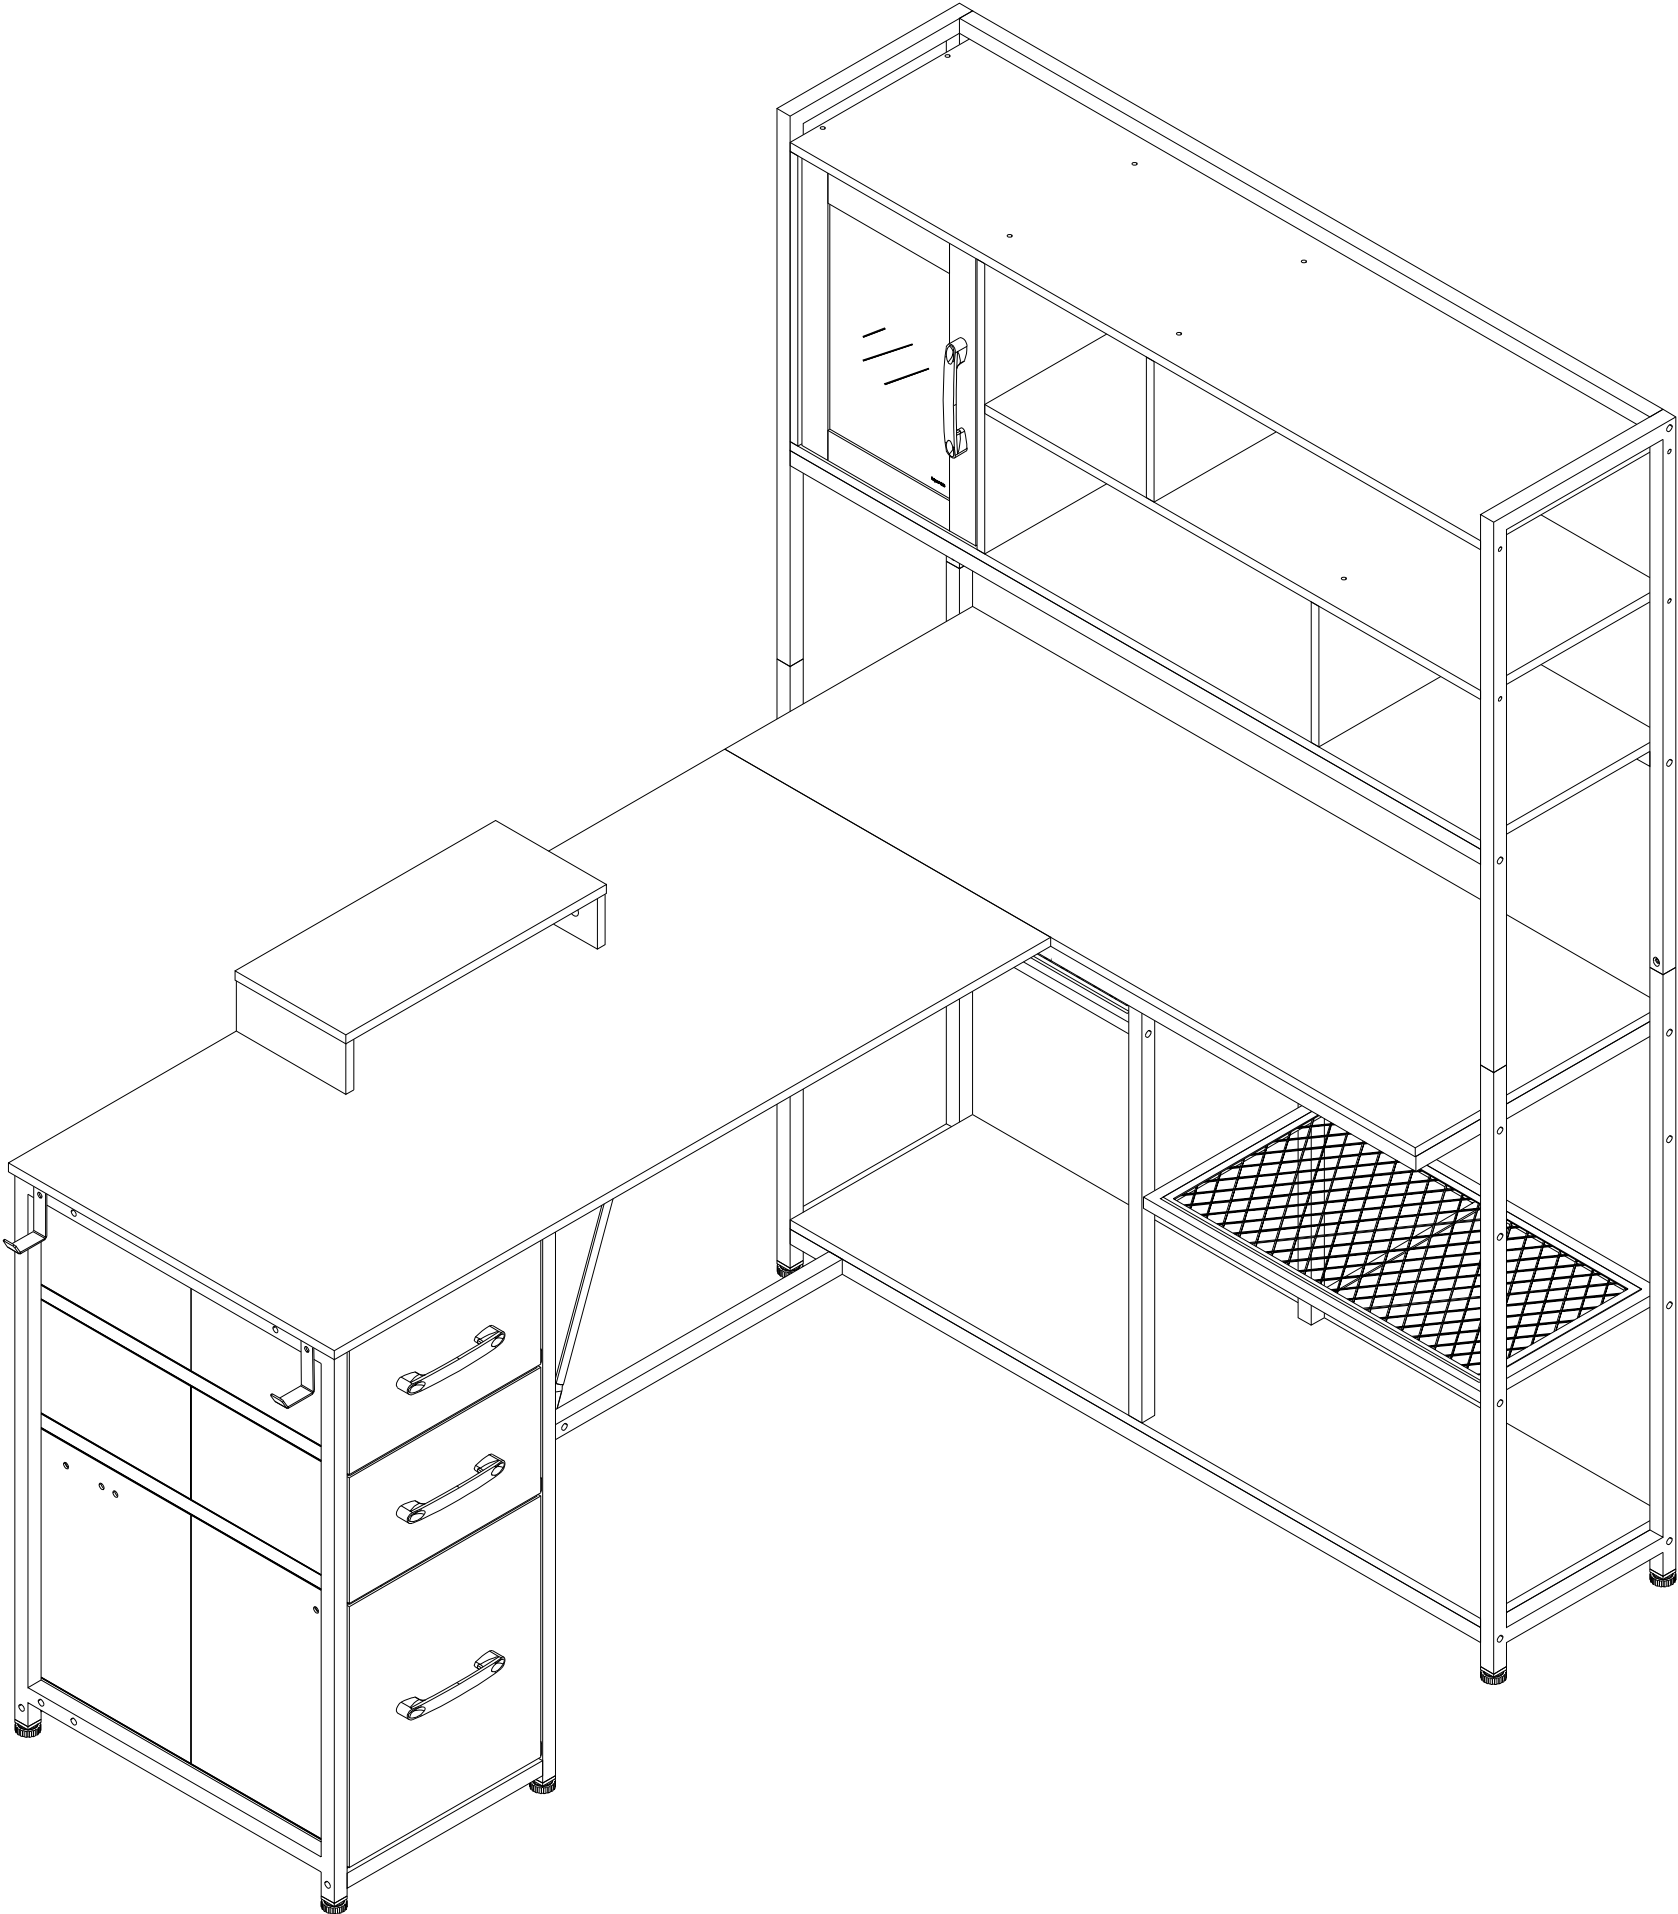


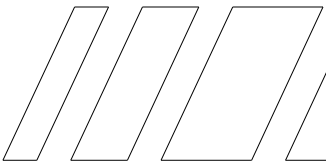


1

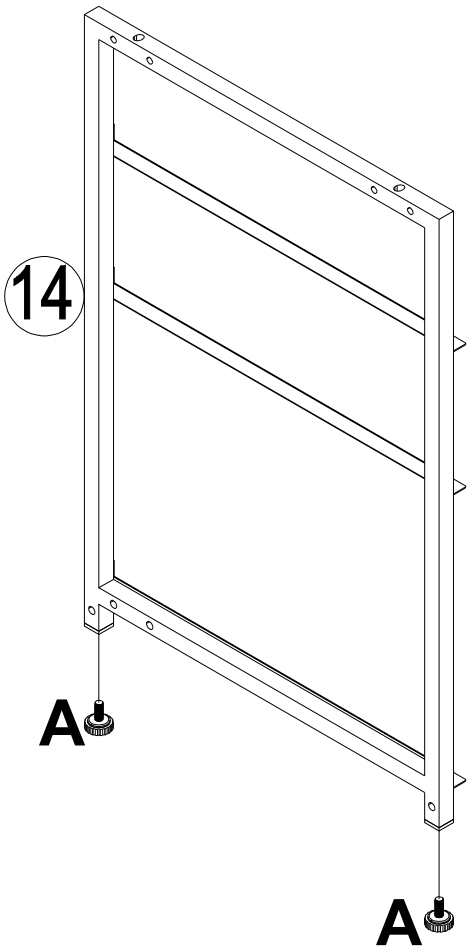


A M6




4 PCS

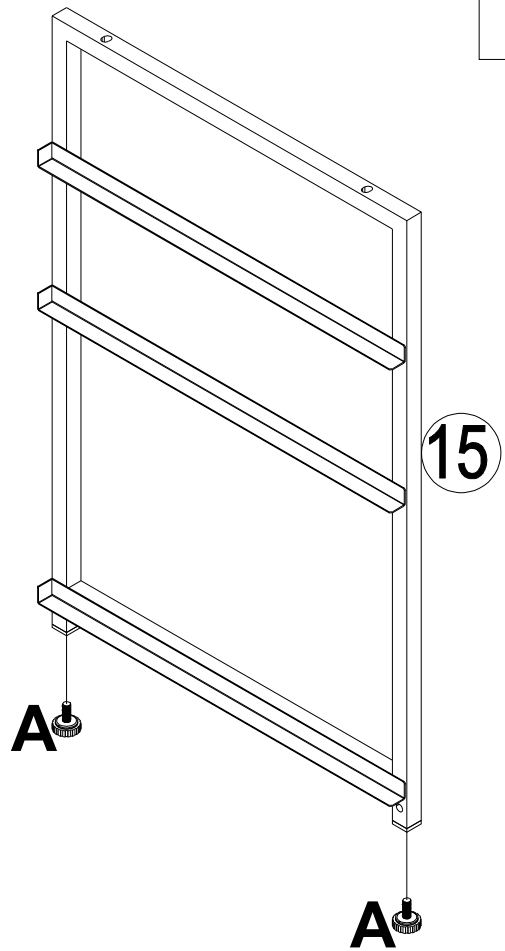

2

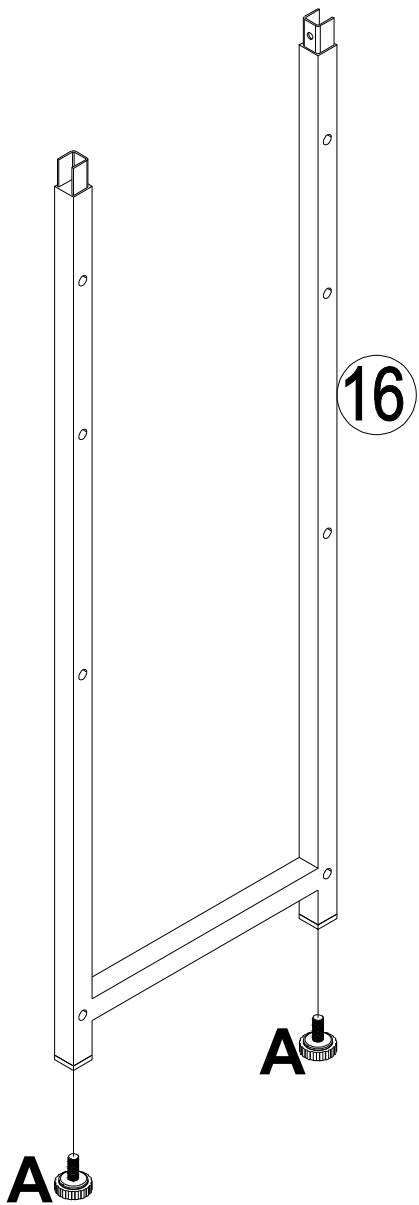


A M6




4 PCS

x 2

3

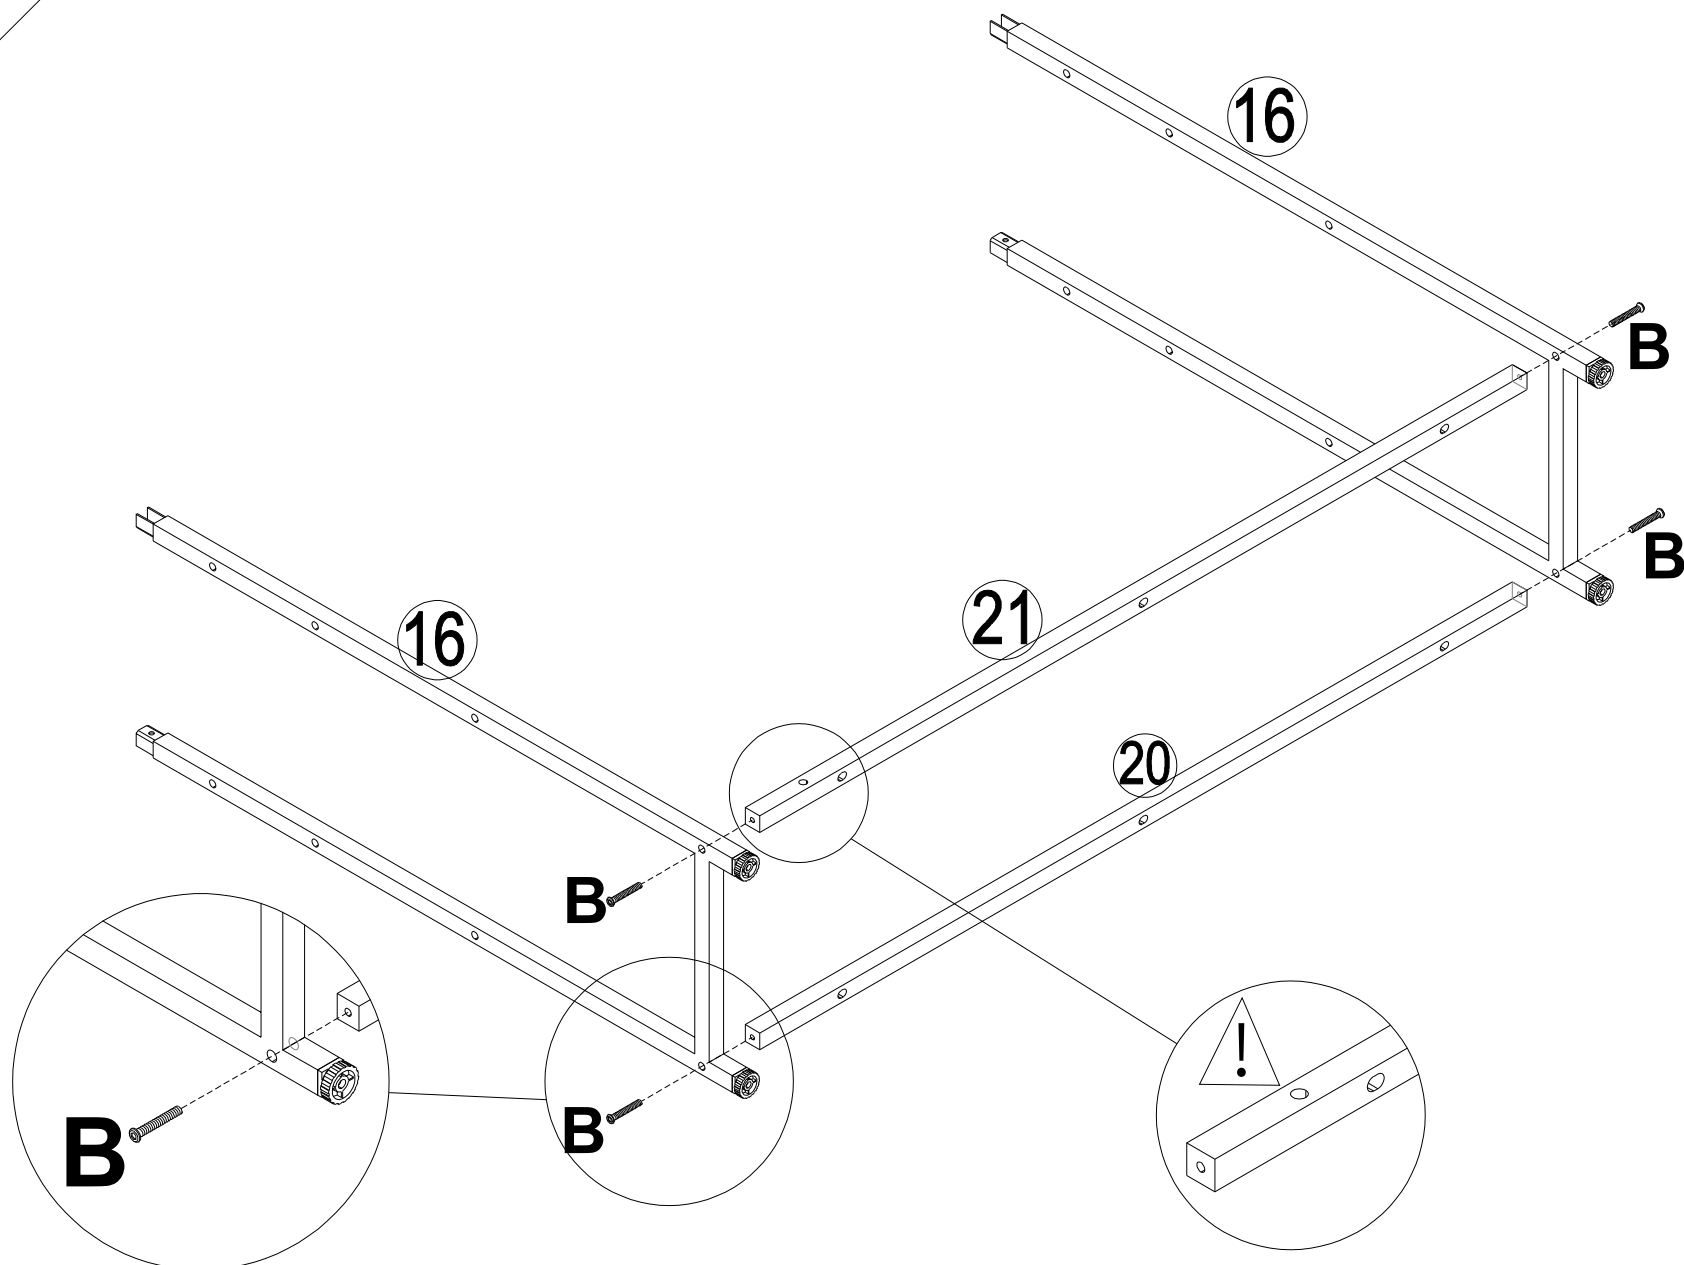


B M6X40




4 PCS


4

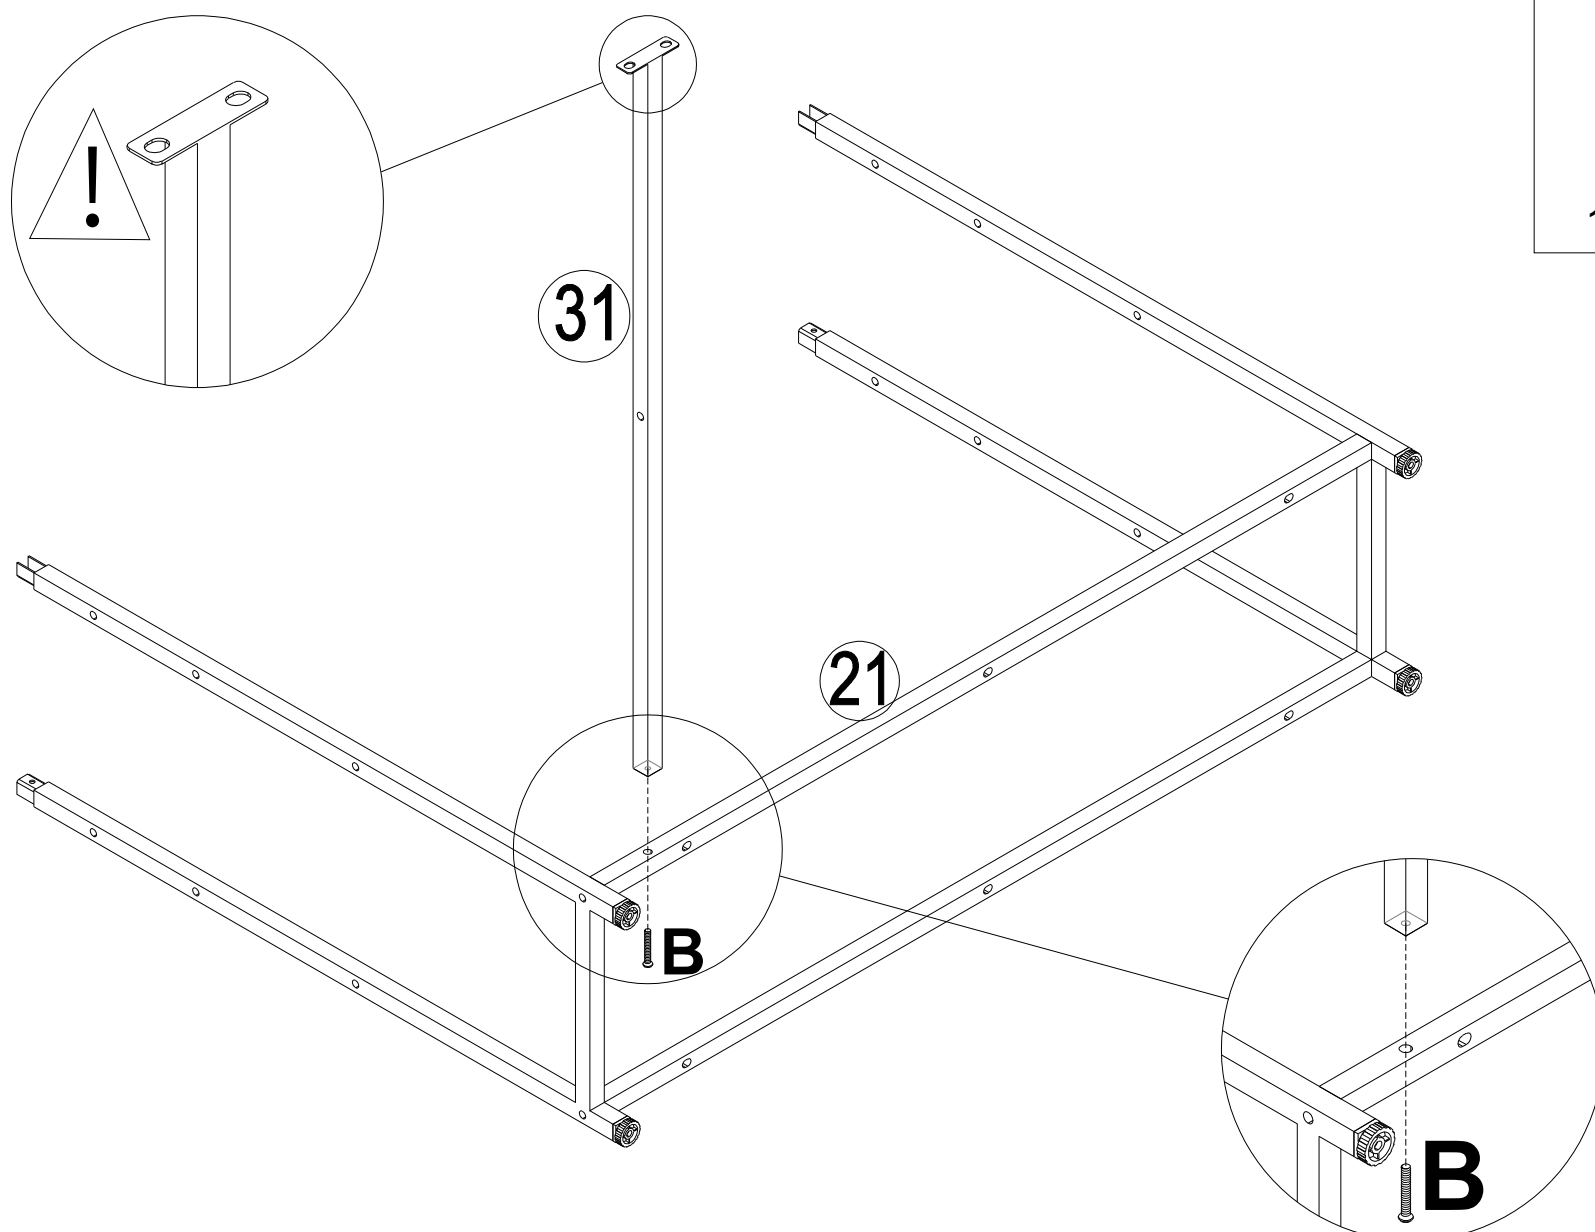


B M6X40




1 PCS

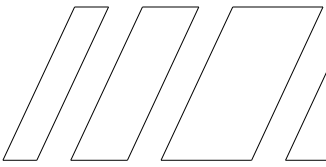

5

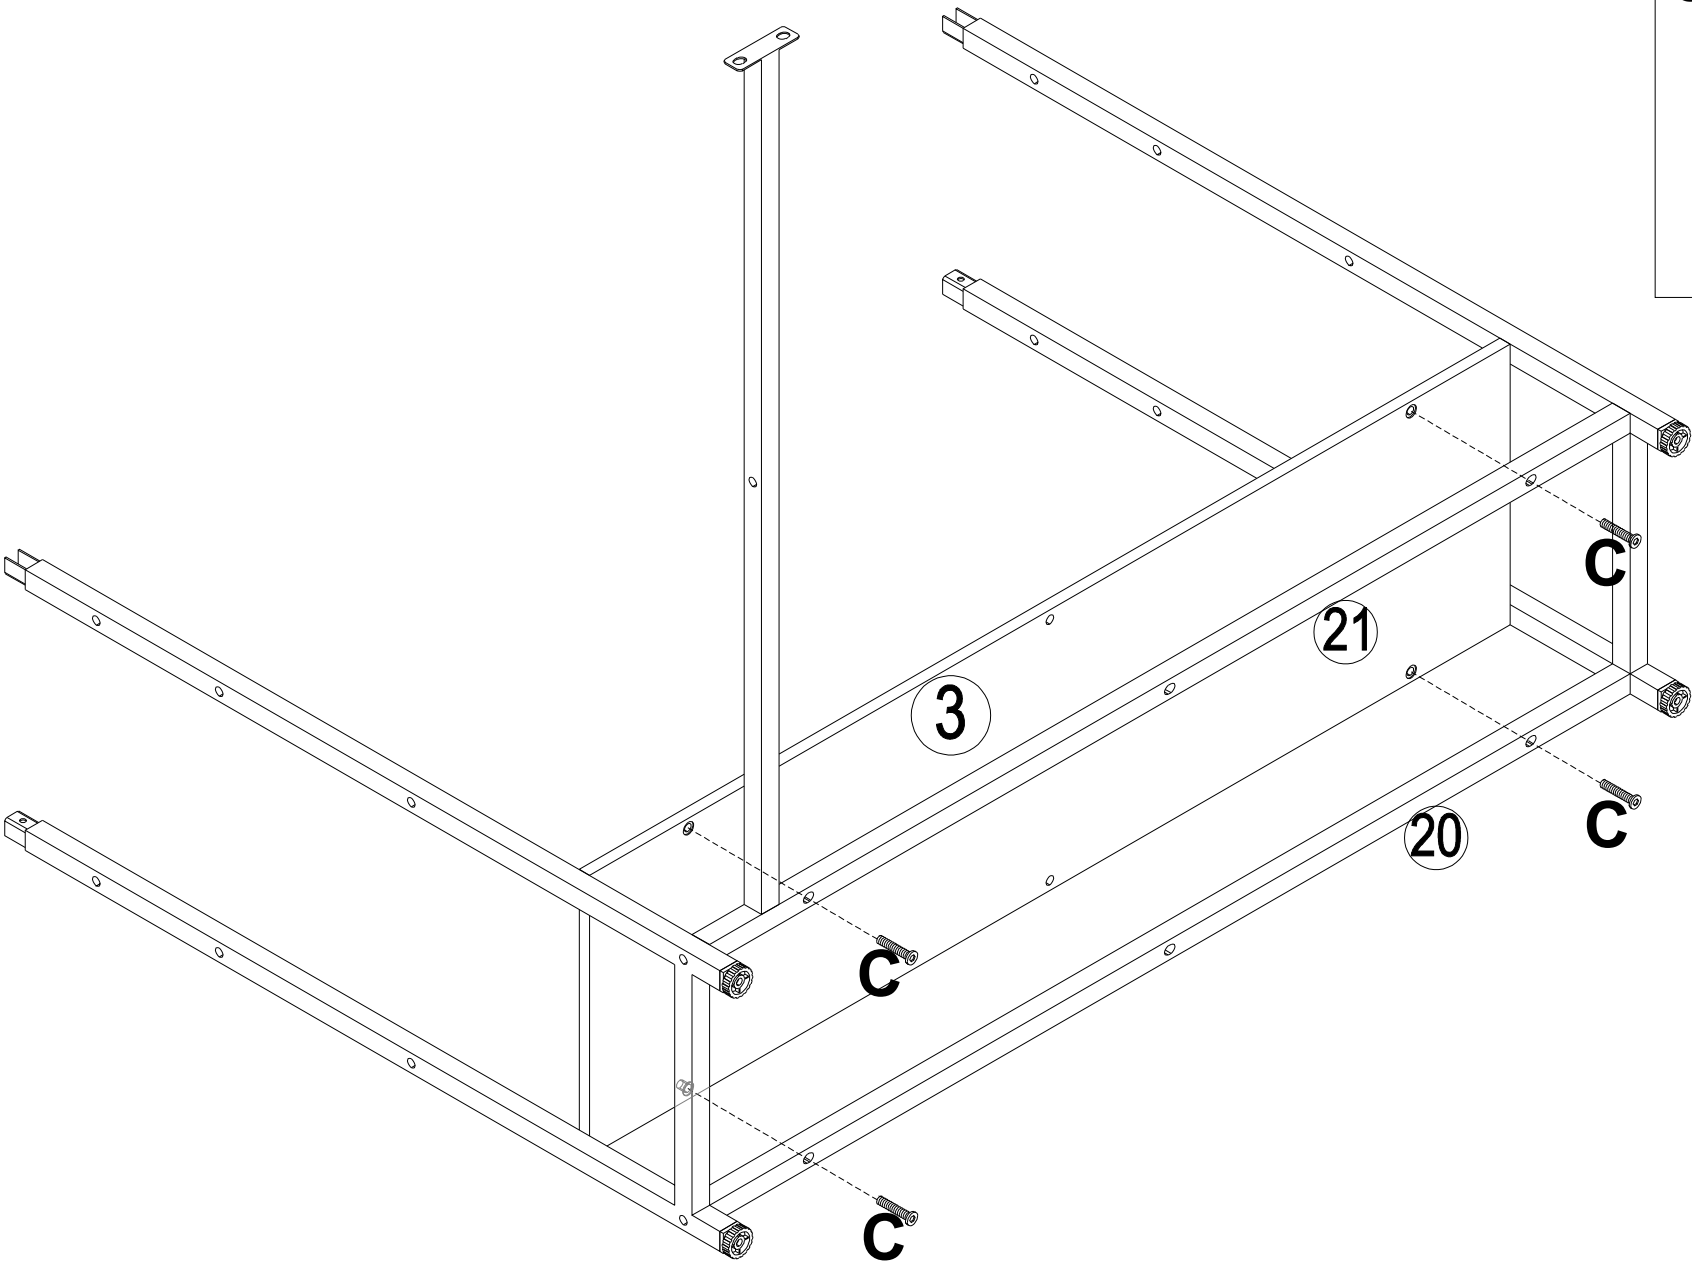


C M6X28




4 PCS

6

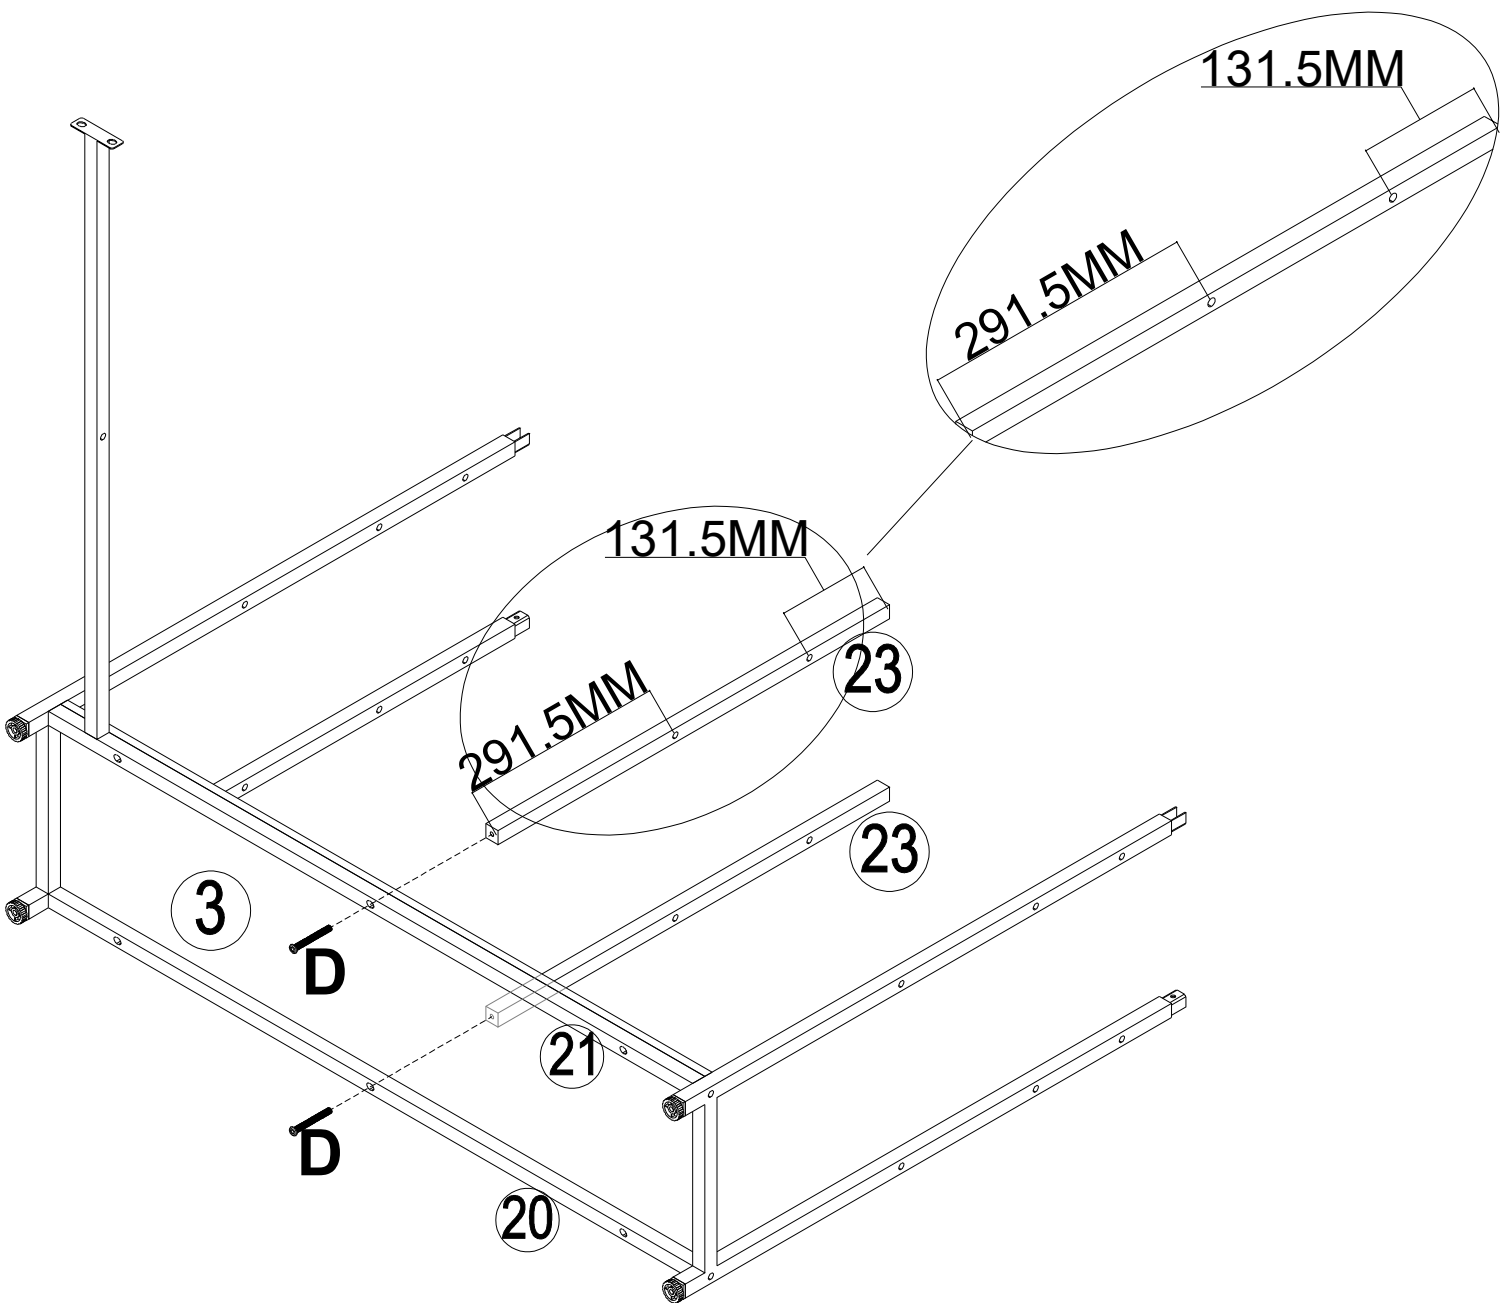

D M6X50




2 PCS


7

The iron mesh can be installed left and right



B M6X40




8 PCS

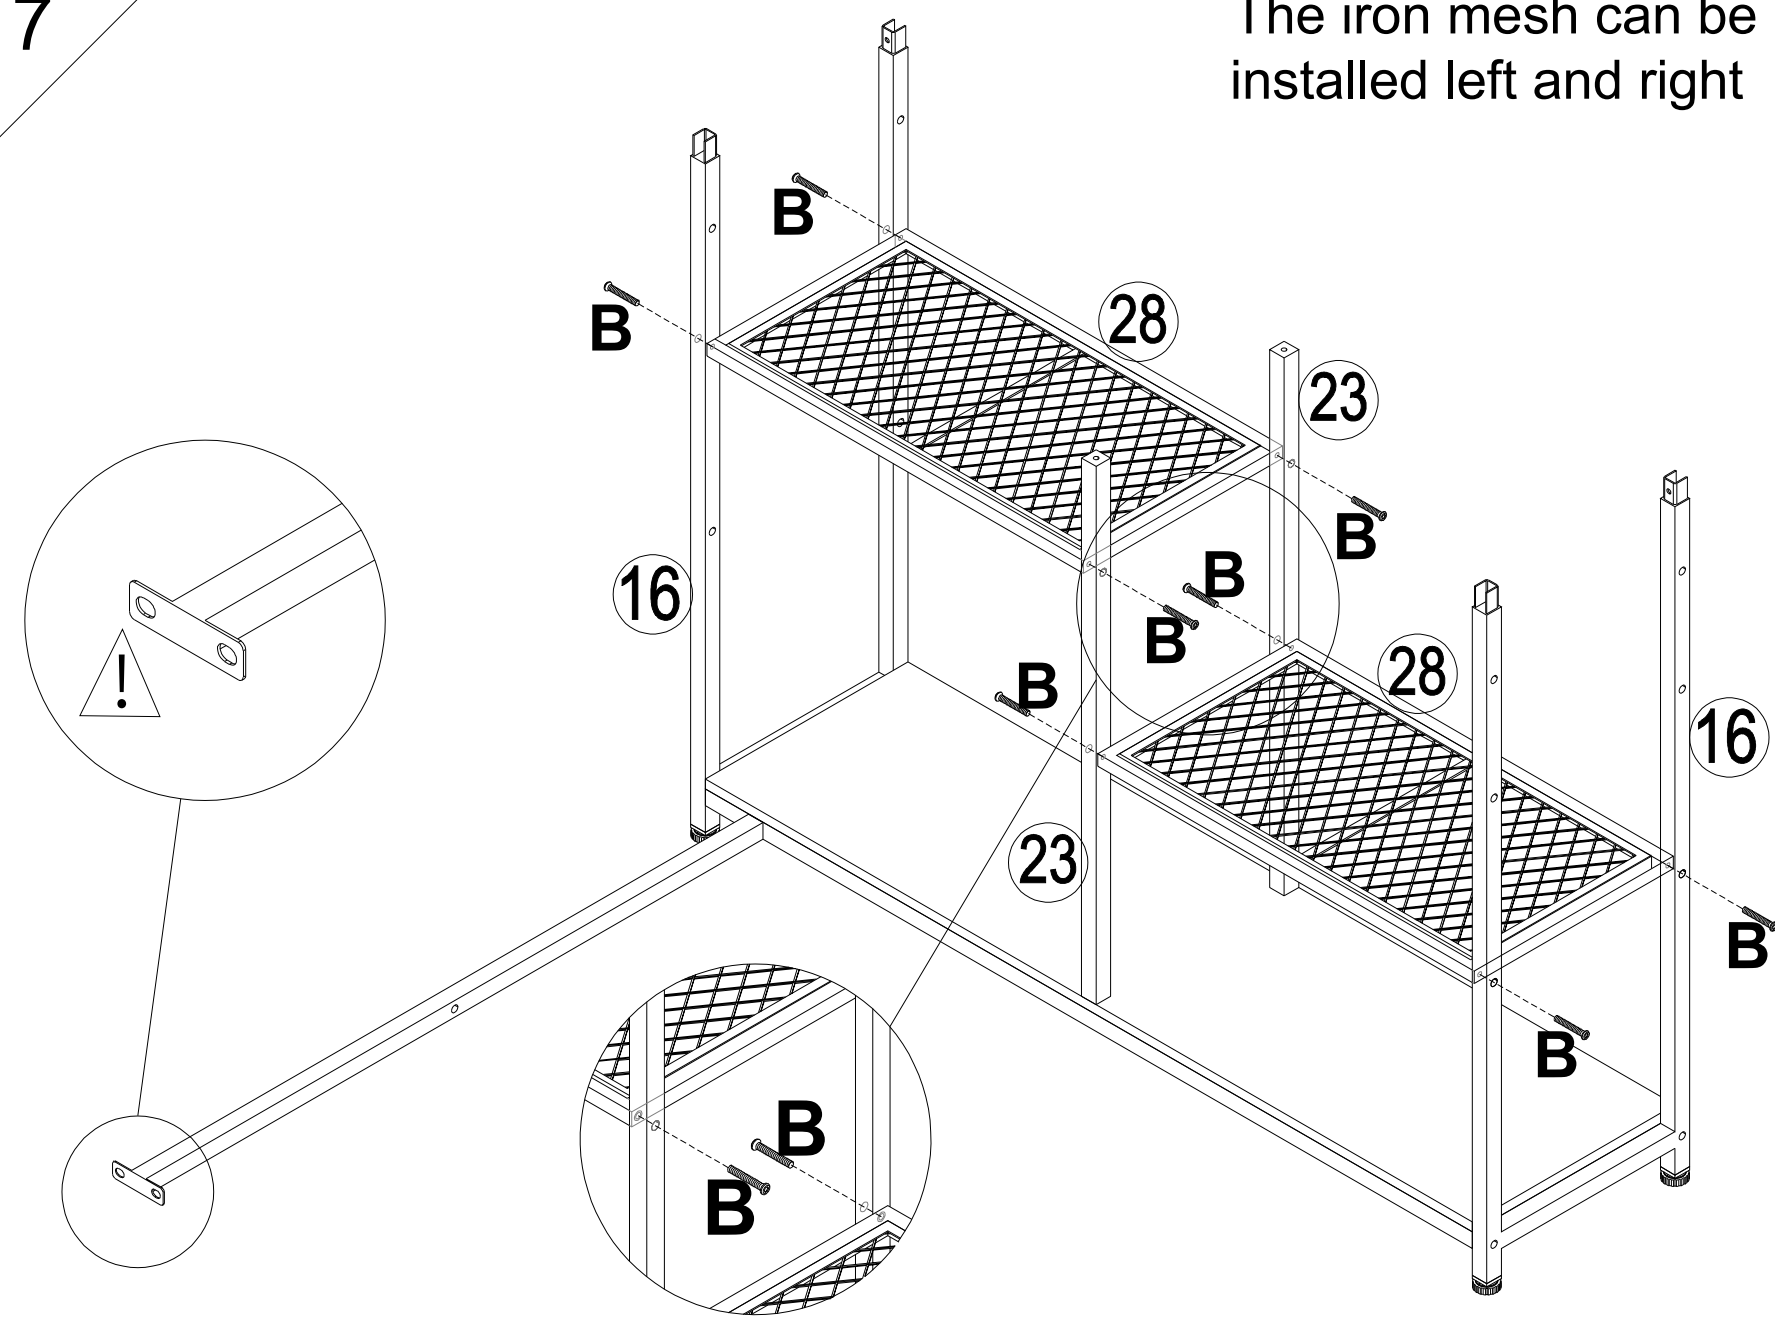

8


B M6X40	D M6X50	E M6
		
4 PCS	2 PCS	2 PCS

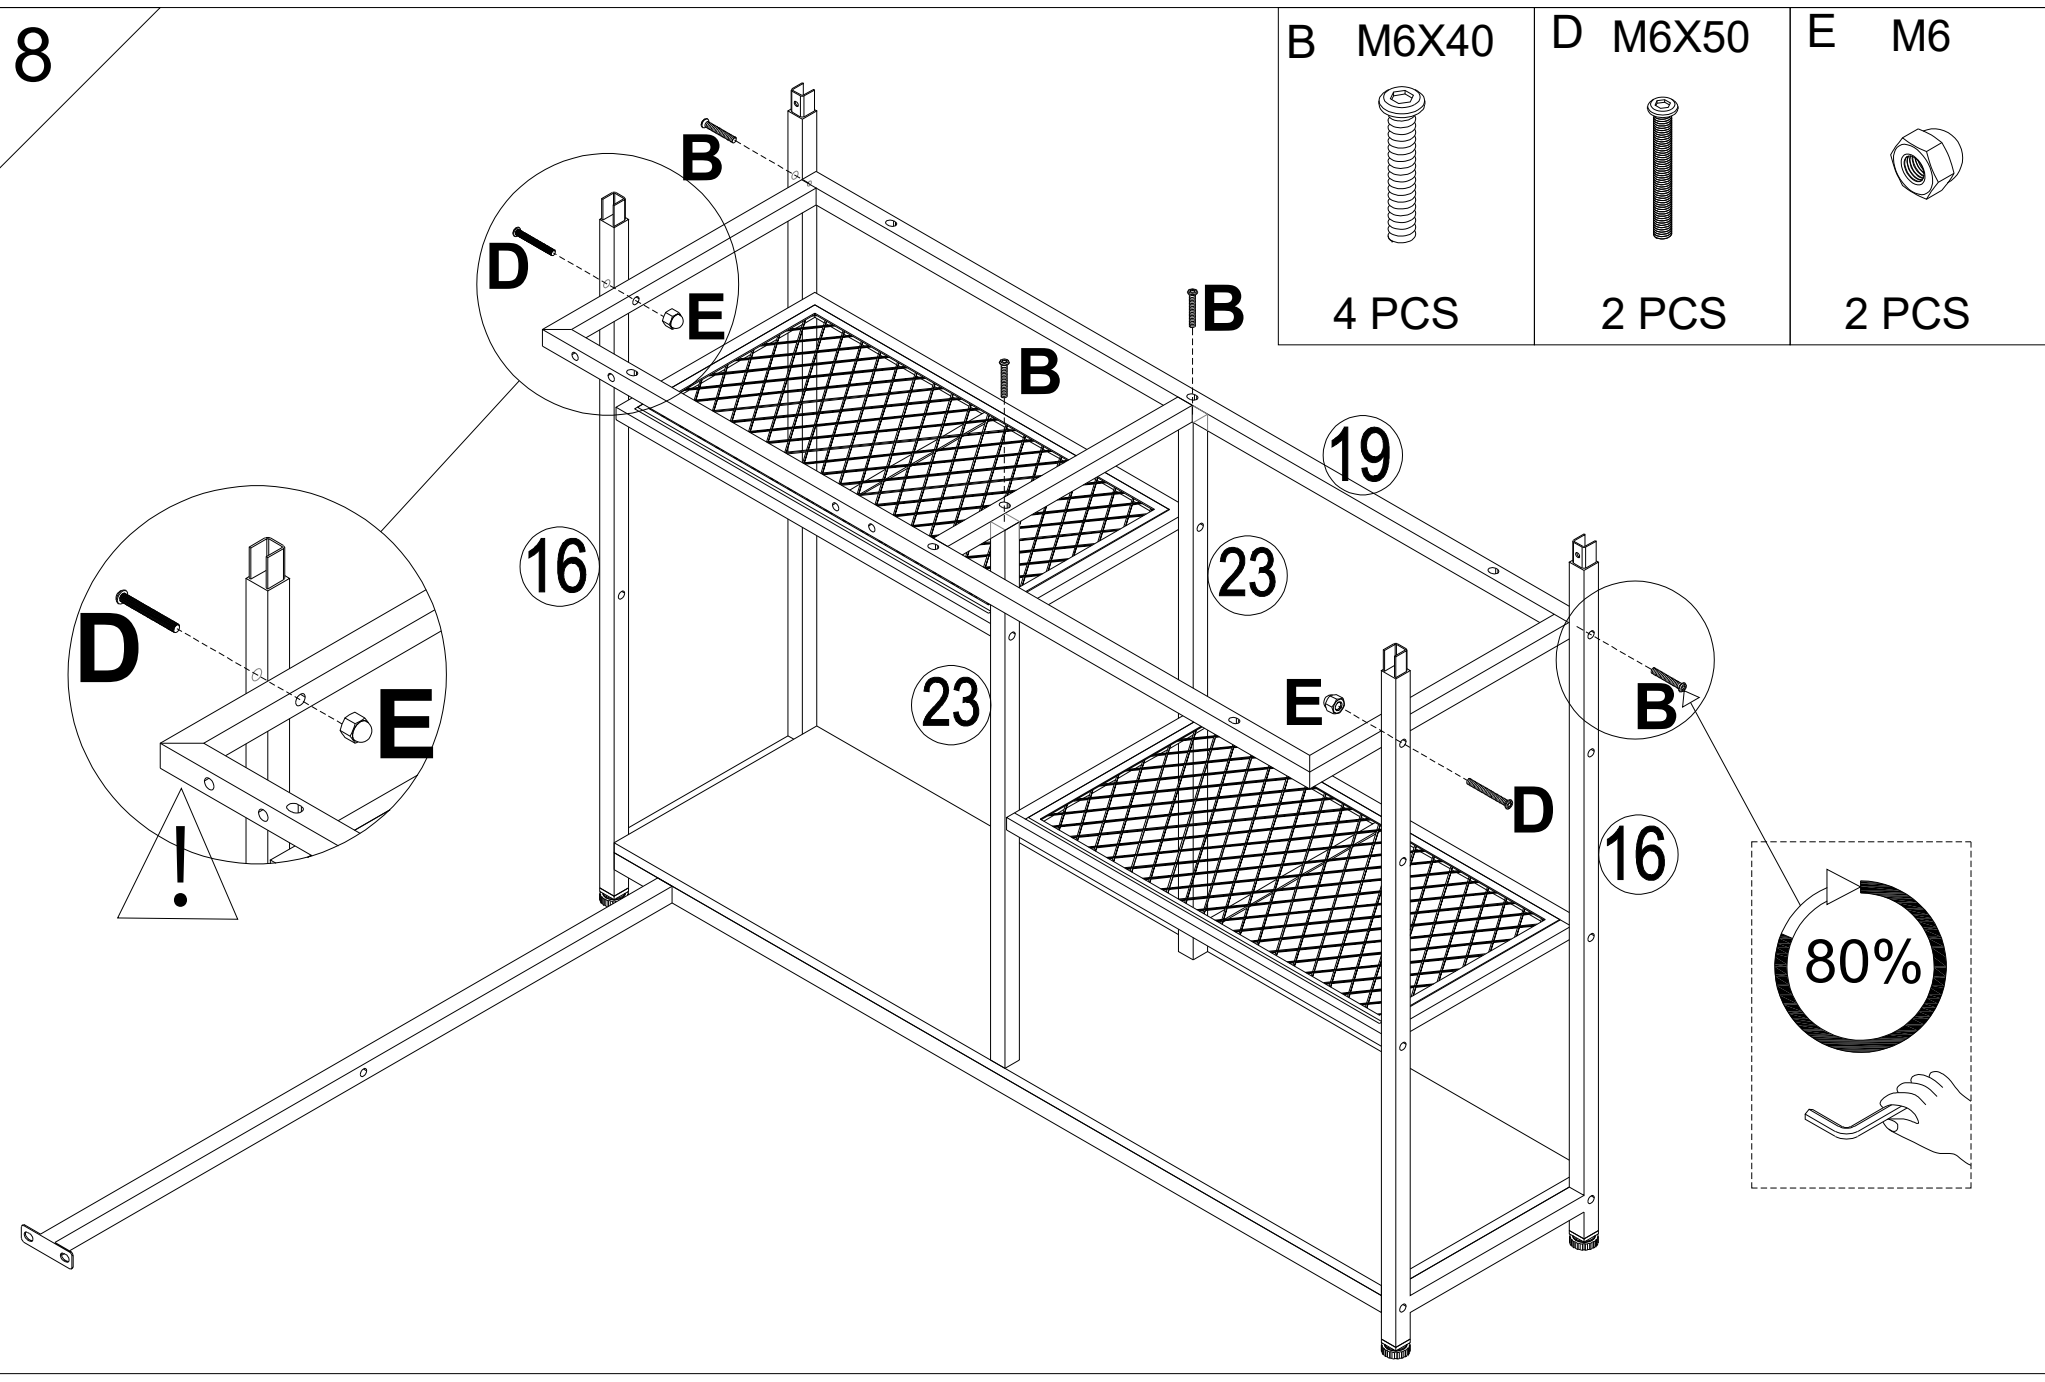


9


Notice the hole faces back

F M6X12




4 PCS

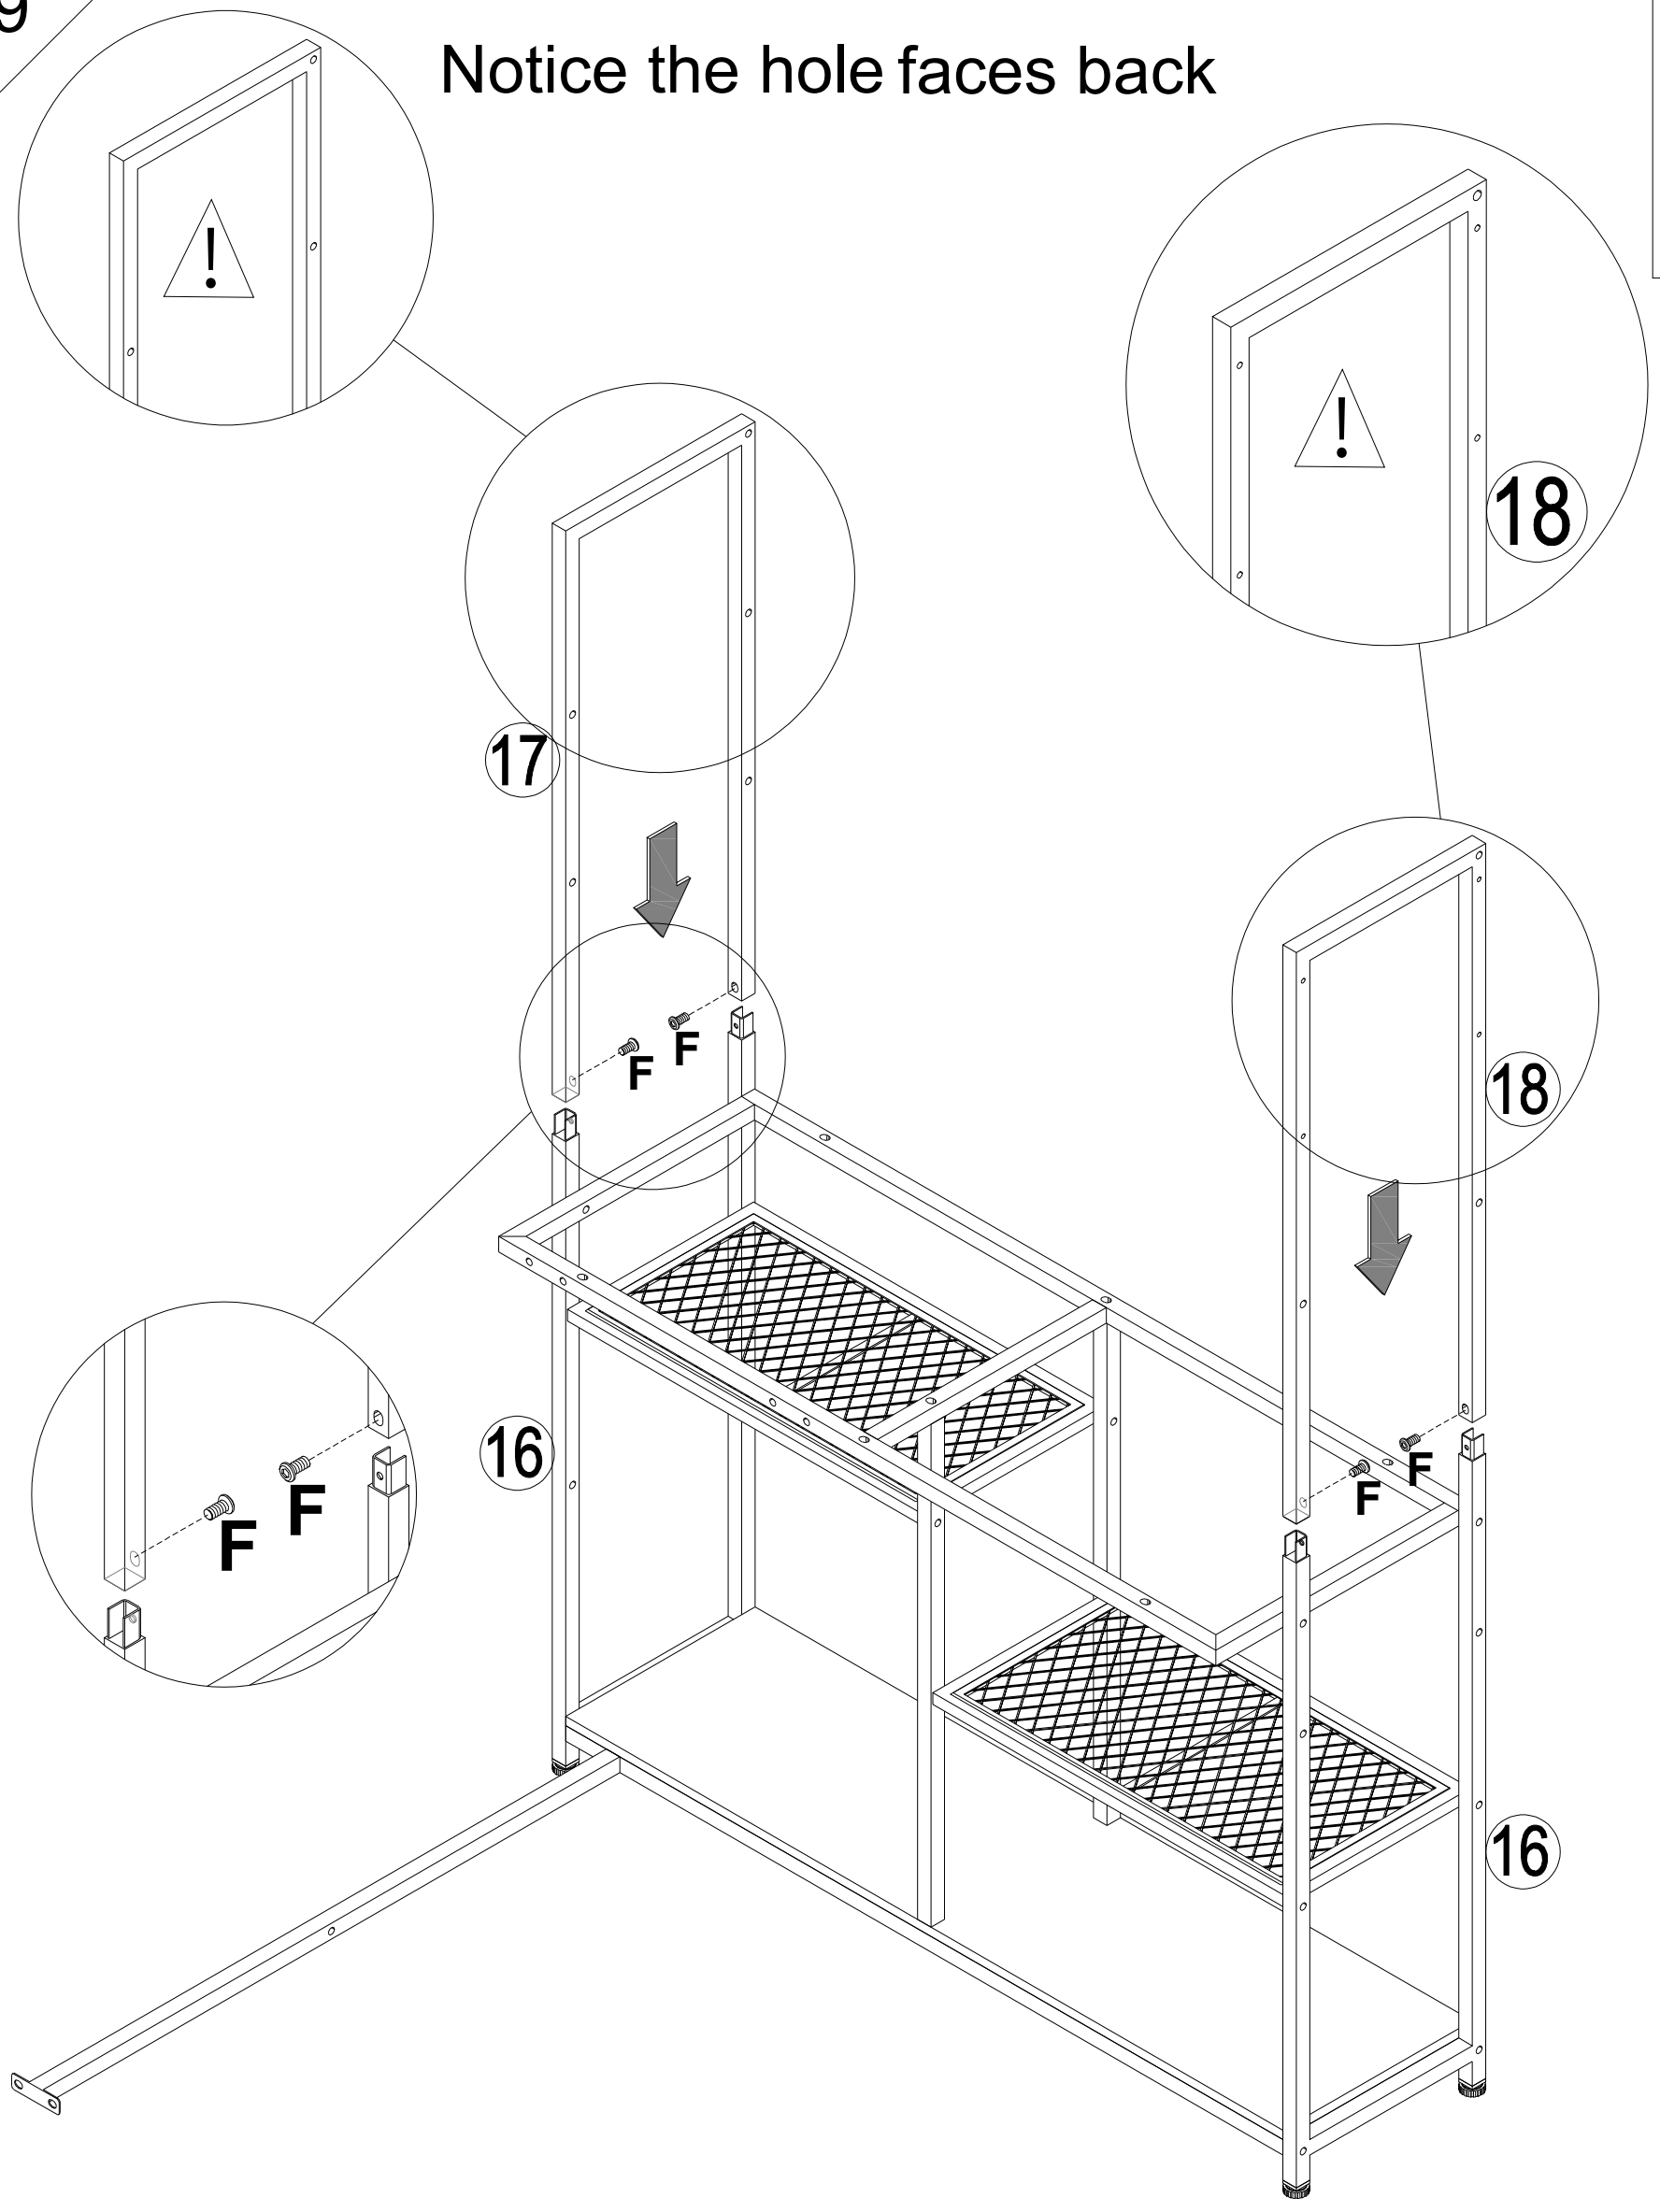

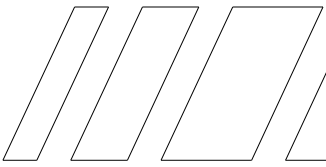


10

B M6X40



4 PCS

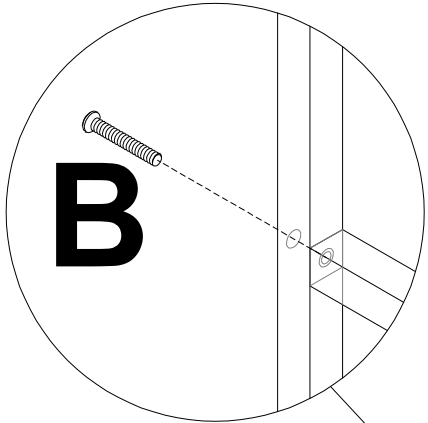

B

17

B

B


20


20

18

B


B

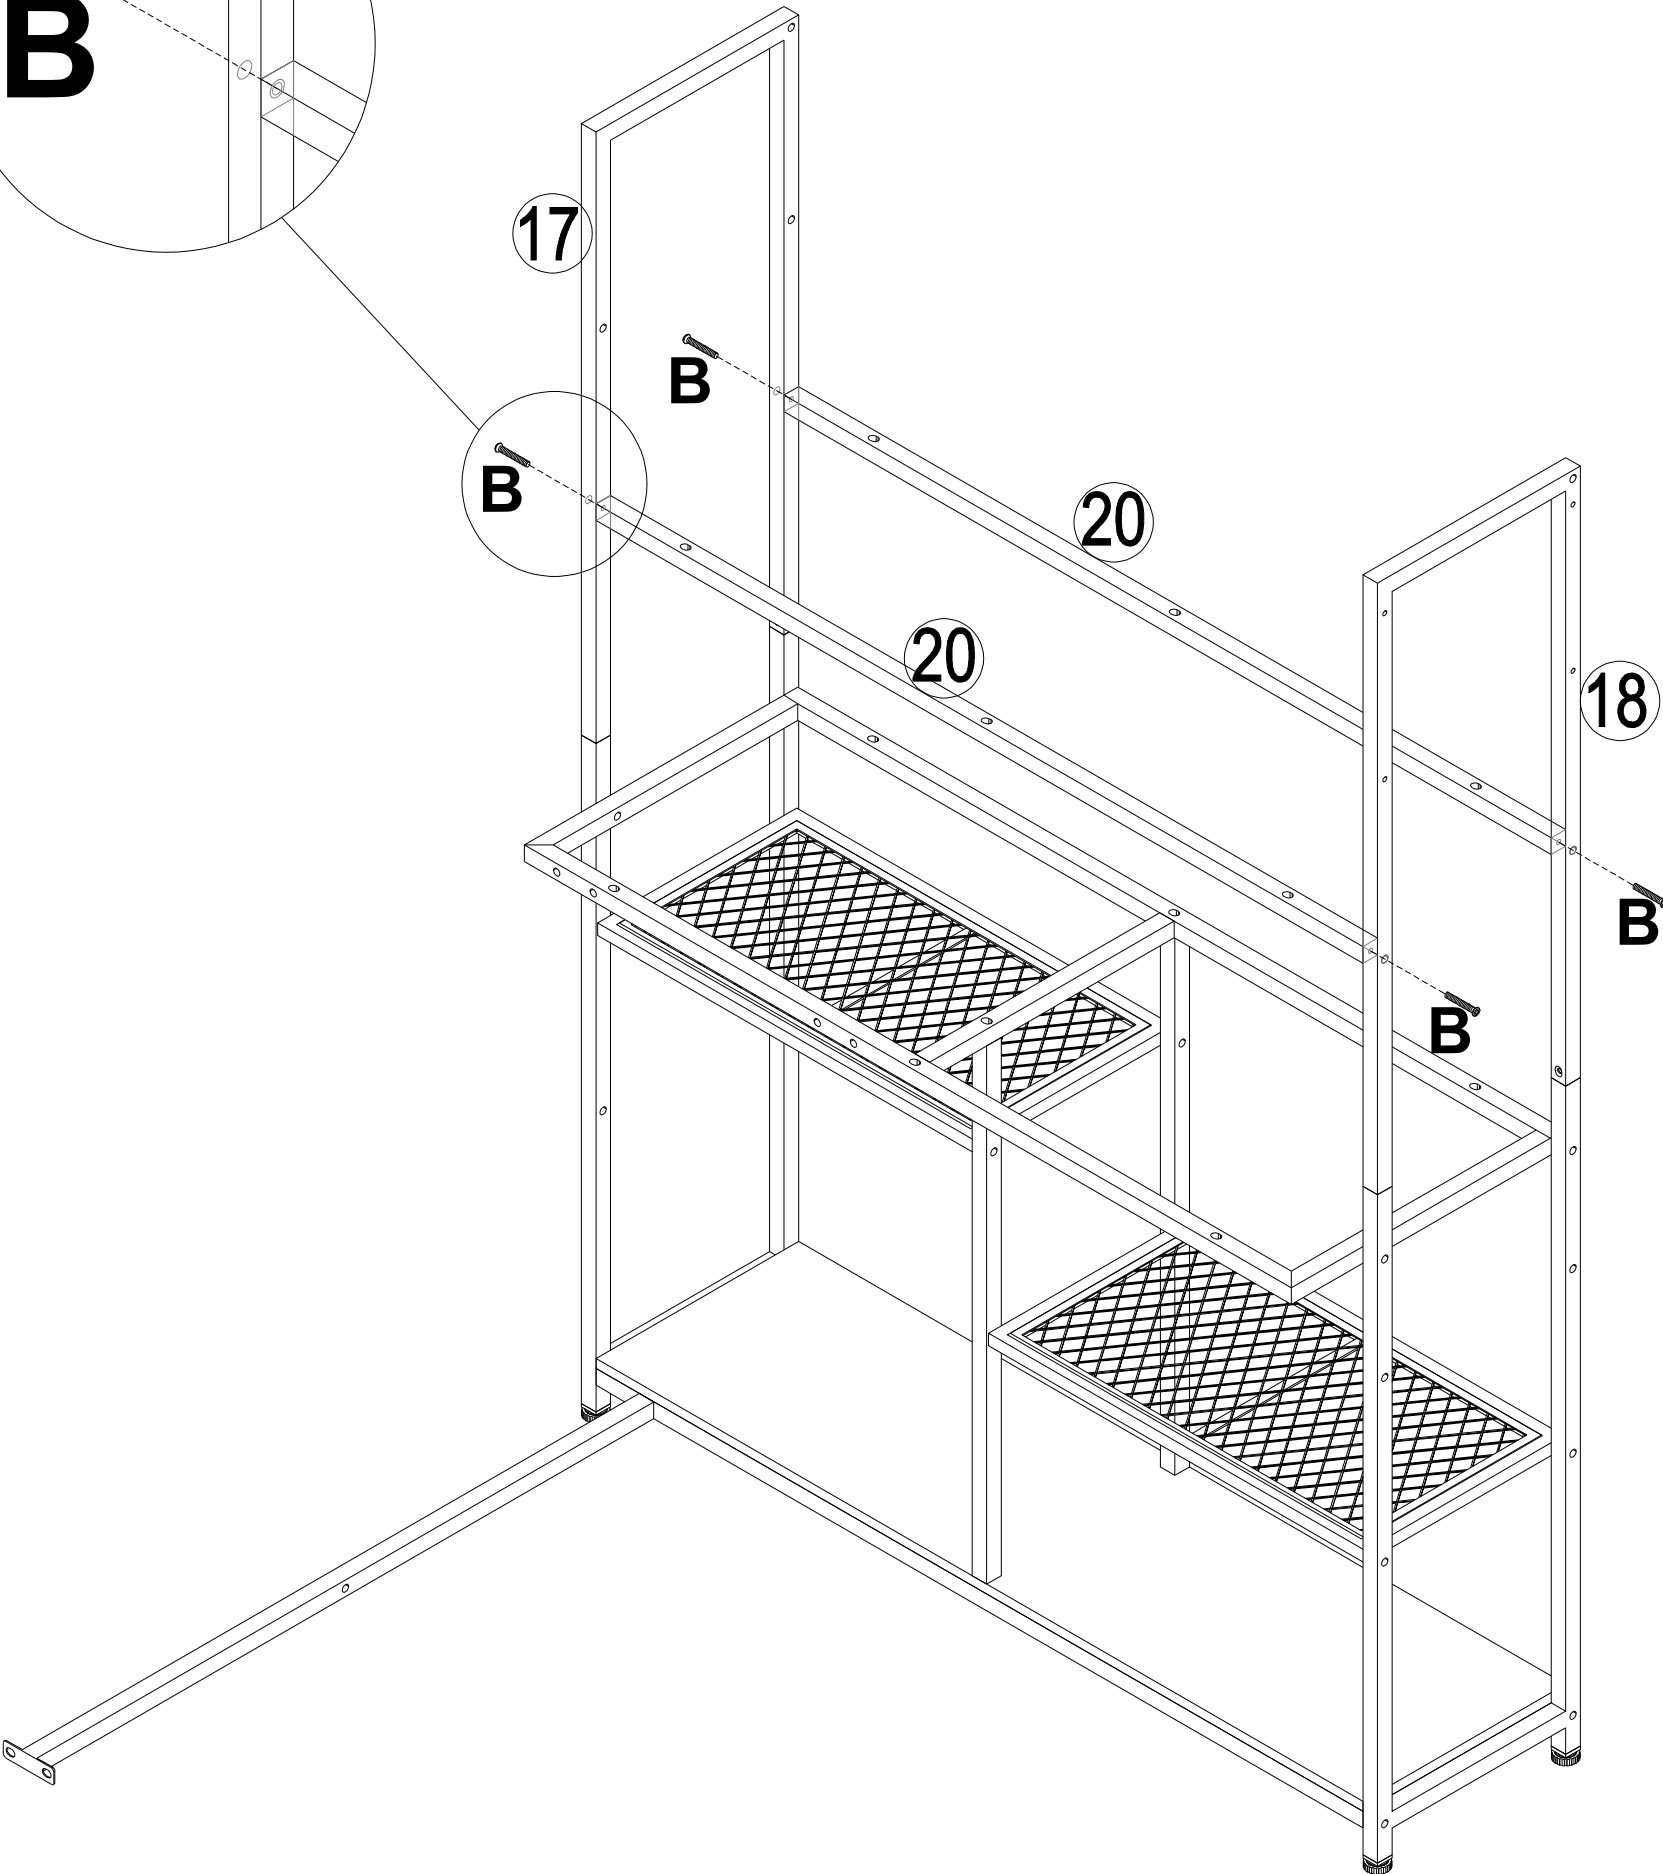

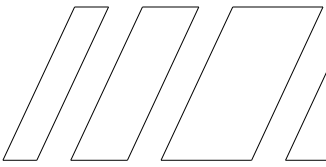


11

C M6X28




6 PCS

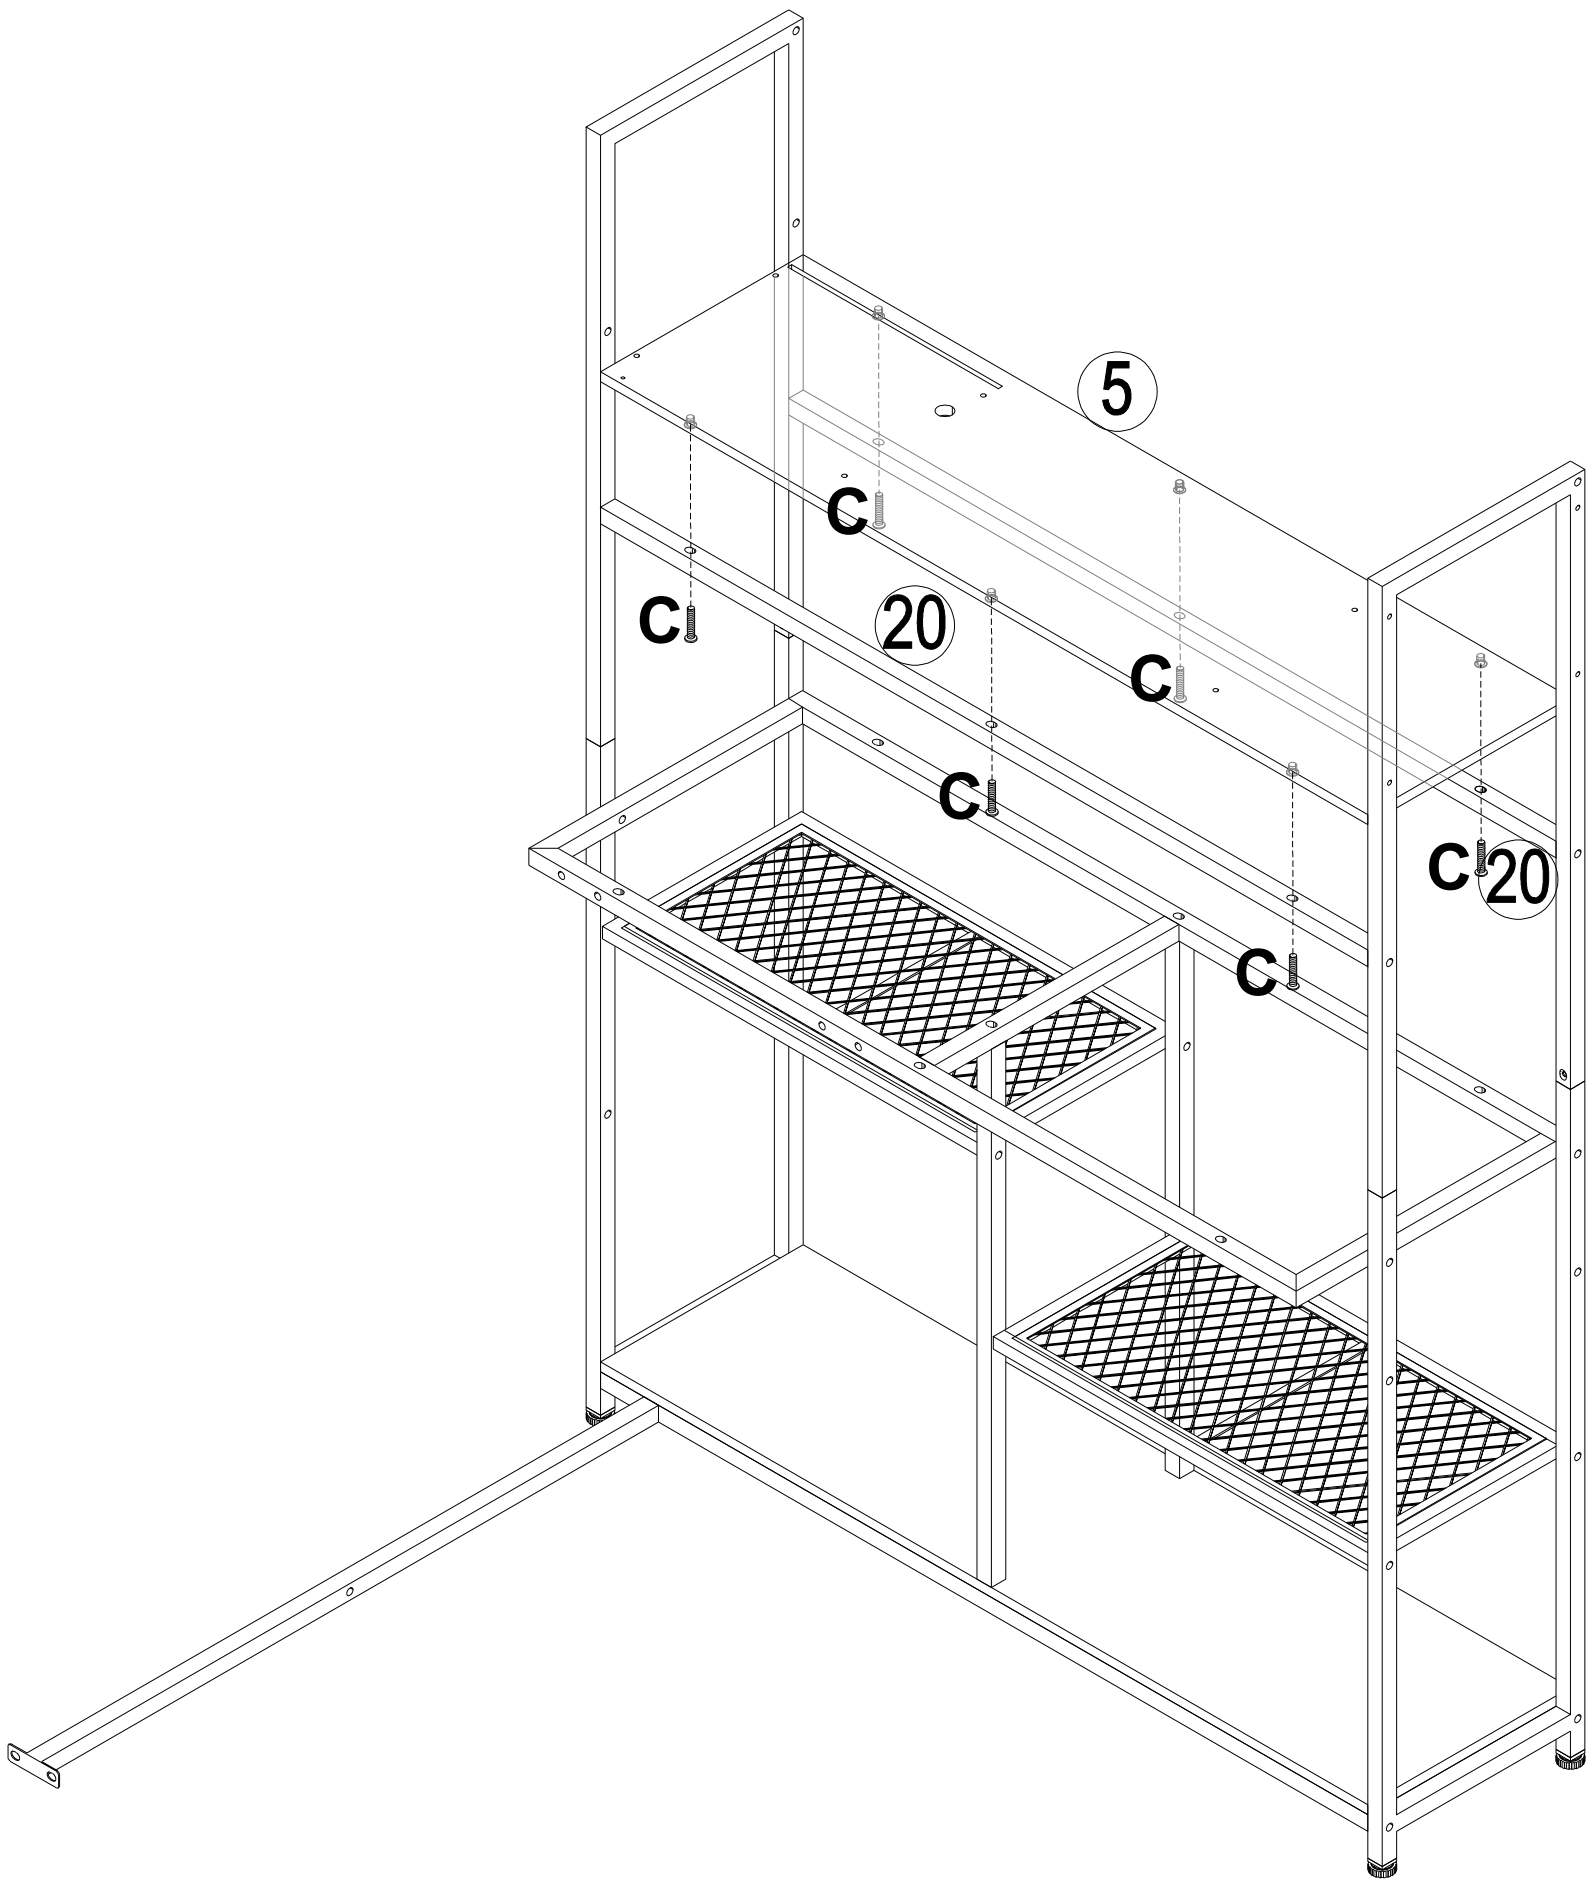



12

G M5x40




6 PCS

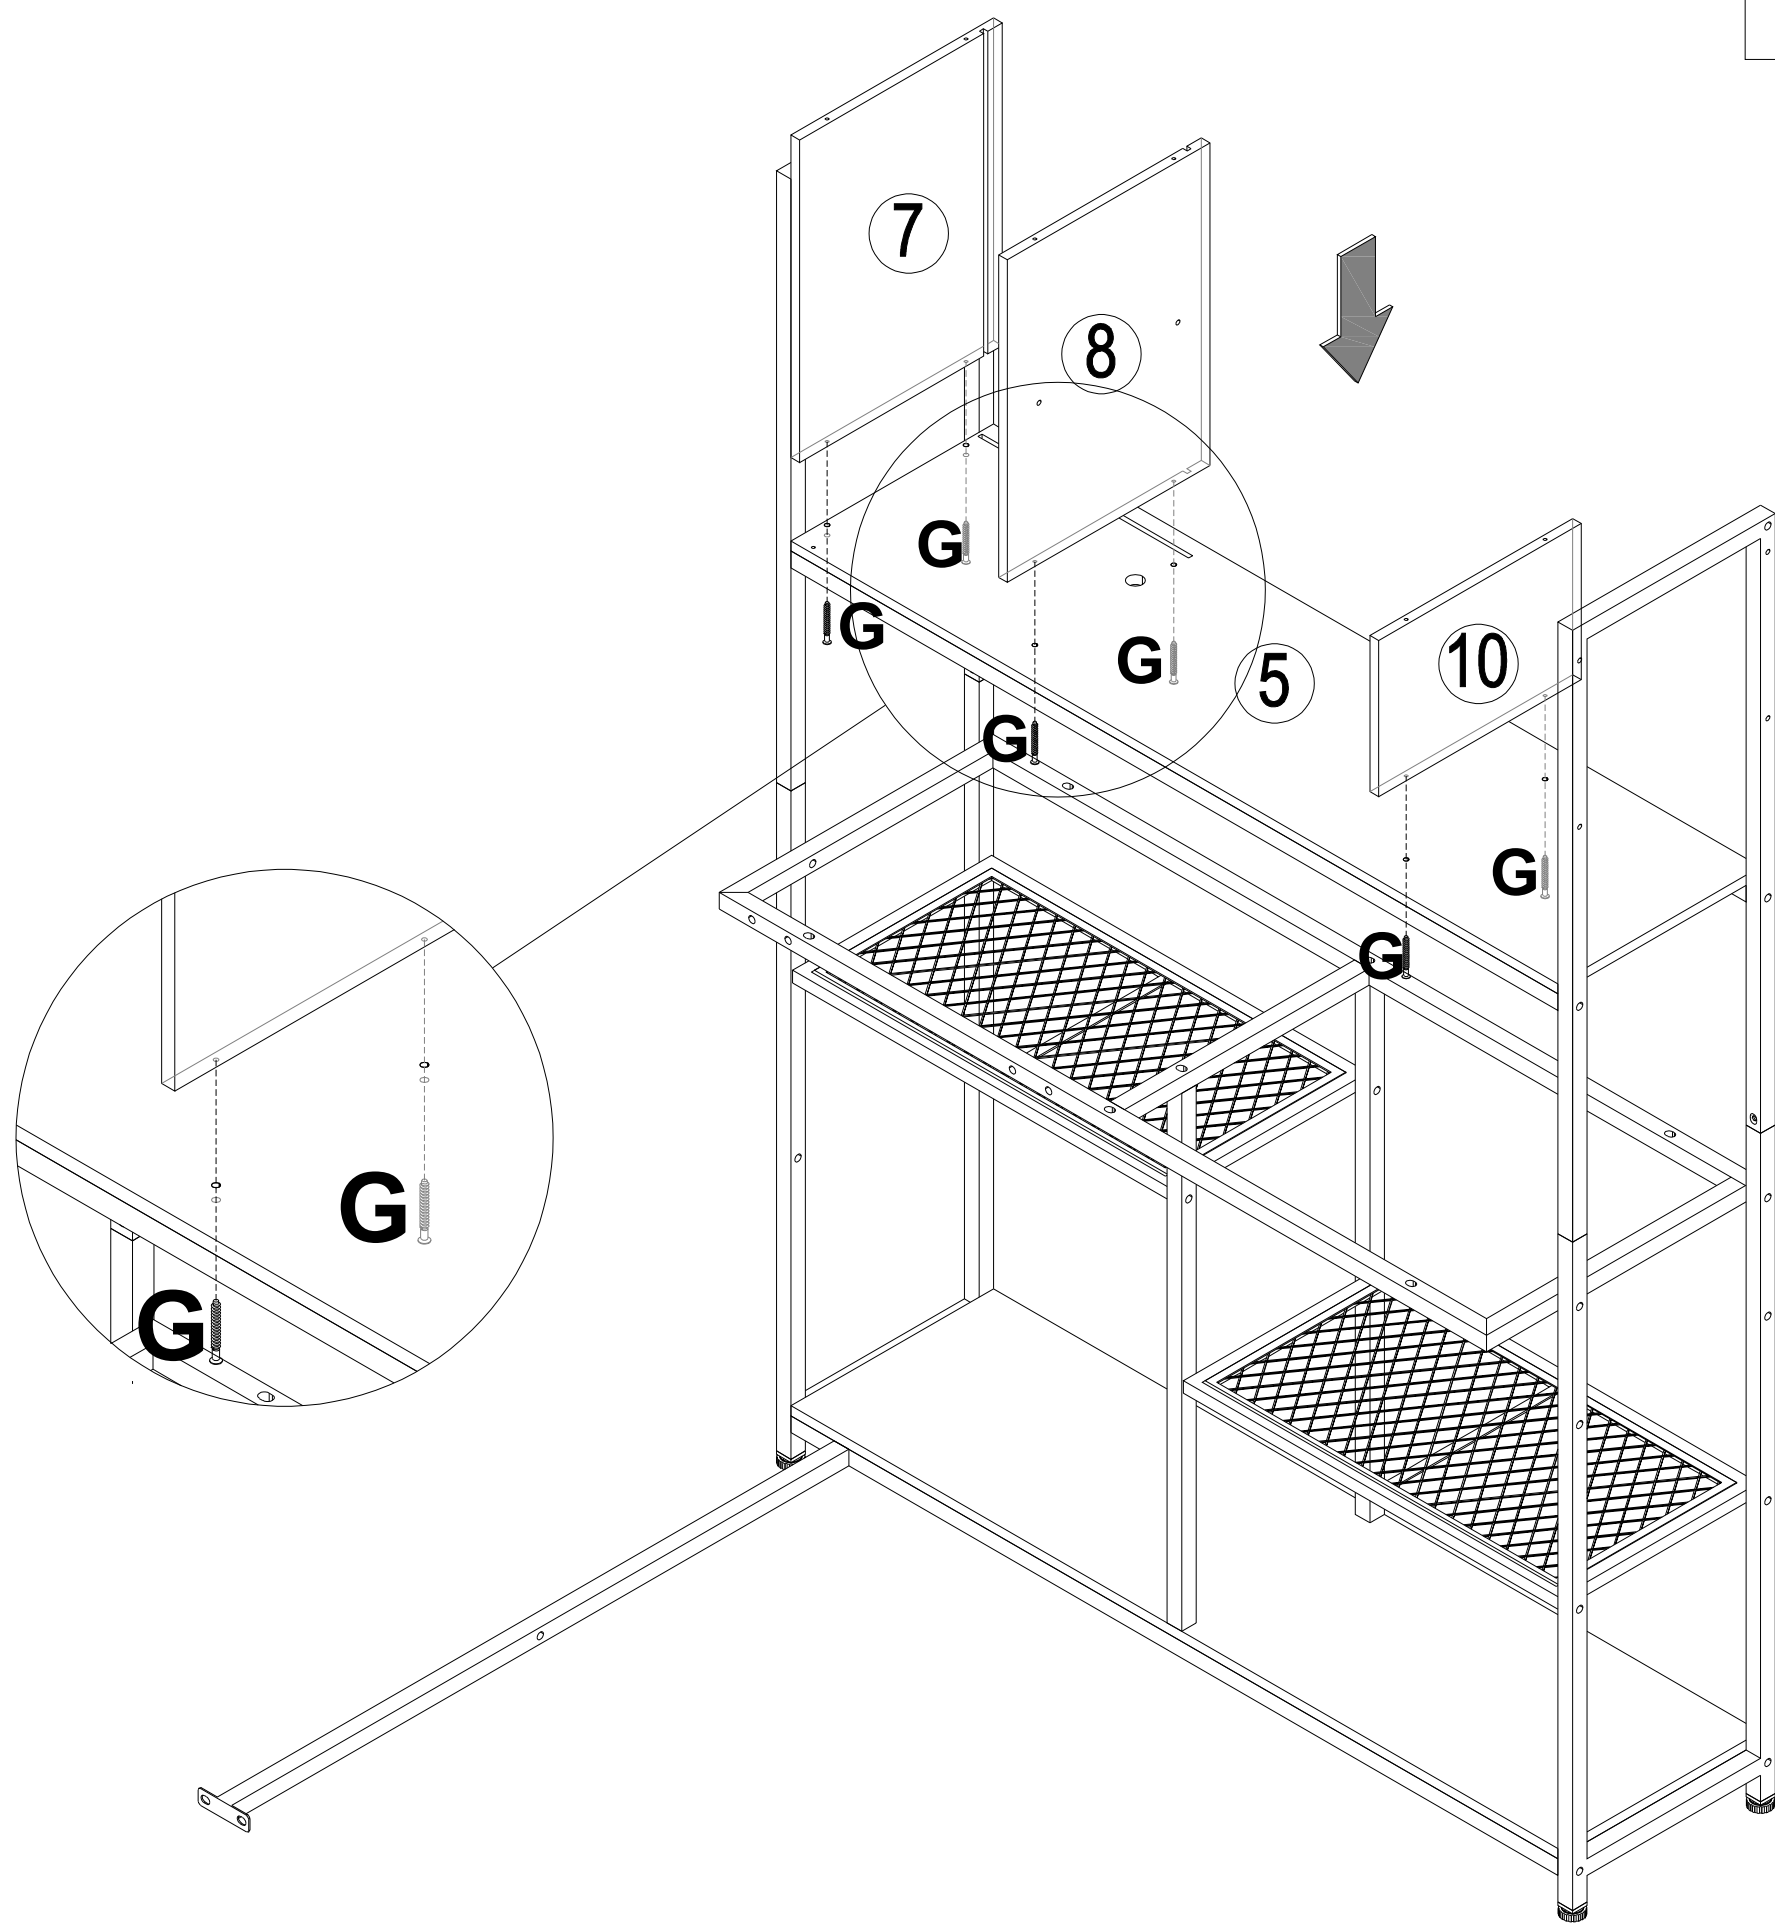


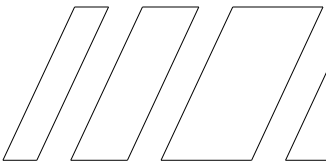



13

C M6X28




2 PCS

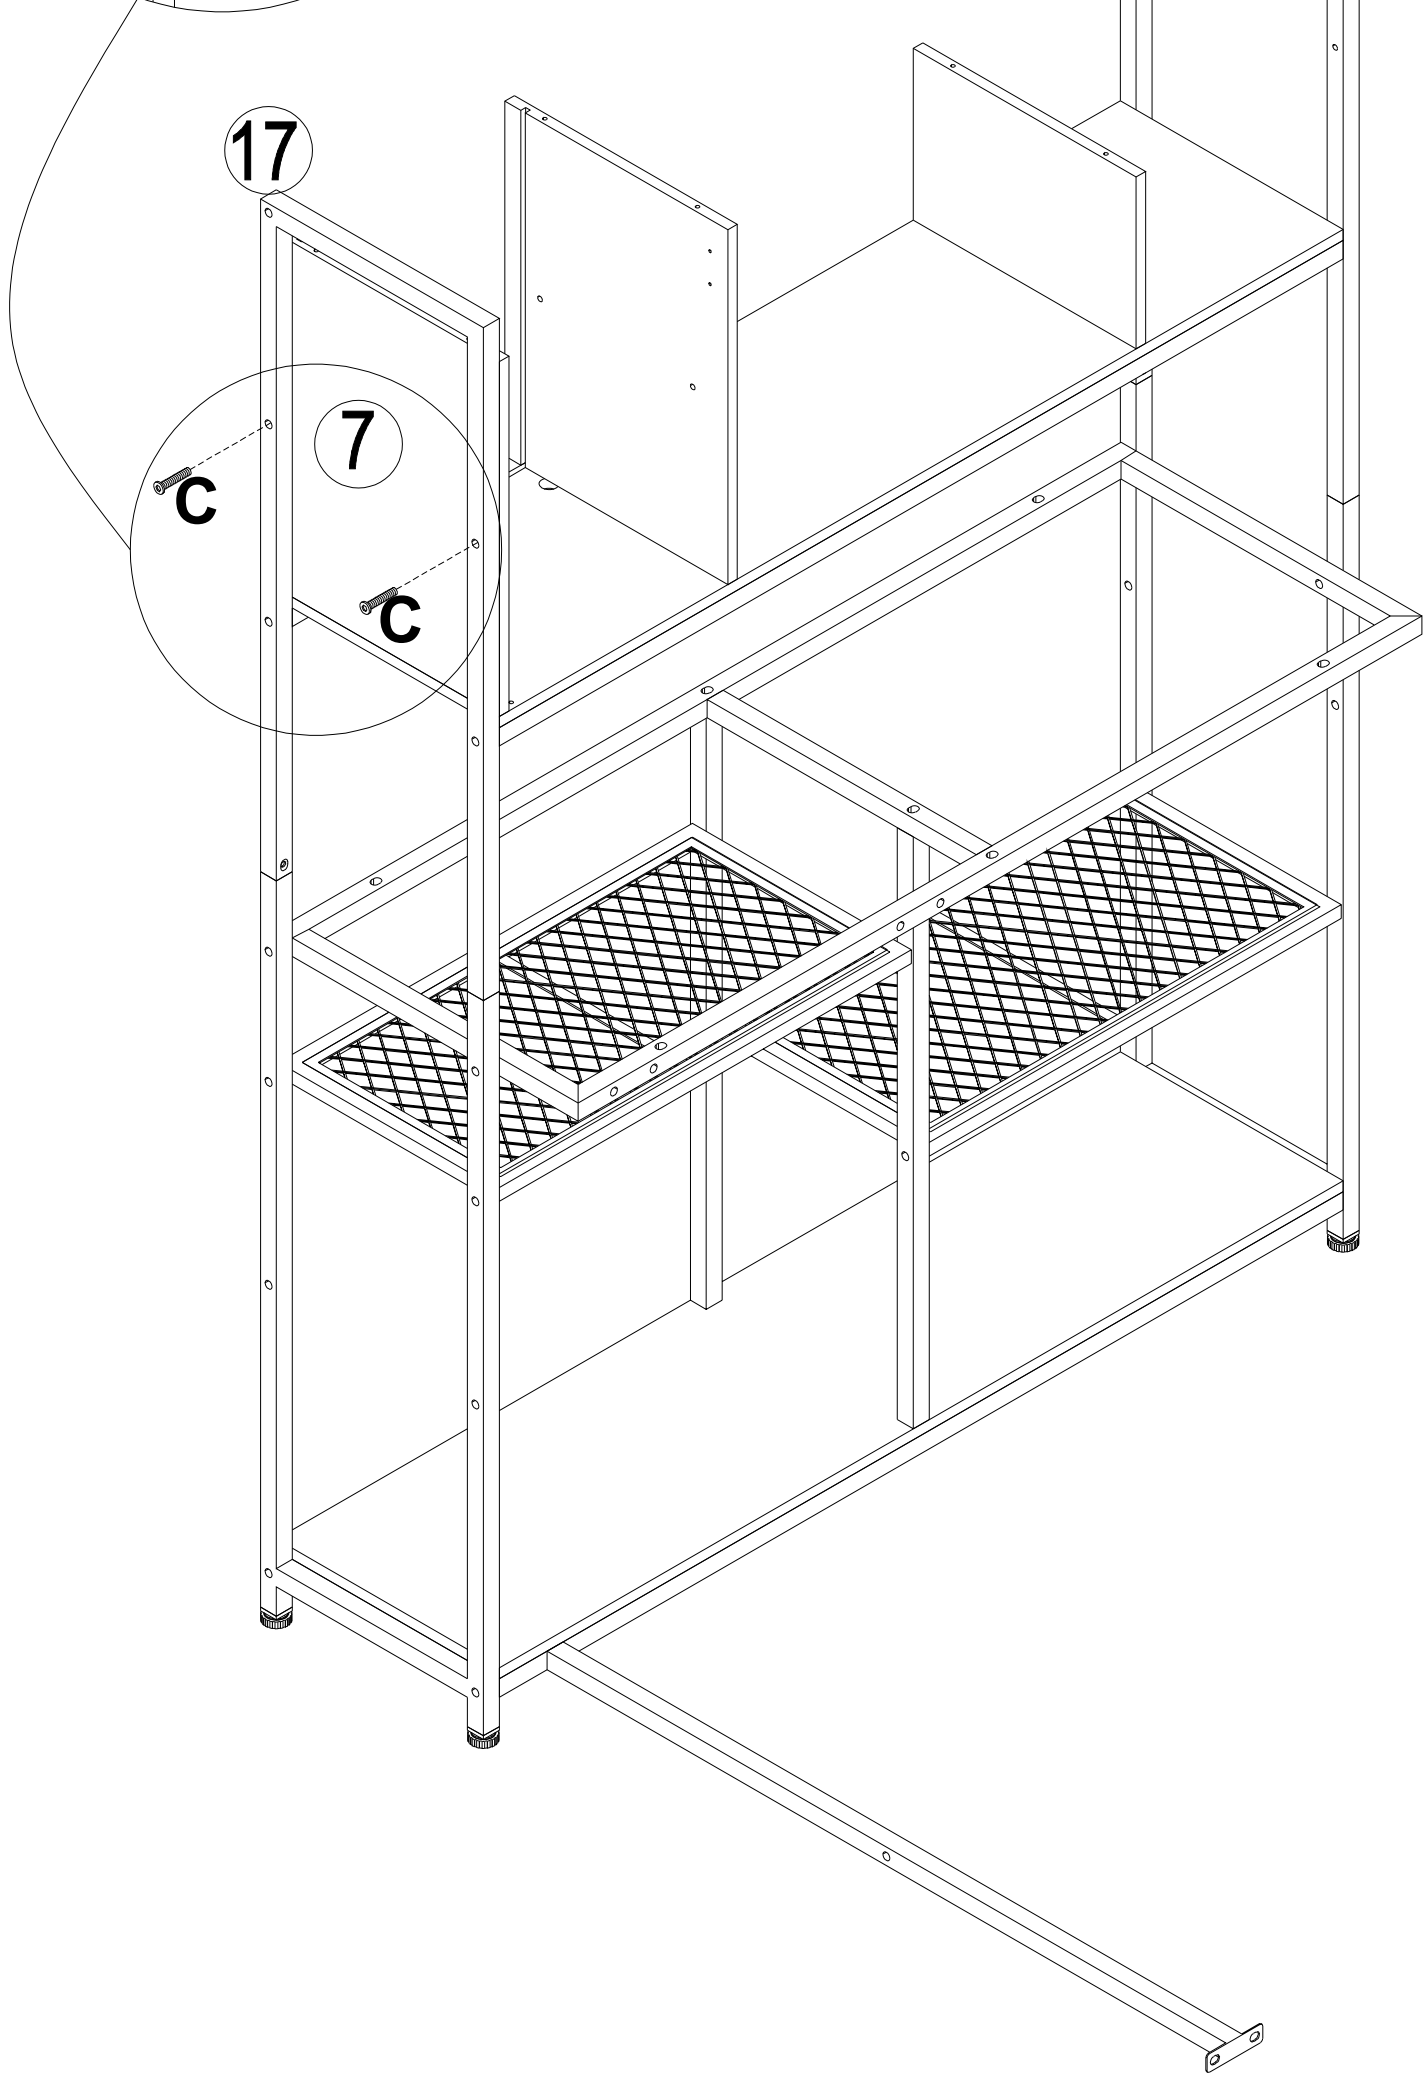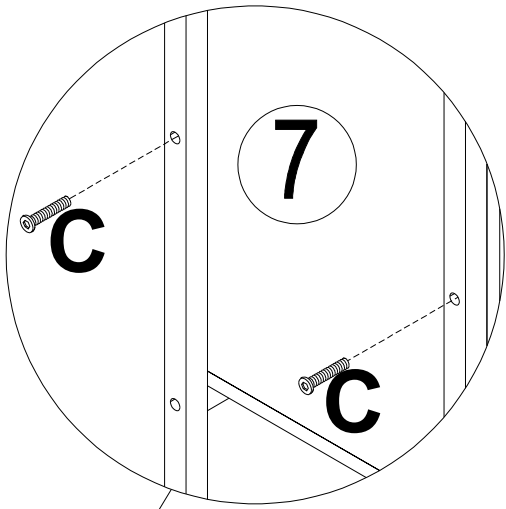

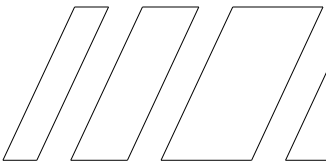



14

G M5x40



6 PCS

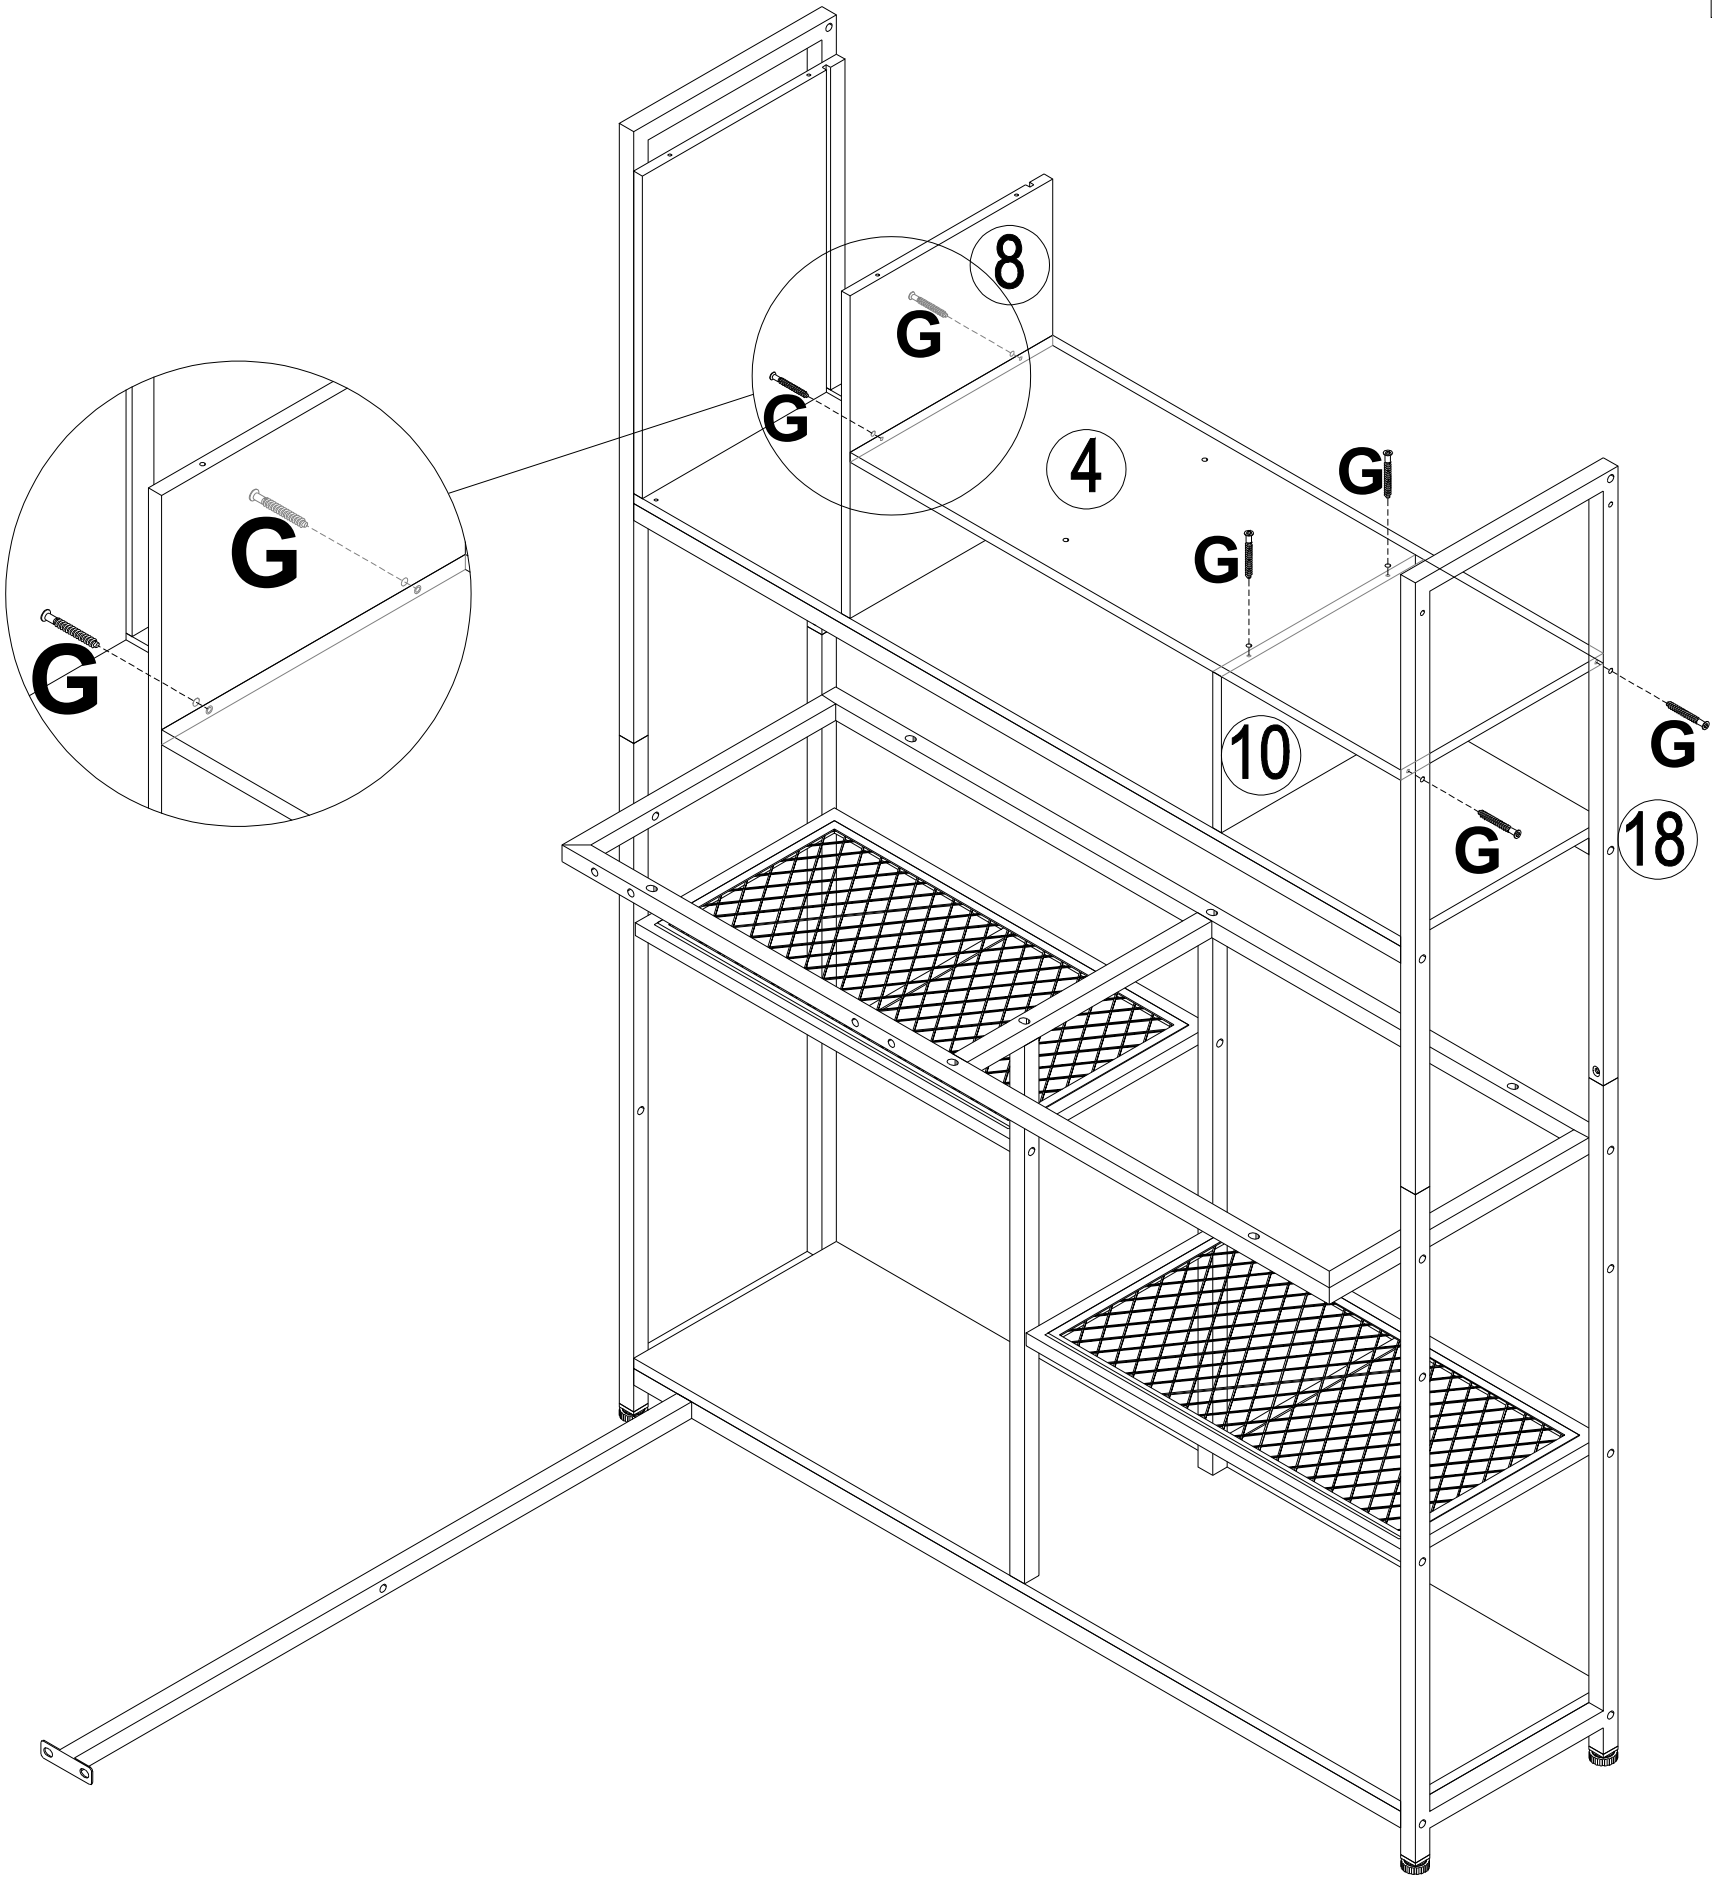

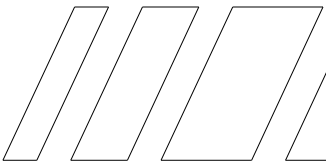


15


G M5x40




2 PCS

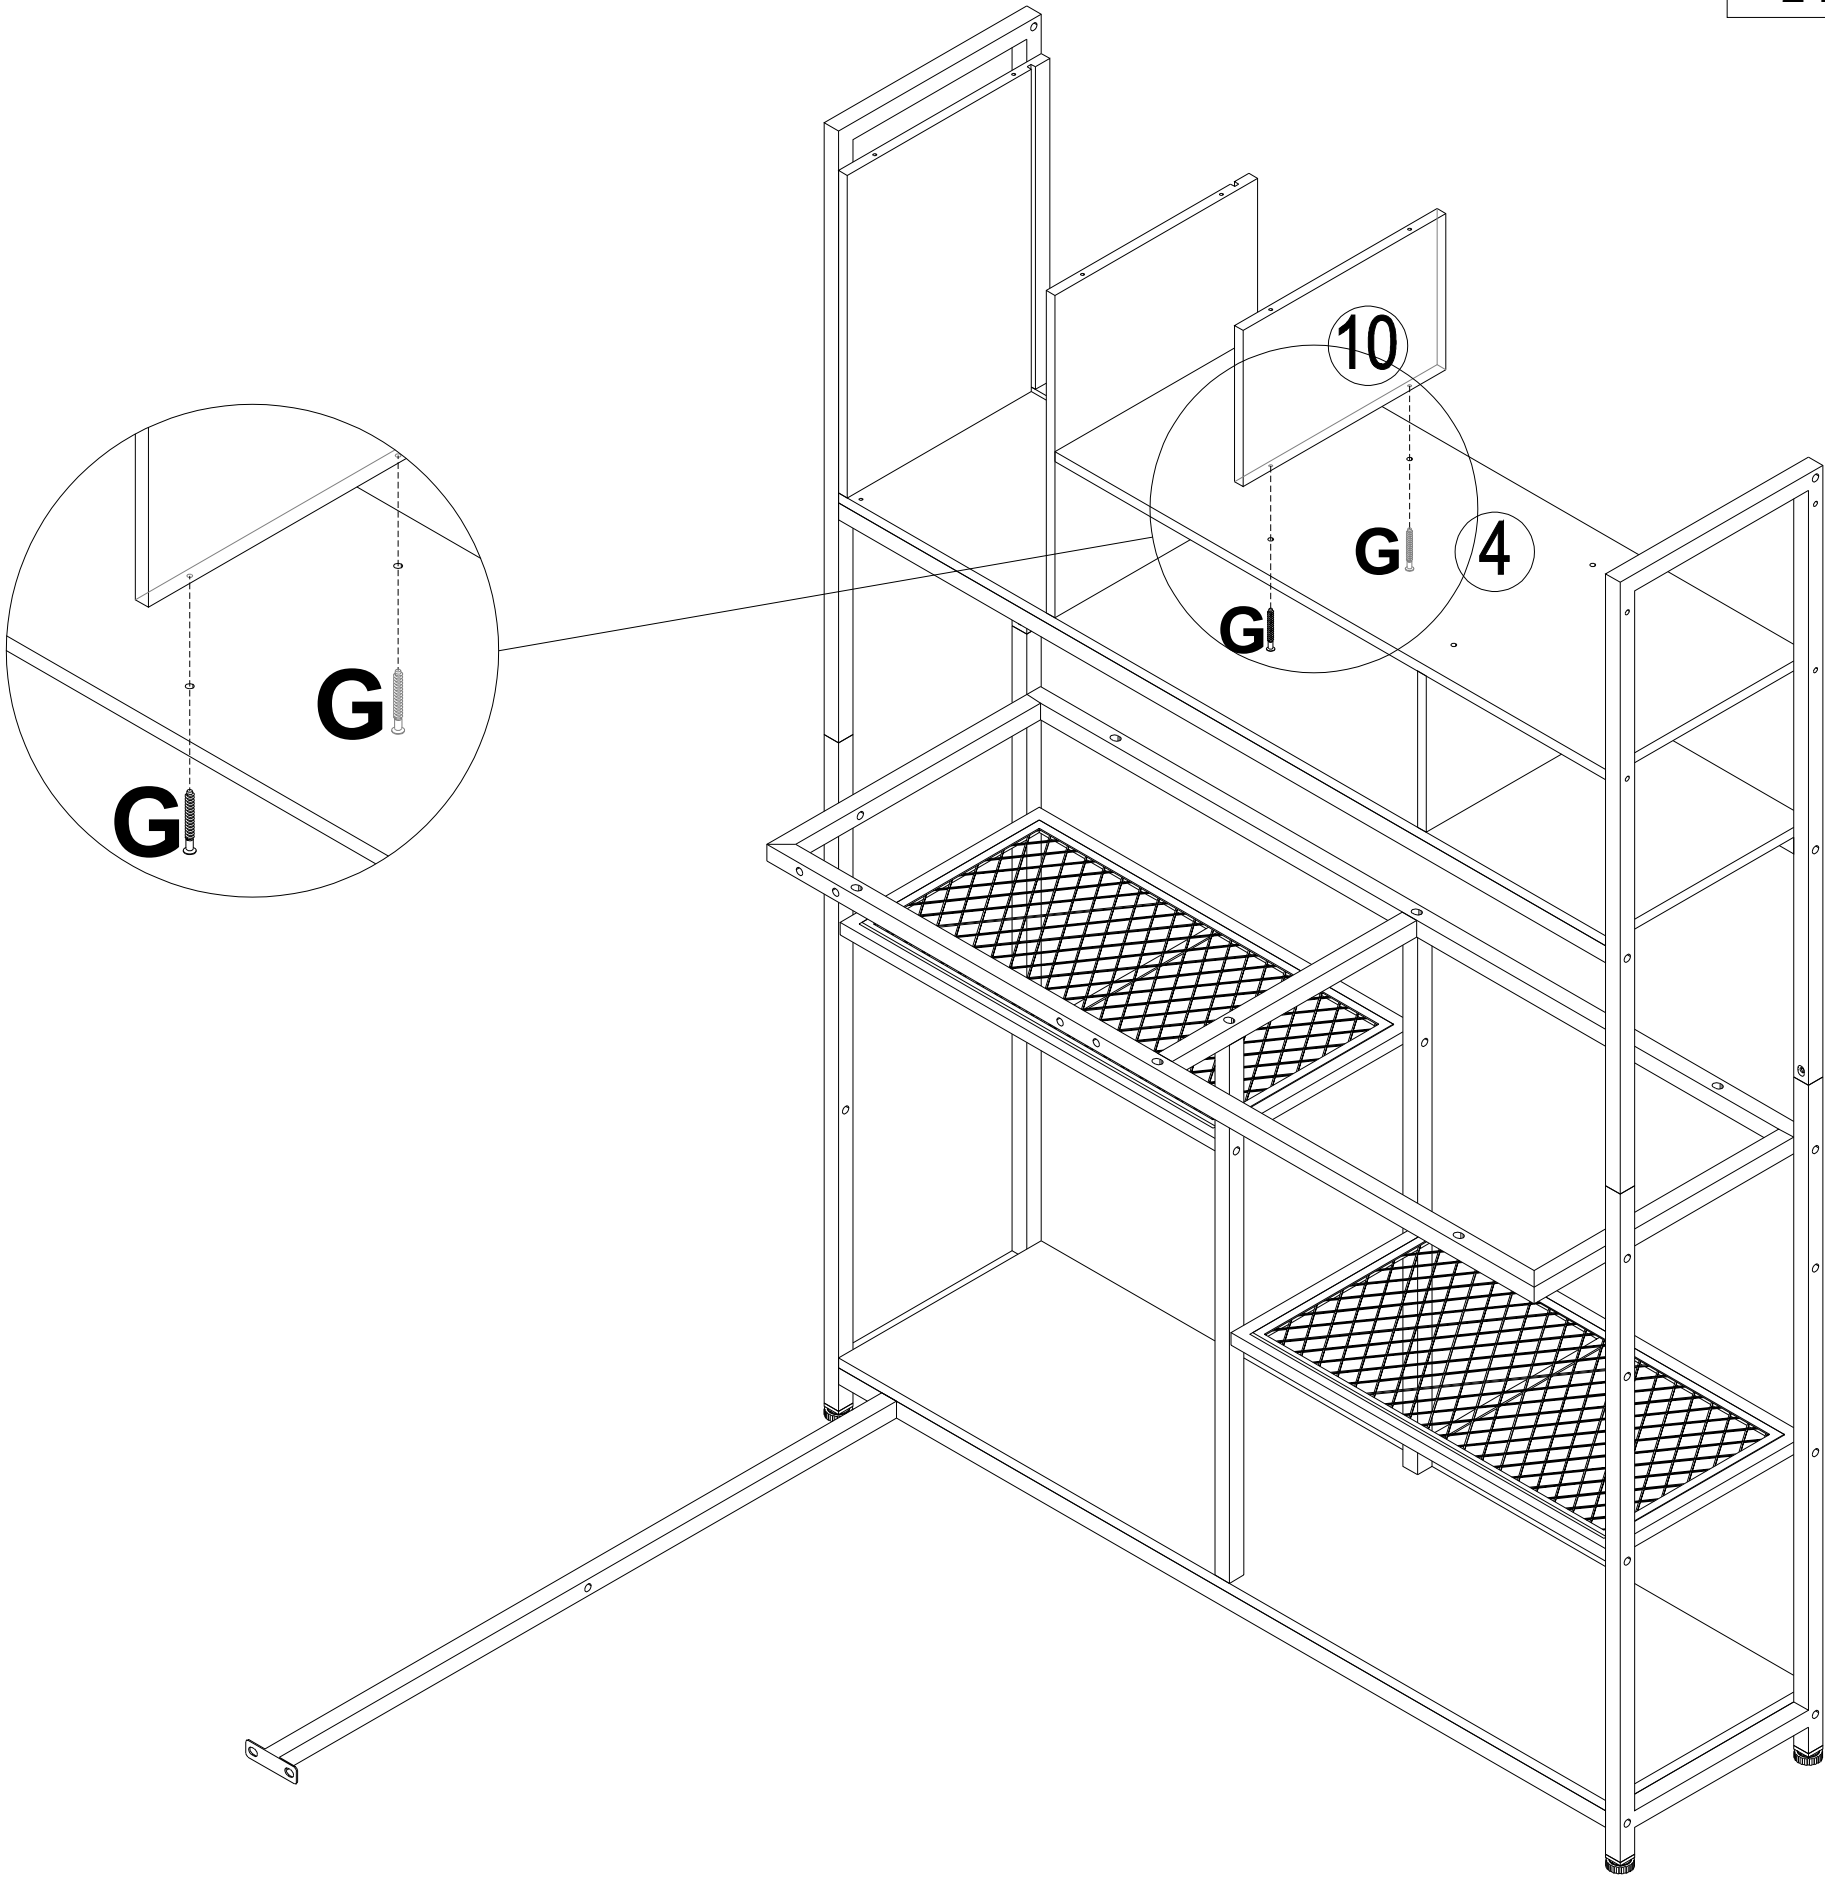


16

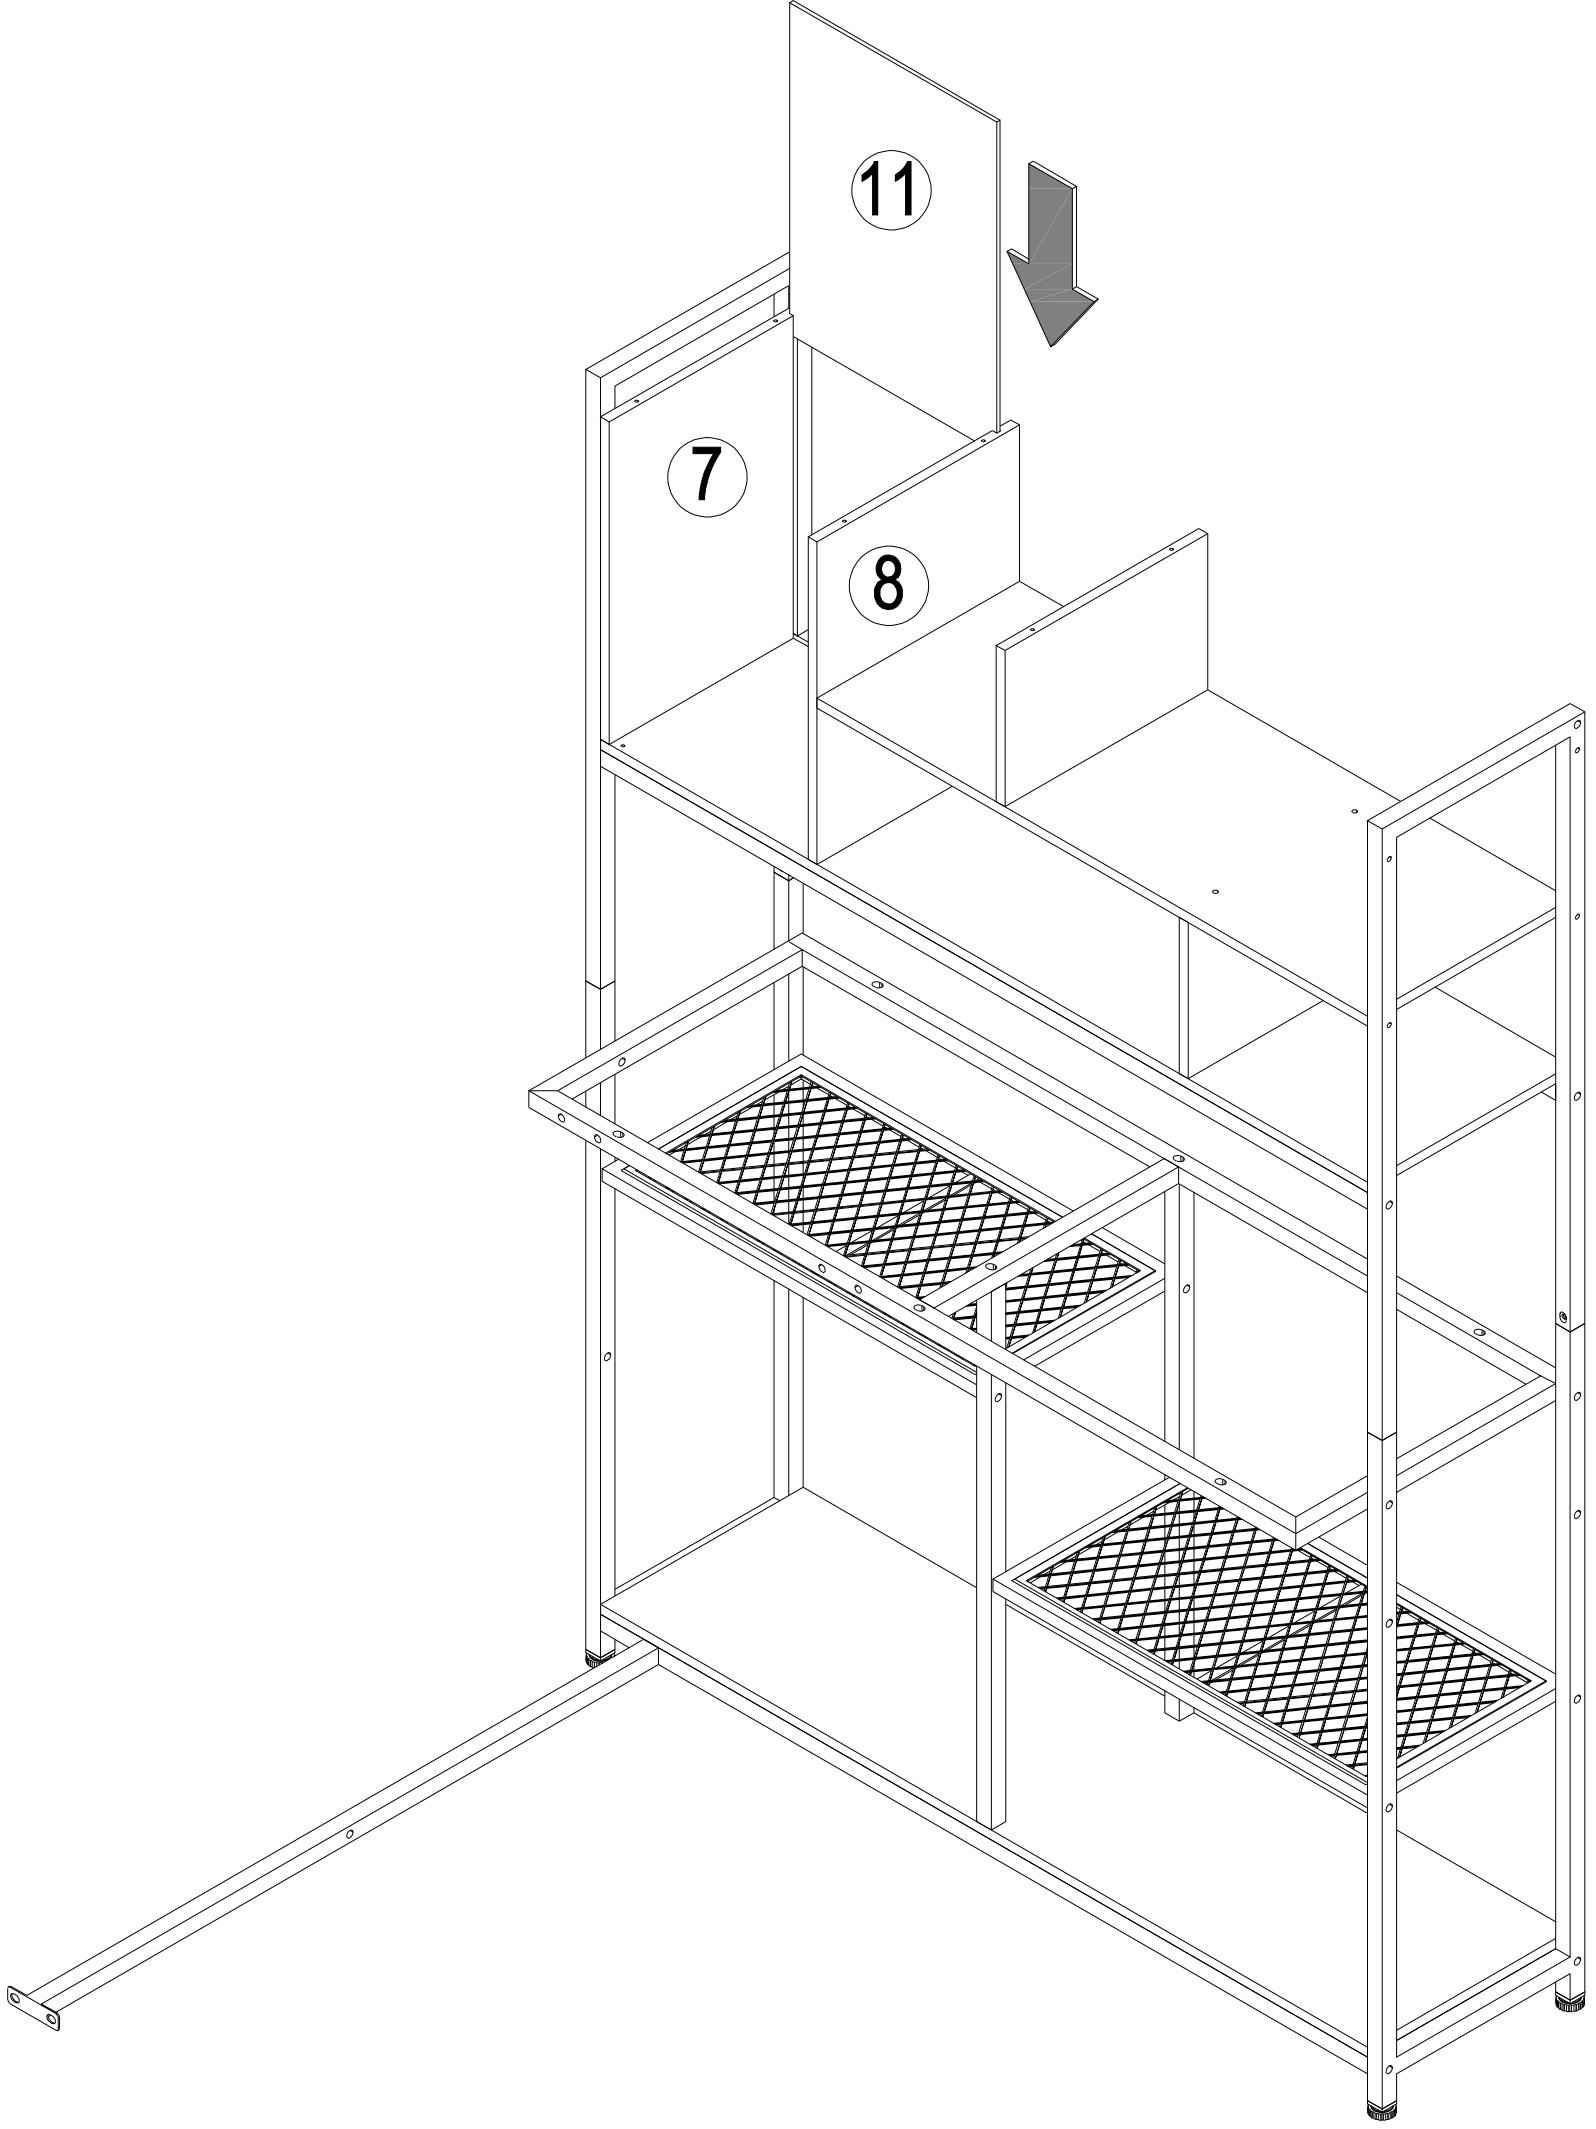

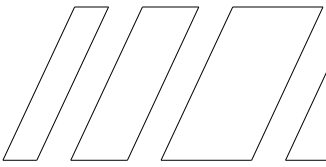



17

G M5x40




8 PCS

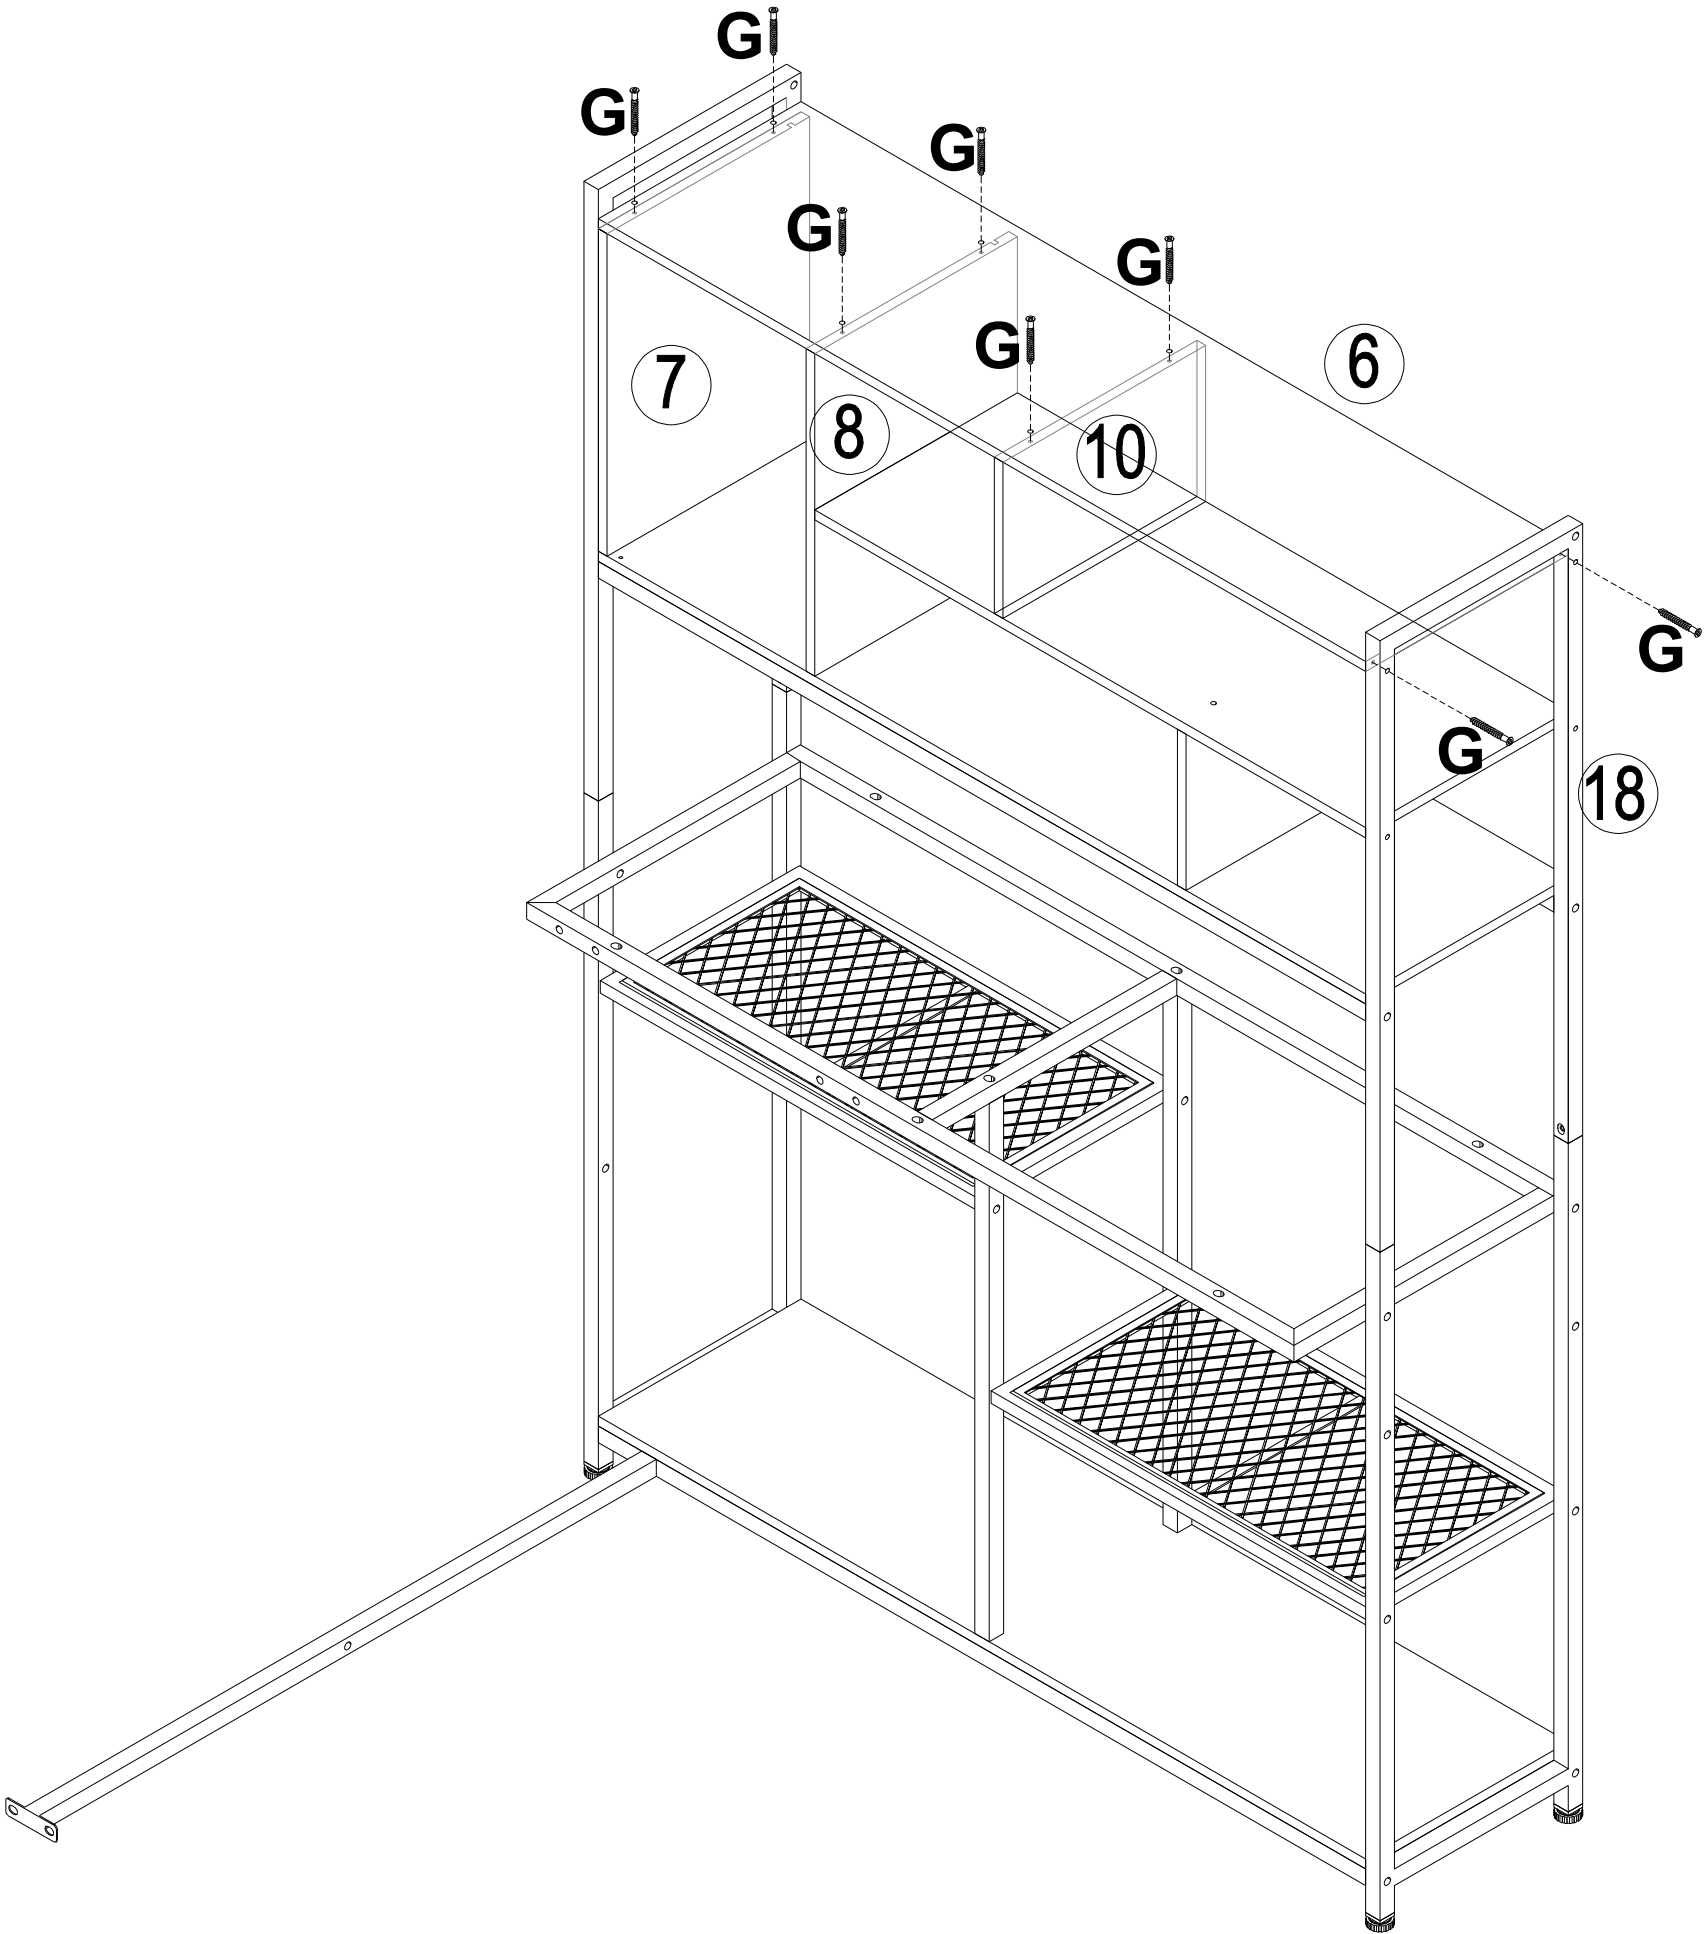

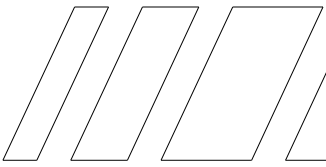


18

B M6X40




2 PCS

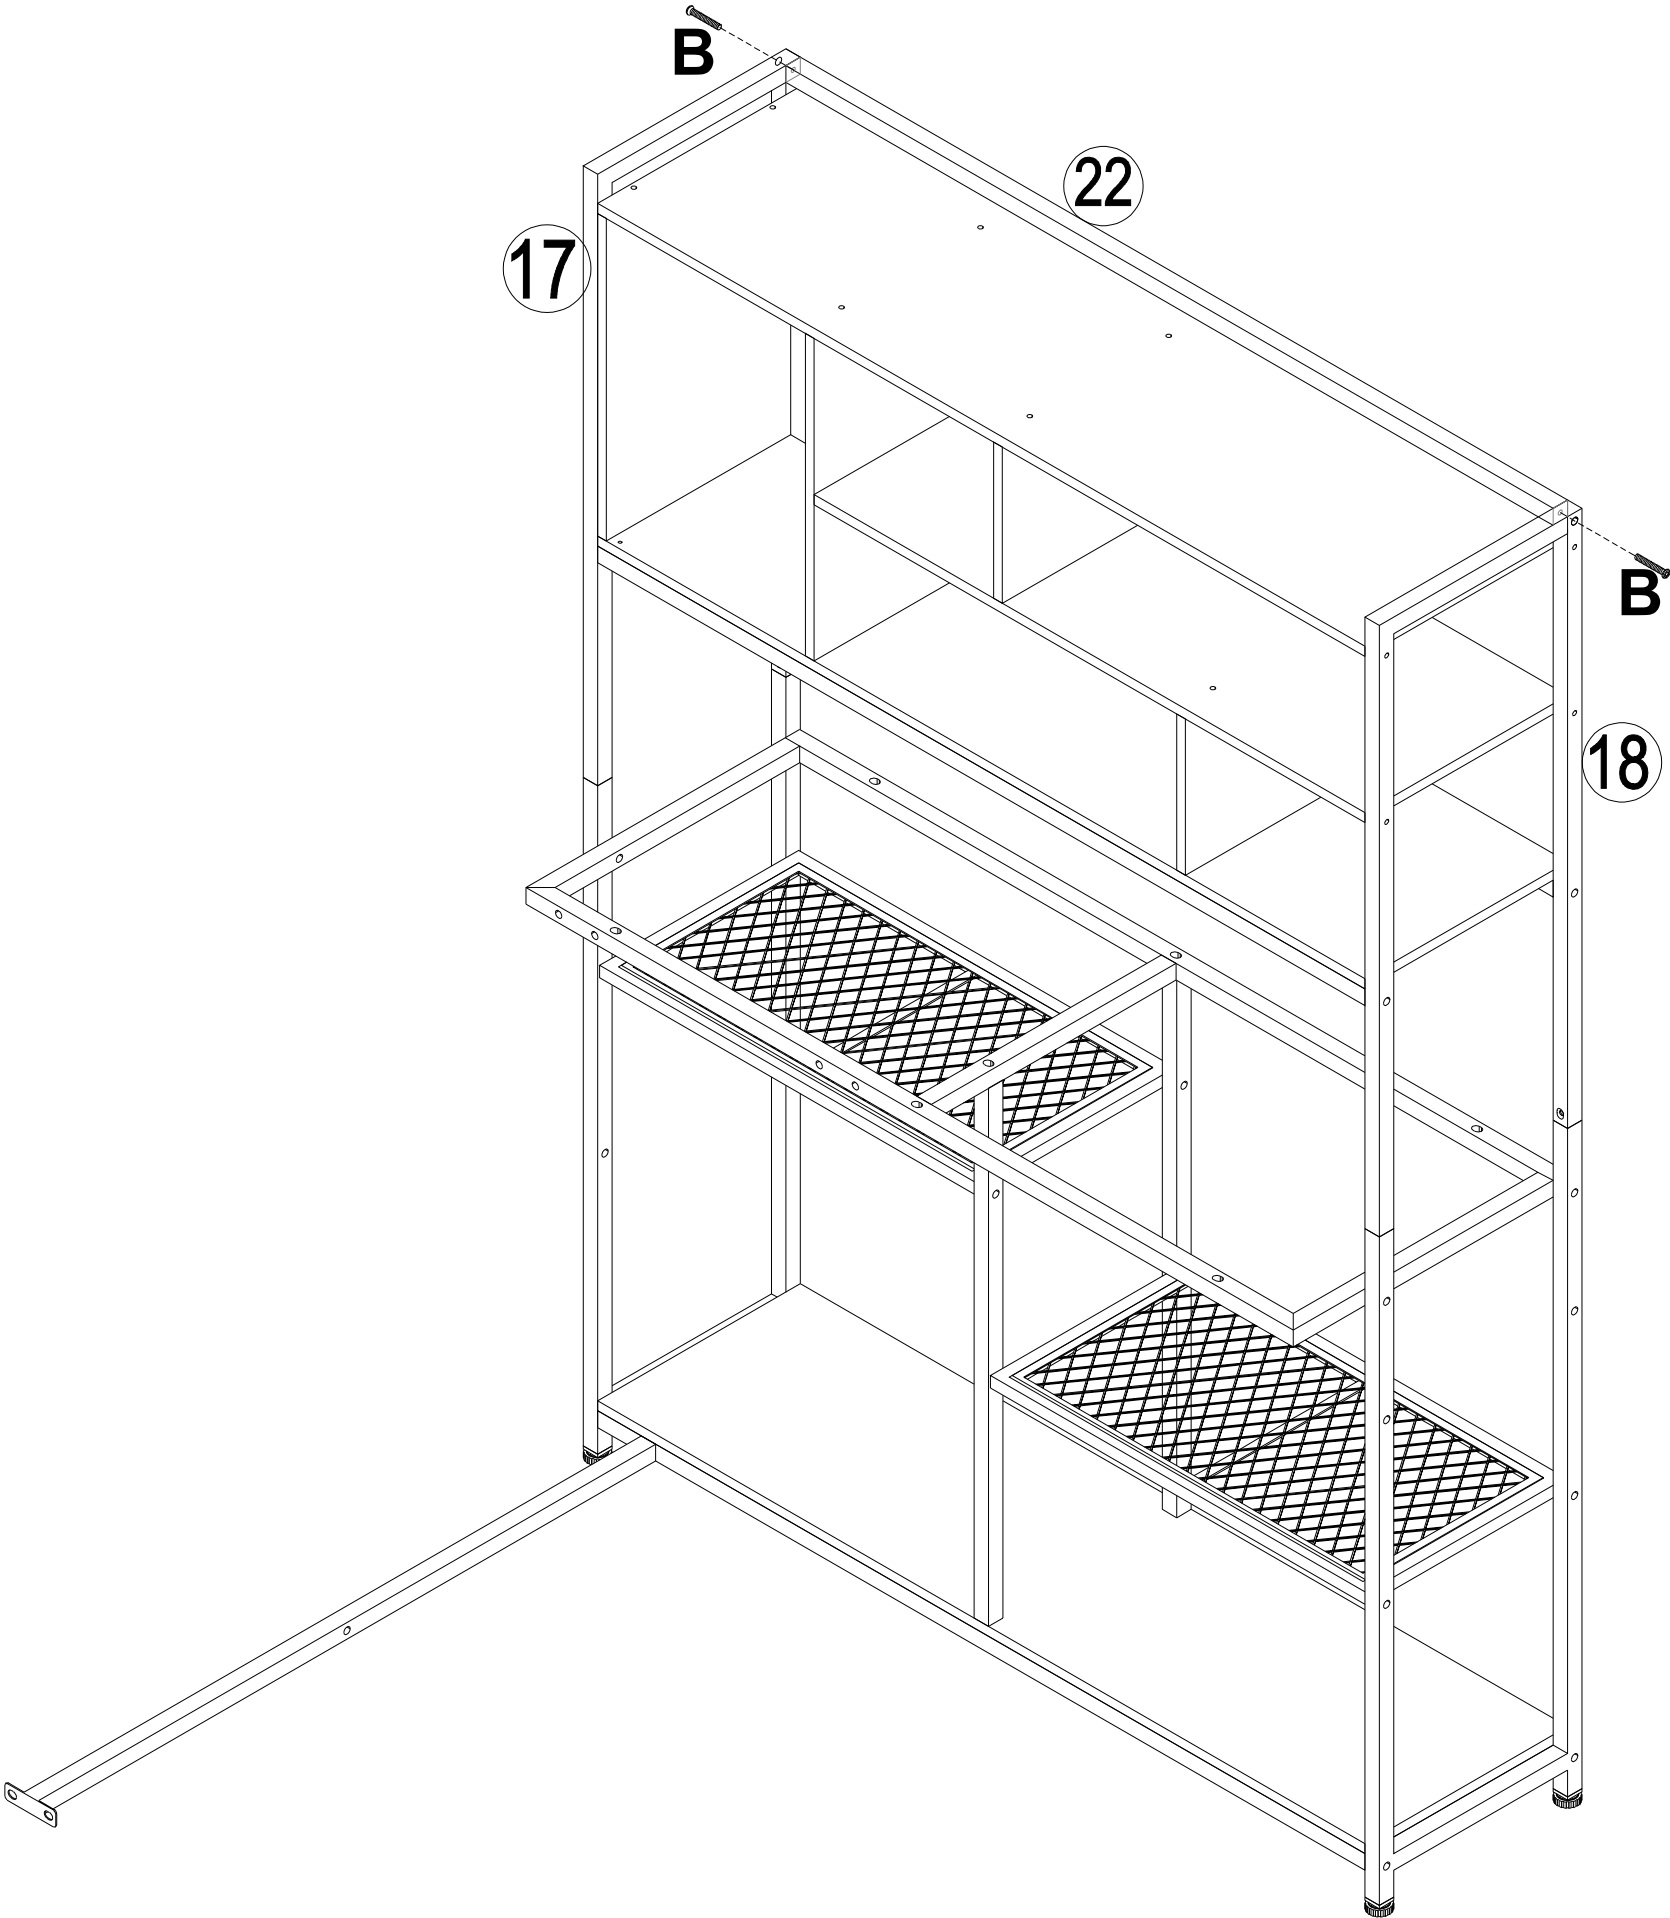


19

H M4X16




2 PCS

1




1 PCS

J



2 PCS

K

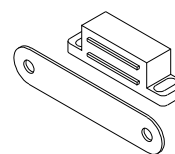


1 SET

L M3.5X12




2 PCS

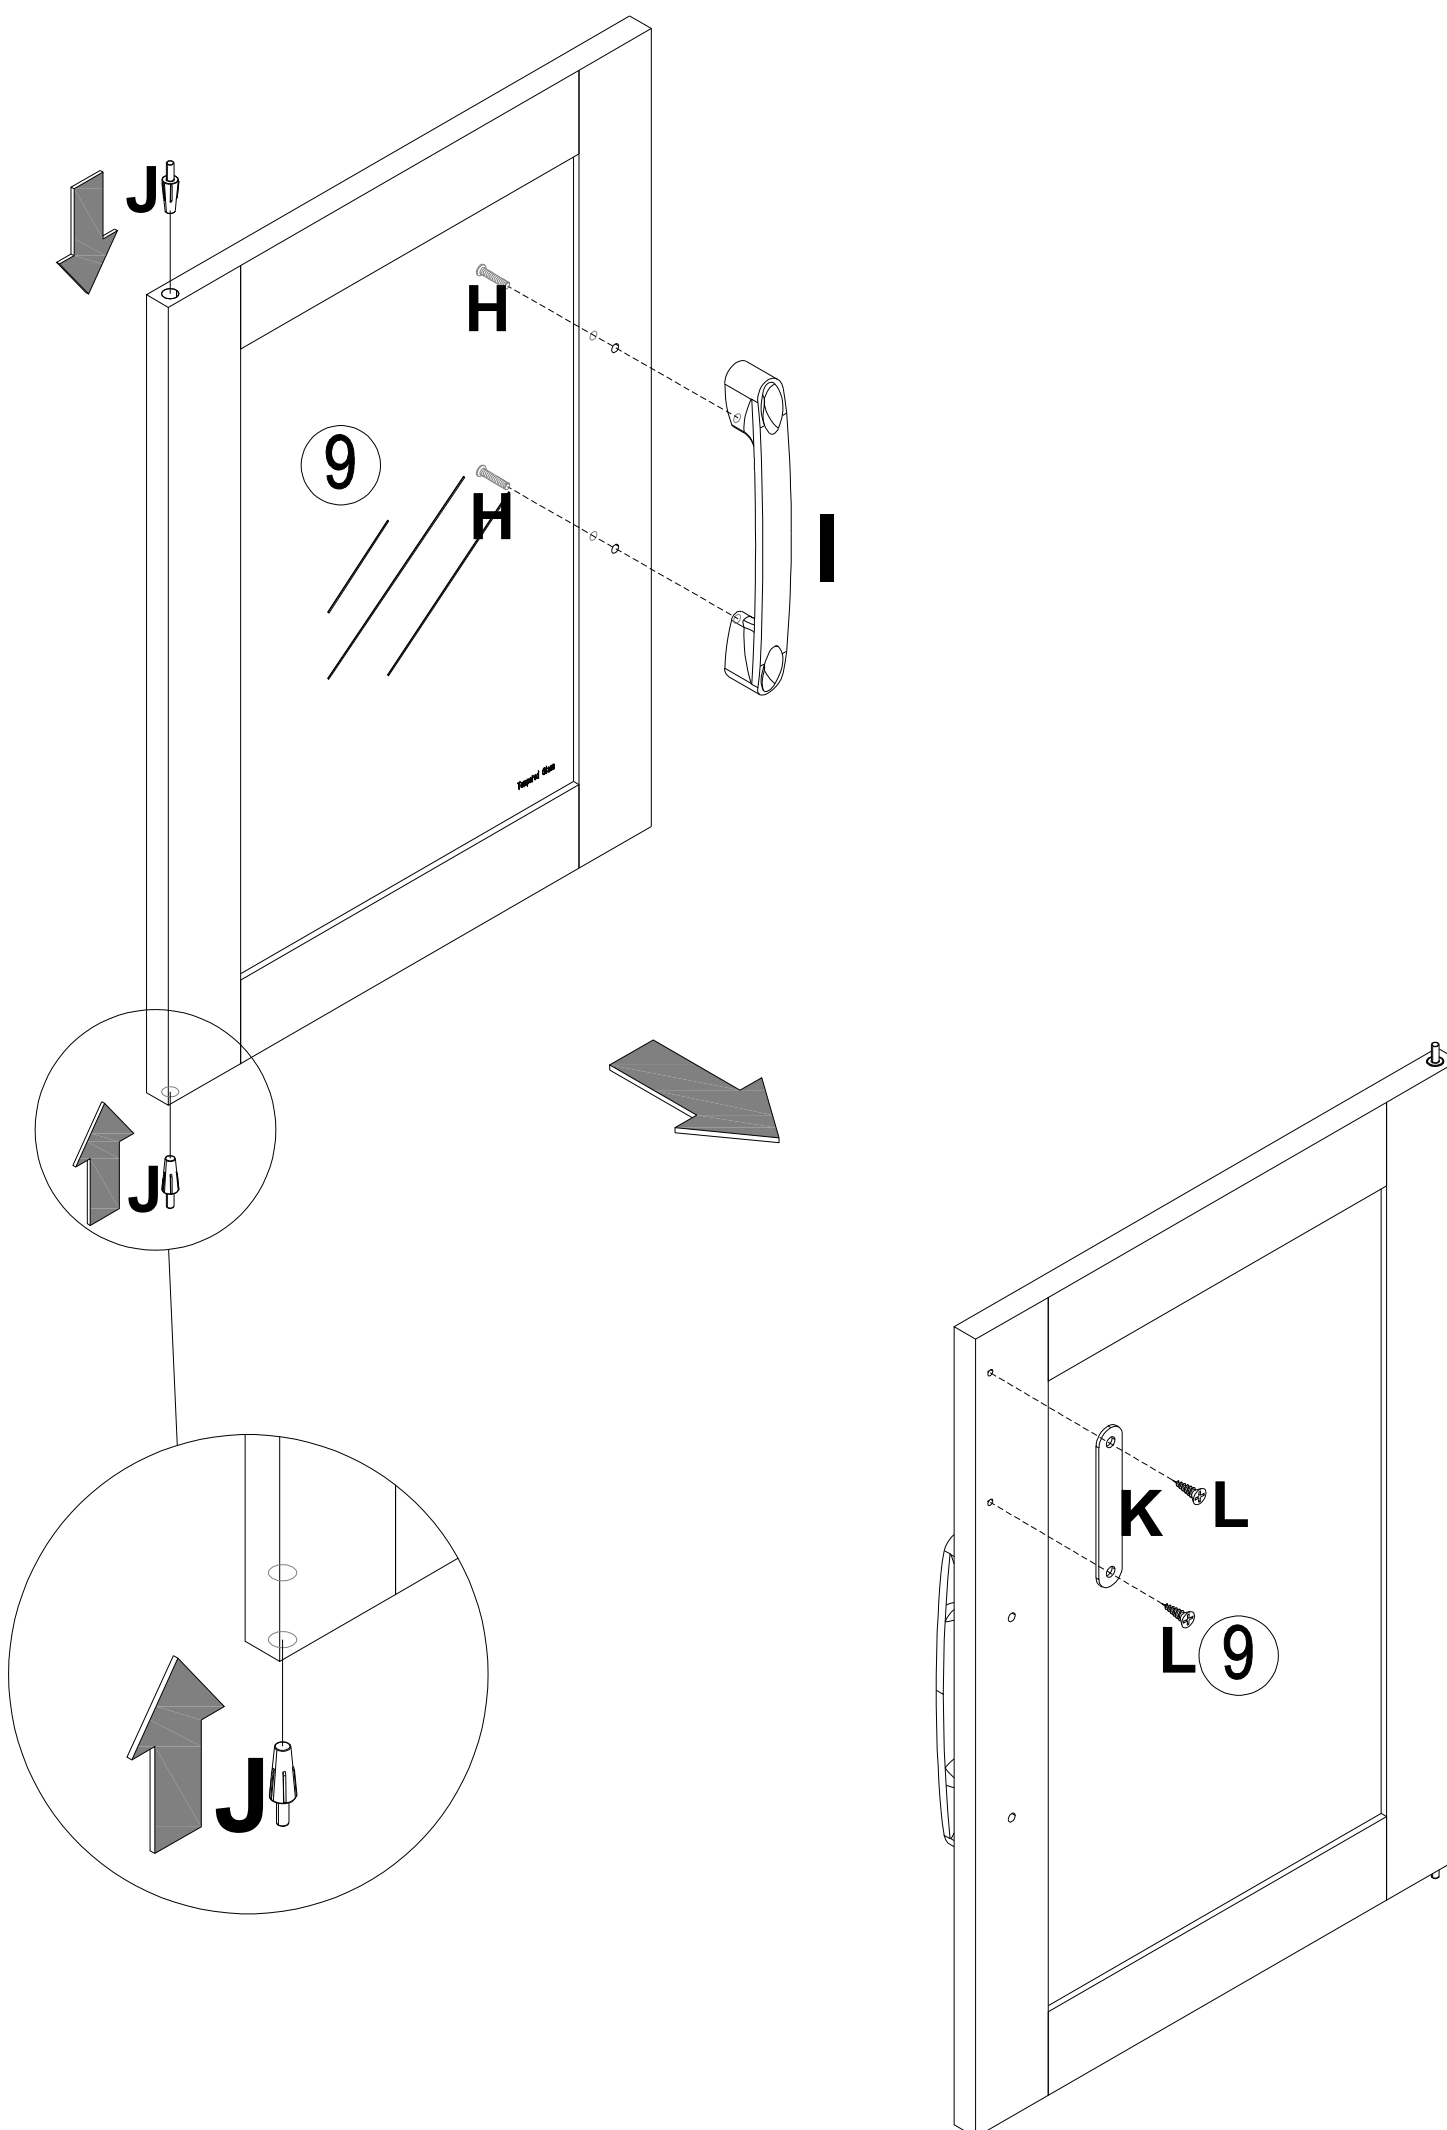


20 Press and hold the black small accessory at the bottom of the door panel and push it inward to align with the hole

K	M M3.5X14
1 SET	2 PCS

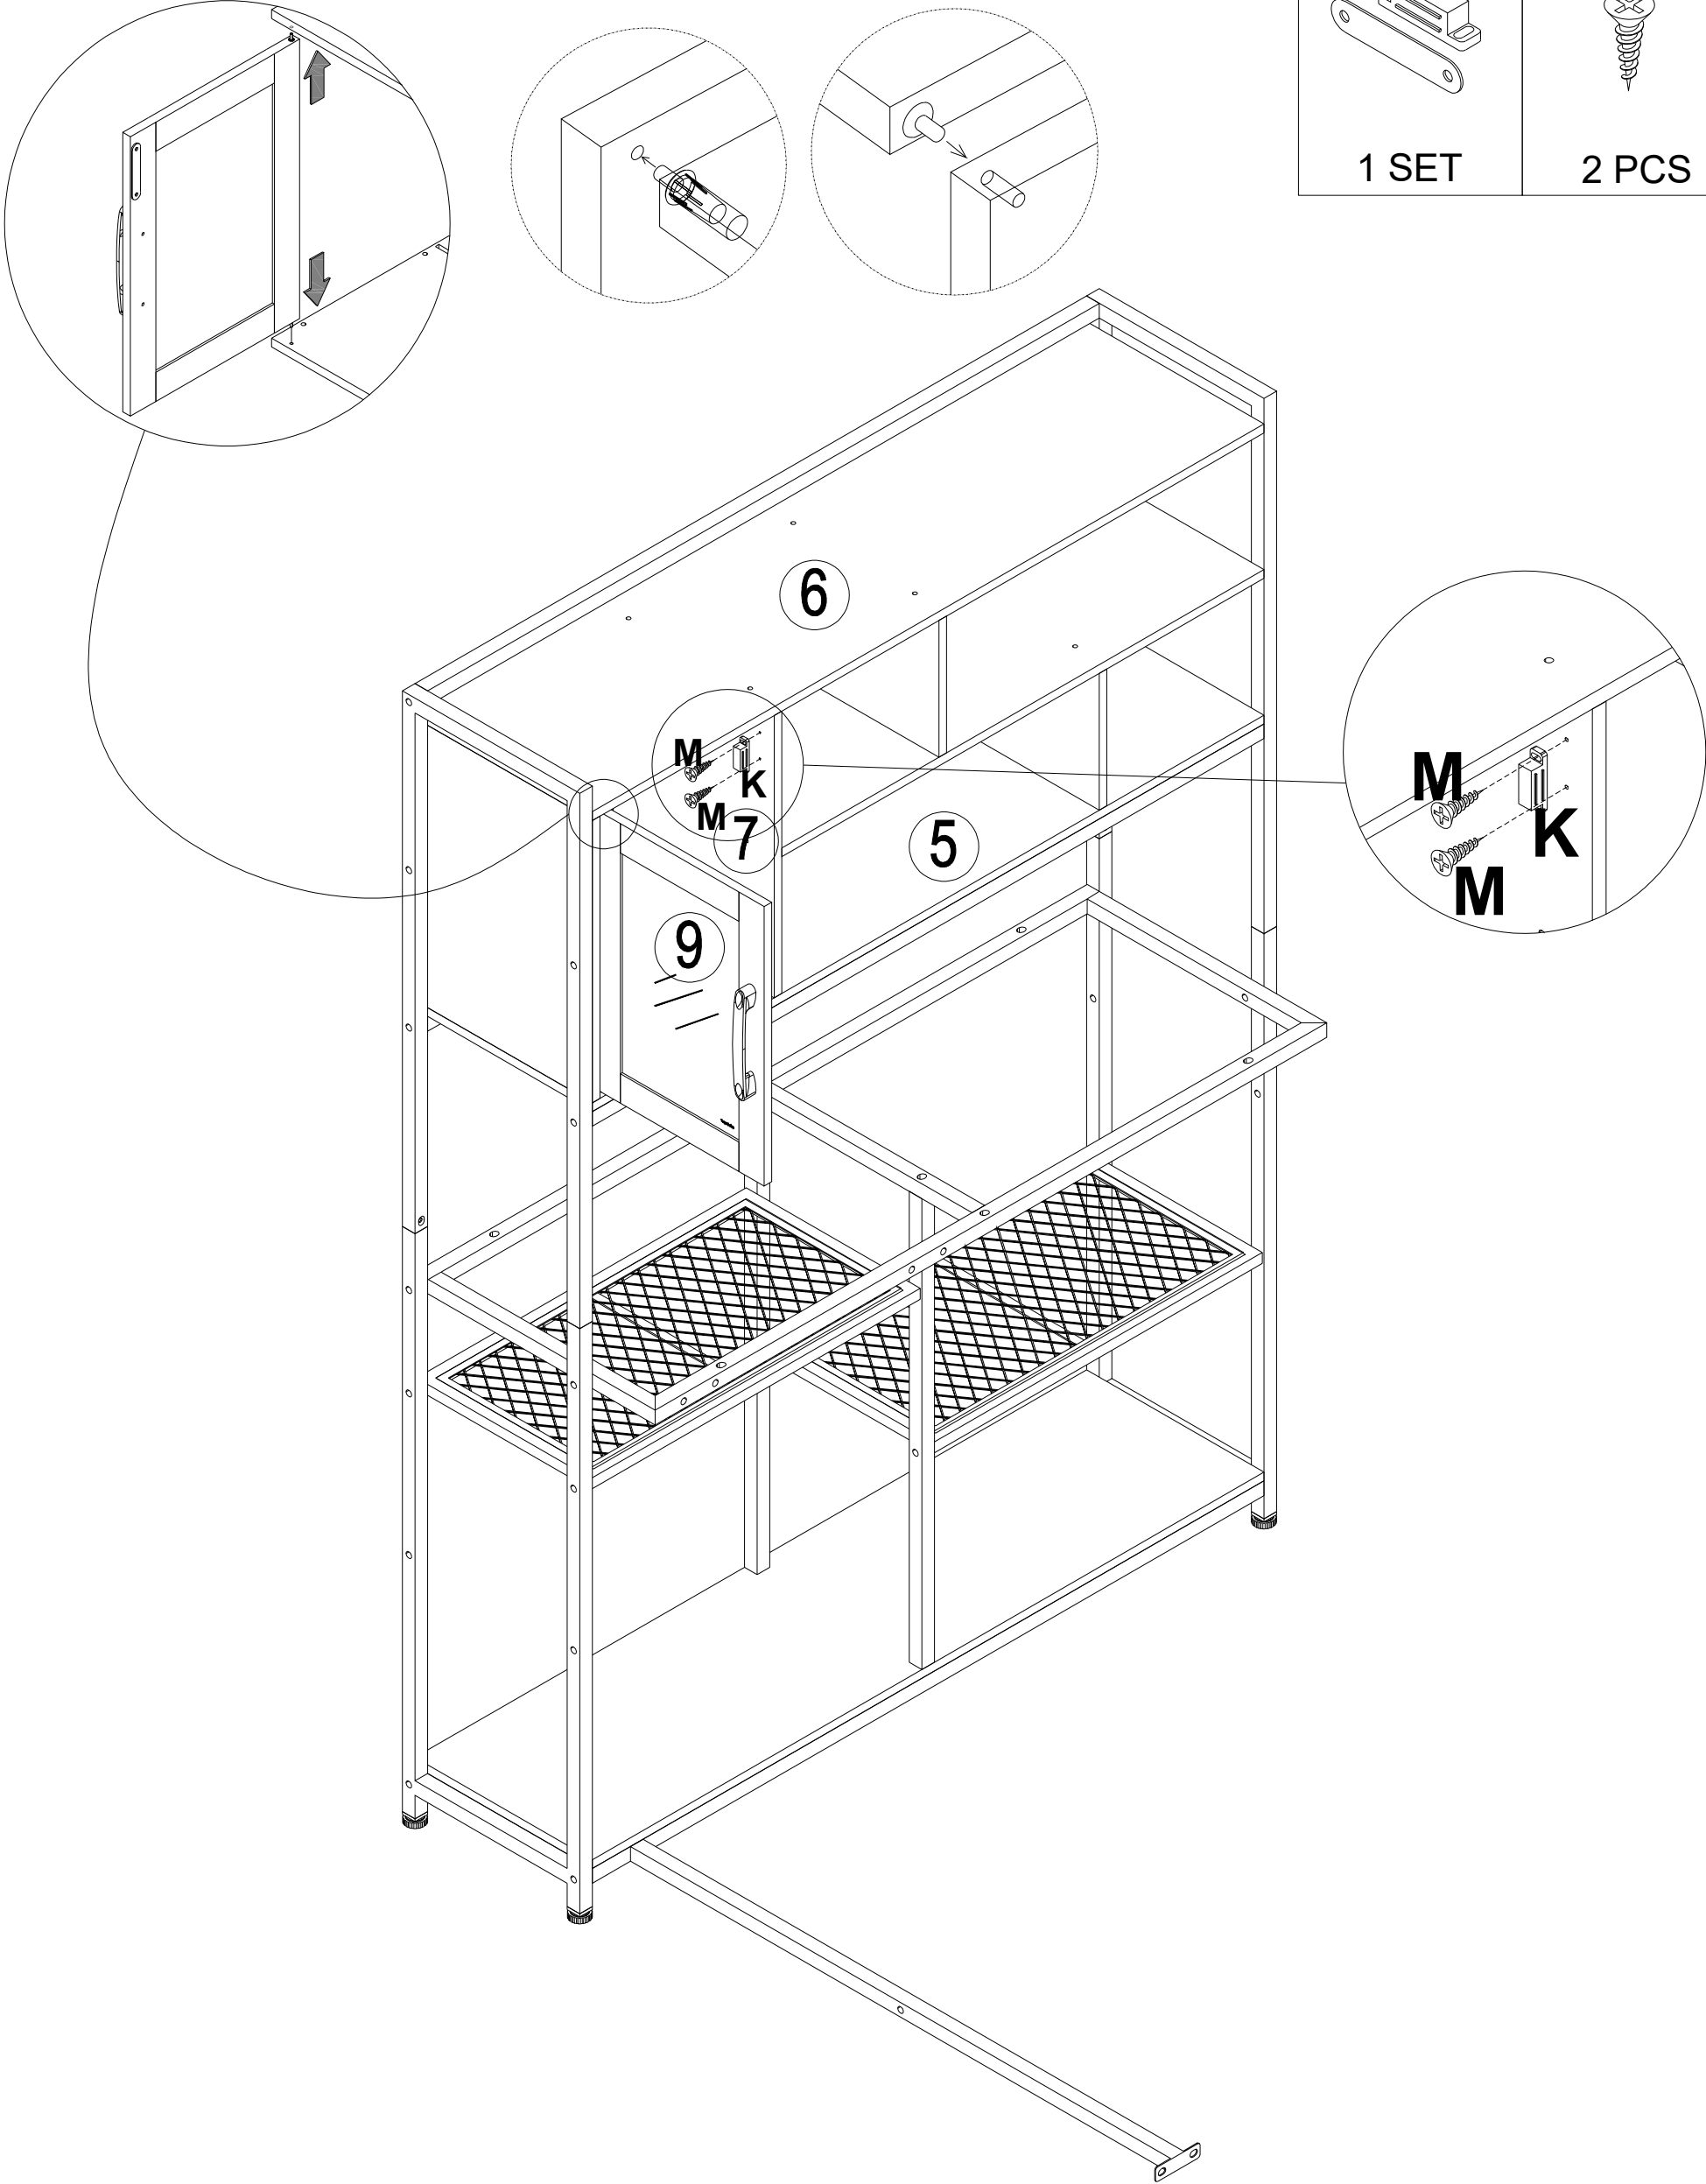



21

B M6X40




4 PCS

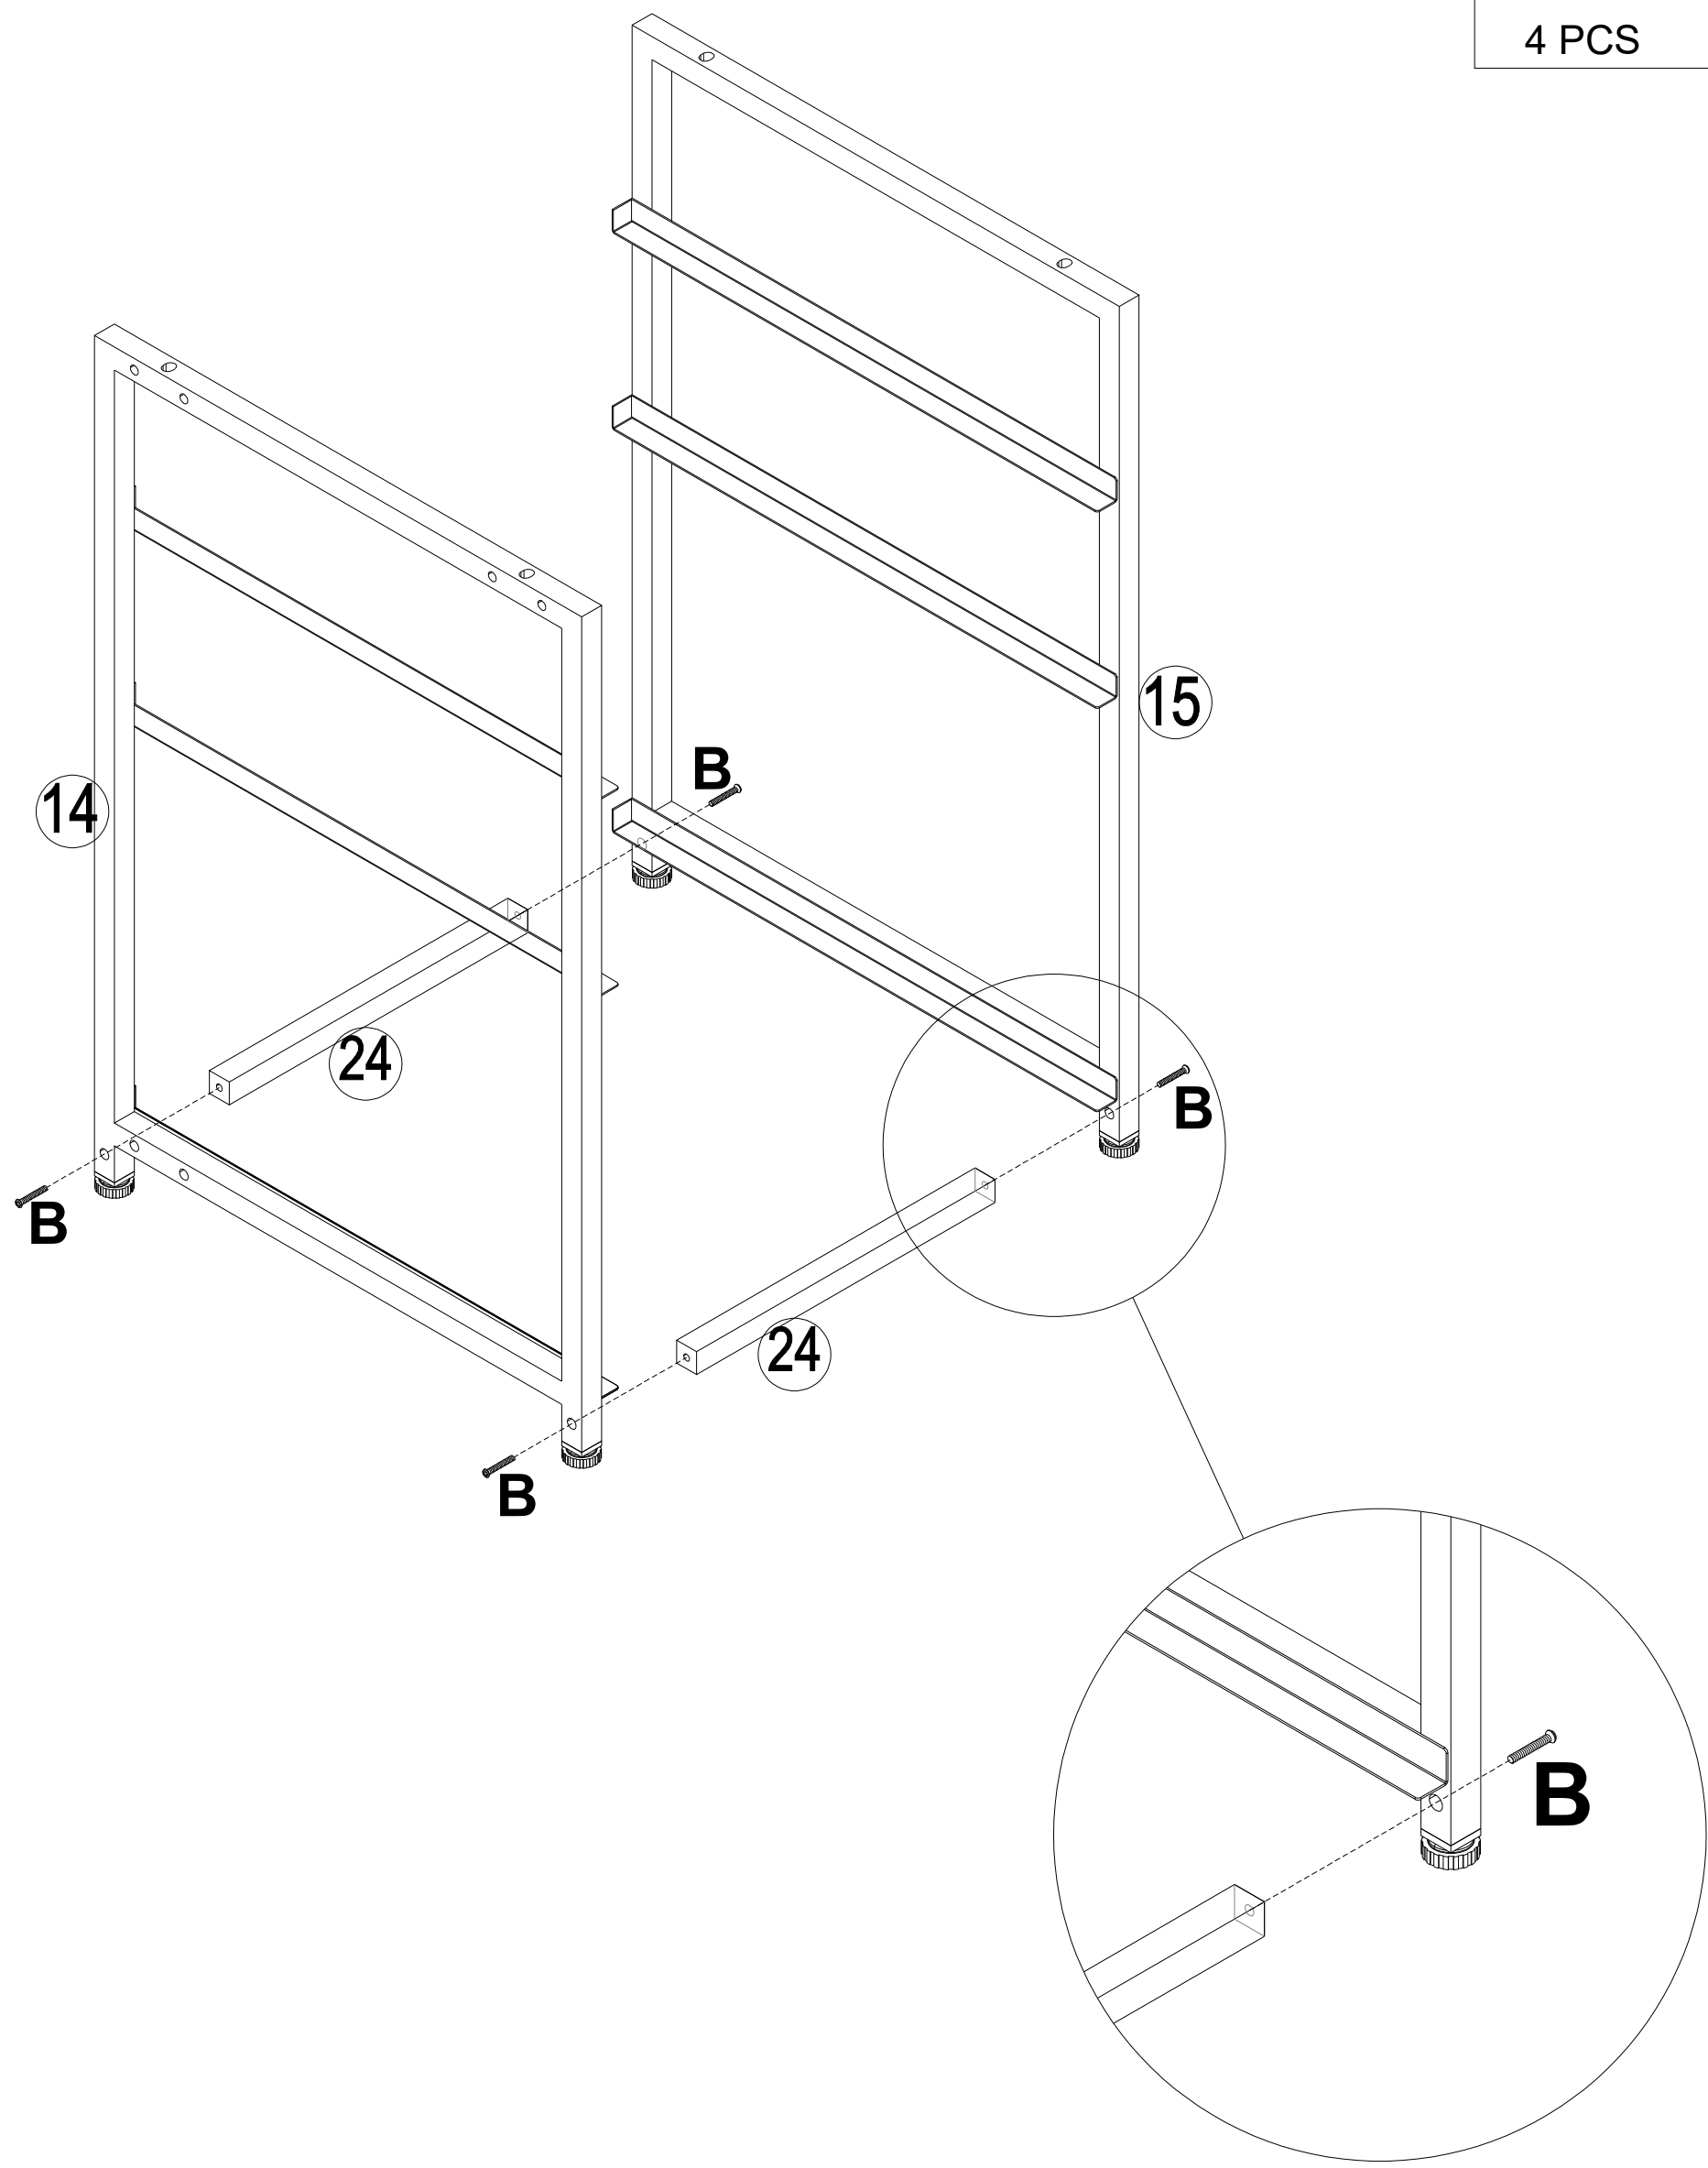

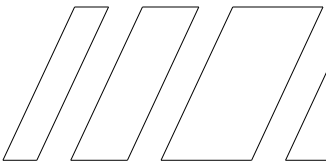


22

F M6X12




2 PCS

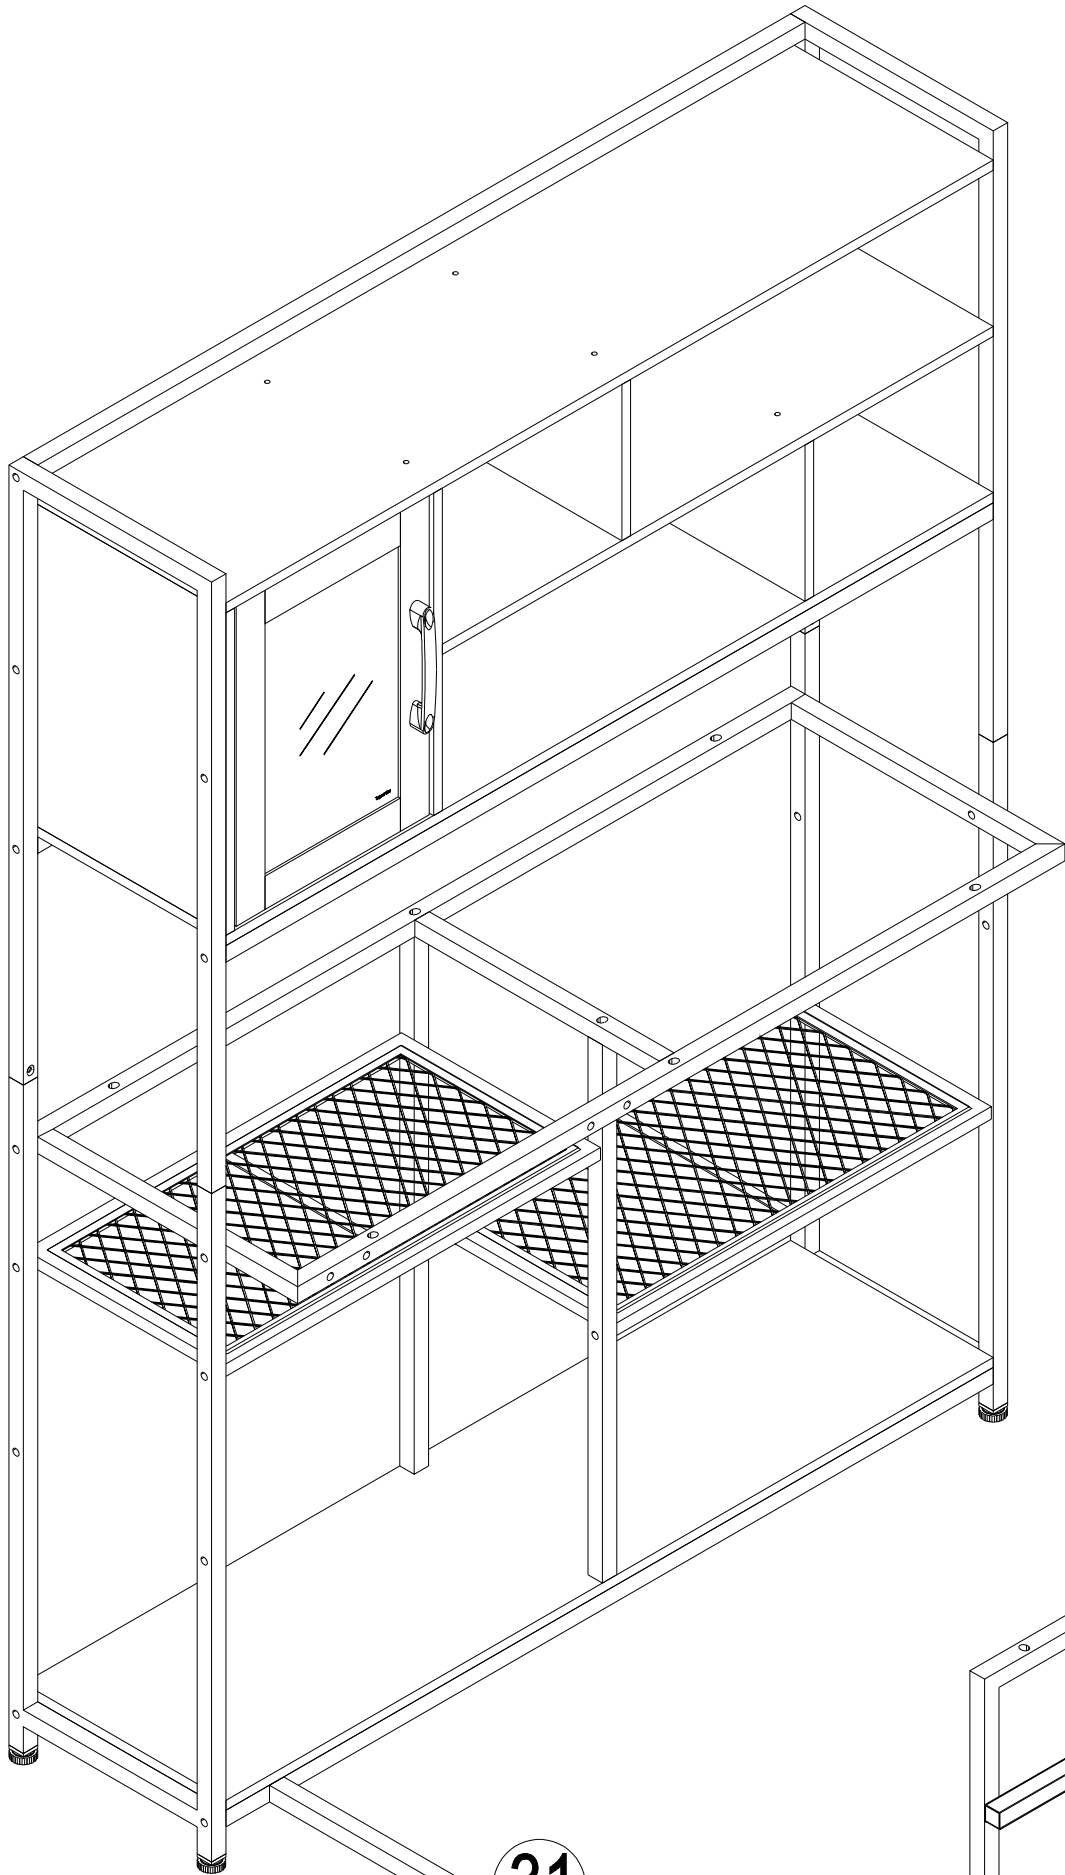

15


31

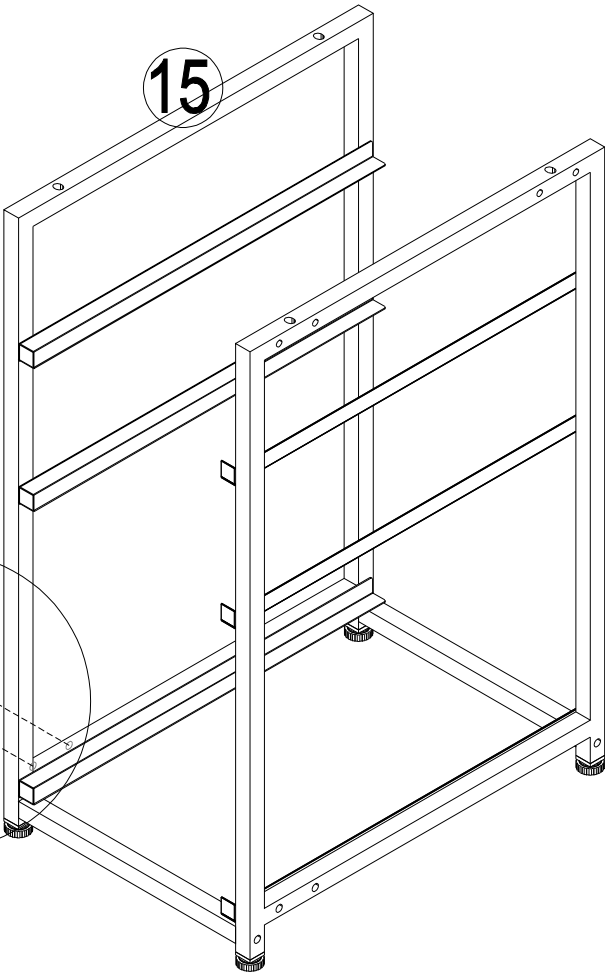

F



F

F

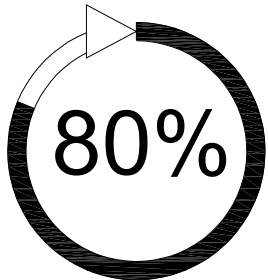

23


F M6X12

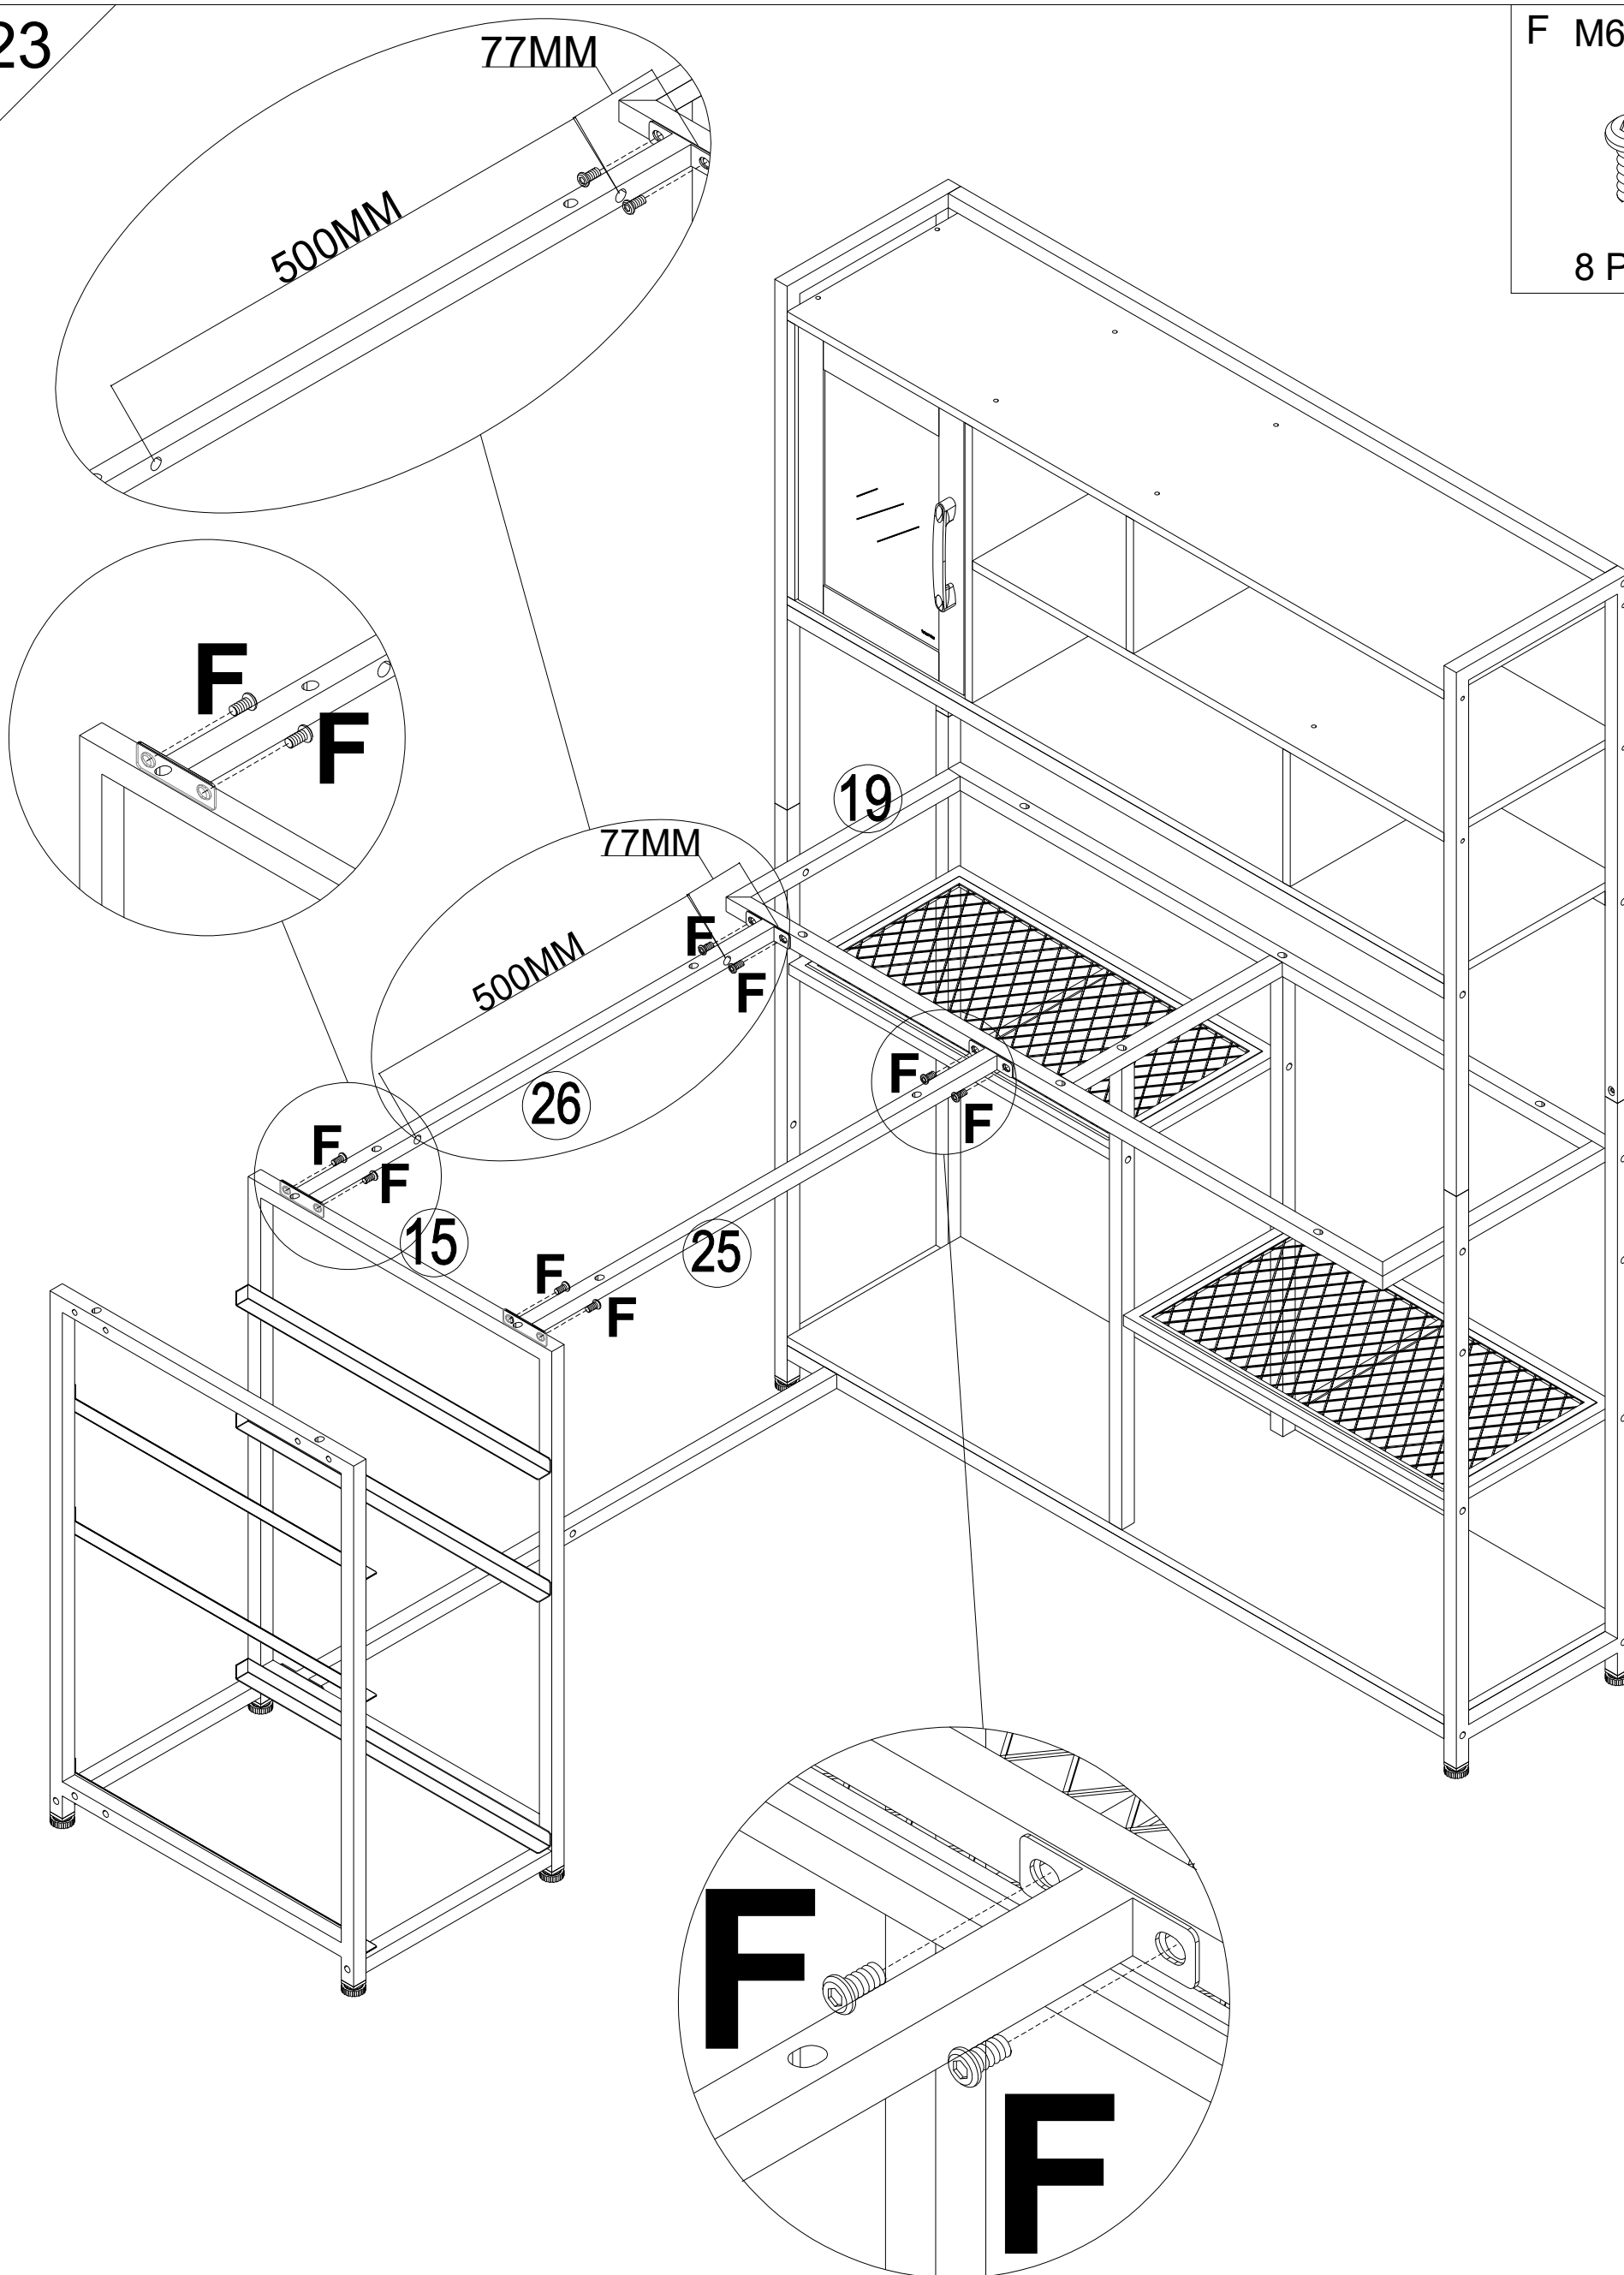

24



C M6X28

E M6




3 PCS

3 PCS

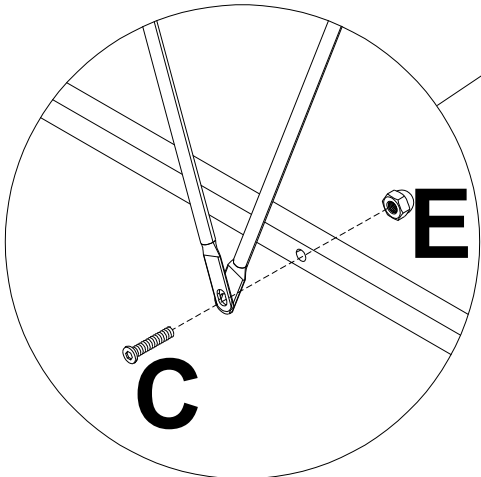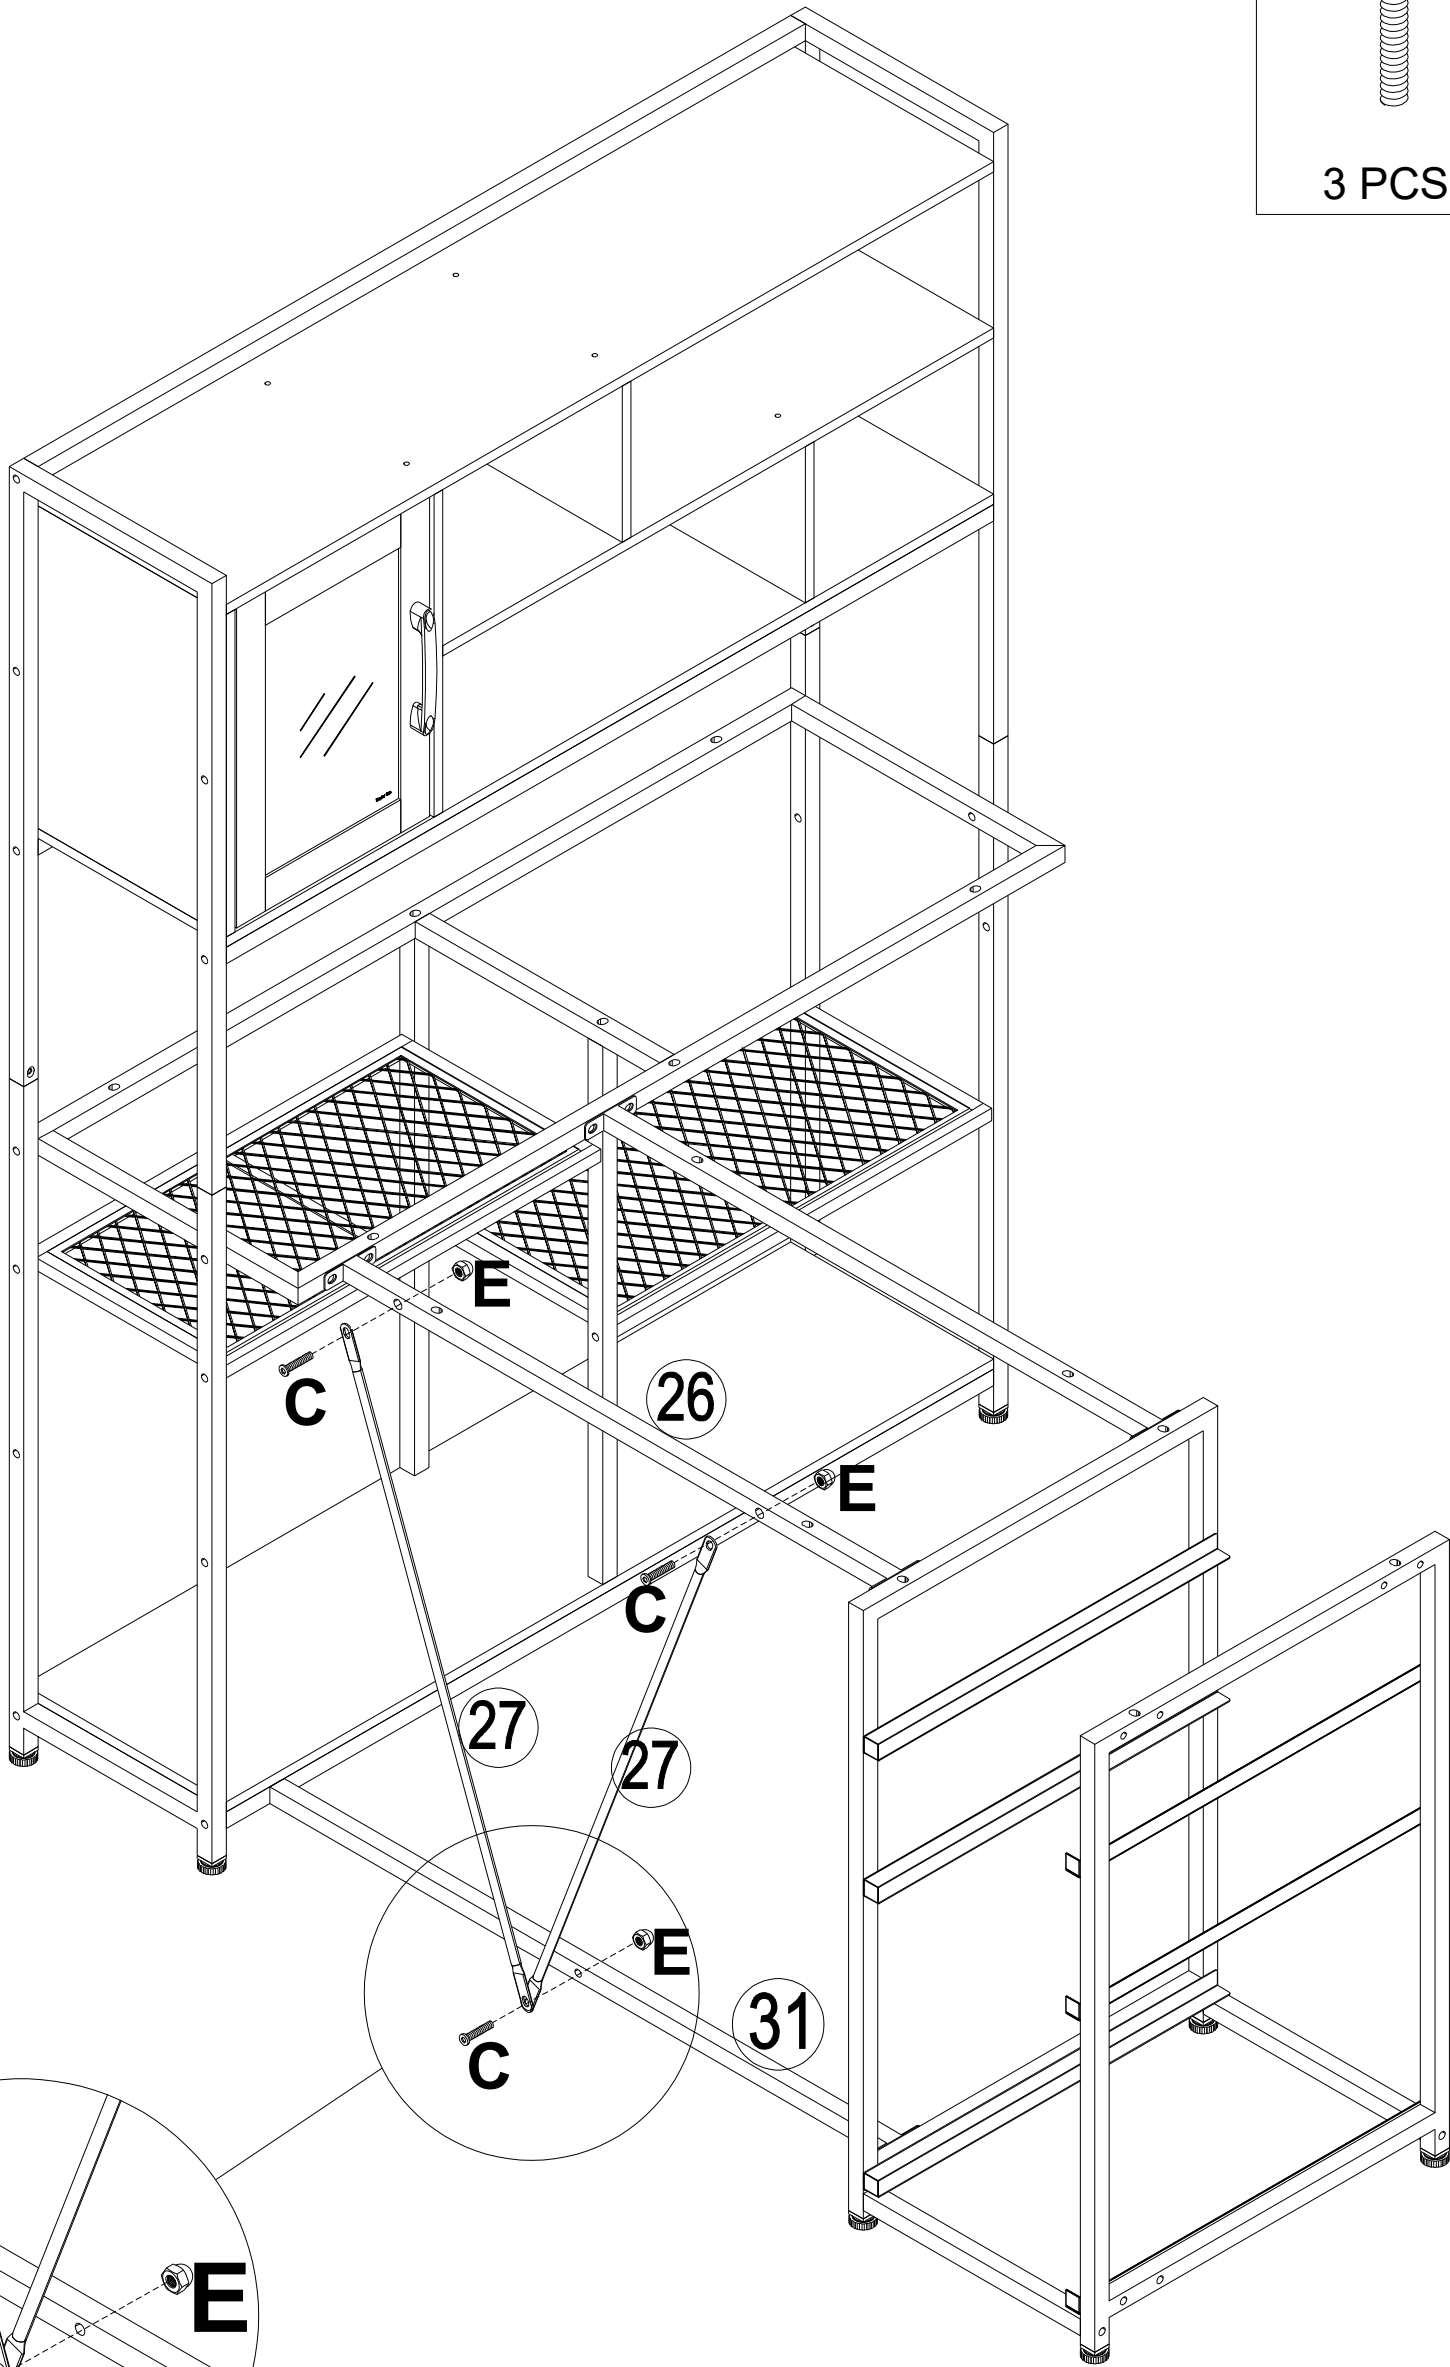


25

C M6X28



13 PCS

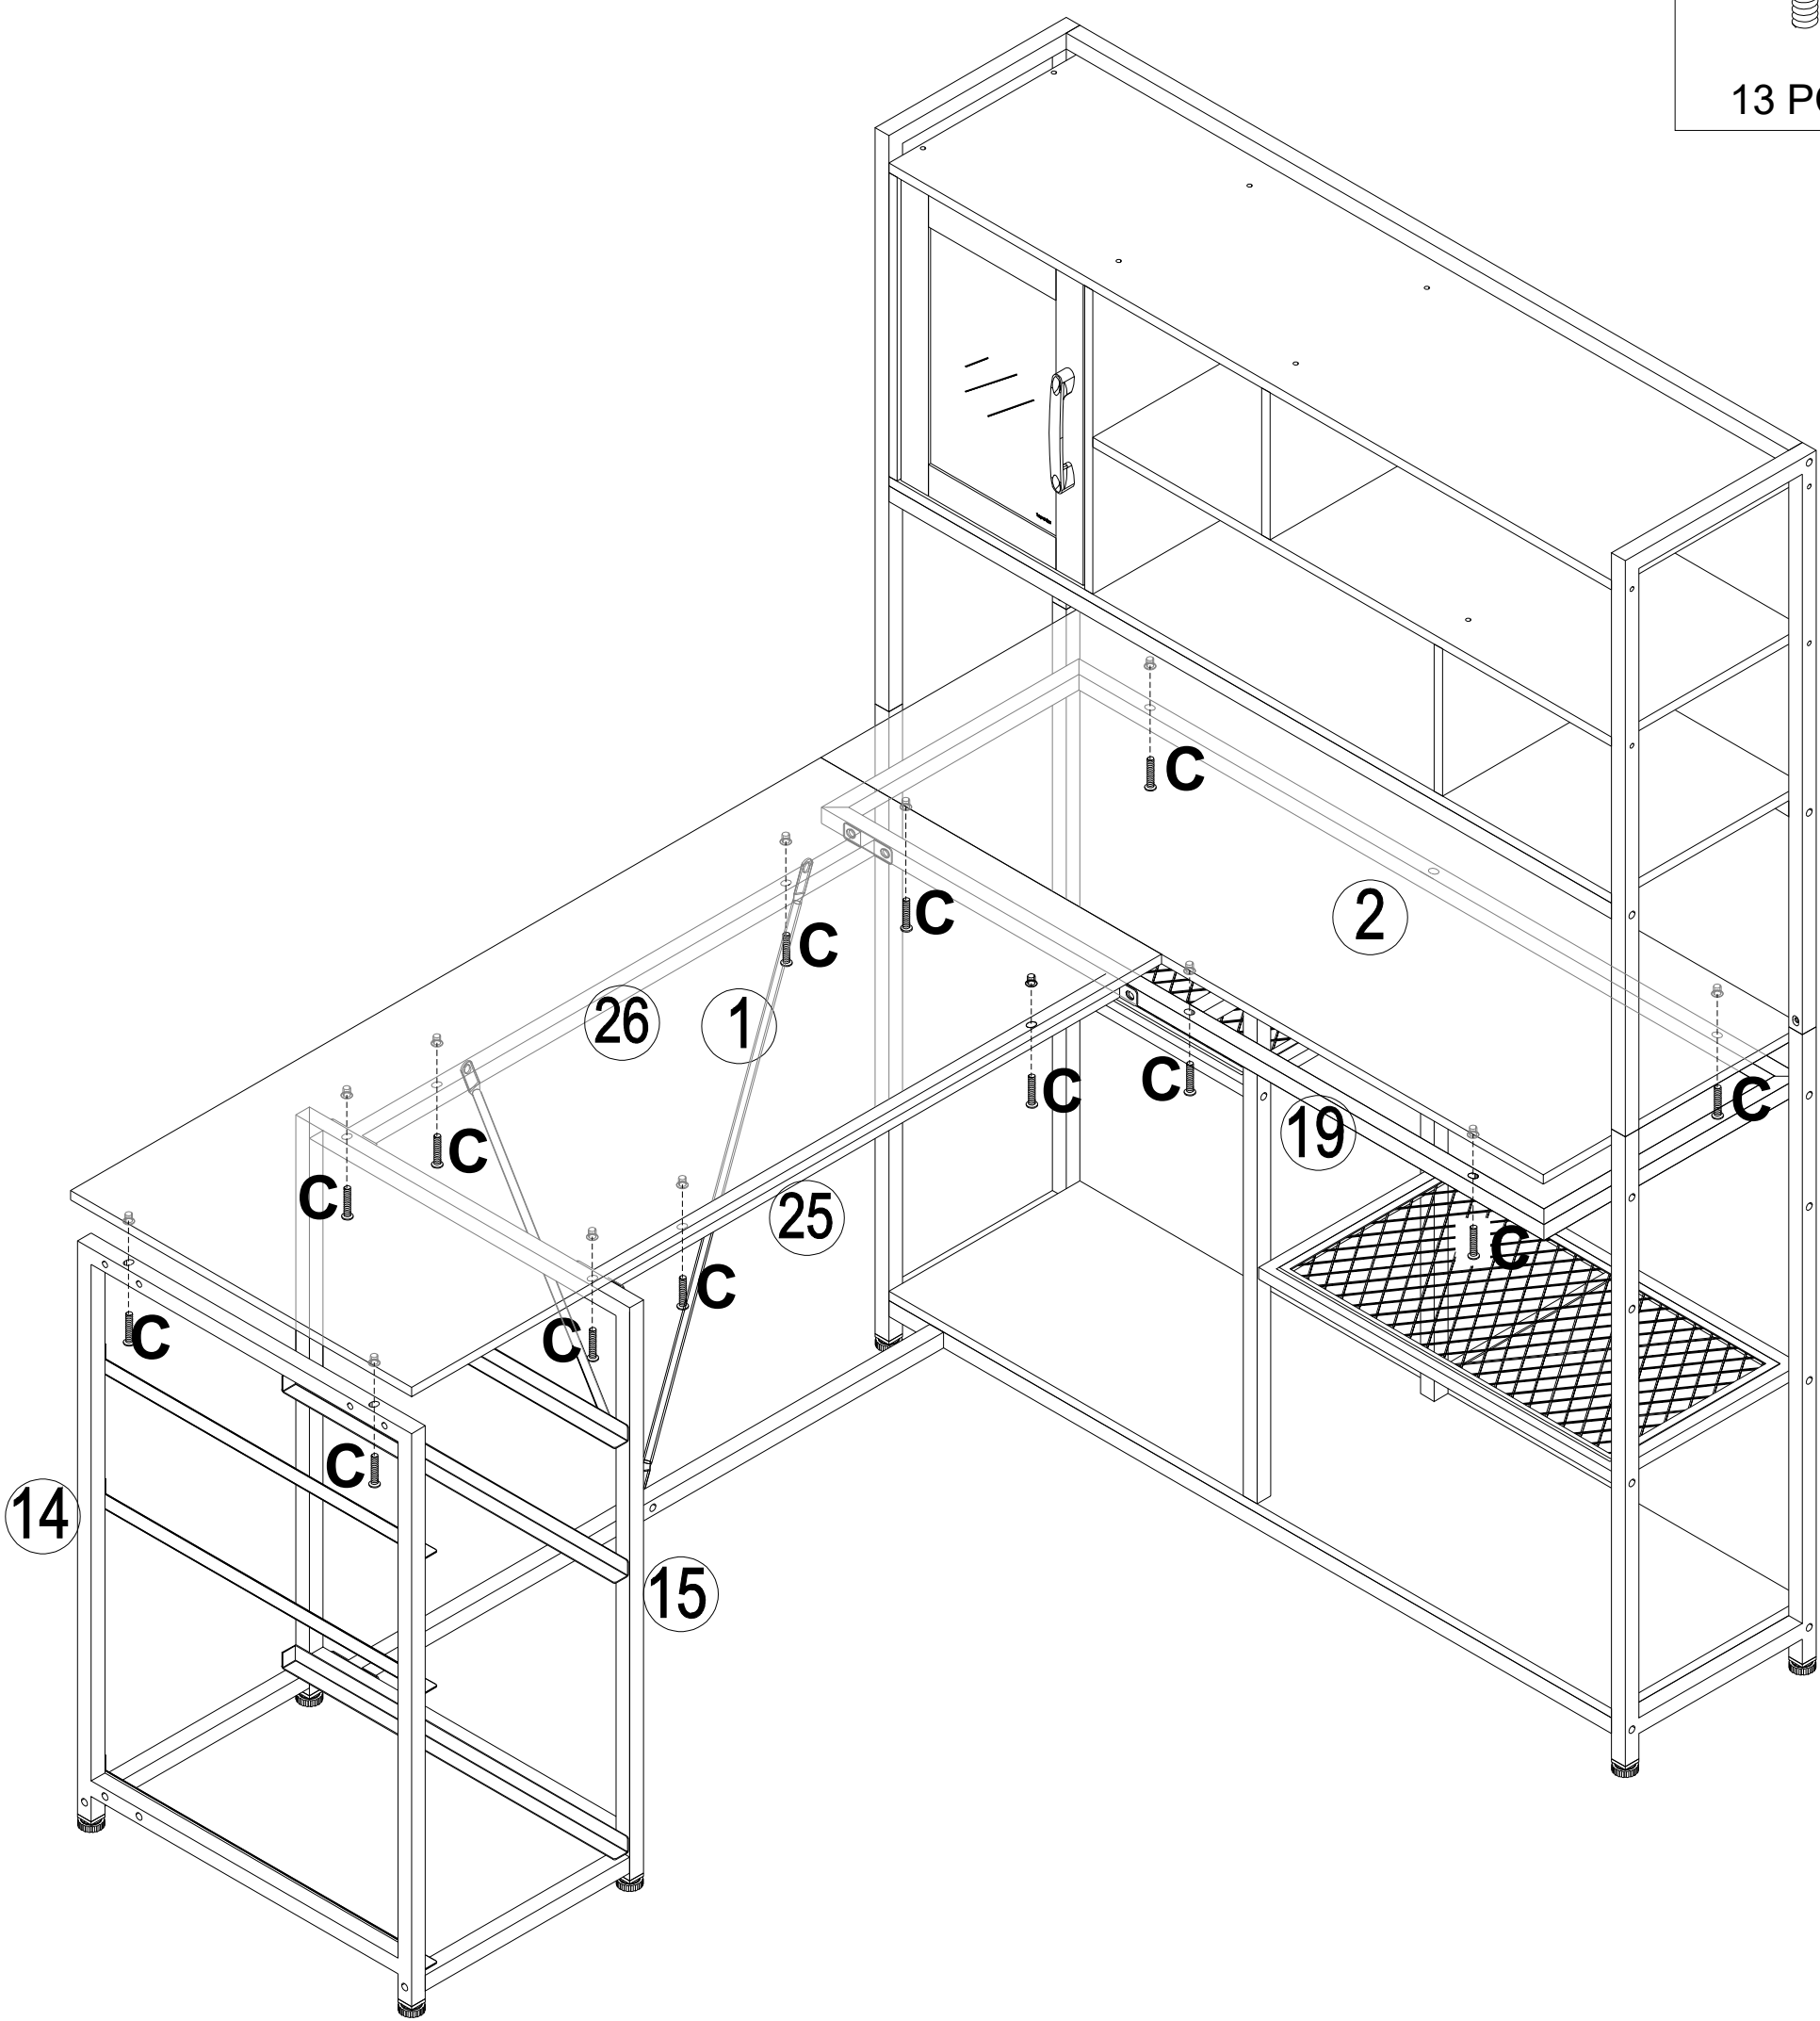


26

3

N


Tear off the tape and apply it to the plate, Then press it firmly with your hand

N

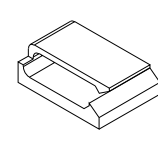

5 PCS

O



1 PC

2

O

1

N

N




N

N

O

N

O

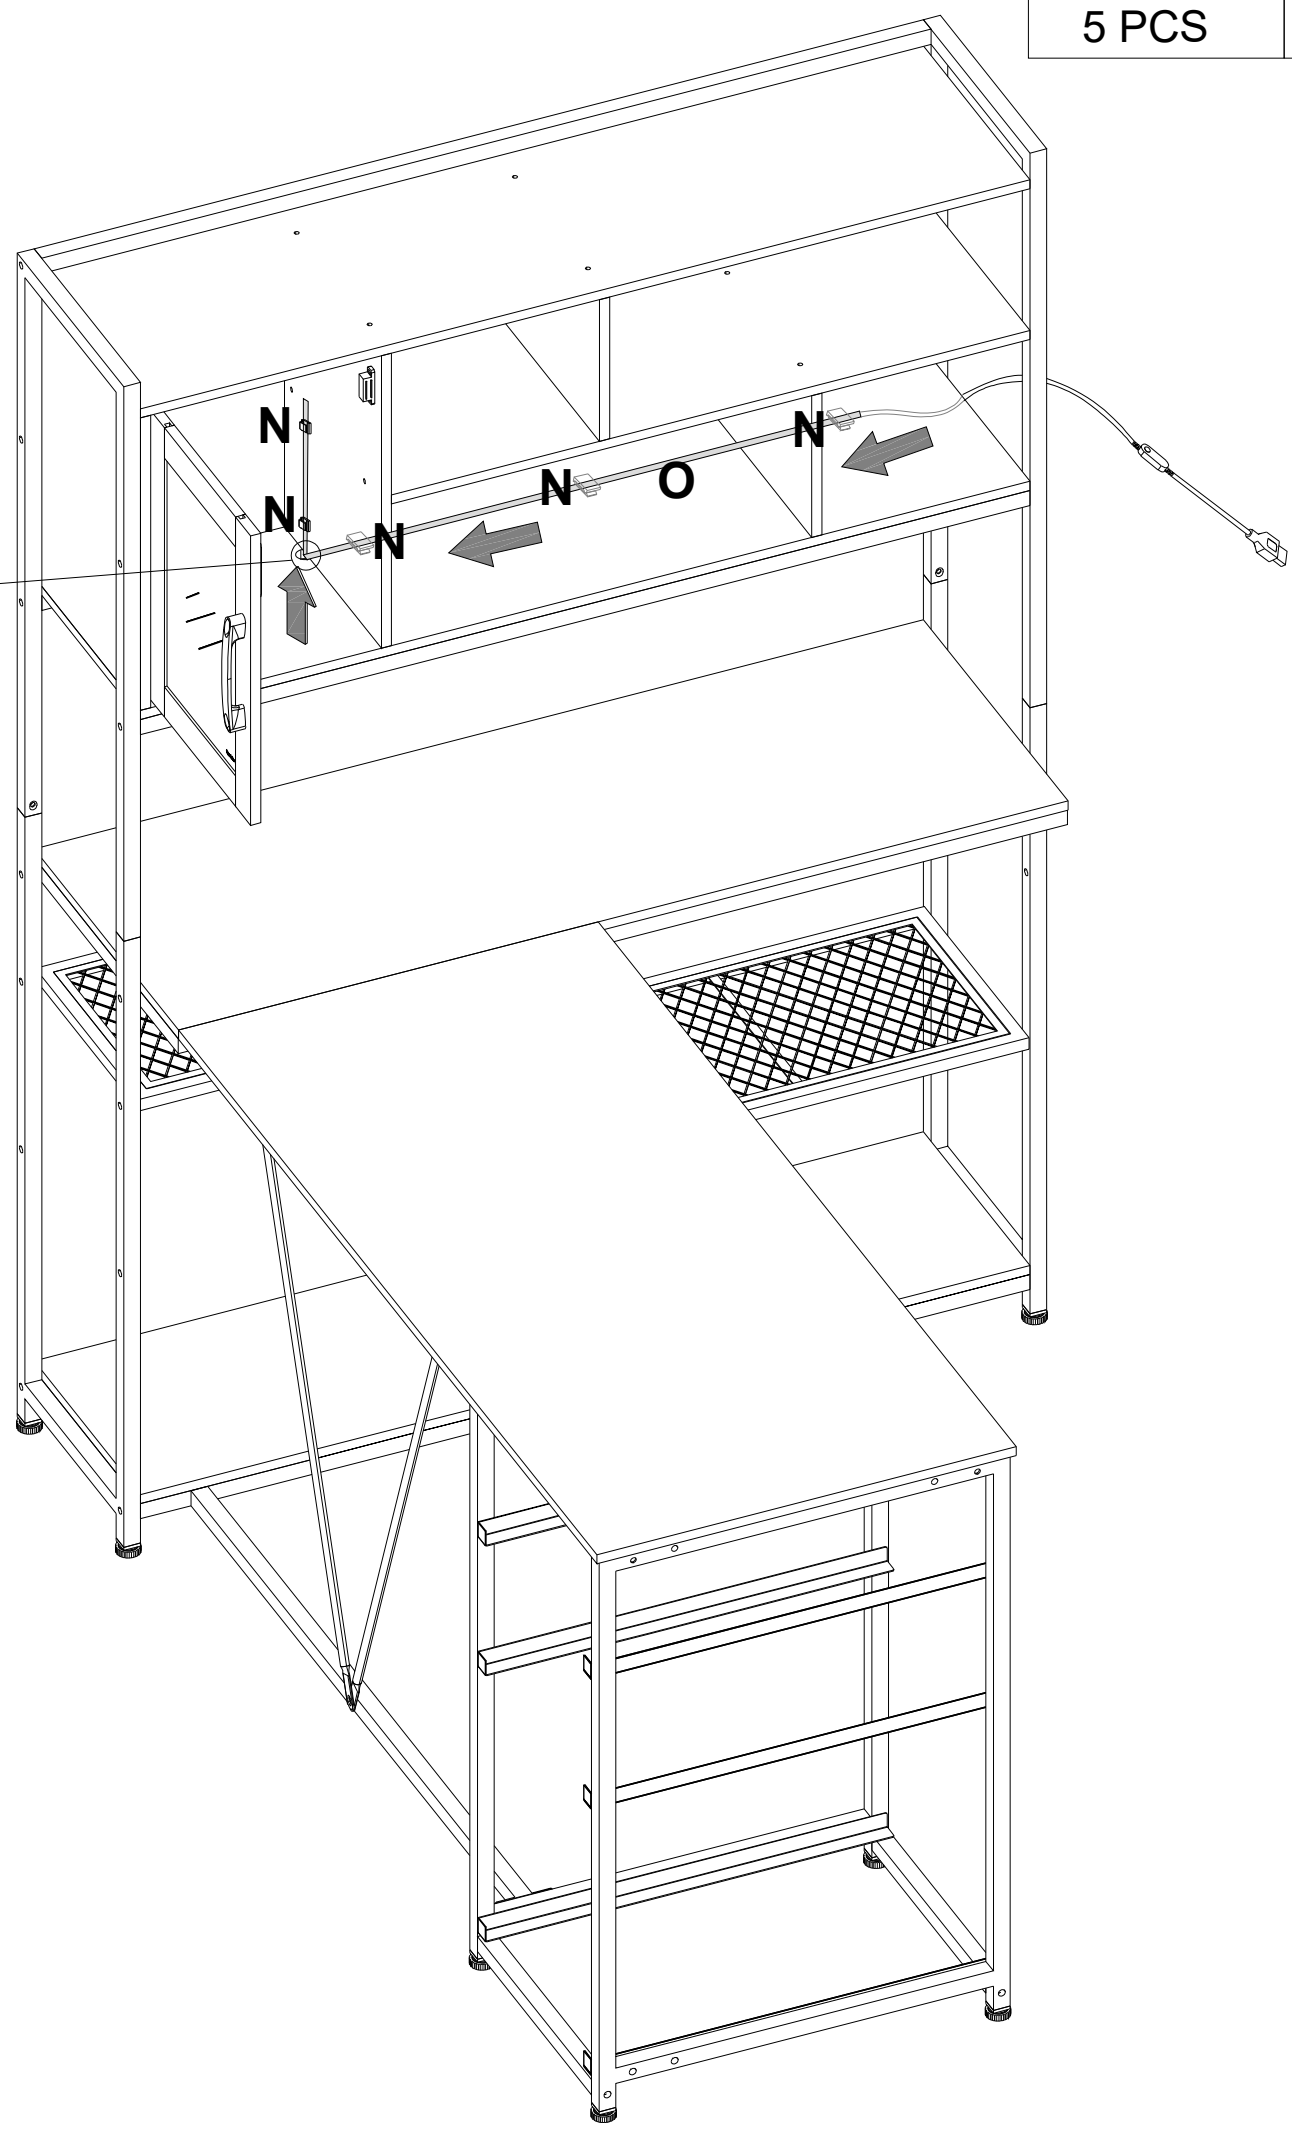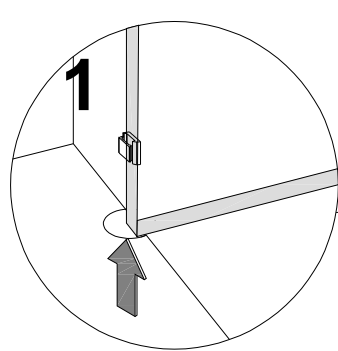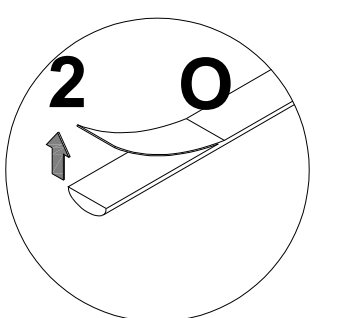

27




R M5X42

S Ø15X10




4 PCS

4 PCS

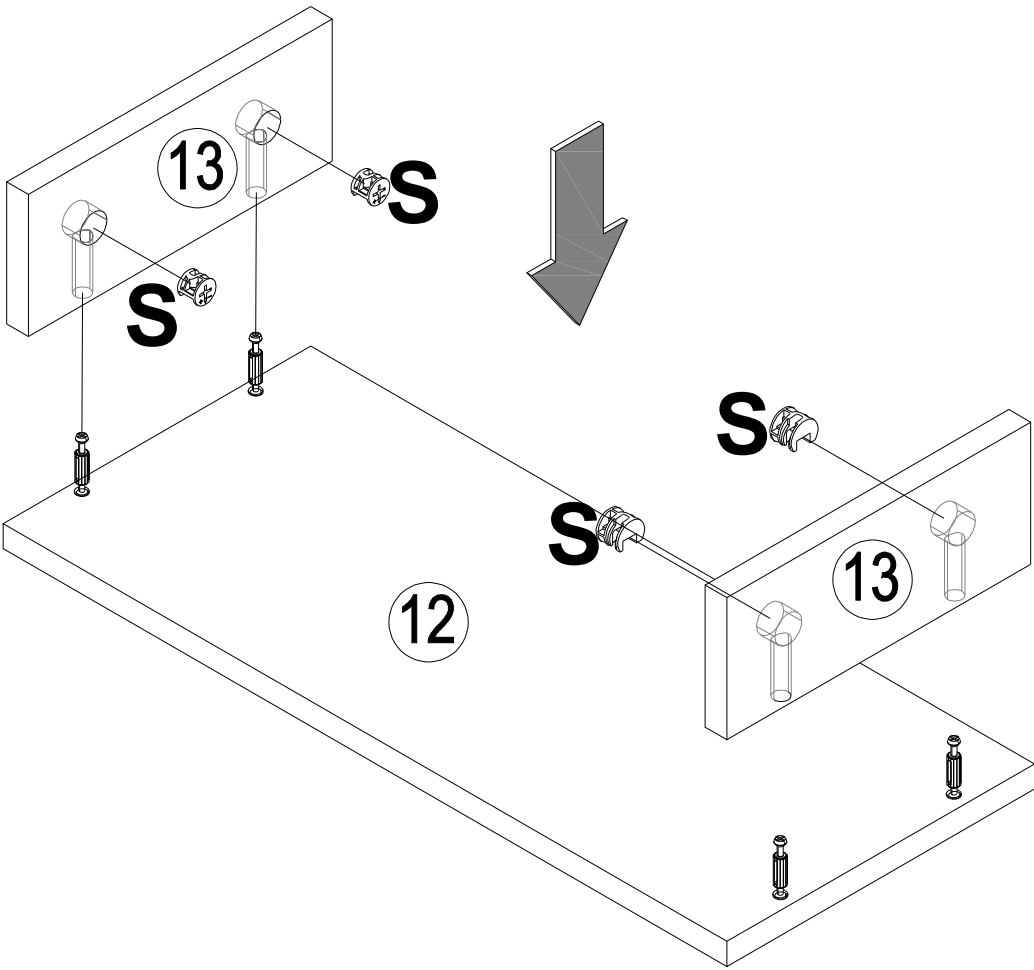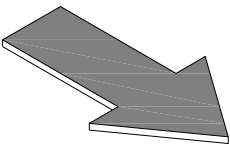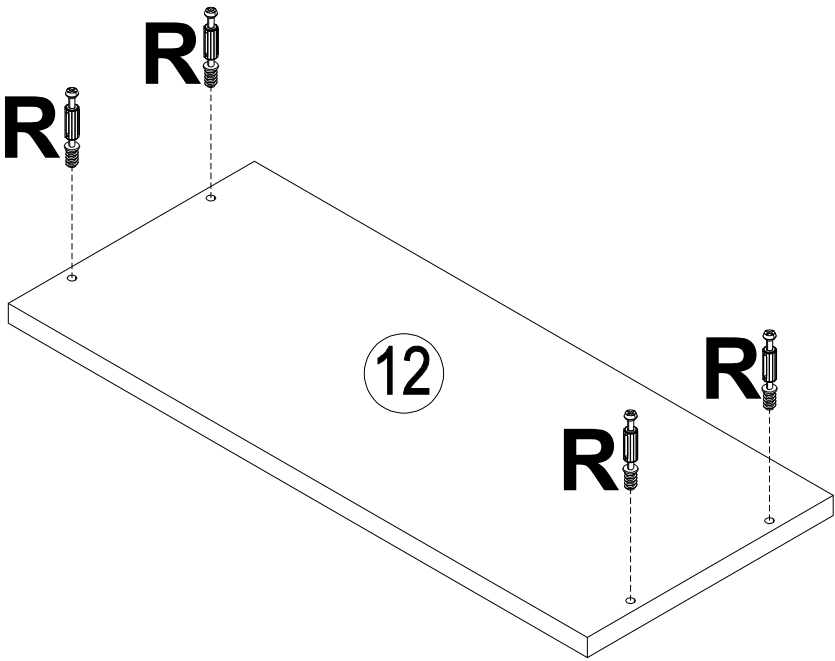



28

F M6X12






2 PCS

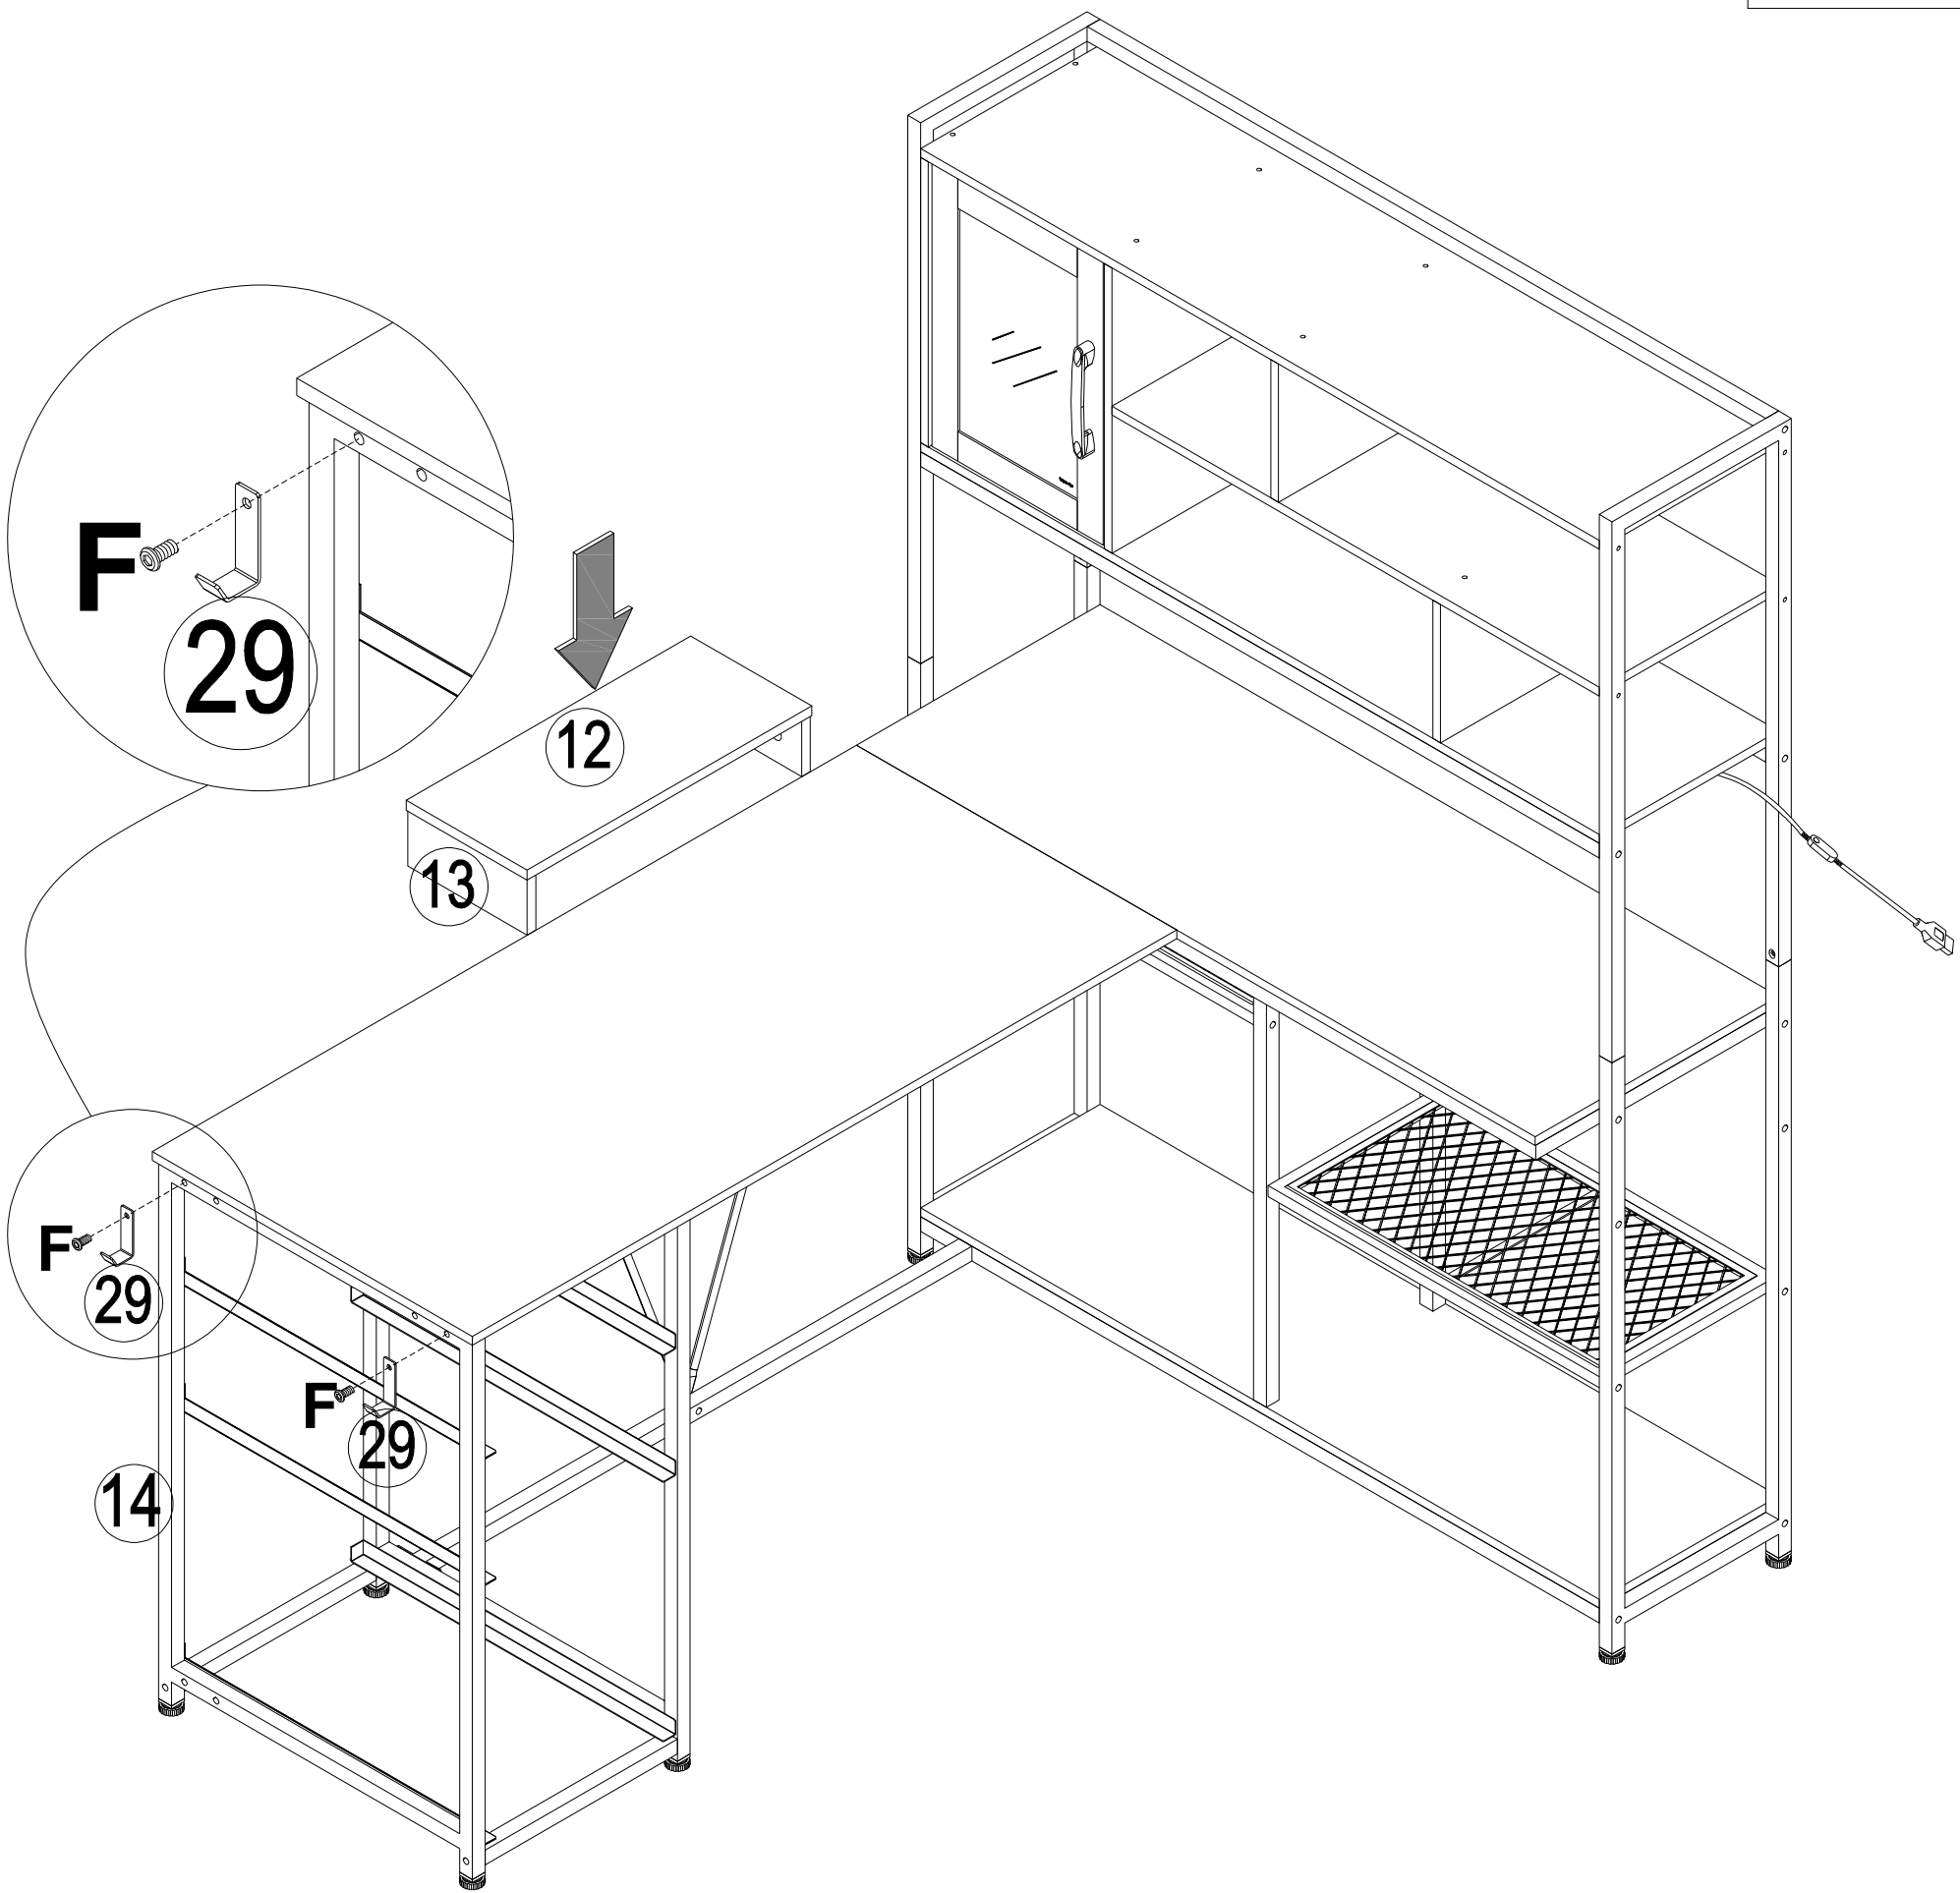

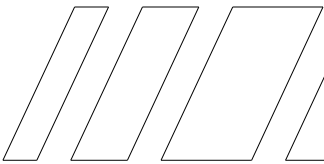


29

I	P M4X10
	
2 PCS	4 PCS

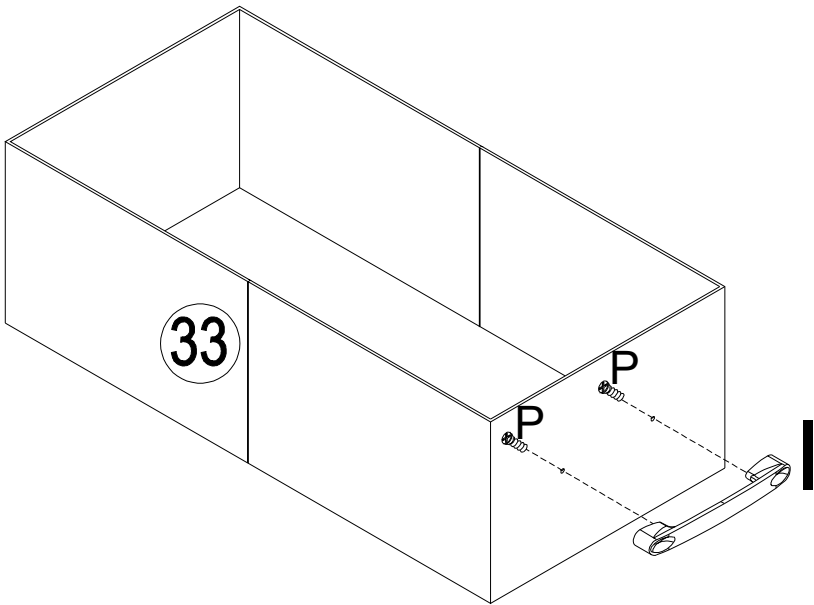
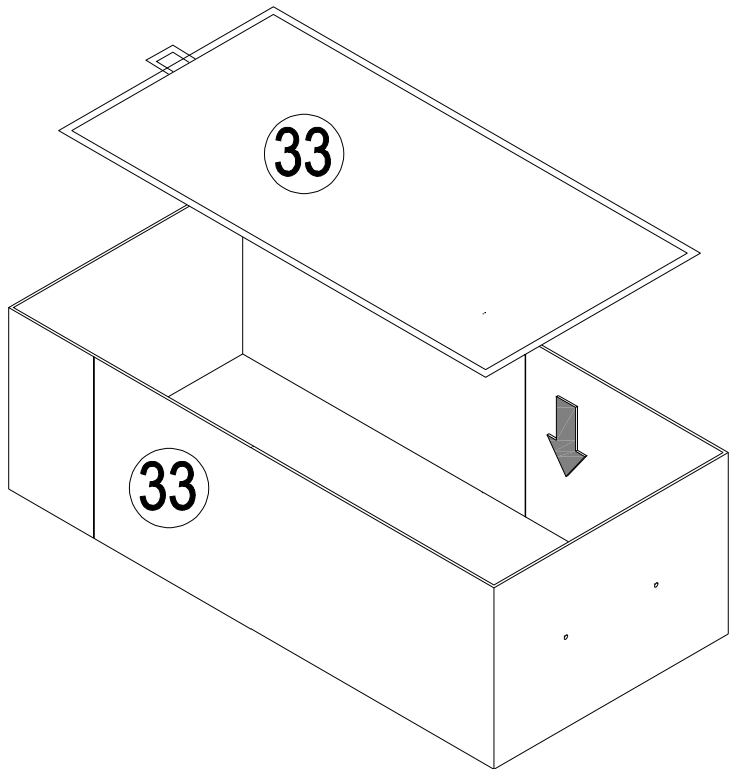


x 2


30


I	P M4X10	Q M6X12
		
1 PCS	2 PCS	4 PCS

legal A4 letter

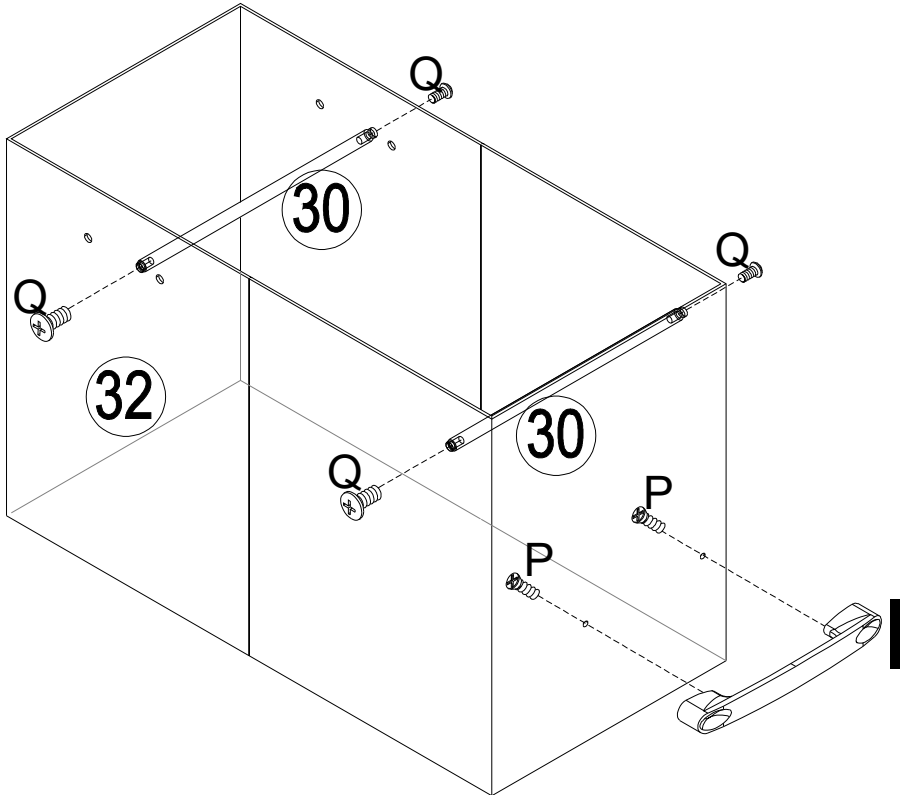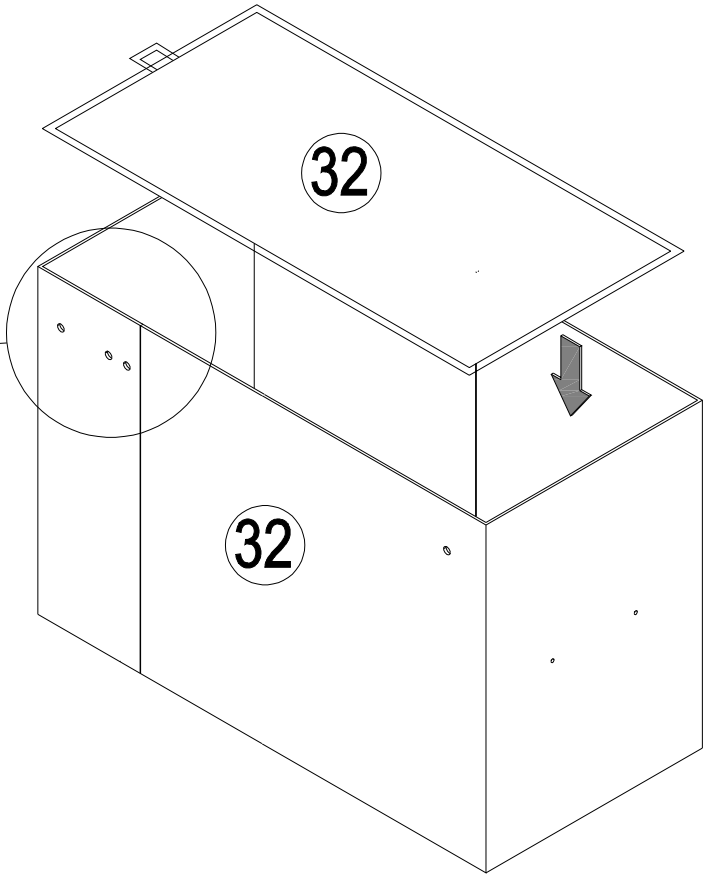



31

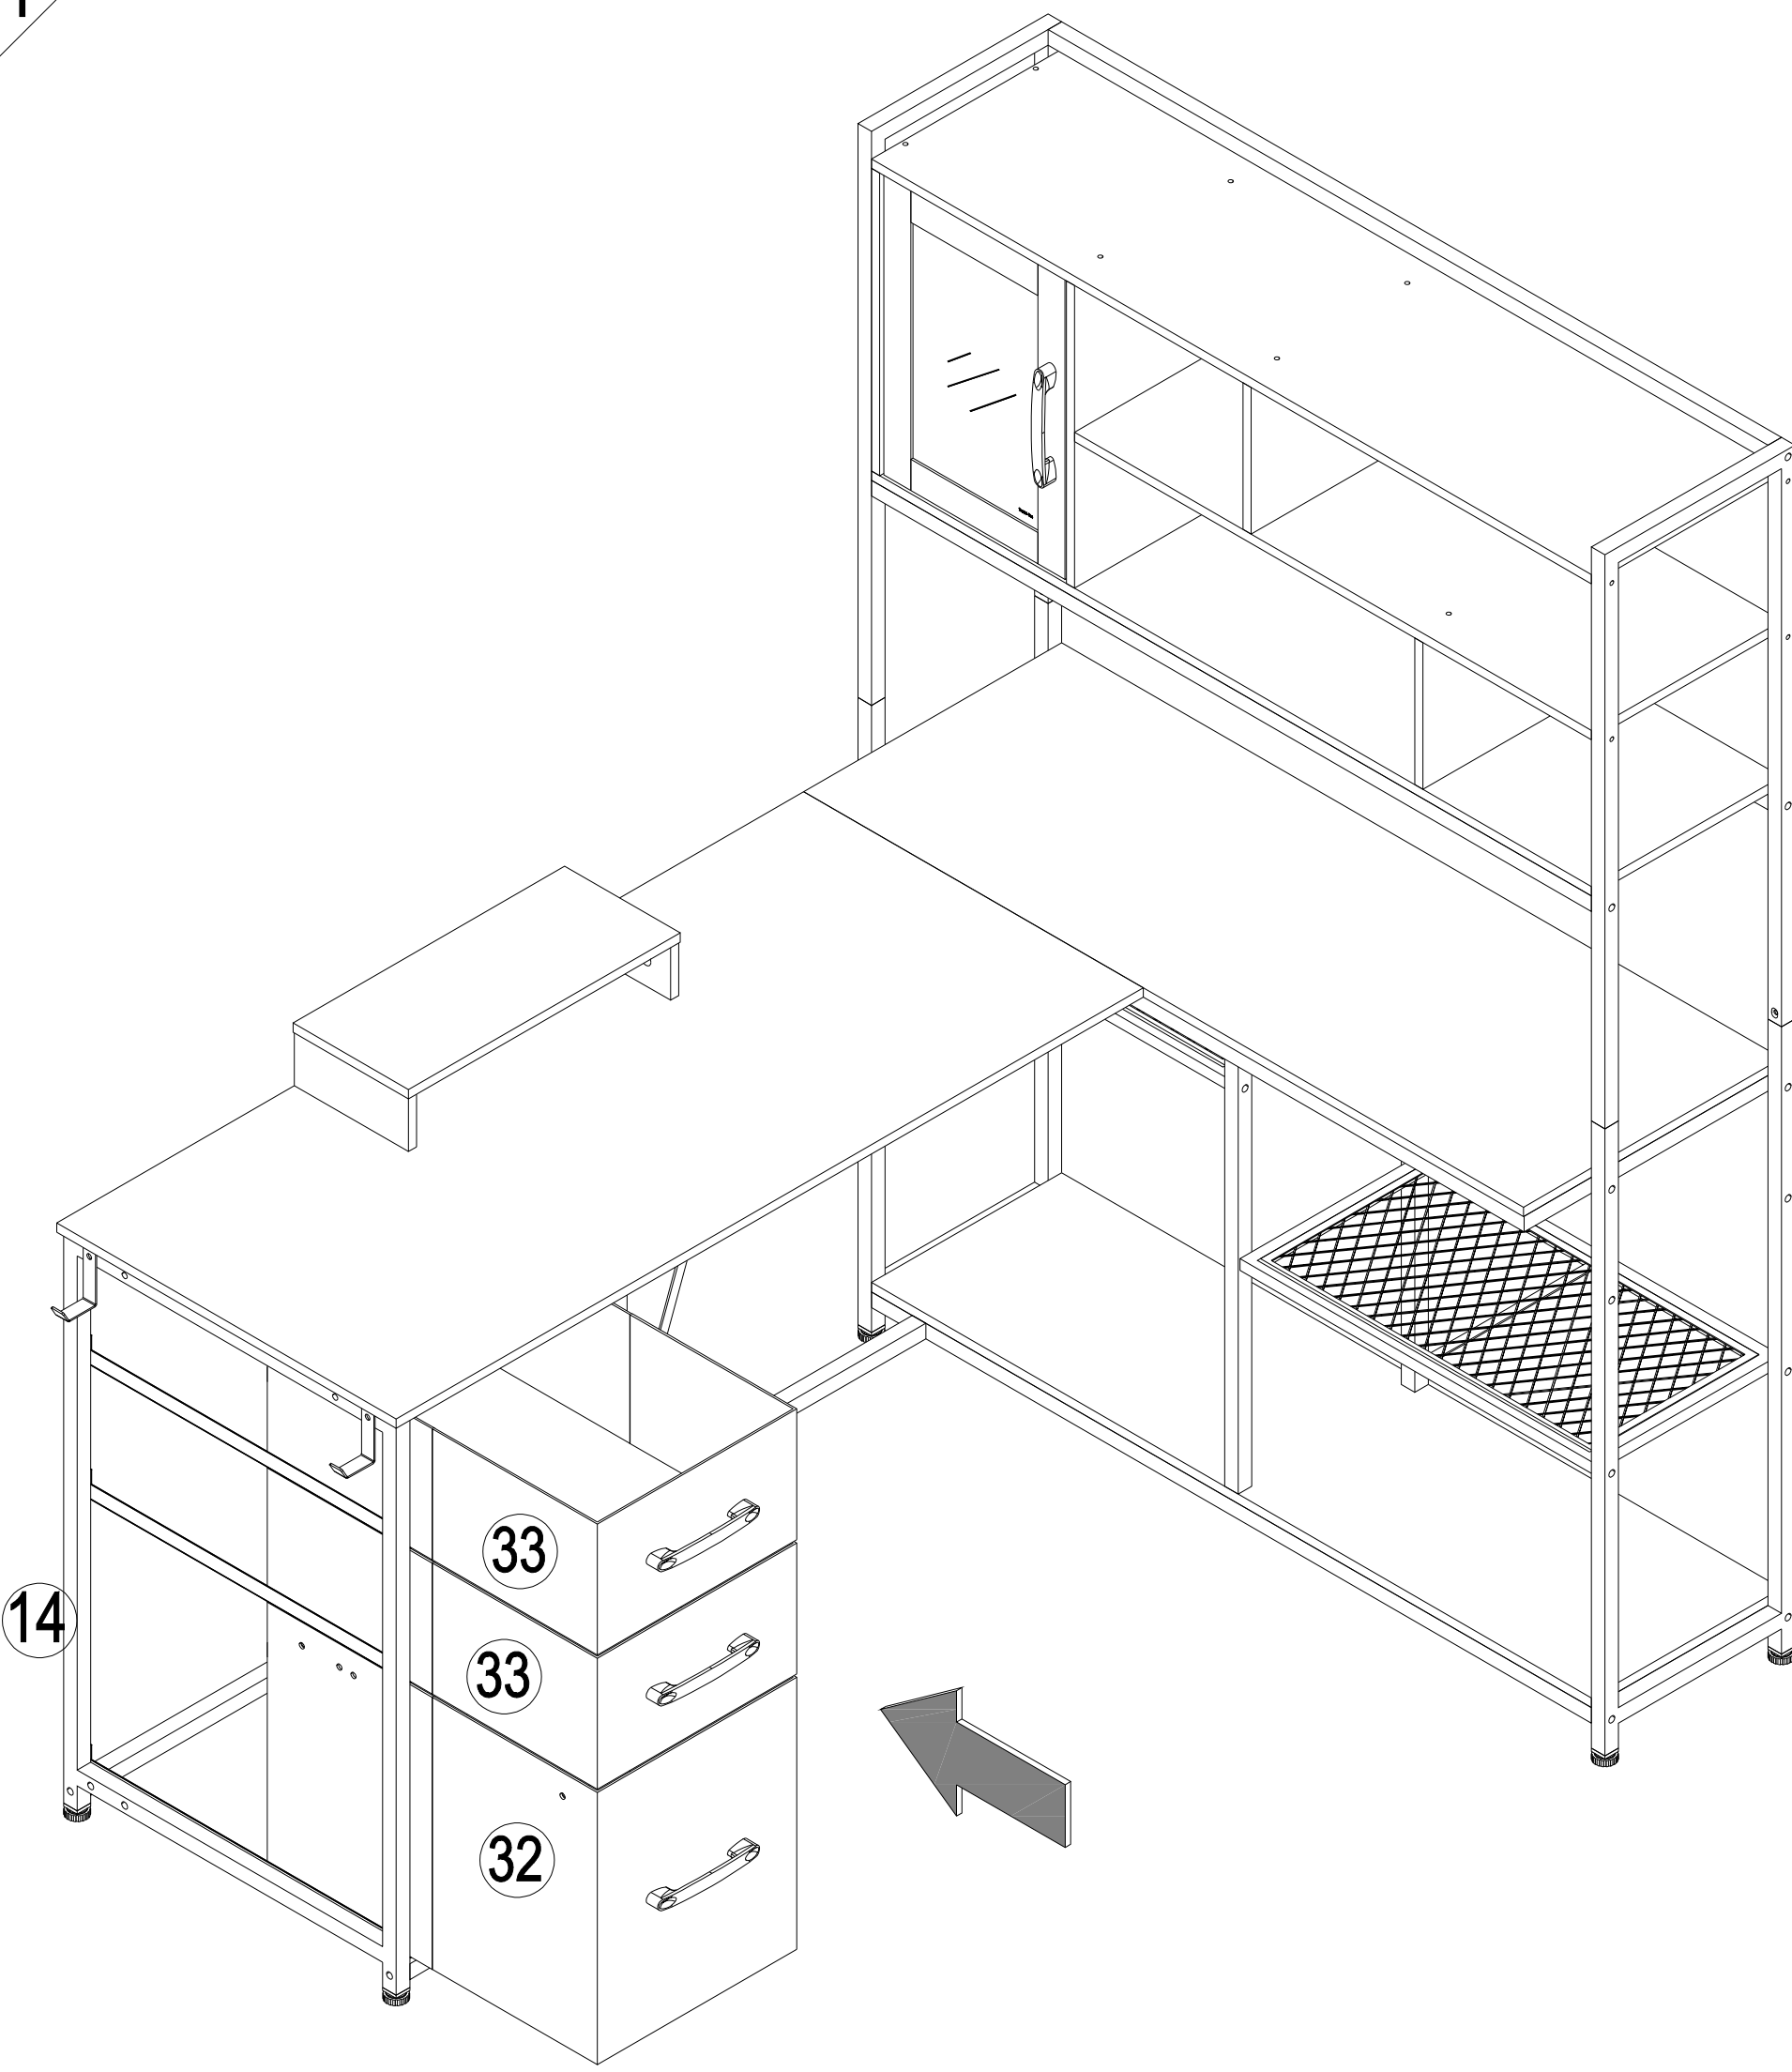


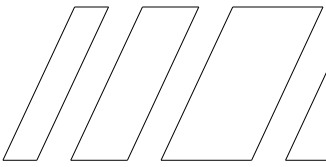


Option B

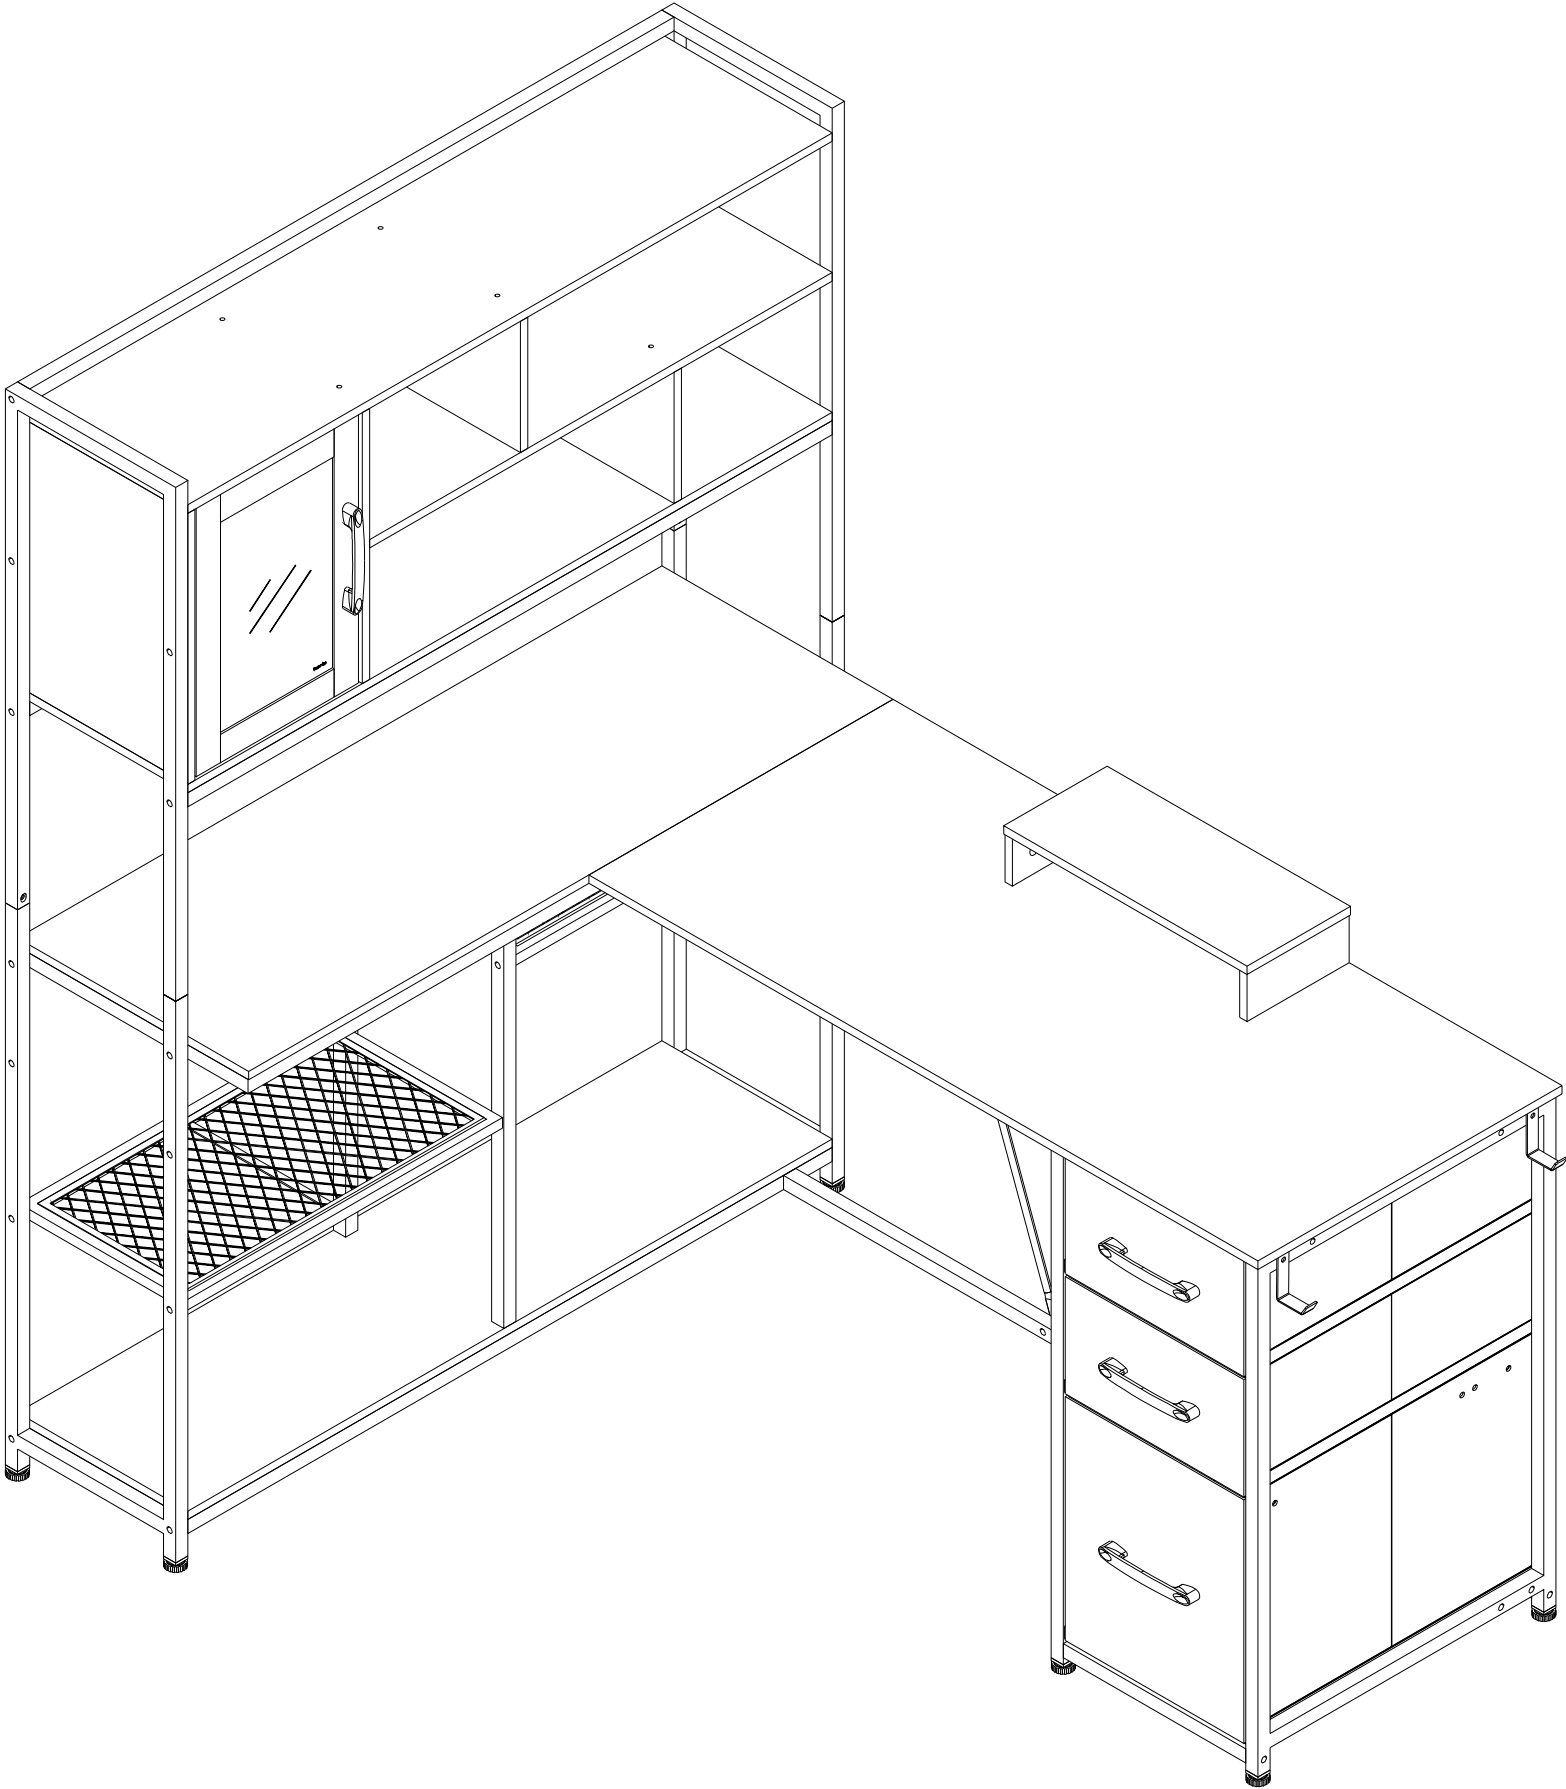


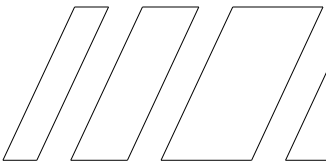

1

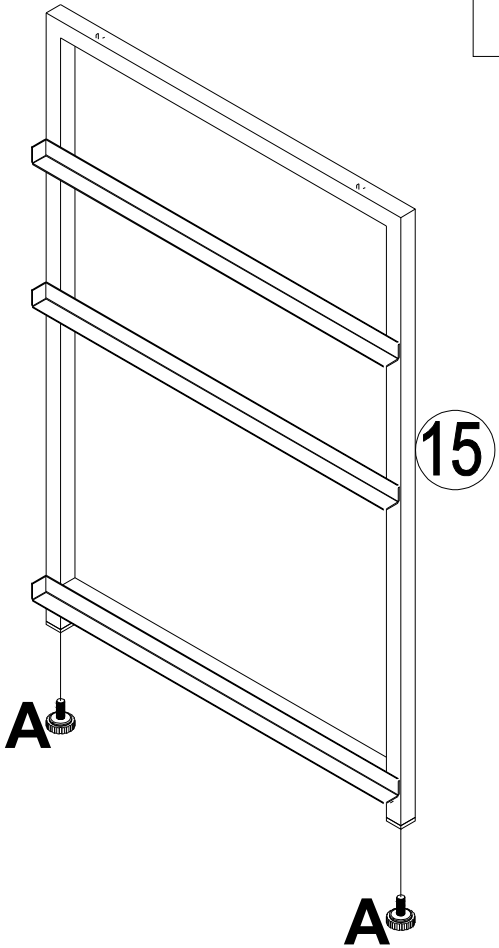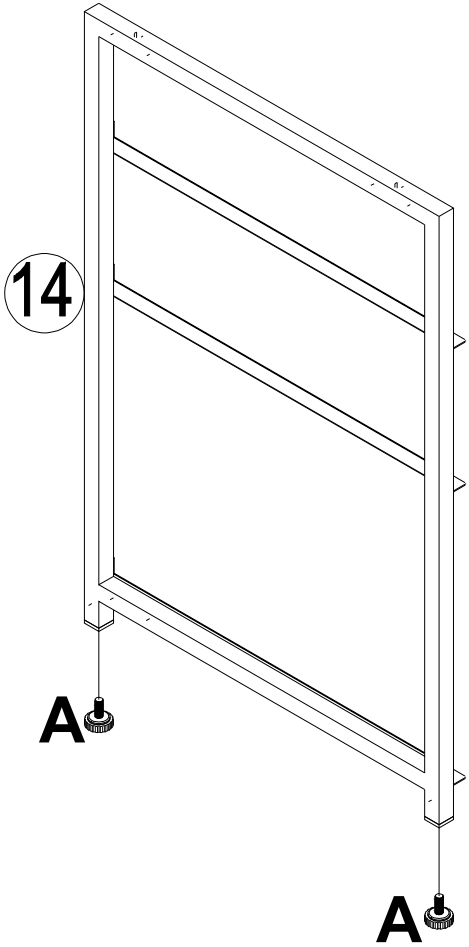


A M6




4 PCS

2

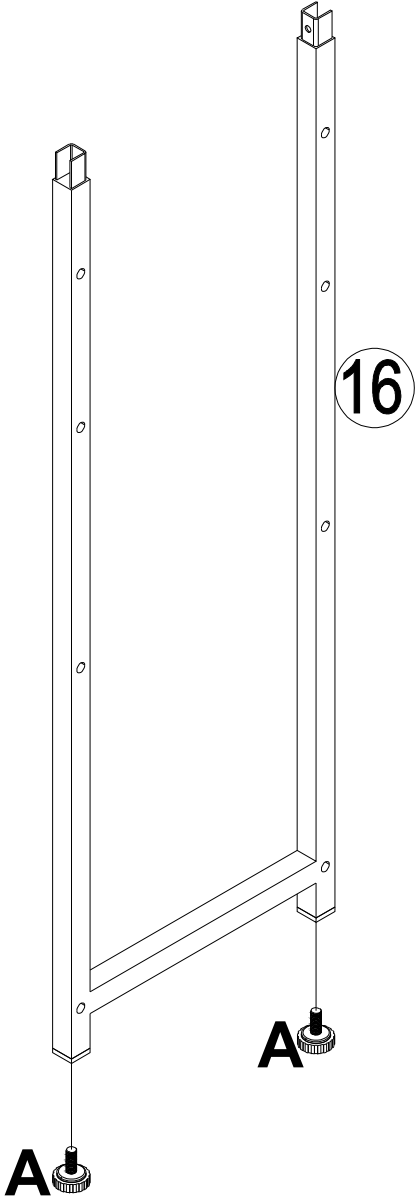


A M6




4 PCS

x 2

3

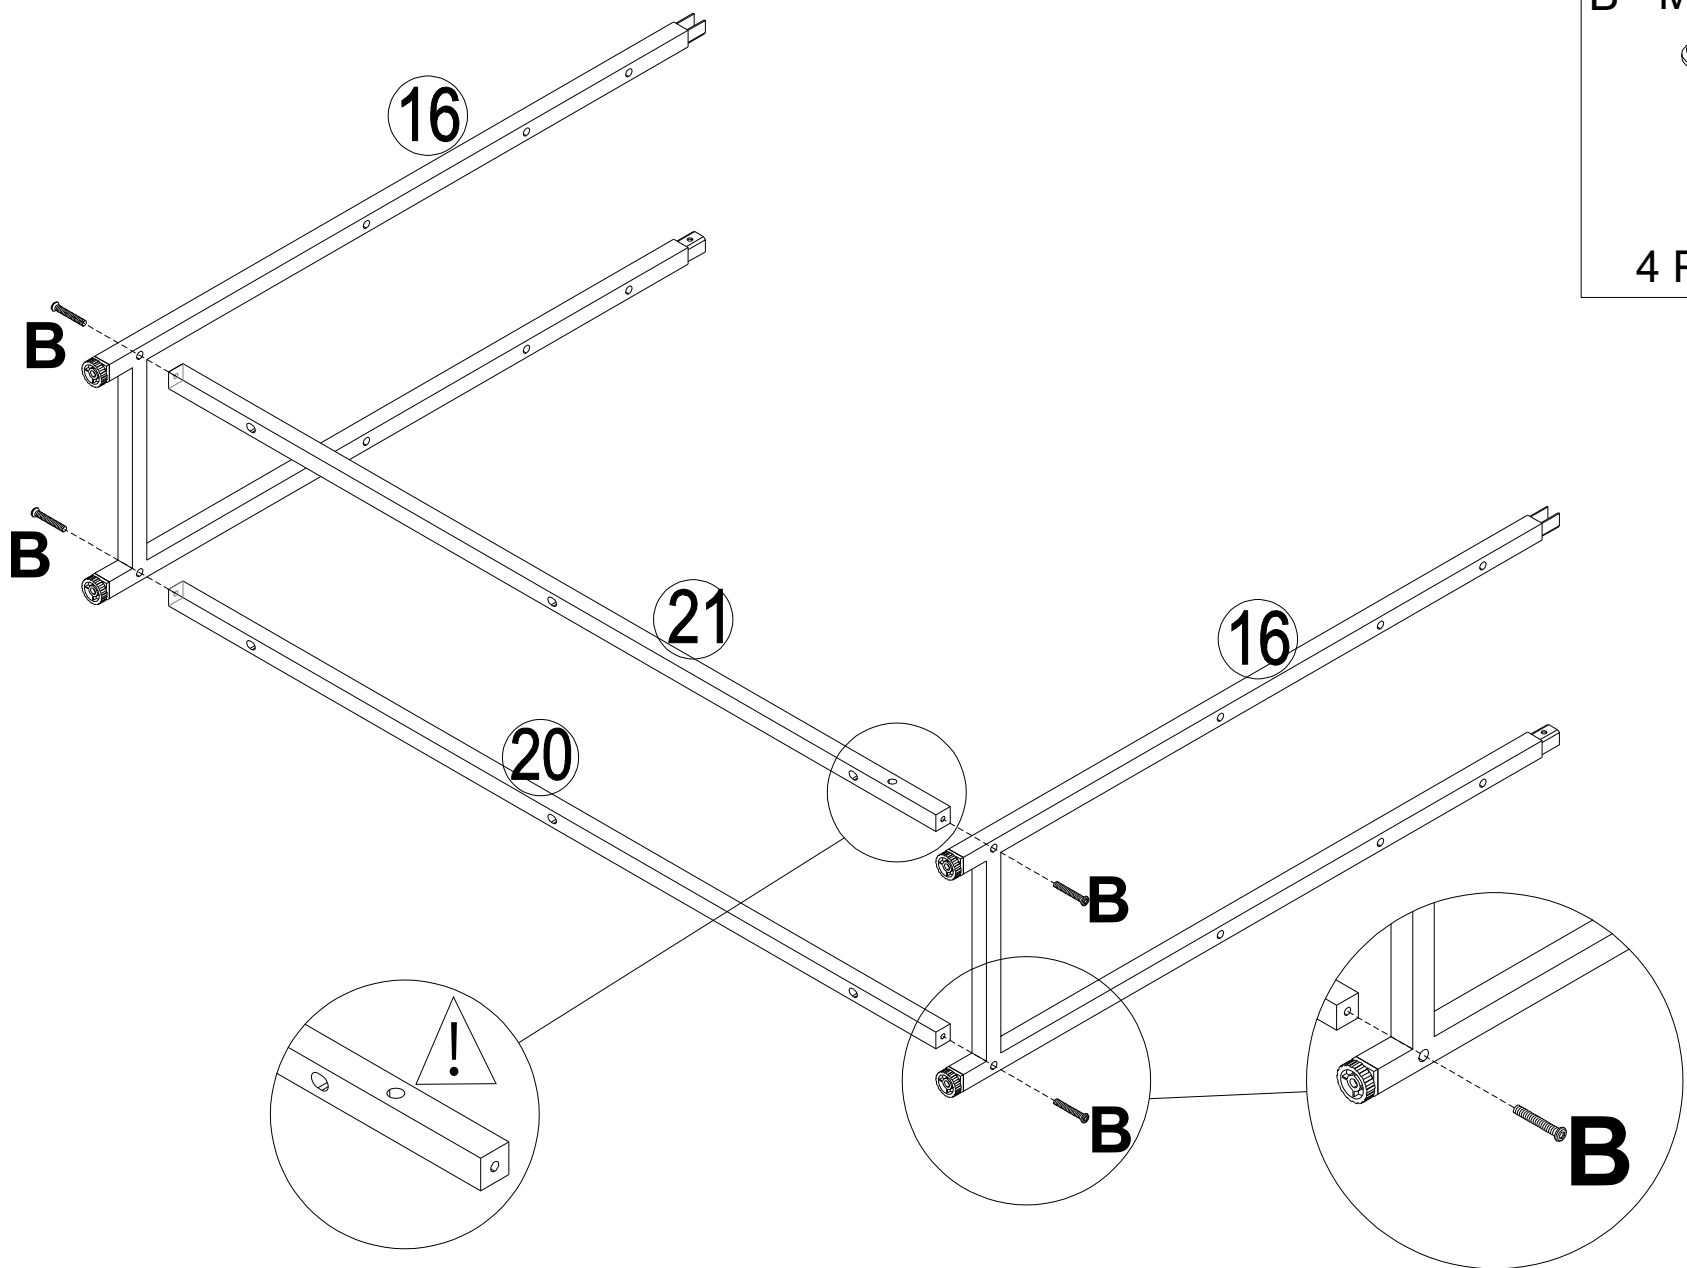


B M6X40




4 PCS

4

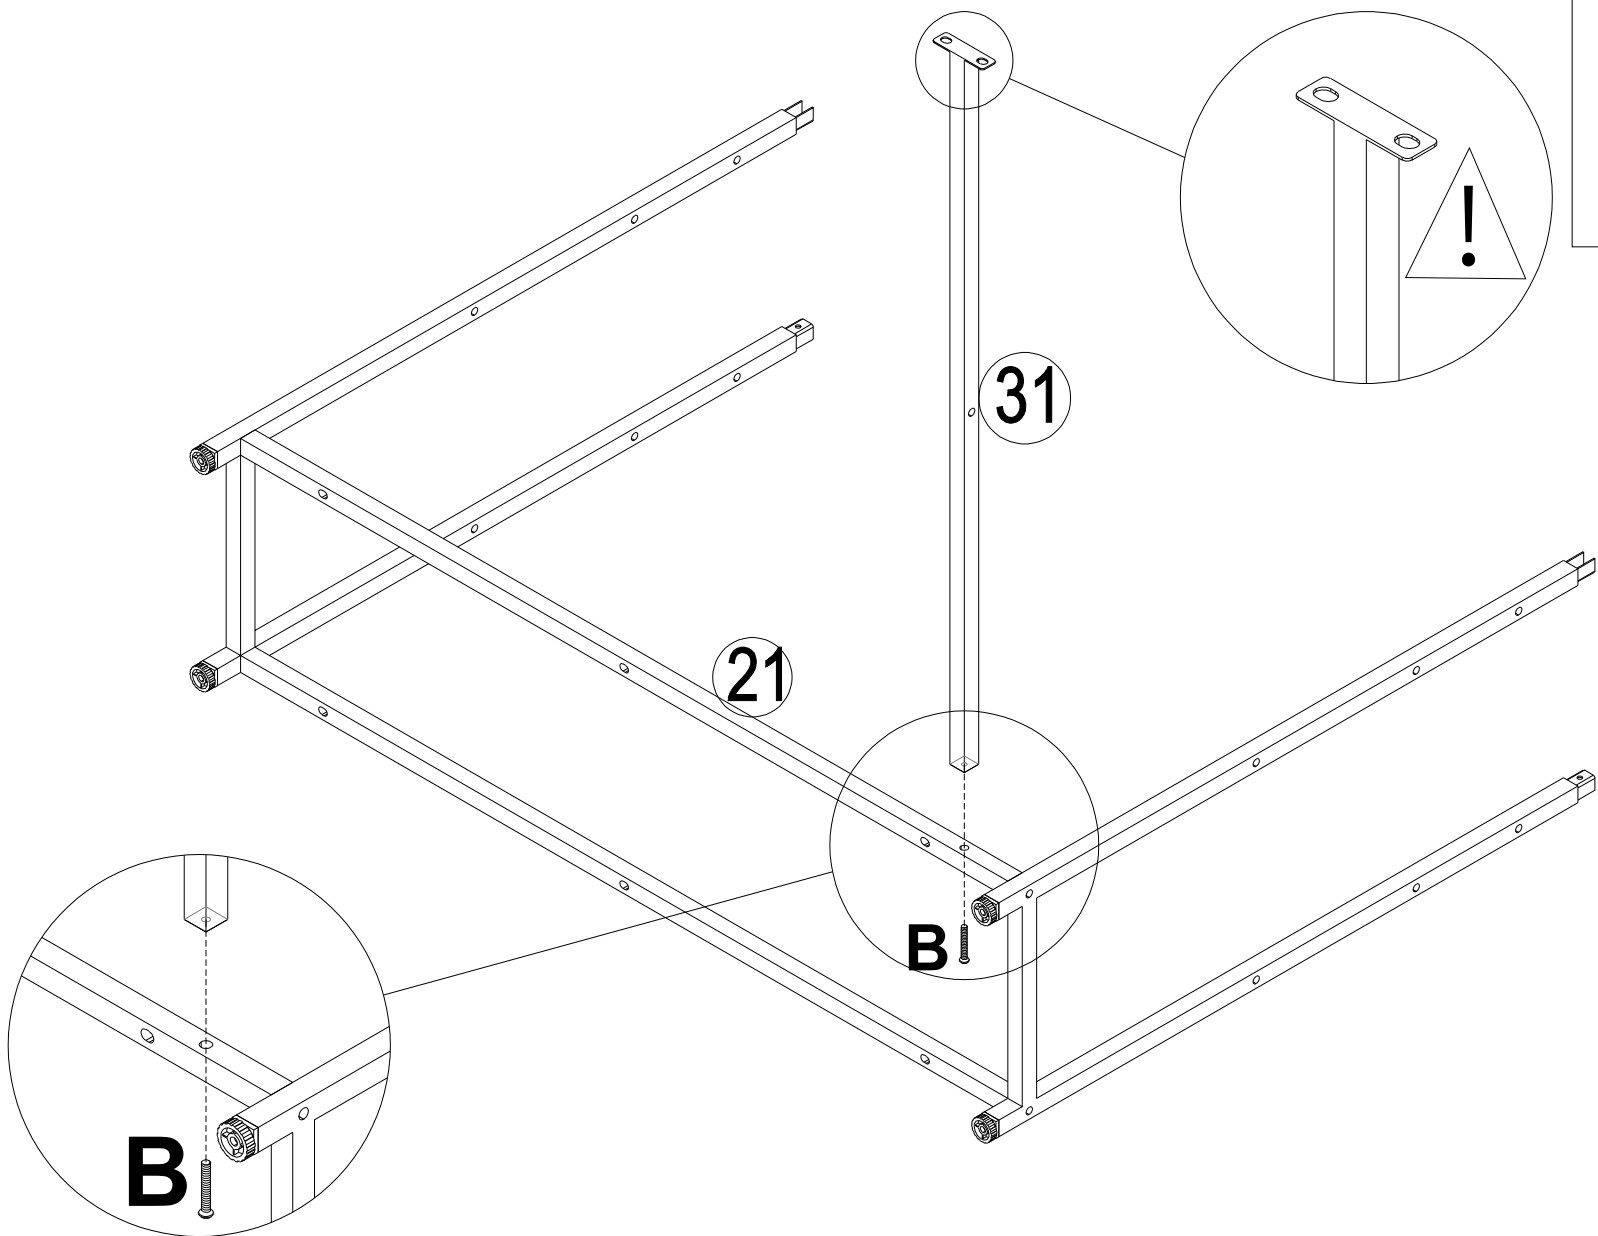


B M6X40




1 PCS

5

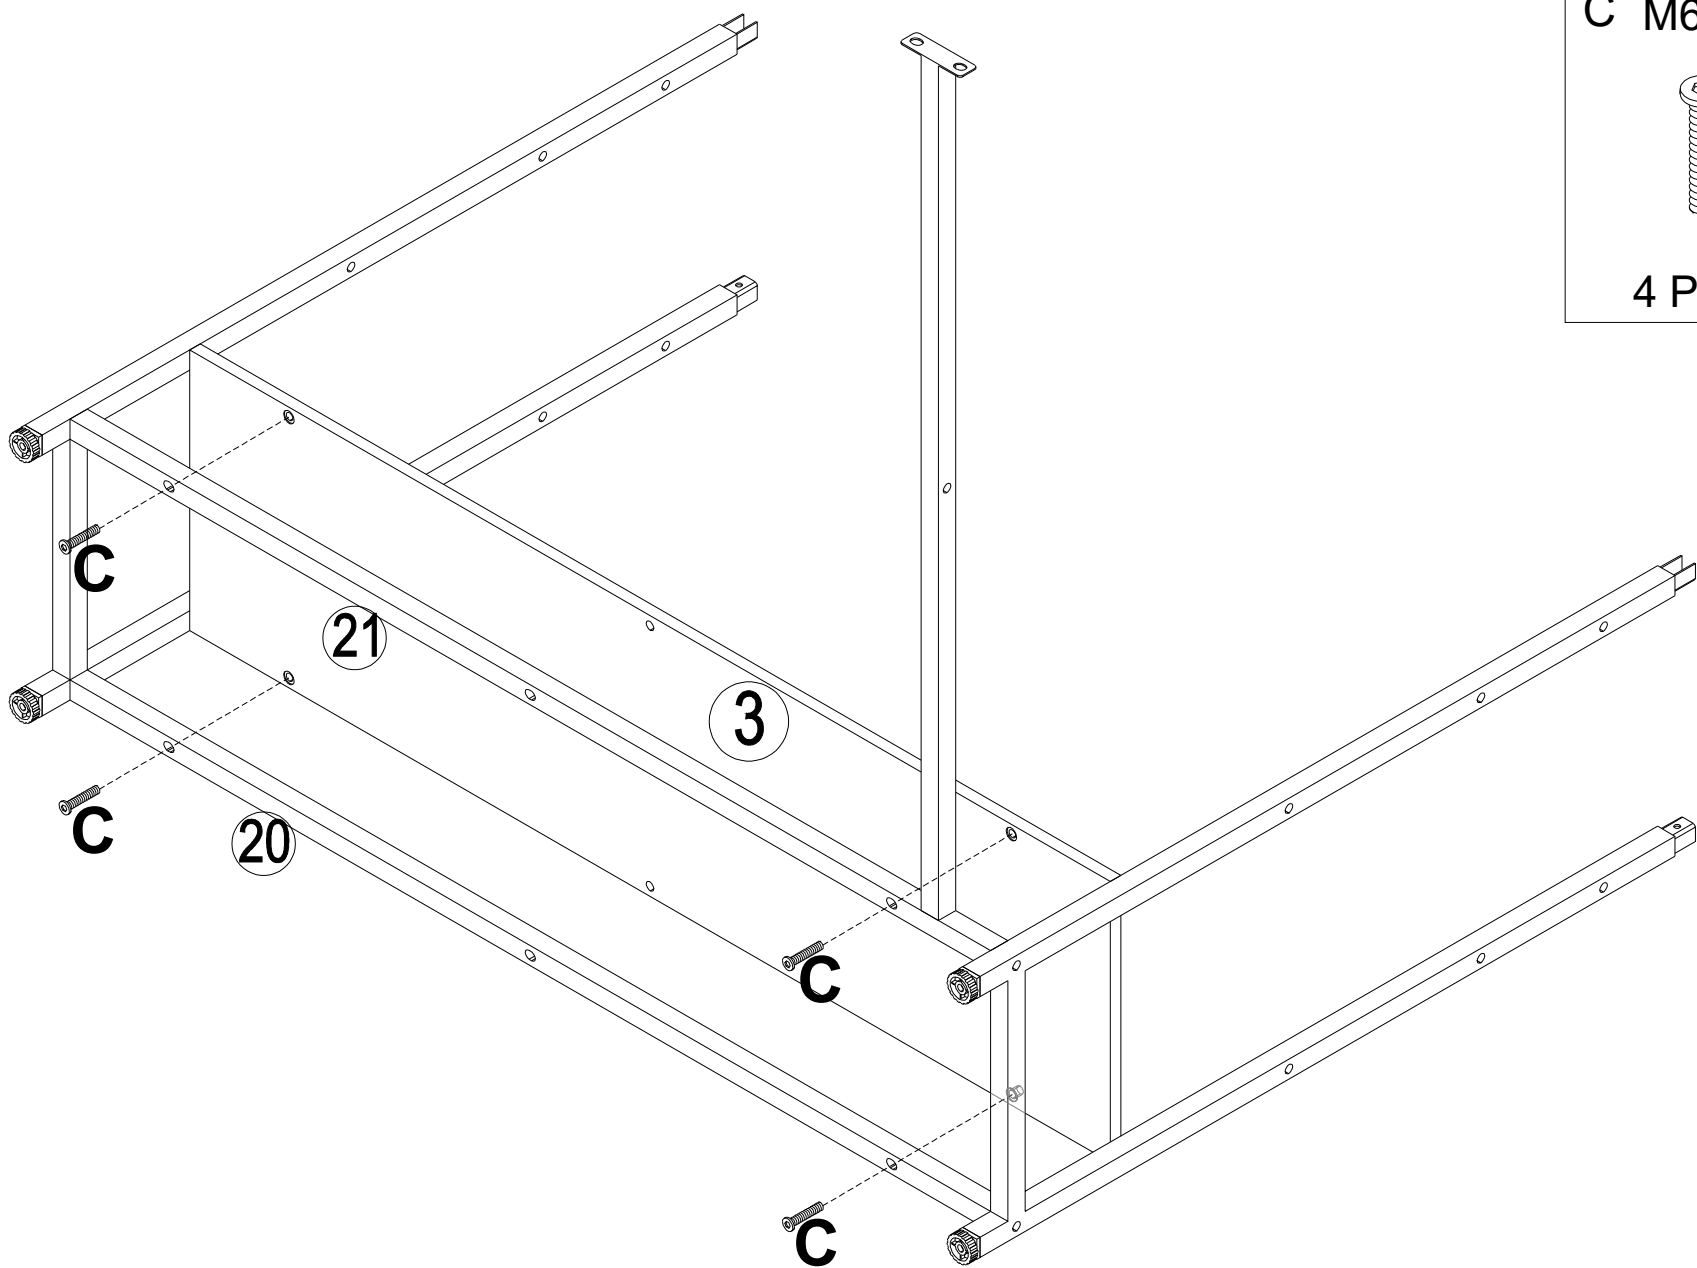


C M6X28




4 PCS

6

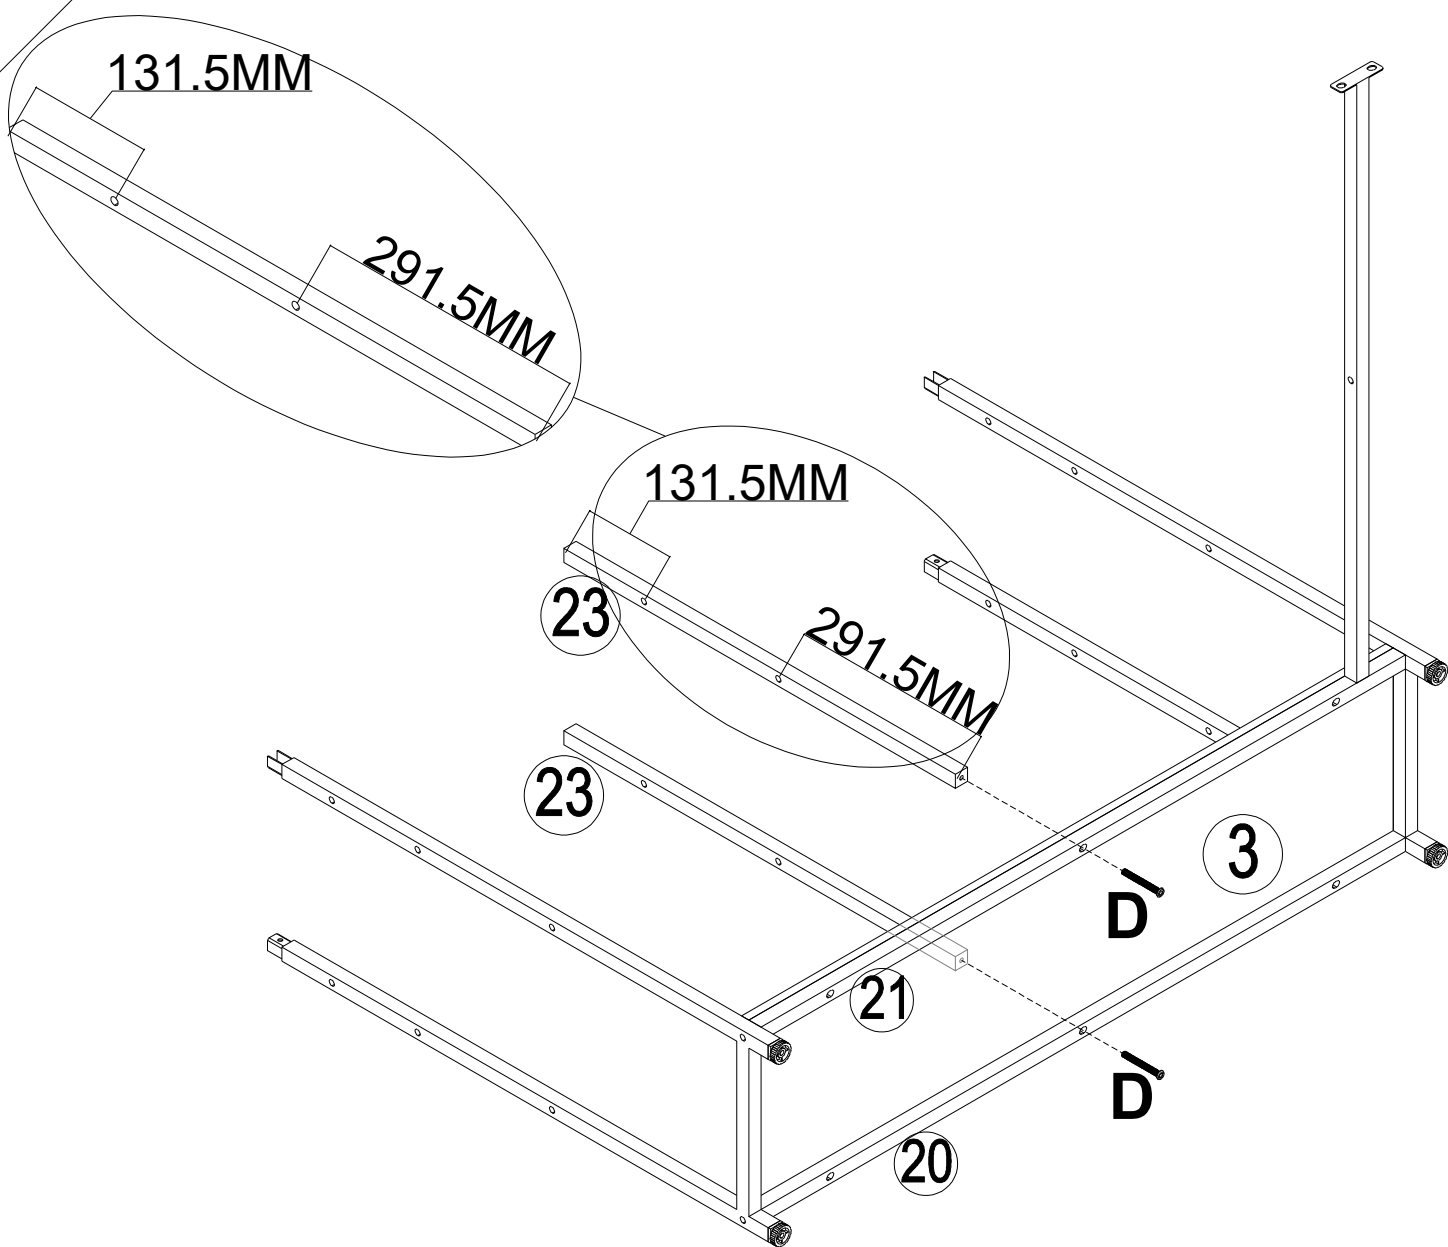


D M6X50




2 PCS



7


The iron mesh can be installed left and right

B	M6X40
	
8 PCS	

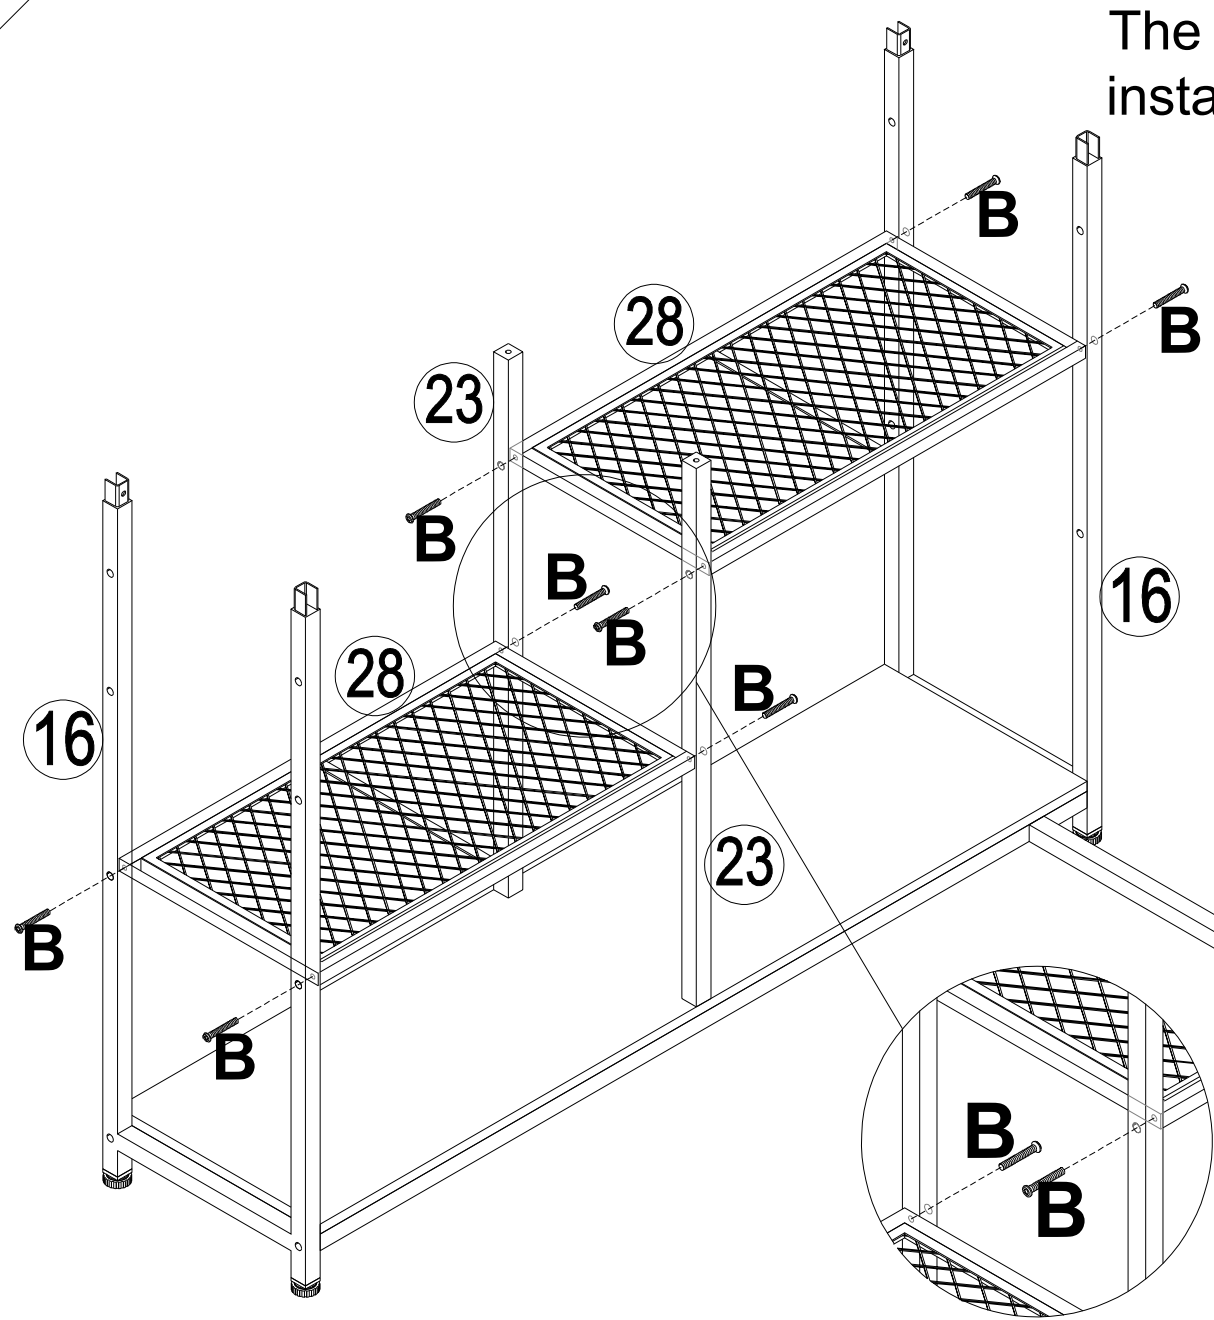

8


B	M6X40	D	M6X50	E	M6
					
4 PCS		2 PCS		2 PCS	

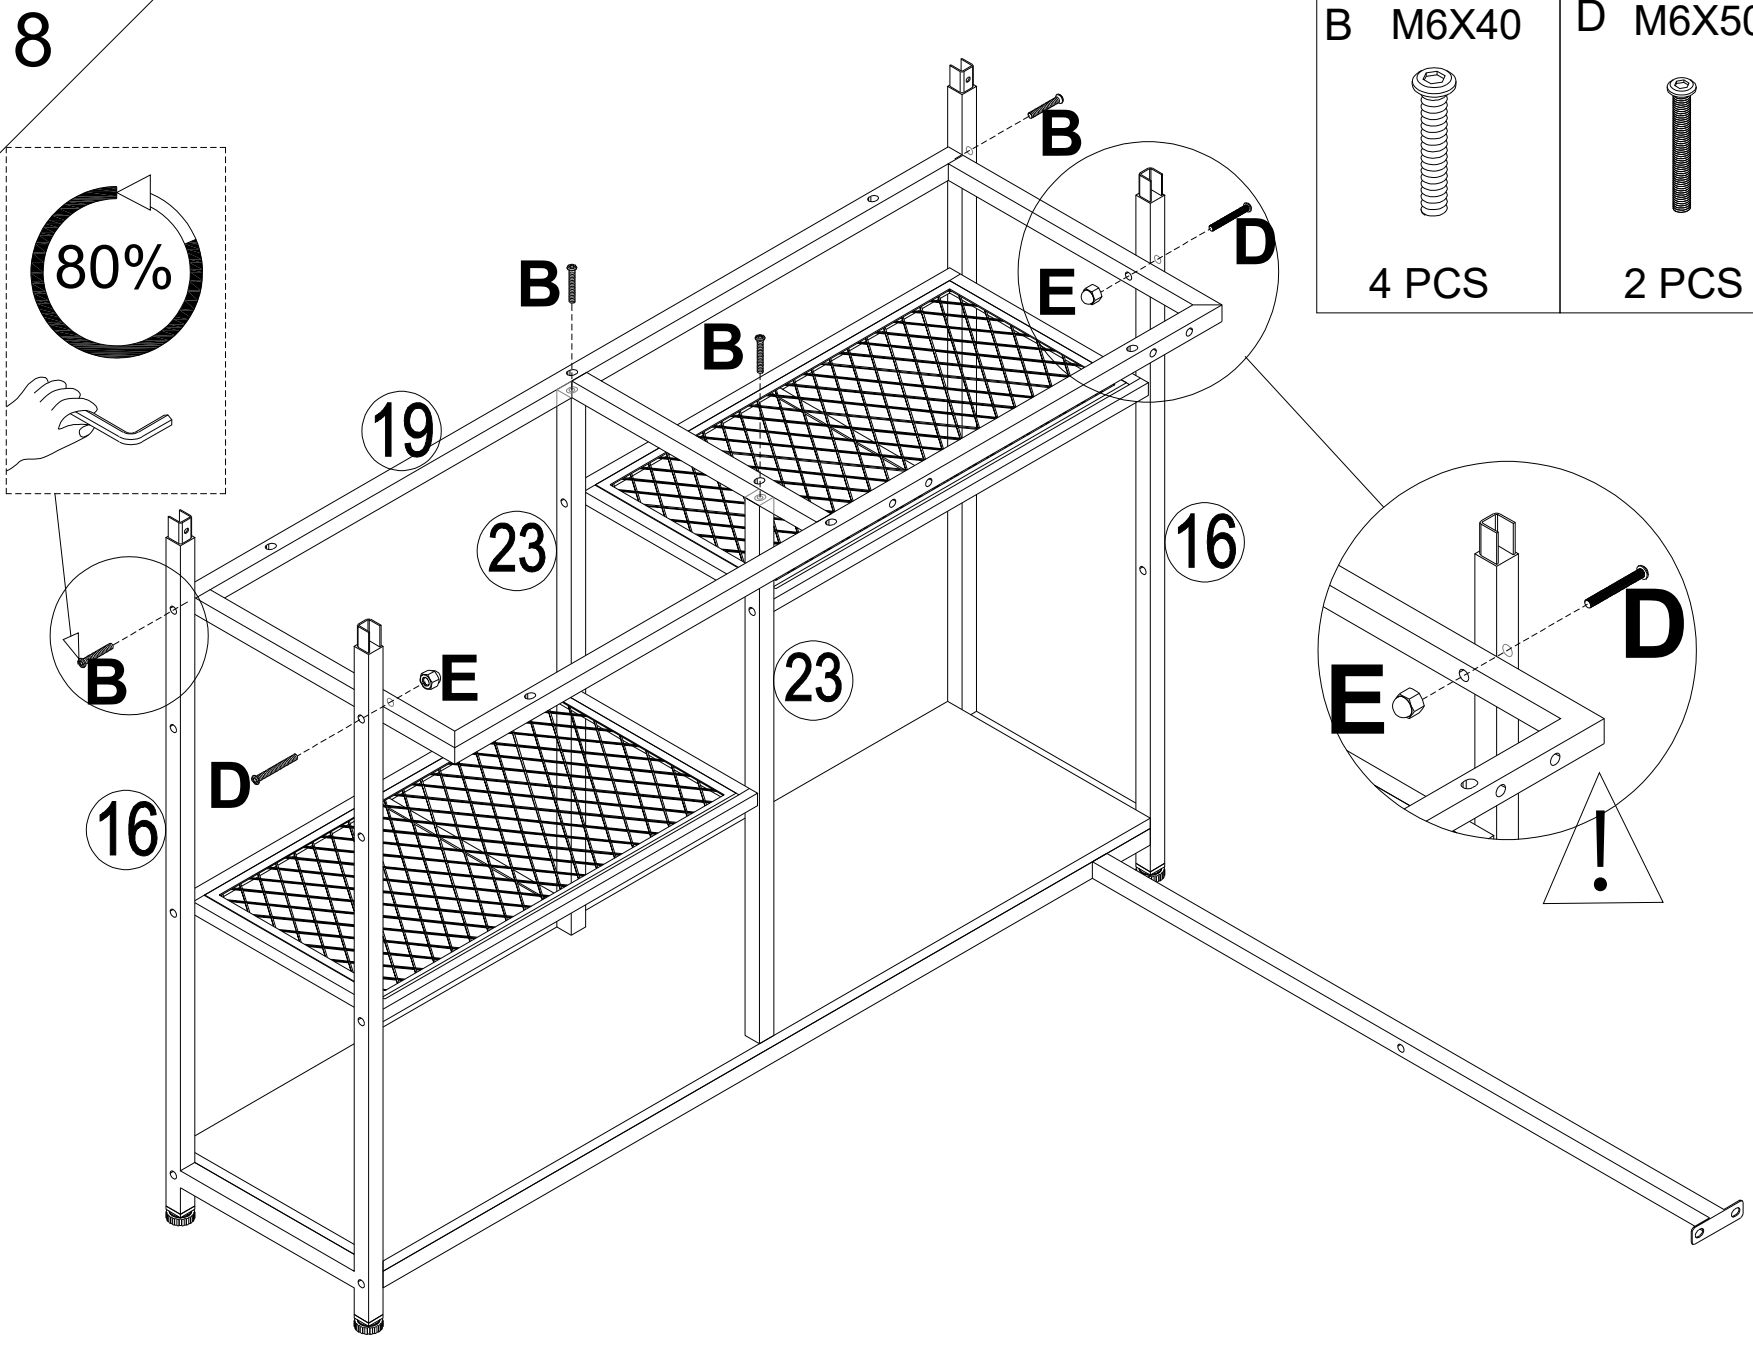


9

Notice the hole faces back


F M6X12
4 PCS

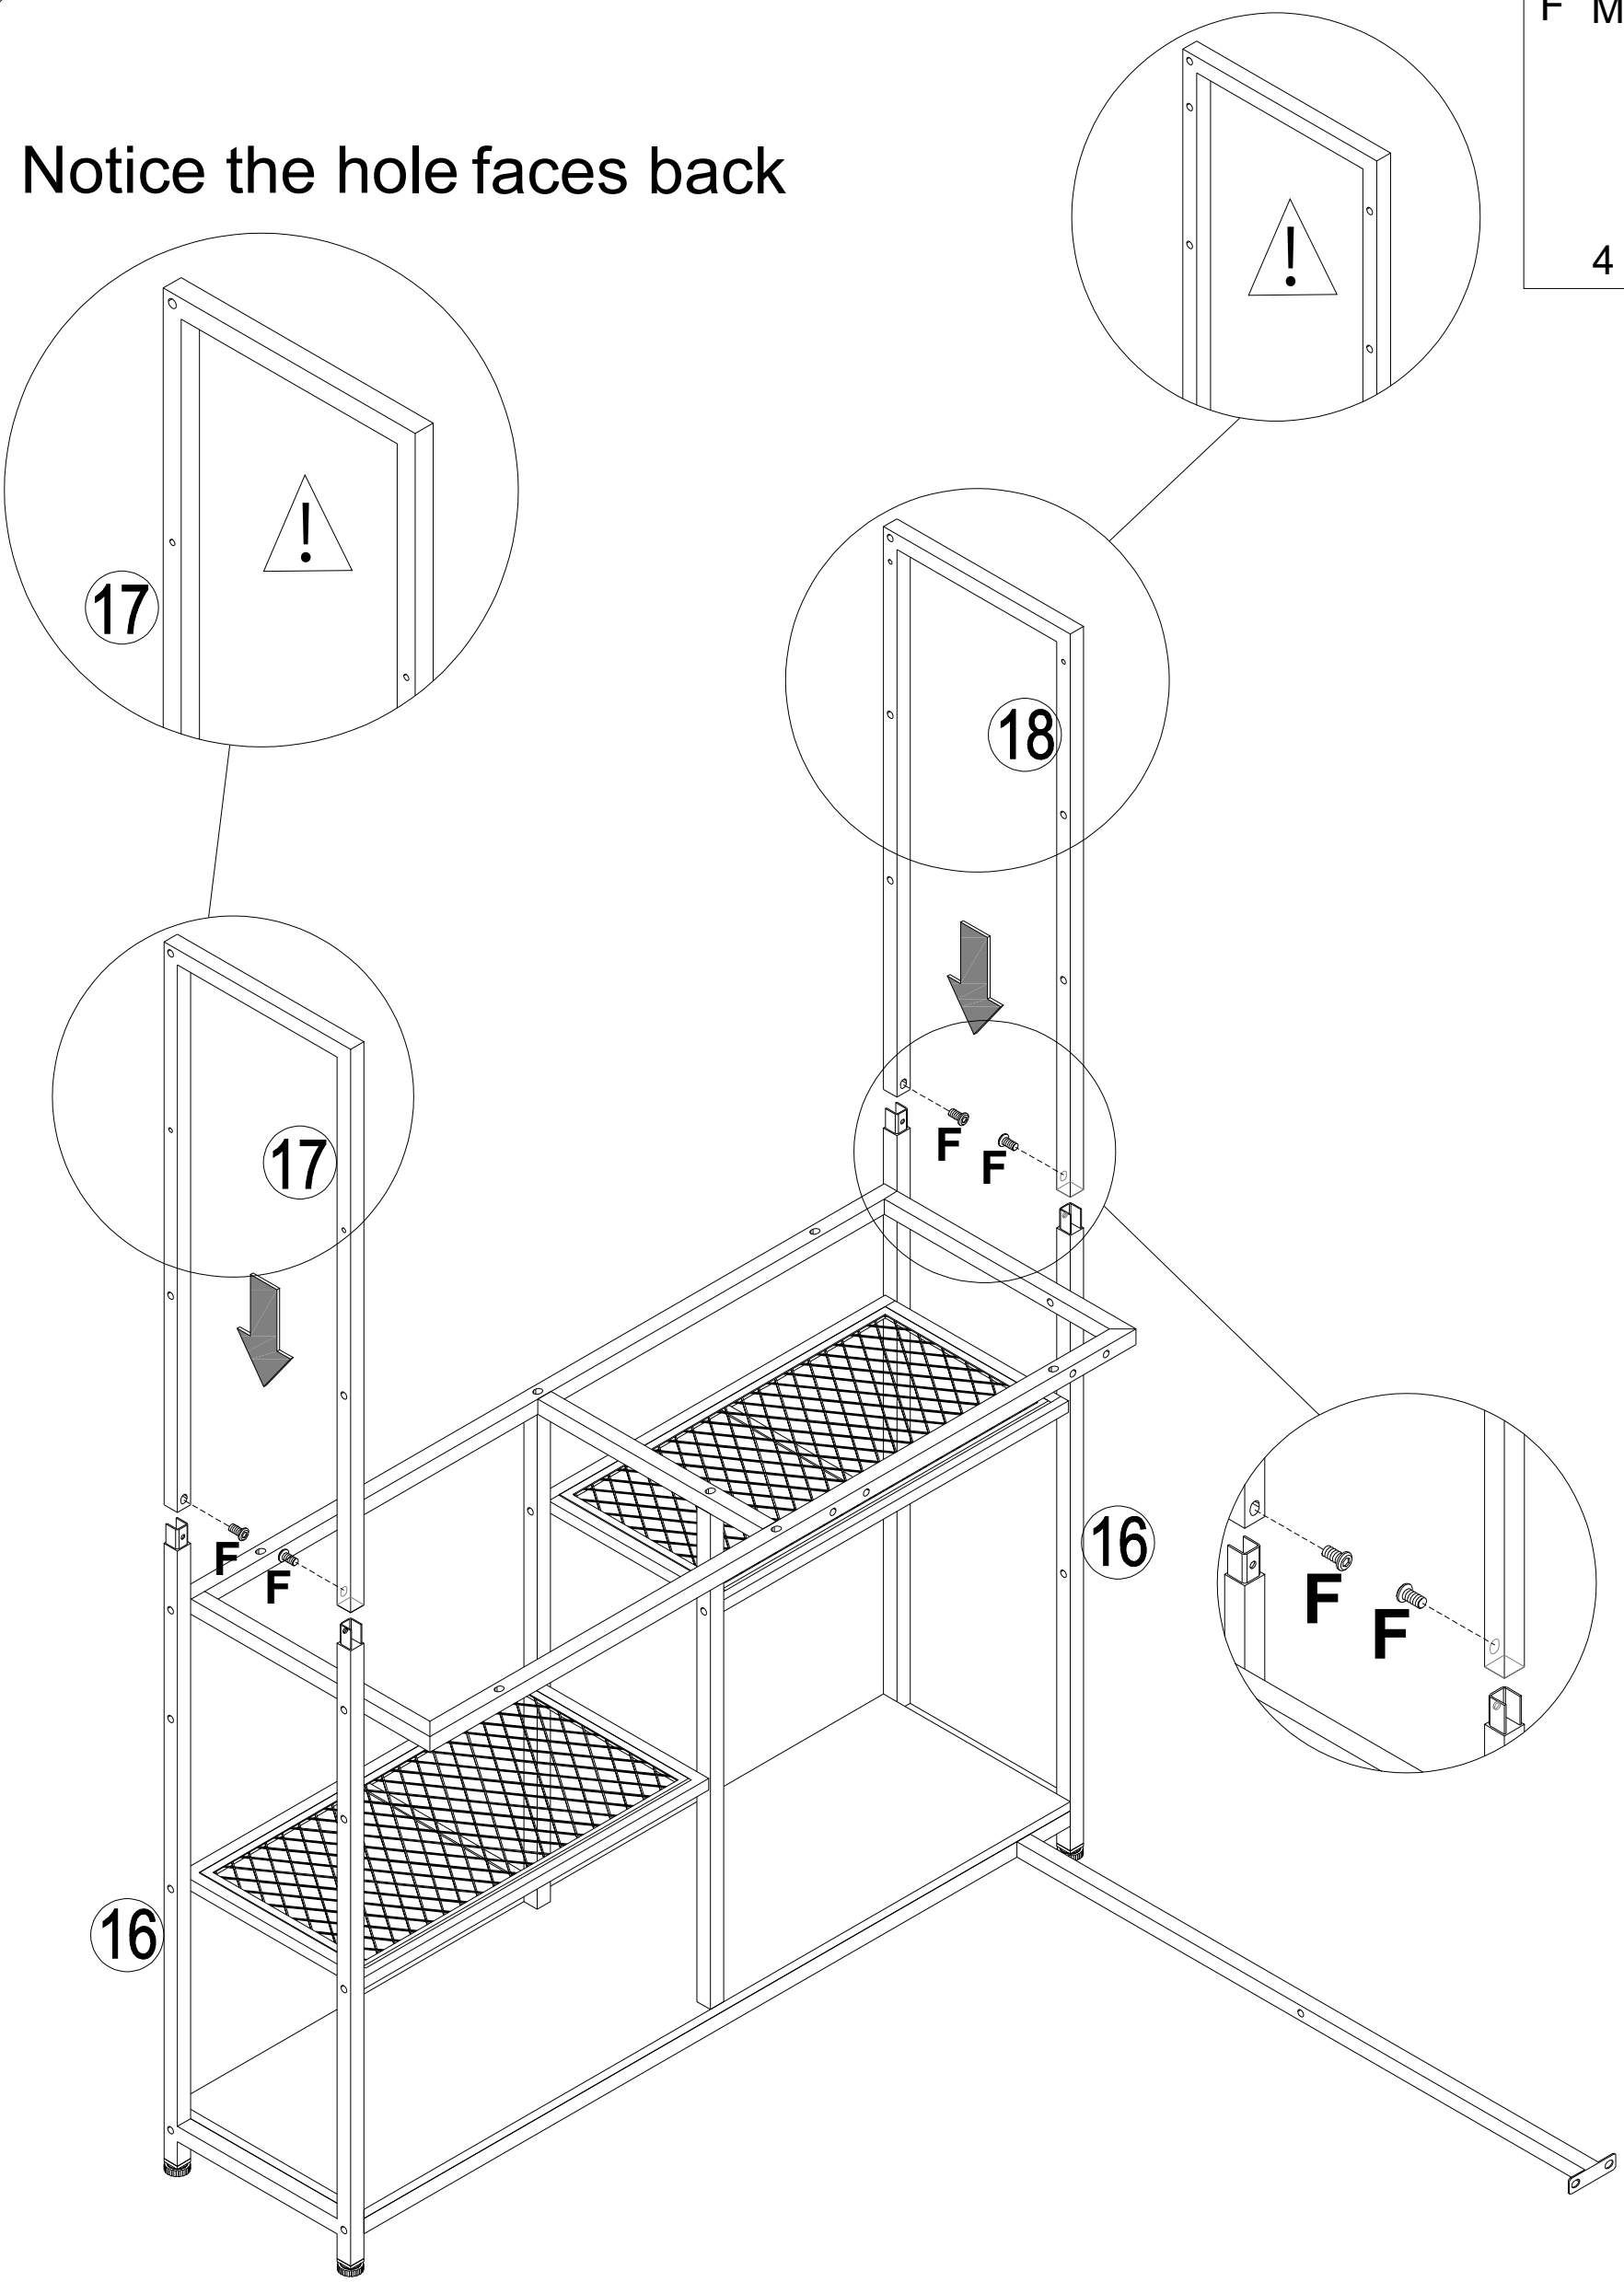

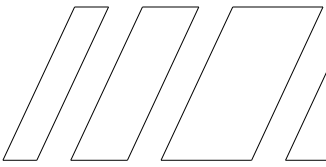



10

B M6X40




4 PCS

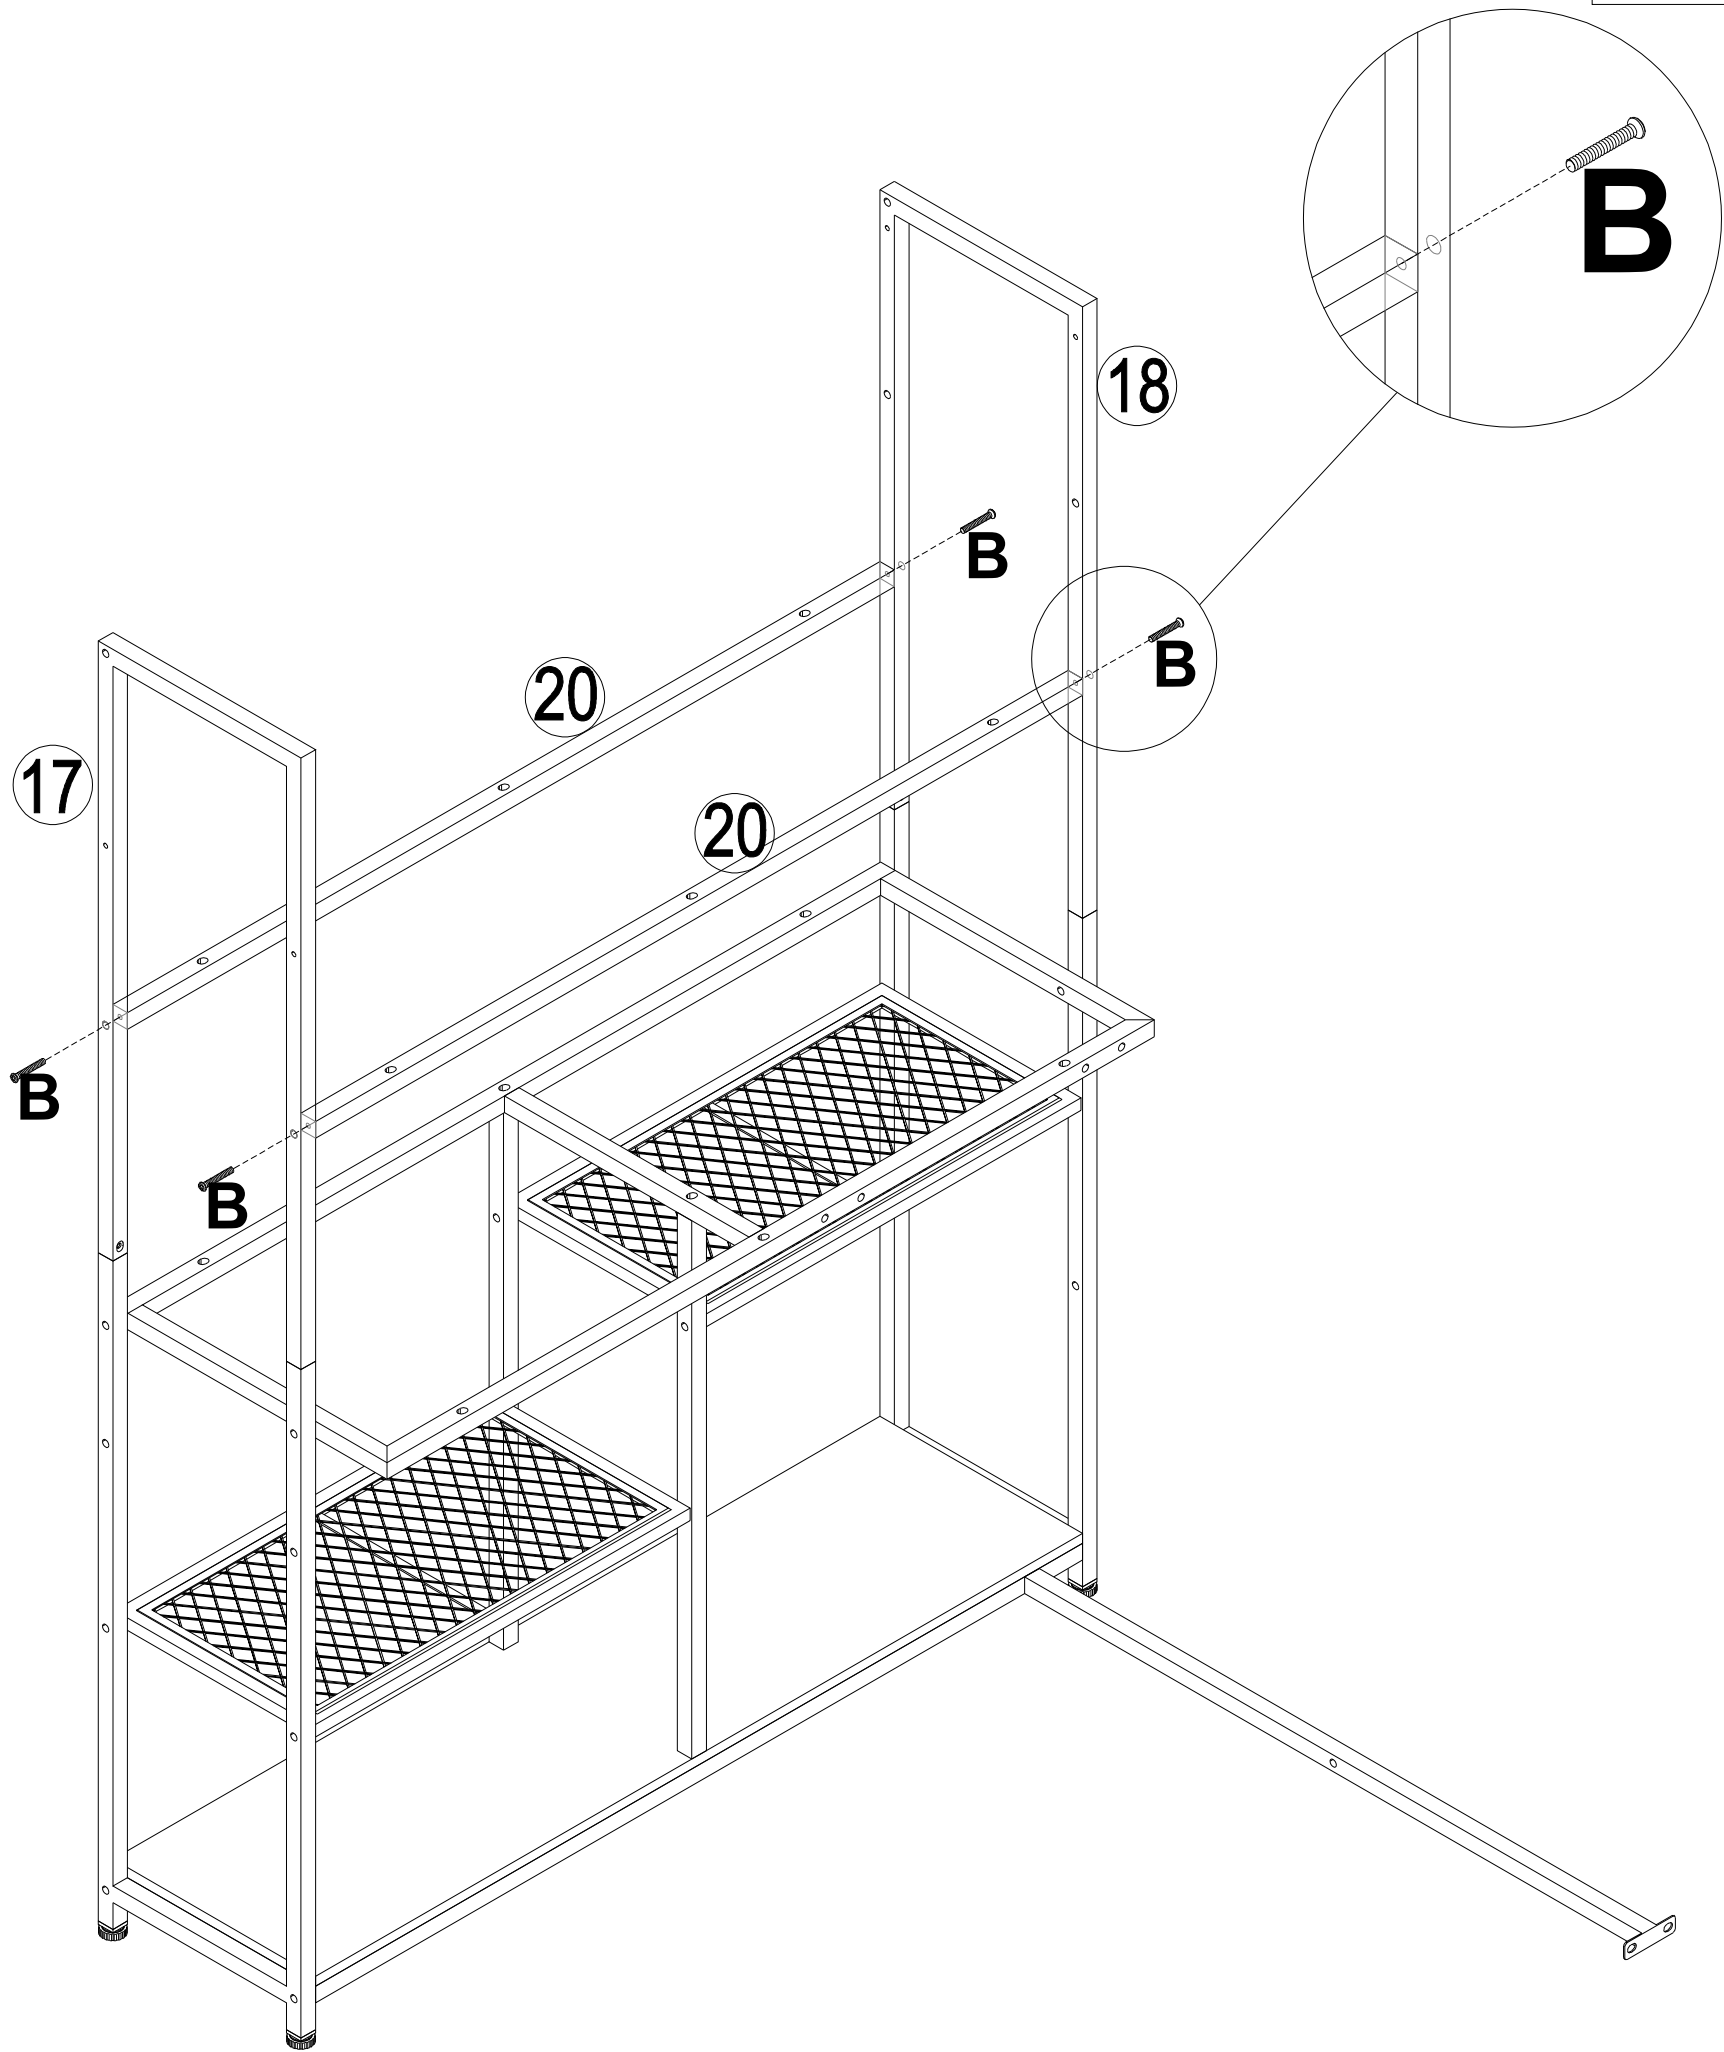

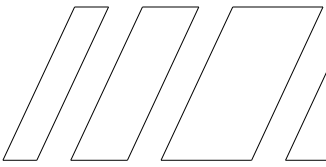


11

C M6X28




6 PCS

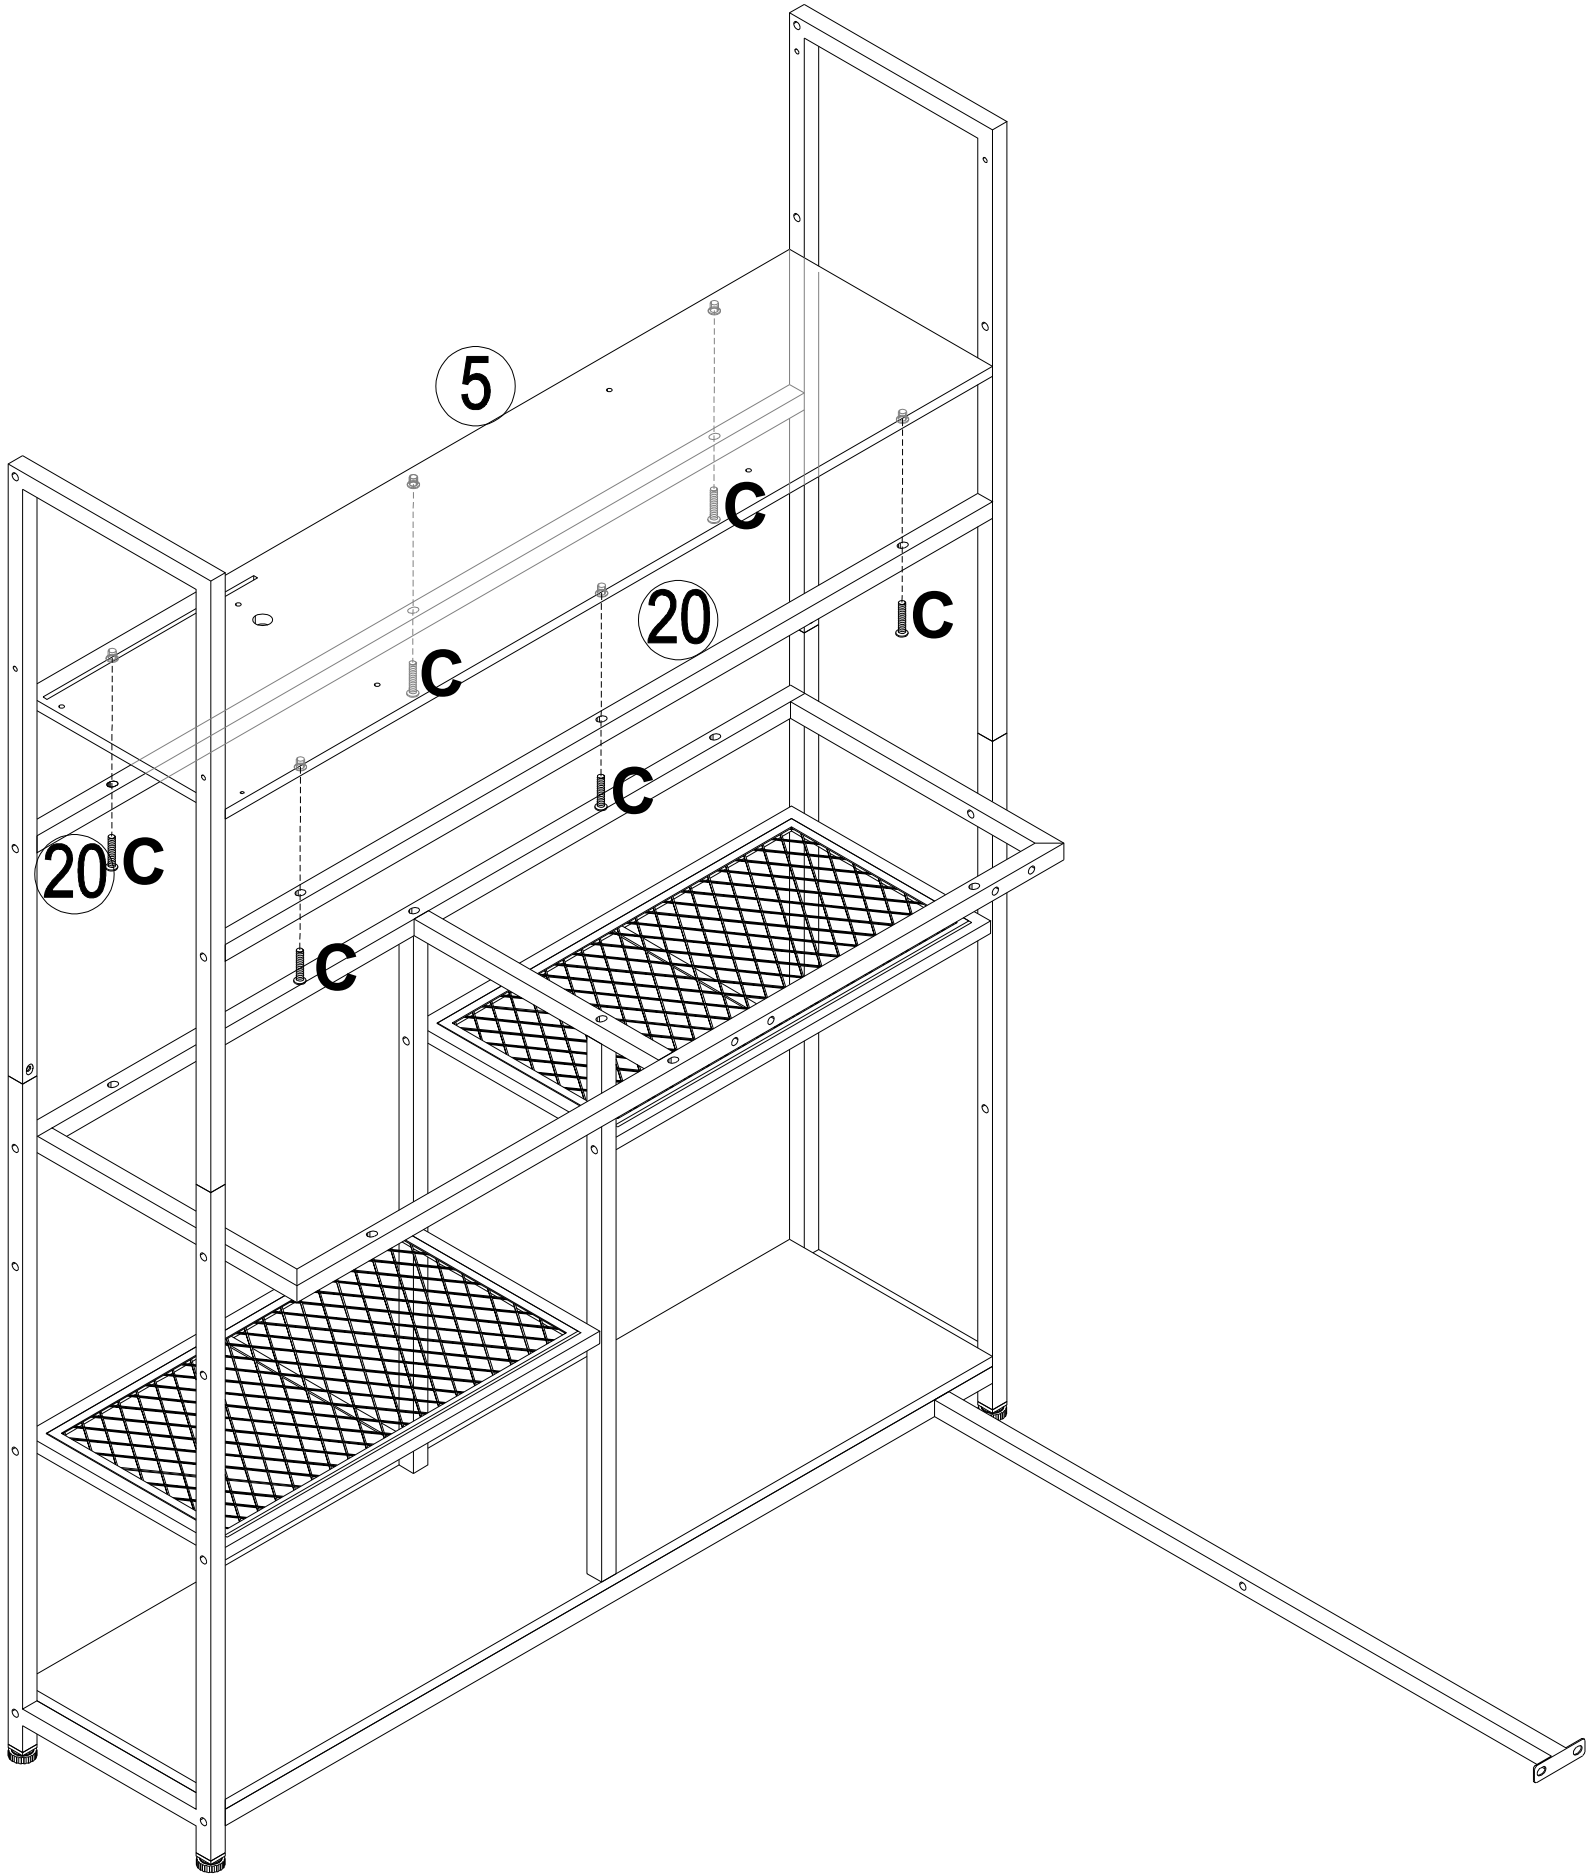




12

G M5x40



6 PCS

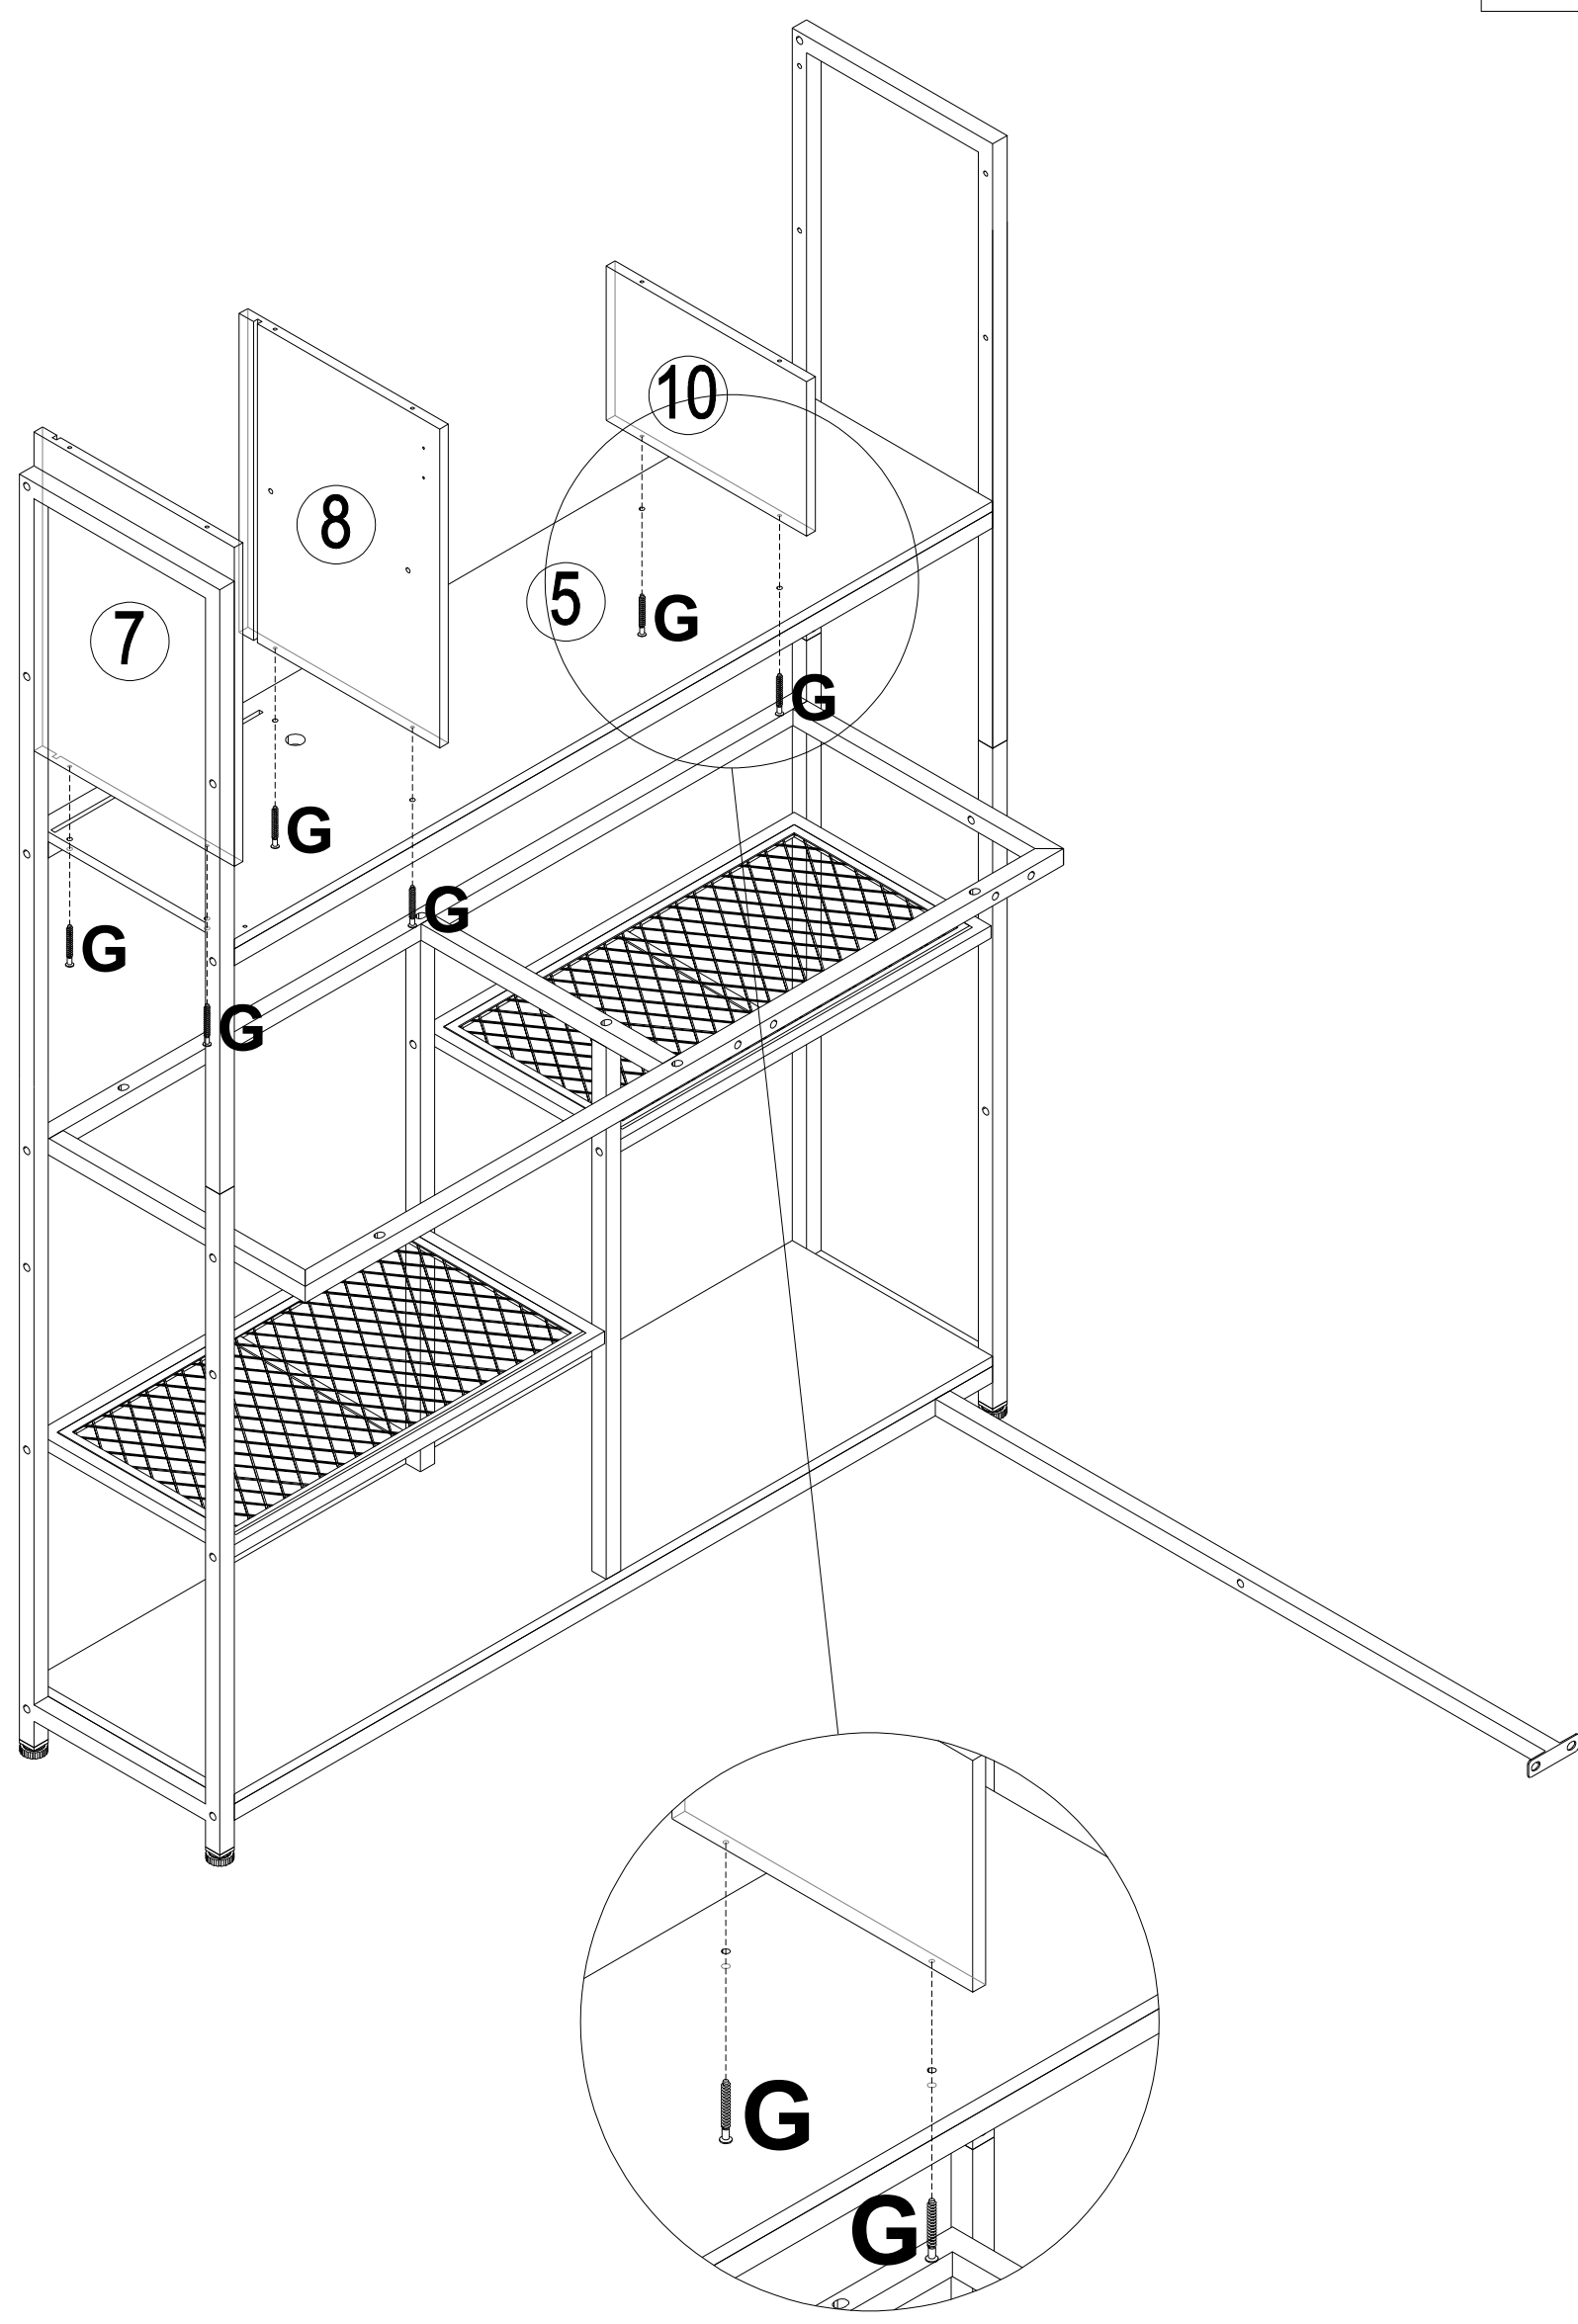

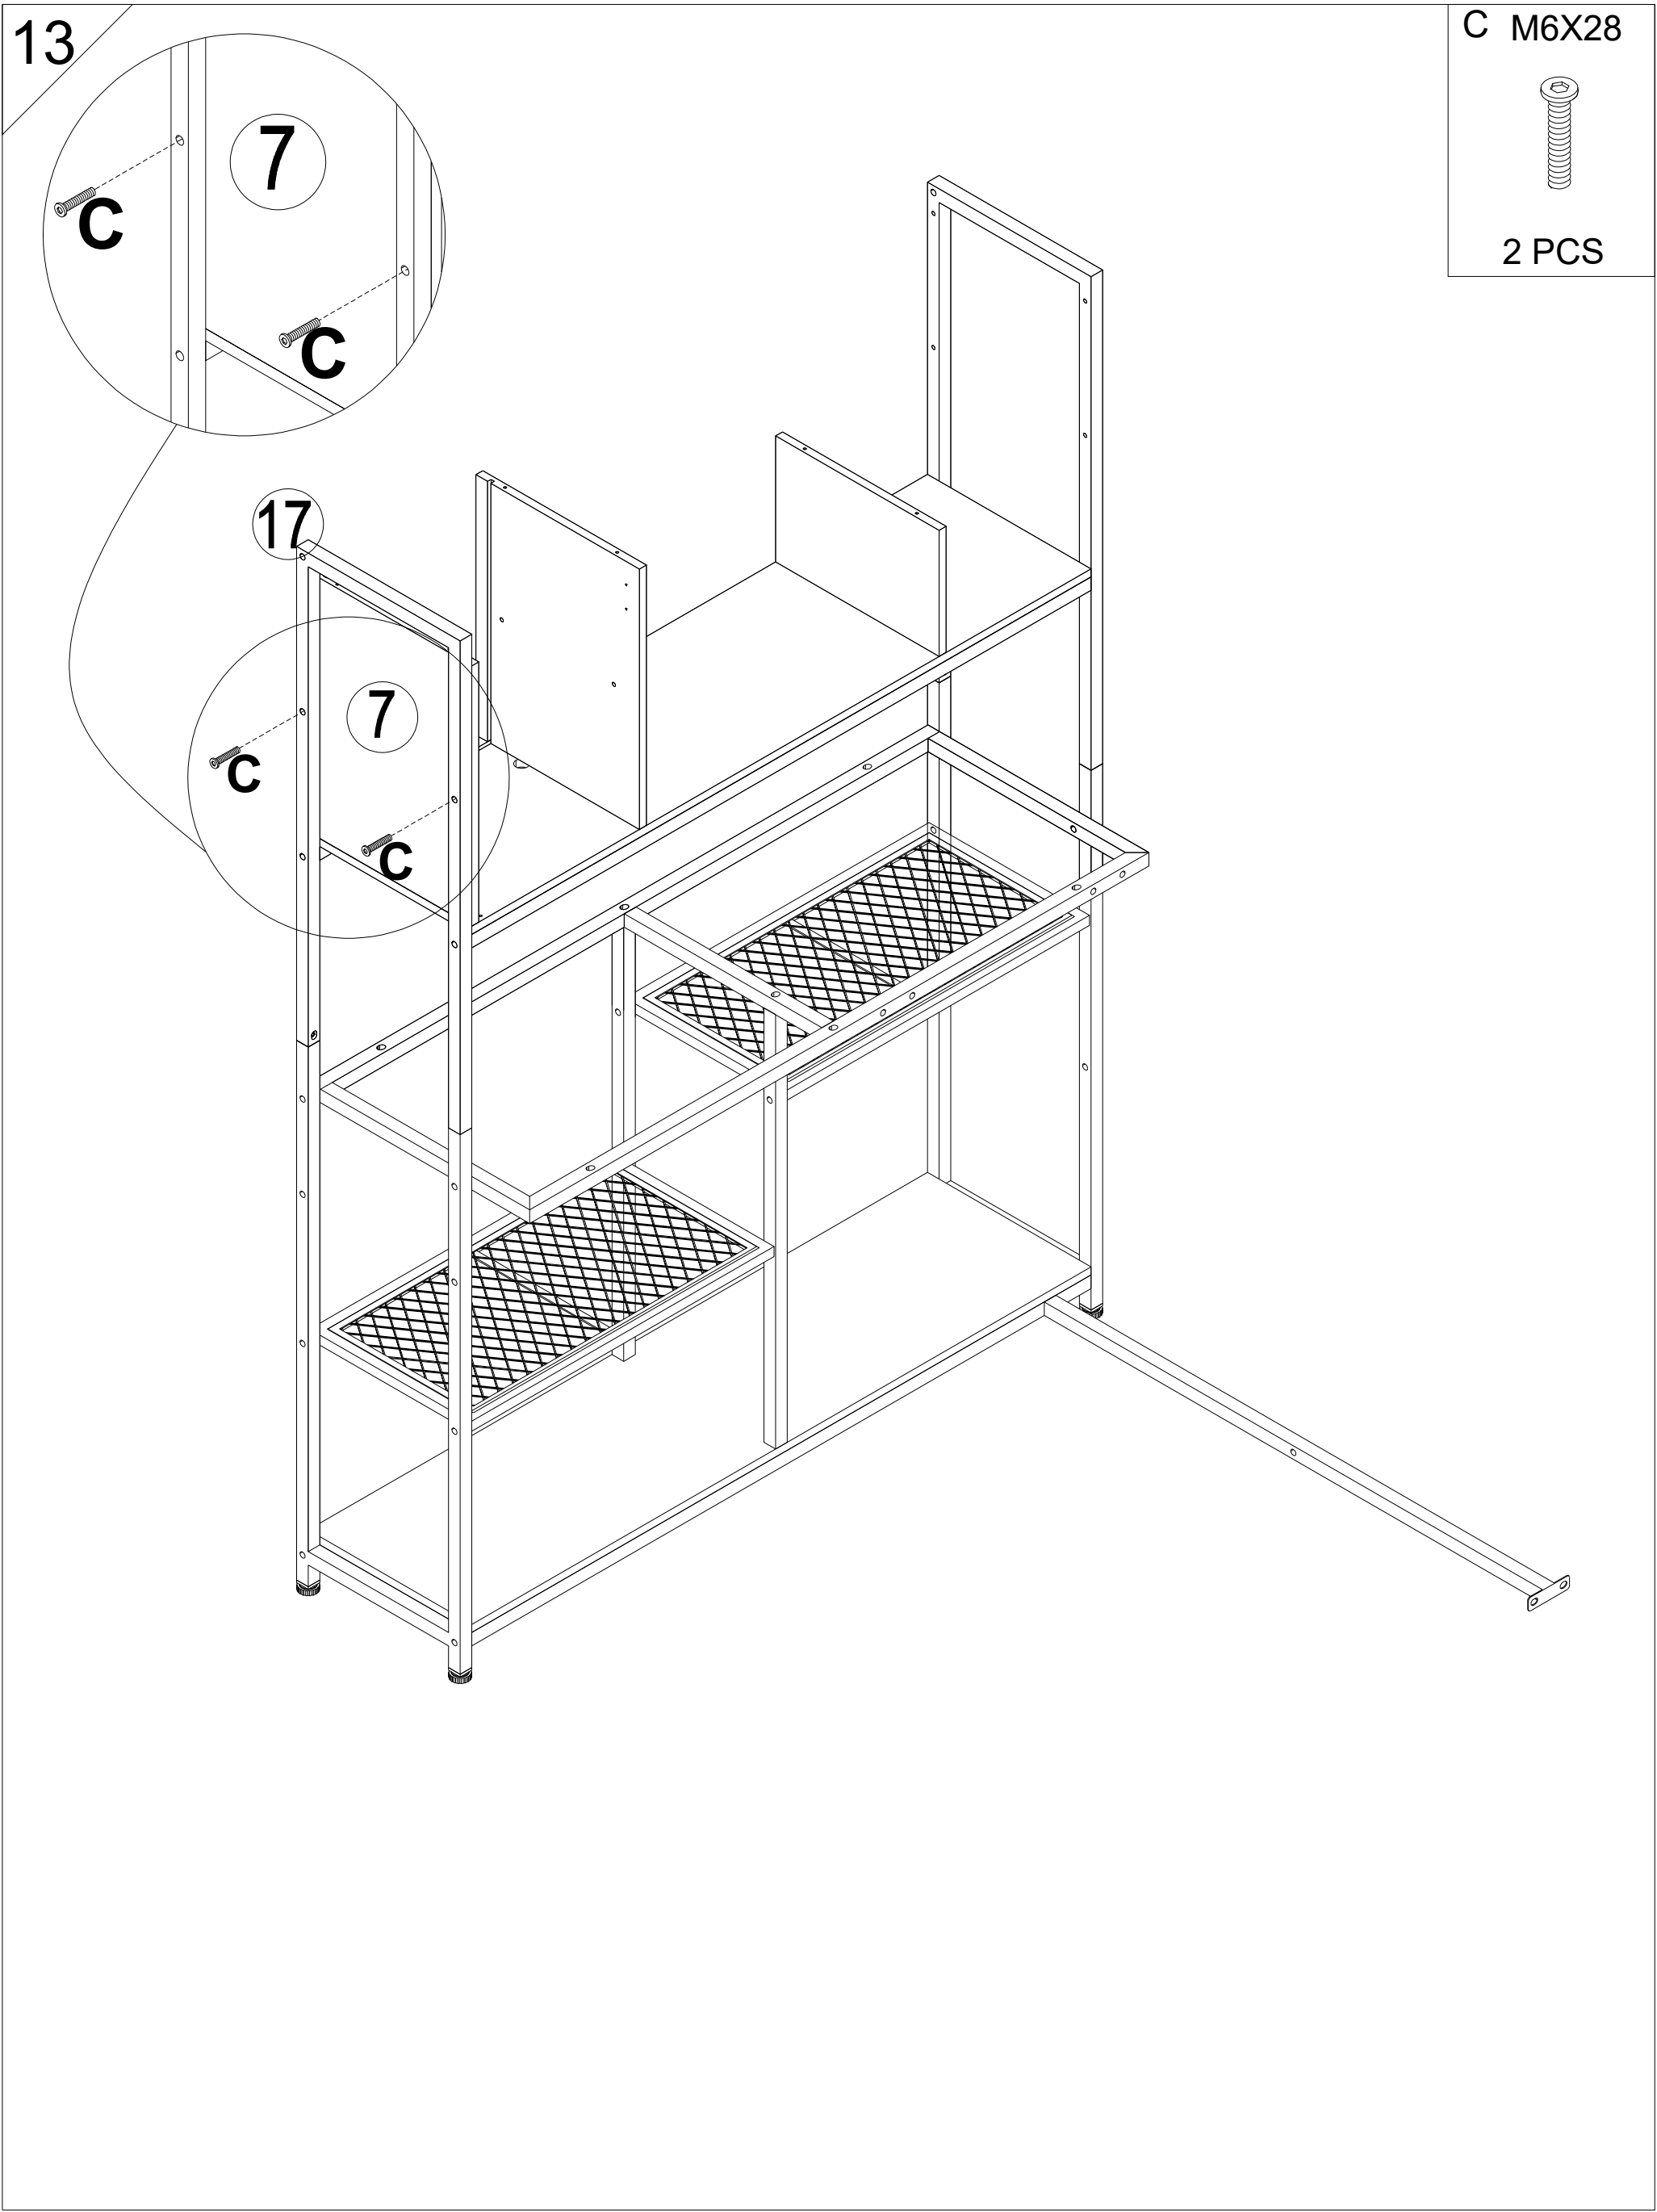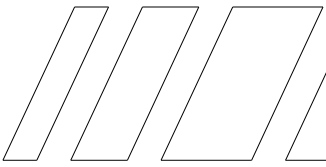



14

G M5x40



6 PCS

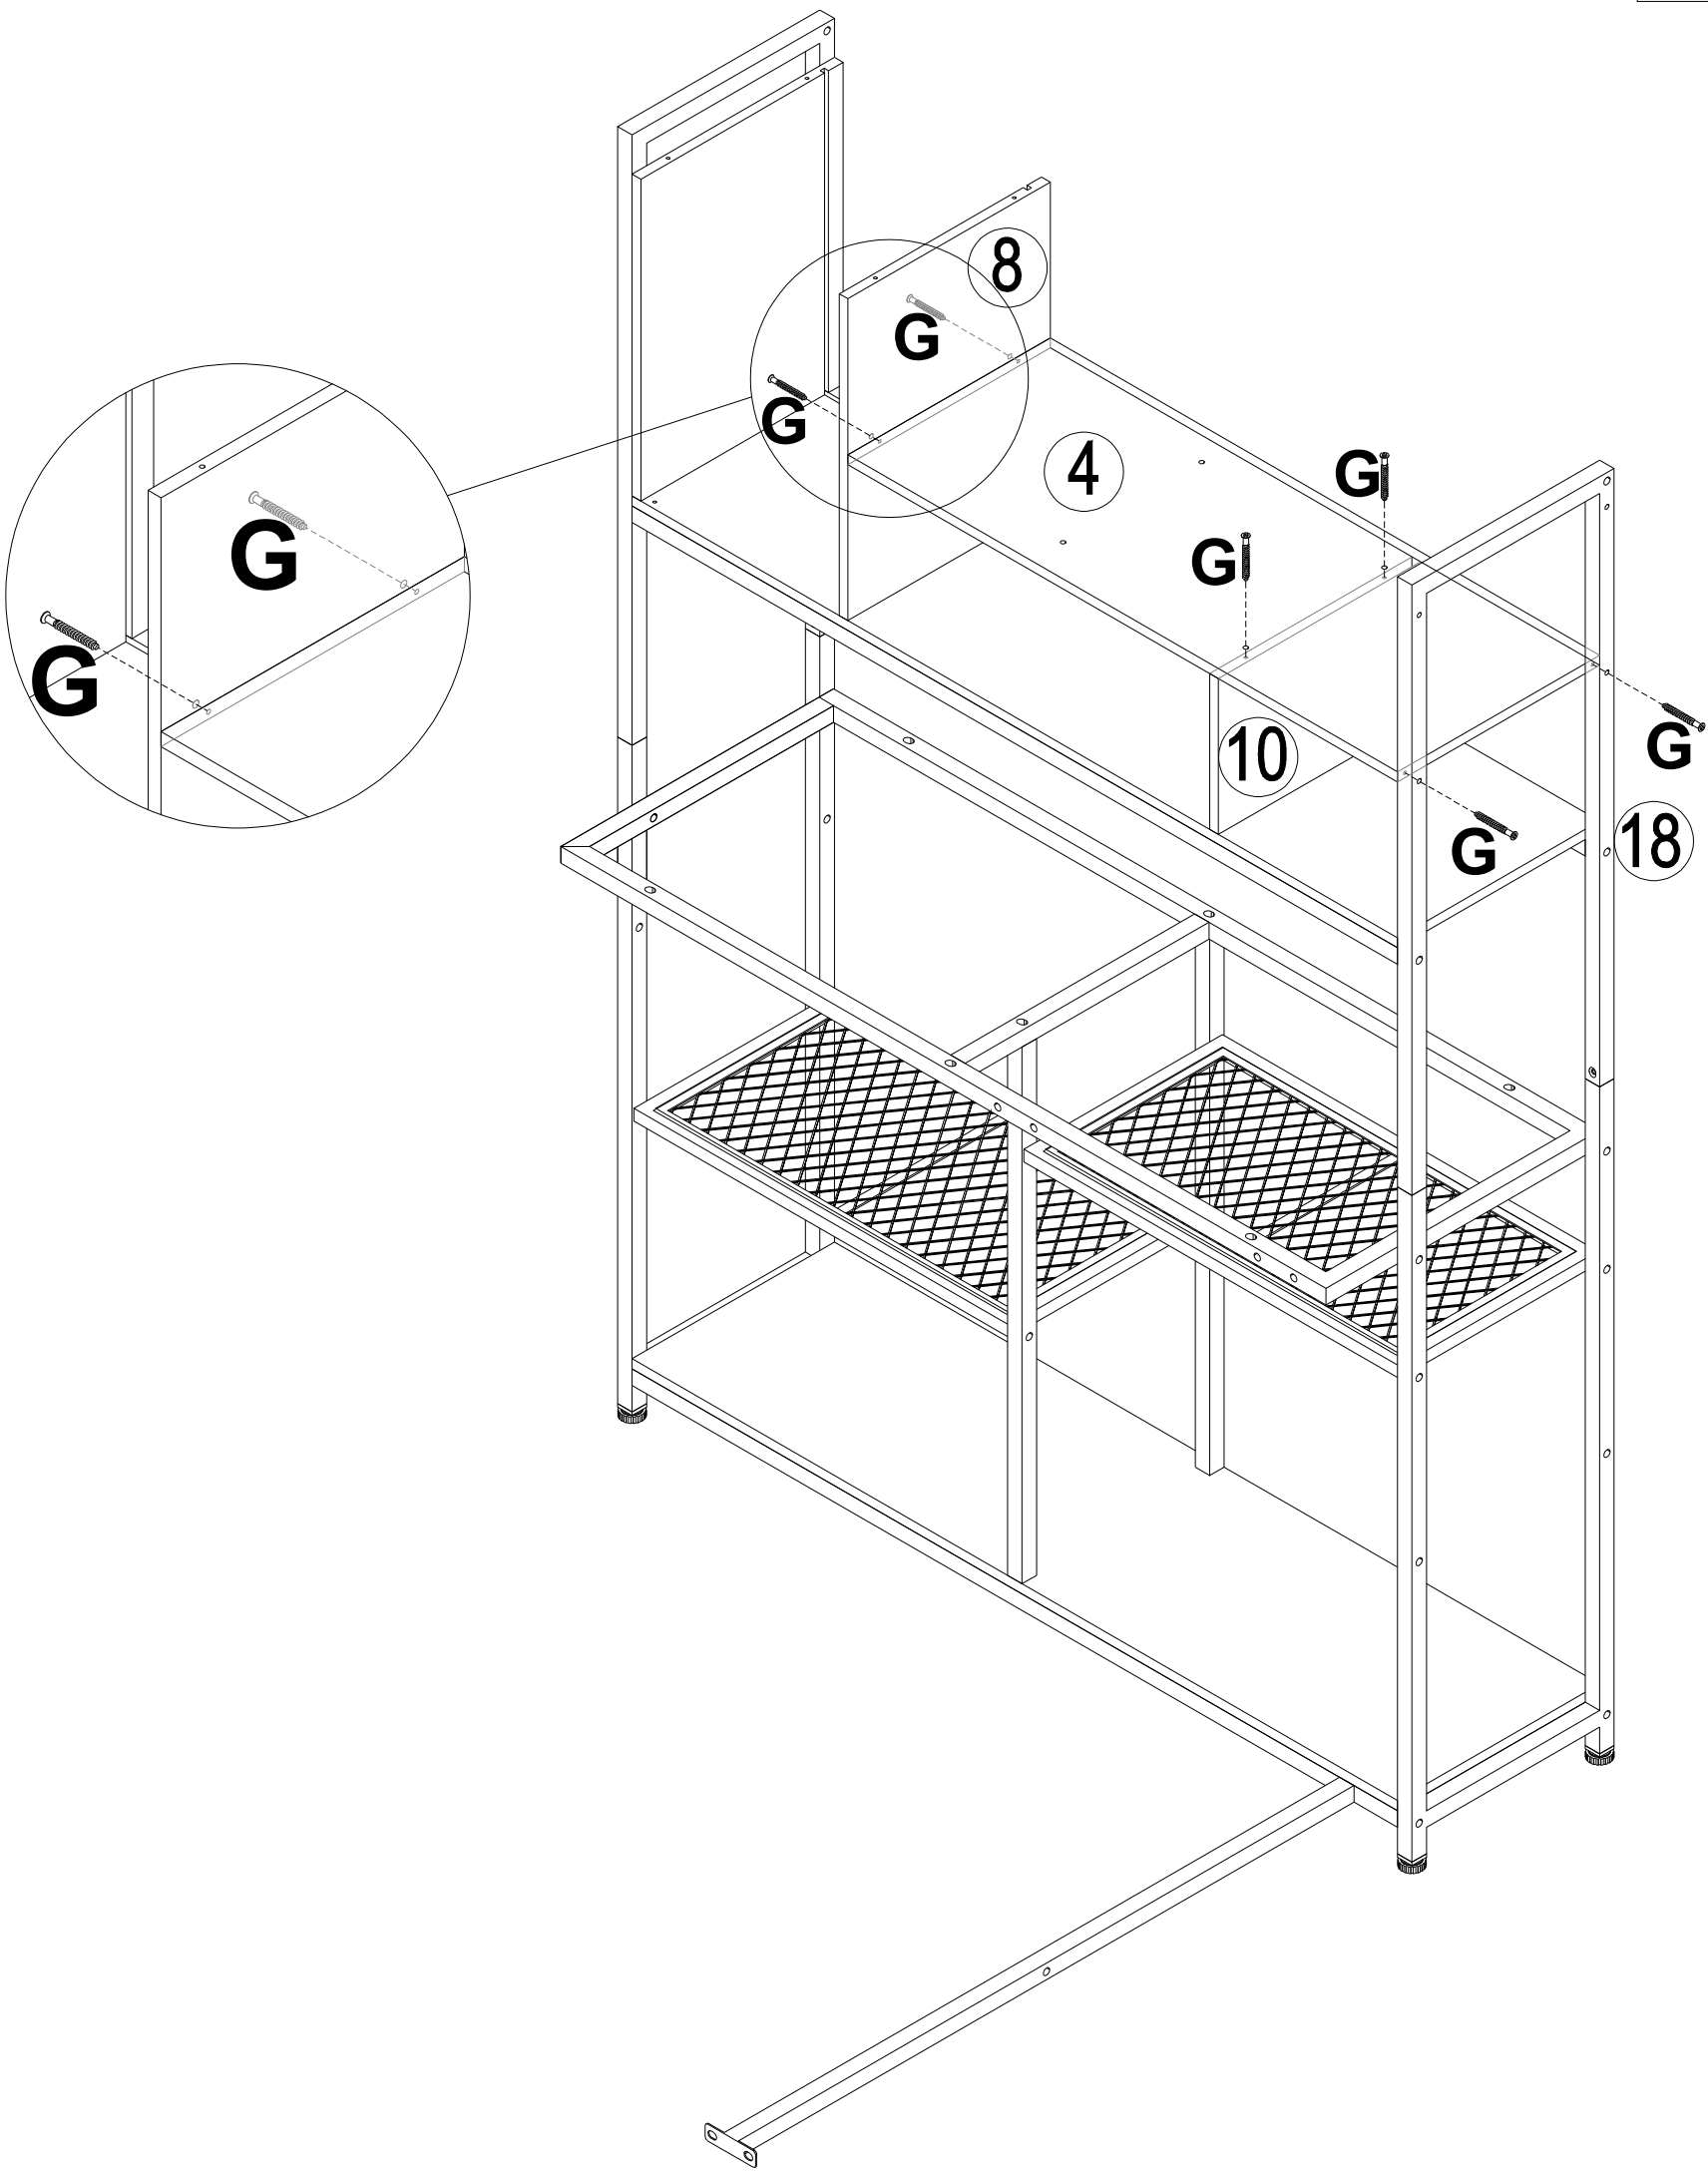

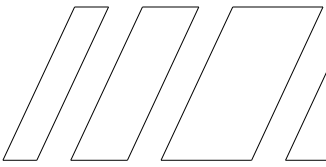



15

G M5x40





2 PCS

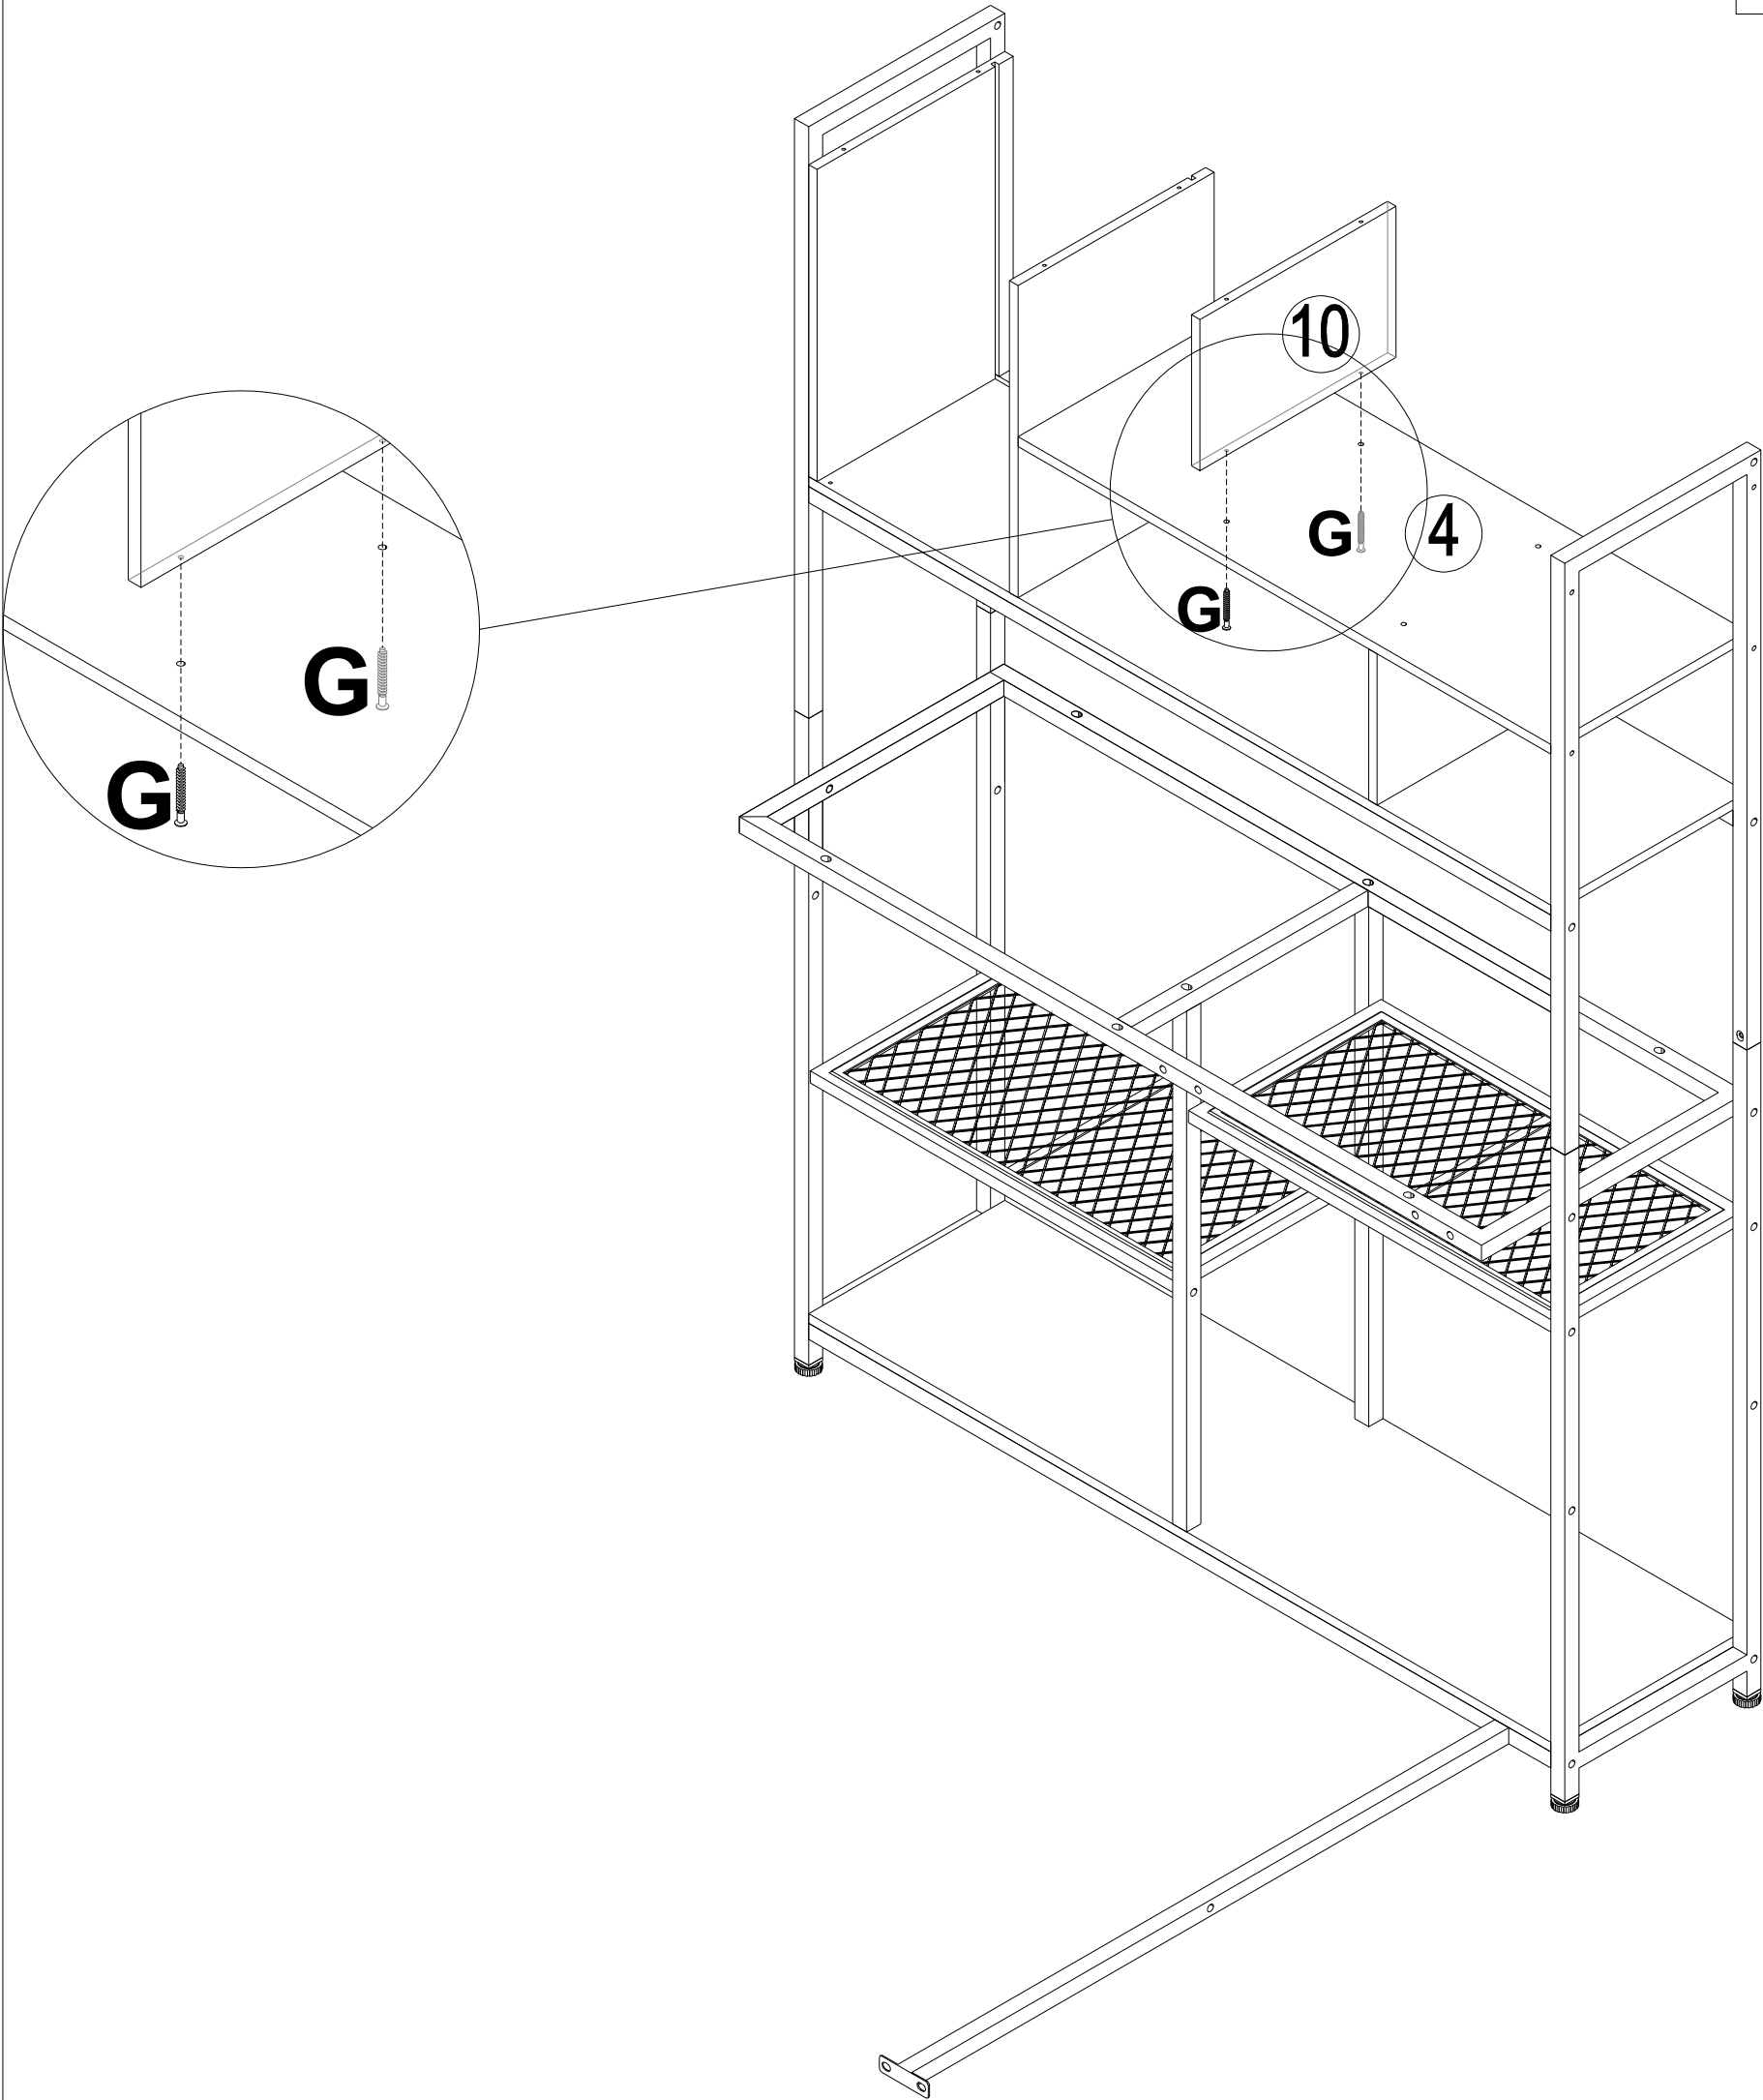

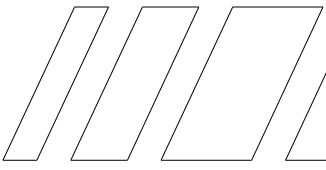


16

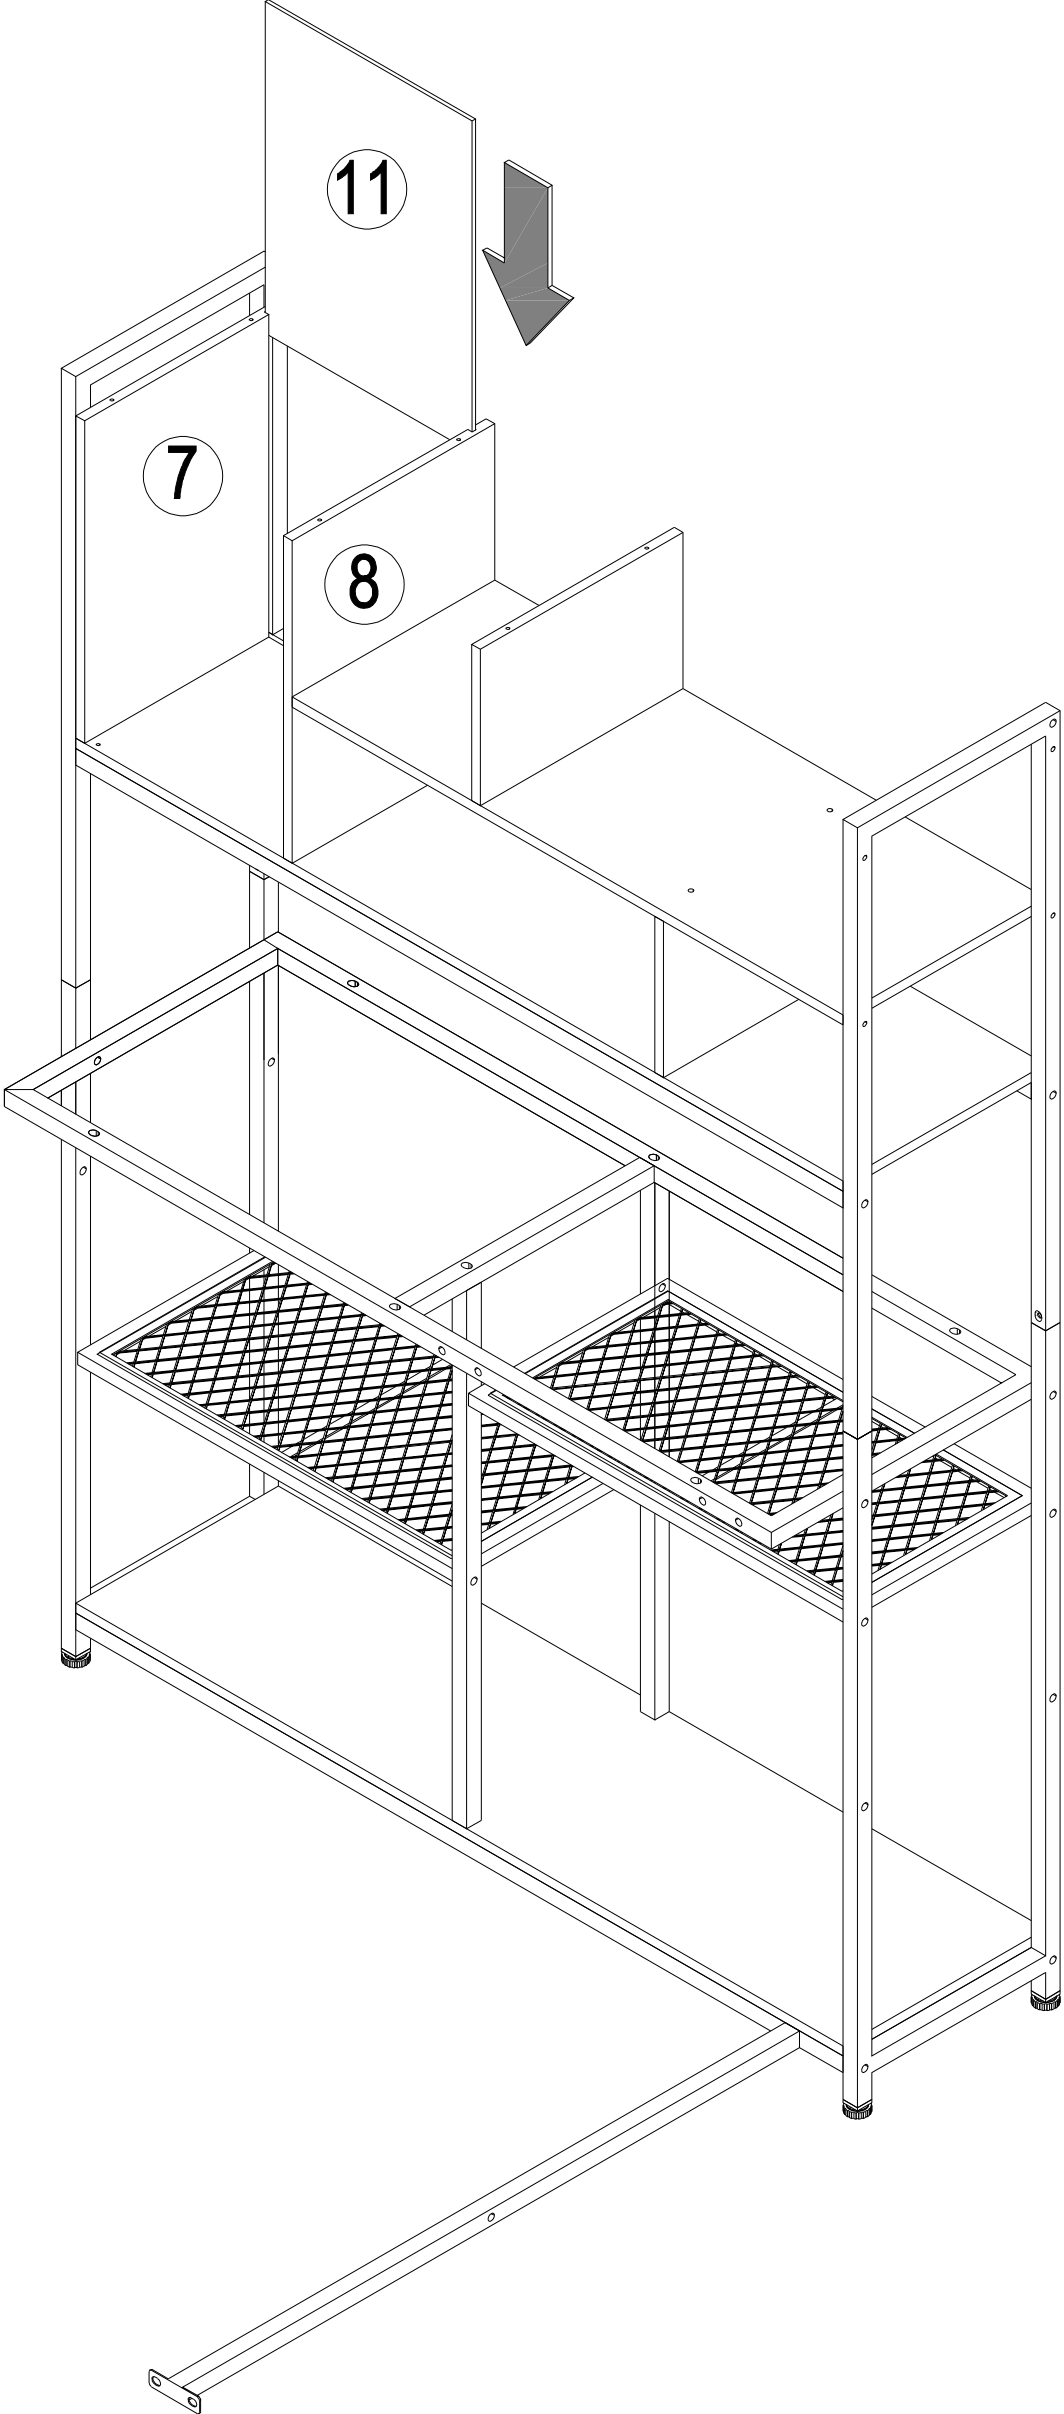

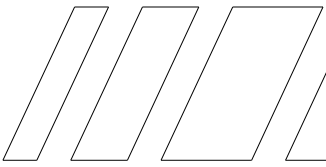



17

G M5x40



8 PCS

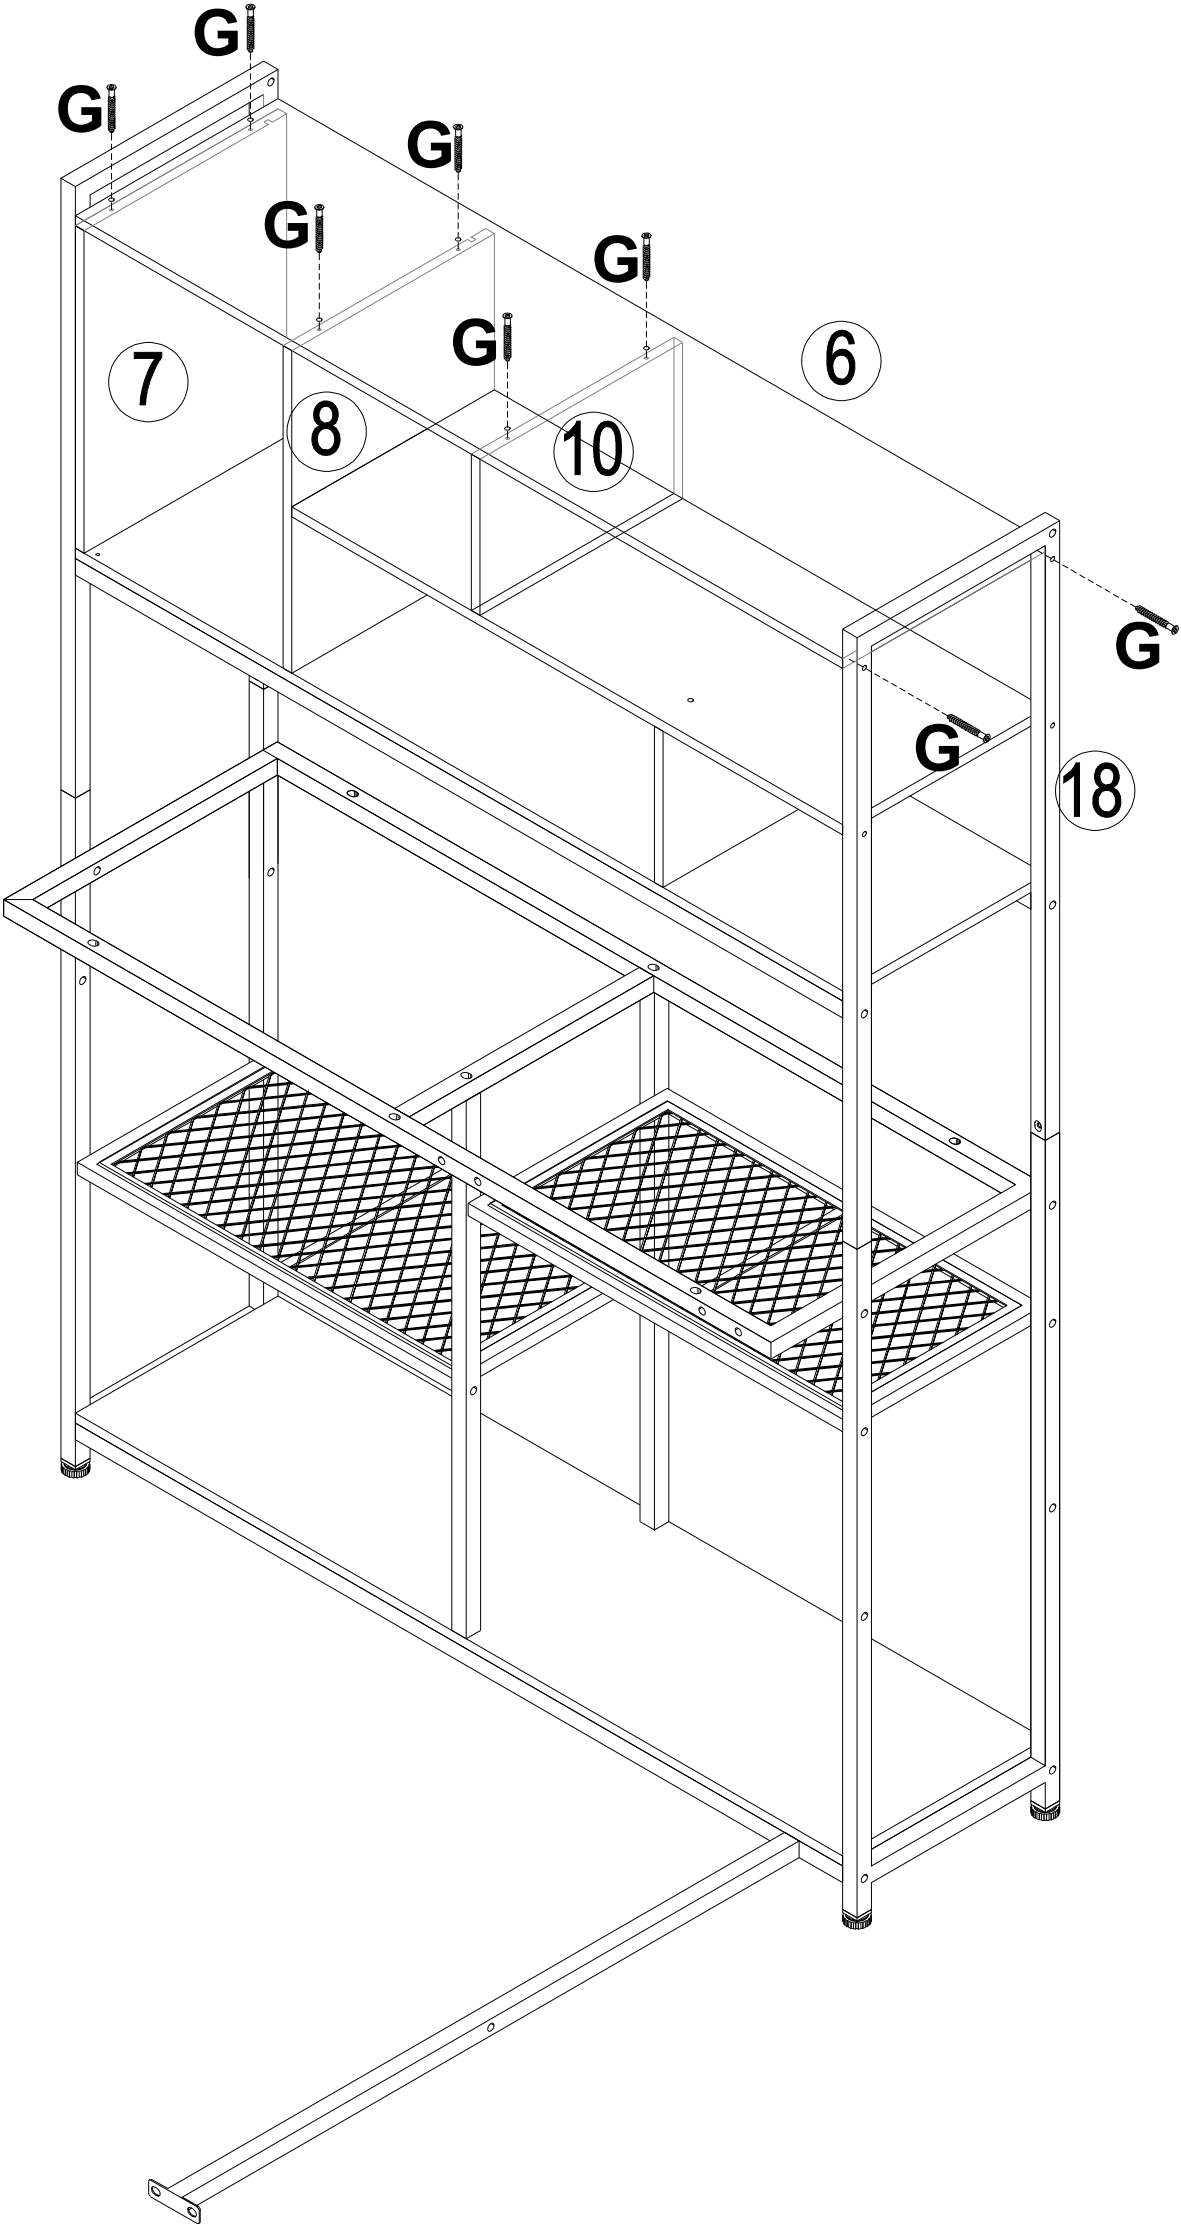


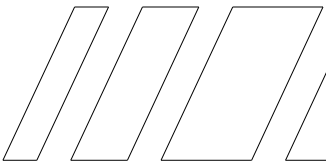

18


B M6X40

2 PCS

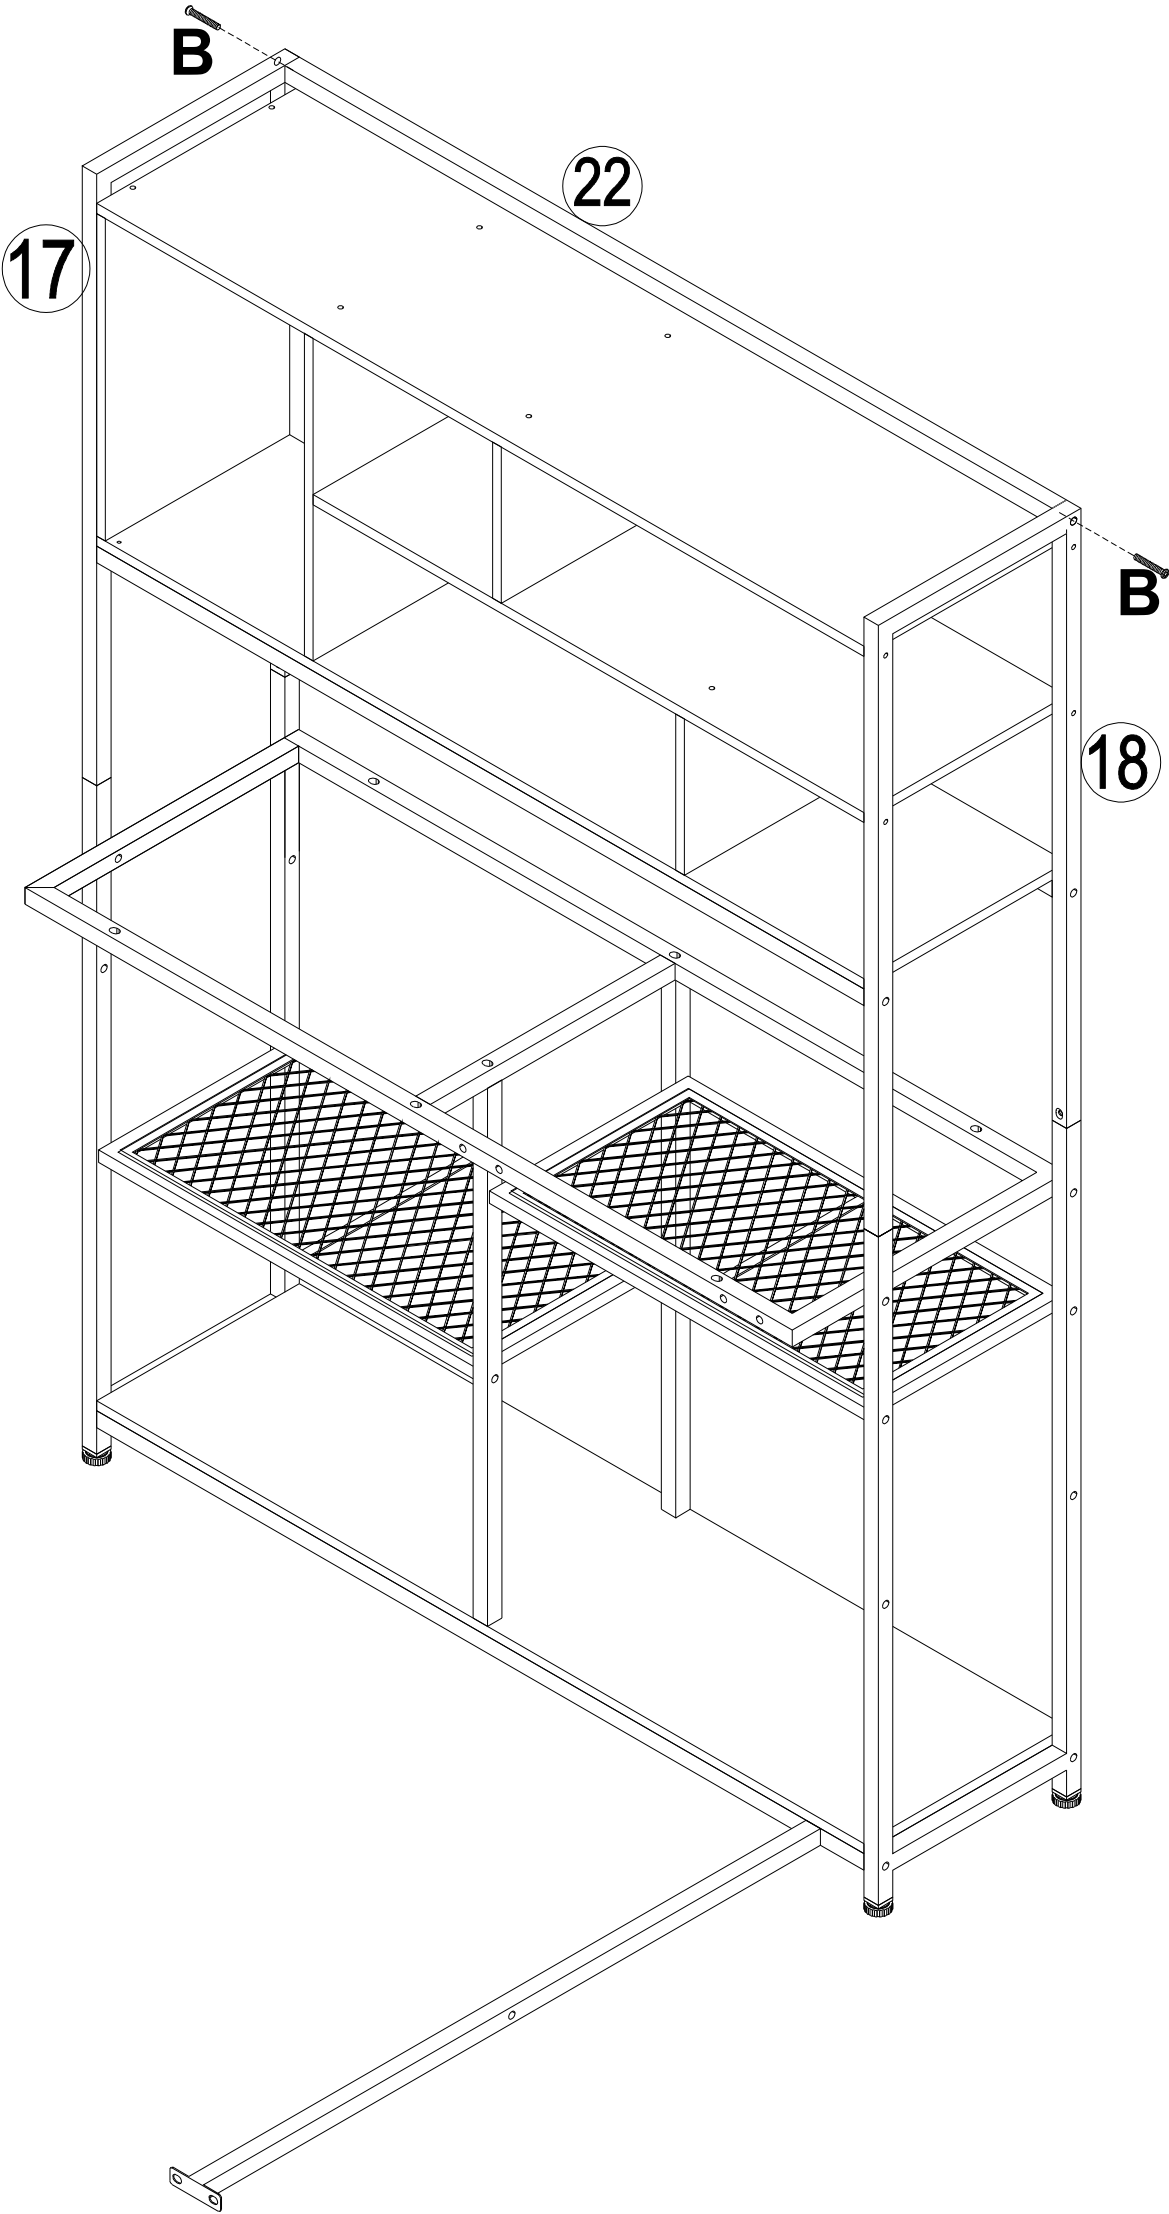


19

H M4X16




2 PCS

I




1 PCS

J



2 PCS

K

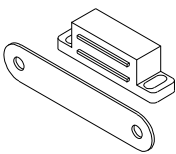


1 SET

L M3.5X12




2 PCS

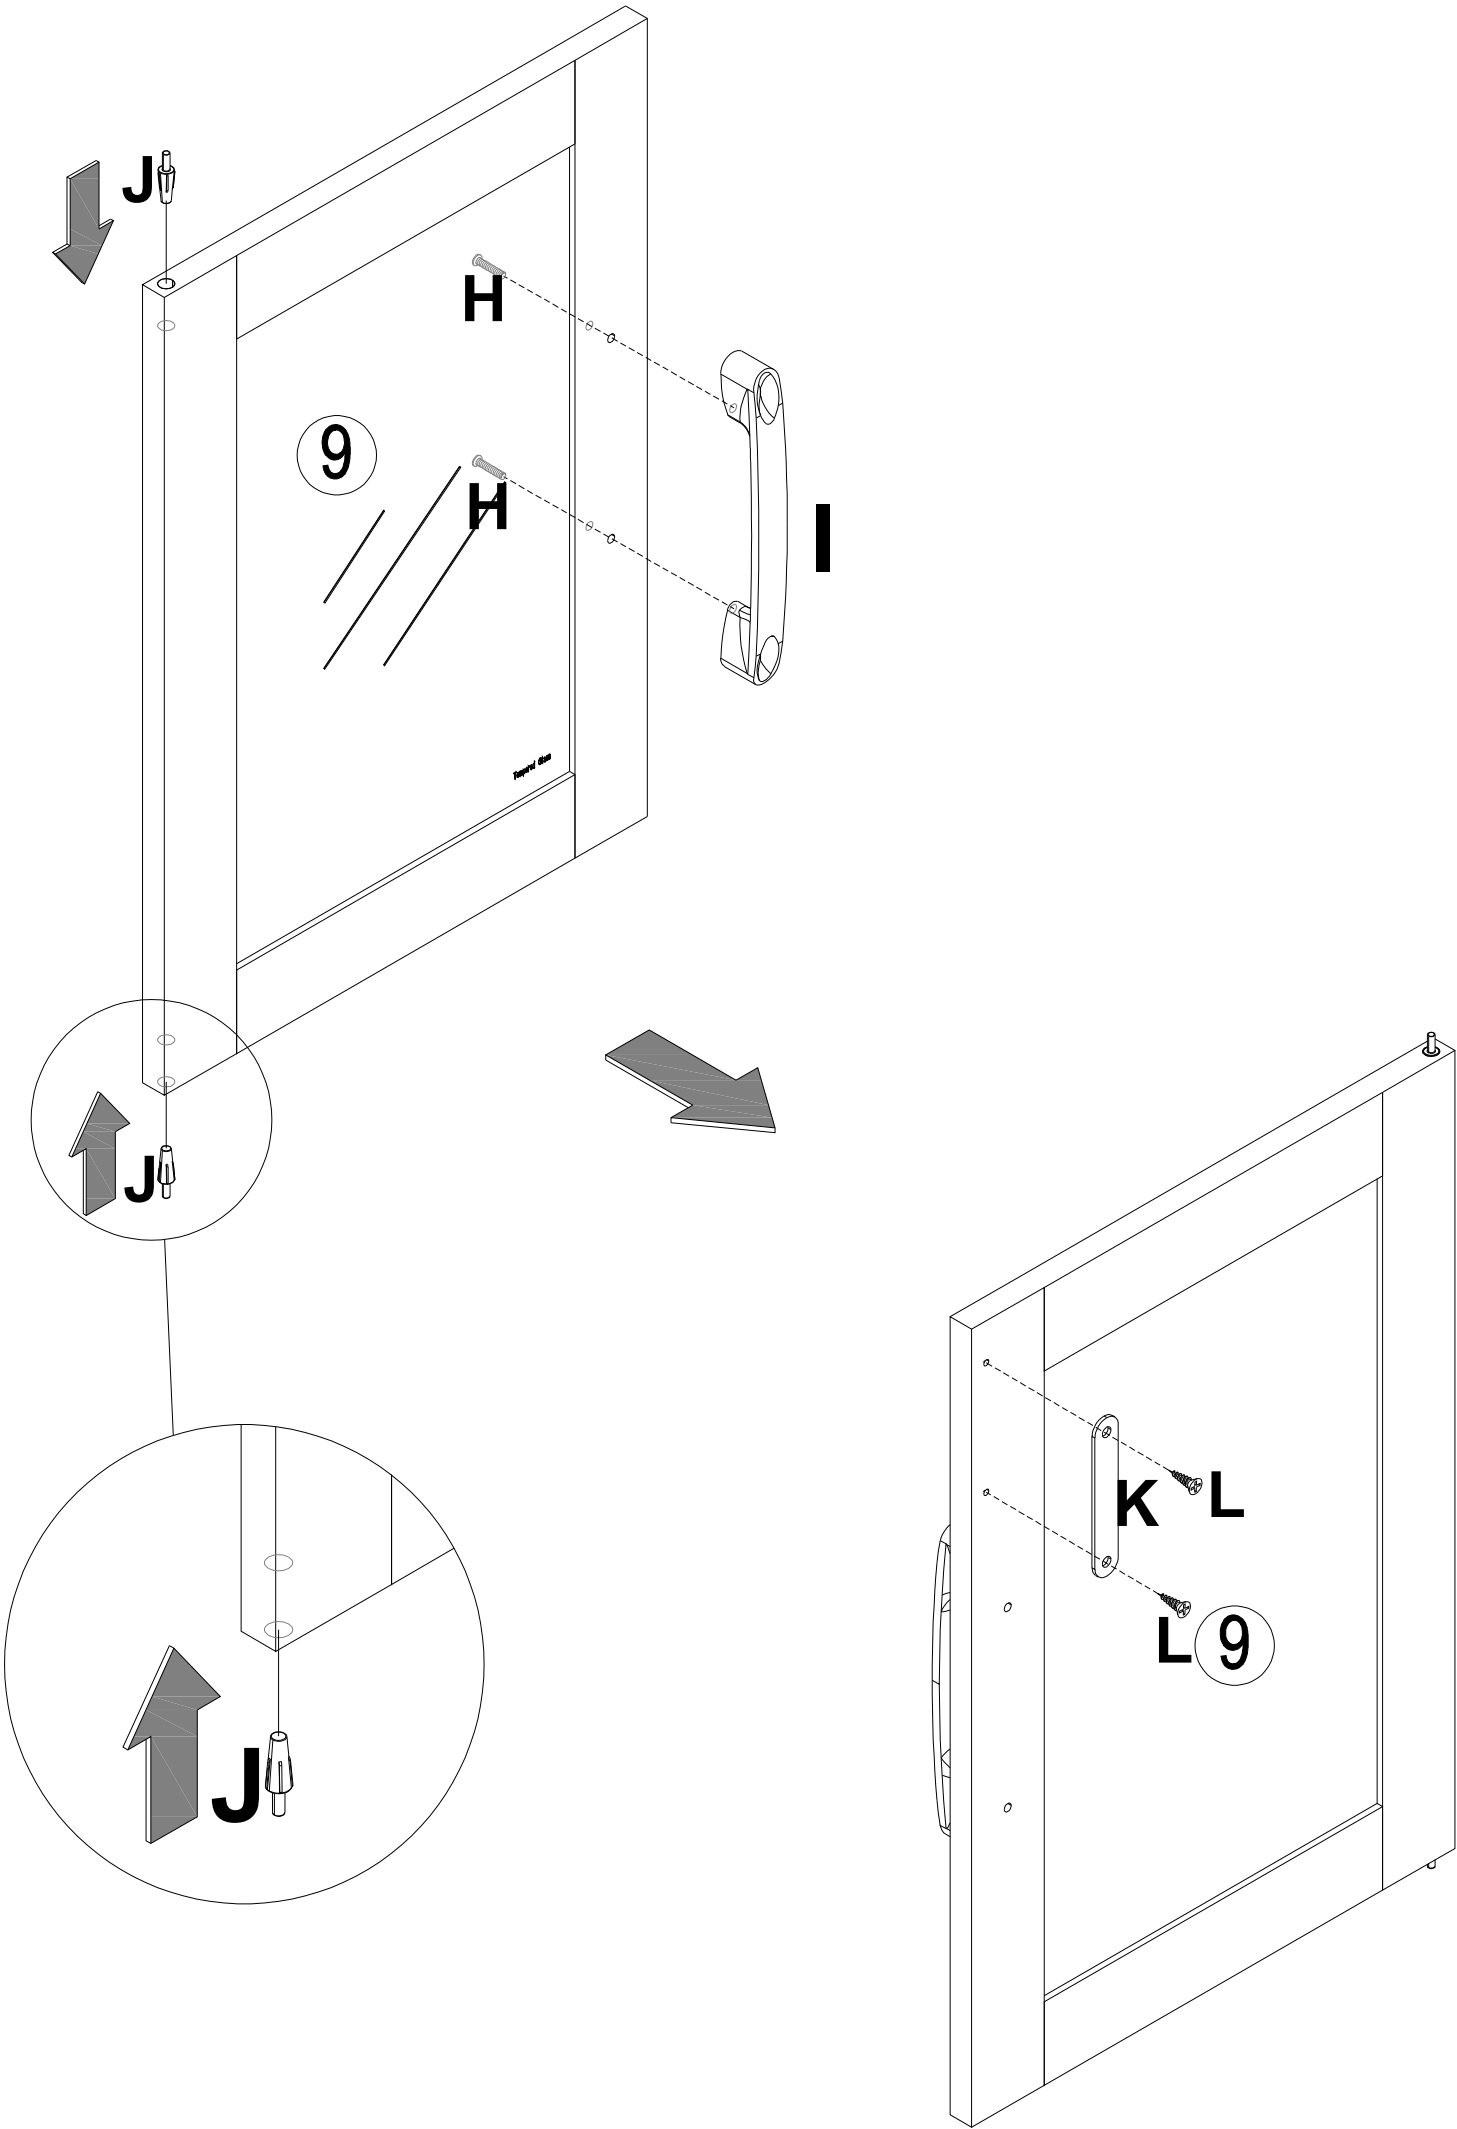

20 Press and hold the black small accessory at the bottom of the door panel and push it inward to align with the hole

K




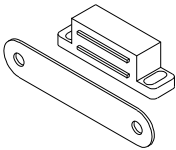


1 SET

M M3.5X14




2 PCS

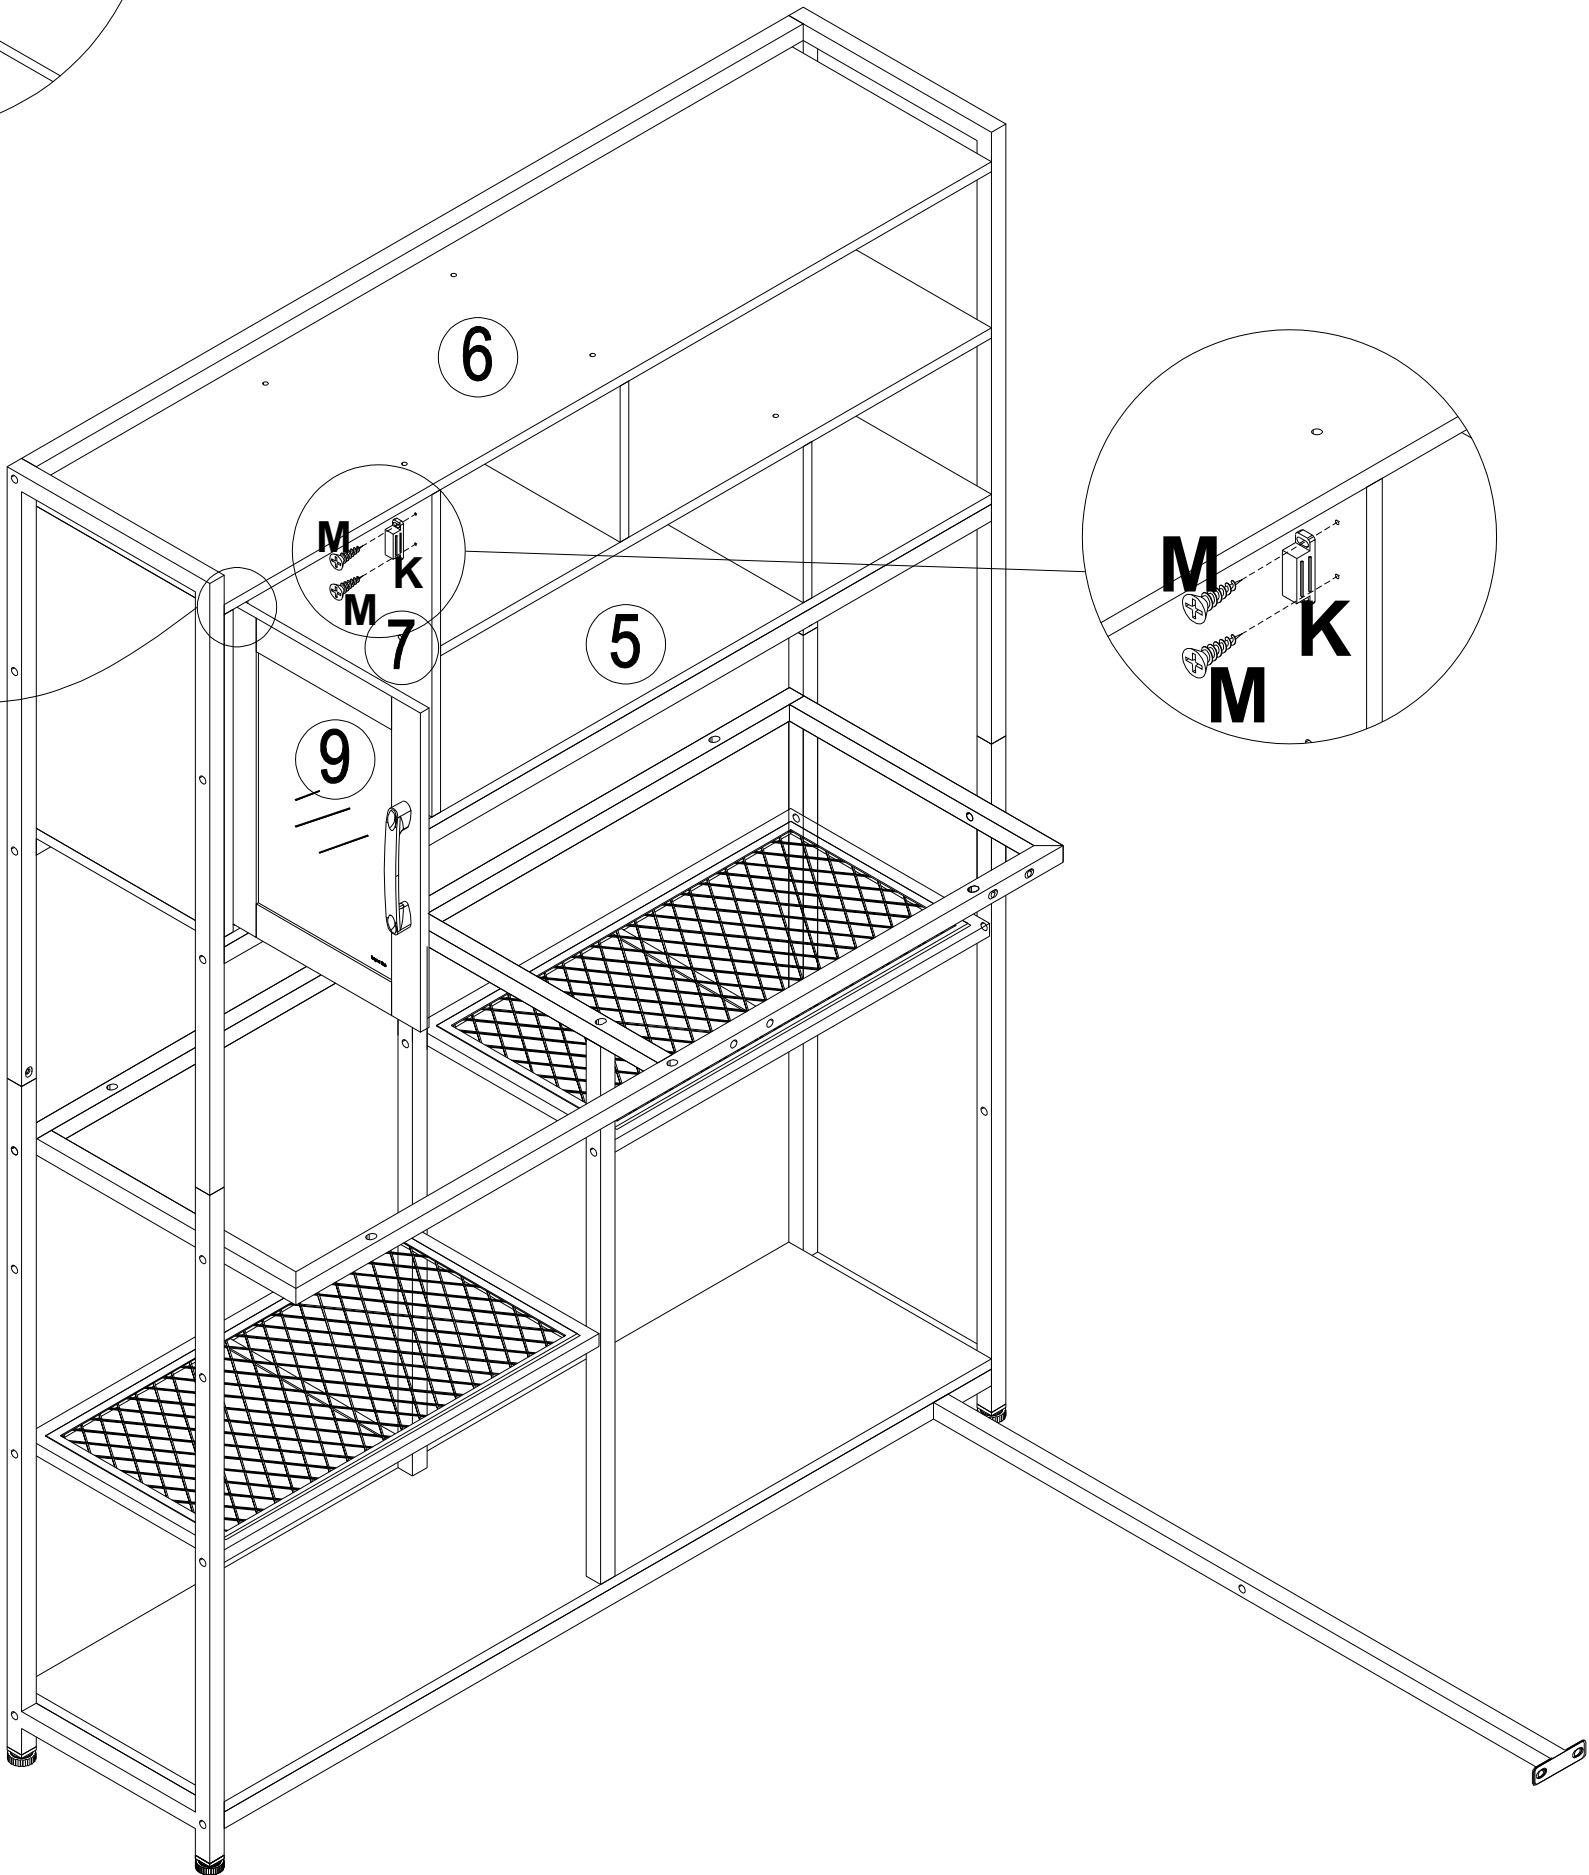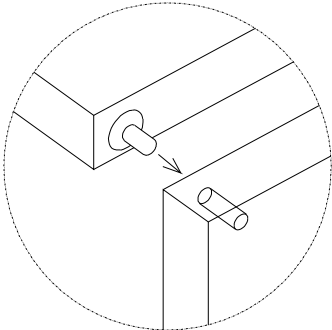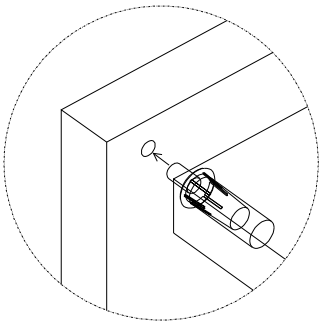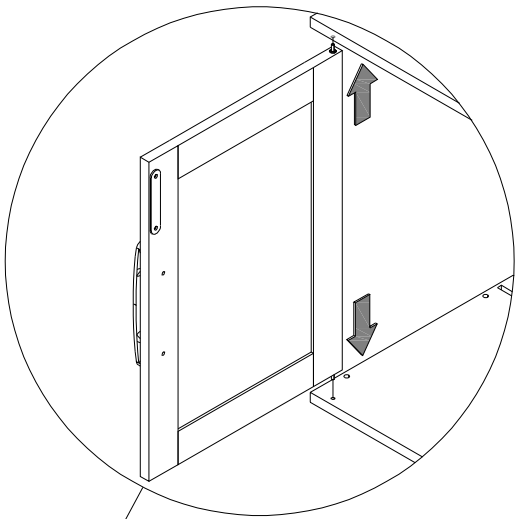



21

B M6X40



4 PCS

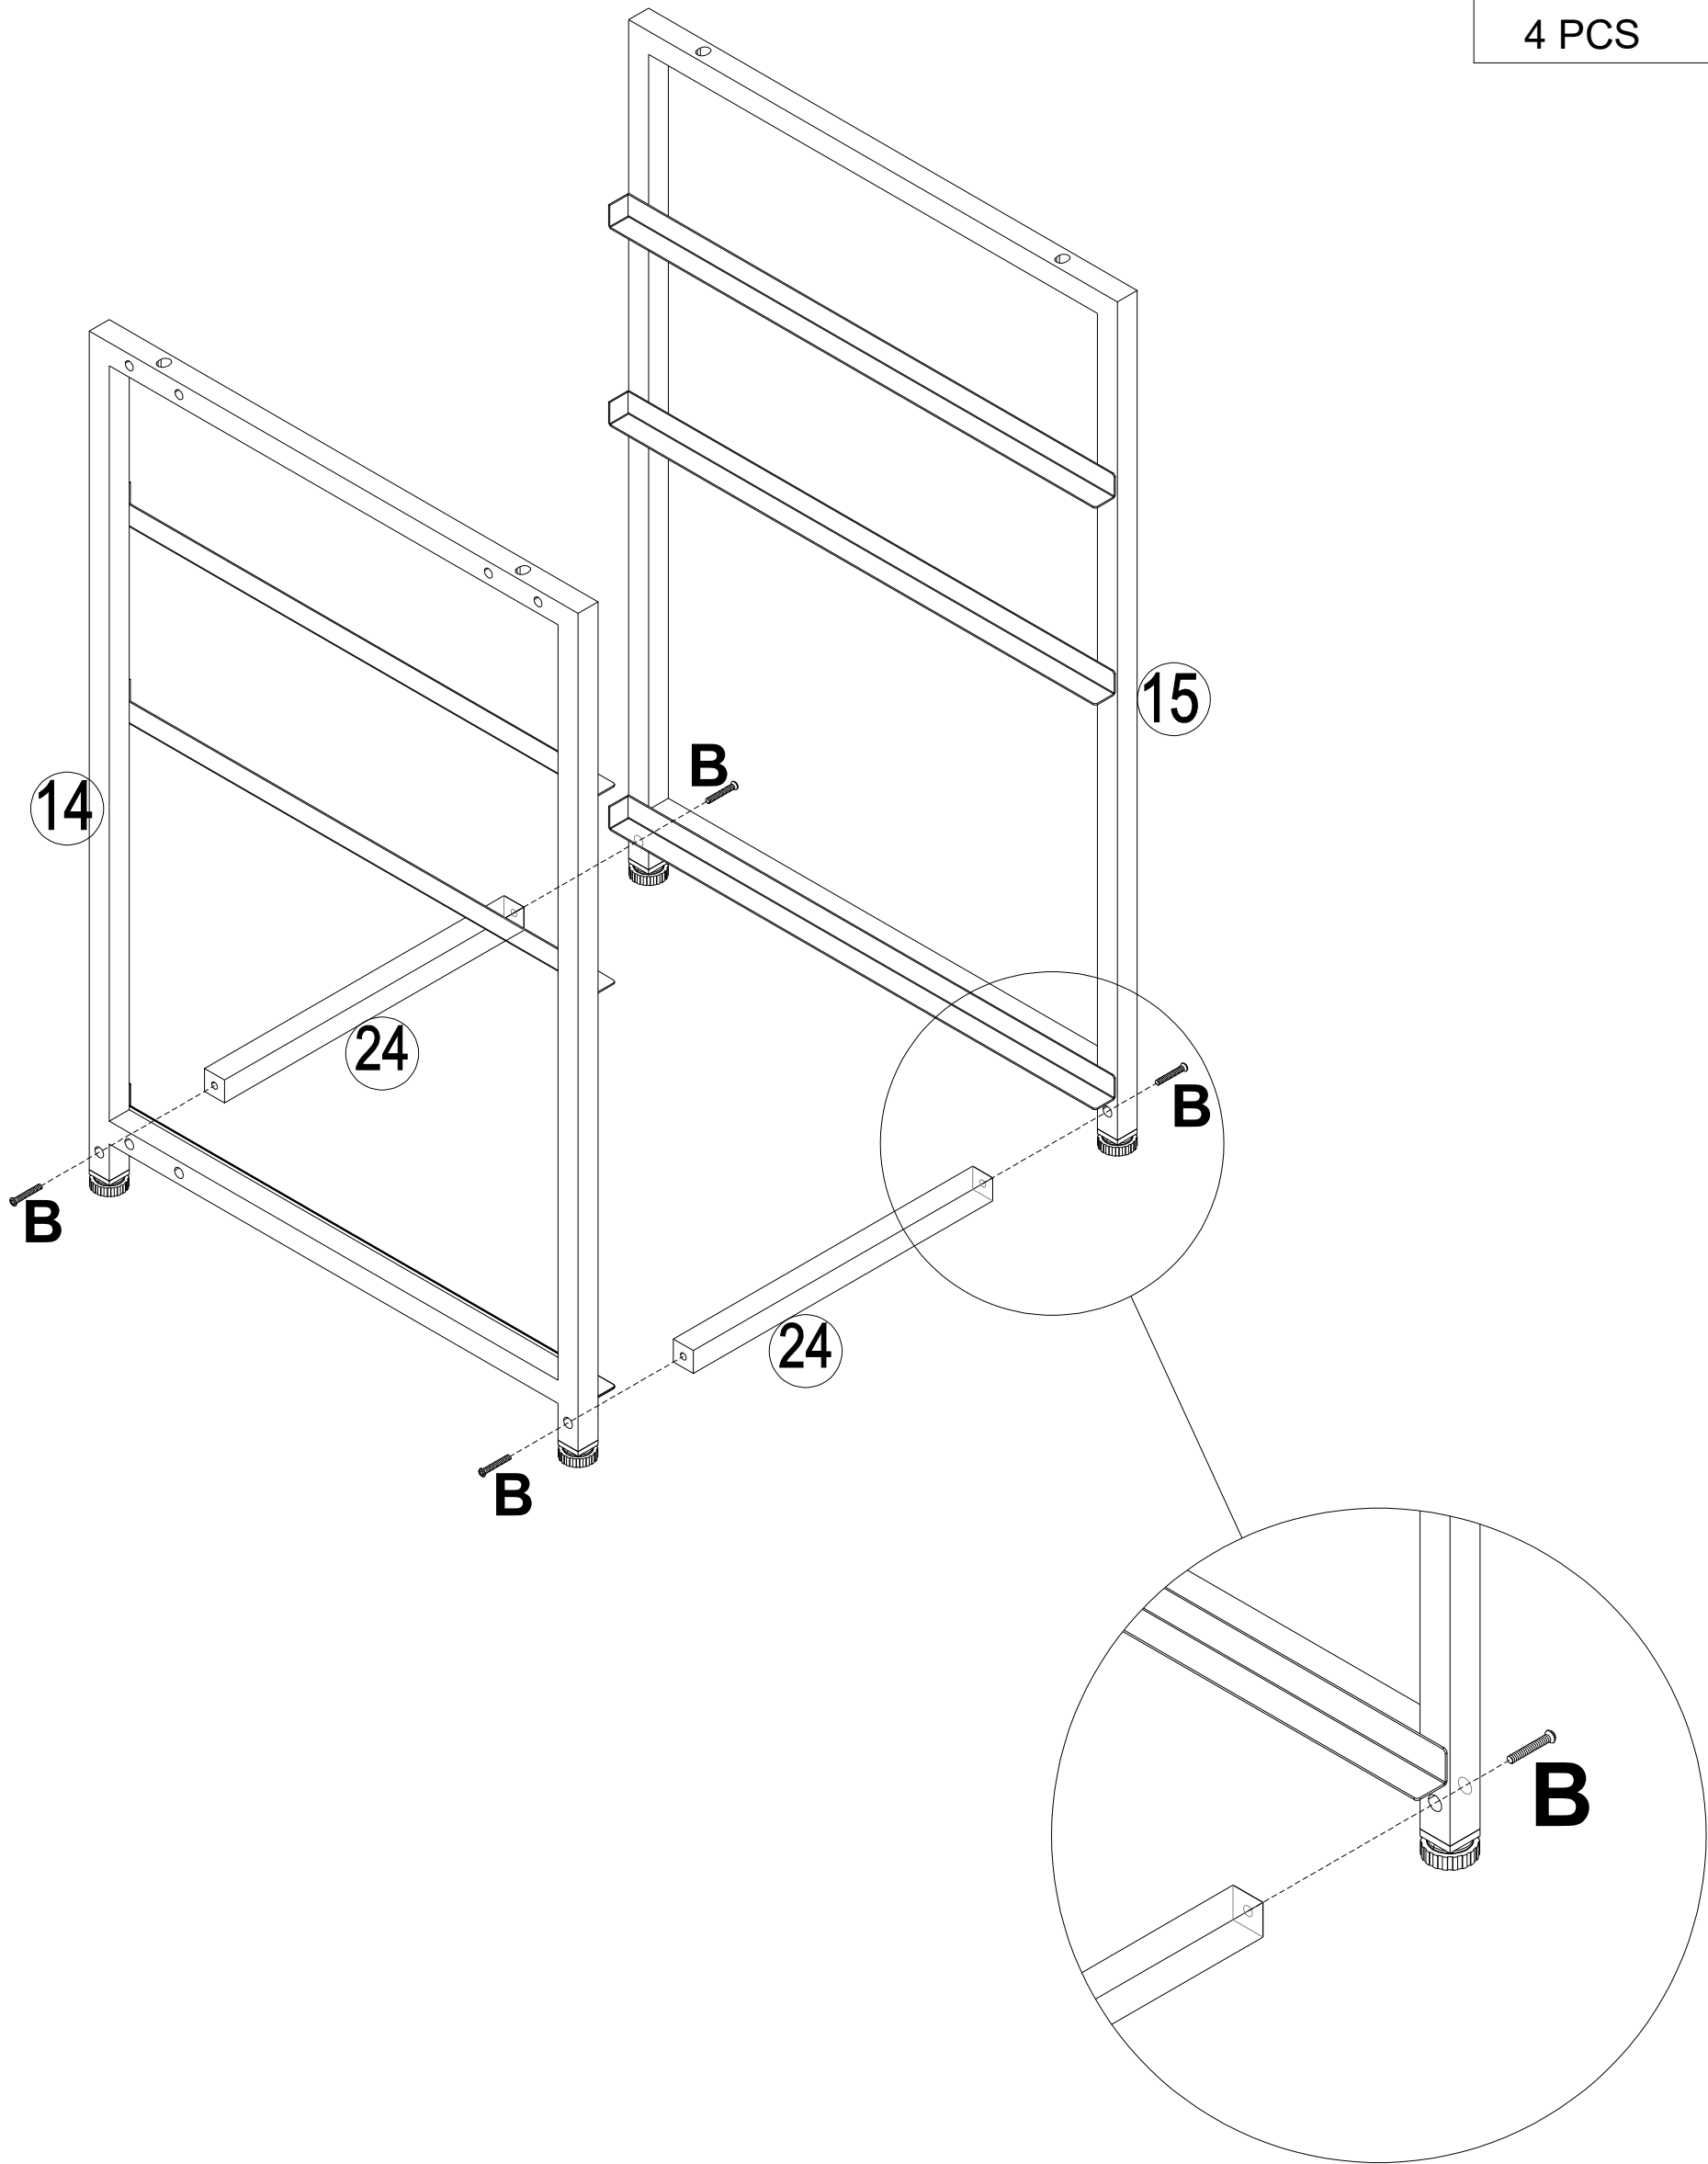


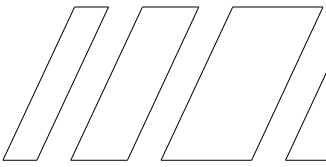

22

F M6X12


2 PCS

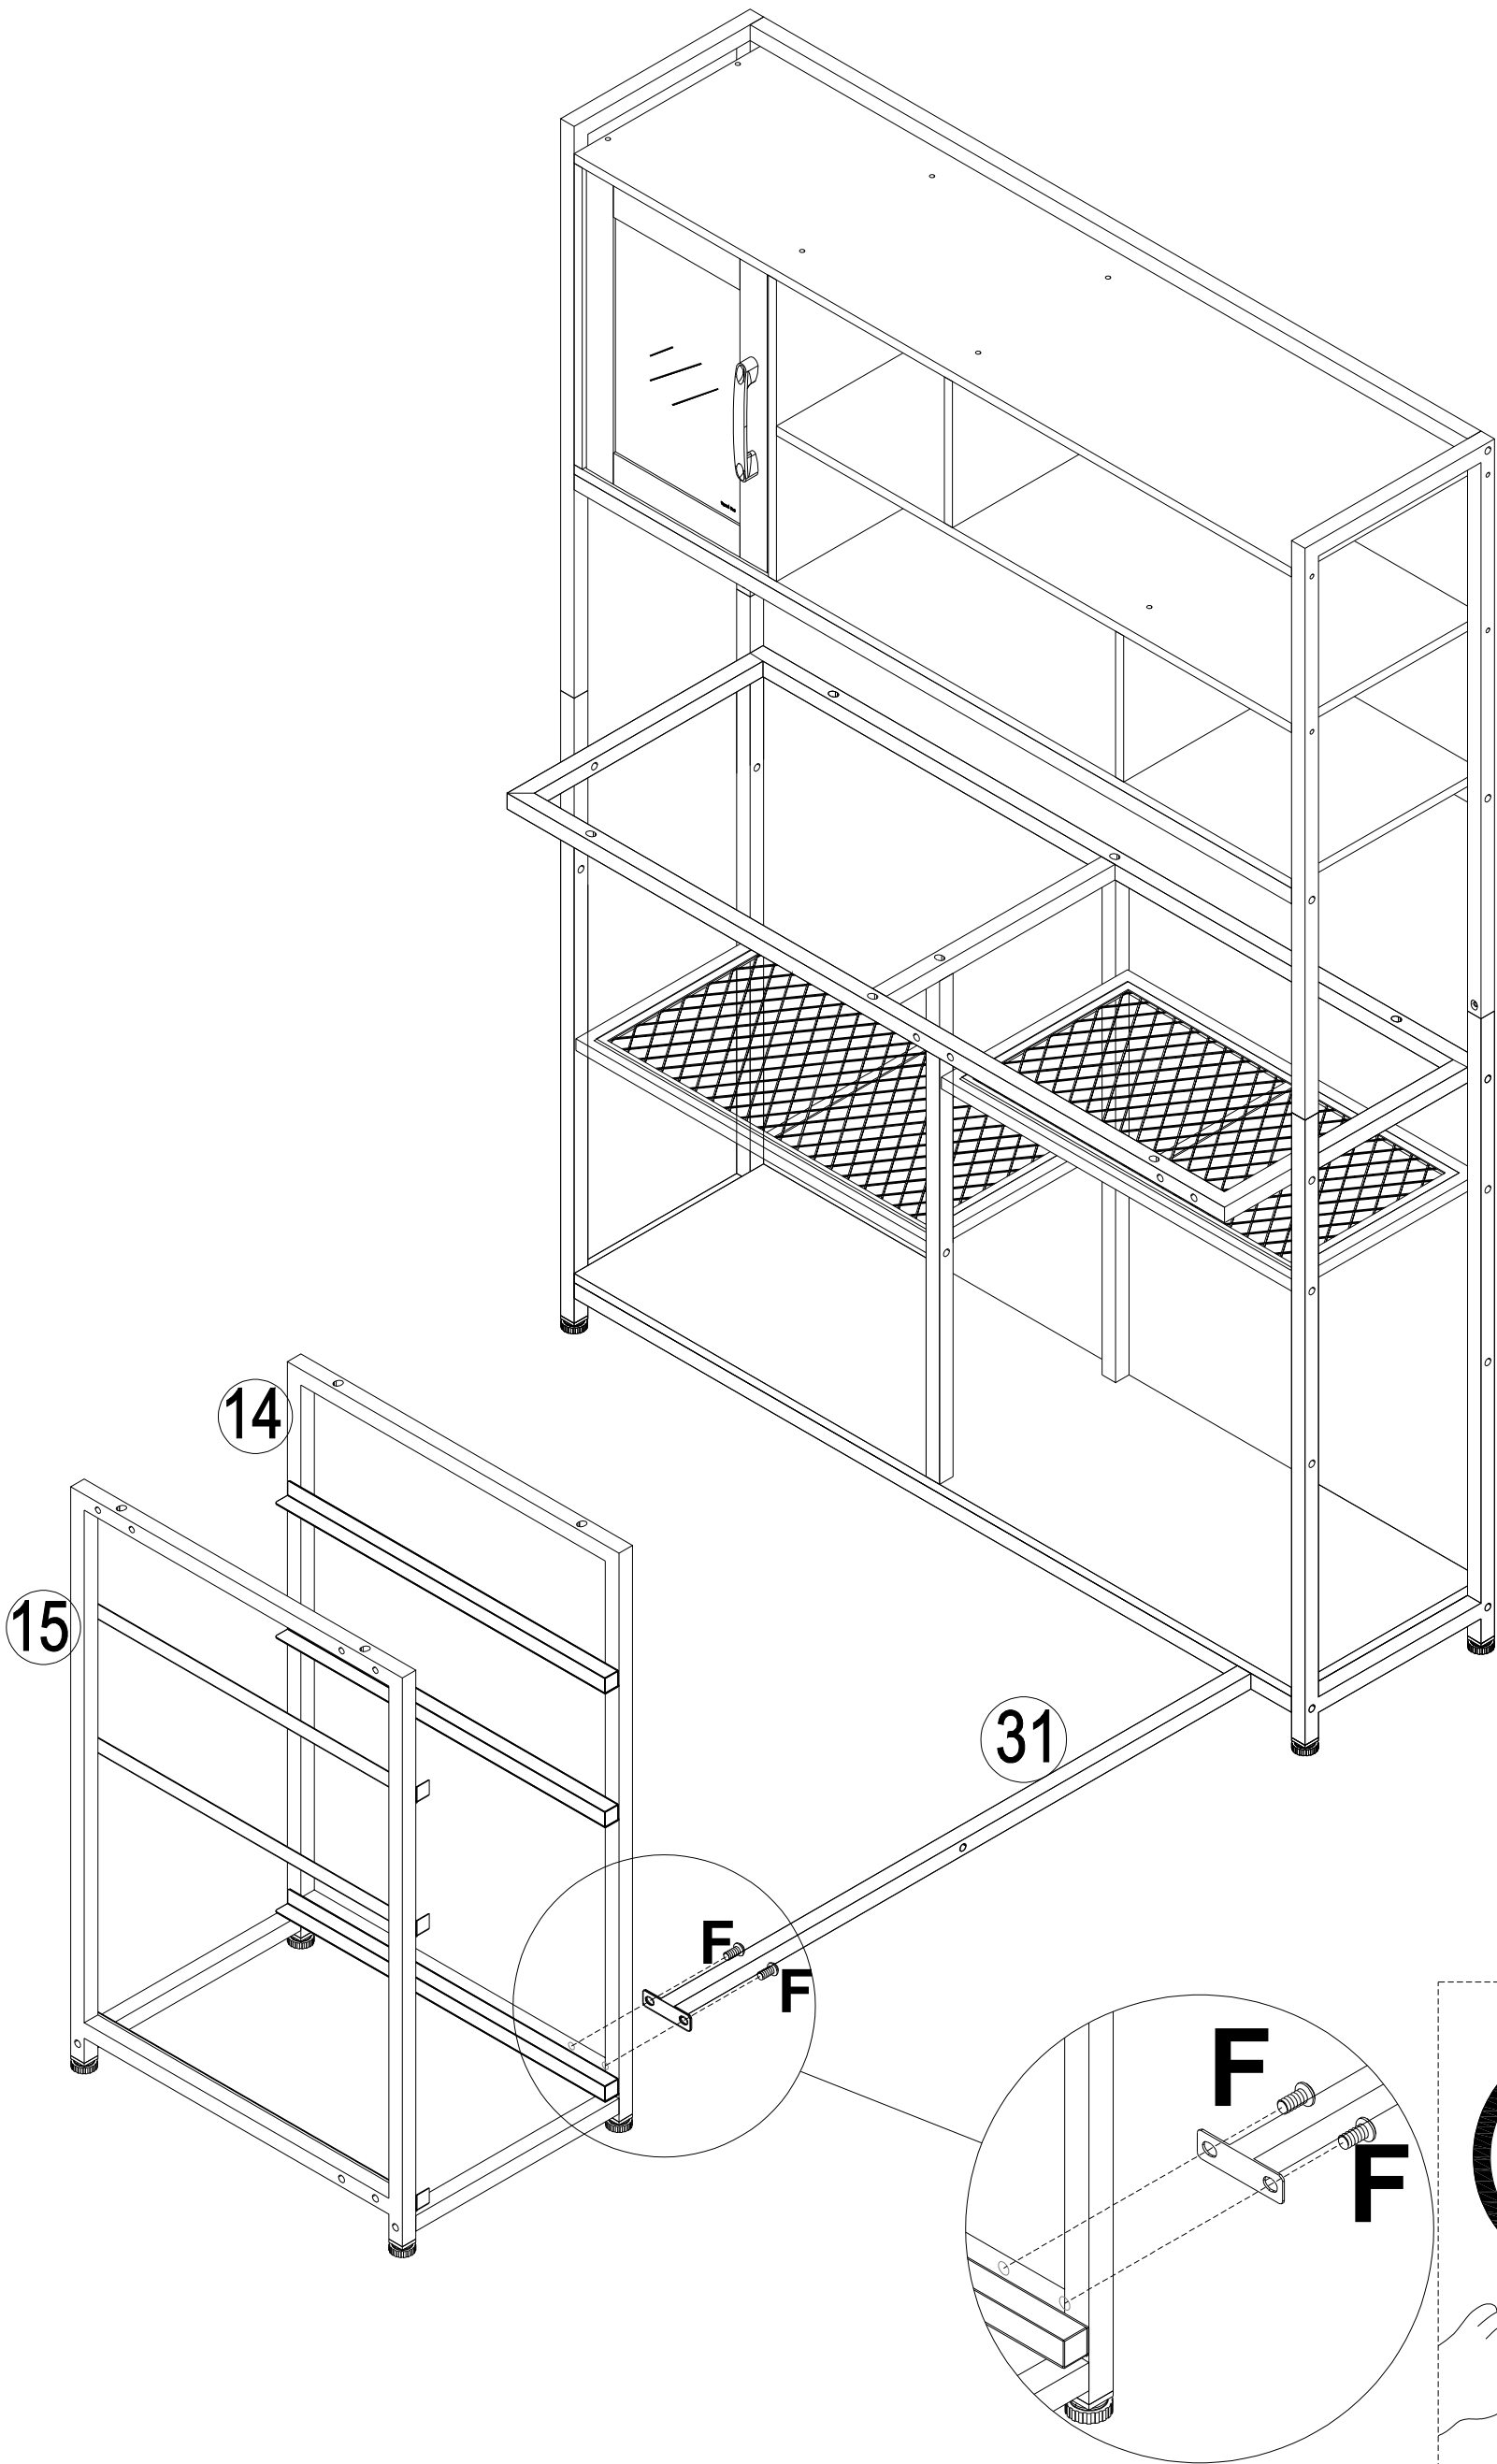


80%

23

F M6X12




8 PCS

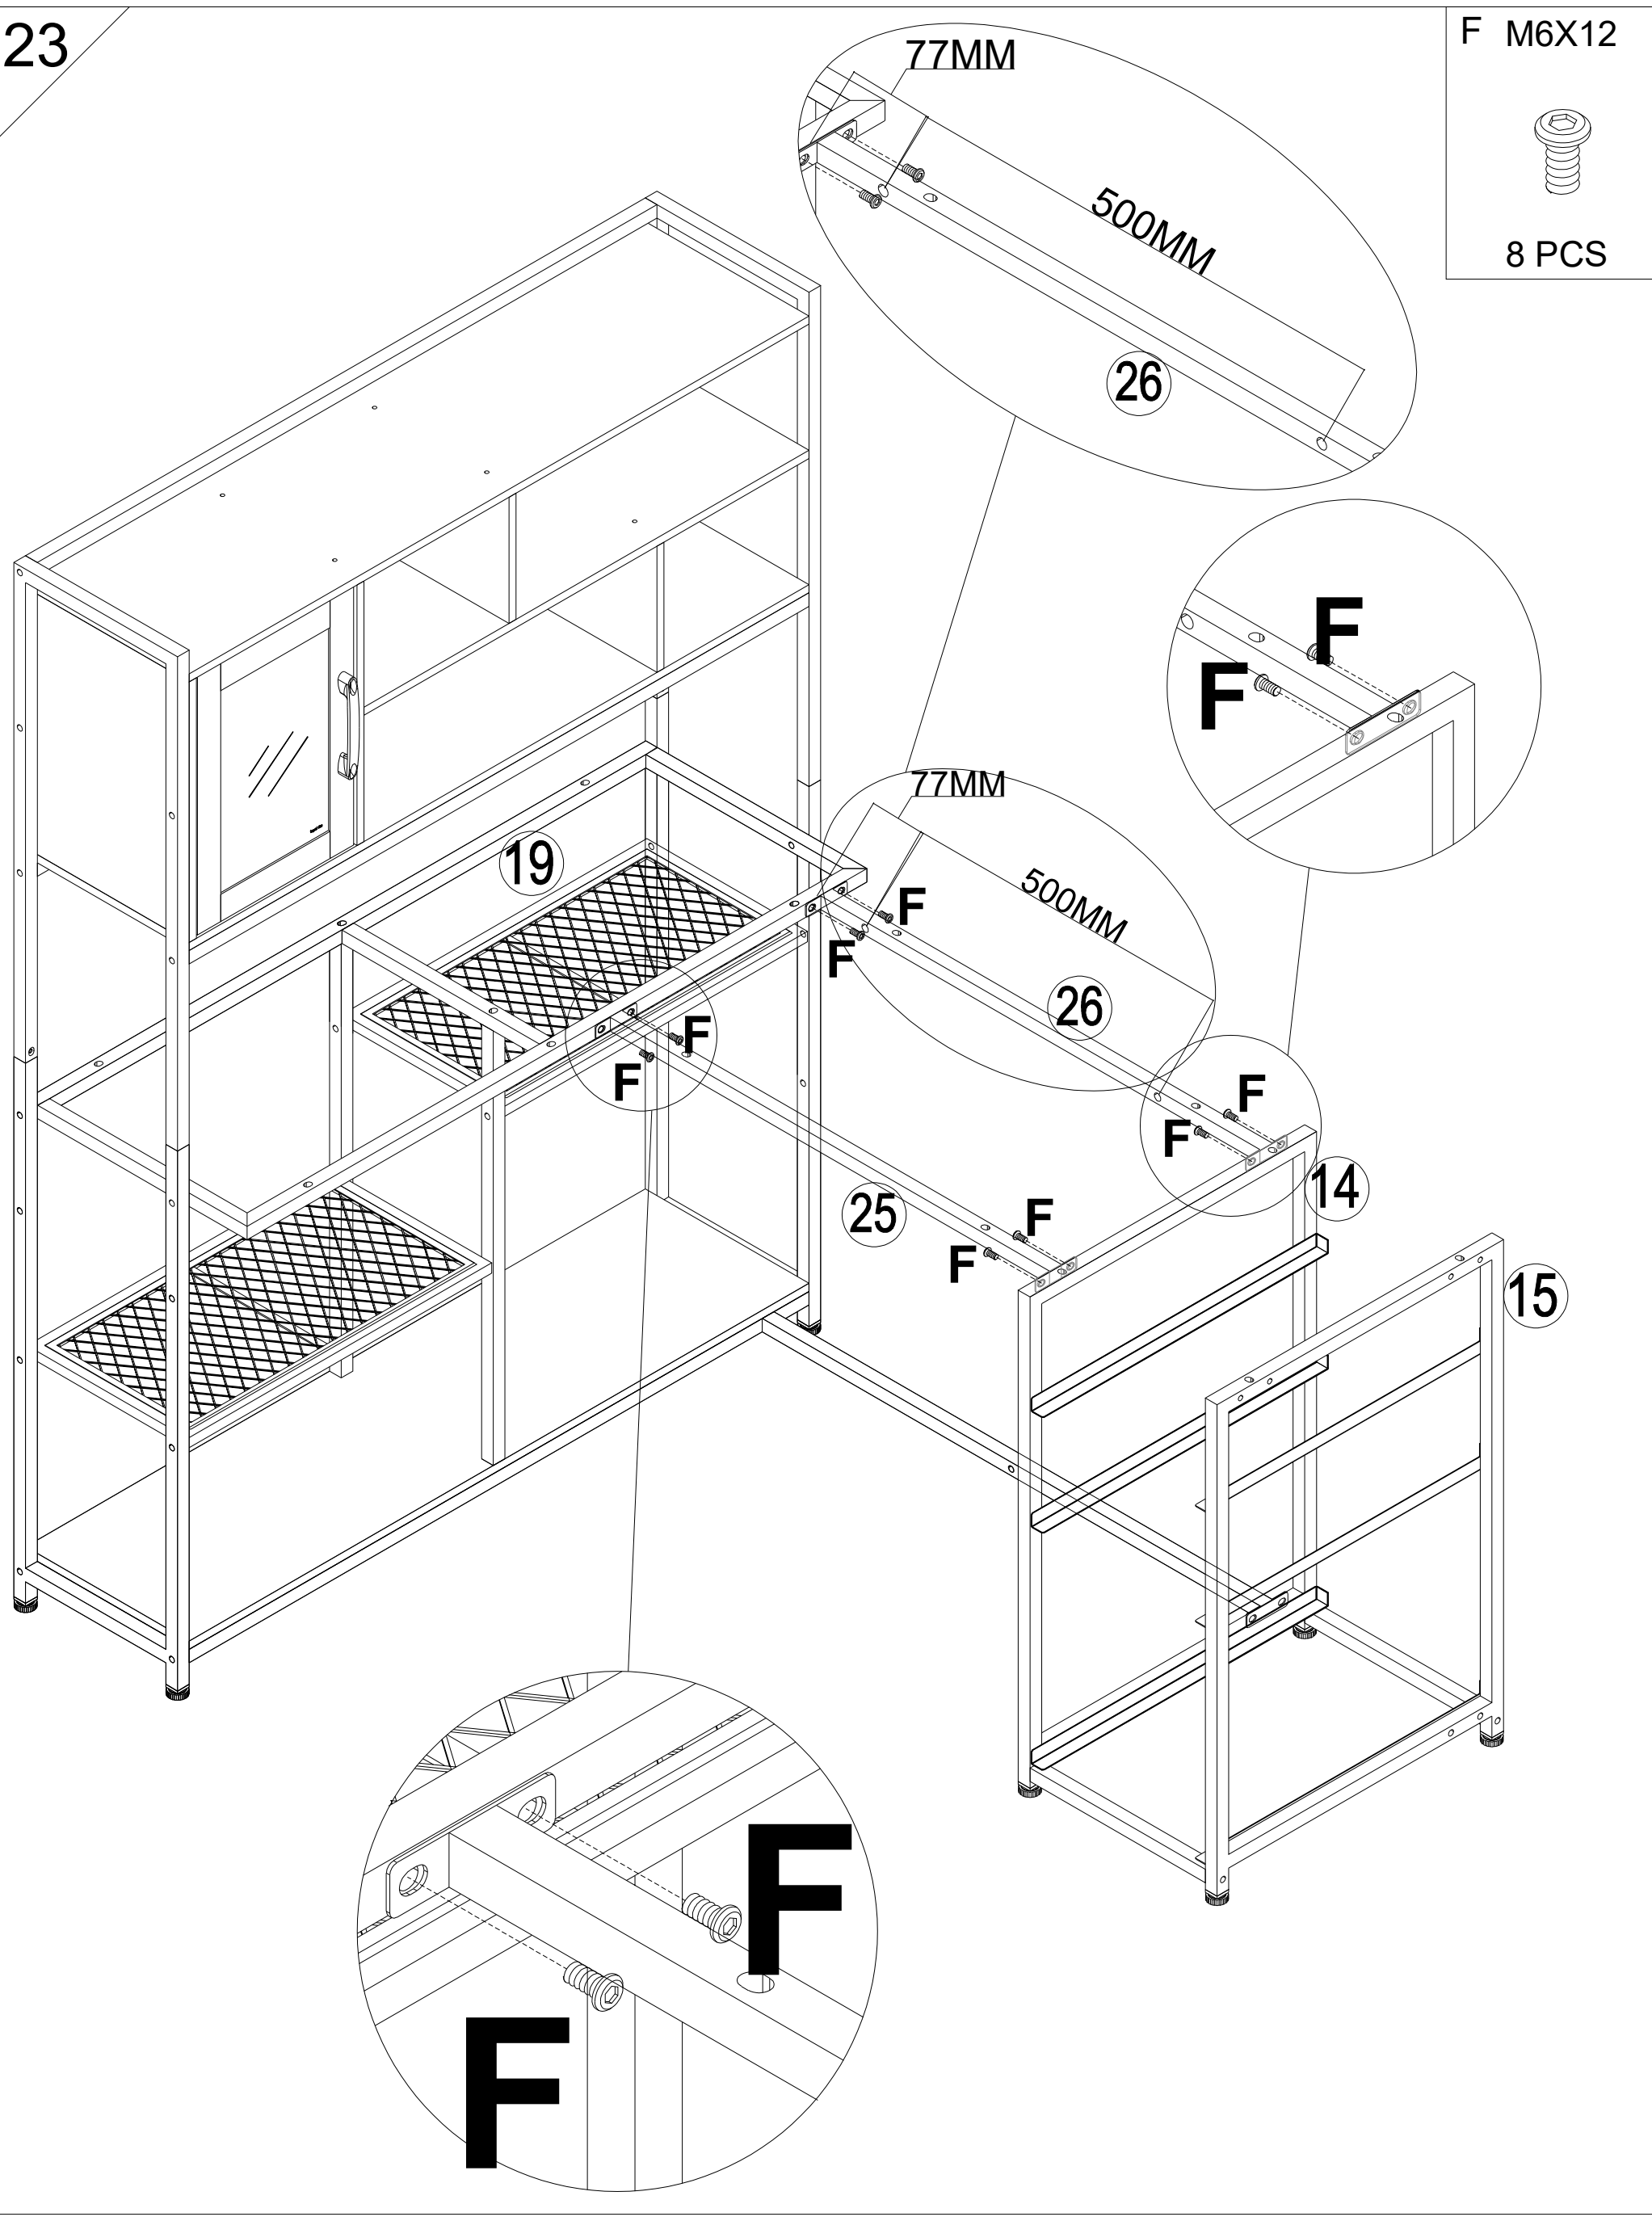

24


C M6X28

E M6




3 PCS

3 PCS

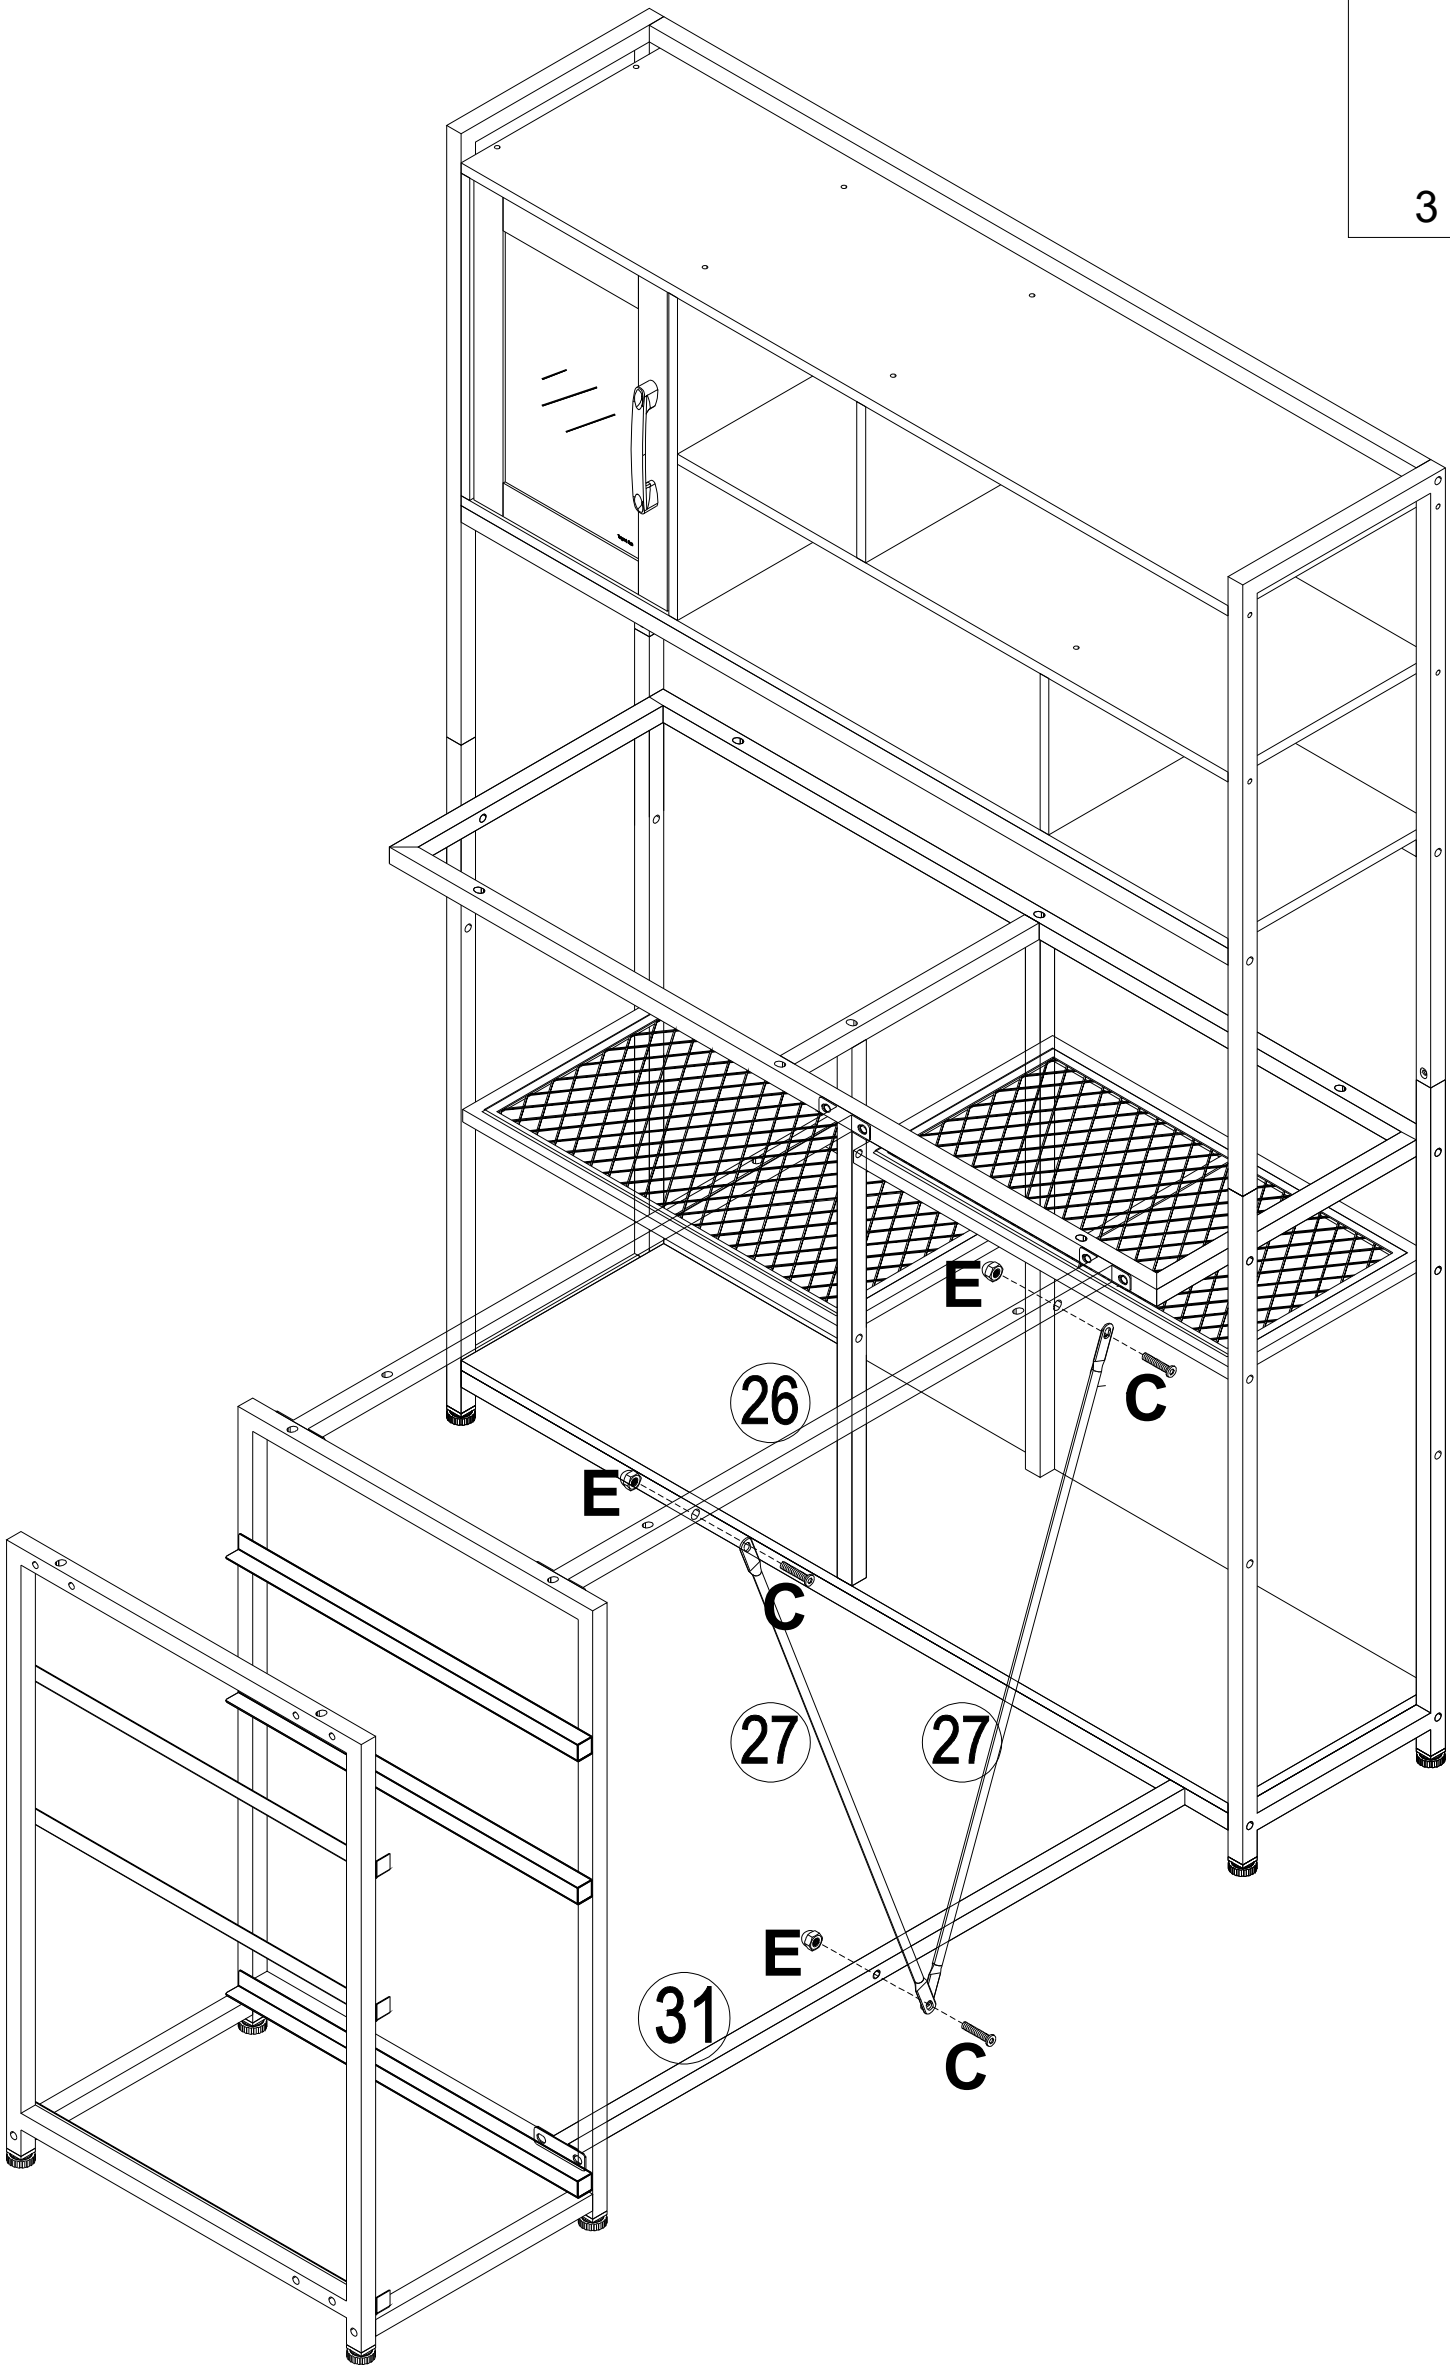


25


C M6X28





13 PCS

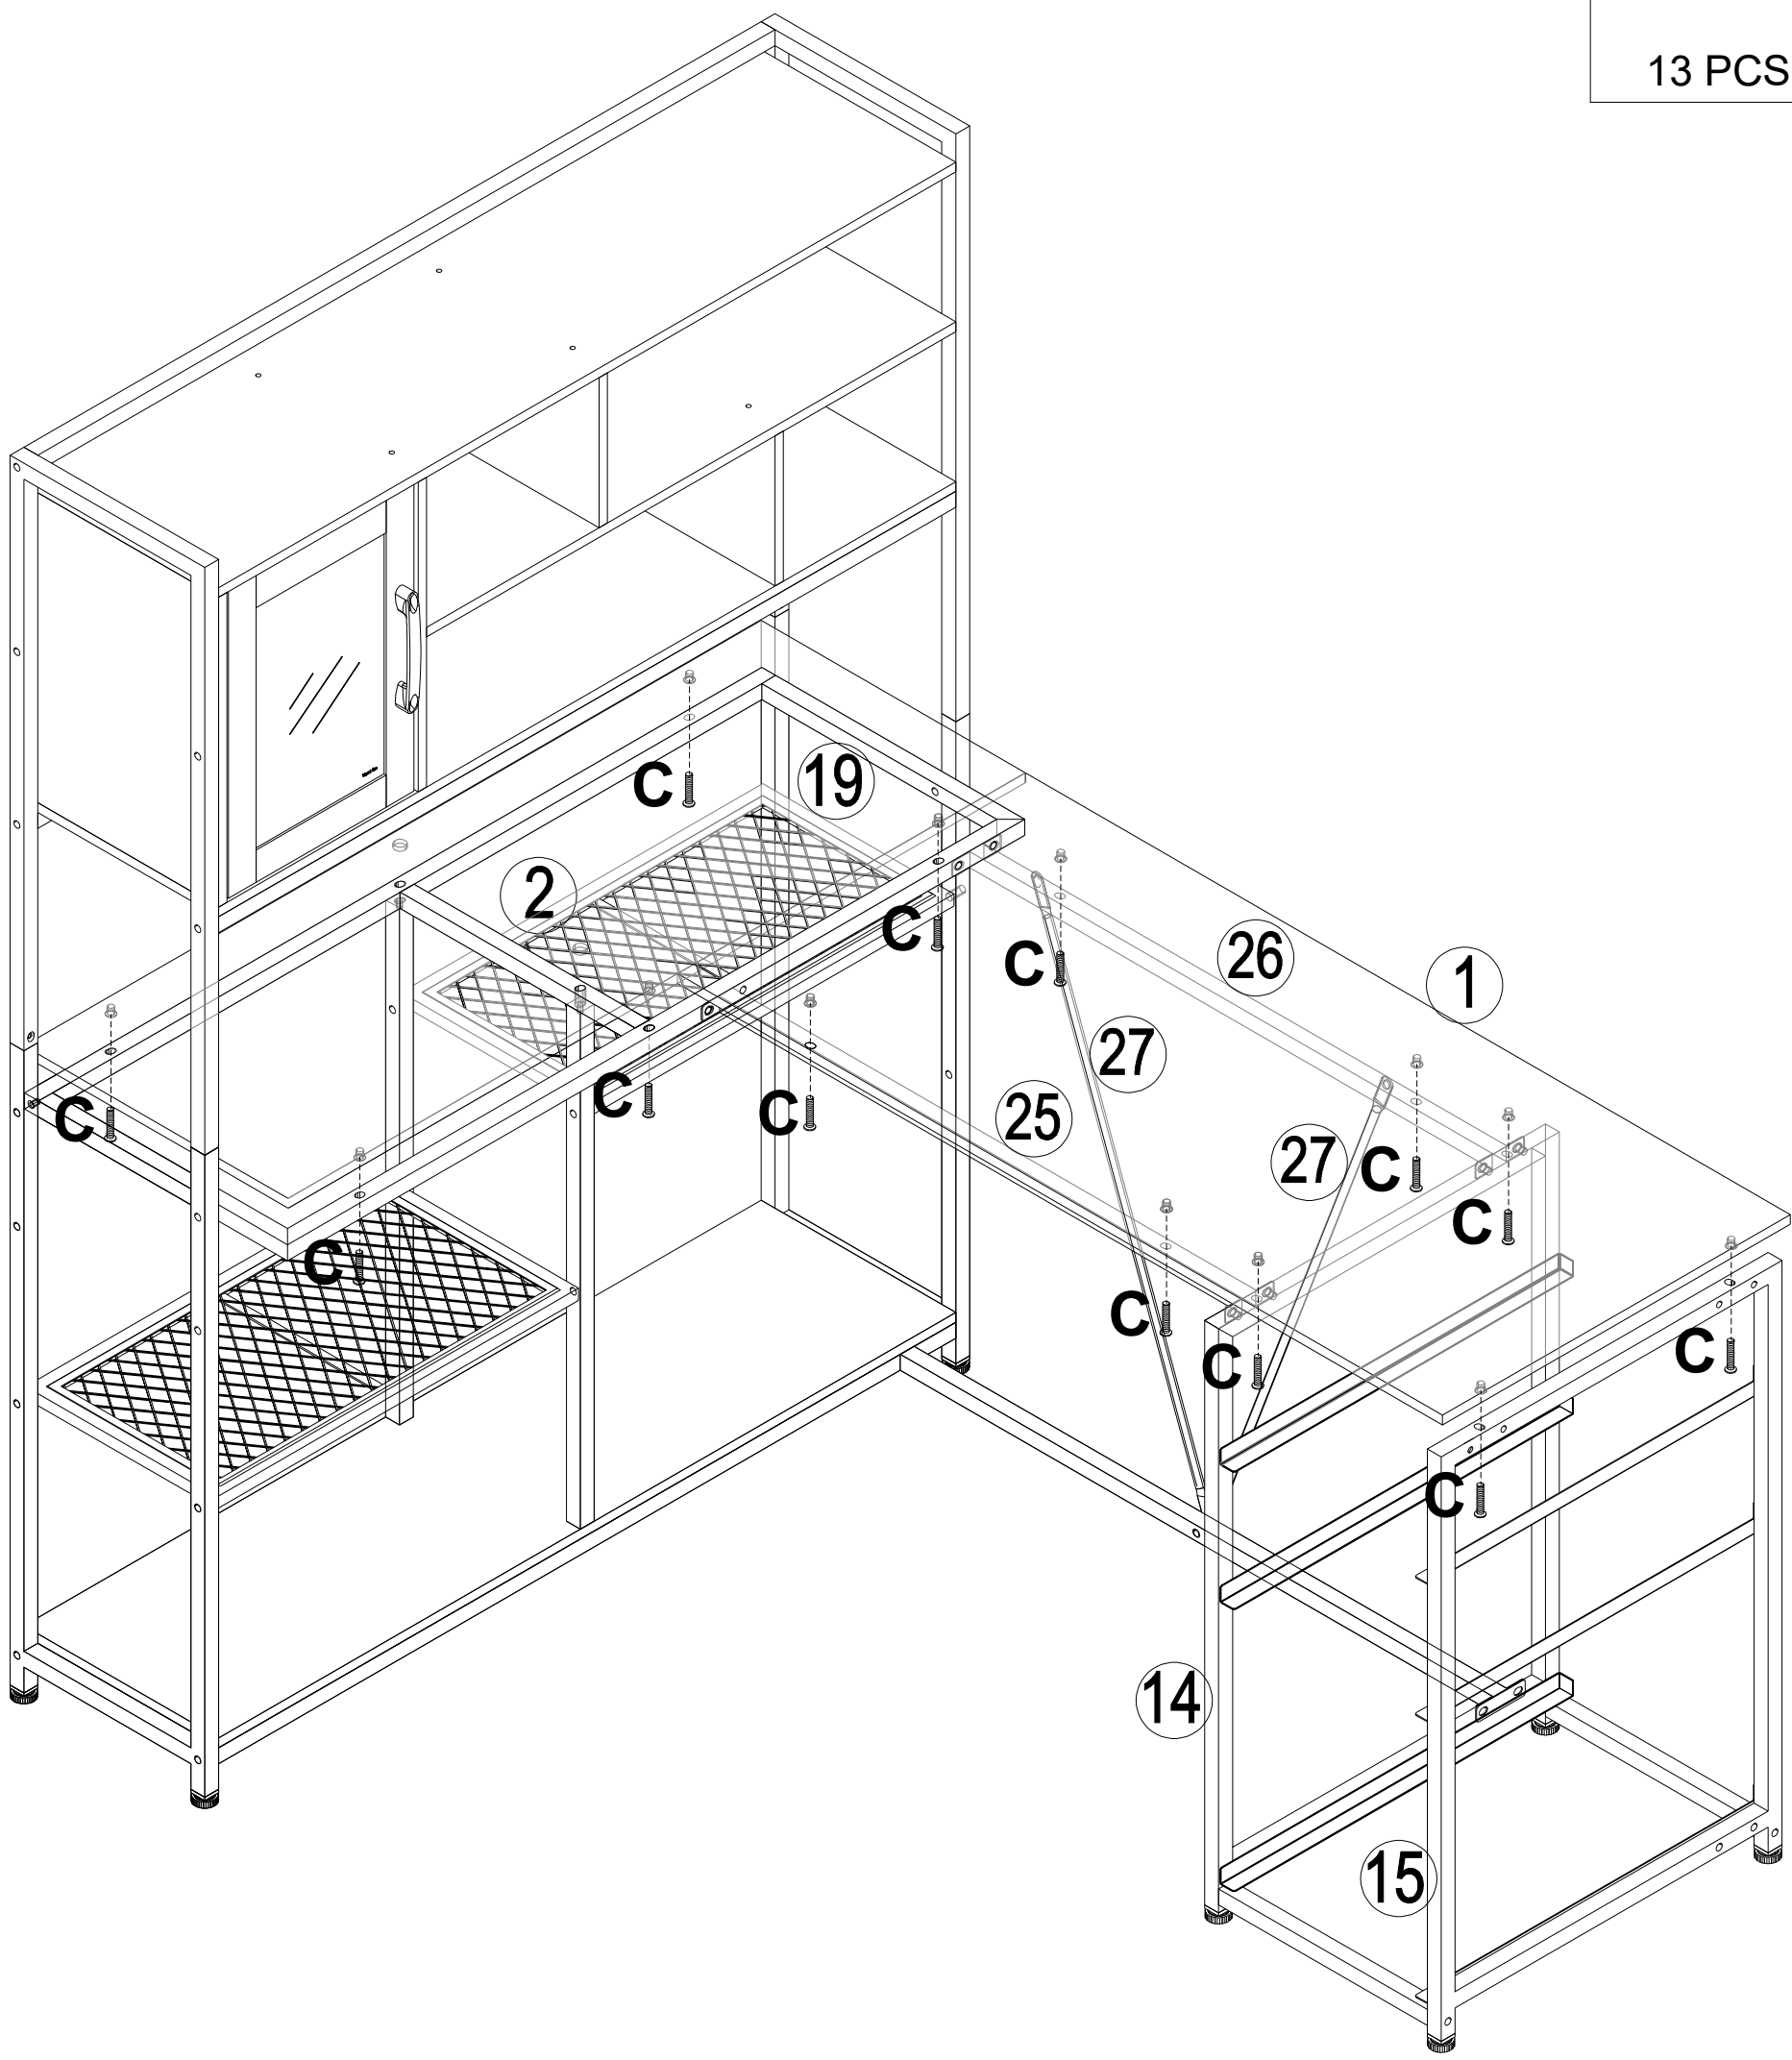


26

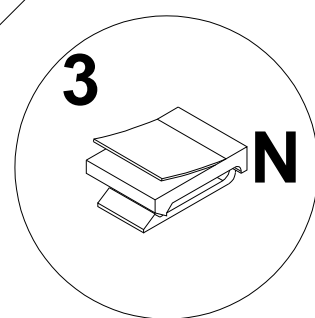

Tear off the tape and apply it to the plate, Then press it firmly with your hand

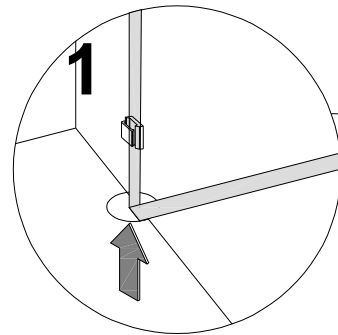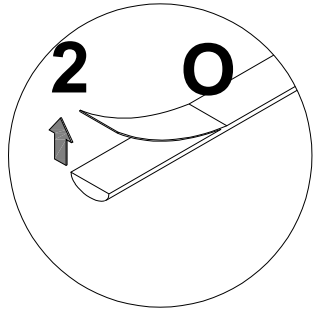

N	O
5 PCS	1 PC

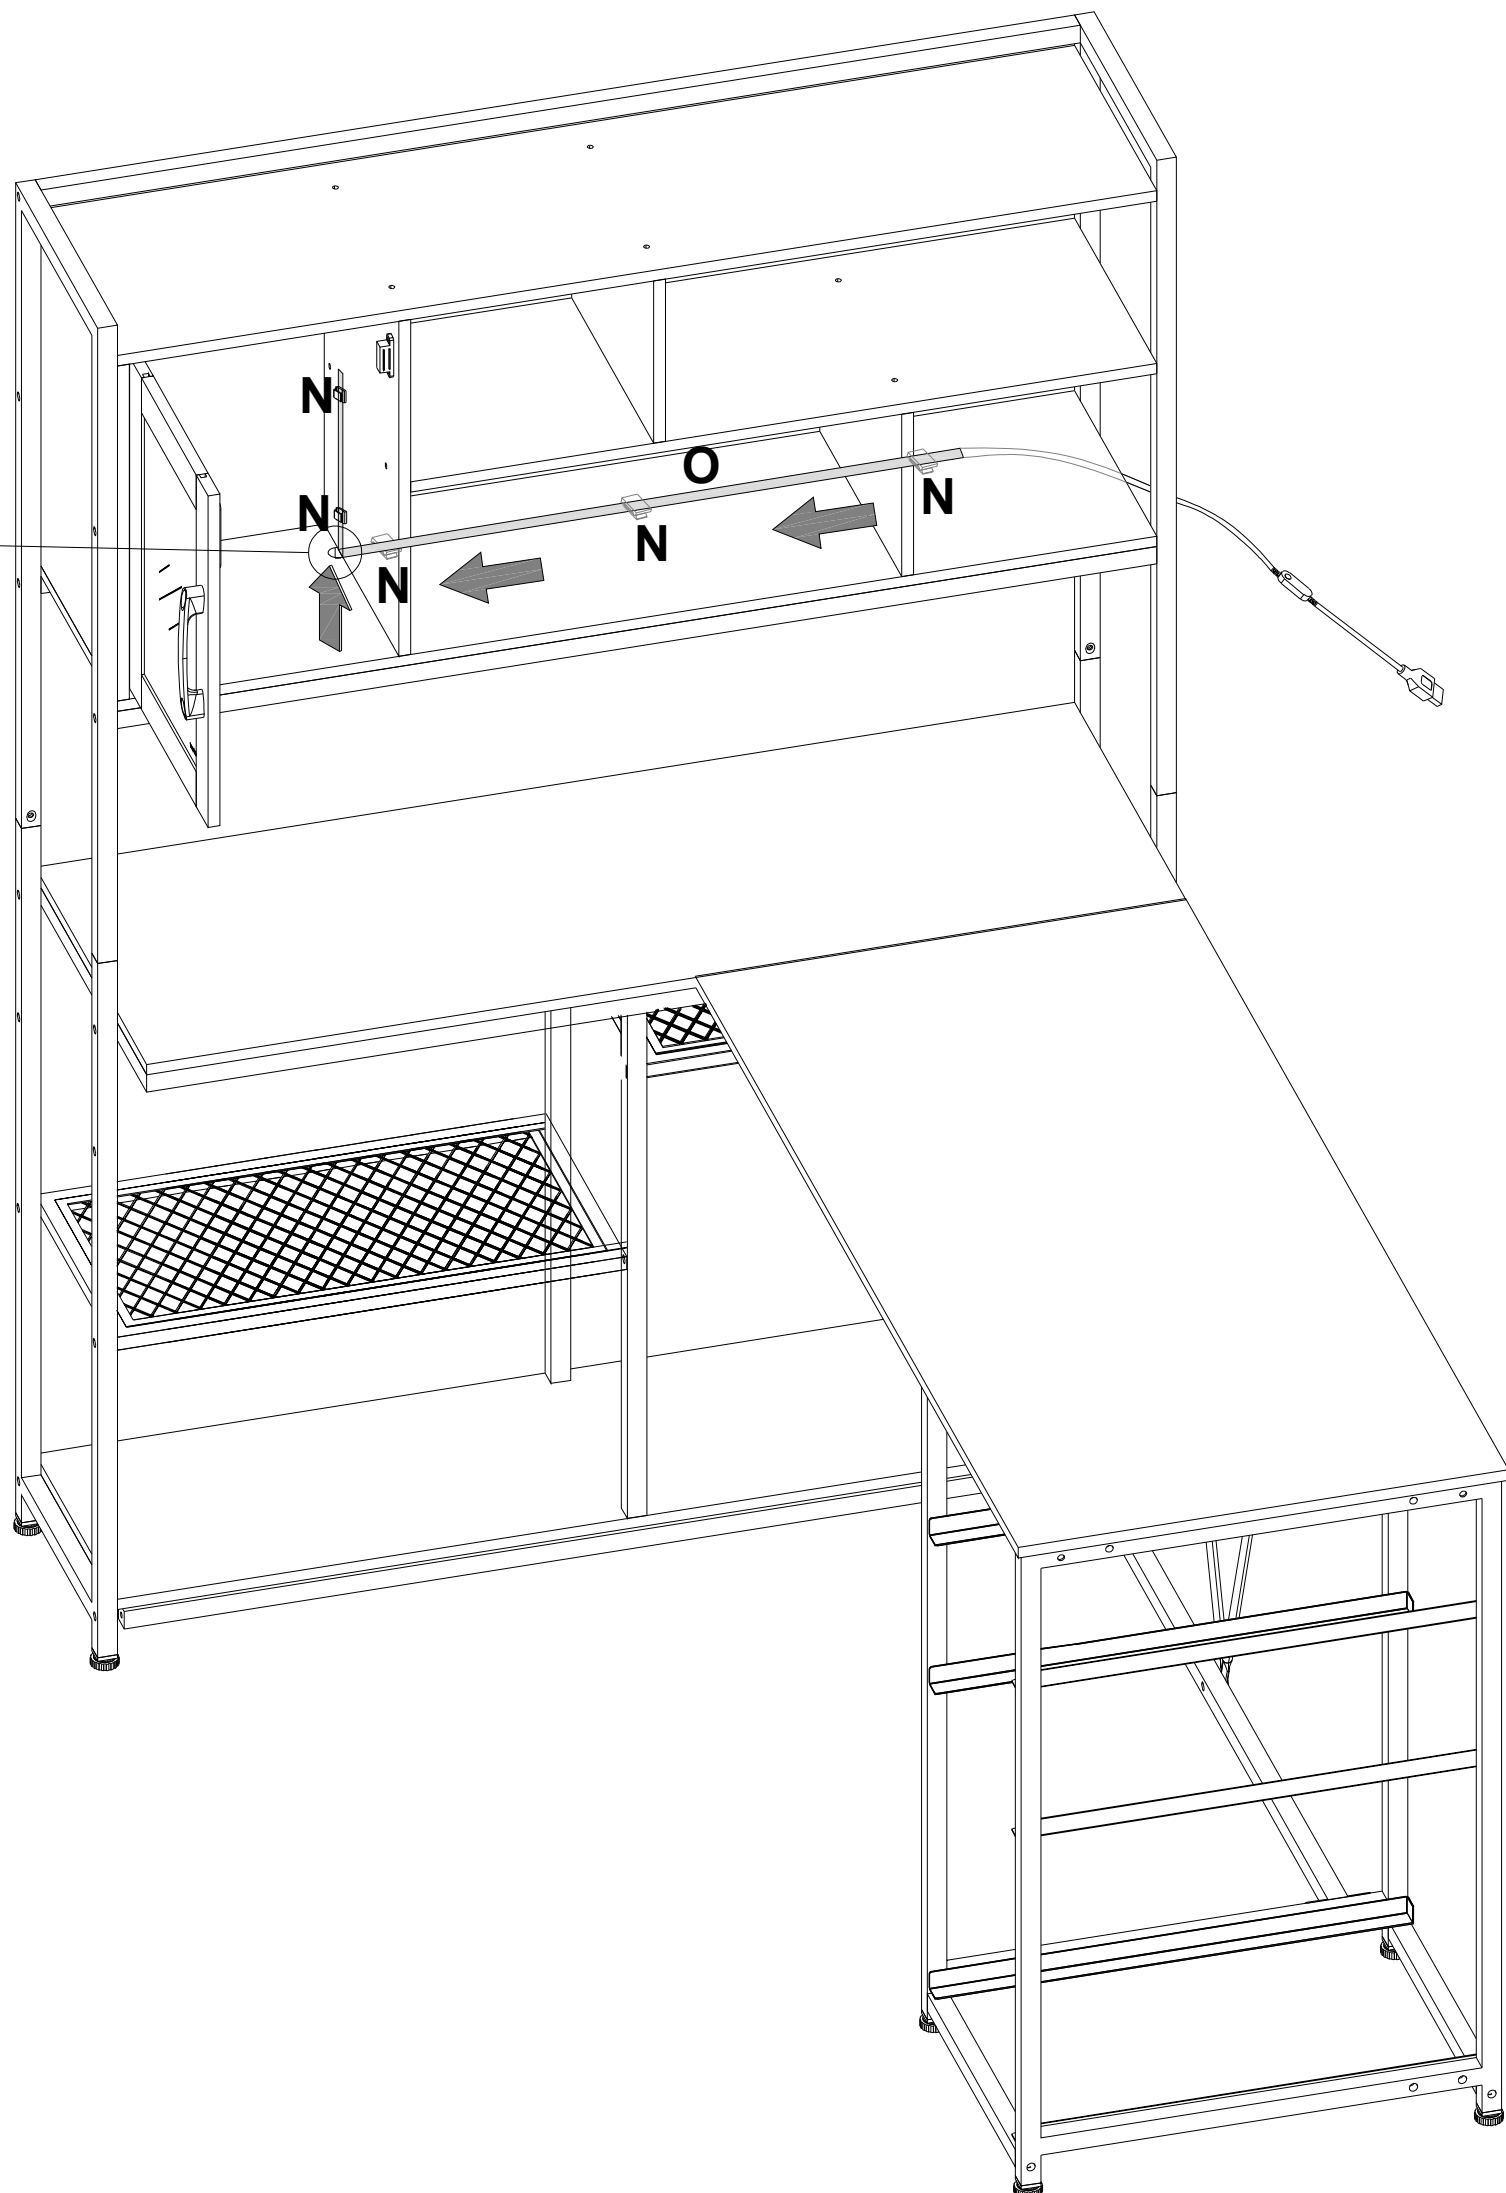

27




R M5X42

S Ø15X10




4 PCS

4 PCS

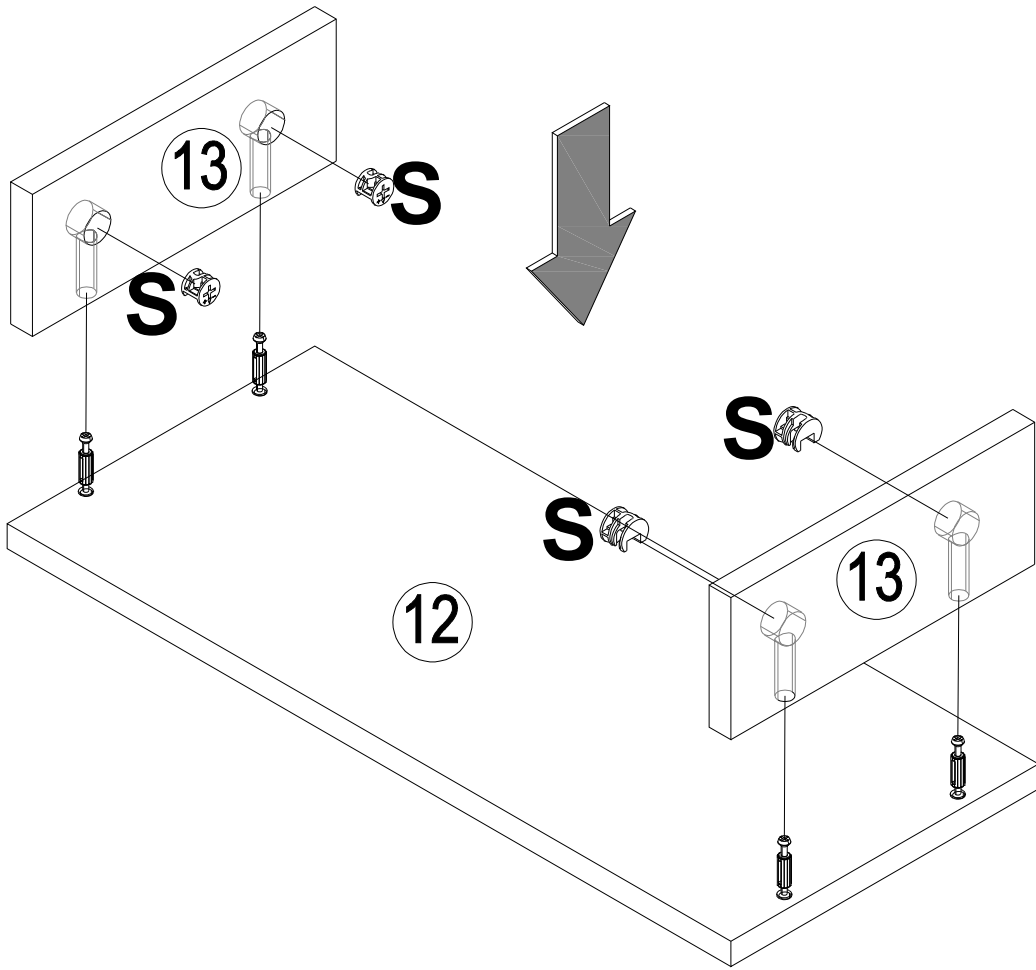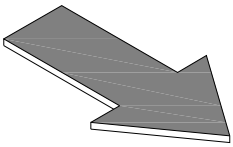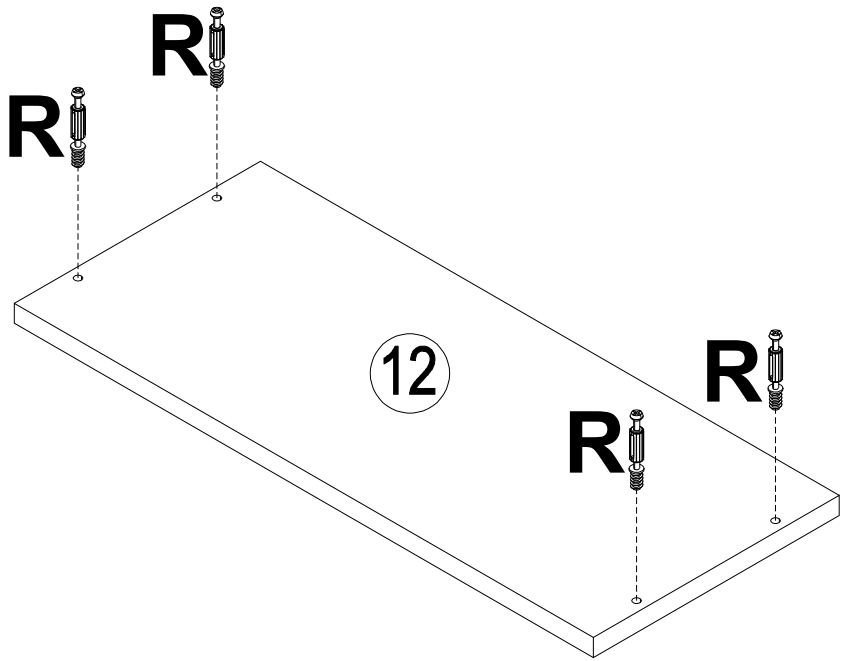



28

F M6X12






2 PCS

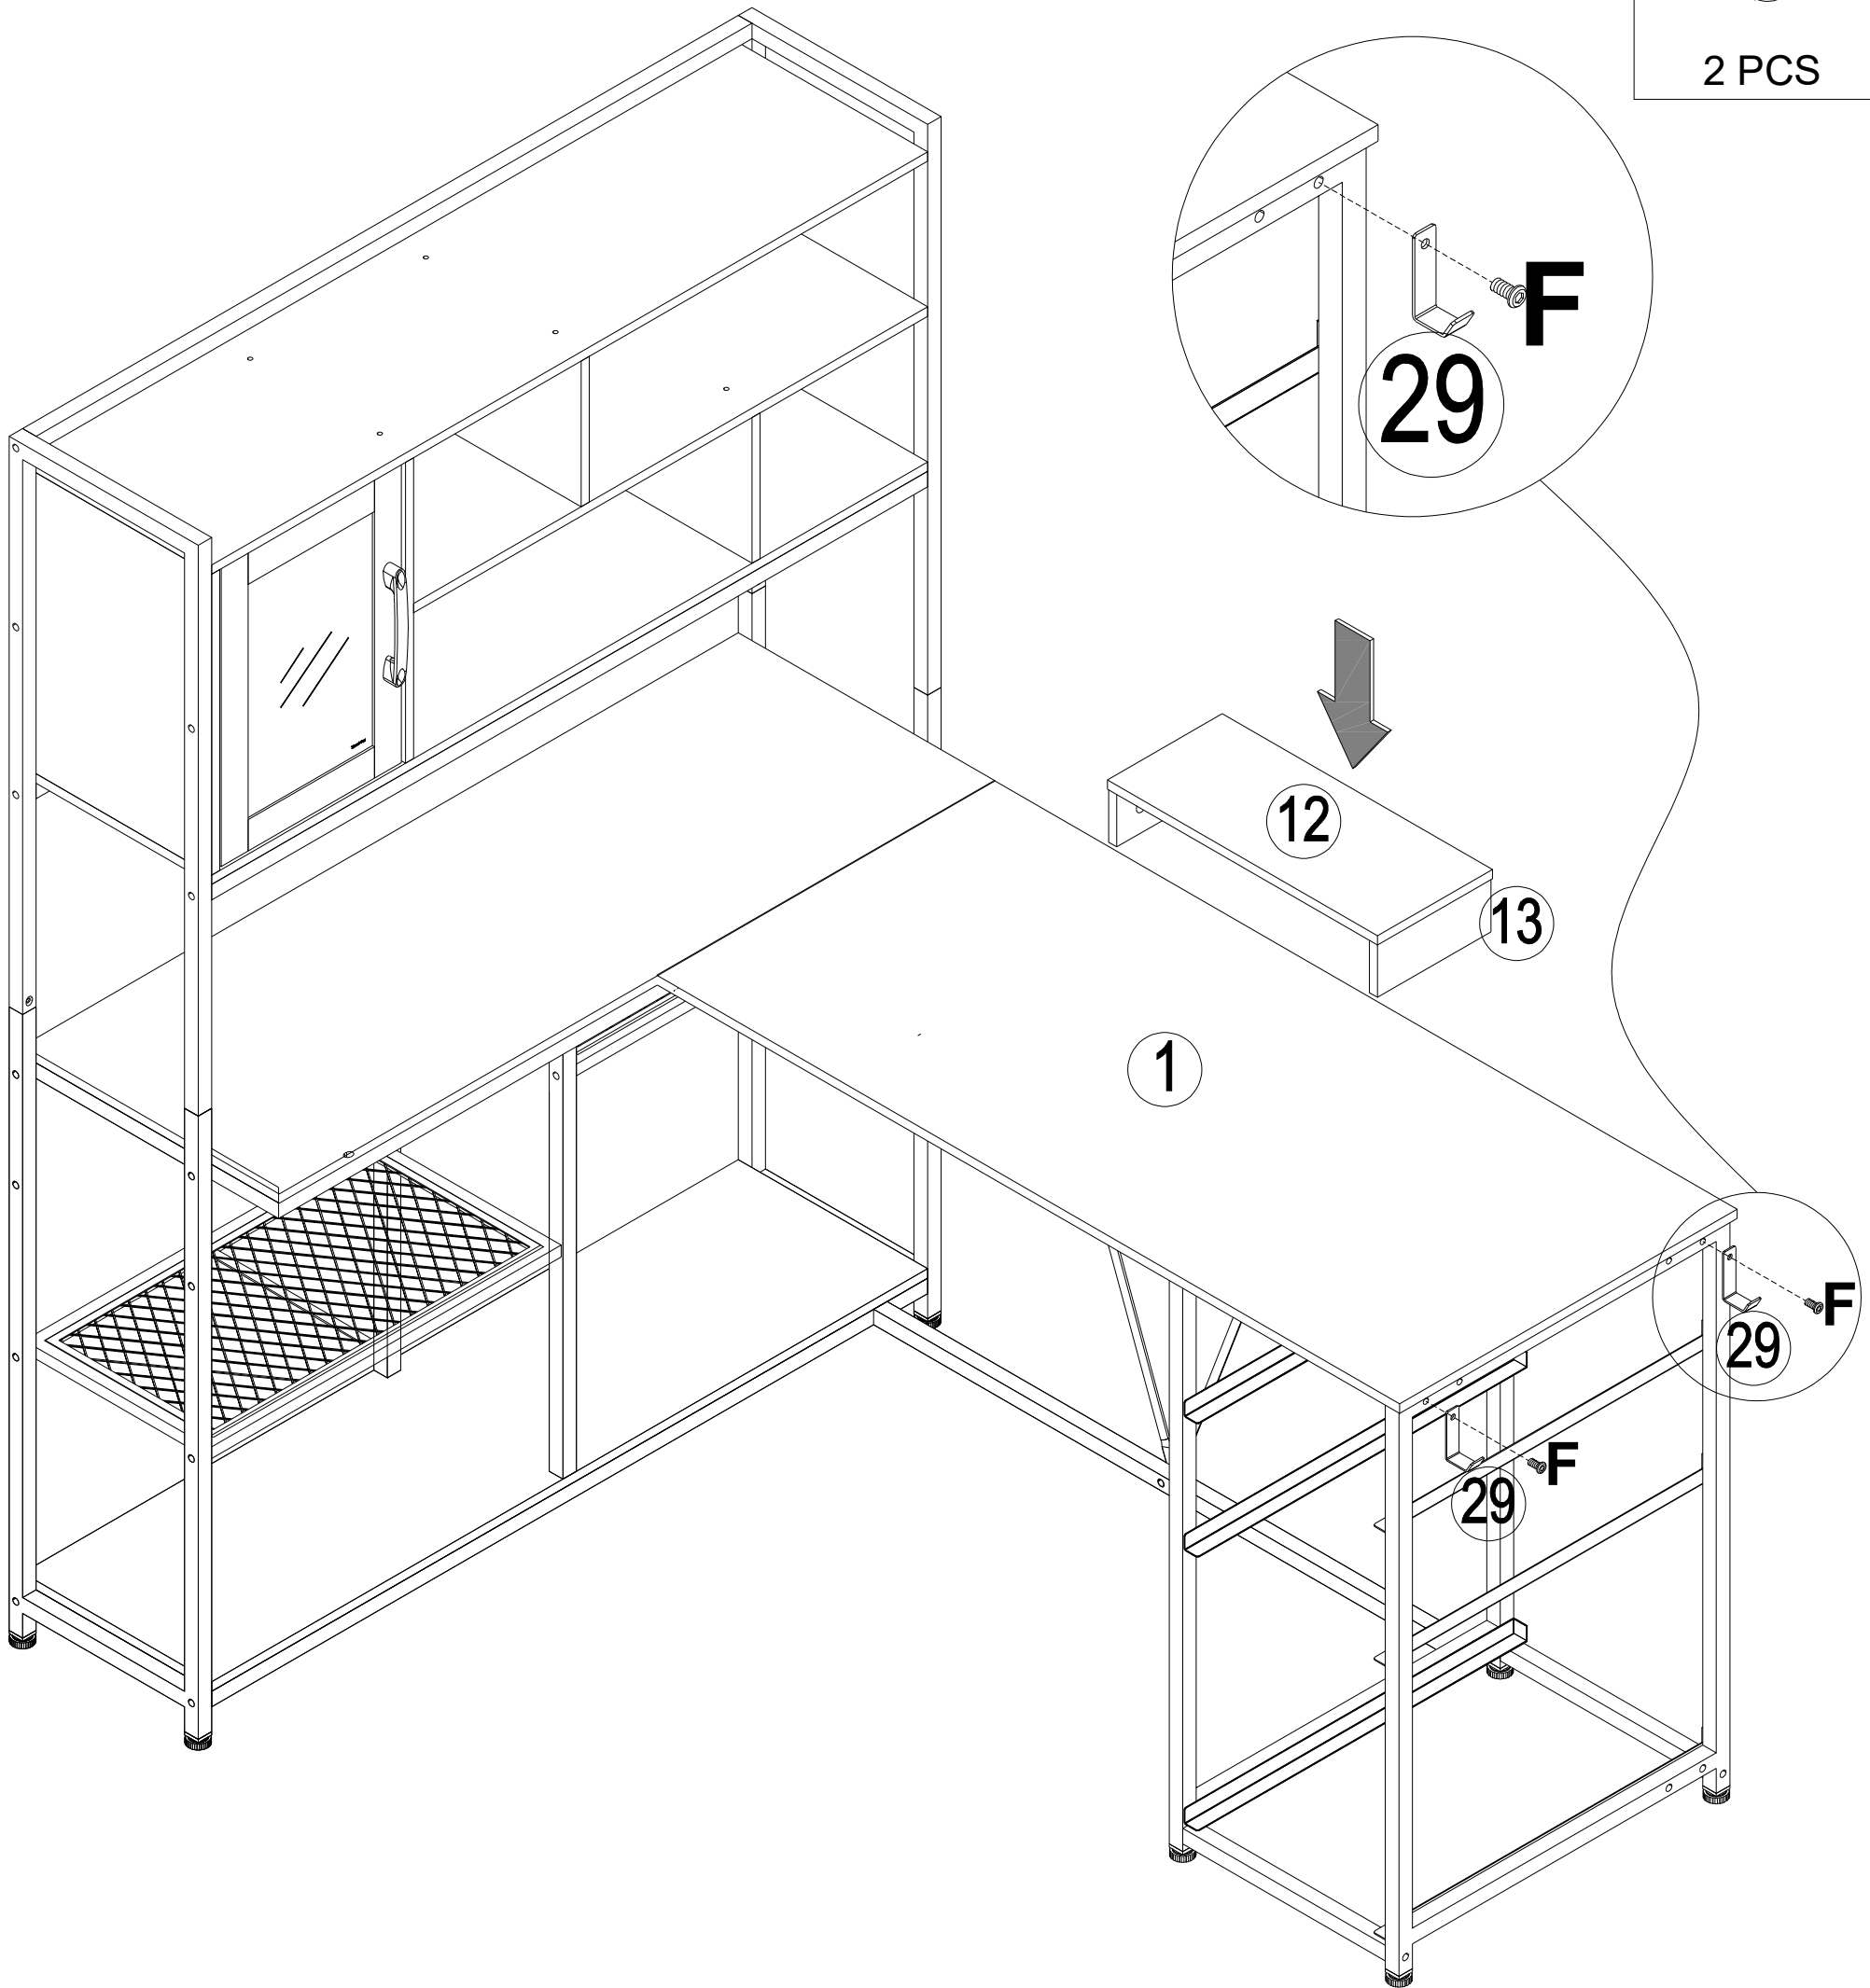

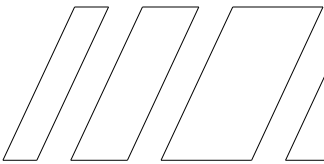


29

I	P M4X10
	
2 PCS	4 PCS

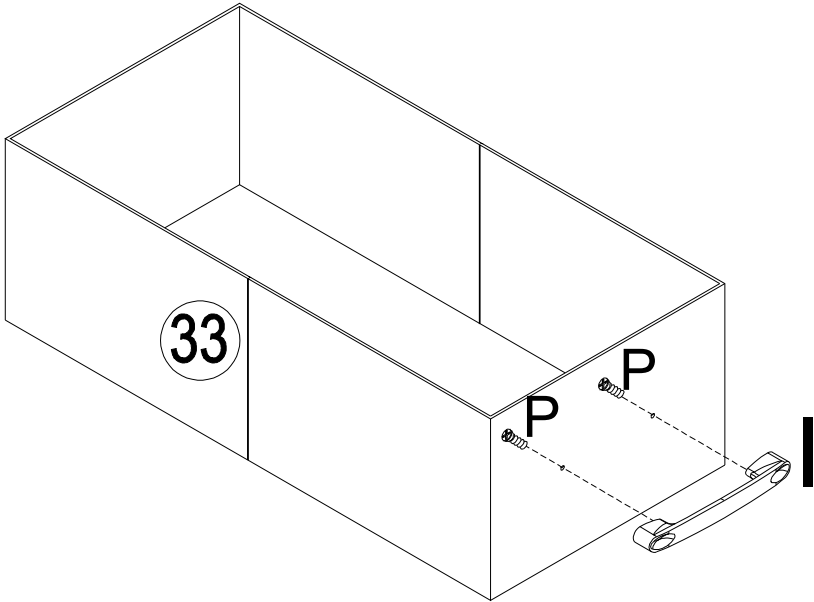
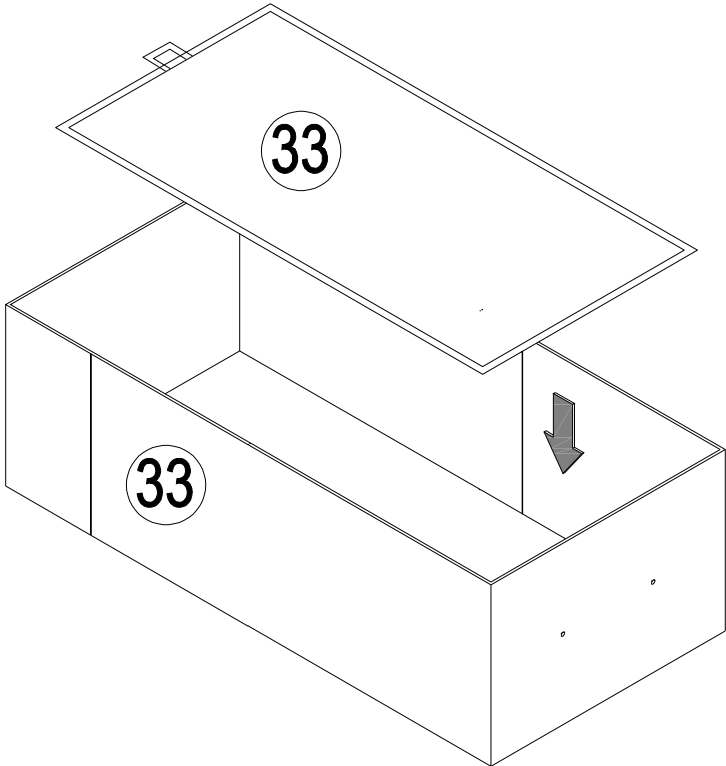


x 2

30

I	P M4X10	Q M6X12
		
1 PCS	2 PCS	4 PCS

legal A4 letter

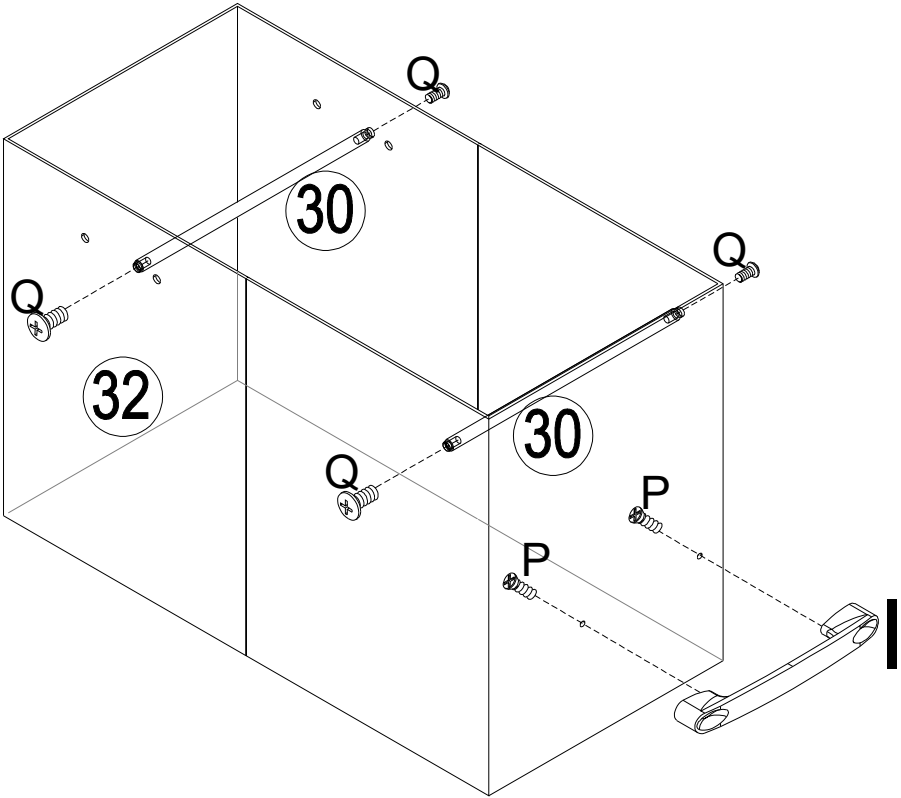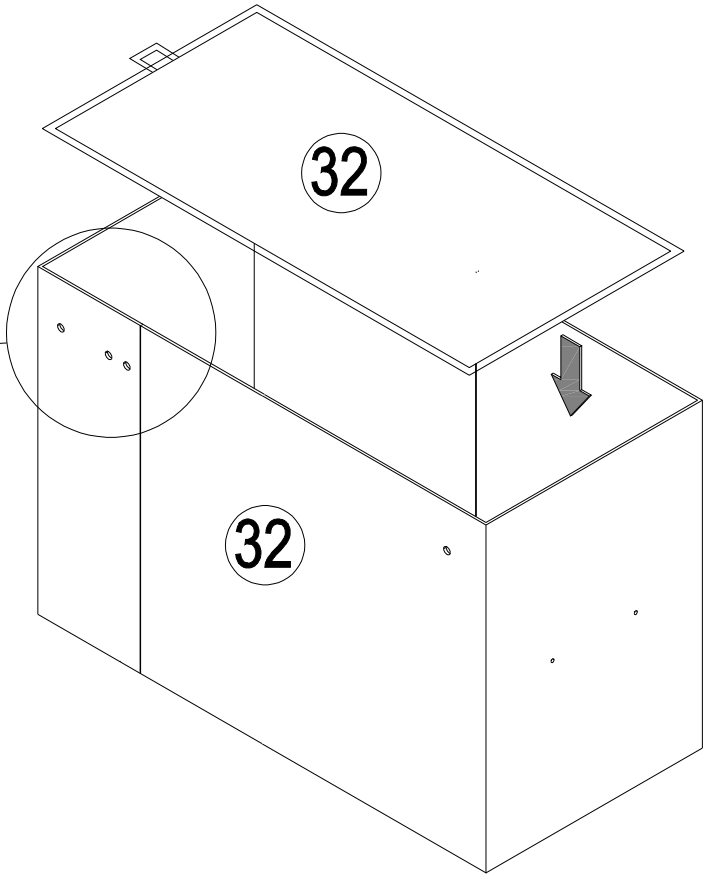

31

