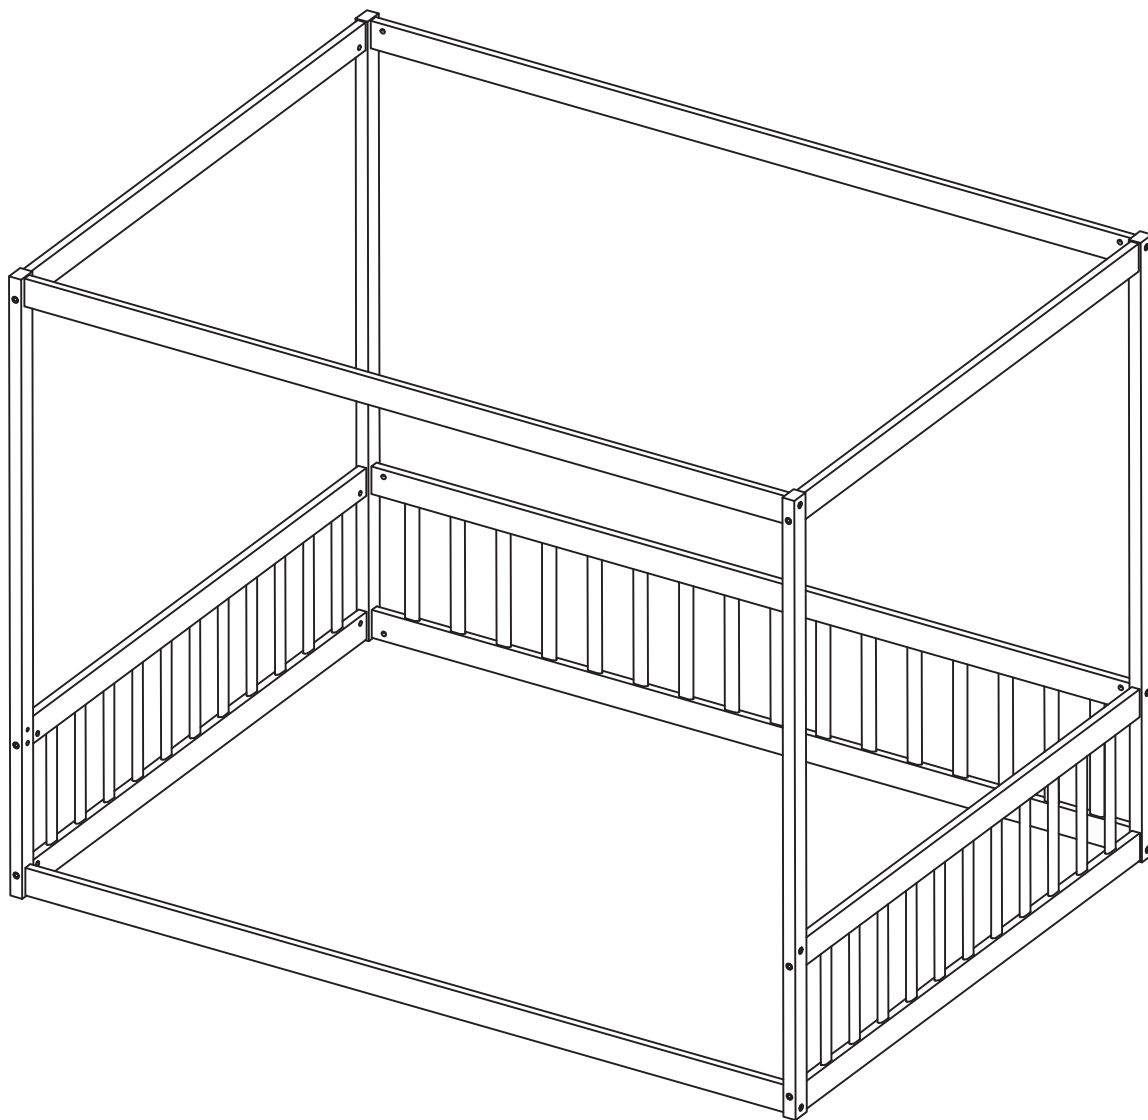
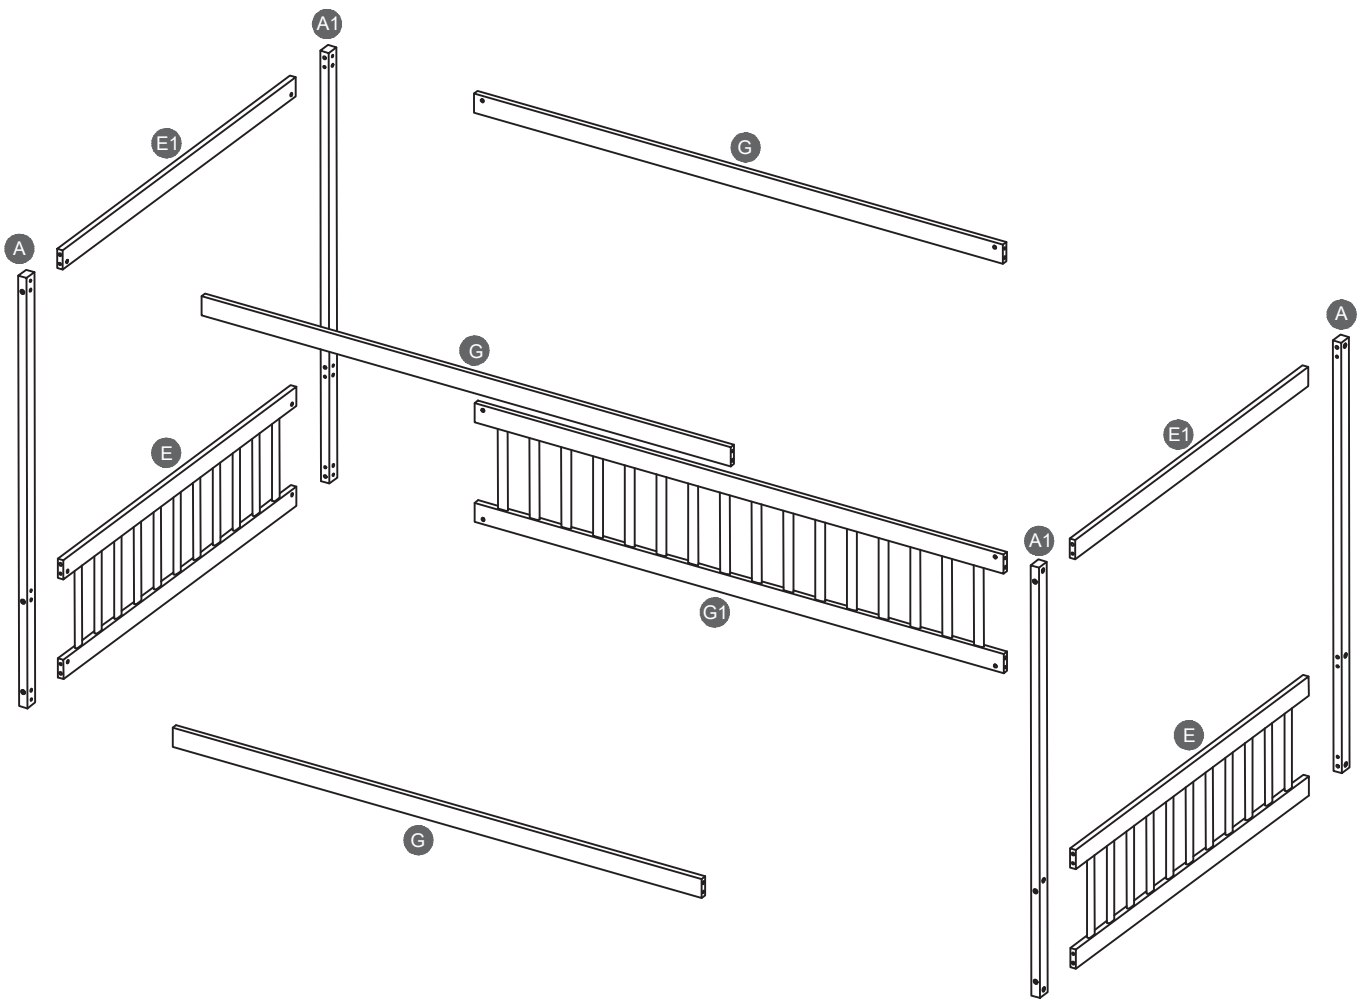


ASSEMBLY INSTRUCTIONS



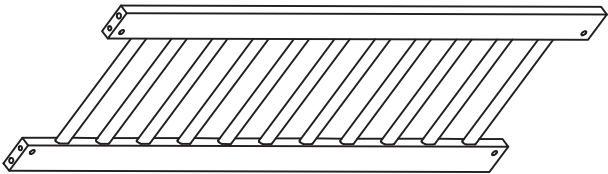

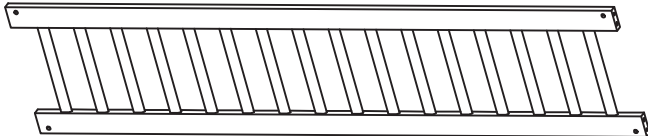
FULL CANOPY FRAME FLOOR BED





Detail View




Part List

A  Leg - 2pcs	A1  Leg - 2pcs
E  Hb. Fb. Panel - 2pcs	E1  Hb. Fb. Top Panel - 2pcs
G  Side Rail Front & Guardrail Upper - 3pcs	G1  Side Rail Back - 1pc

Hardware List

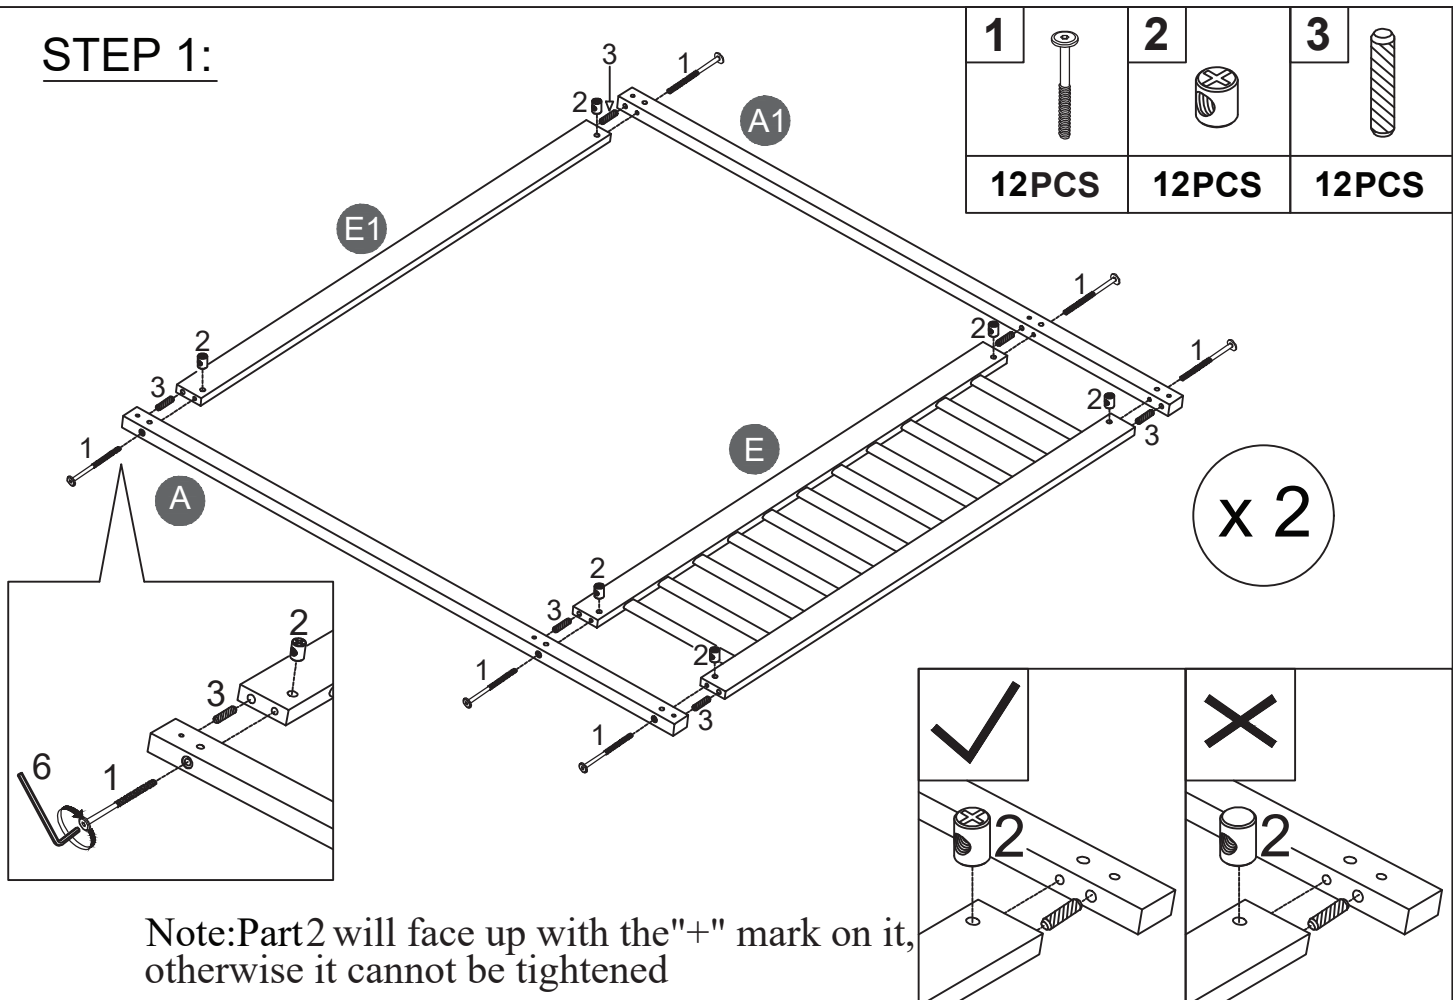
1  M6 x 80mm JCBC (12pcs)	2  M6 x 15mm Barrel Nut (22pcs)	3  M10 x 40mm Wood Dowel (22pcs)
4  M6 x 70mm JCBC (10pcs)	5  Sticker Cap (6pcs)	6  M4 Allen Key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:



STEP 2:

