



Bar Height Surfboard Stool

Assembly Guide

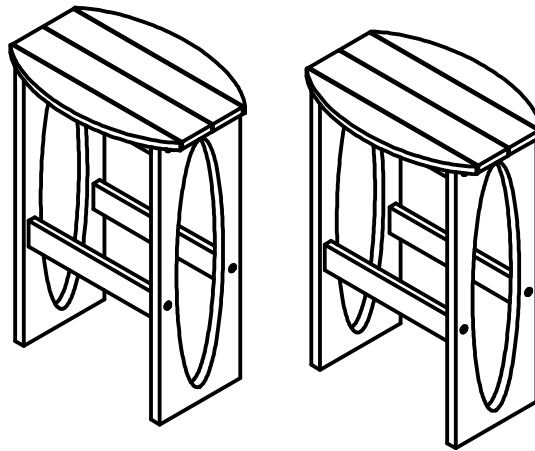


*Actual Style May Vary from
the One Pictured in this Guide

HARDWARE INCLUDED

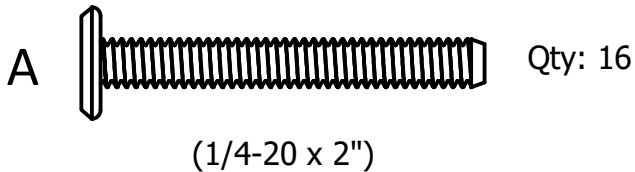

TOOLS INCLUDED

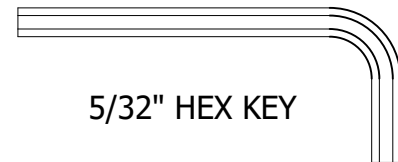

5/32" HEX KEY

IMPORTANT!


DO NOT fully tighten bolts until all bolts are started.

STEP 1

Connect (2) Braces to the Leg as shown using (2) A bolts.

STEP 2

Repeat STEP 1 on the other side.

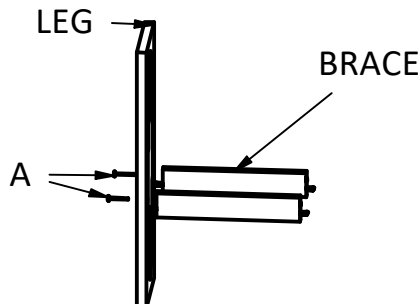


STEP 3

Connect the Seat to the Leg Assembly as shown using (2) A bolts.

STEP 4

Repeat STEP 3 on the other side.

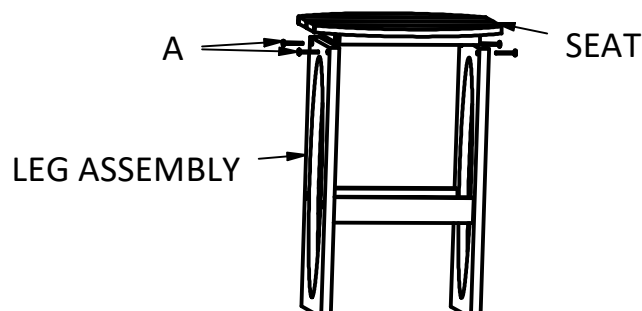

STEP 5

Repeat STEPS 1-4 for the other Stool