


INSTRUCTION MANUAL

Thank you for your support.
Follow us for more updates!

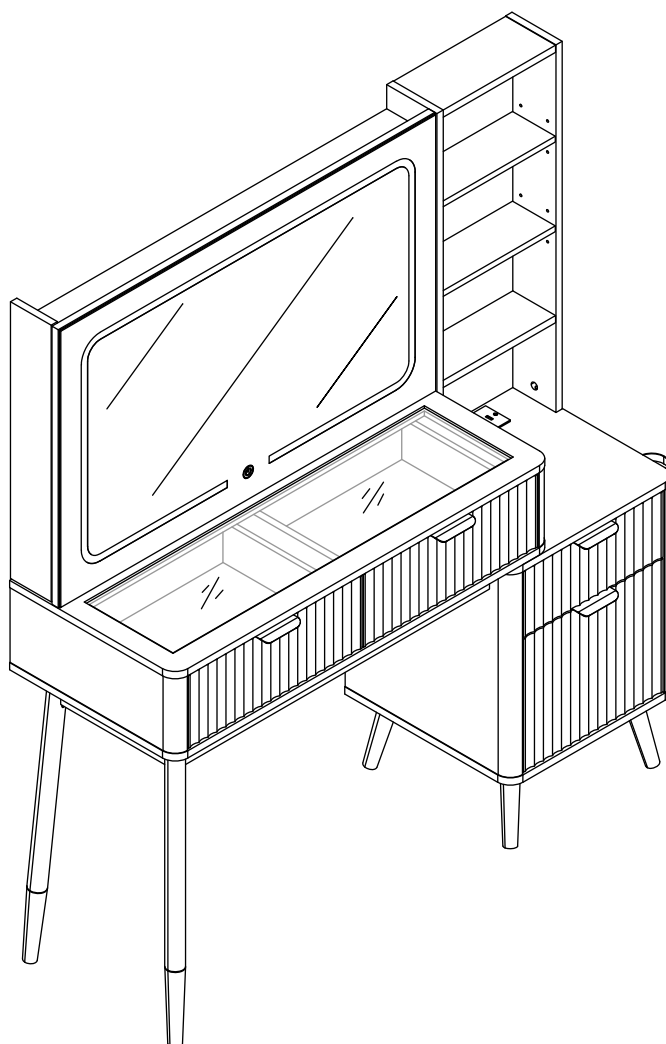

**We stand behind we sell. If you are not satisfied with your purchase,
you can return it for a replacement or refund.**

For any further question don't hesitate to contact us. Email:



E-MAIL: ea-aftersale@outlook.com

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK




**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

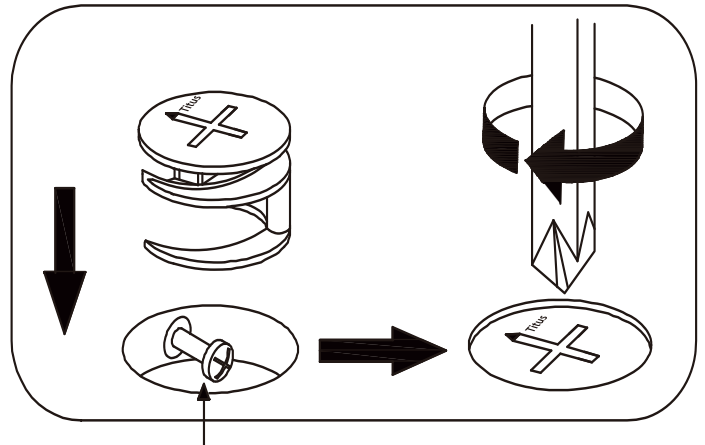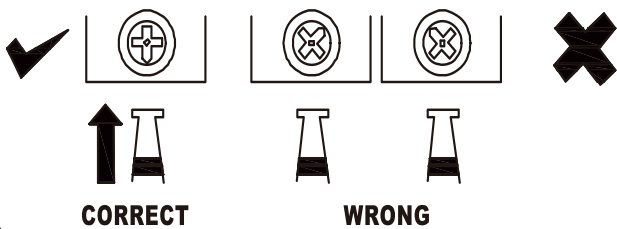



Quickfit head needs to be in centre

QUICKFIT


Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

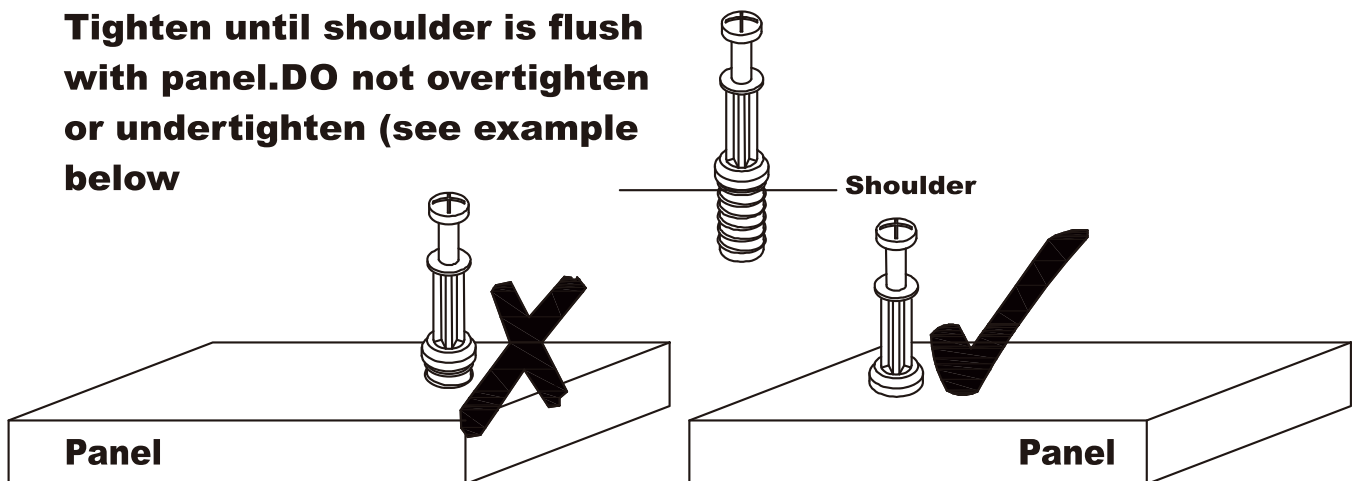

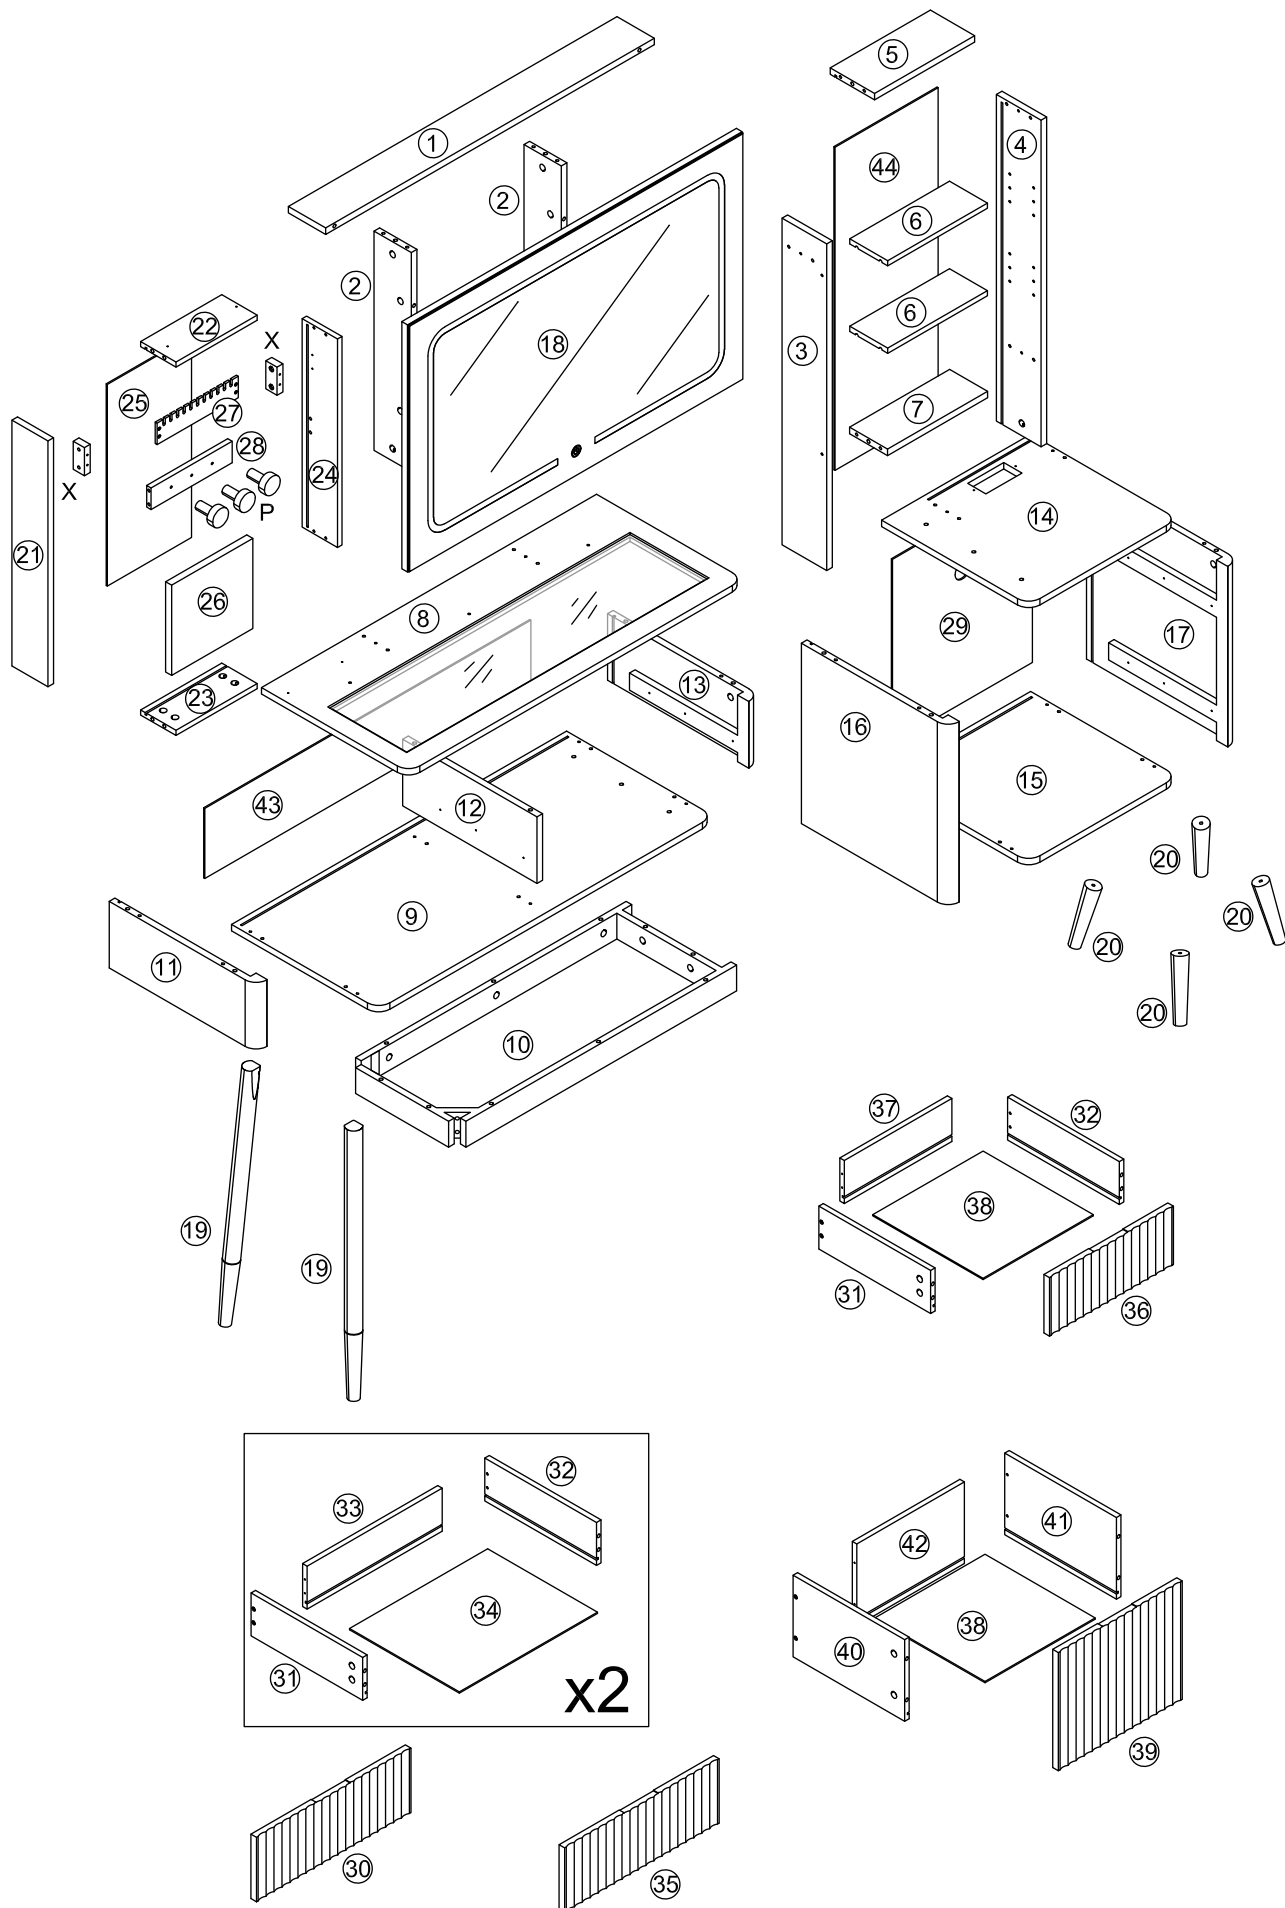


A x66  6x35mm +3(SPARE)	B x66  +3(SPARE)	C x48  6x30mm +3(SPARE)	D x10  4x40mm +1(SPARE)	E x19  4x30mm +1(SPARE)	F x62  3.5x12mm +3(SPARE)
G x24  3x14mm +2(SPARE)	H x4  4x20mm	I x1 	J x4  3x12mm	K x3  6x35mm	L x1 
M x8 	N x1 	O x4  6x55mm	P x3 	Q x8 	R x2 
S x24  4x12mm +2(SPARE)	T x4 	U x2  4x35mm	V x4  4x12mm	W x1 	X x2 
Y x6 	Z x1  3x10mm	CL x4 	CR x4 	DL x4 	DR x4 
a x1 					

①

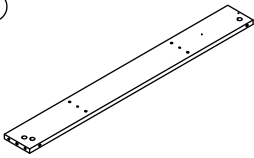


883x100cm
x1PCS

②

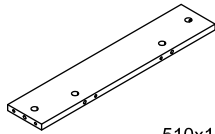


510x100cm
x2PCS

③

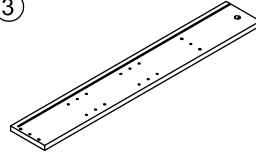


760x120cm
x1PCS

④

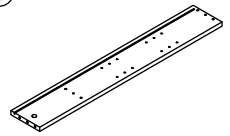


760x120cm
x1PCS

⑤




269x119cm
x1PCS

⑥




268x102cm
x1PCS

⑦




269x102cm
x1PCS

⑧

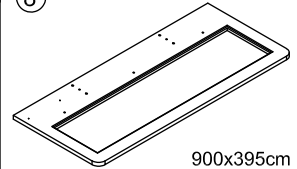


900x395cm
x1PCS

⑨

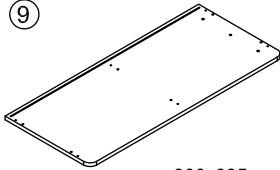


900x395cm
x1PCS

⑩

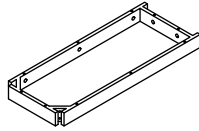


750x297cm
x1PCS

⑪

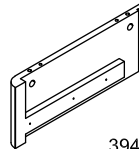


394x155cm
x1PCS

⑫

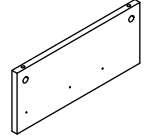


361x155cm
x1PCS

⑬

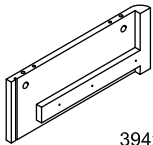


394x155cm
x1PCS

⑭

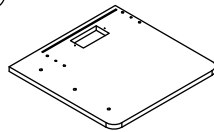


400x395cm
x1PCS

⑮

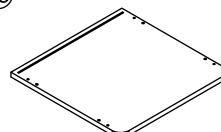


400x395cm
x1PCS

⑯

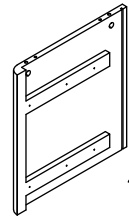


420x394cm
x1PCS

⑰

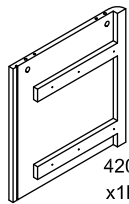

420x394cm
x1PCS

⑱

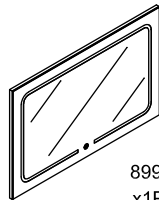

899x575cm
x1PCS

⑲



602cm
x2PCS

⑳




144cm
x4PCS

㉑




572x97cm
x1PCS

㉒



218x95cm
x1PCS

㉓




218x95cm
x1PCS

㉔




485x95cm
x1PCS

㉕




469x226cm
x1PCS

㉖




218x210cm
x1PCS

㉗

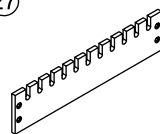


218x50cm
x1PCS

㉘




218x50cm
x1PCS

29




428x376cm
x1PCS

30

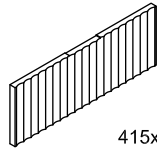


415x150cm
x1PCS

31




300x100cm
x4PCS

32




300x100cm
x4PCS

33

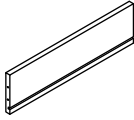


363x100cm
x2PCS

34

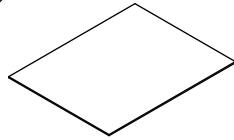


371x295cm
x2PCS

35

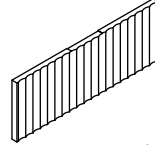


415x150cm
x1PCS

36

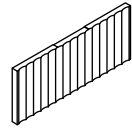


333x136cm
x1PCS

37




289x100cm
x1PCS

38

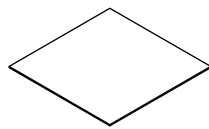


296x296cm
x2PCS

39

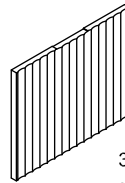


333x275cm
x1PCS

40

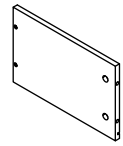


300x190cm
x1PCS

41



300x190cm
x1PCS

42




289x190cm
x1PCS

43




876x163cm
x1PCS

44




752x277cm
x1PCS

Step 1

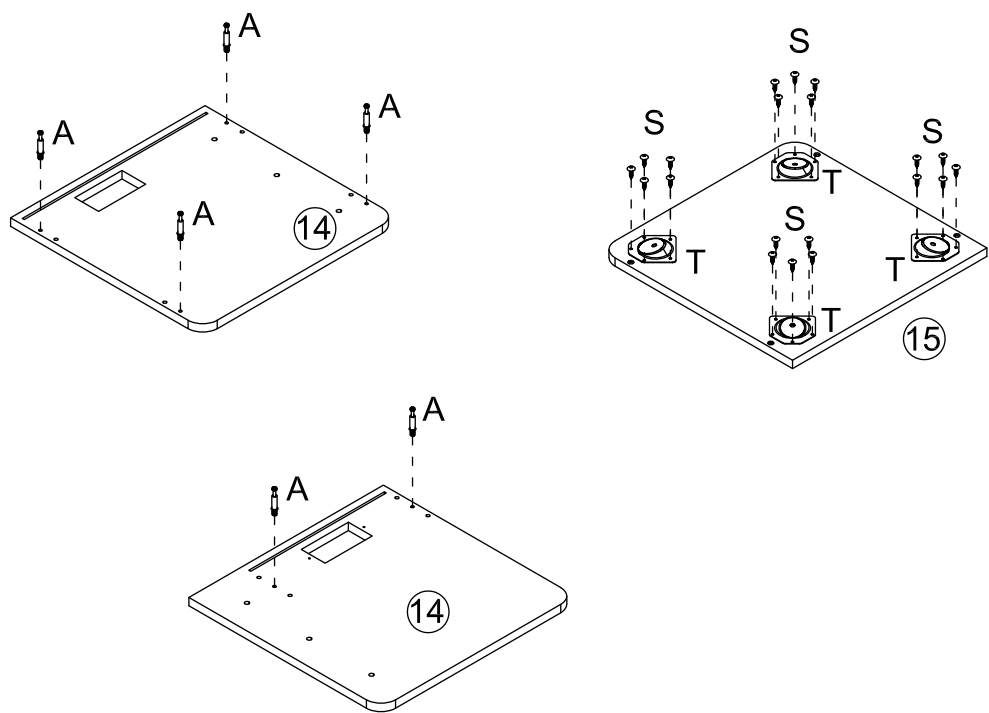


S x20	T x4	A x6
 4x12mm		

Step 2

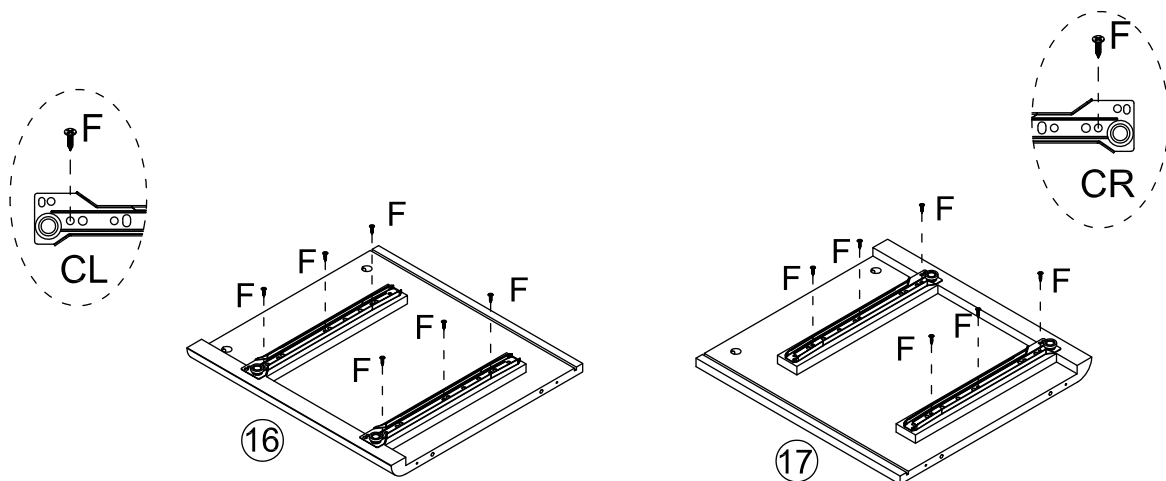


F x12	CL x2	CR x2
		



Step 3

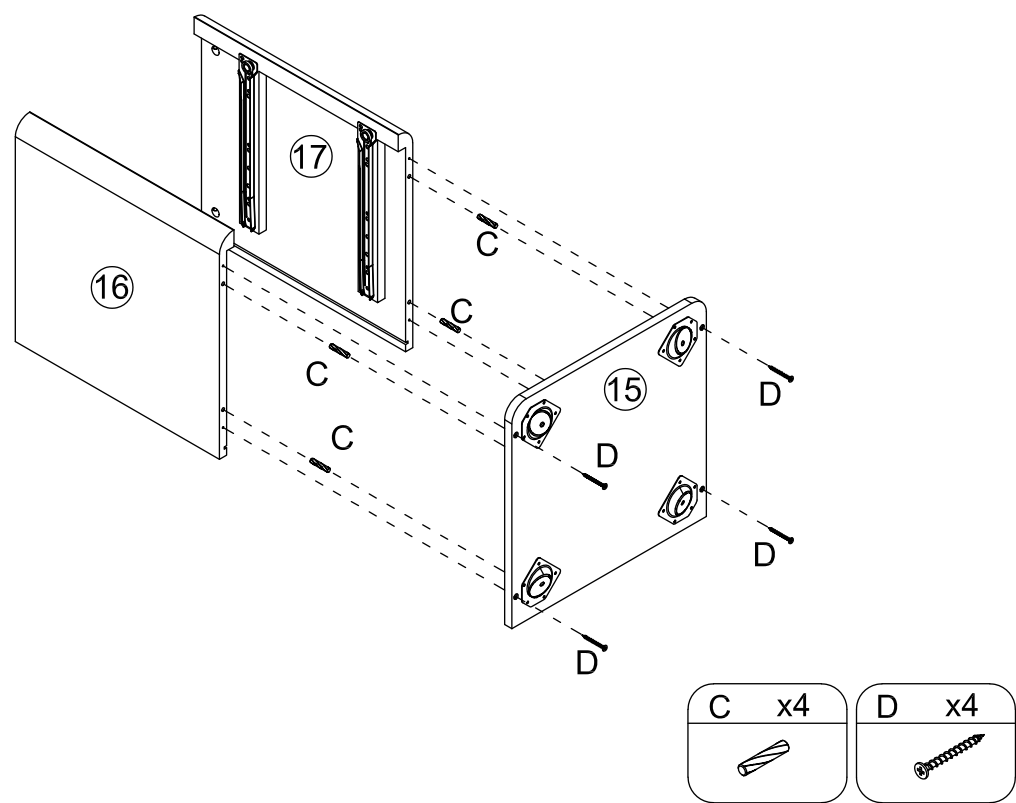


Step 4

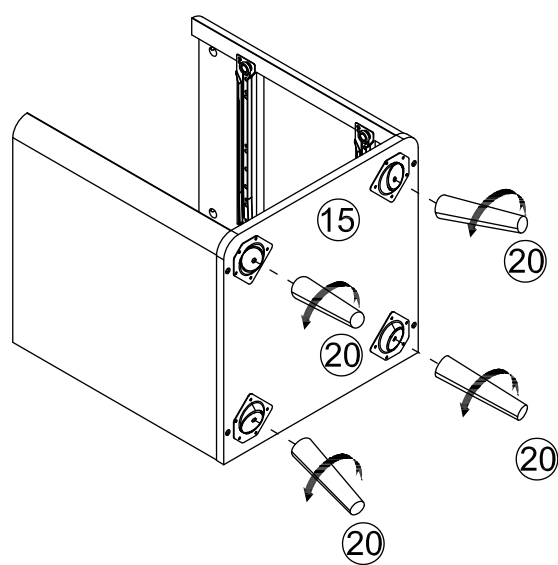


Step 5

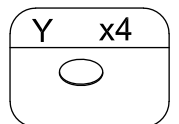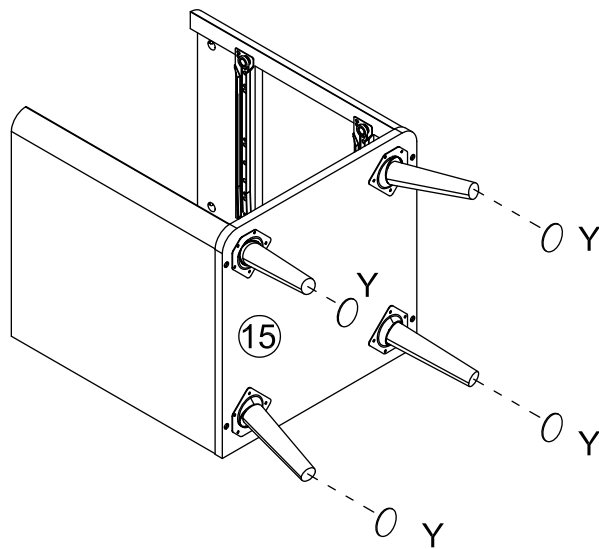

Step 6




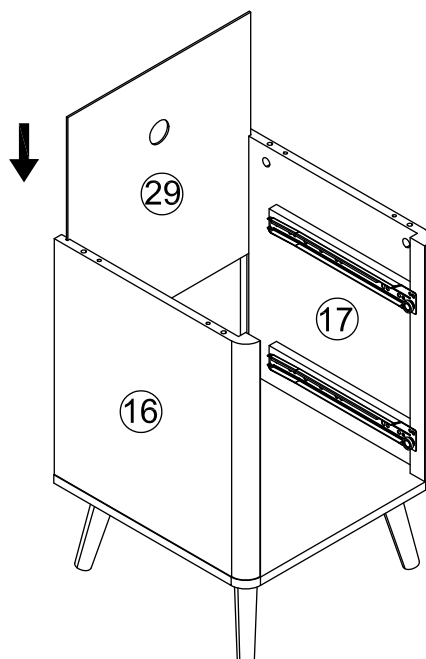


Step 7

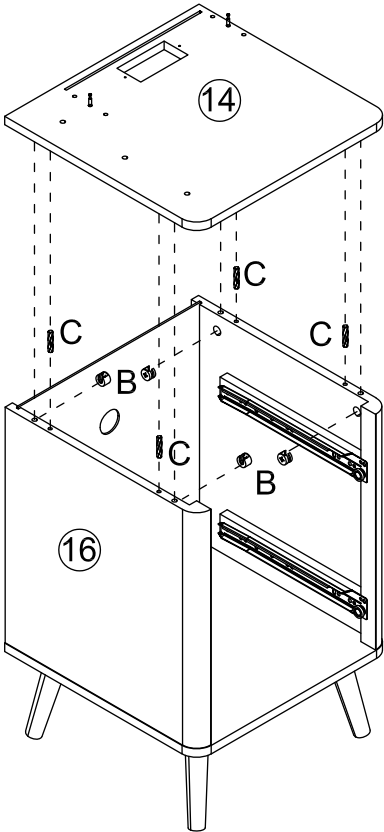



B x4	C x4
	

Step 8

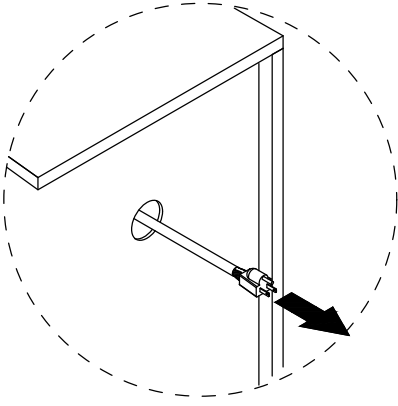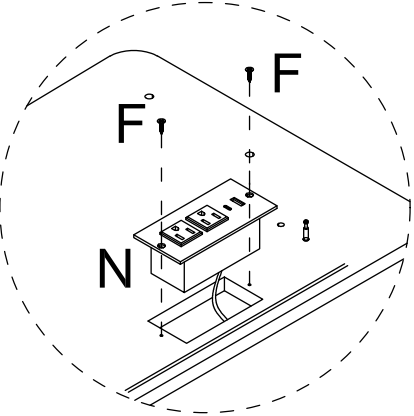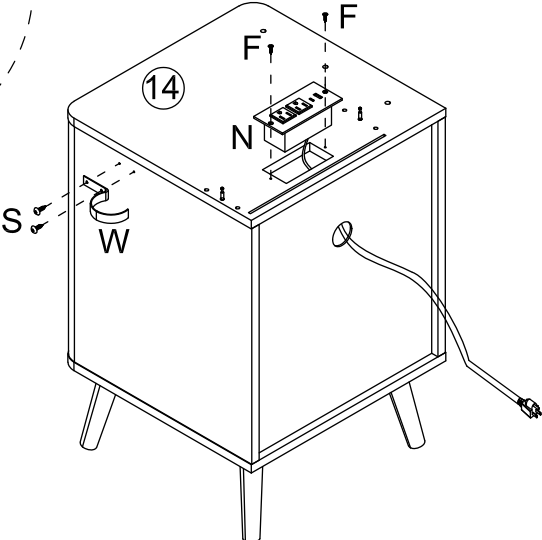
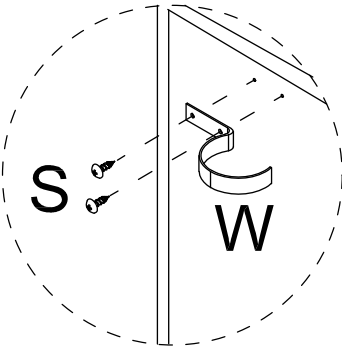


W x1	S x2	F x2	N x1
			


Step 9

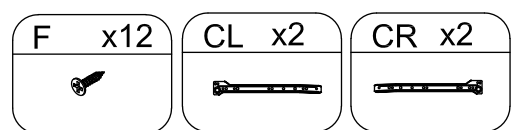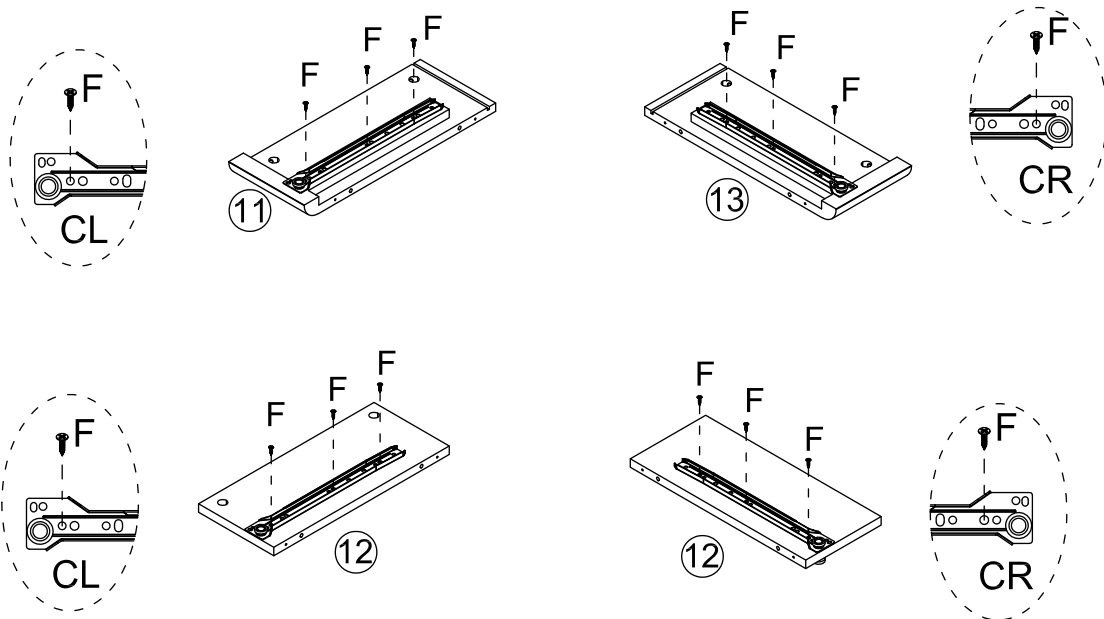

Step 10

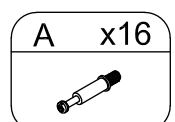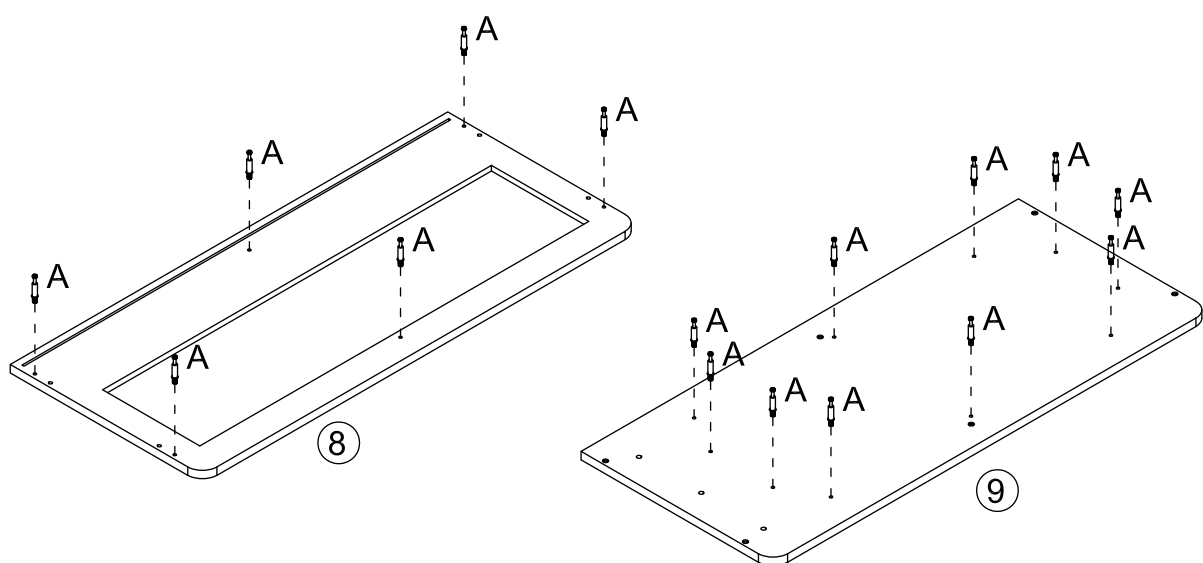


Step 11

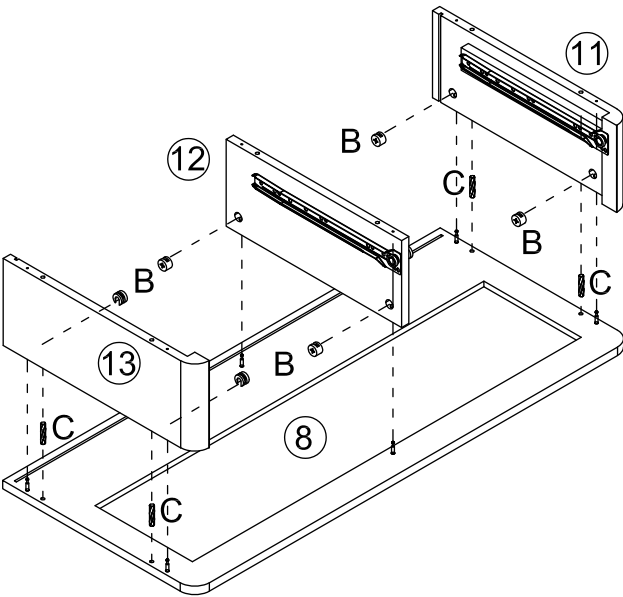


B	x6	C	x4
			

Step 12

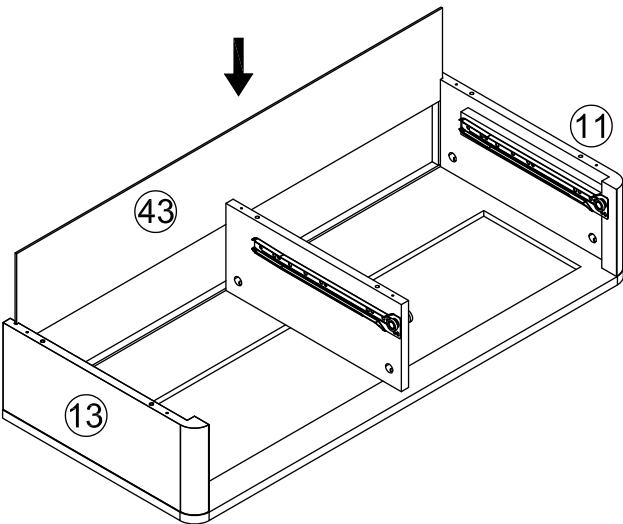


Step 13

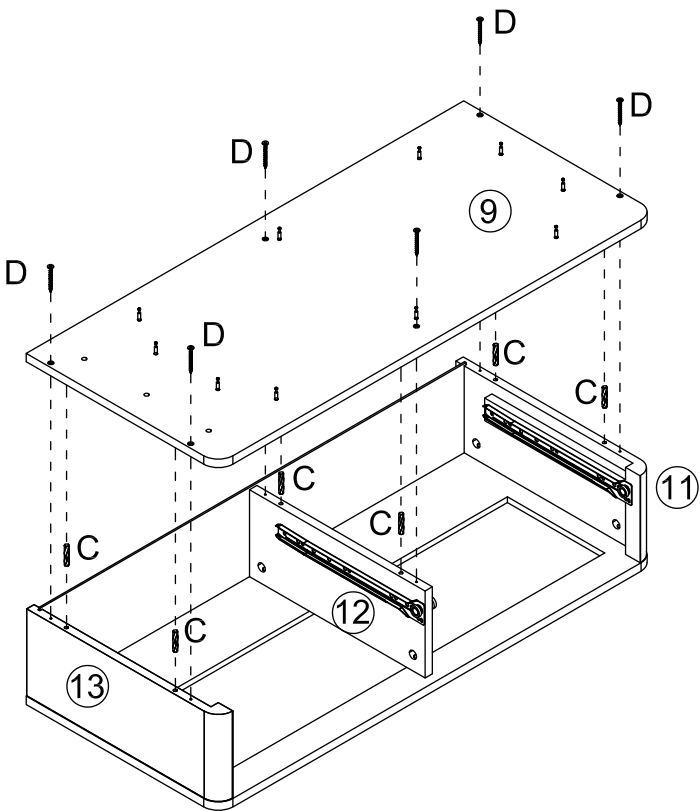


C x6	D x6
	

Step 14

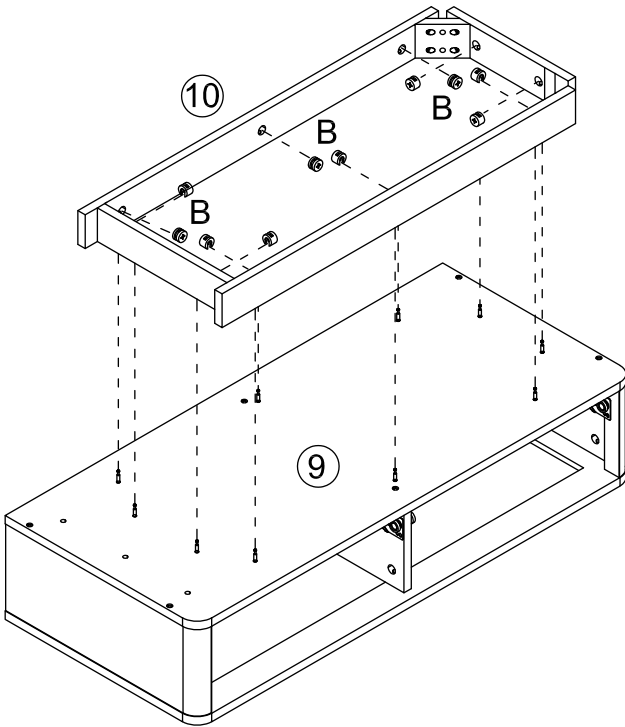


B x10


Step 15

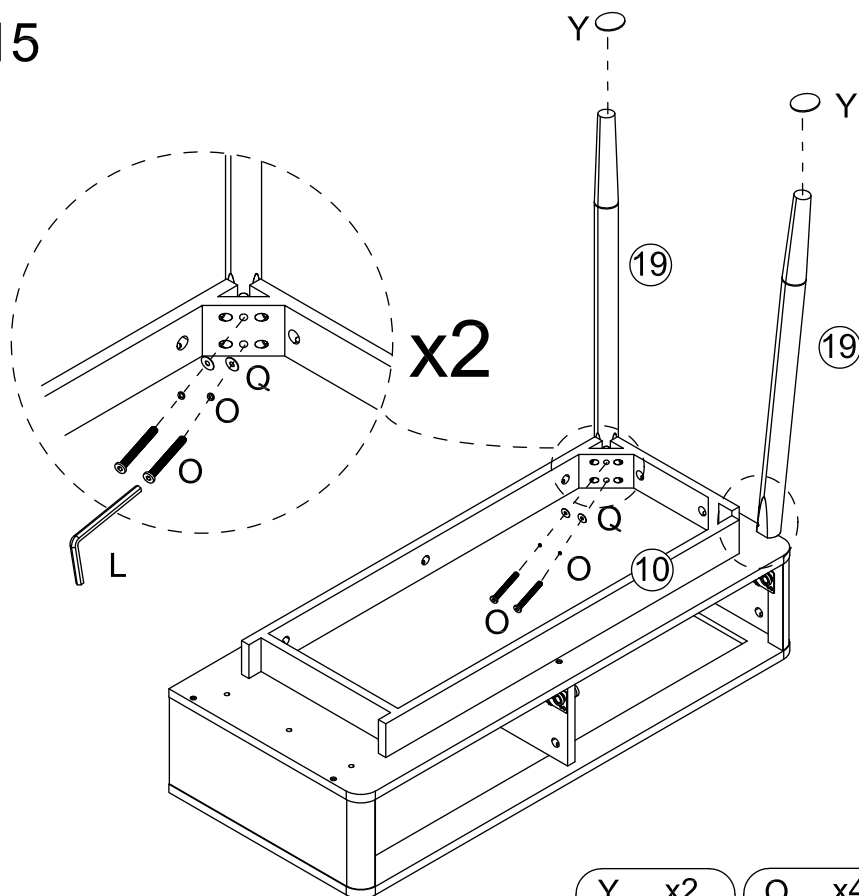





Y x2	Q x4	O x4	L x1

Step 16



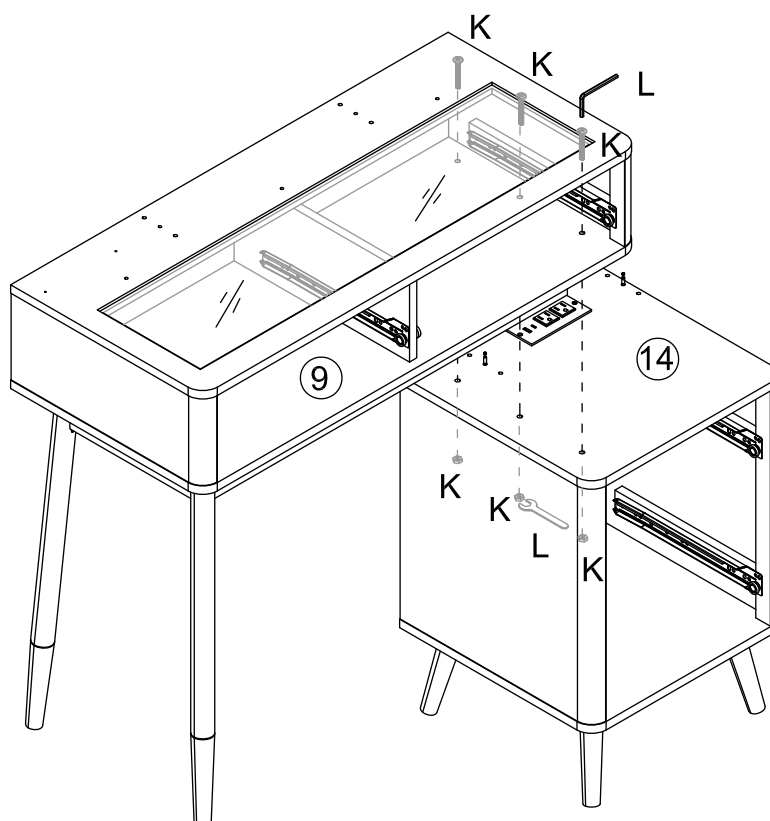


K x3	L x1


Step 17

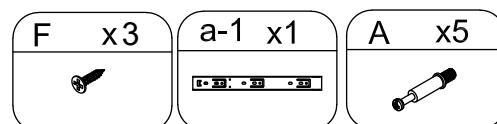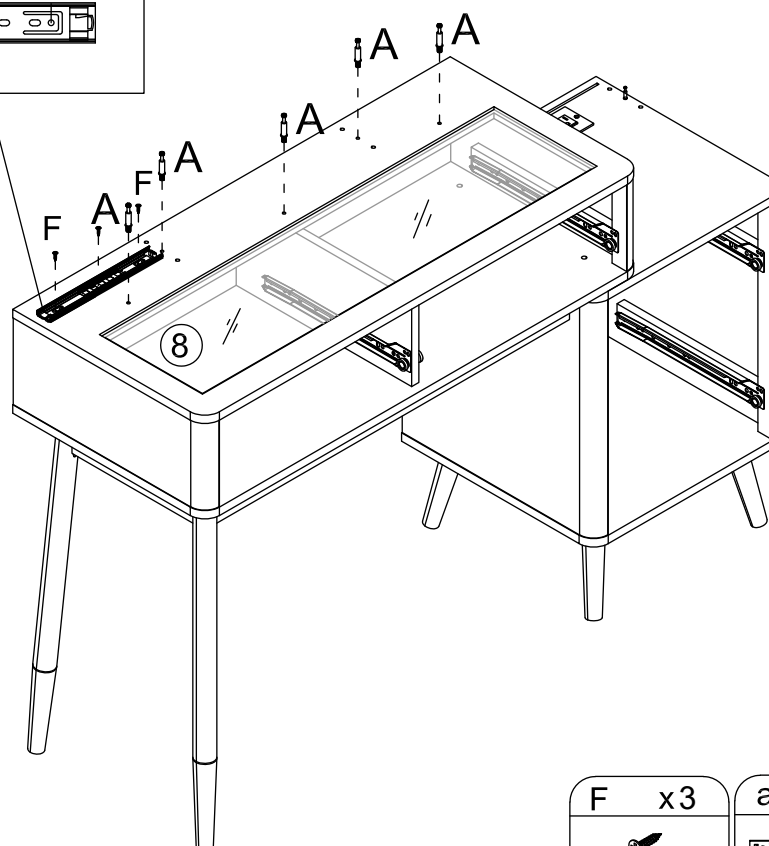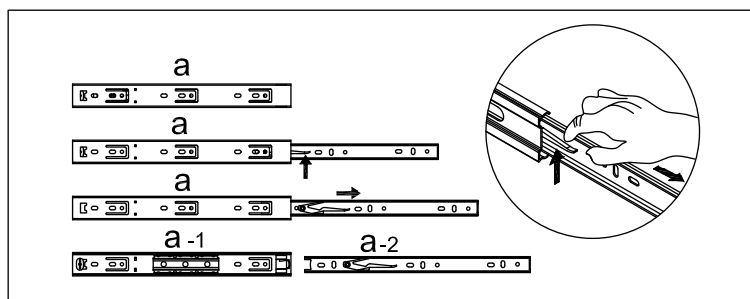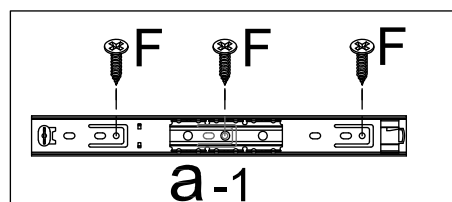

Step 18

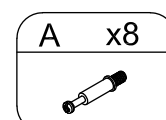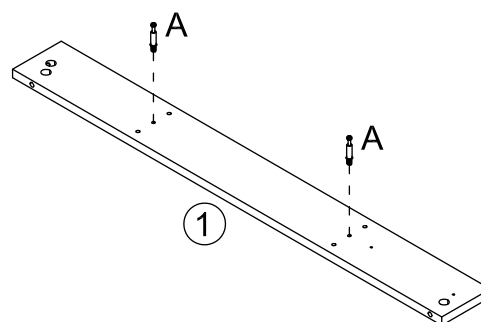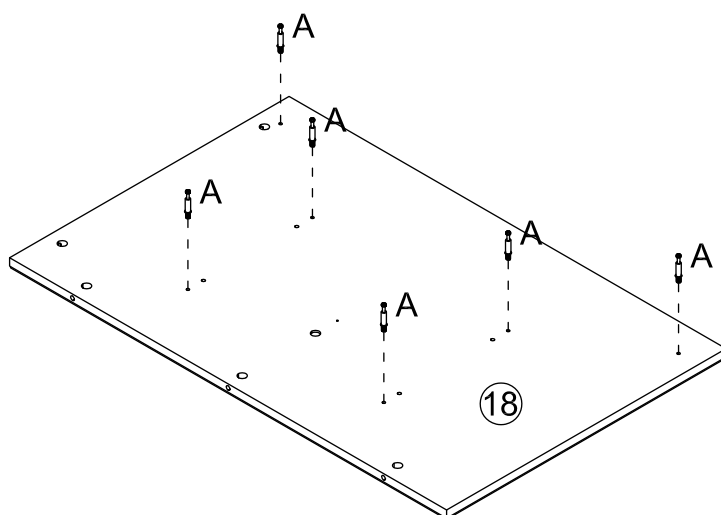


Step 19

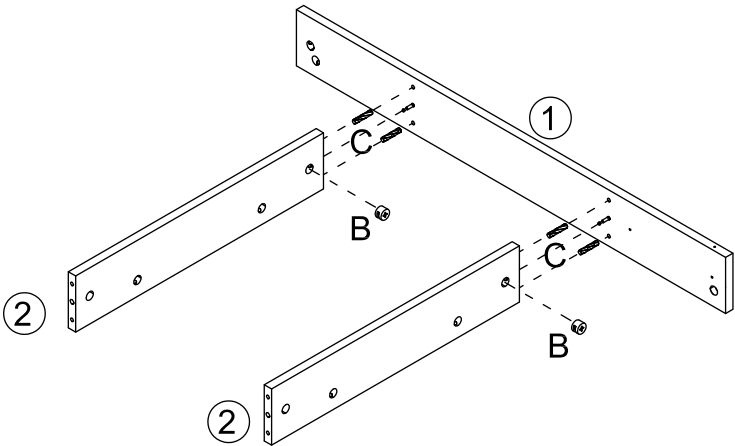


B	x2	C	x4
			

Step 20

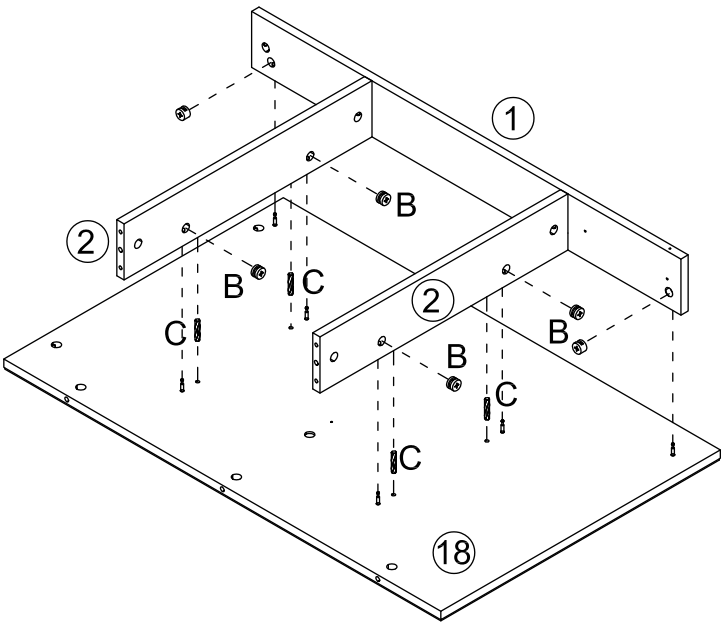


B	x6	C	x4
			

Step 21

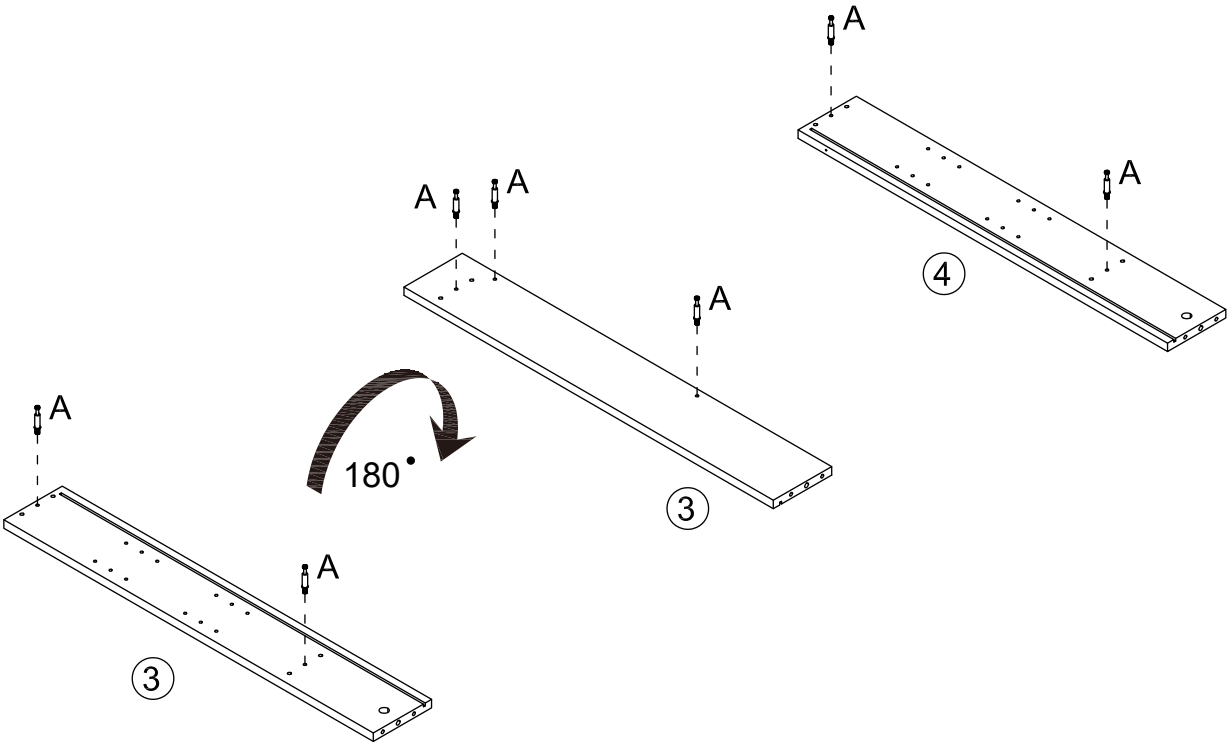

A	x7
	


Step 22

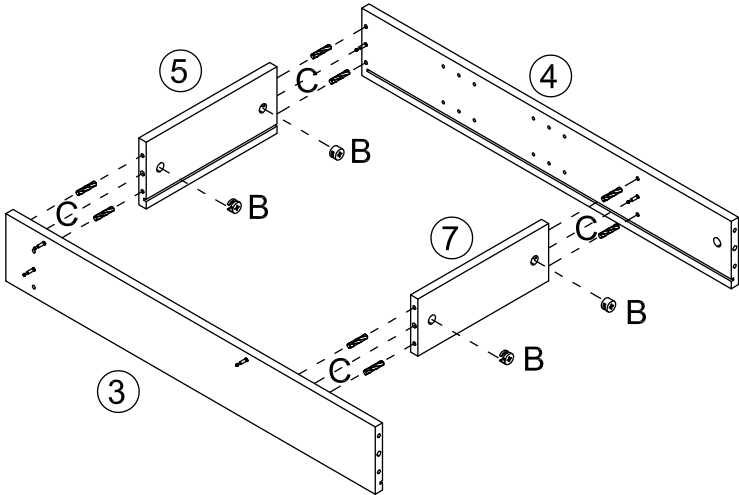

B	x4
	


C	x8
	

Step 23

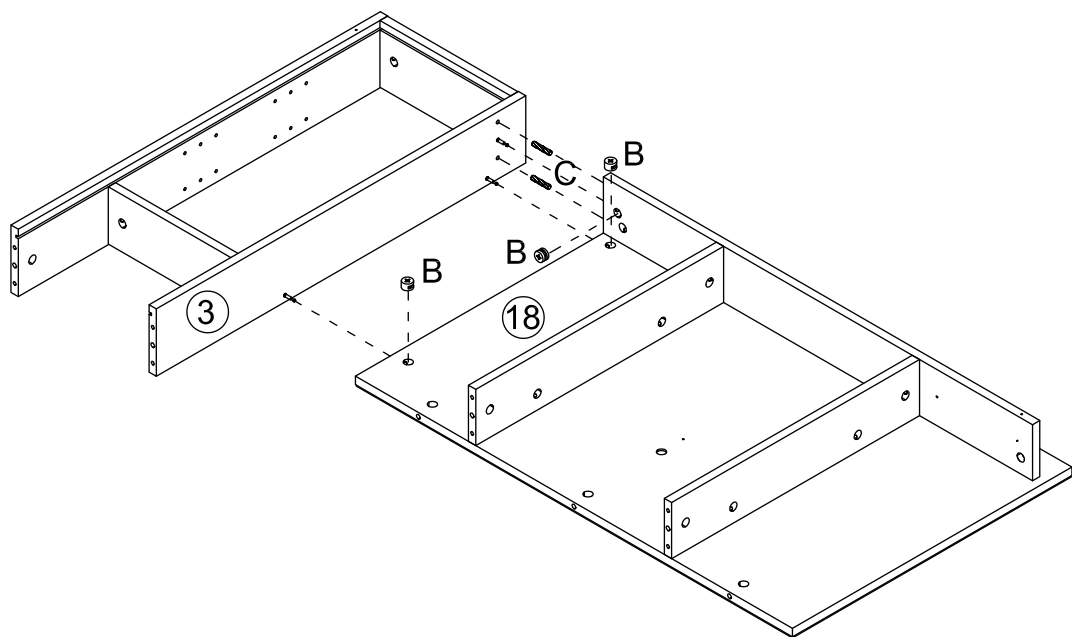


B x3	C x2
	

Step 24

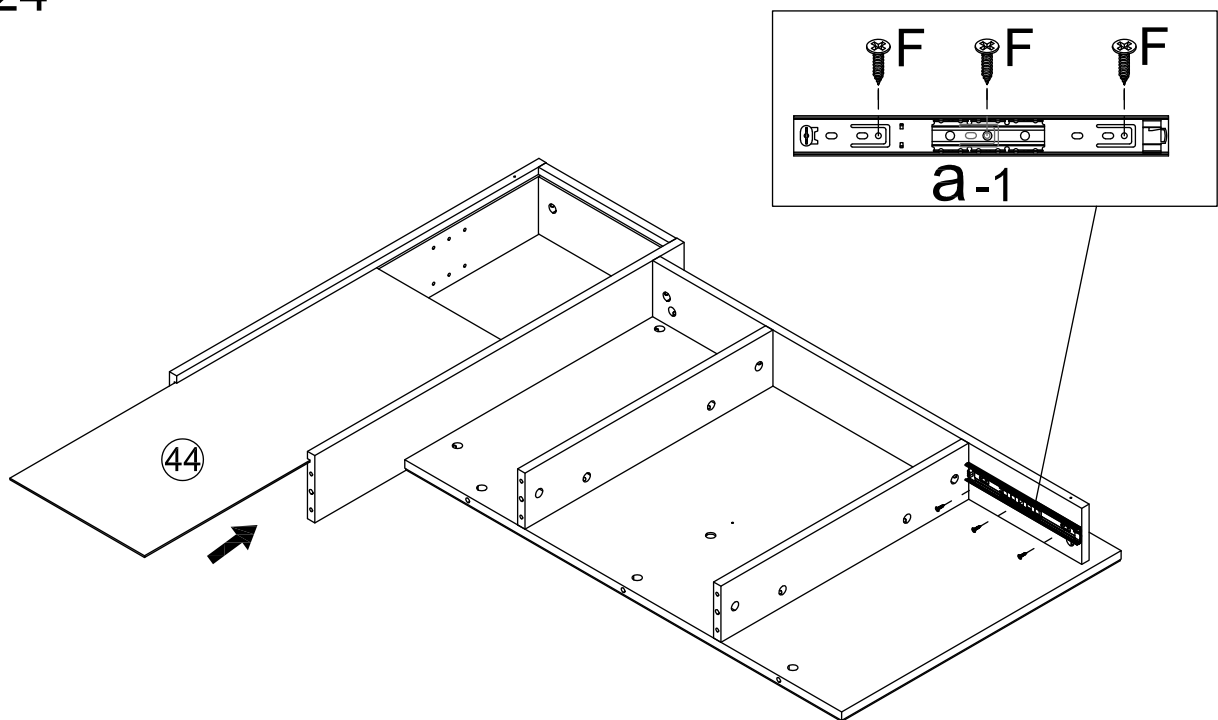


F x3	a-1 x1
	

Step 25

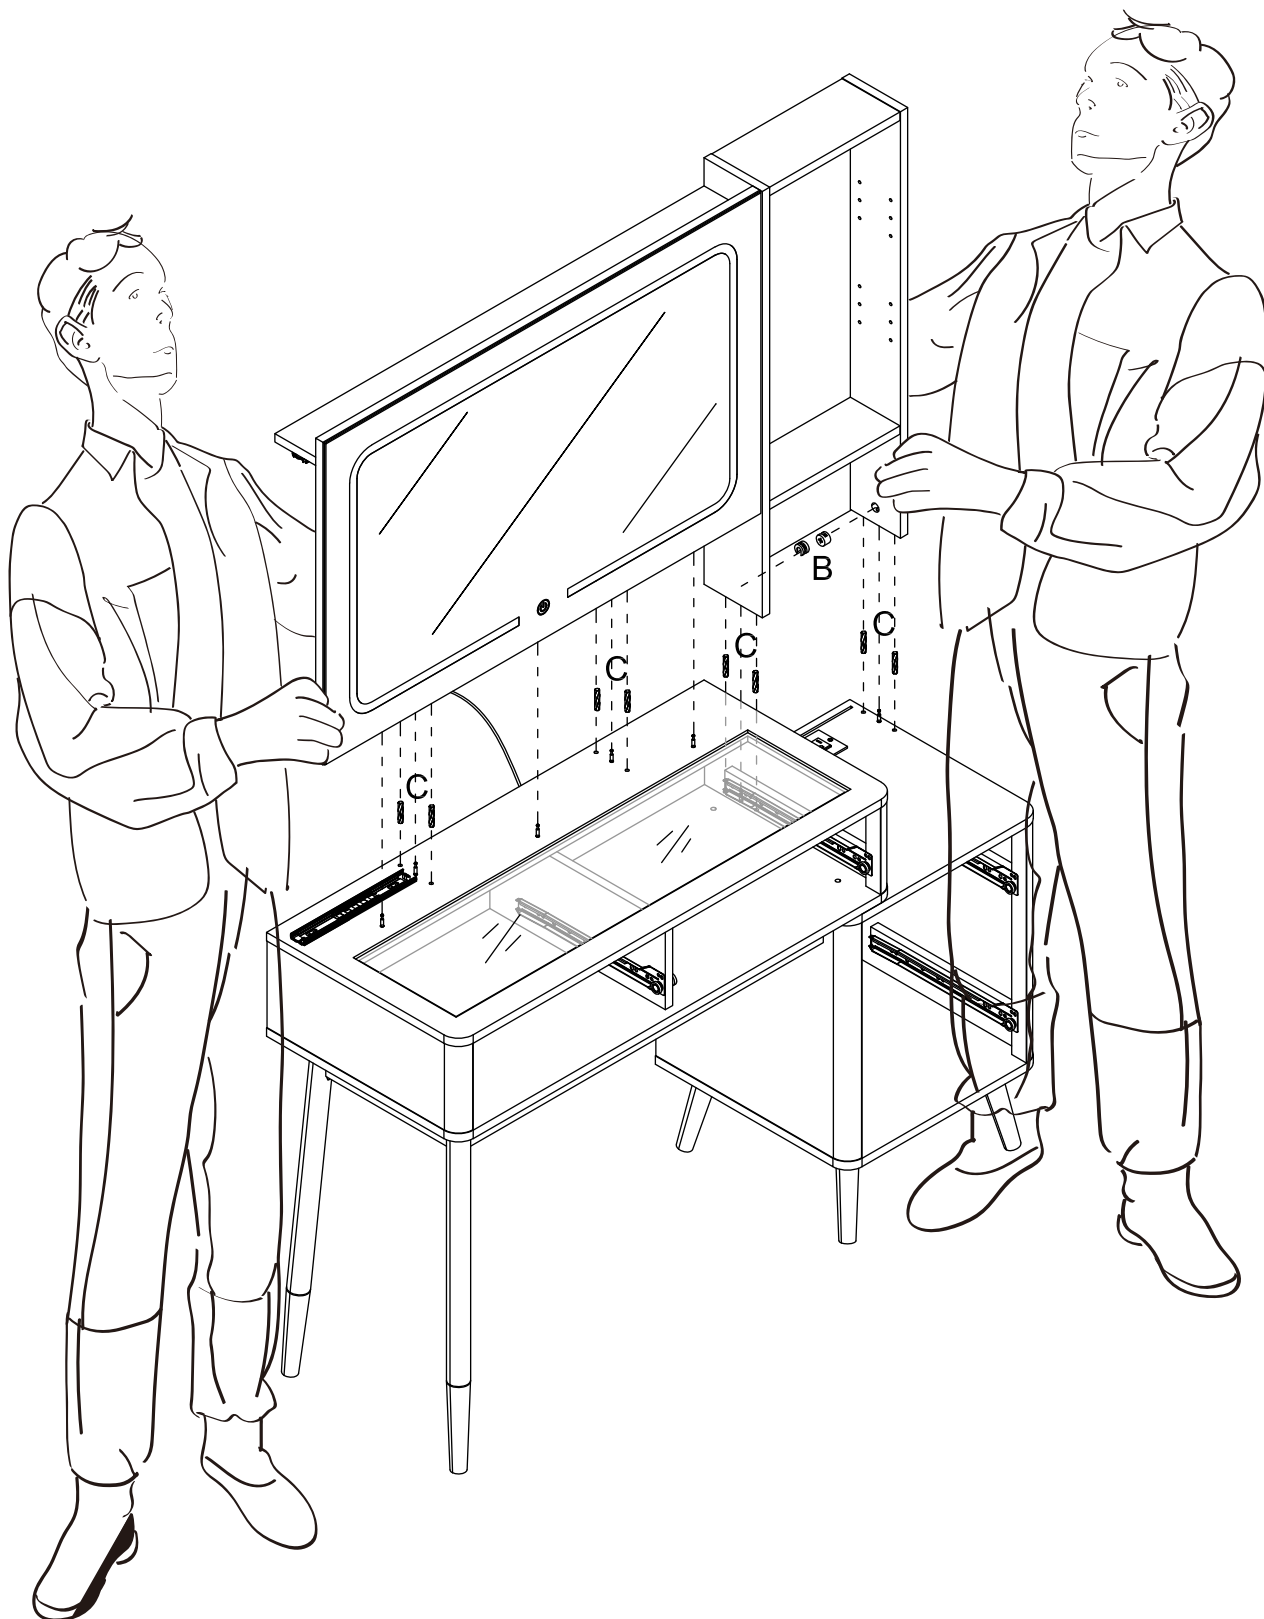


B	x2	C	x8
			

Step 26

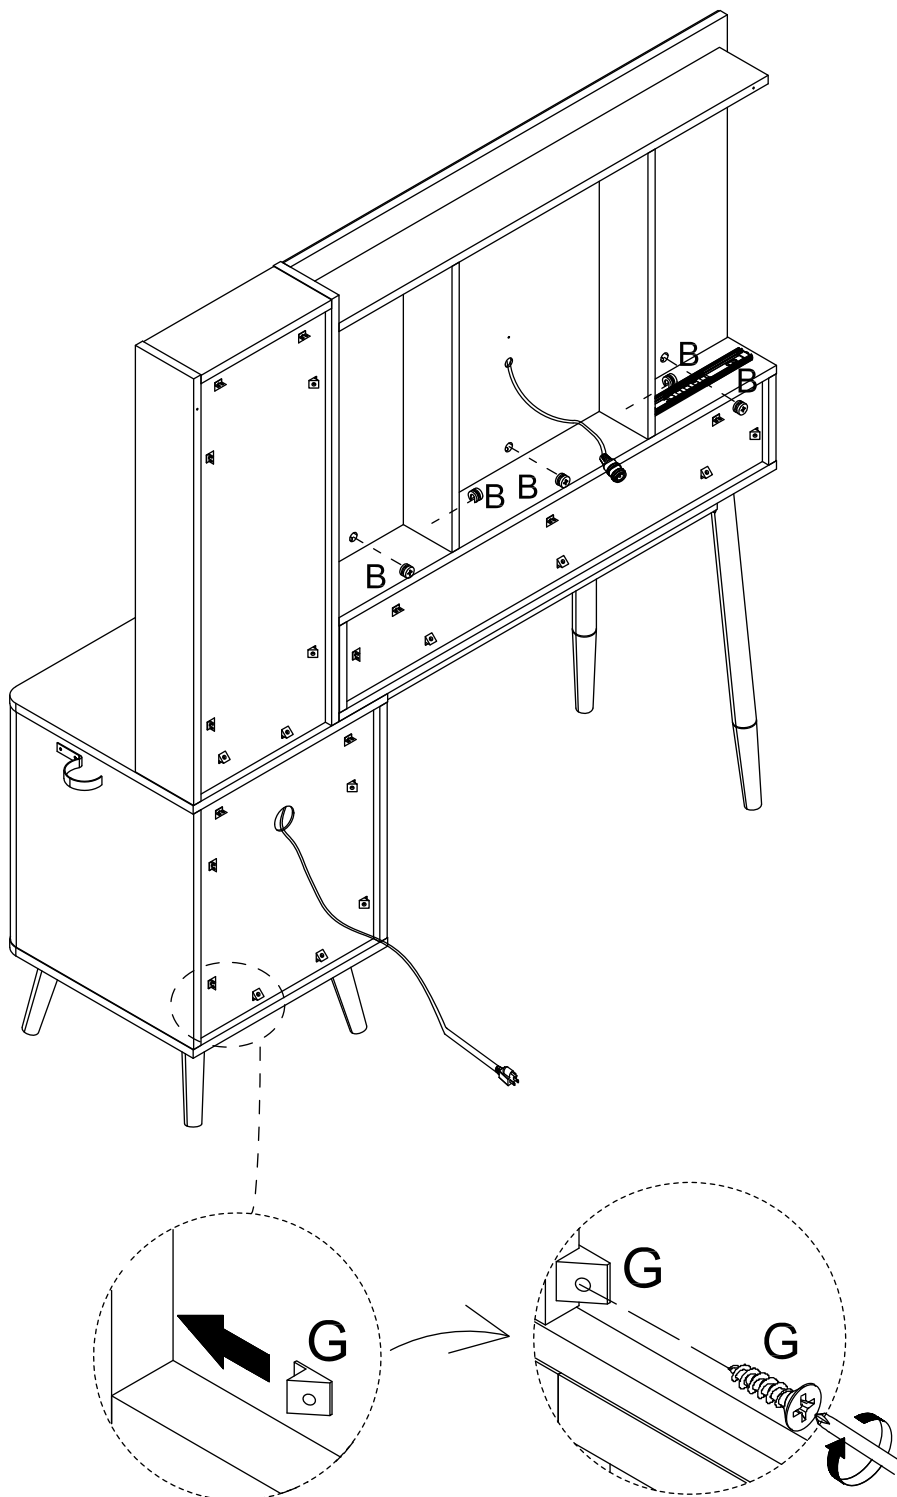


G	x24	B	x5
			

Step 27

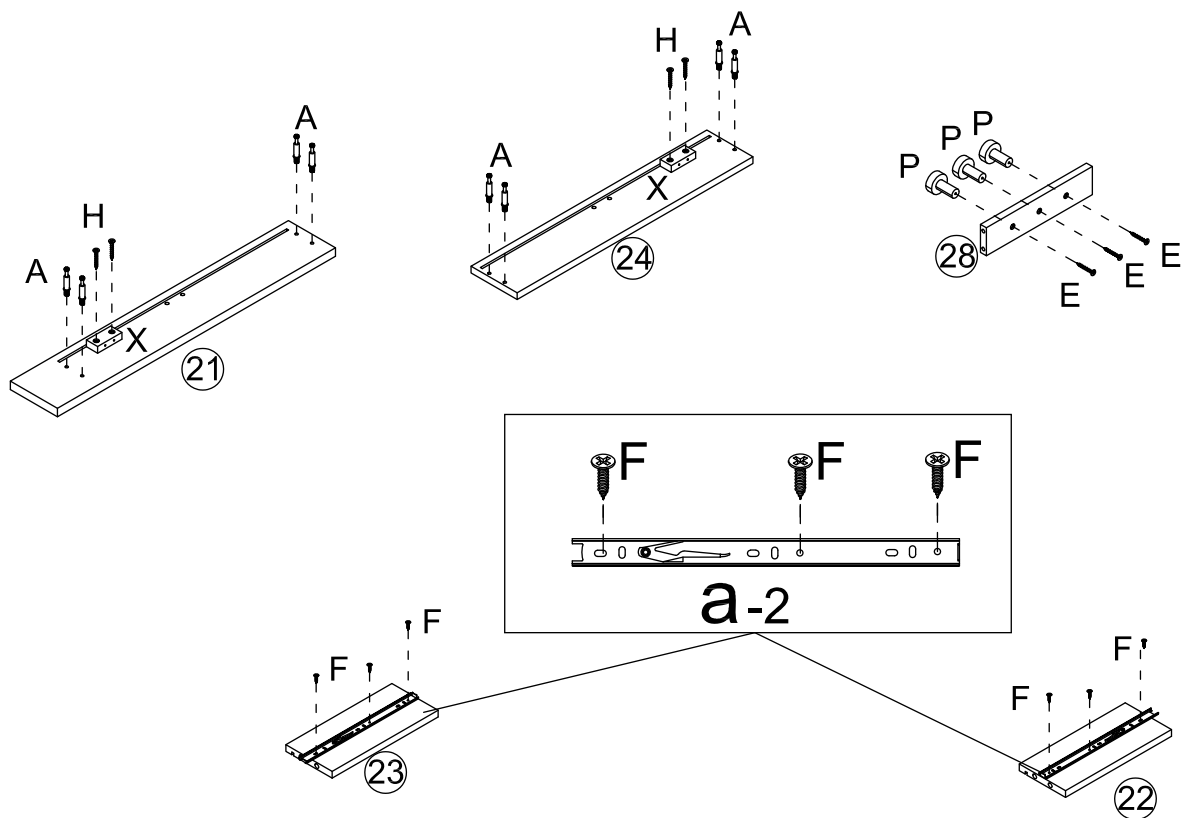




E x3	F x6	a-2 x2	H x4	X x2	P x3	A x8
						

Step 28

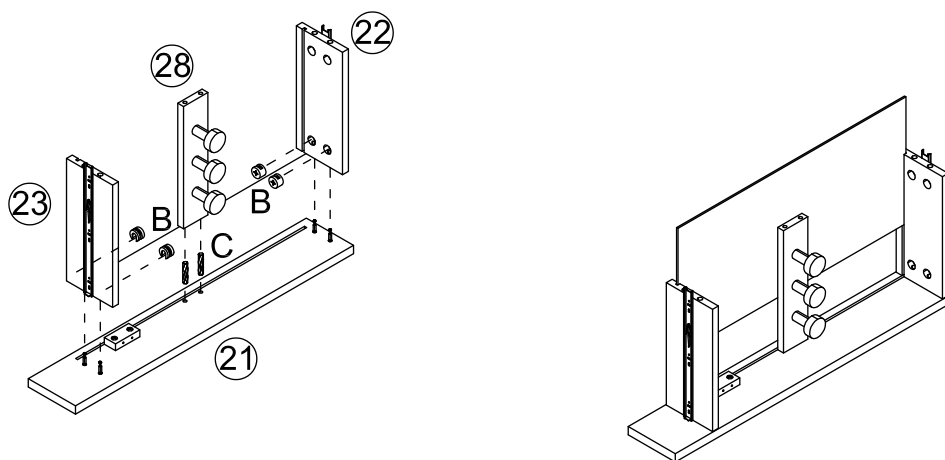



B x4	C x2
	

Step 29

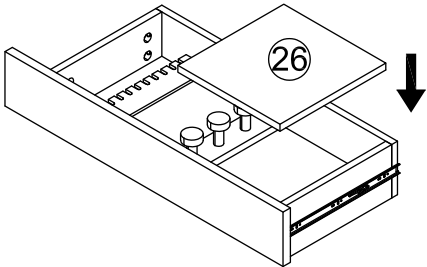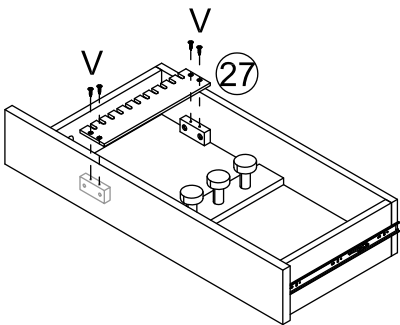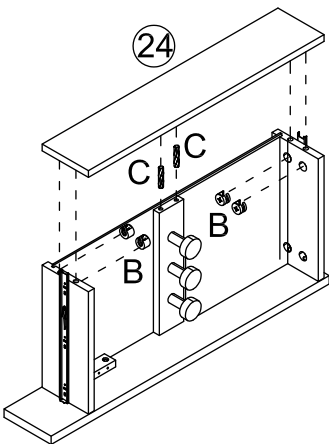


V	x4	B	x4	C	x2
					


Step 30

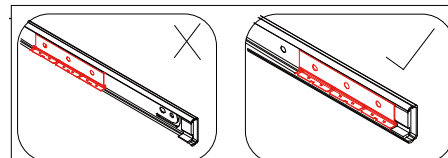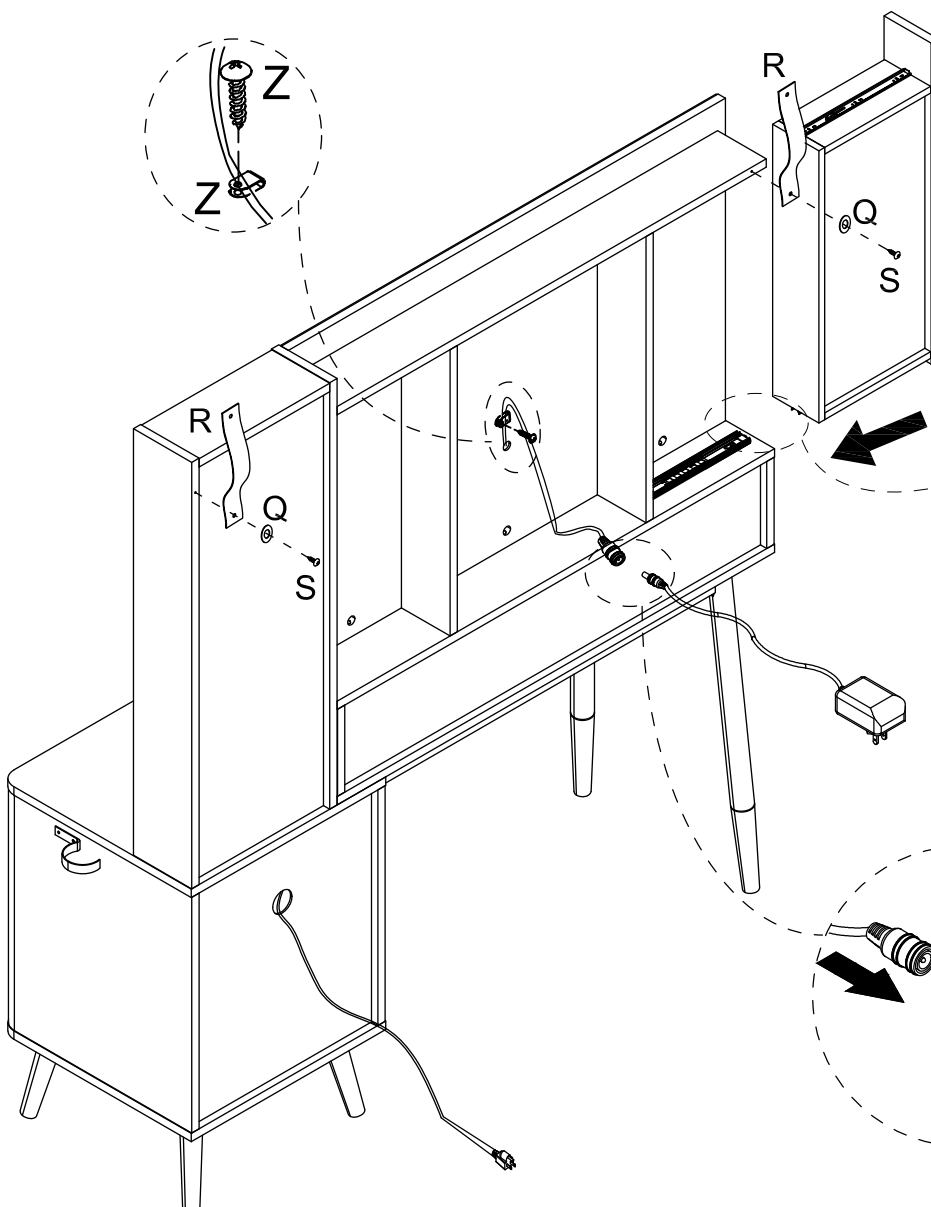

Move the slider to the front of the runner;

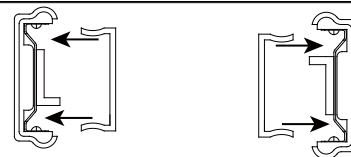



Put the drawer runners into the right groove of the runners on body; push the drawer in slowly.

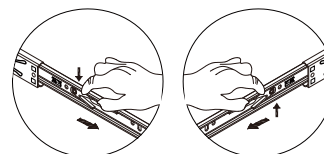







LEFT

RIGHT

If the drawer does not assemble well, pull out the drawer and re-insert. Please refer to the above illustrations for instructions on removing the drawer.


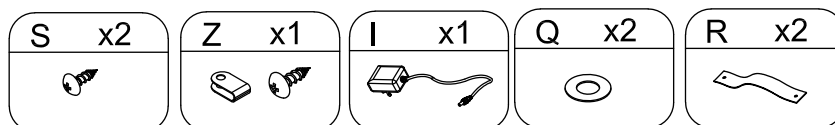
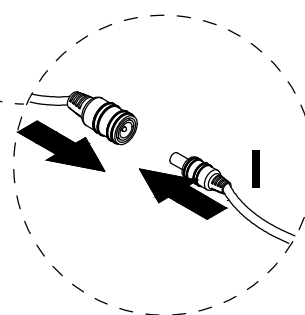


Step 31

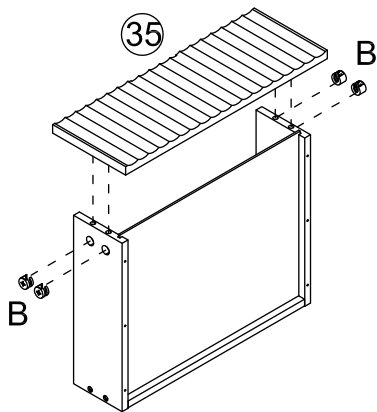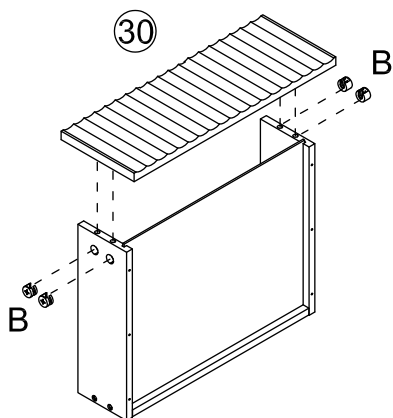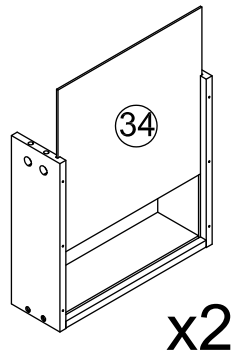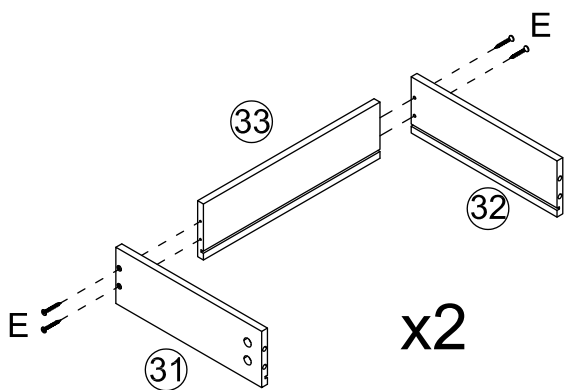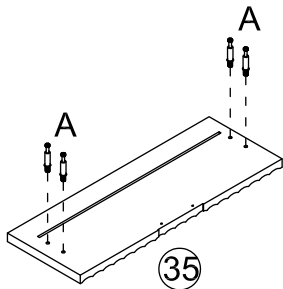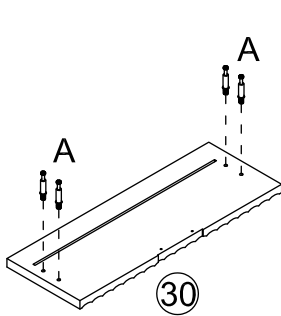


E	x8	B	x8	A	x8
					

Step 32

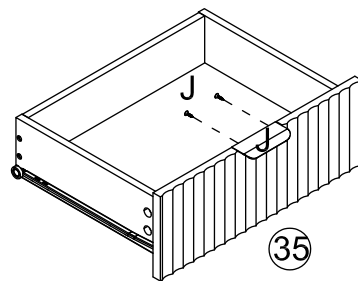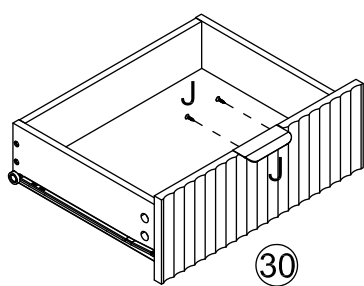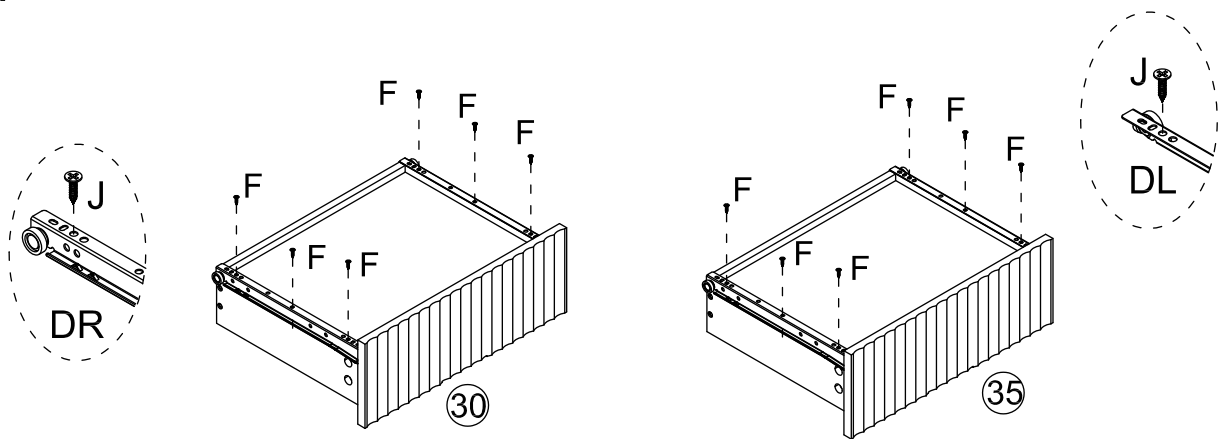


J x2	DL x2	DR x2	F x12
			

Step 33

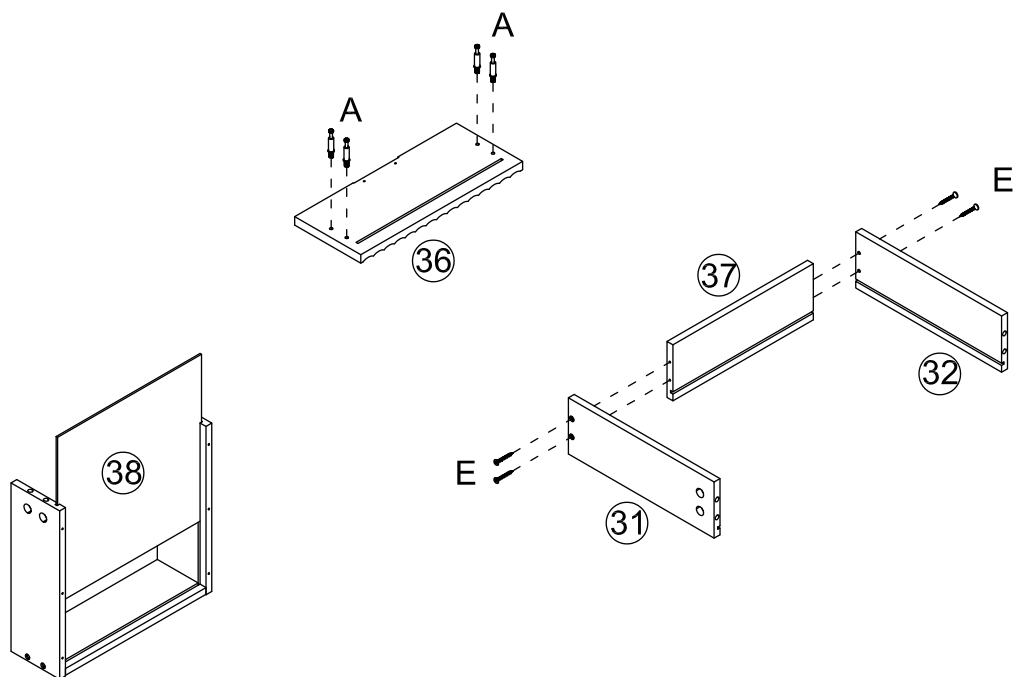


E x4	A x4
	







Step 34

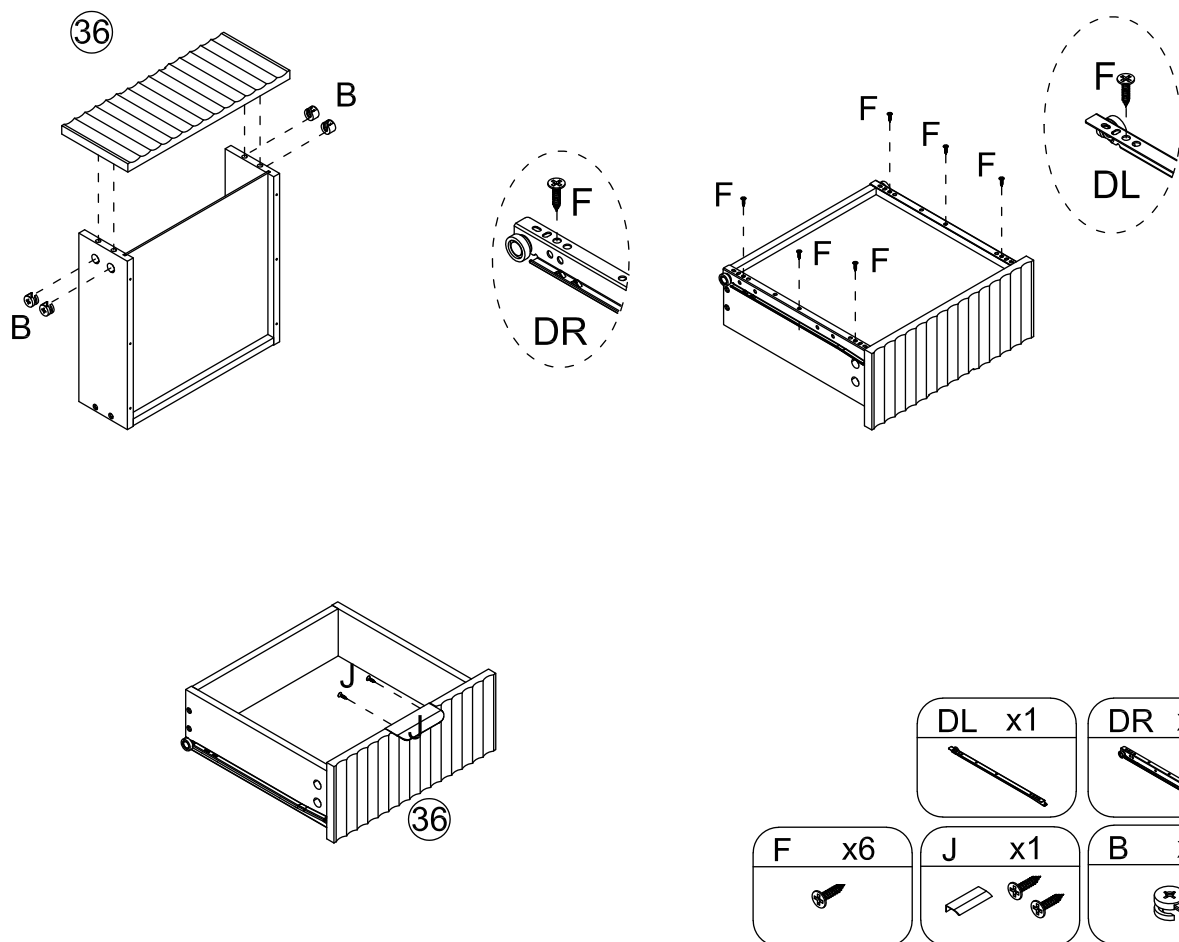

Step 35

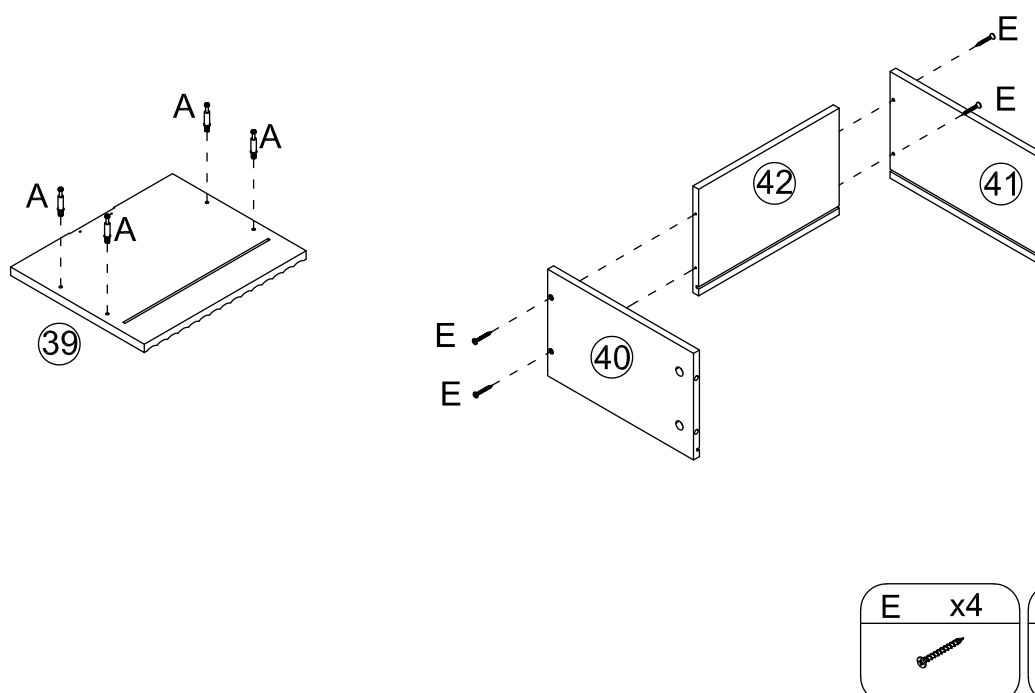


Step 36

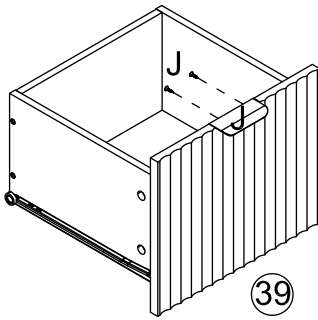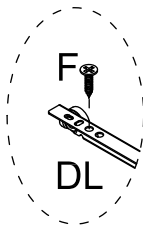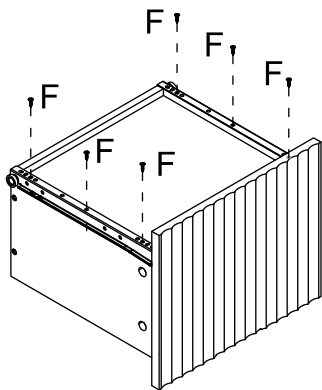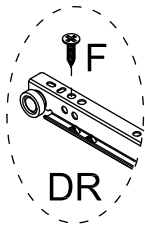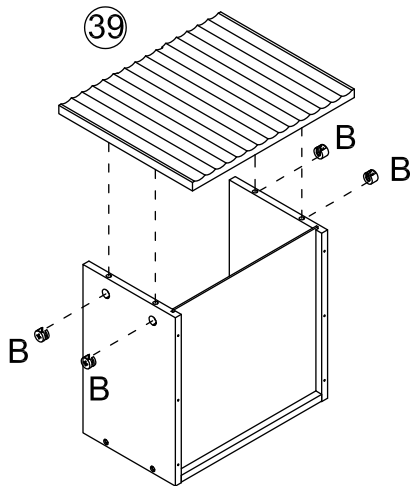
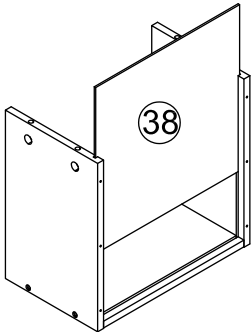


DL x1	DR x1	F x6	J x1	B x4


Step 37

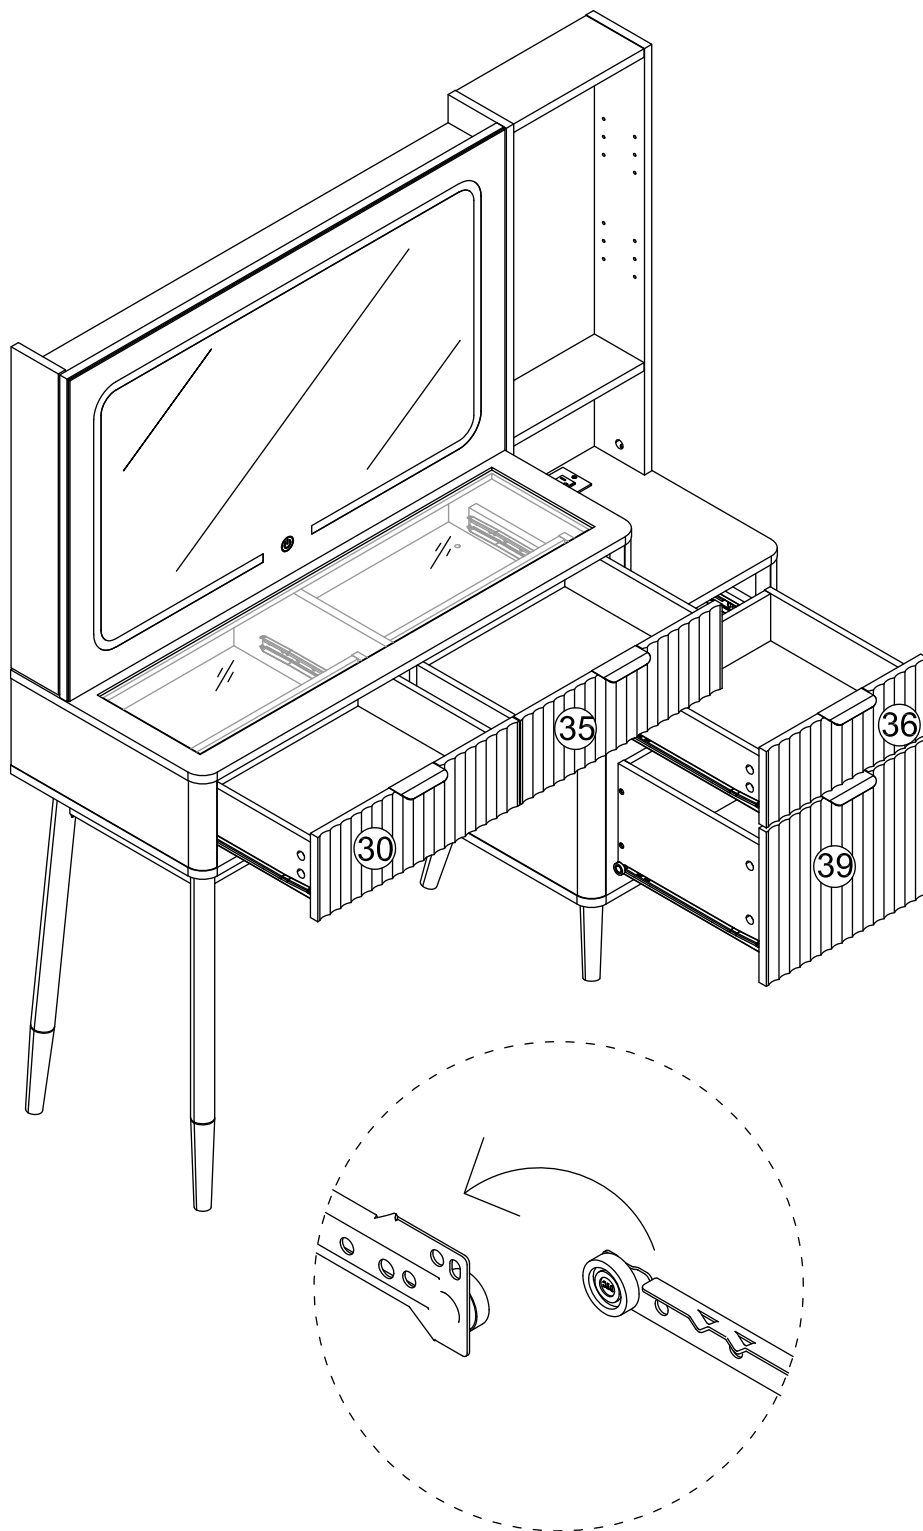

Step 38

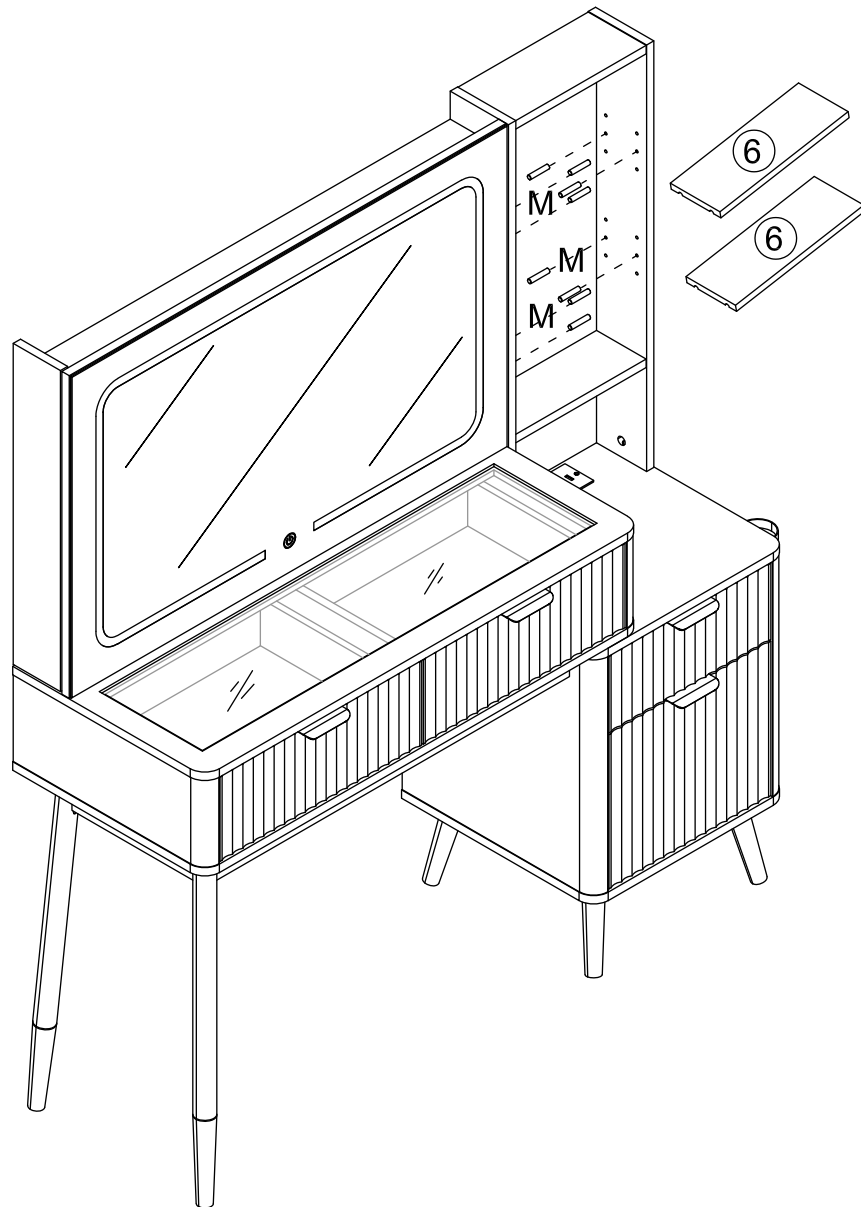

Step 39

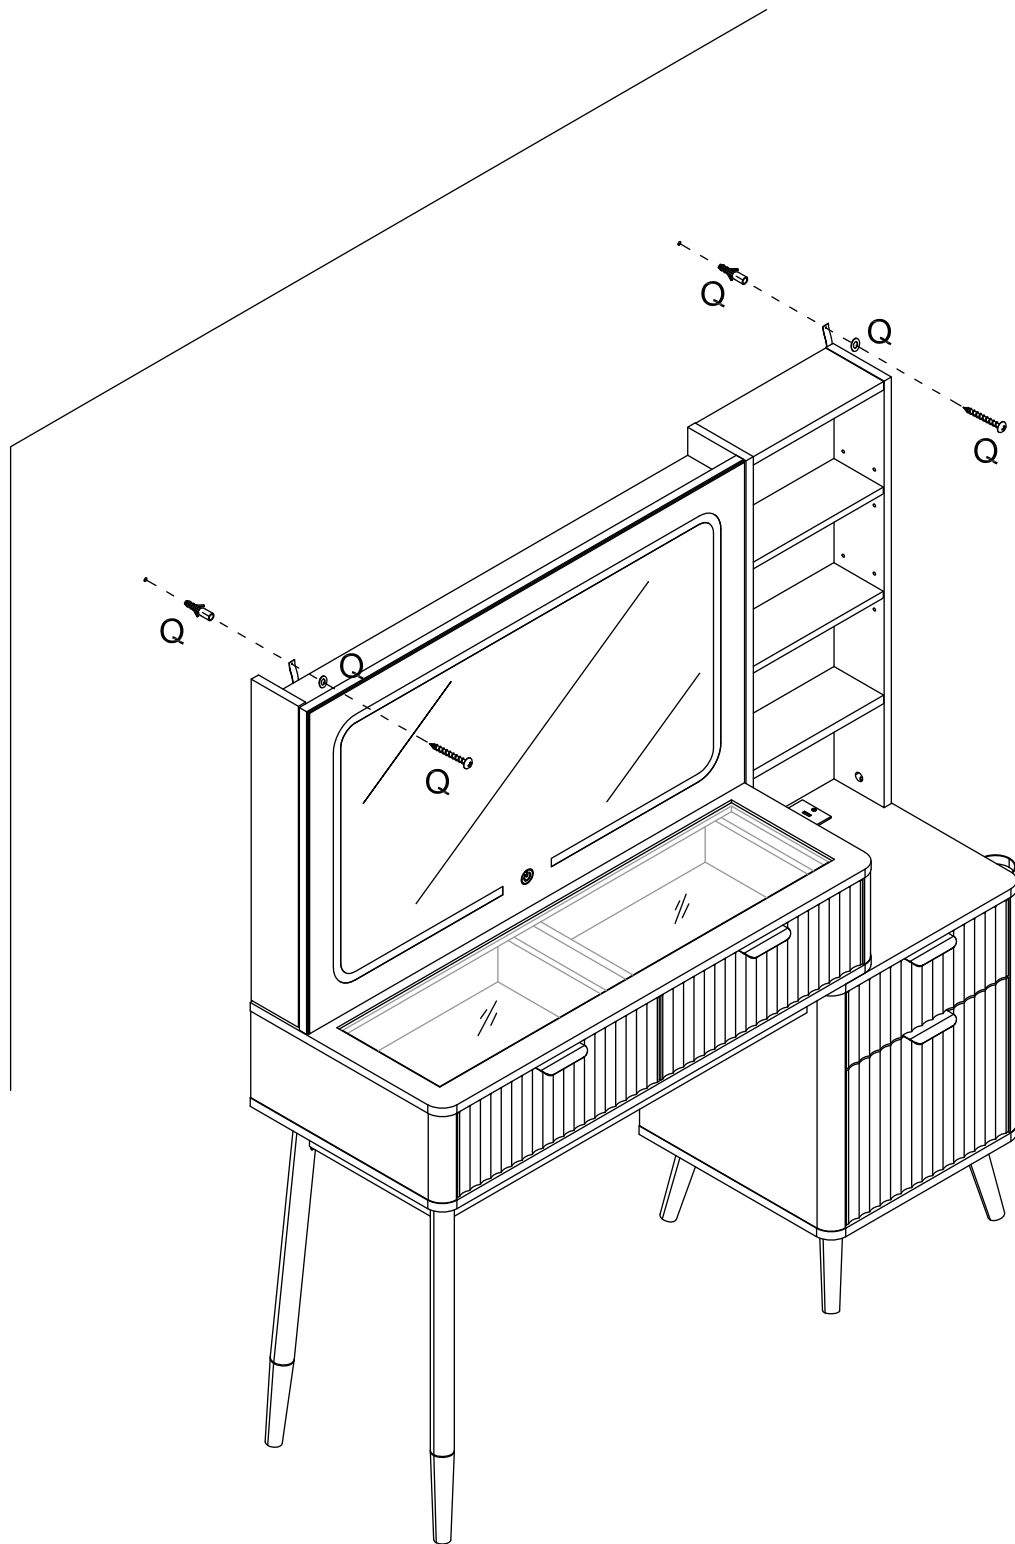

Q	x2	U	x2
			