

INSTALLATION INSTRUCTIONS


Read these instructions carefully.
Ensure that all parts are complete
before assembling.

- (A)**  Side Frame L x1
- (B)**  Side Frame R x1
- (C)**  BR Frame x1
- (D)**  Cushion Seat x1
- (E)**  Corner Block Back x1
- (F)**  Corner Block Front x1
- (G)**  Allen Key M4 x1
- (H)**  JCBC M6 x 40 x 2
- (I)**  JCBC M6 x 30 x 8
- (J)**  Spring Washer x14
- (K)**  JCBC M6 x 70 x 4
- (L)**  Wood Button x2




Scan the QR code,
search for installation instruction

Step 1

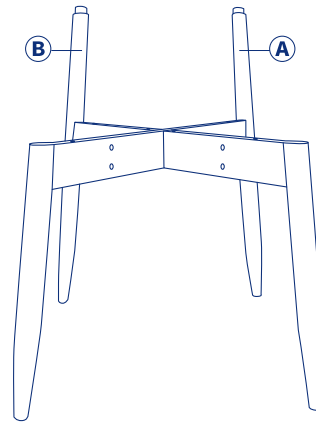


Cross installation of **(A)** and **(B)**

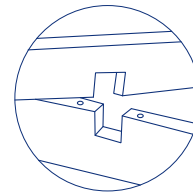


Step 2


Tighten each screw to **70%** torque first,
then fully tighten to **100%** after all are set.

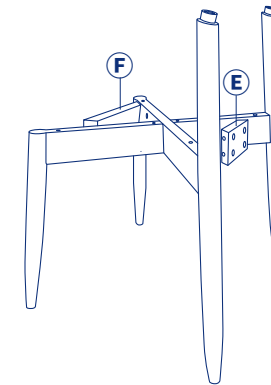

Use **(I)**
The Shortest screw

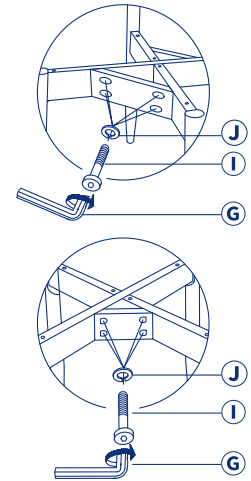


Step 3

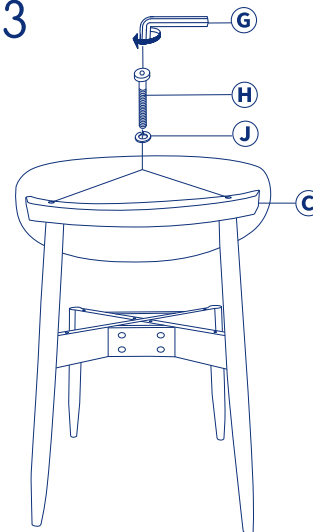

Use **(H)**
Medium-length screw


Step 4

Tighten each screw to **70%** torque first,
then fully tighten to **100%** after all are set.

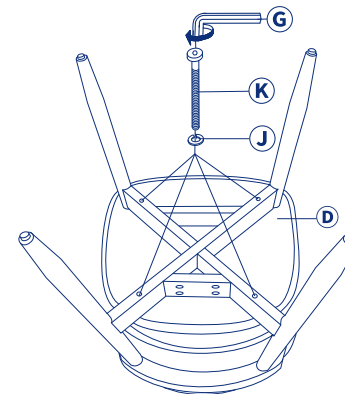

Use **(K)**
The longest screw

Step 5

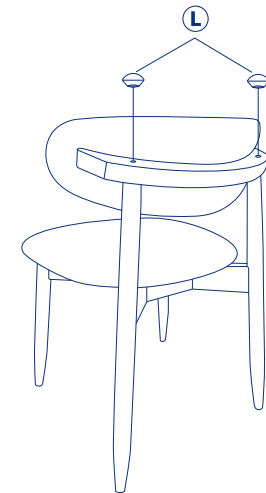

Assemble the **(L)**

Make Your House a Home

Simon