Half Barn Door Ironwood Bed



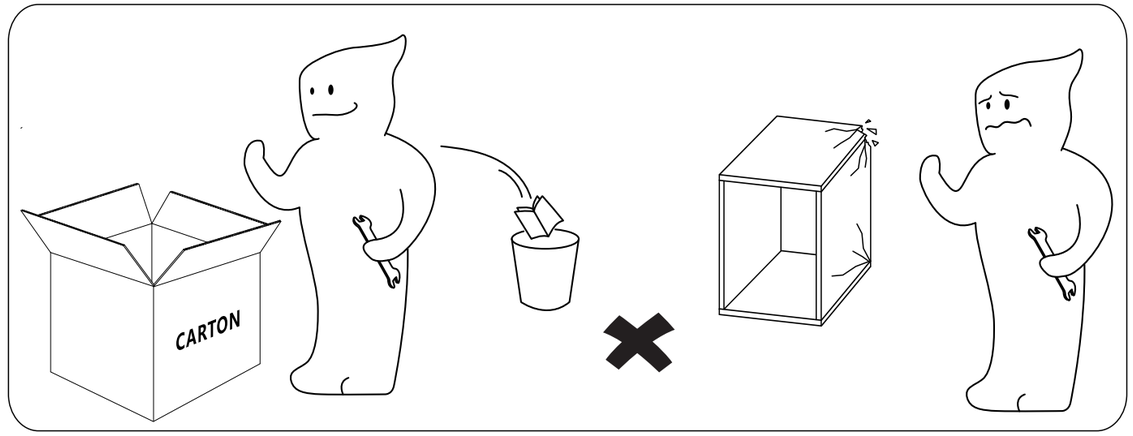
Friendly Customer Service

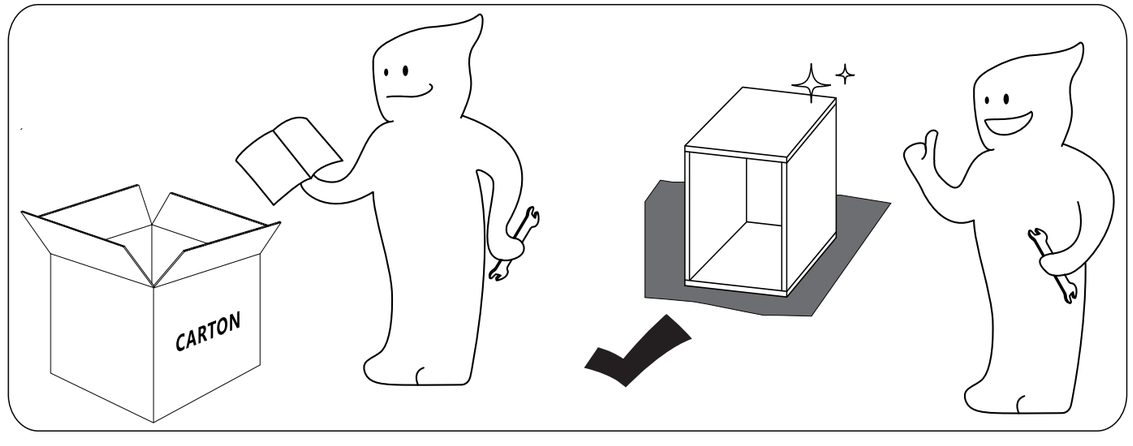
Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.

ASSEMBLY INSTRUCTIONS



Please follow the instruction manuals and use a pad to protect the product during your assembly.






Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.






































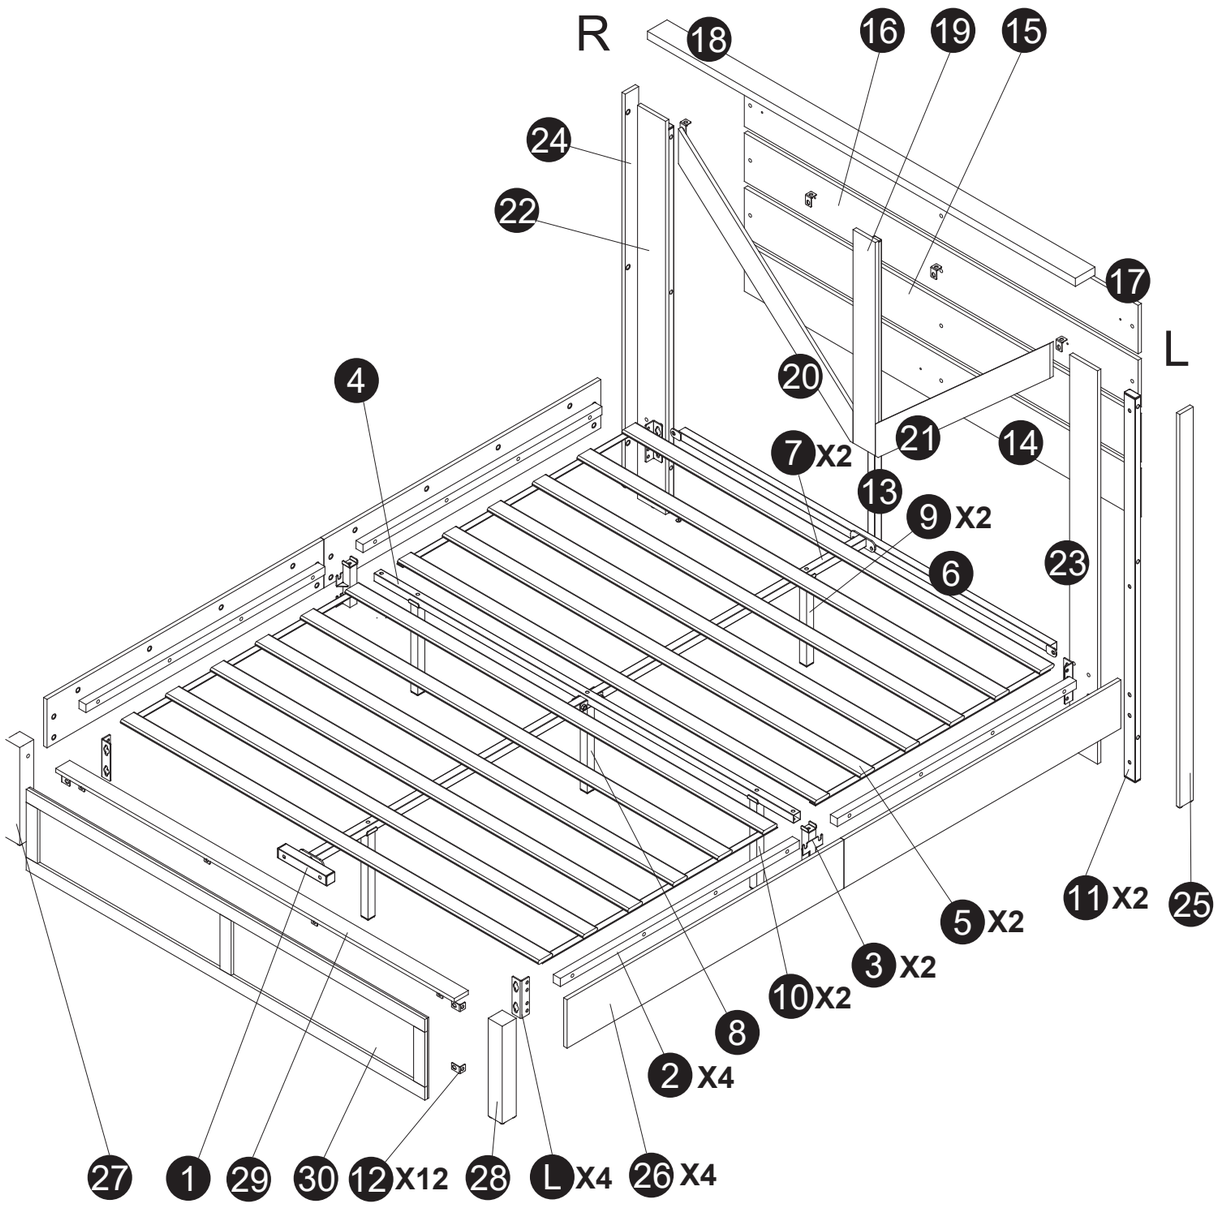
For easier and better assembly, **2** or more adults are required.




ASSEMBLY INSTRUCTIONS

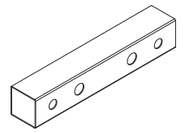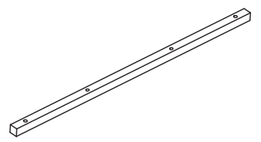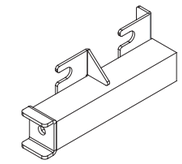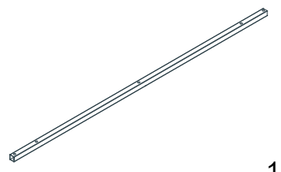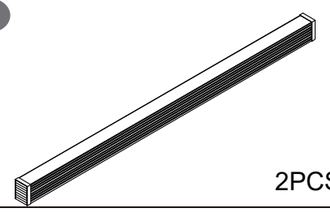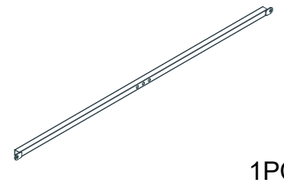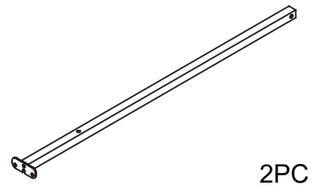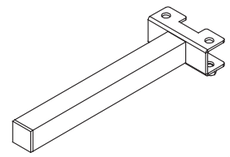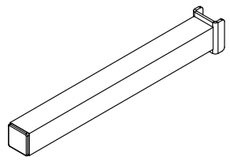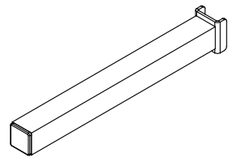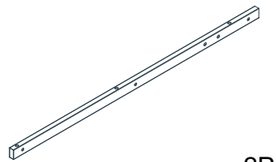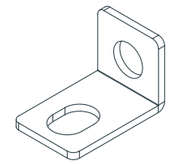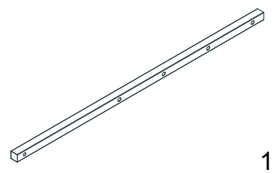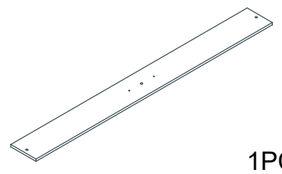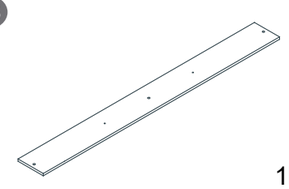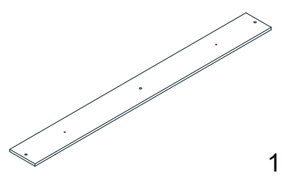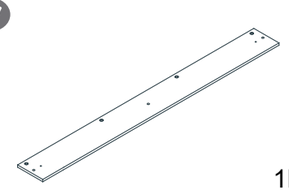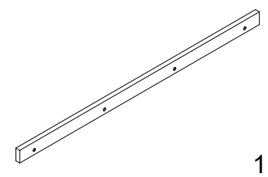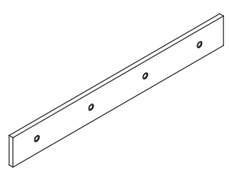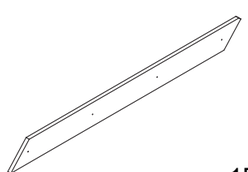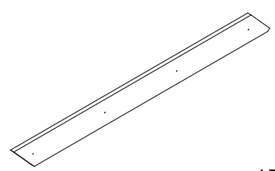PARTS LIST


1  1PC	2  4PCS	3  2PCS
4  1PC	5  2PCS	6  1PC
7  2PC	8  1PC	9  2PCS
10  2PCS	11  2PCS	12  12PCS
13  1PC	14  1PC	15  1PC
16  1PC	17  1PC	18  1PC
19  1PC	20  1PC	21  1PC

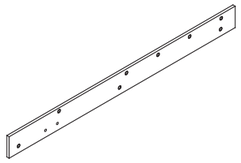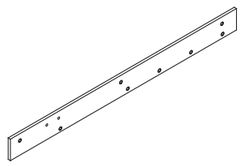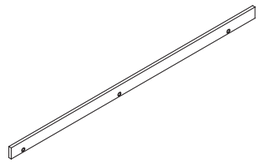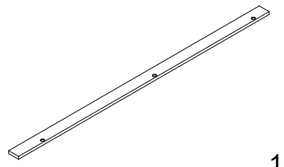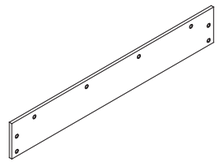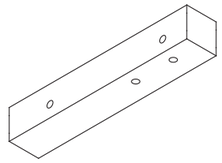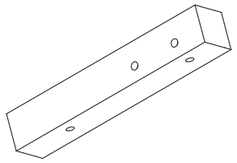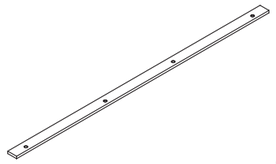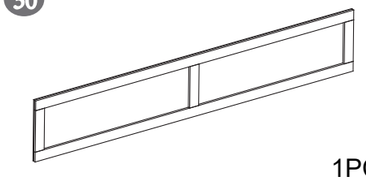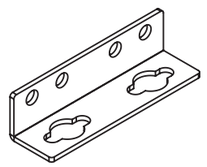22  1PC	23  1PC	24  1PC
25  1PC	26  4PCS	27  1PC
28  1PC	29  1PC	30  1PC
L  4PCS		
A  M8*12 40PCS	B  M8*20 18PCS	C  M8*30 6PCS
D  M8*35 White zinc 20PCS	E  M8*40 10PCS	F  M8*48 8PCS
G  ST4.2*20 8PCS	H  M8 1PC	I  M8*46 White zinc 4PCS

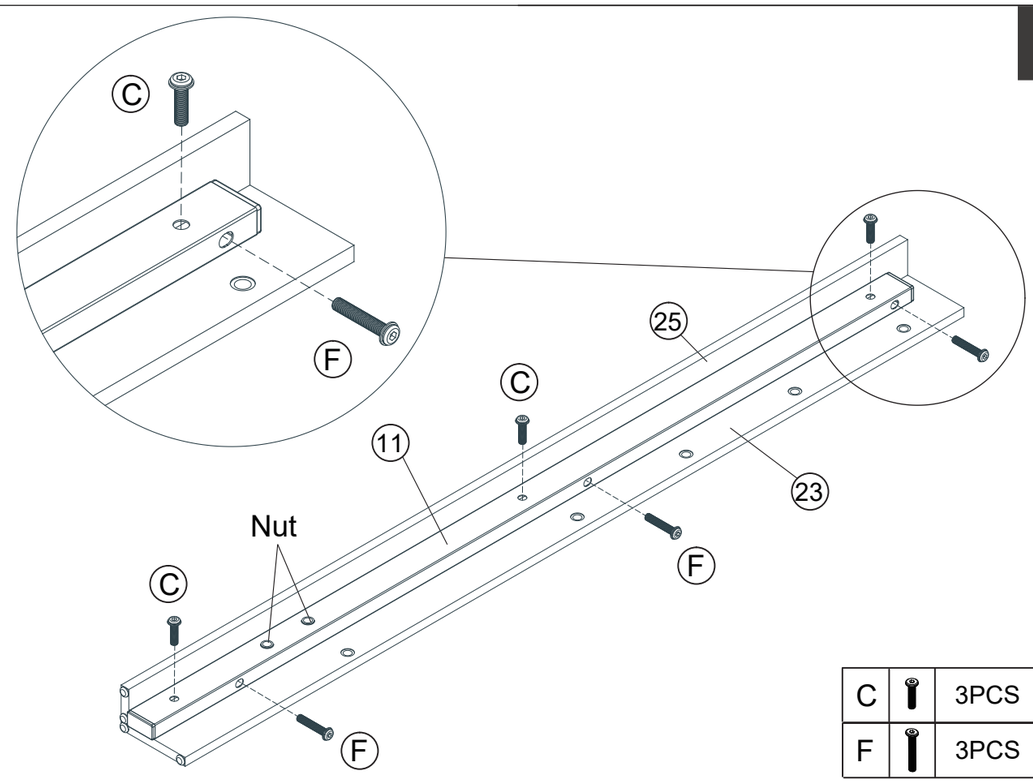
1



2

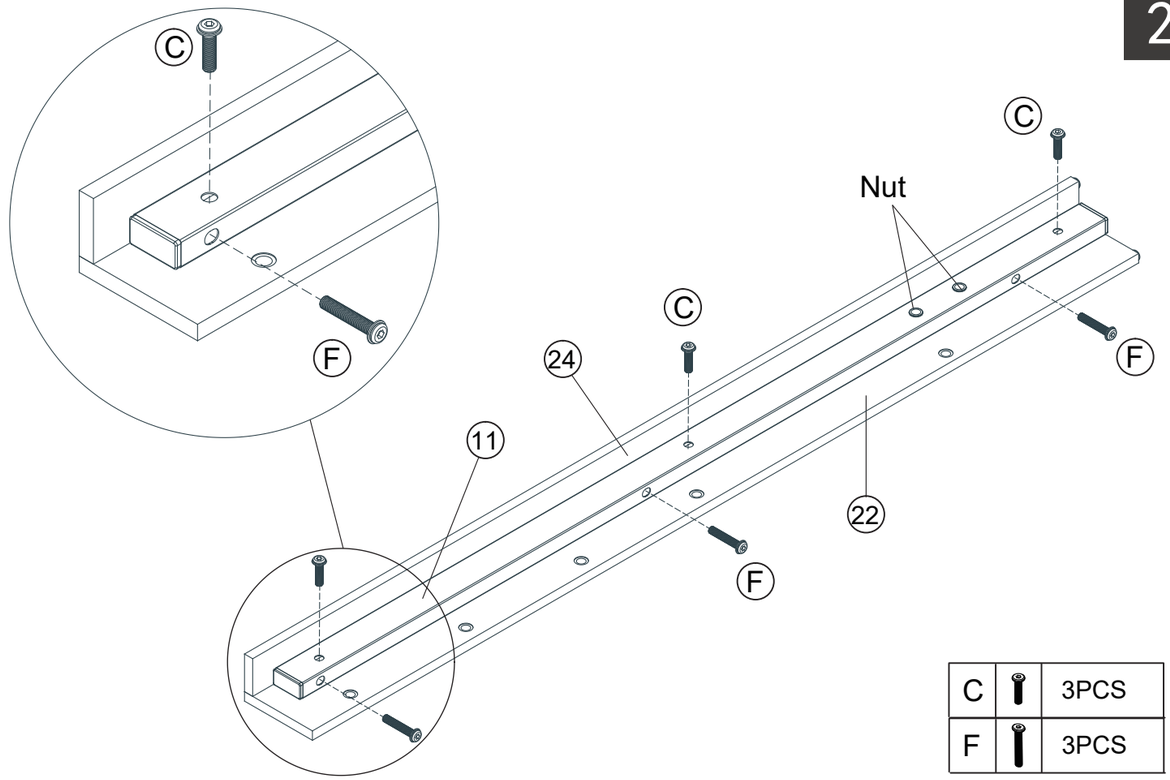


3

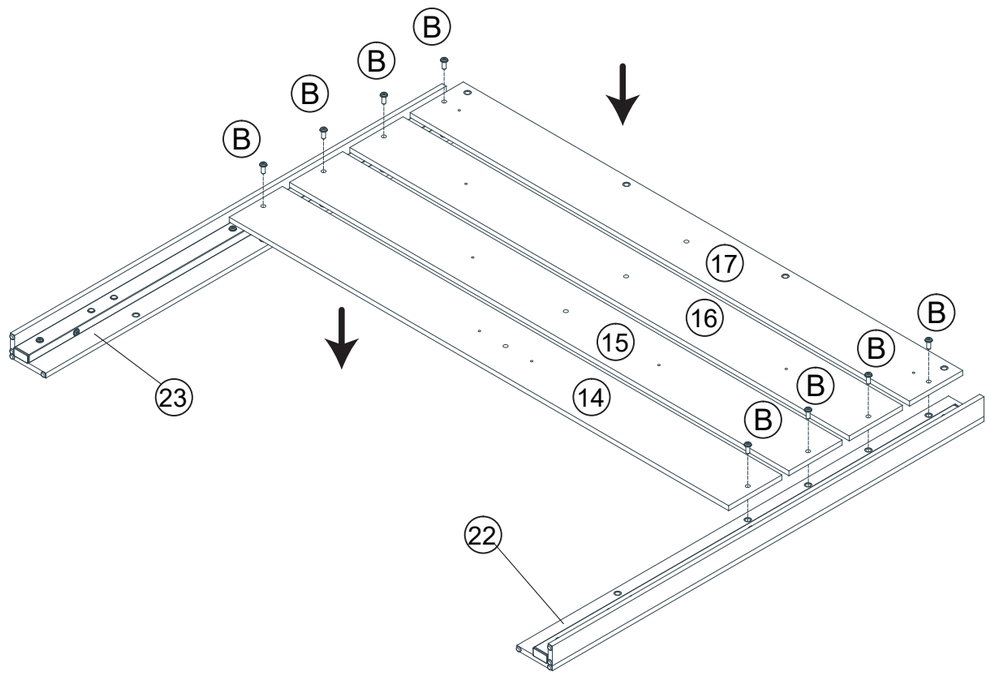

B	8PCS

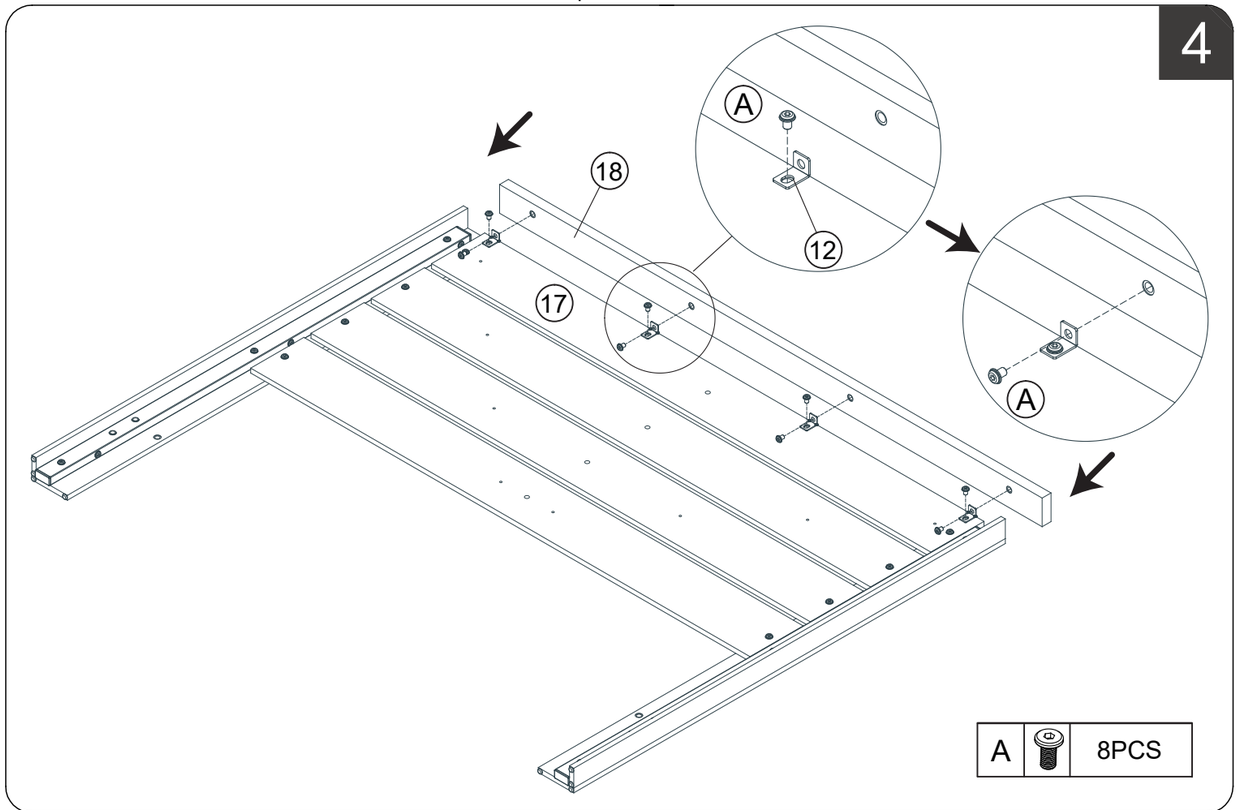
4



A	8PCS

5

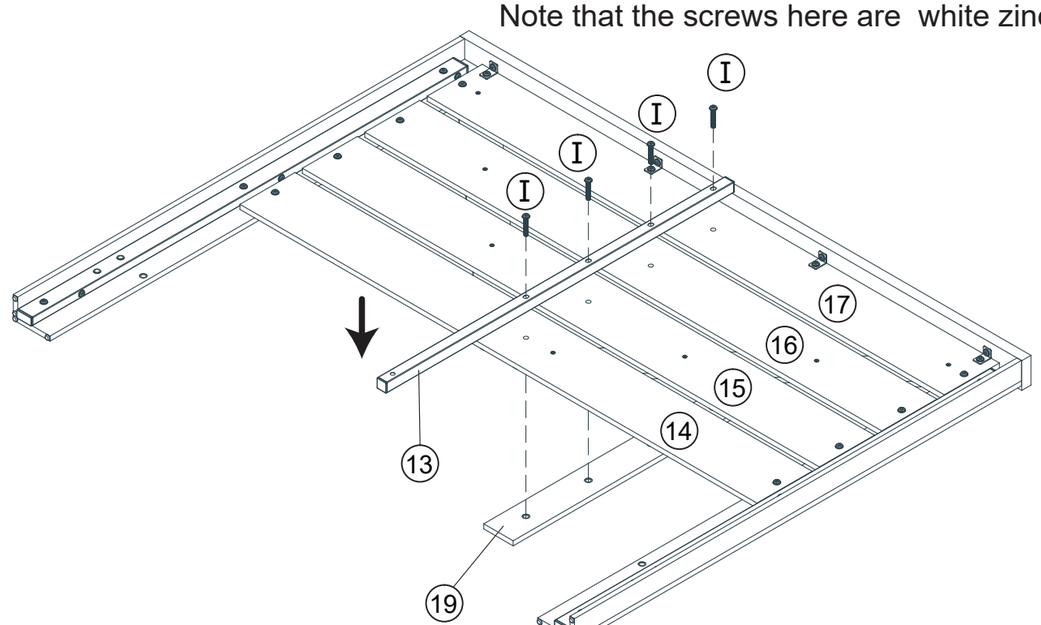
Note that the screws here are white zinc



⚠ If the assembly hole cannot be aligned, loosen the screws of relevant parts and adjust the assembly

I	4PCS

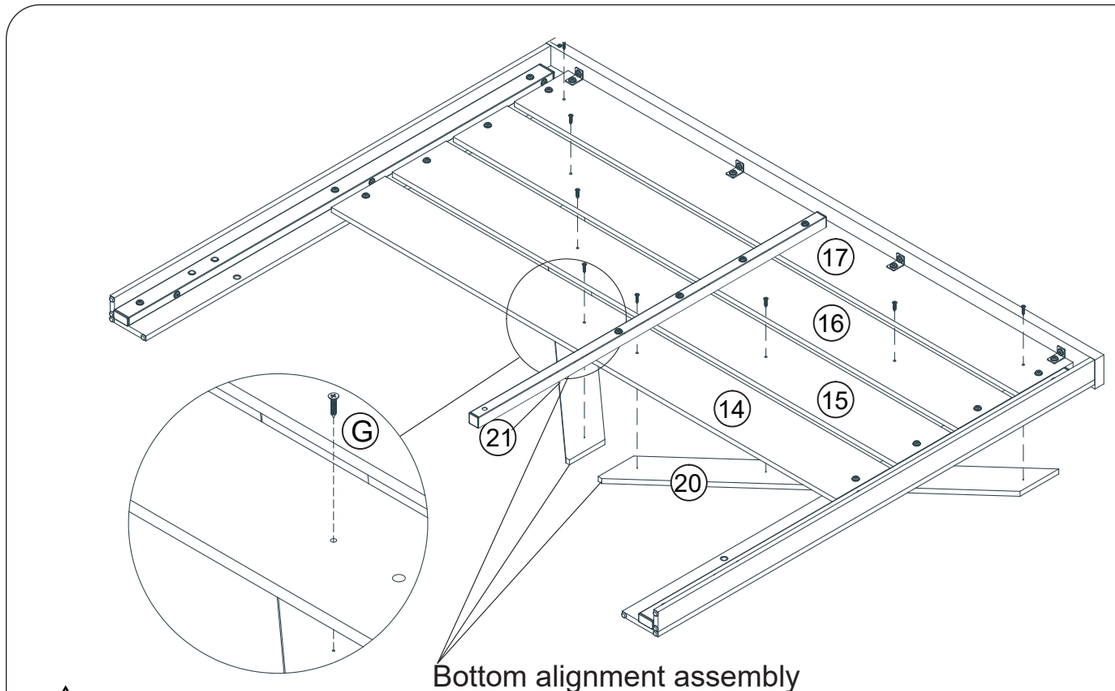6




Bottom alignment assembly

⚠ If the bottom of the part 14/20/21 are not aligned, lossen the screws on the left and right sides of the part 14/15/16/17,then align the bottom of the part 14/20/21, tighen the screws at last

G	8PCS

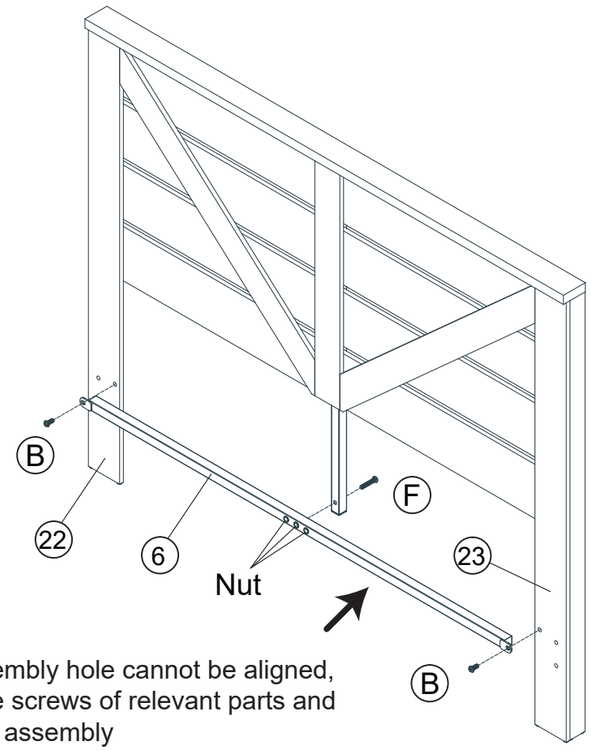
7



If the assembly hole cannot be aligned, loosen the screws of relevant parts and adjust the assembly


B		2PCS
F		1PC

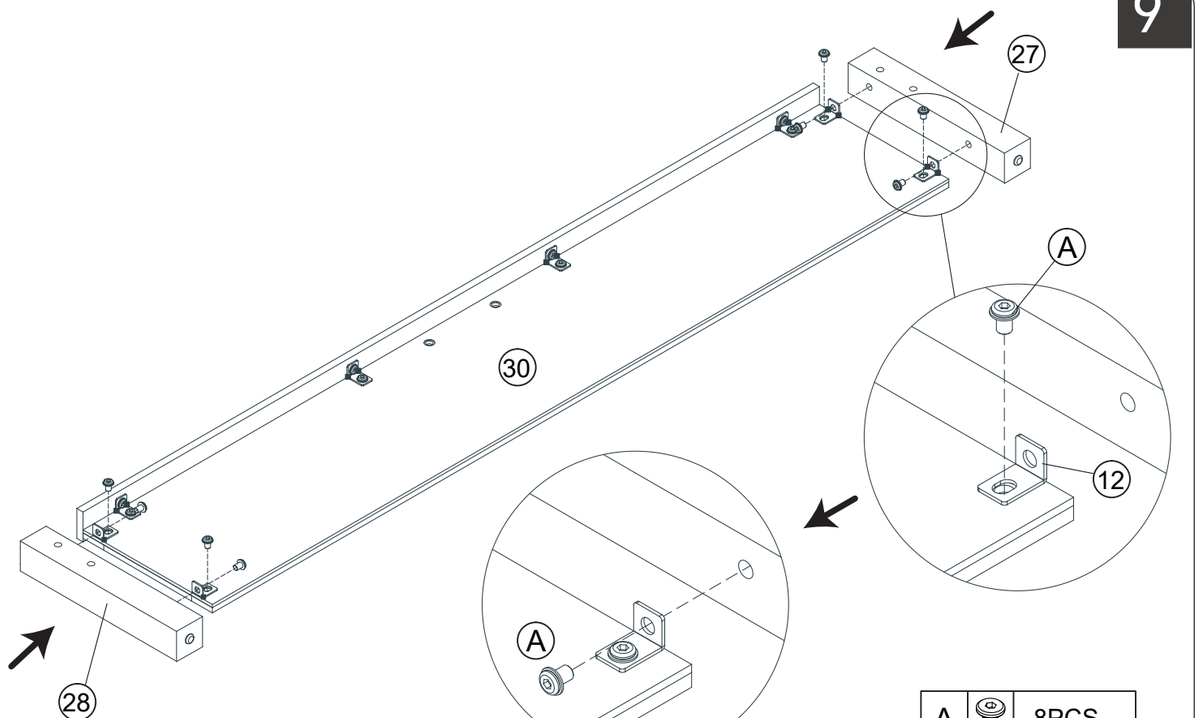9




A		8PCS

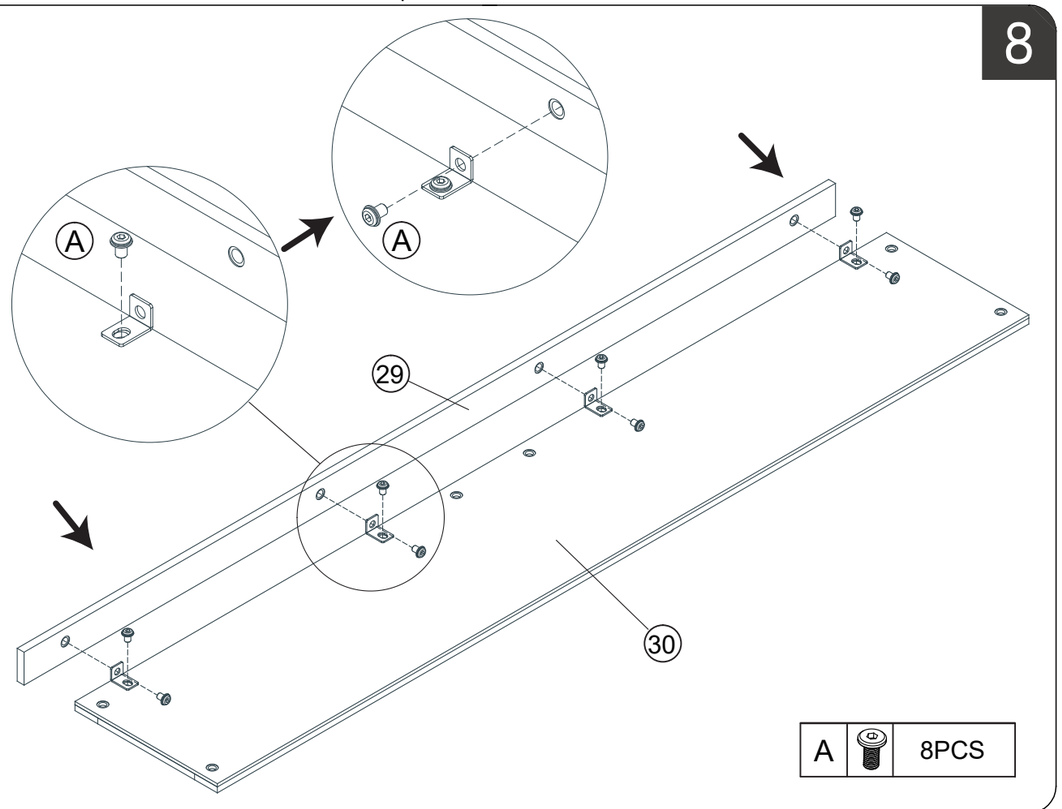8




A		8PCS

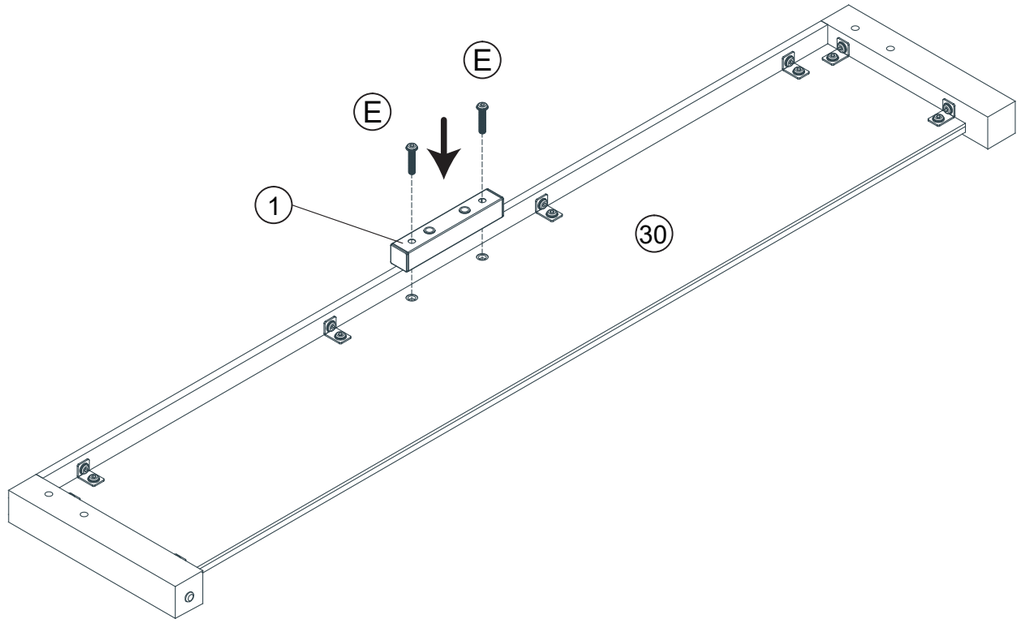10




E		2PCS

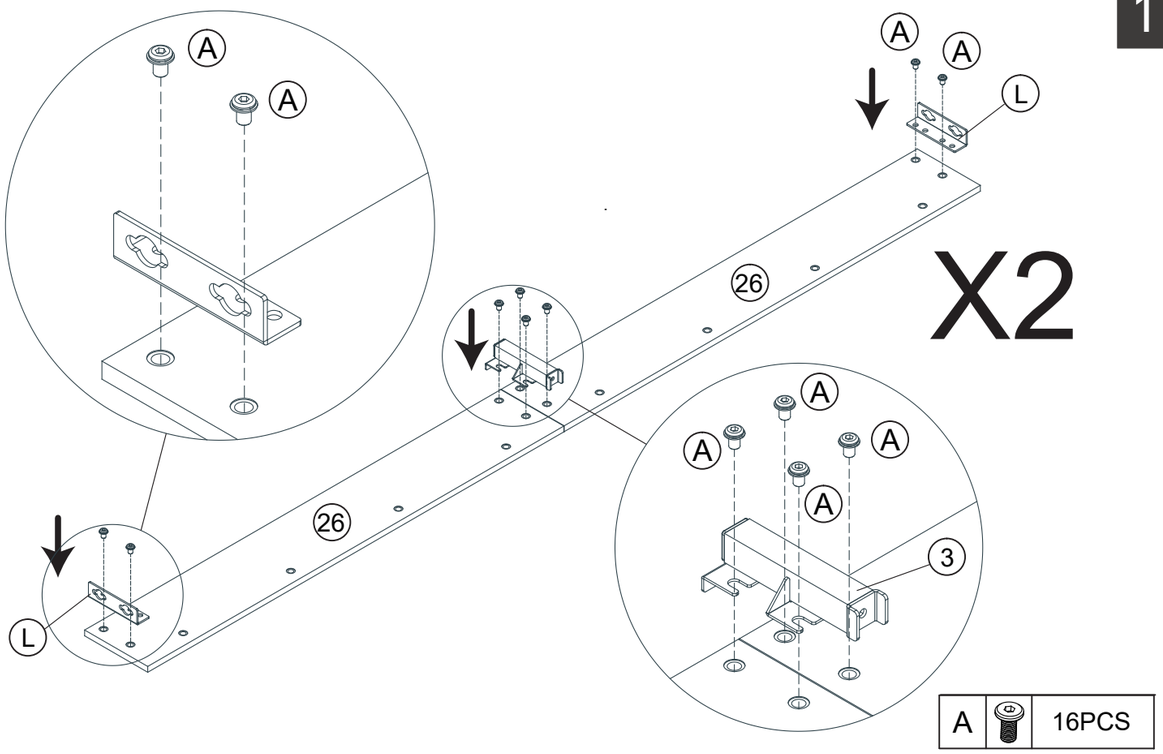11




12

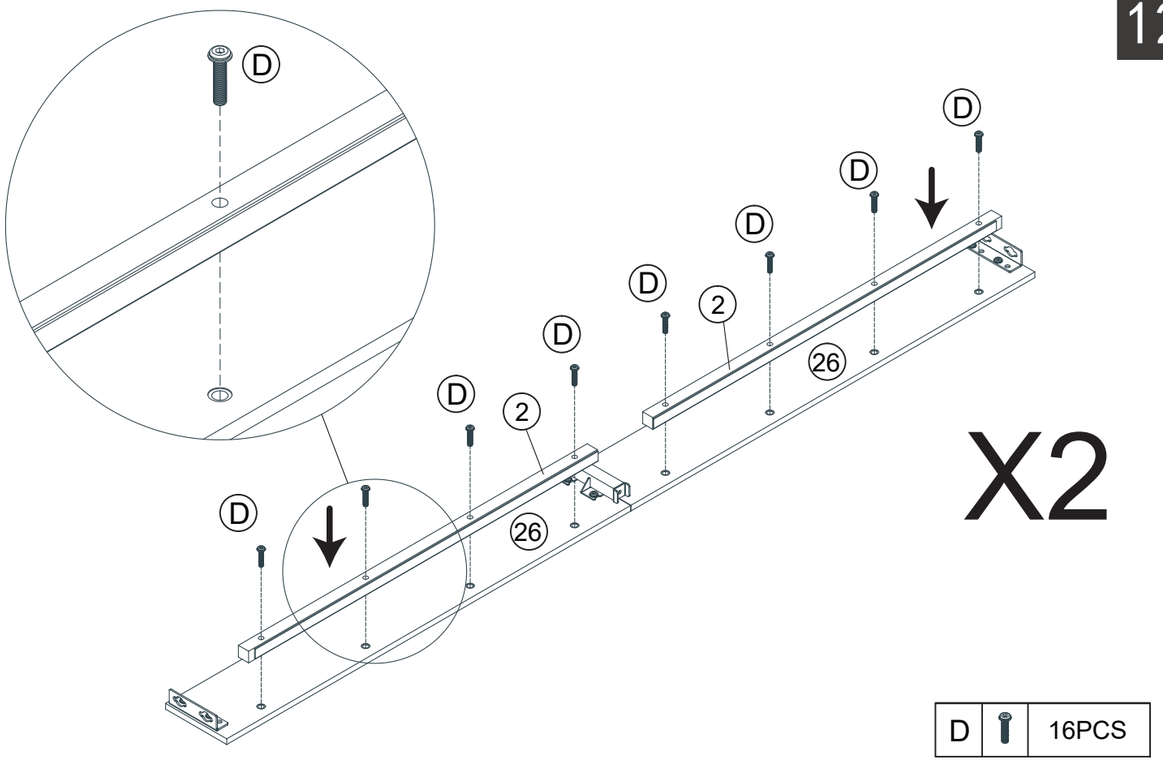


13

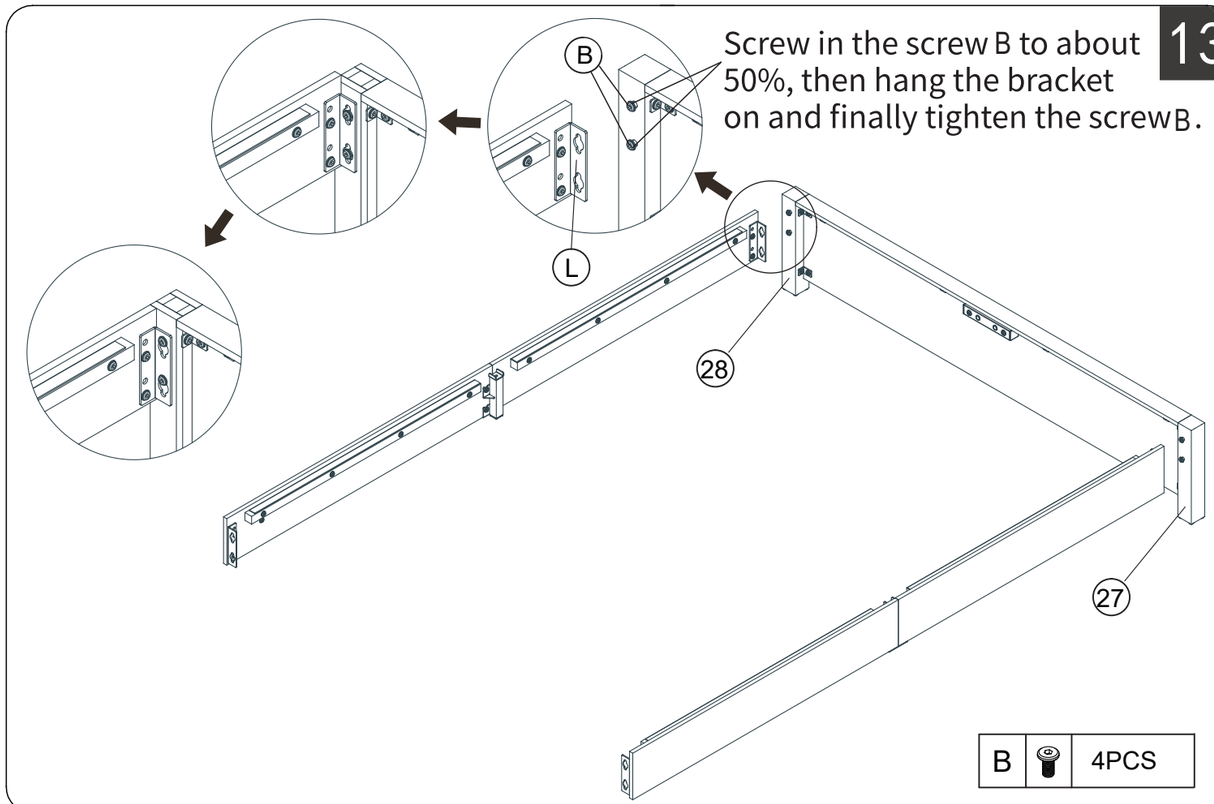Screw in the screw B to about 50%, then hang the bracket on and finally tighten the screw B.




14

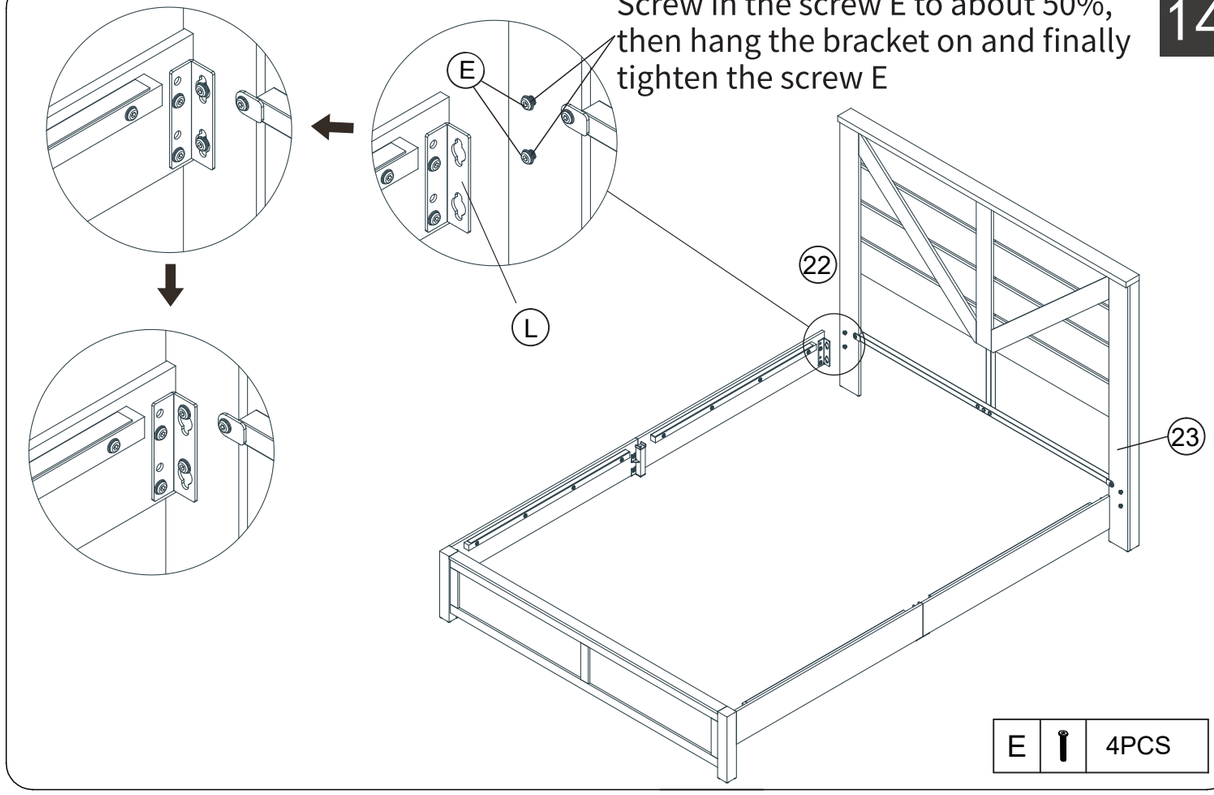Screw in the screw E to about 50%, then hang the bracket on and finally tighten the screw E




15

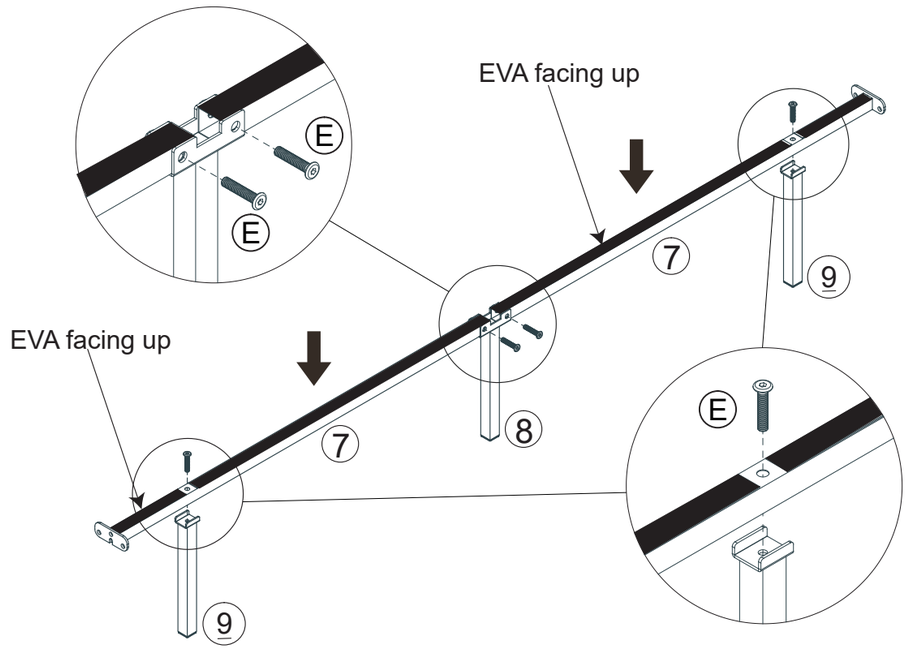


E		4PCS

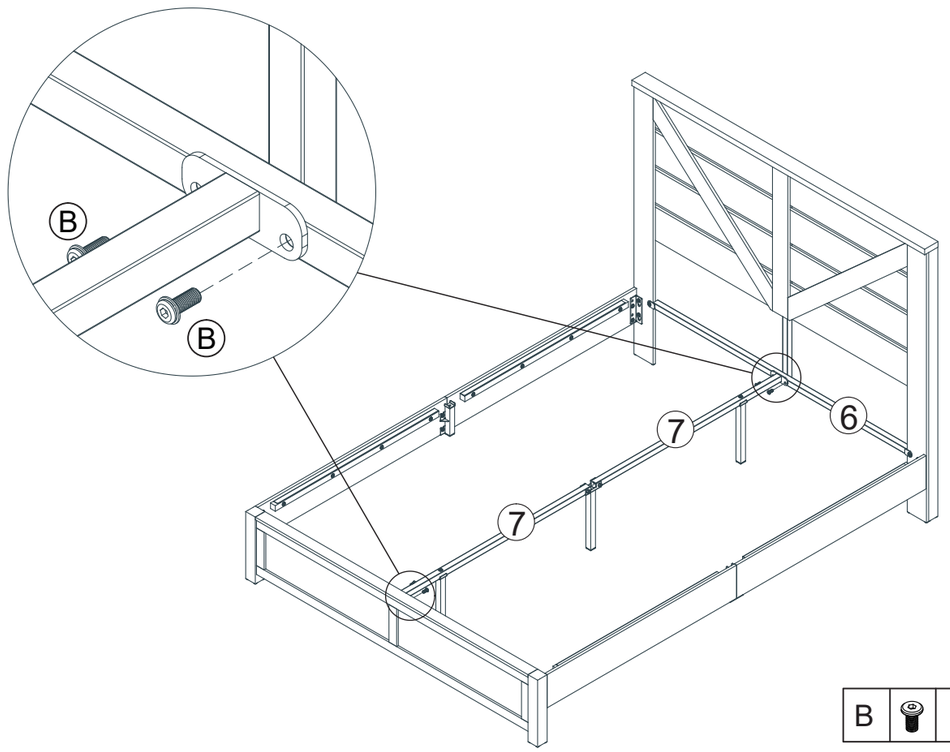16



B		4PCS

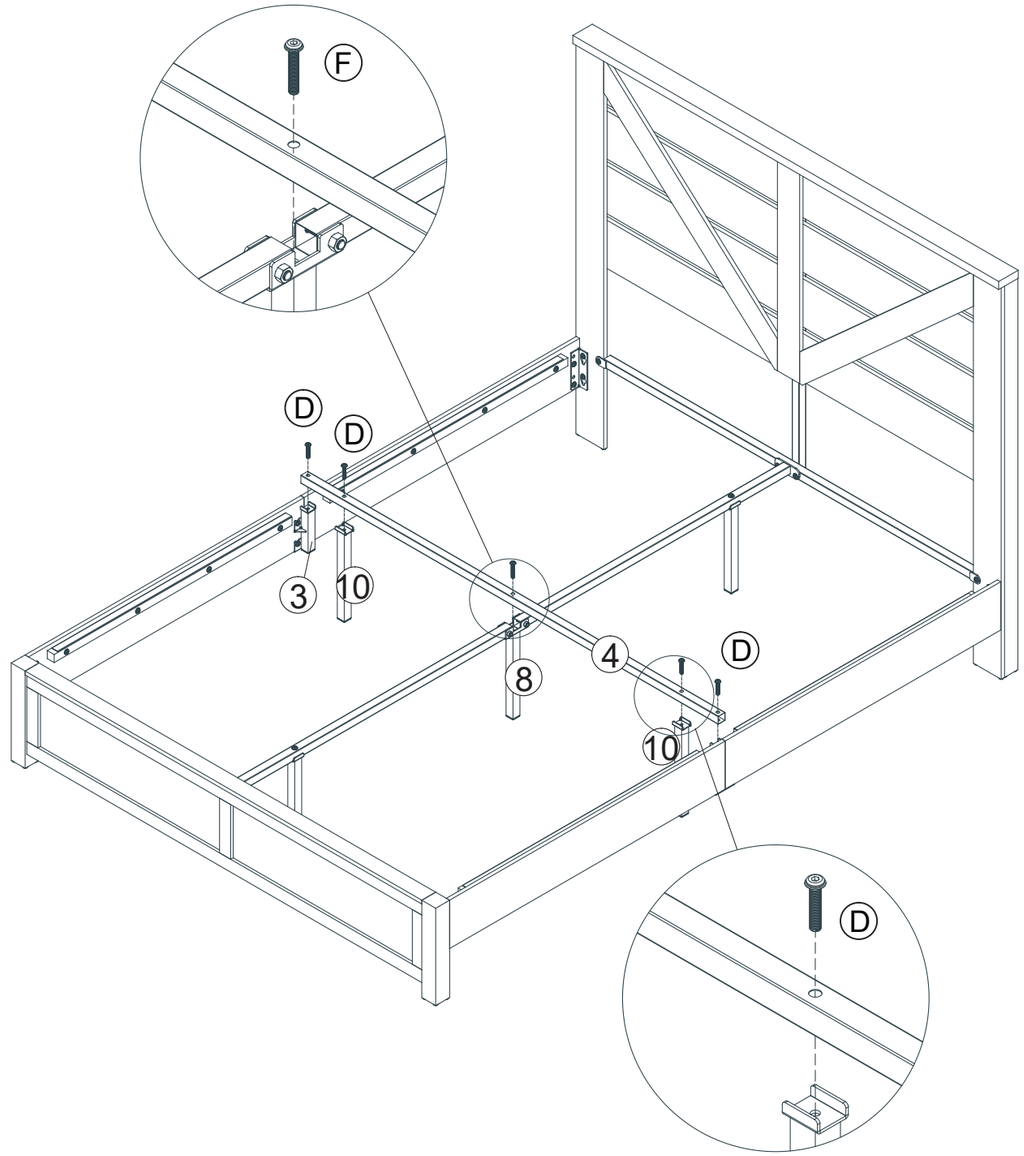
17




D		4PCS
F		1PC

18

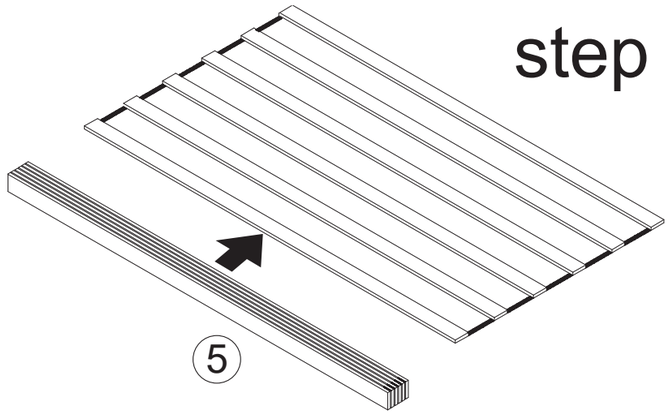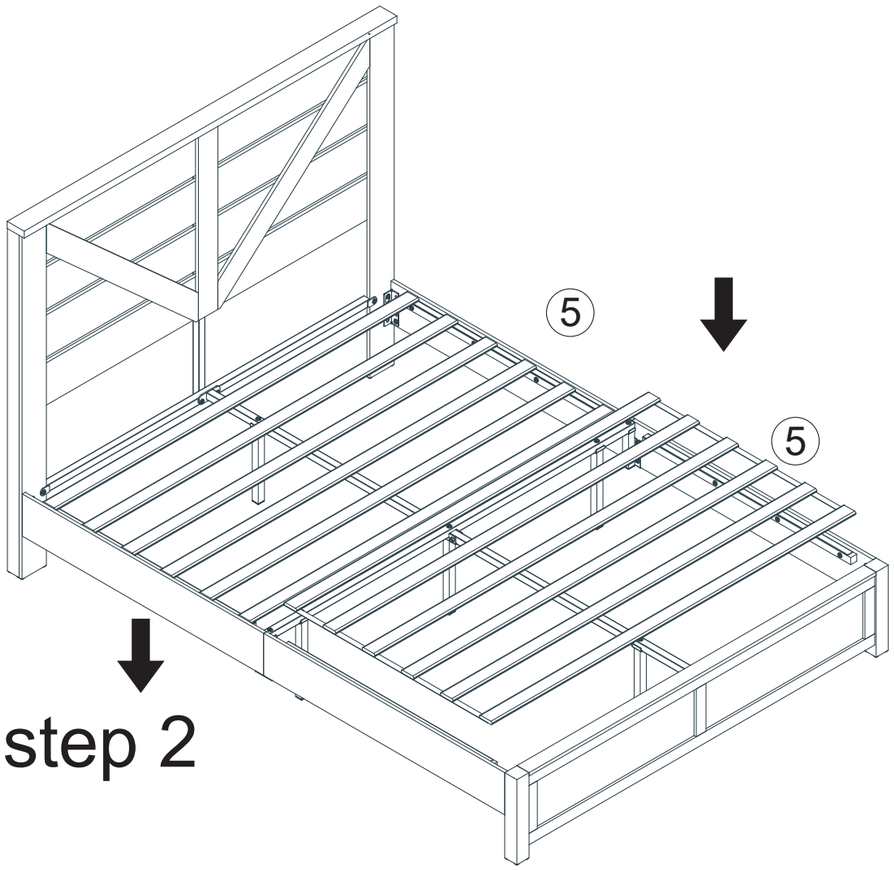step 1






step 2

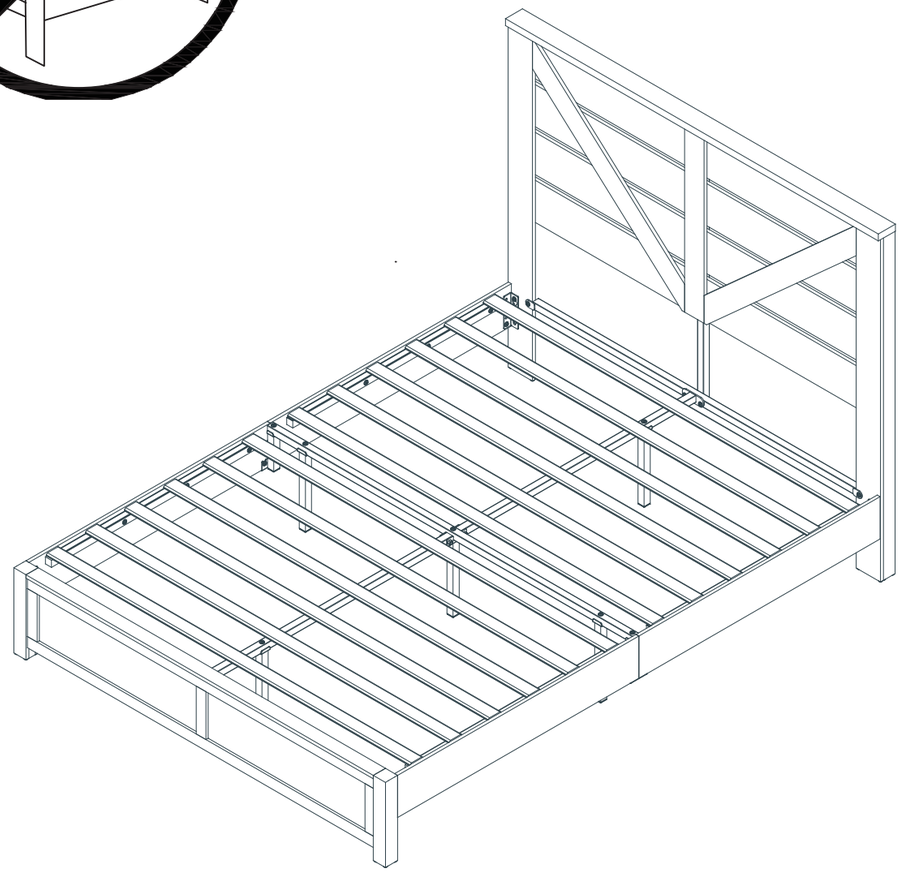19





Installation Complete