

Metal Garden Shed

OWNER'S MANUAL

Size 6 Ft X 4 Ft S



Tall walk in Shed

Quick & Easy Assembly

Ridge Reinforced walls

Wide Double Doors

Available in Various Sizes


Take care of sharp edges;

Please wear gloves;


It will take 2 people 4 - 5 hours to install.

exploded view

First, open the package and check the list on the first page to make sure all accessories are included. If you find any missing accessories, please contact us immediately and we will replace them as soon as possible.

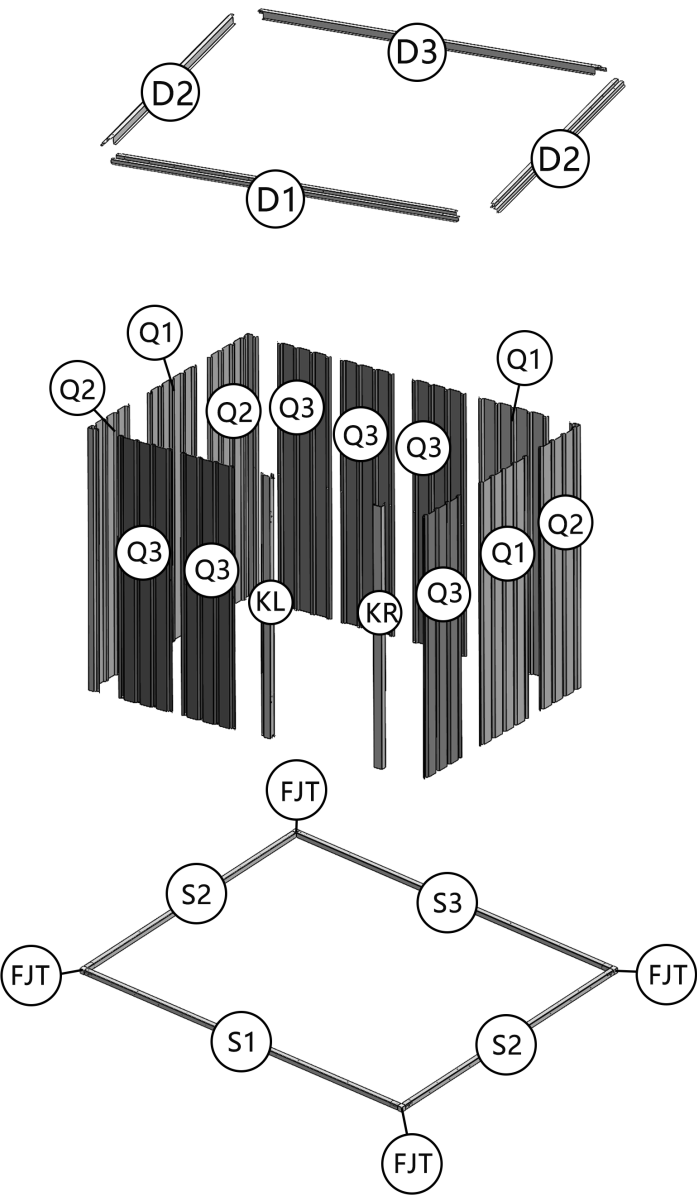

exploded view

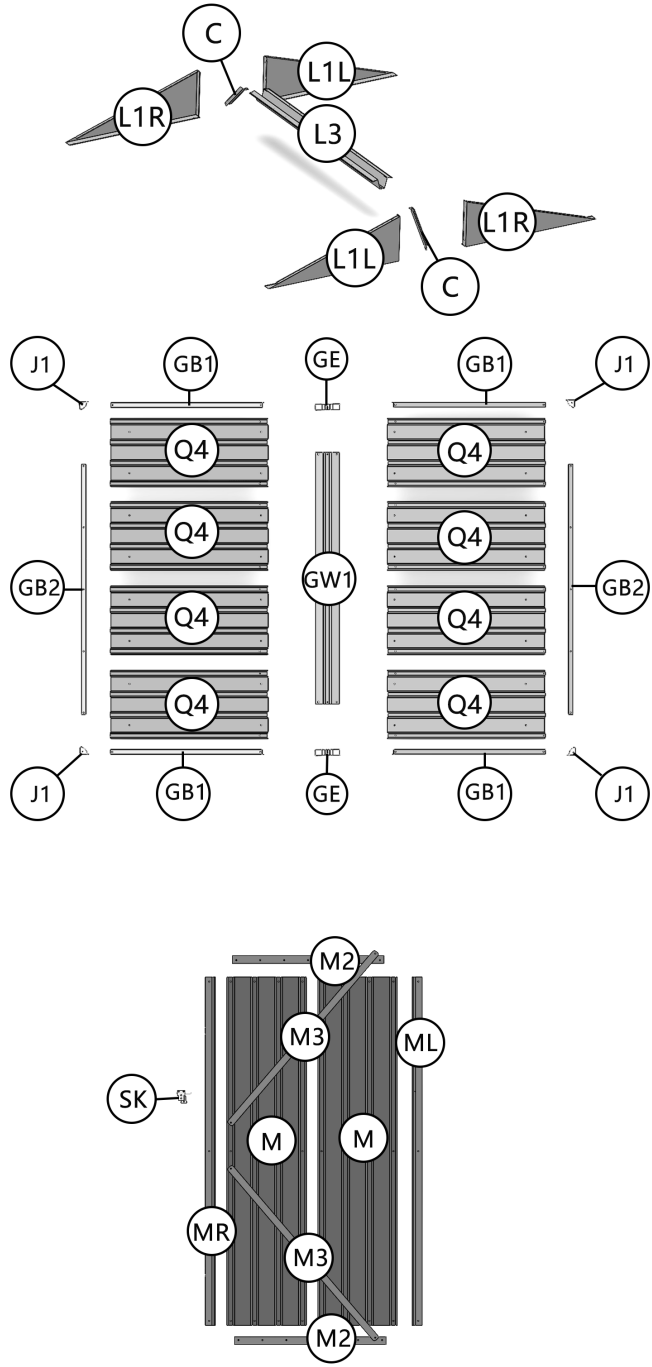

Bundled Content

1. Please carefully check all accessories and remove them from the box to ensure that everything is intact. 2. If you find any missing parts, please do not use the product until the missing parts are replaced.

NO.	PART	QTY
Q3		6
Q4		8
Q2		3
Q1		3
M		2
GB1		4
GB2		2
GW1		1
C		2
L1L		2
L1R		2
L3		1
KL		1
KR		1
ML		1
MR		1
M2		2
S1		1
S2		2
S3		1
D1		1

Bundled Content

1. Please carefully check all accessories and remove them from the box to ensure that everything is intact. 2. If you find any missing parts, please do not use the product until the missing parts are replaced.

NO.	PART	QTY
F1		172
F10		10
F11		26
F14		—
LSM		—

NO.	PART	QTY
F4		6
F8		4

— This part is used with all screws,Such as F1 and F3,located in the external tool roomEasy to seal and waterproof.

- Install LSM at screw exposure, Prevent collisions.

About Assembly

General steps:

Please read these instructions carefully before the assembly begins, and fully understand the assembly method and related details. Open the carton and carefully check the instructions and diagrams to confirm all the parts.

Preparation for installation:

The location of the cottage must be level. If the surface is uneven, the part holes may be misaligned. Make sure the carport is properly secured.

Recommended Tools:



gloves



Electric drill



Safety Helmet Hat



goggles




Phillips screwdriver

Safety Precautions :

Parts may have sharp edges. Please wear gloves when handling these items and safety glasses when punching holes. Safety shoes are recommended. Please do not build and install in a windy environment. Make sure to be firmly anchored to solid ground immediately after construction is complete.


Assembly Method:

Unit: mm

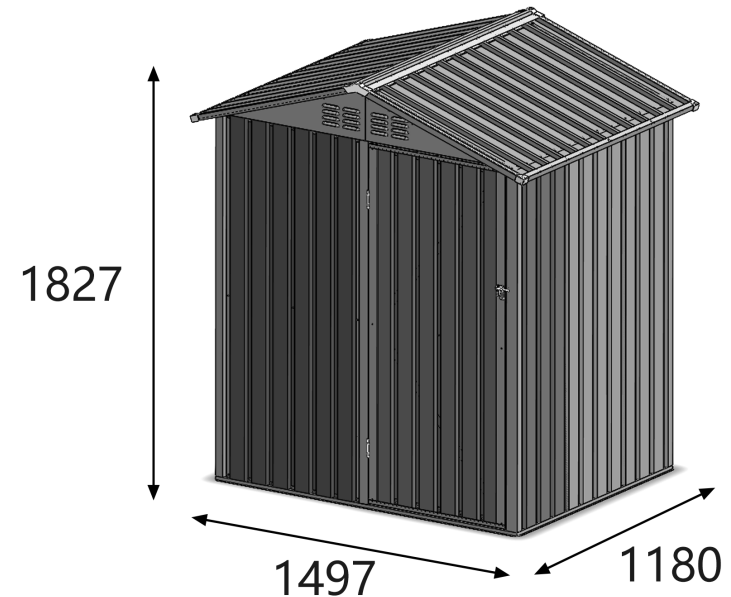

The installation space should be flat, and at least 1600x1300mm. The foundation is fixed on the ground in this space.

1.Foundation installation



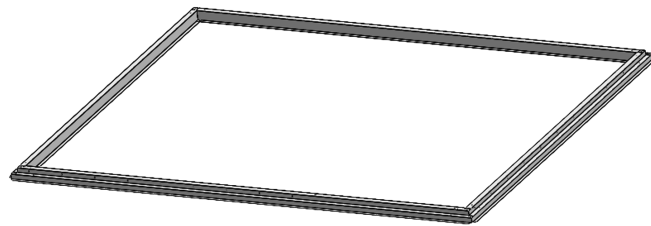


NO.	Part	QTY
D1		1
F1		8

NO.	Part	QTY
D2		2
F8		4

NO.	Part	QTY
D3		1

step1

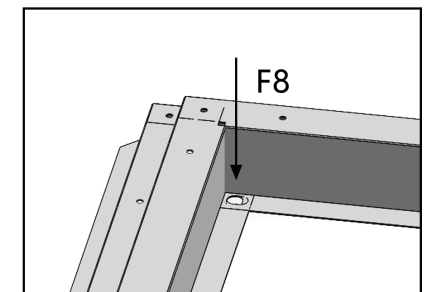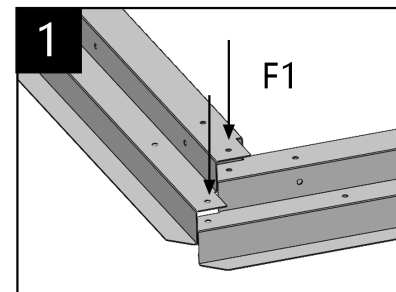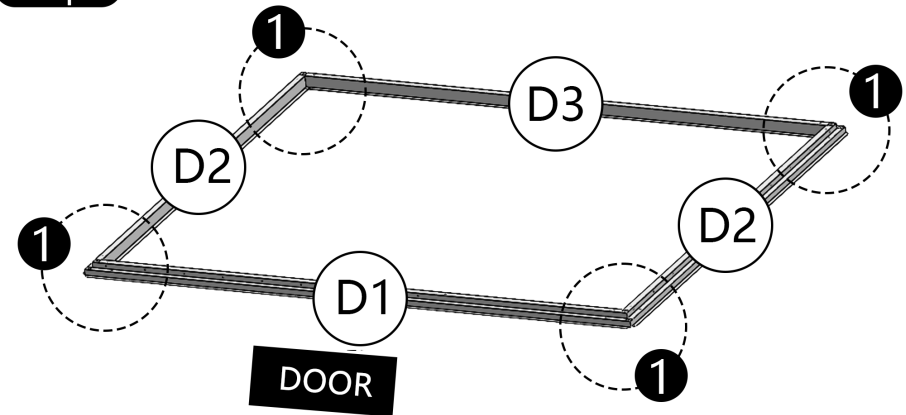


Notice:

A: After connecting D1, D2, and D3, align the holes and secure them together using F1.

B: After installation, adjust the foundation dimensions and diagonals, then insert F8 into the position shown in the diagram.

2.Wall Panel Installation

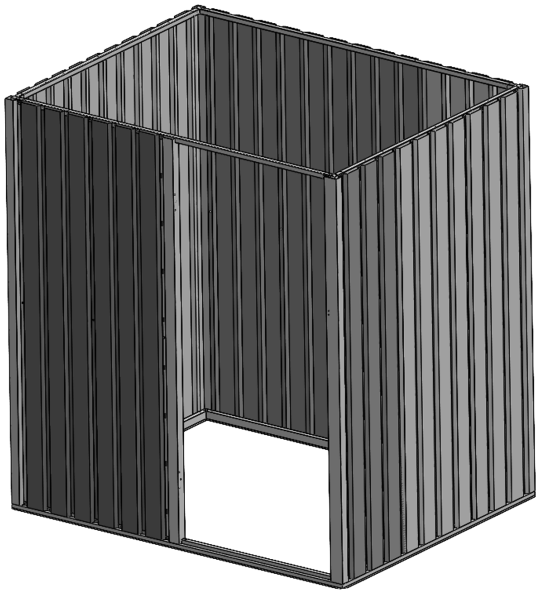




Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
Q2		3

NO.	Part	QTY
Q3		1

NO.	Part	QTY
F1		12

step2

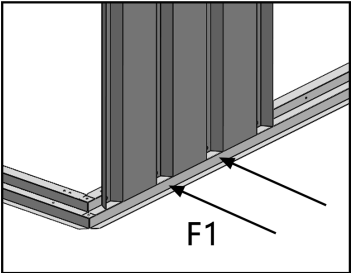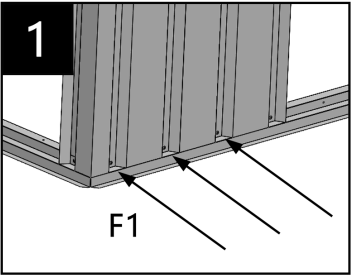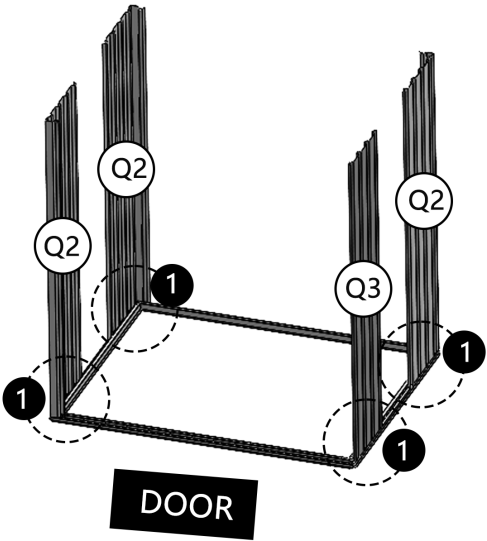

Notice:
Position Q2 and Q3 as shown in the diagram and secure them to the bottom frame using F1 (leave the screw holes on both sides open for subsequent installation of other wall panels).

Assembly Method:


In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing


NO.	Part	QTY
S1		1
FJT		4

NO.	Part	QTY
S2		2

NO.	Part	QTY
S3		1

step3

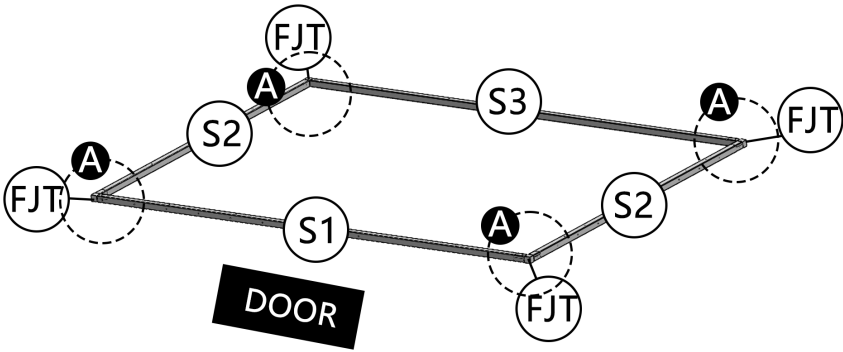

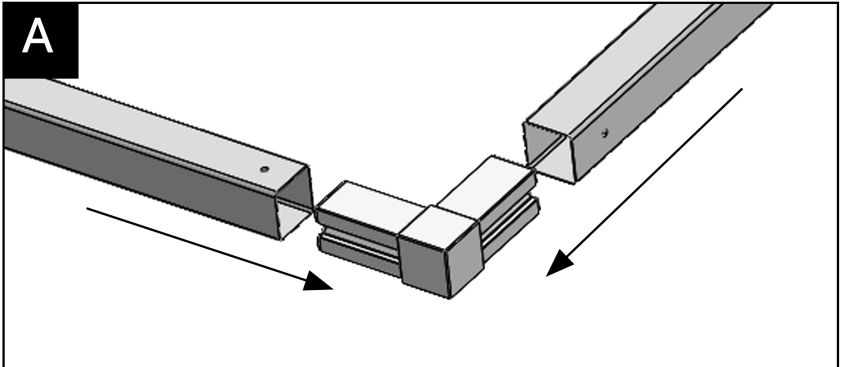


Notice:
Connect FJT to the part shown in the diagram.


Assembly Method:


In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
F1		11

step4

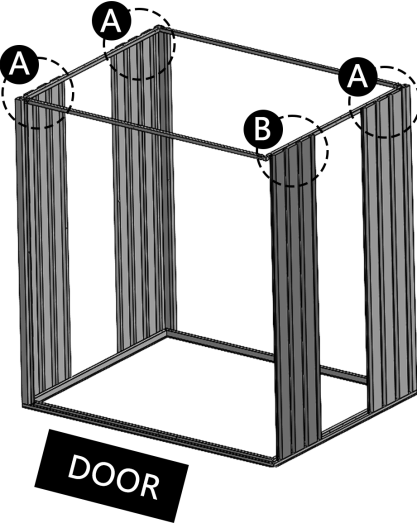

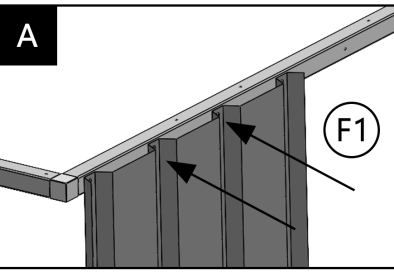

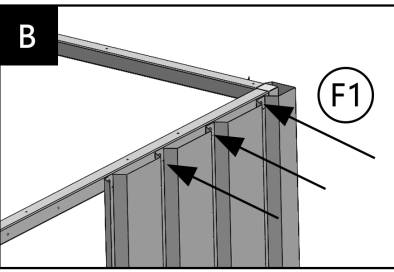

Notice:
A: Place the assembled frame inside the wall panel.
Use F1 to secure Q2 and Q3 to the frame. (During installation, leave the holes on both sides open for mounting the remaining wall panels.)

Assembly Method:




In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
Q1		3
F11		11

NO.	Part	QTY
Q3		5

NO.	Part	QTY
F1		57

step5

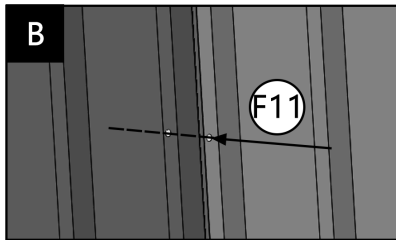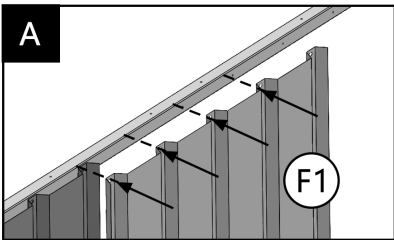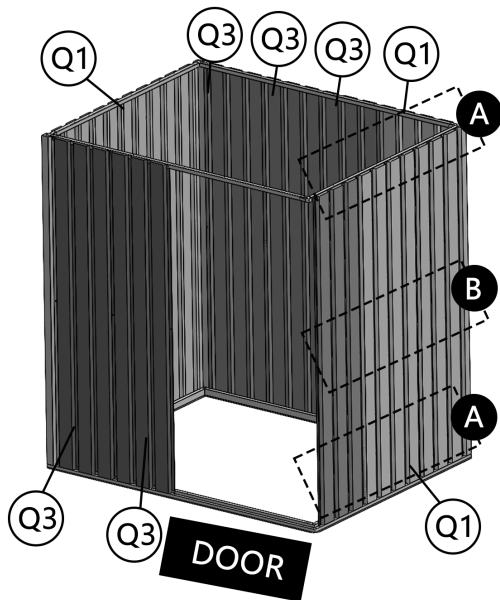

Notice:

A: Secure the wall panel to the position shown in the diagram, fastening both the top and bottom ends to the frame using F1. (Leave space for the next wall panel installation.)

B: Use F11 to secure the connecting holes in the middle of the wall panels together from the outside.

Assembly Method:





In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
KL		1
F11		2

NO.	Part	QTY
KR		1

NO.	Part	QTY
F1		12

step6

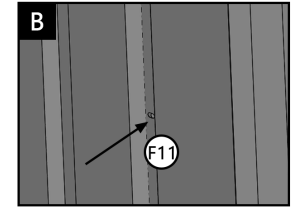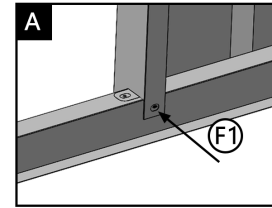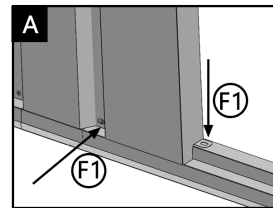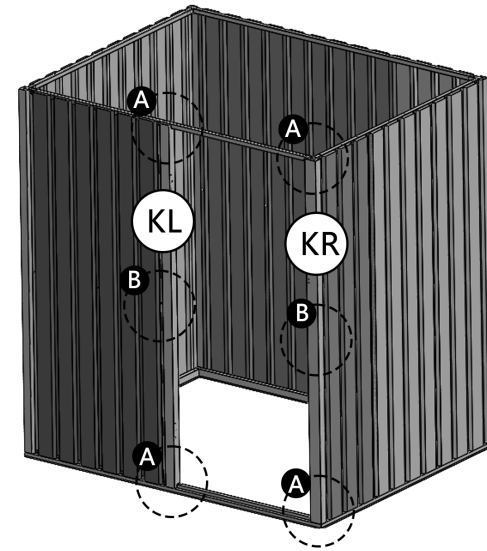


Notice:

A: Position KL and KR as shown in the diagram. Align the holes and secure the bases of KL and KR to the bottom frame using F1.

B: Secure the central connection points between KL, KR and the wall panel externally using F11.

3. Roof installation

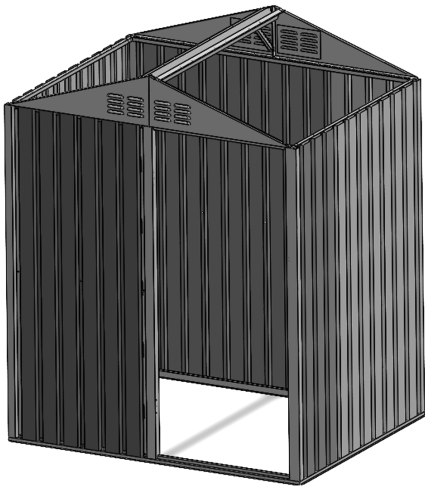

Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
L1L		2
F11		2

NO.	Part	QTY
L1R		2

NO.	Part	QTY
C		2

step7

X2

A

B


Notice:


A: Combine L1L and L1R. First secure them together using F11 at the topmost hole.

B: Position C at the second hole location and secure it using F11.

NO.	Part	QTY
F1		16

step8

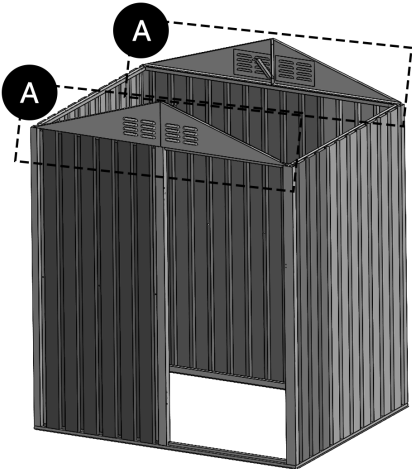

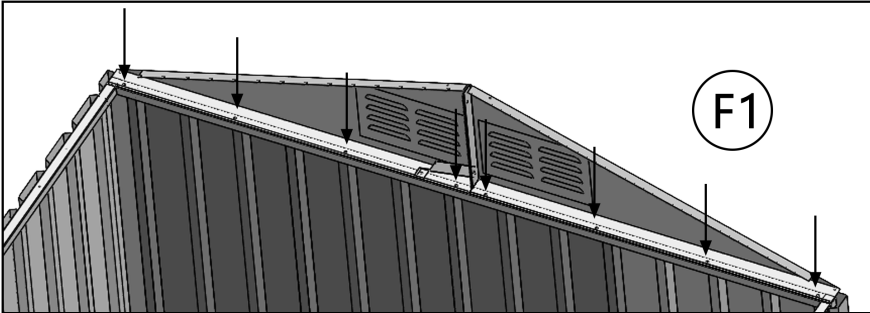


Notice:


Place the assembled L1L and L1R onto the upper frame, align the holes, and secure them with F1.


NO.	Part	QTY
L3		1

NO.	Part	QTY
F1		2

step9

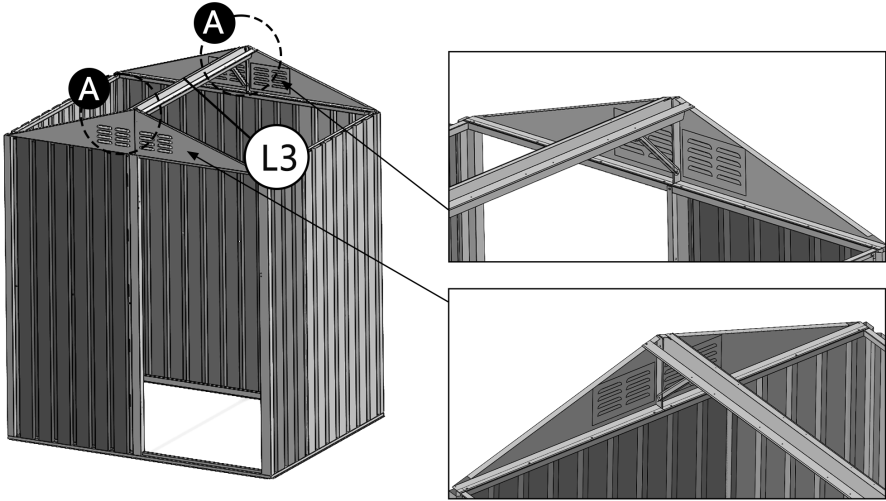

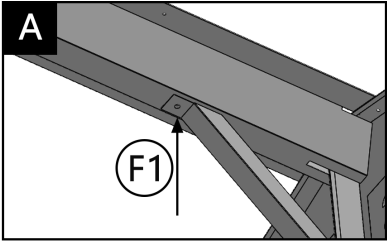

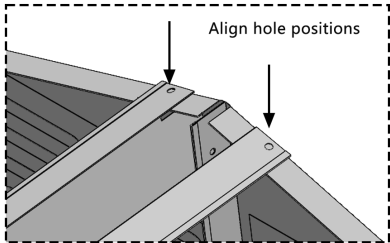

Notice:

A: Position L3 as shown in the diagram. First align the holes with L1L and L1R. Then bend the crease on C until it runs parallel to L3. Secure C to L3 using F1.

4.Installation of ridge tiles and ridge tile flashing




Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
Q4		8

NO.	Part	QTY
F1		32

step10

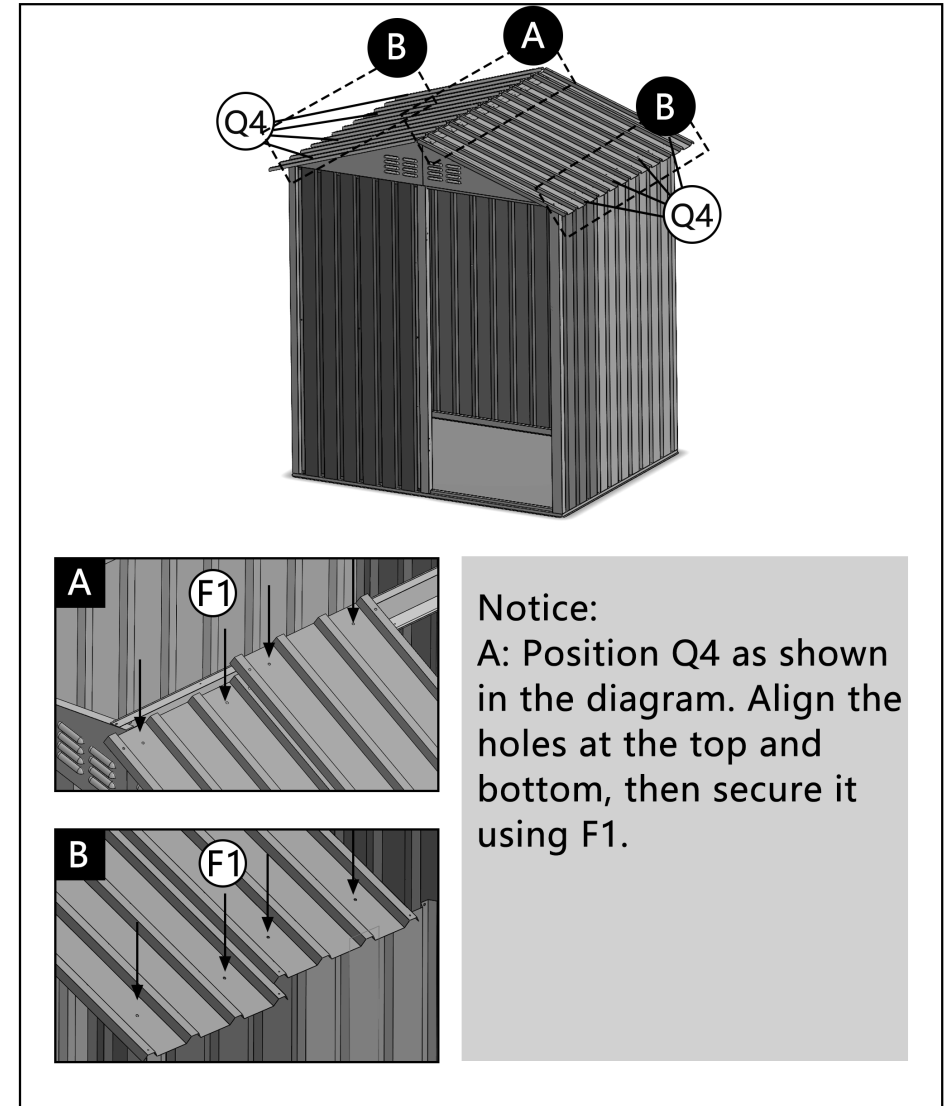


Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing


NO.	Part	QTY
GB2		2


NO.	Part	QTY
GW1		1

NO.	Part	QTY
F1		6

step11

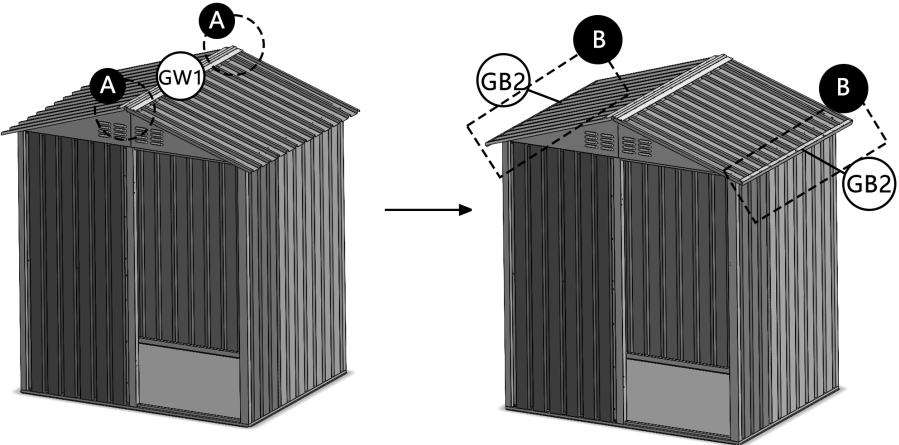

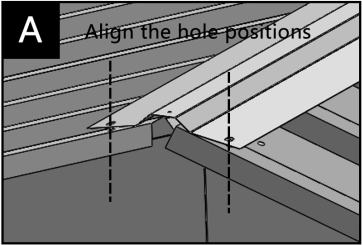

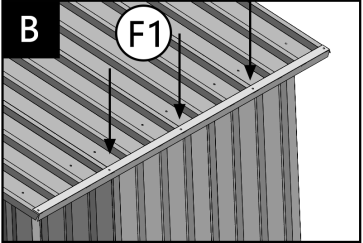

Notice:

A: Position GW1 as shown in the diagram, aligning its holes with those of Q4.

B: Place GB2 on either side, align its holes with those of Q4, then secure GB2's central hole to Q4 using F1.


Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing


NO.	Part	QTY
GB1		4


NO.	Part	QTY
J1		4

NO.	Part	QTY
F1		8

step12

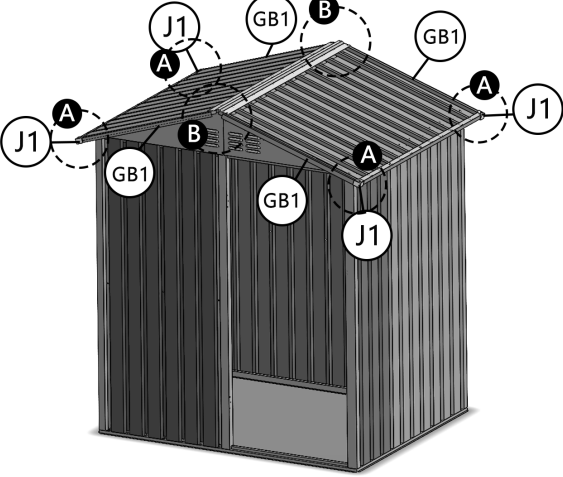

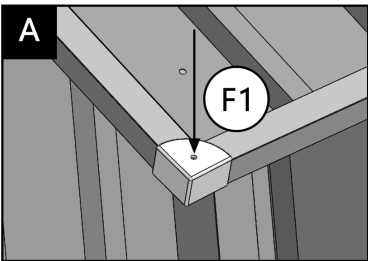

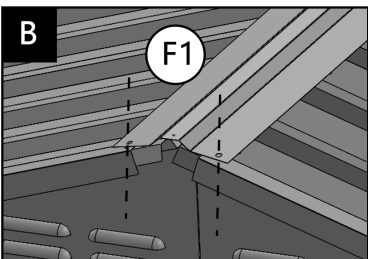

Notice:



A: Position GB1 as shown in the diagram. Place J1 in the corner. After aligning the holes, secure J1, GB1, GB2, and Q4 together using F1.

B: Align the holes of GB1, GW1, and Q4, then secure them together using F1.

NO.	Part	QTY
GE		2

NO.	Part	QTY
F1		2

step13

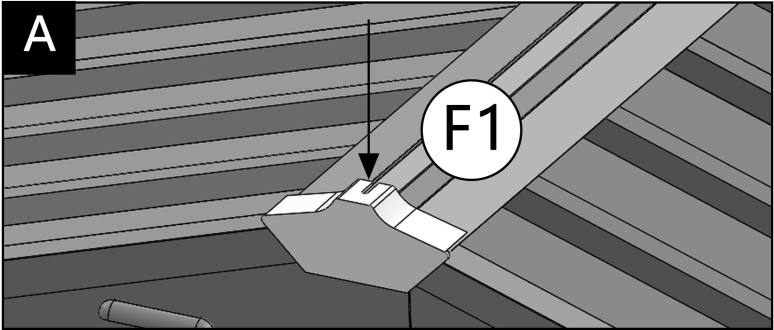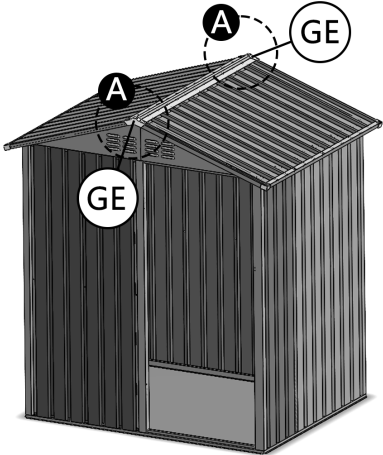

Notice:
A: Before and after placing the GE on the roof,
secure the GE to GW1 using F1.

5.Installation of the main gate




Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
MR		1
F10		4

NO.	Part	QTY
HY		2
F4		1

NO.	Part	QTY
M		1

step14

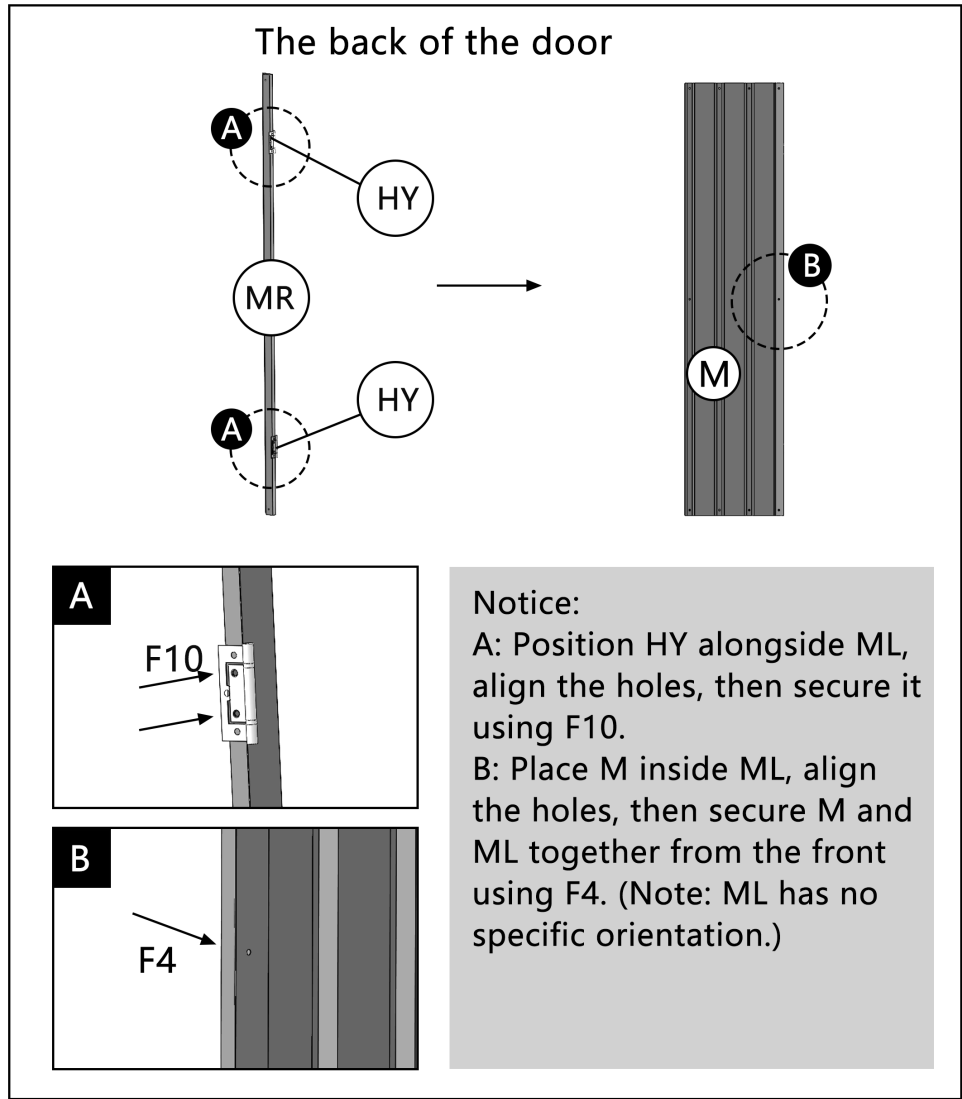


Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
ML		1
M		1

NO.	Part	QTY
M2		2
F4		5

NO.	Part	QTY
M3		2
F11		11


step15

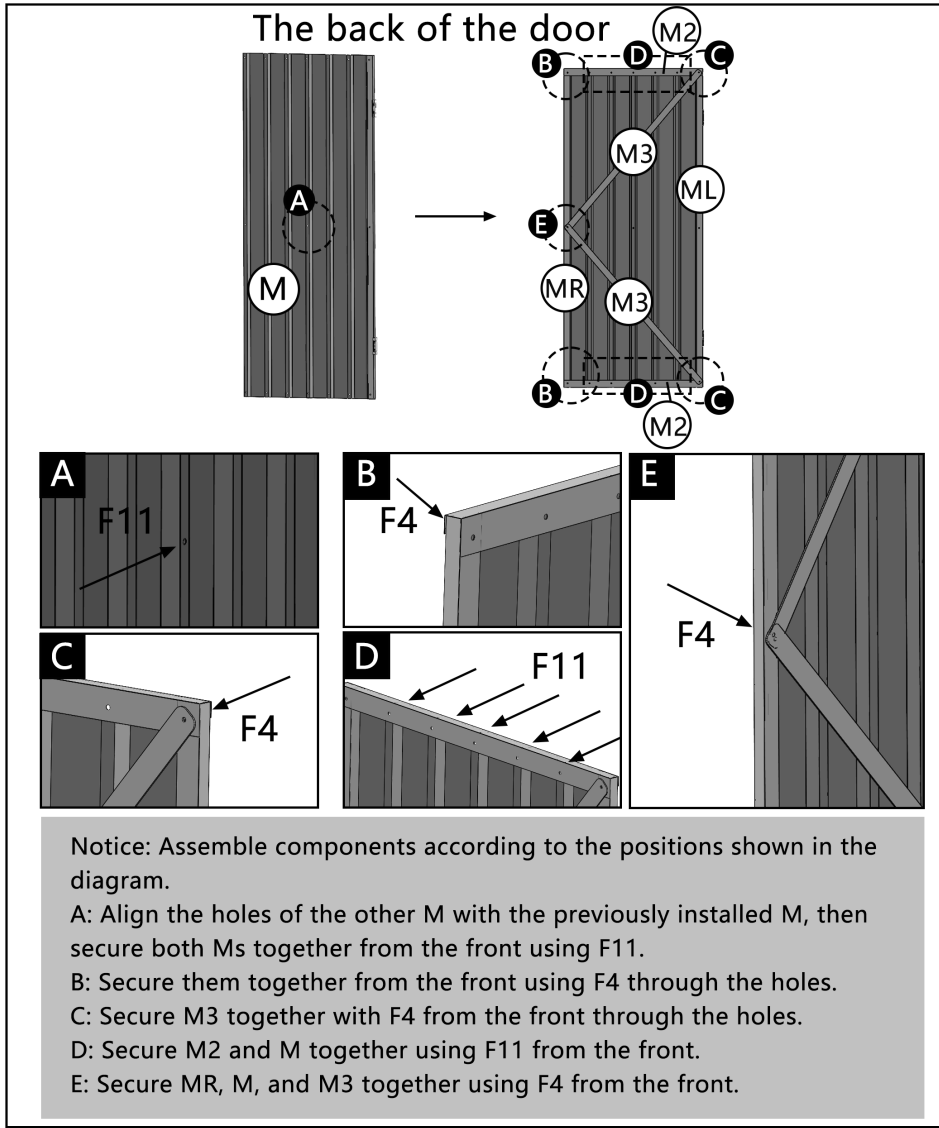

Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
F10		6

step16

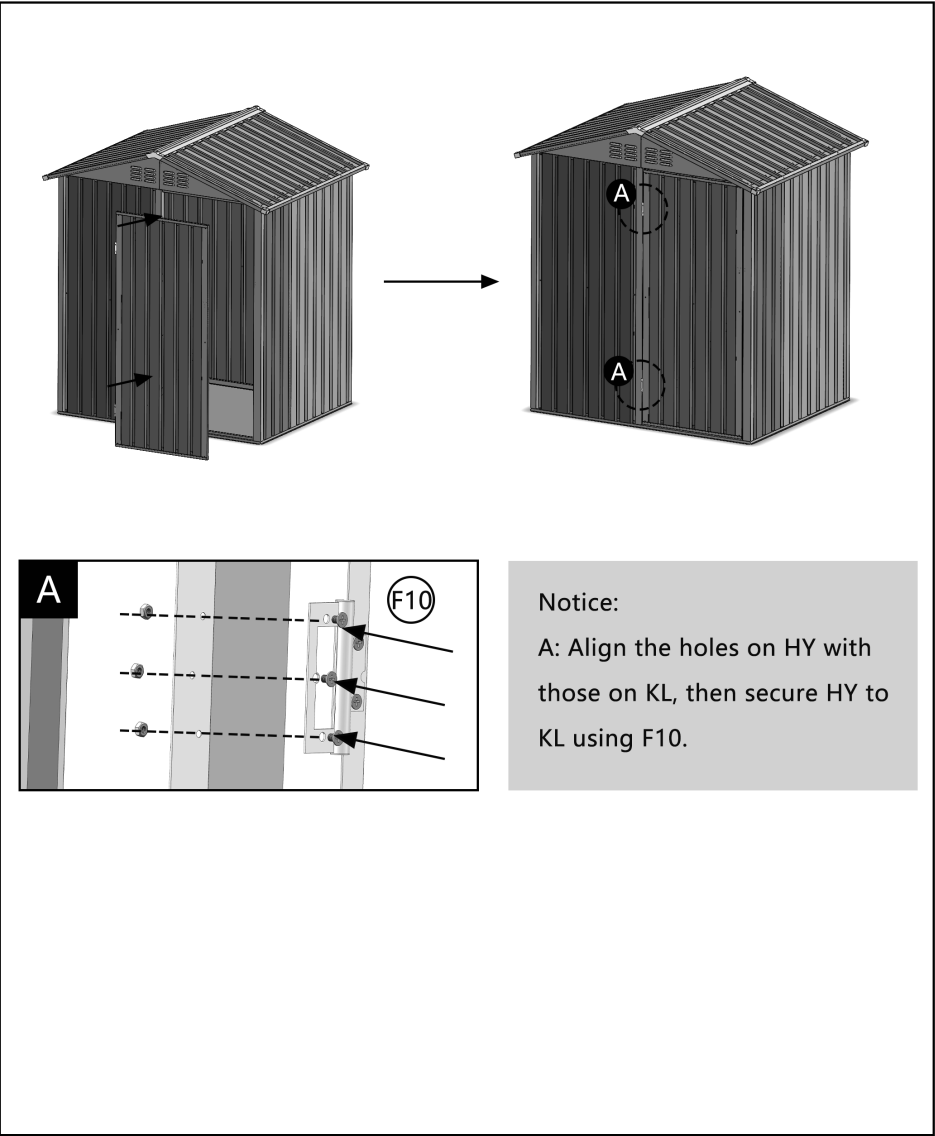

Assembly Method: In order to distinguish the orientation of the part, pay attention to the position of the hole in the example drawing

NO.	Part	QTY
SK		1

NO.	Part	QTY
F1		6

step17

