




DESIGNED FOR LIFE

Assembly Instructions

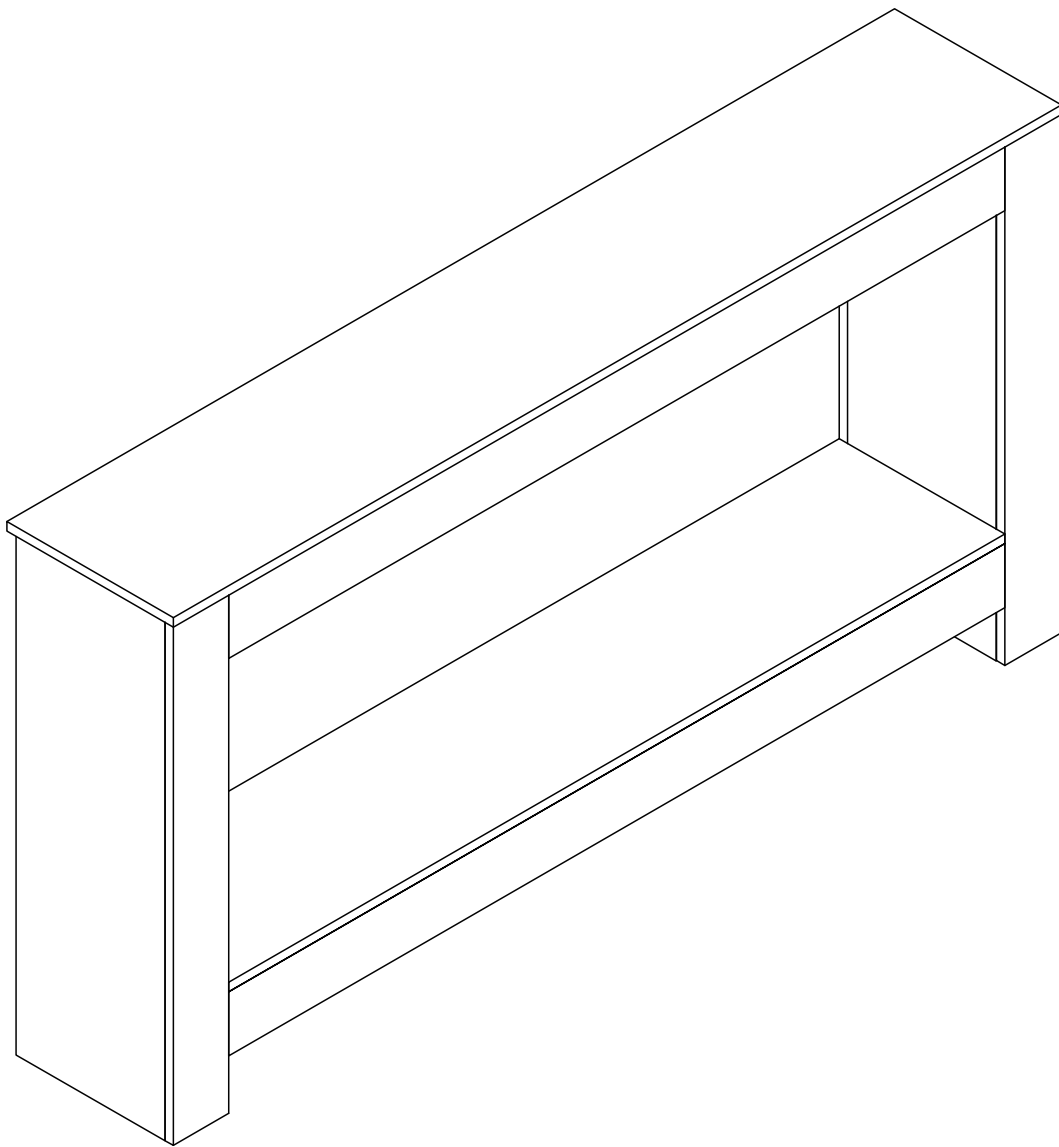

Console Table

Model No.
HOGA-F2190



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1

Scan the QR code.






Installation Video

Step2

Search with the Model No.
(on the bottom left corner of the title page)




Note: If you can't find the assembly video, please contact us.

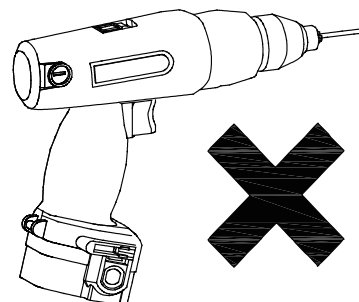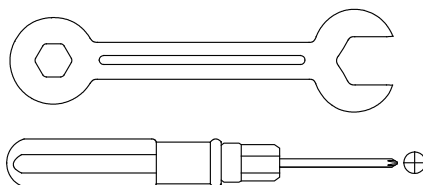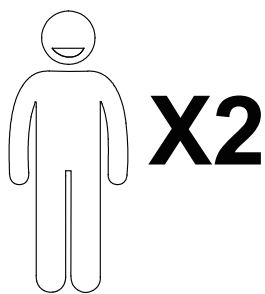



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

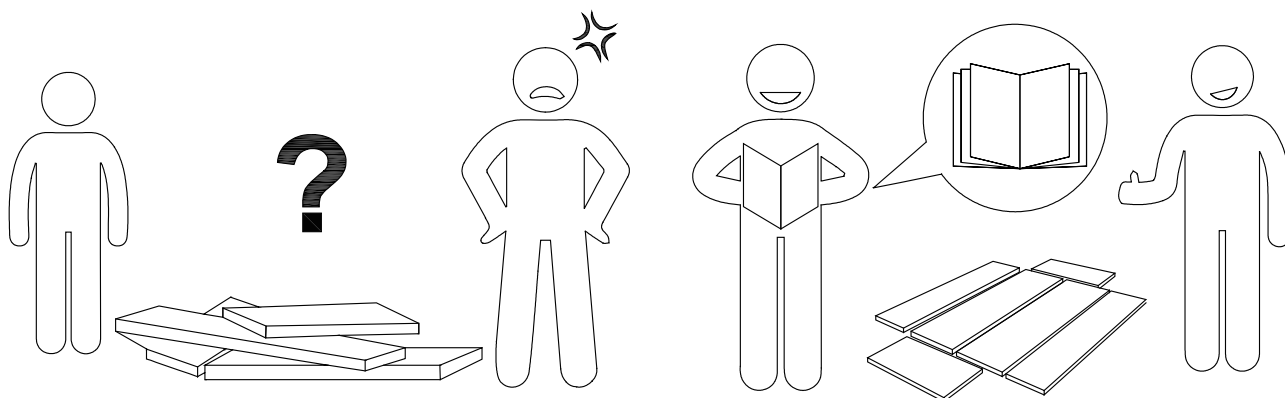

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.









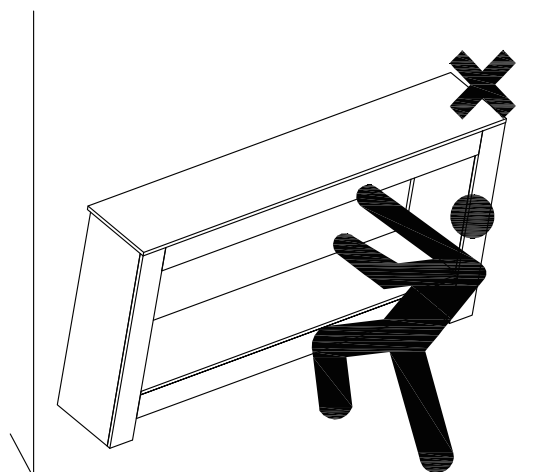
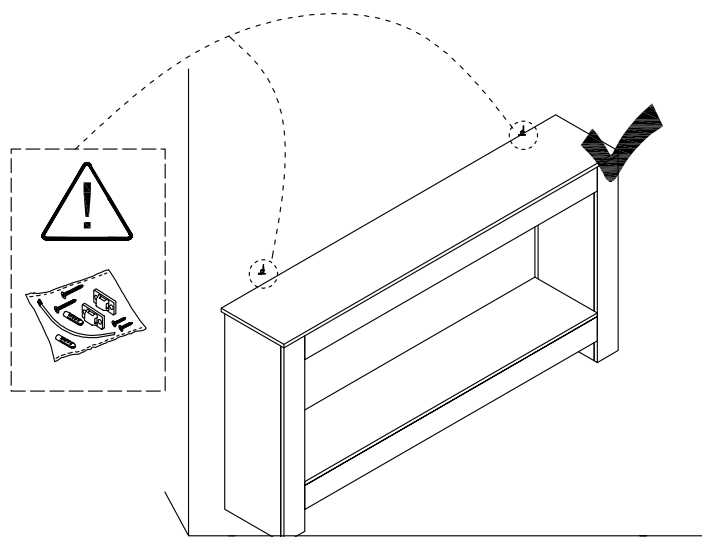


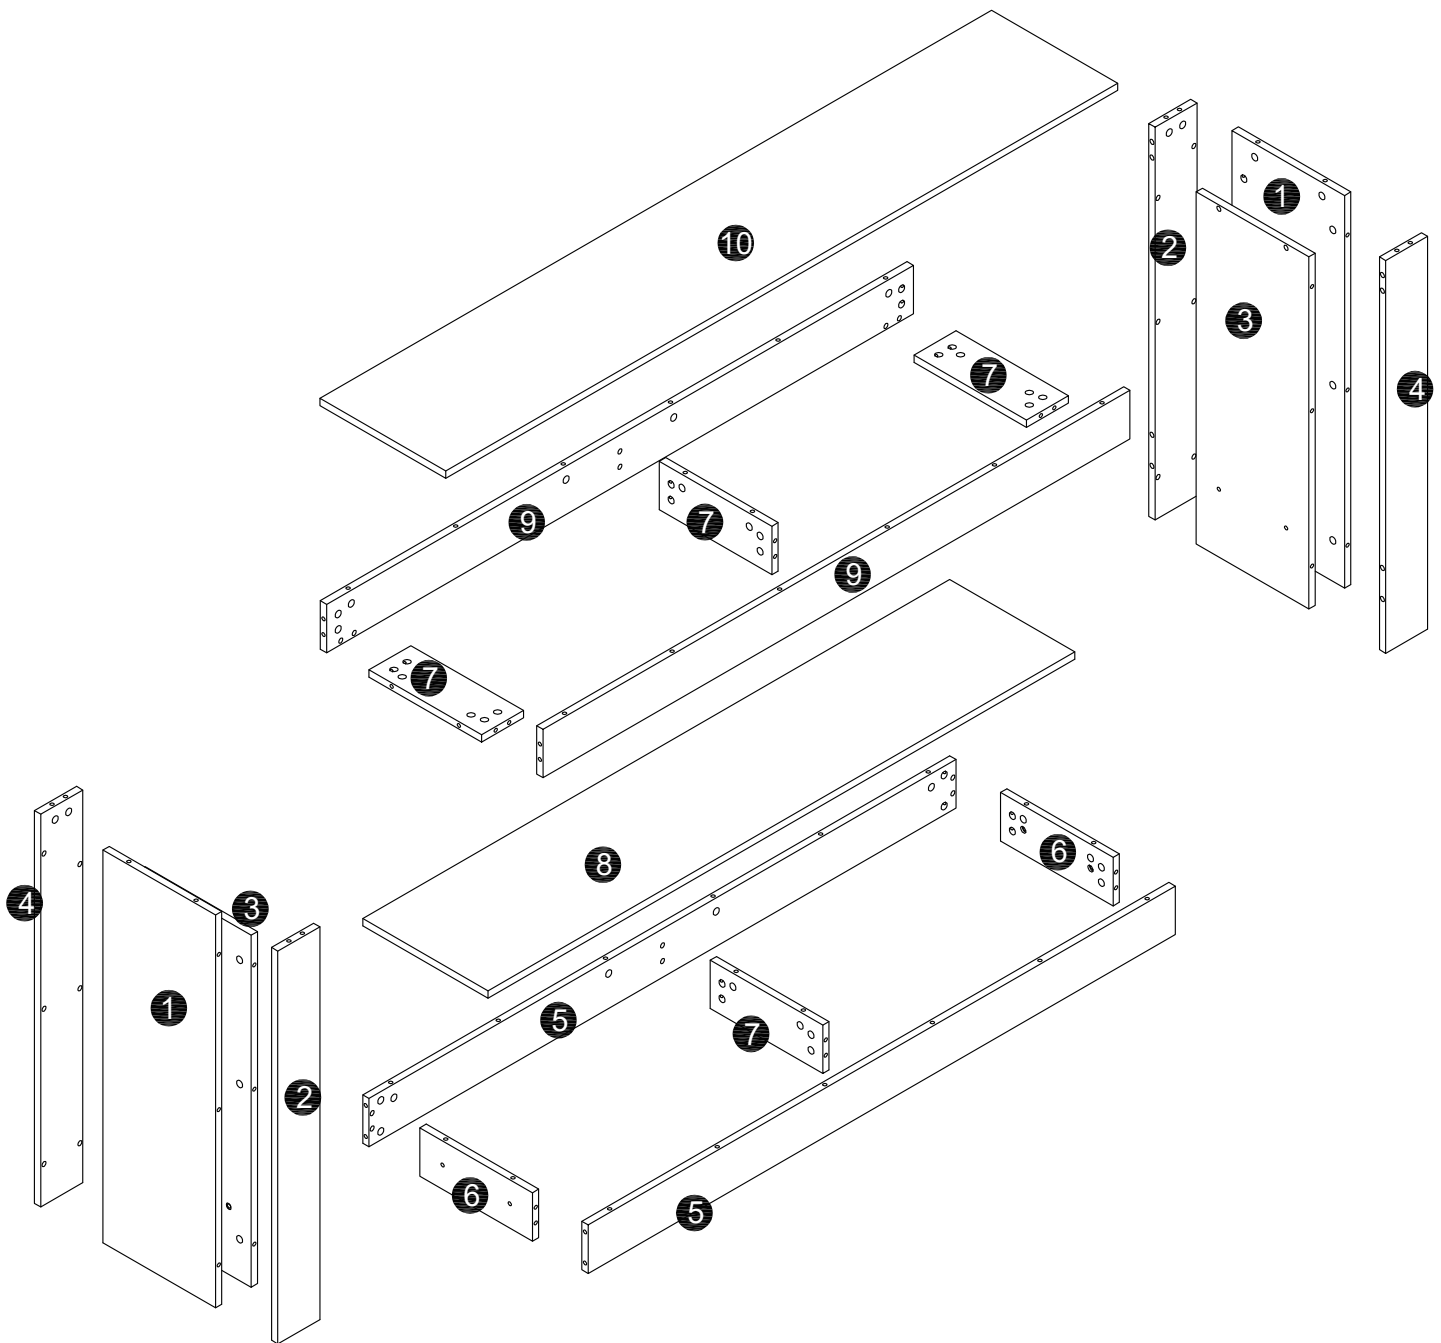






⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

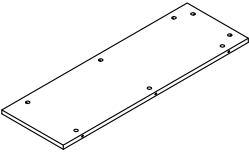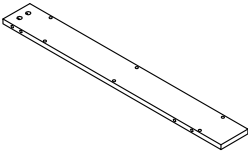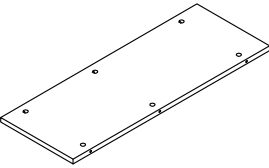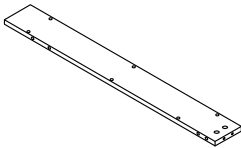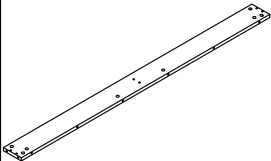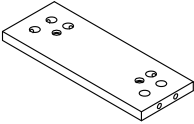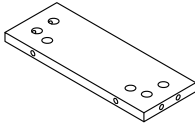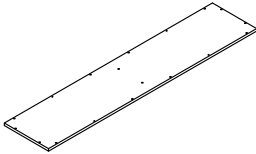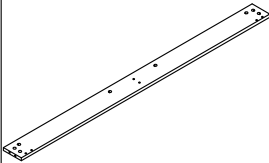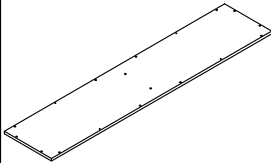
1  2 pcs	2  2pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  4 pcs	8  1 pc	9  2 pcs	10  1 pc

Hardware List

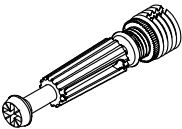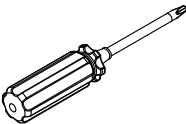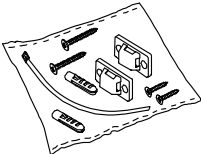
A	B	C	D	E	F
 M6x35mm 104 pcs	 Ø15x12mm 104 pcs	 Ø8x30mm 8 pcs	 M6x20mm 4 pcs	 1 pc	 Screwdriver 1 pc
G	H				
 12 pcs	 2 pcs				

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

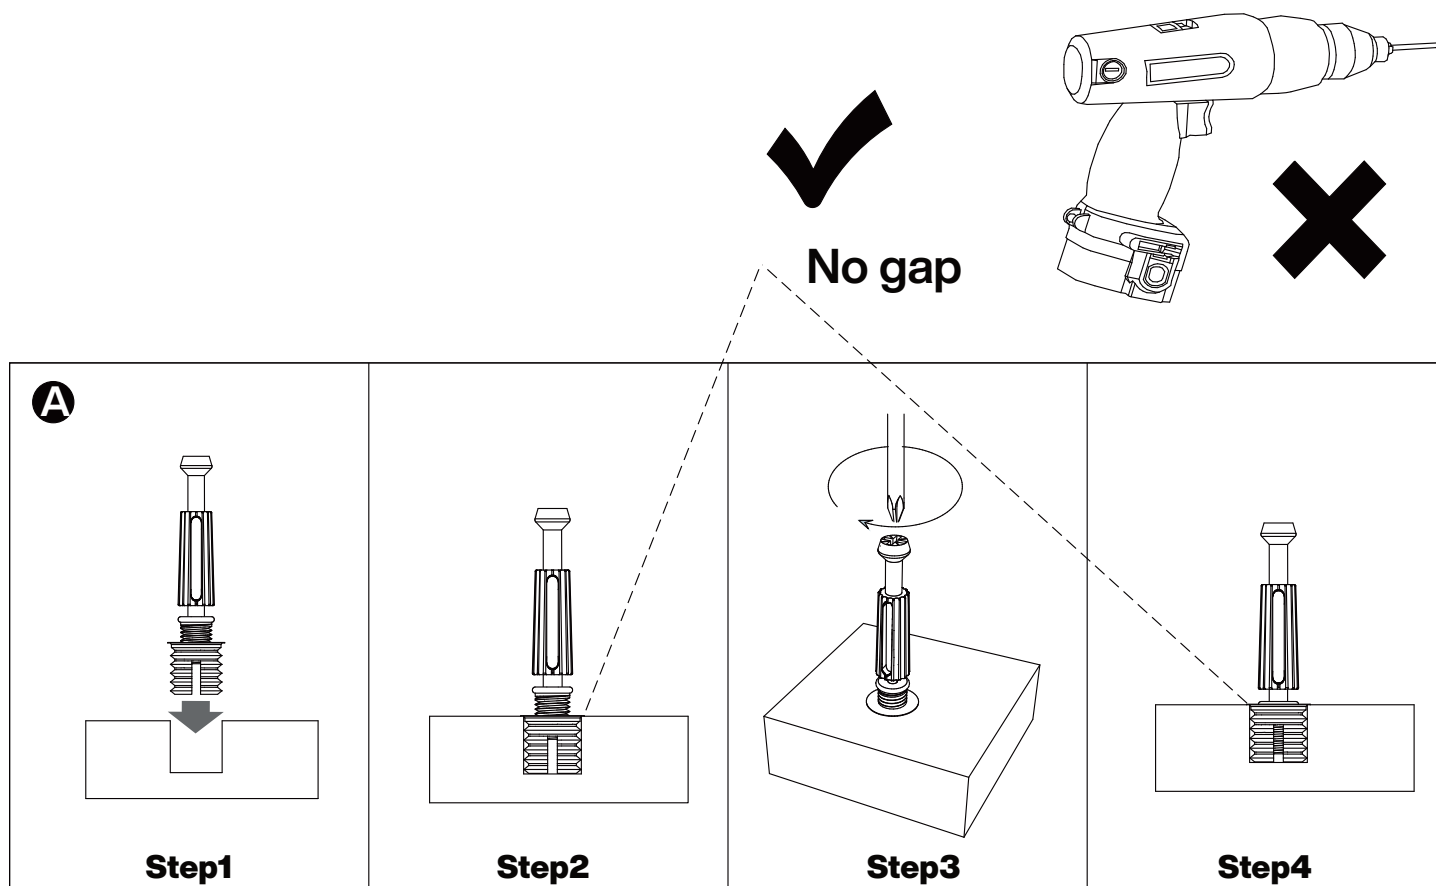


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

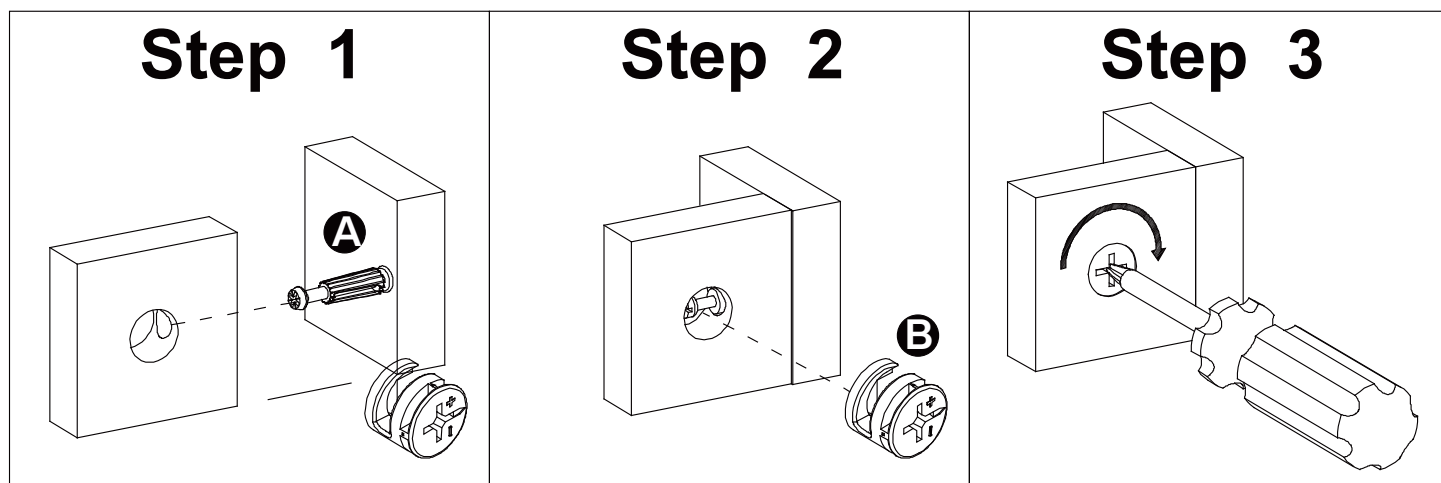

1

A

M6x35mm
20 pcs

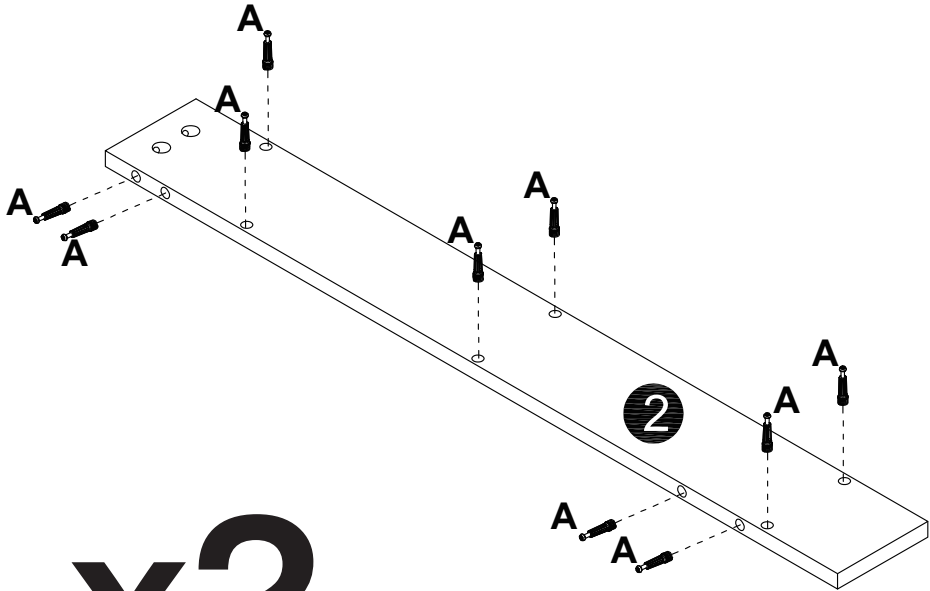


x2

2



A

M6x35mm
20 pcs

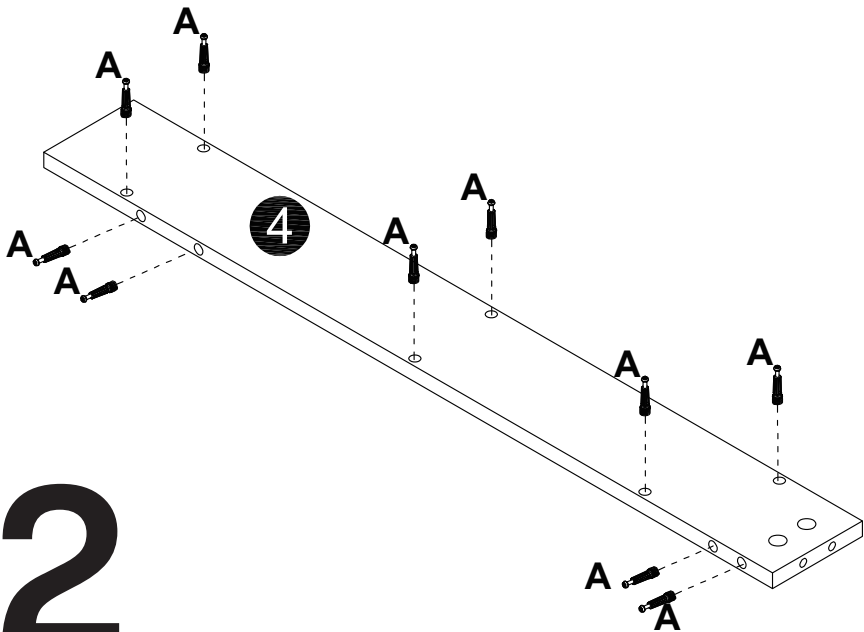

x2


3

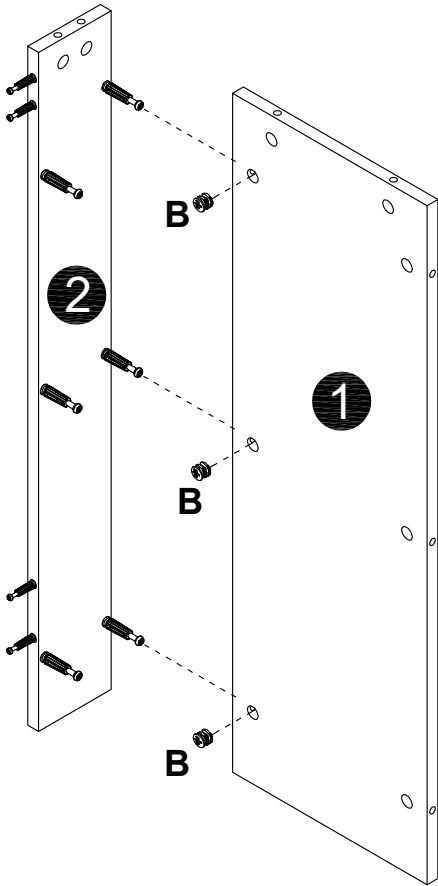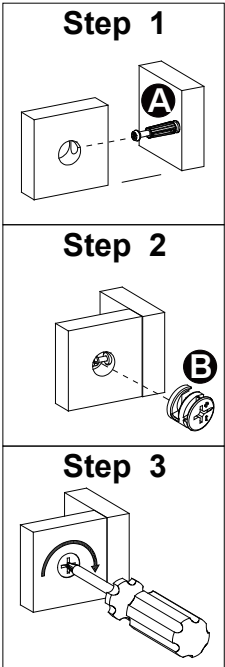

B

Ø15x12mm
6pcs

4


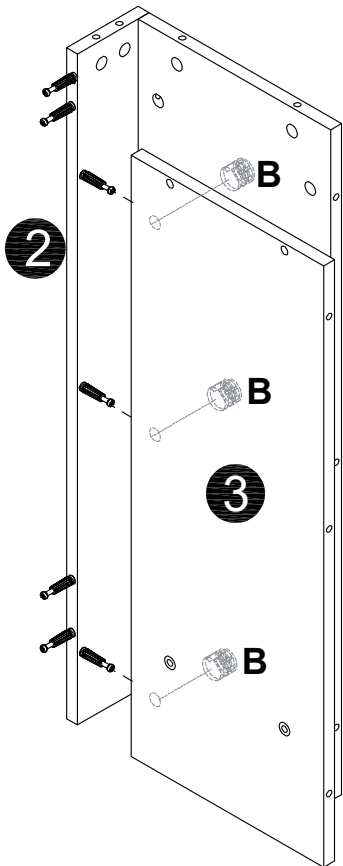


B

Ø15x12mm
6 pcs

x2


5

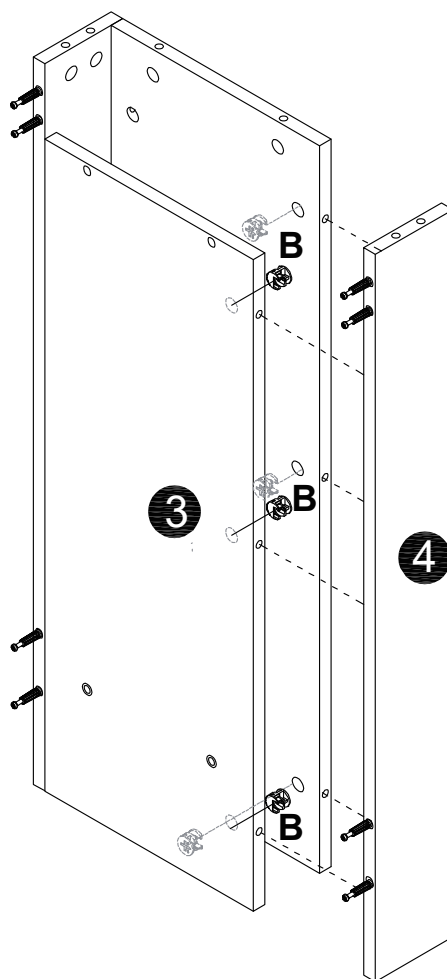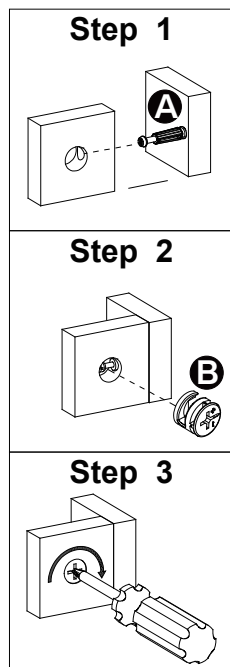

B
Ø15x12mm
12 pcs

x2


6

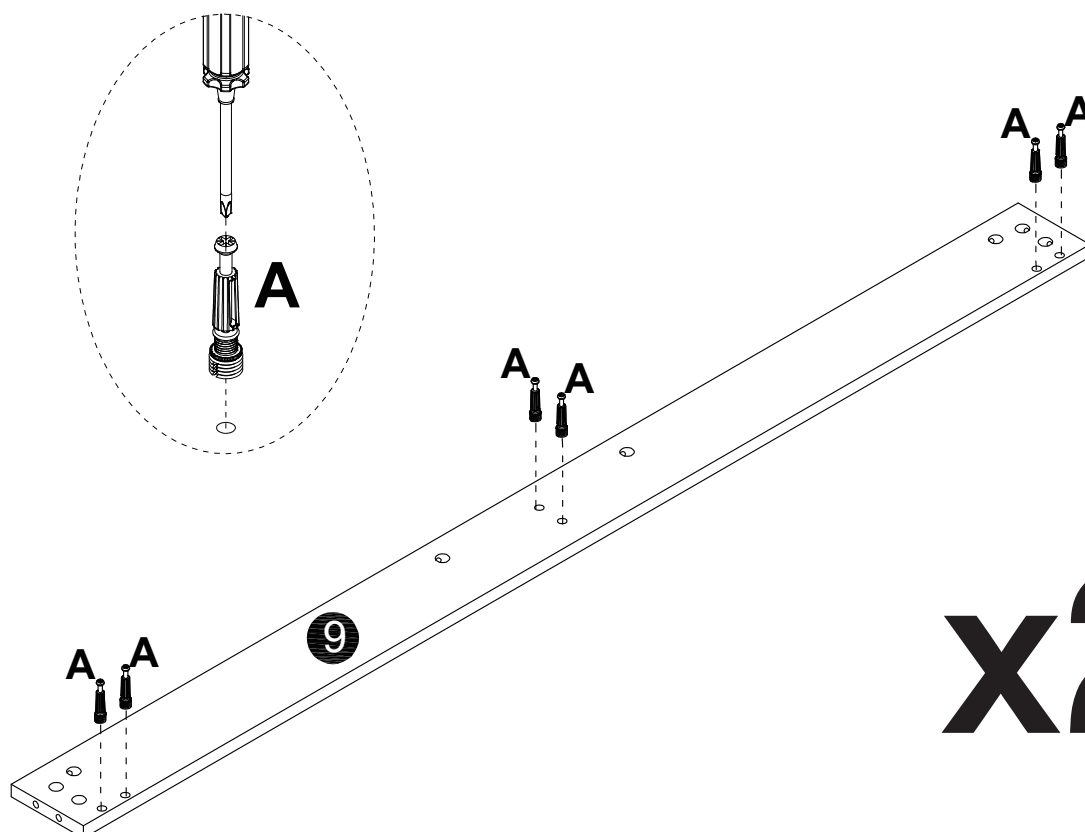

A
M6x35mm
12 pcs


x2

7

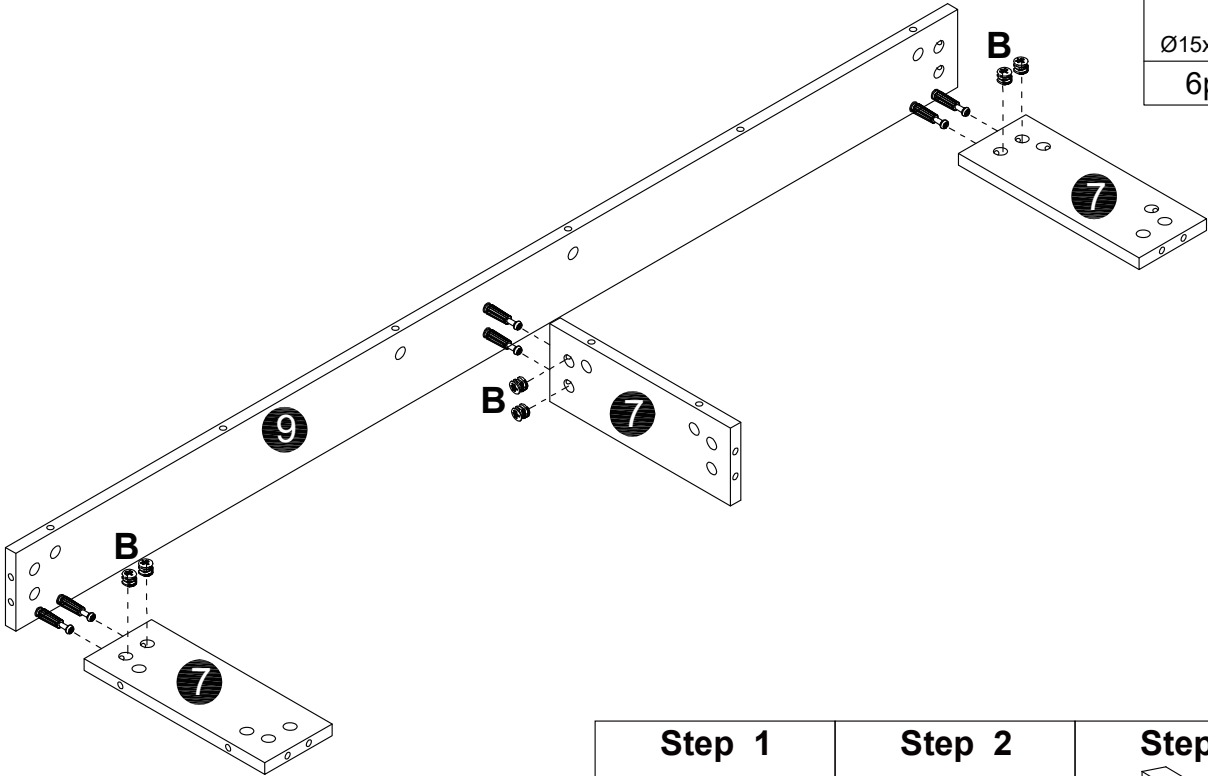


B

Ø15x12mm
6pcs

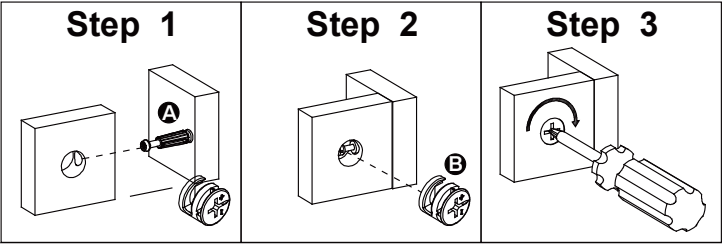


8

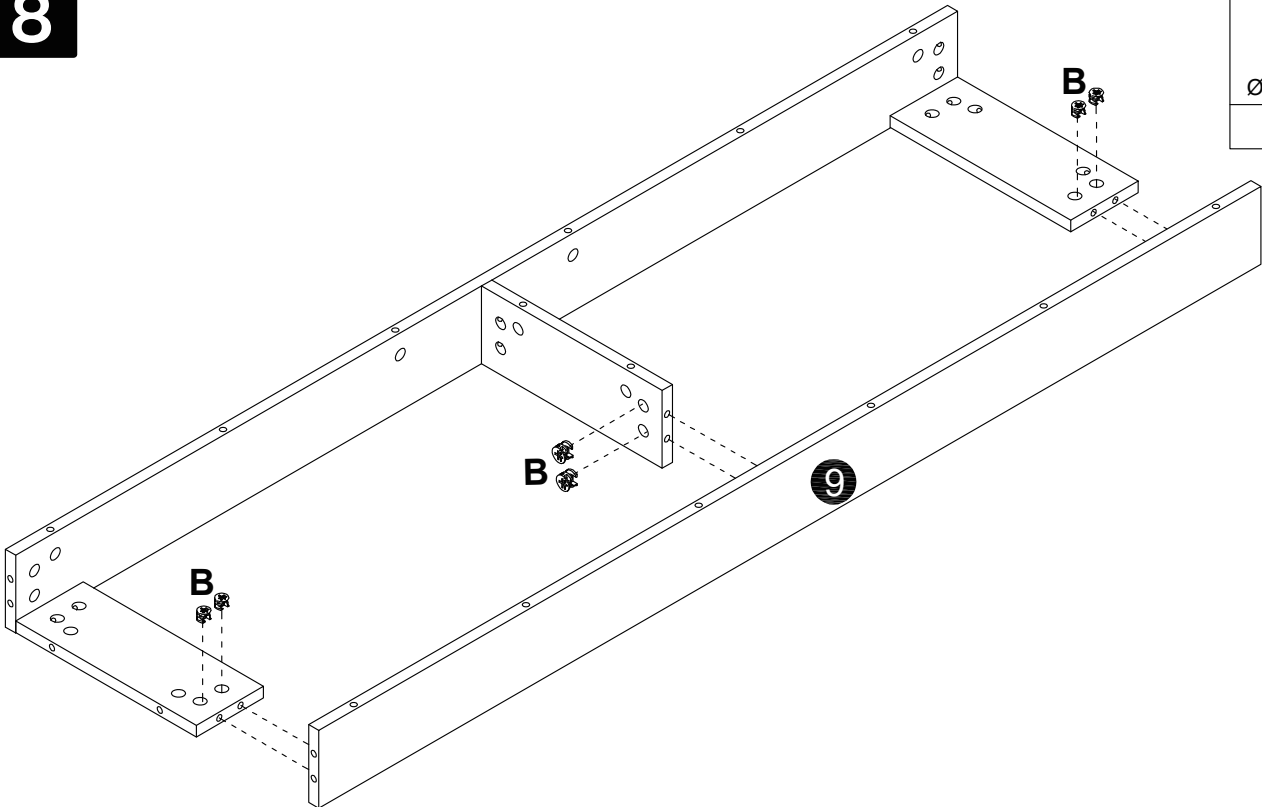

B

Ø15x12mm
6pcs

9

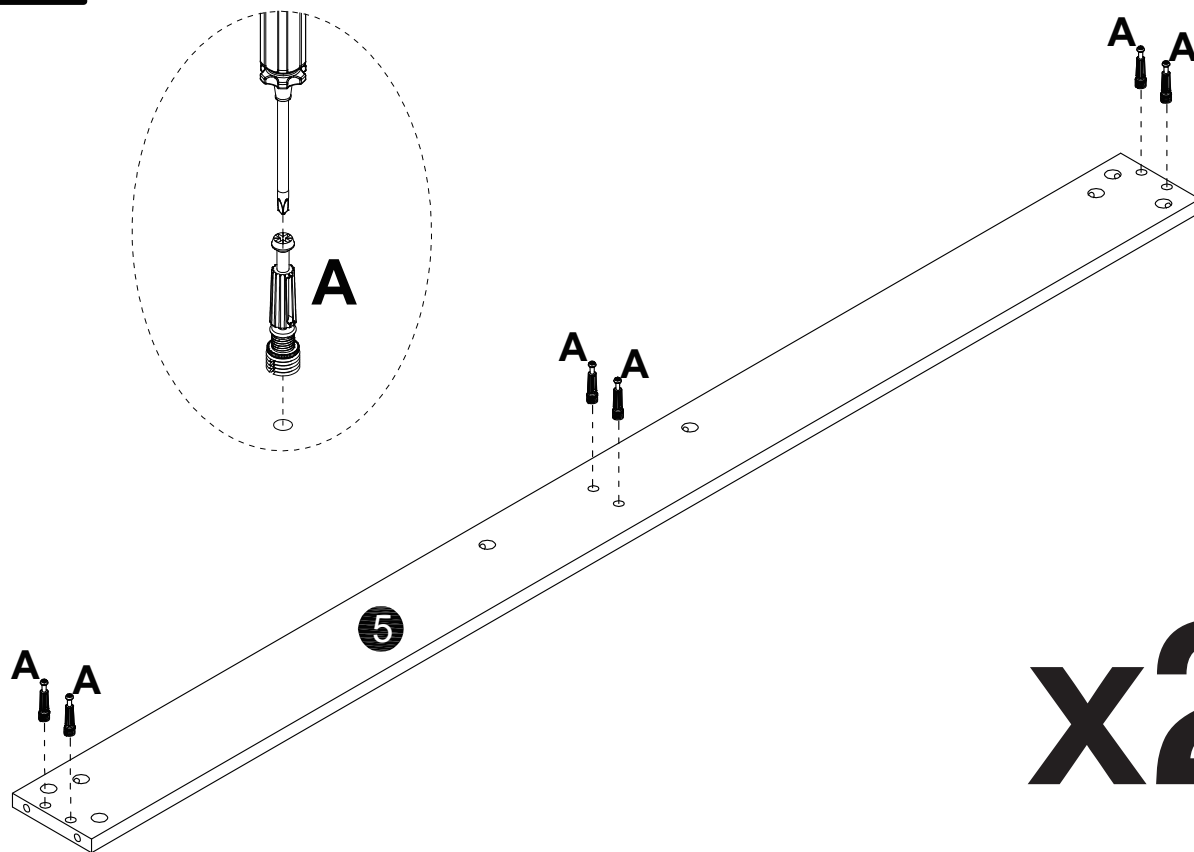


A

M6x35mm
12 pcs


x2

10

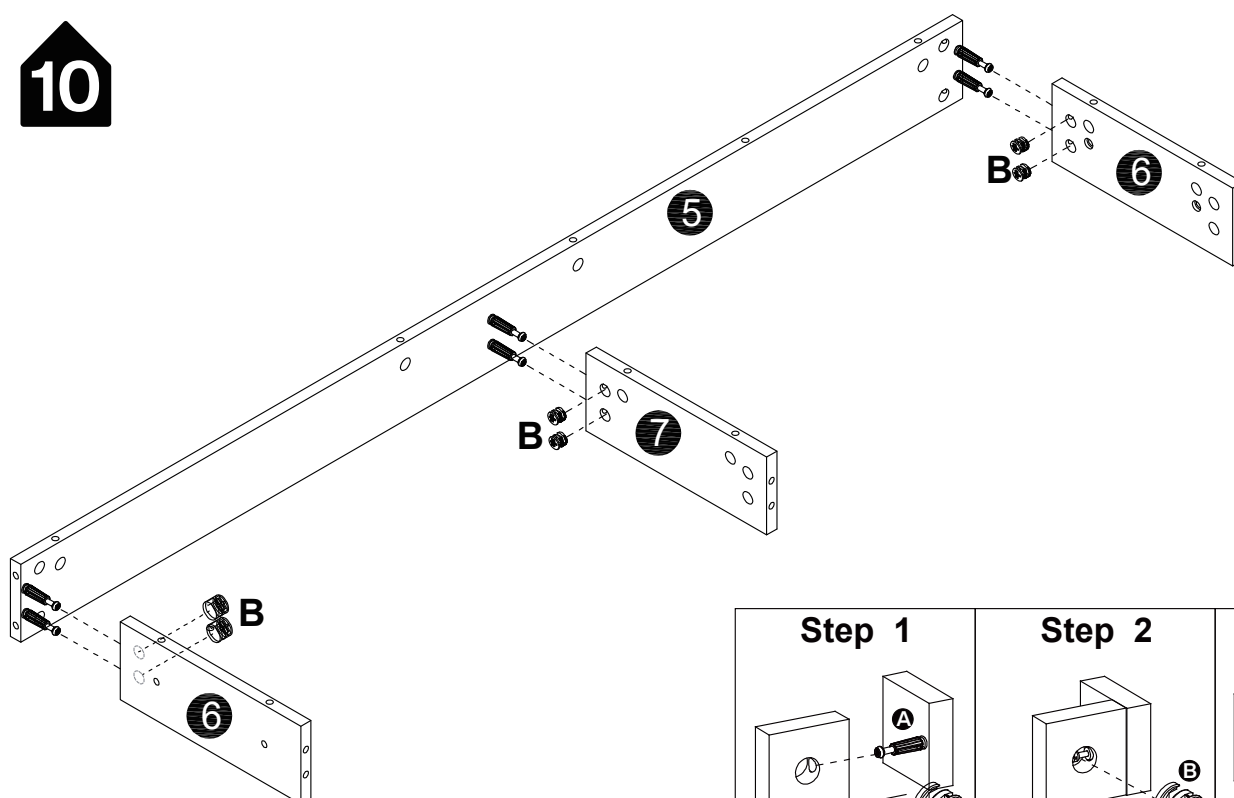


B

Ø15x12mm
6 pcs

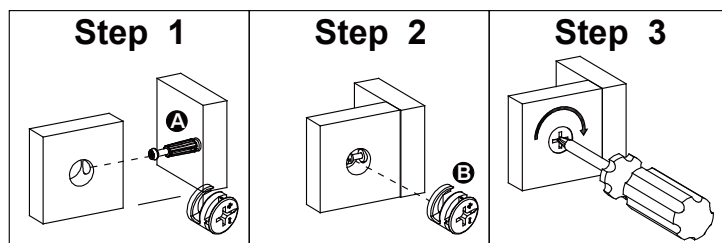


11

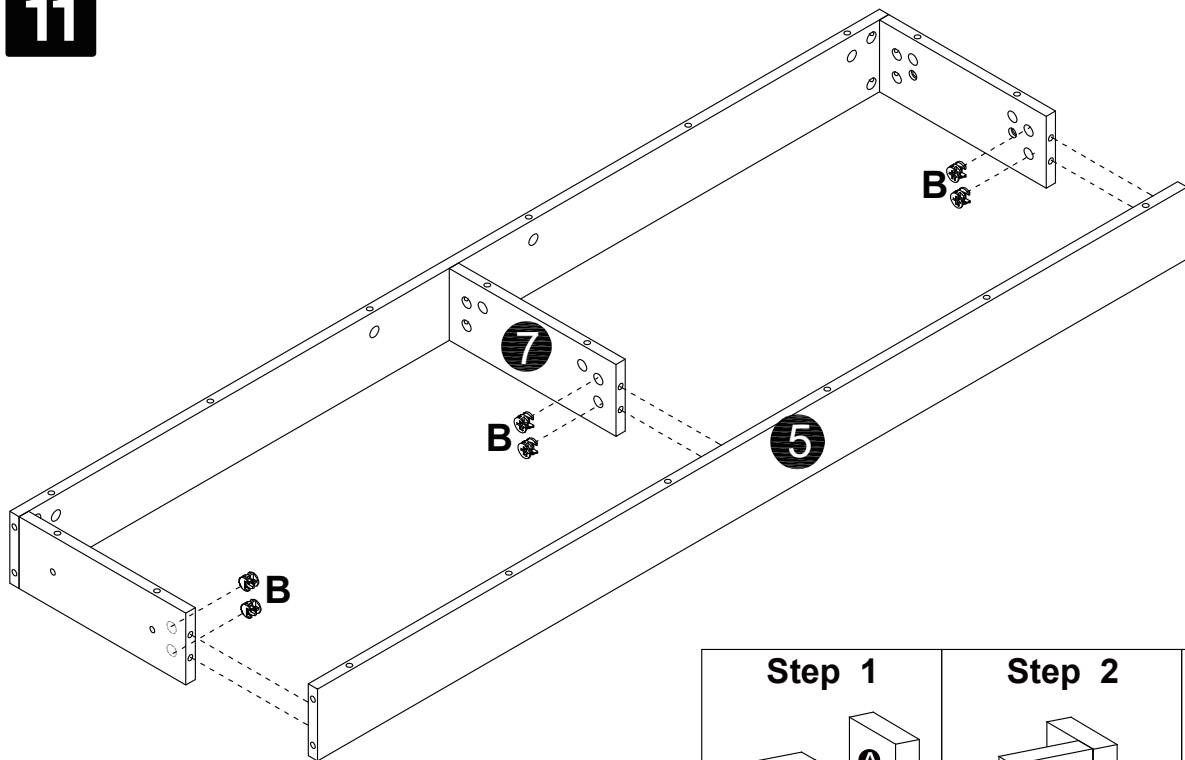



B

Ø15x12mm
6pcs

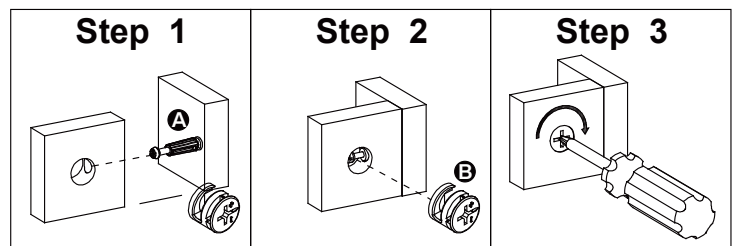


12

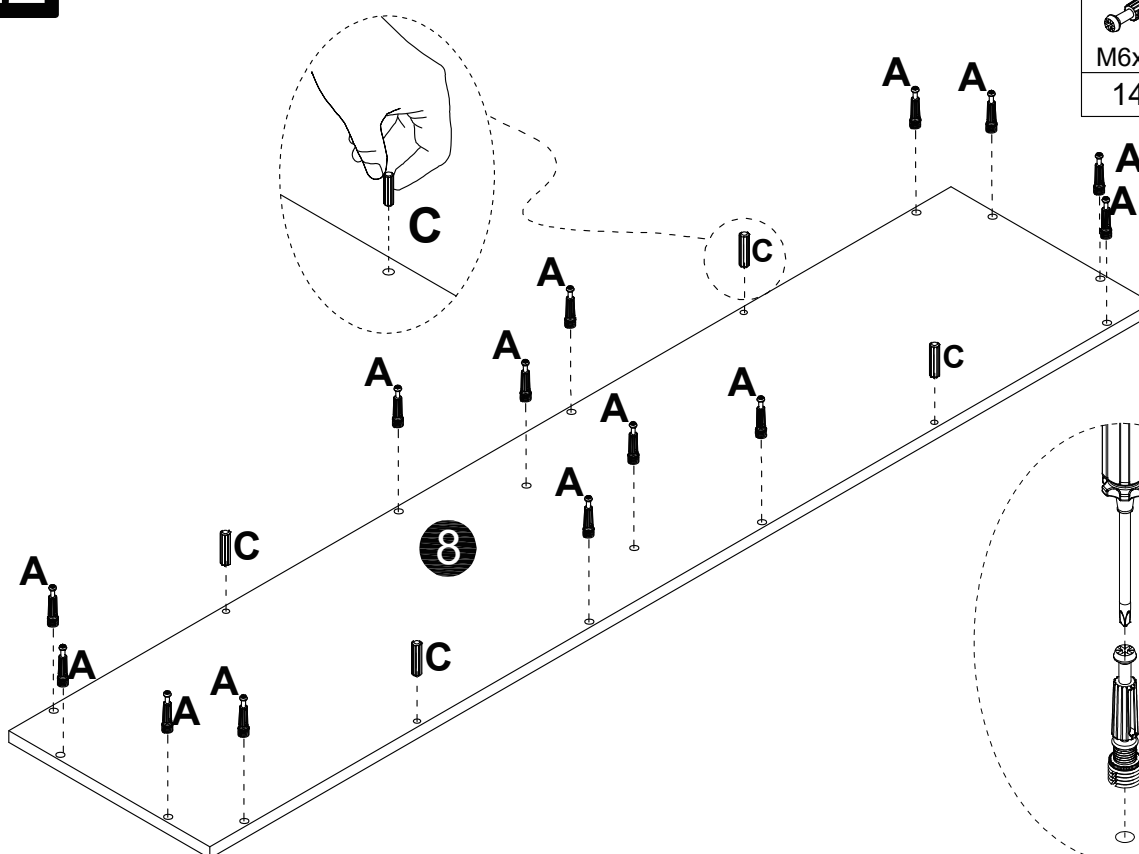


A	C
	
M6x35mm	Ø8x30mm
14 pcs	4 pcs

13

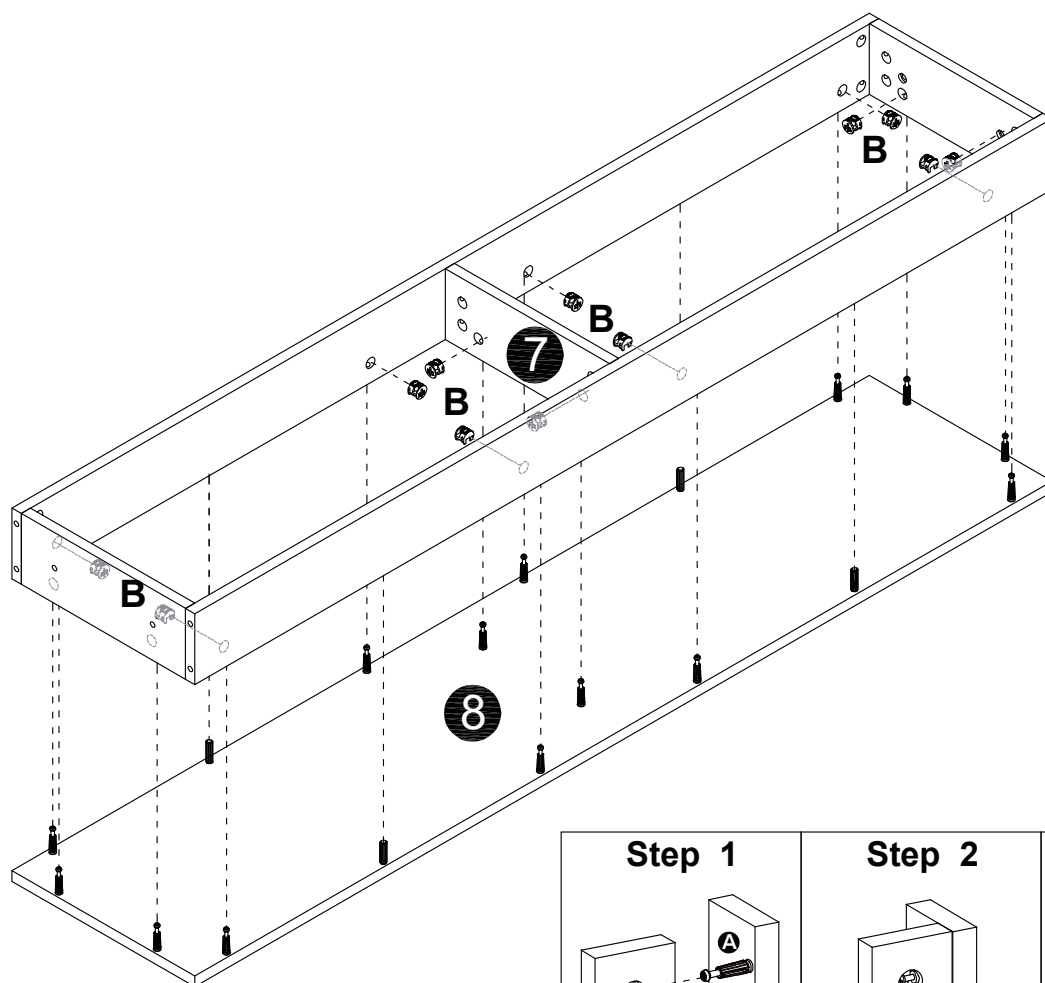


B

Ø15x12mm
14pcs

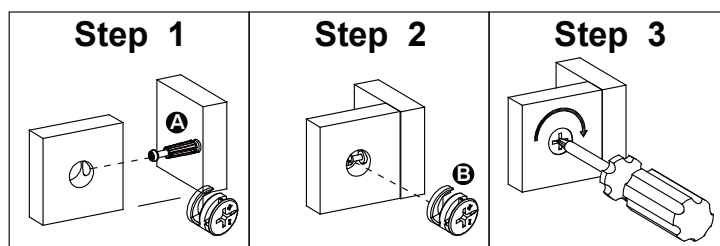


14

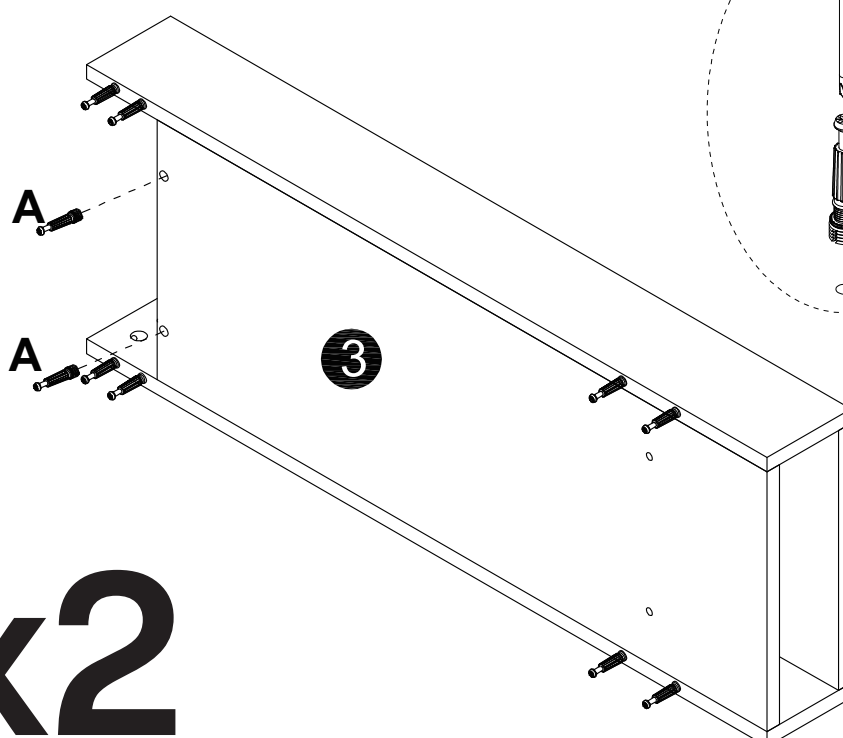


A

M6x35mm
4 pcs

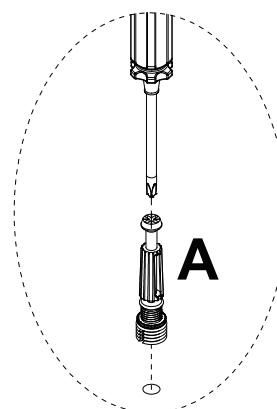


x2


15

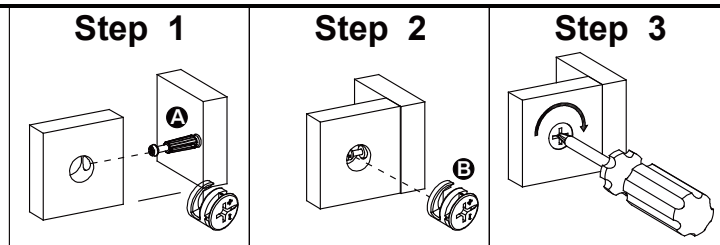


B	D
	
Ø15x12mm	M6x20mm
20pcs	4pcs

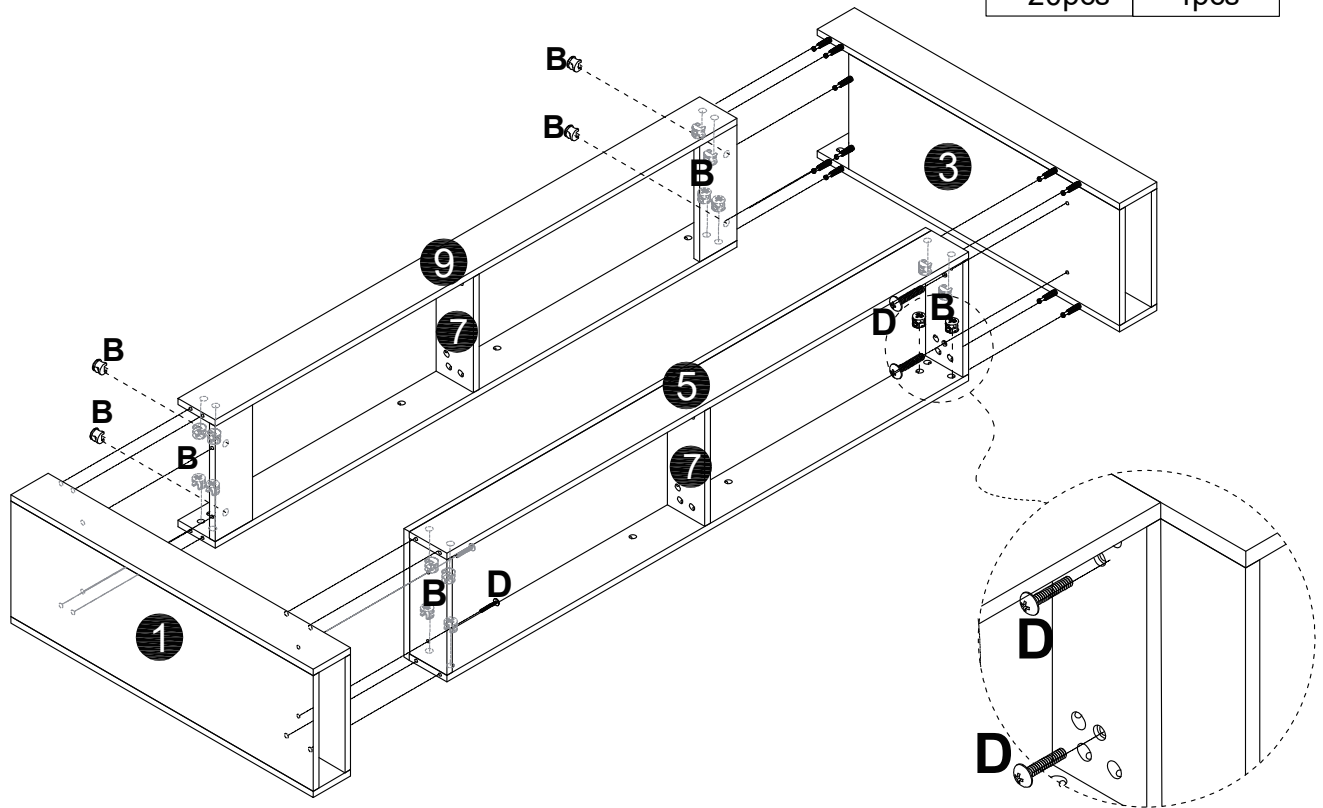


16

A	C
	
M6x35mm	Ø8x30mm
22 pcs	4pcs

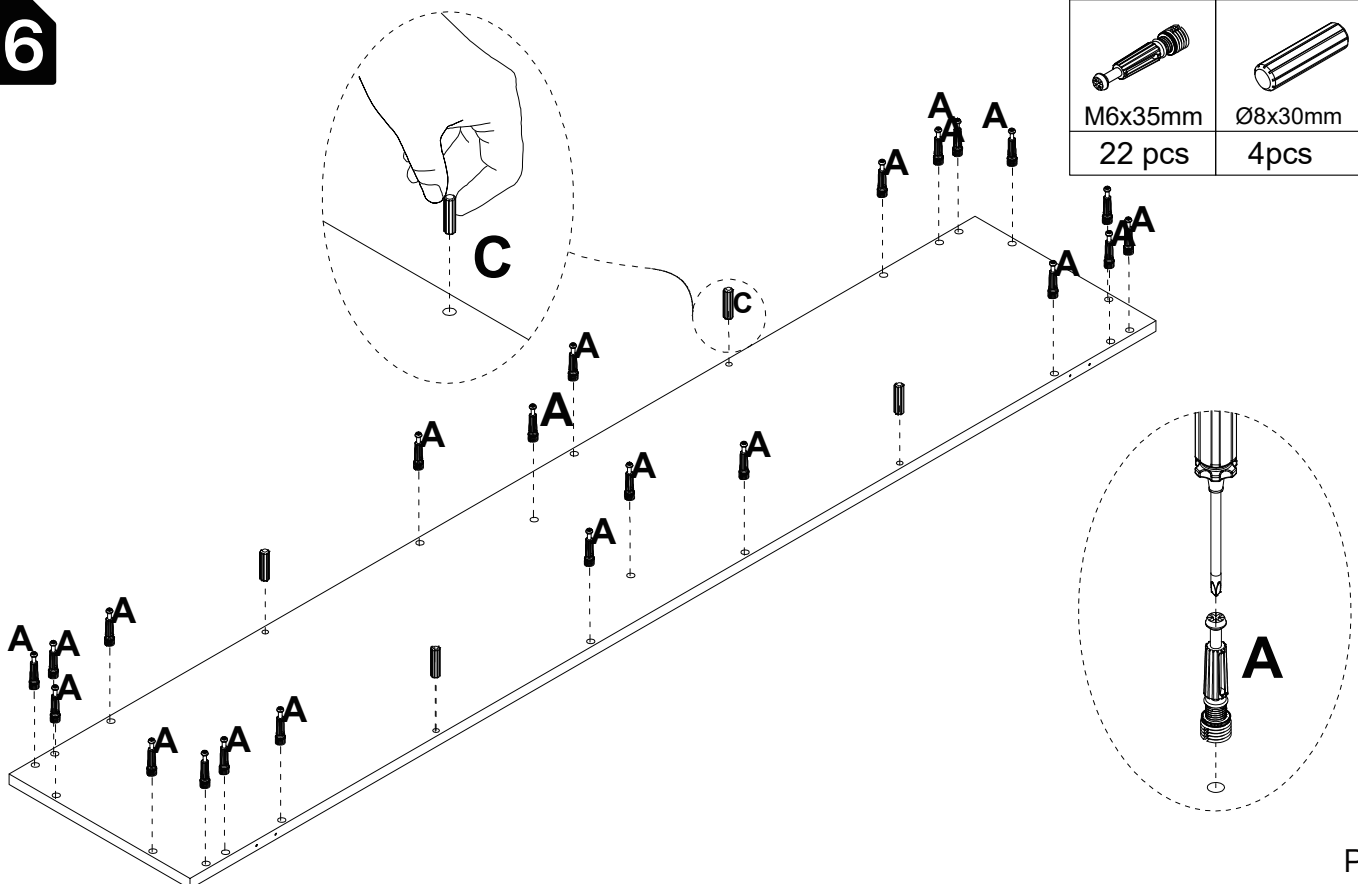


17

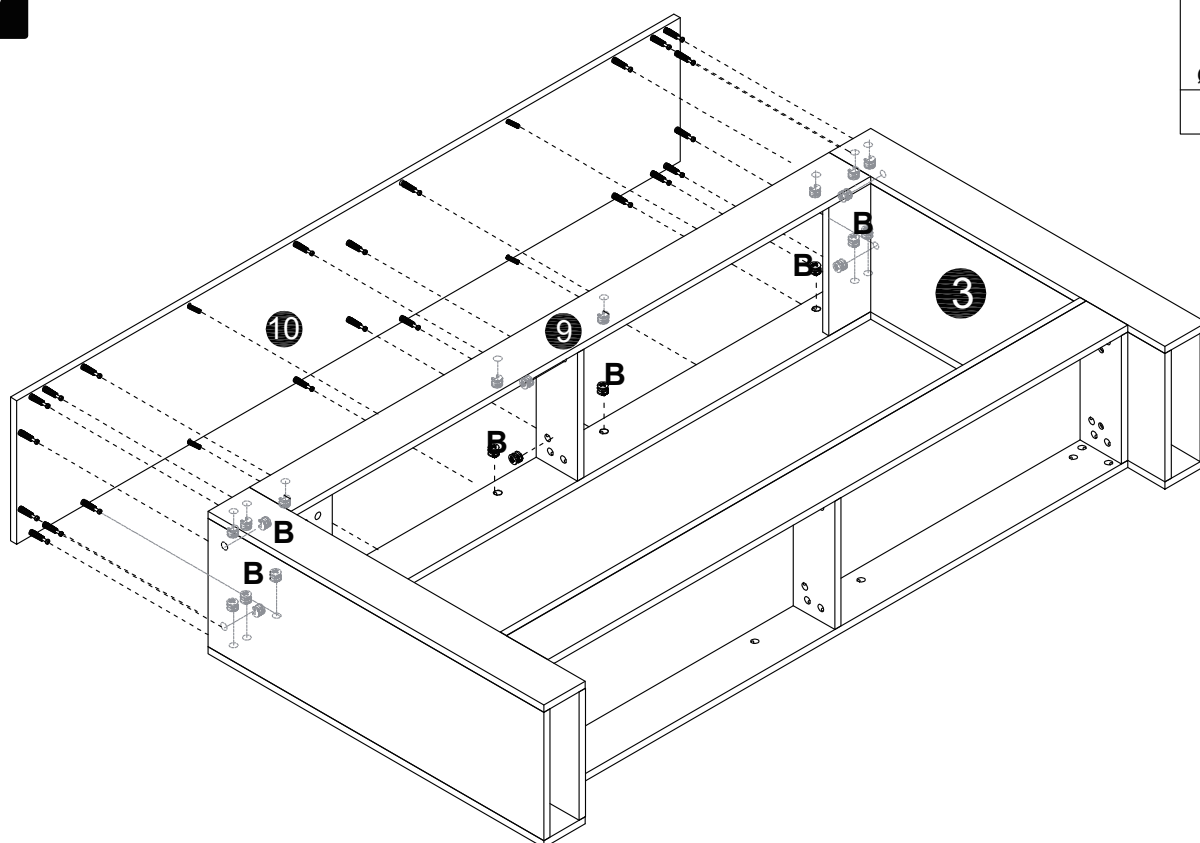

B

Ø15x12mm
22 pcs

18

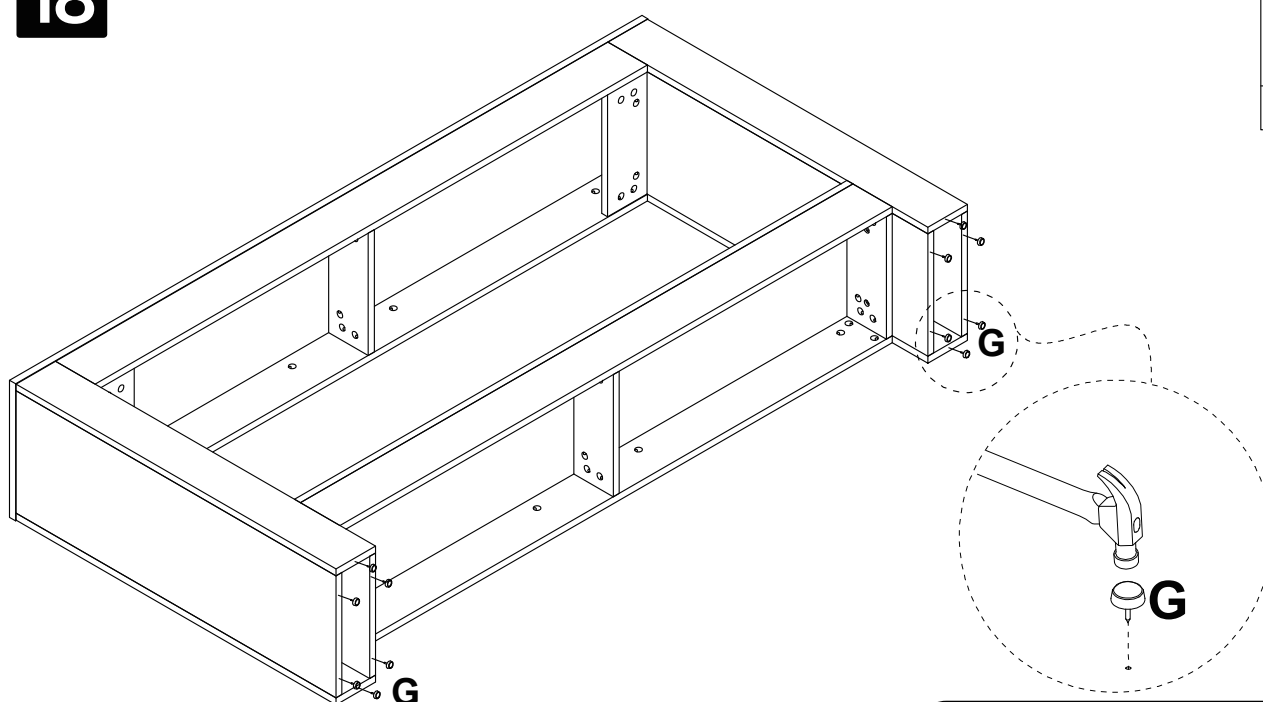


G

12 pcs


⚠ Caution! Tap lightly

19

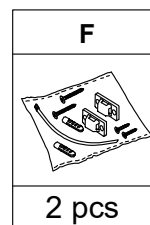


Wall



Step1



Step2

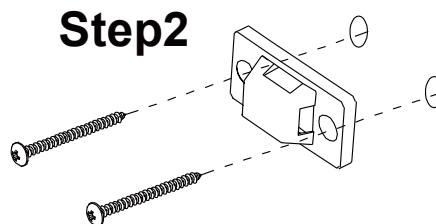


Step3

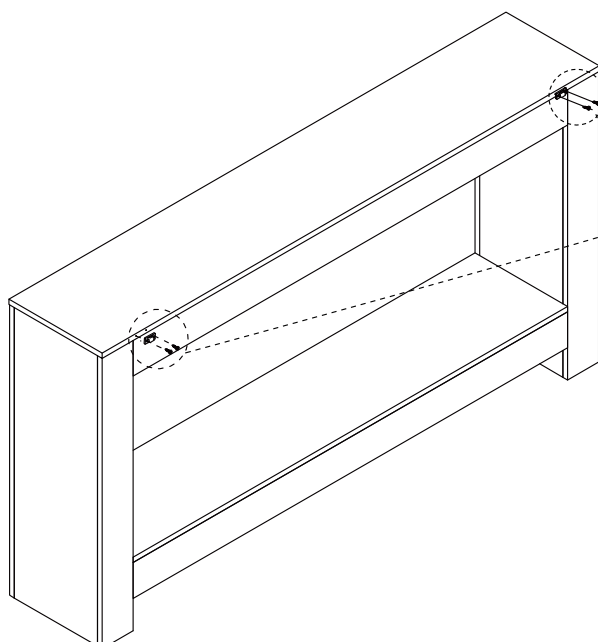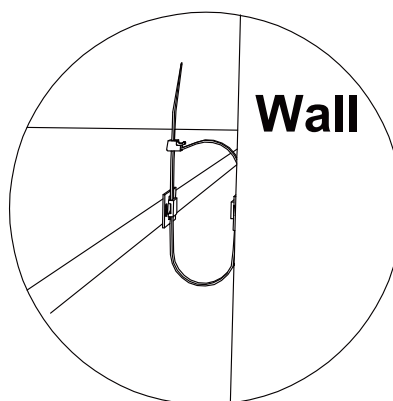



DESIGNED FOR LIFE

Thank you for your support!

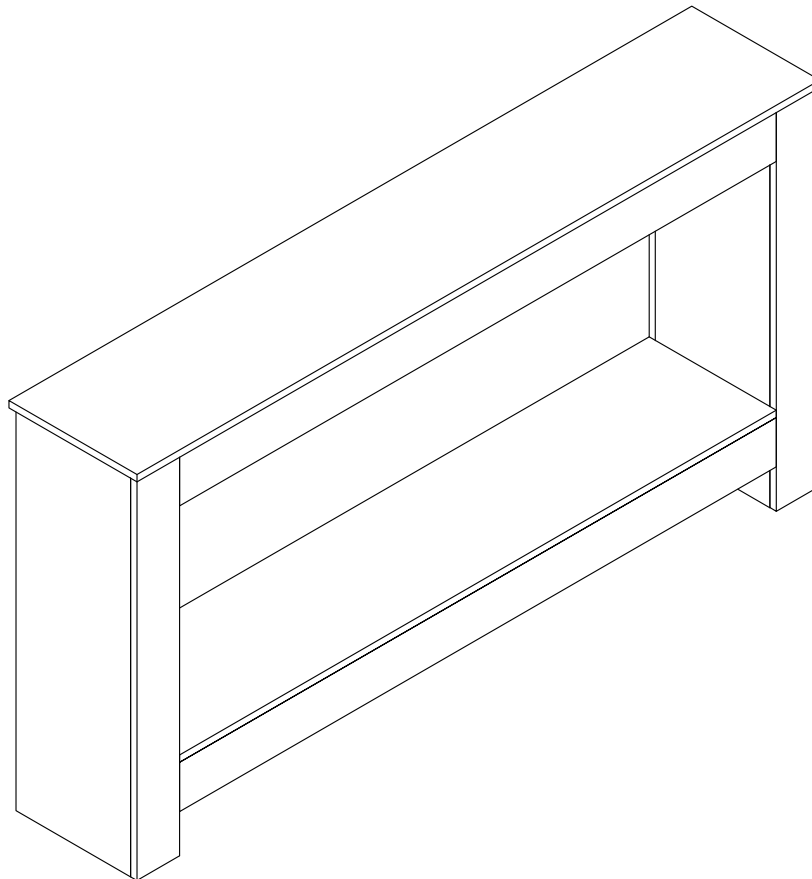

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

Contact us anytime except
12:00 AM to 8:00 AM EST.

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

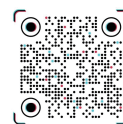

TikTok



WhatsApp