
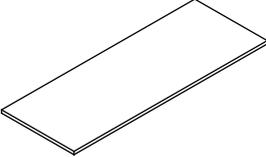
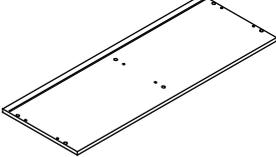
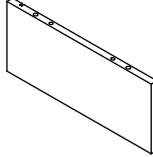
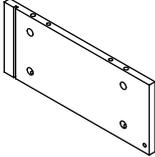
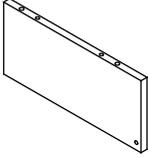
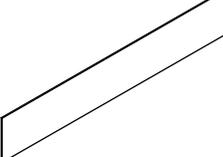
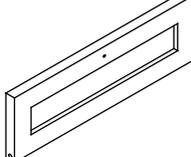
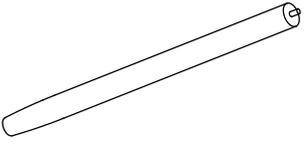


Assembly Instructions


1 Hardware List

	A	6x30mm	12pcs		B		12pcs		C		12pcs
	D		4pcs		E	M4x30mm	2pcs		F		2pcs
	G	M3x14mm	1pc		H	M4x30mm	1pc		I		2pcs
	J		1pc		K		1pc				

2 Parts List


							
①	1pc	②	1pc	③	1pc	④	1pc
							
⑤	1pc	⑥	1pc	⑦	2pcs	⑧	4pcs

3

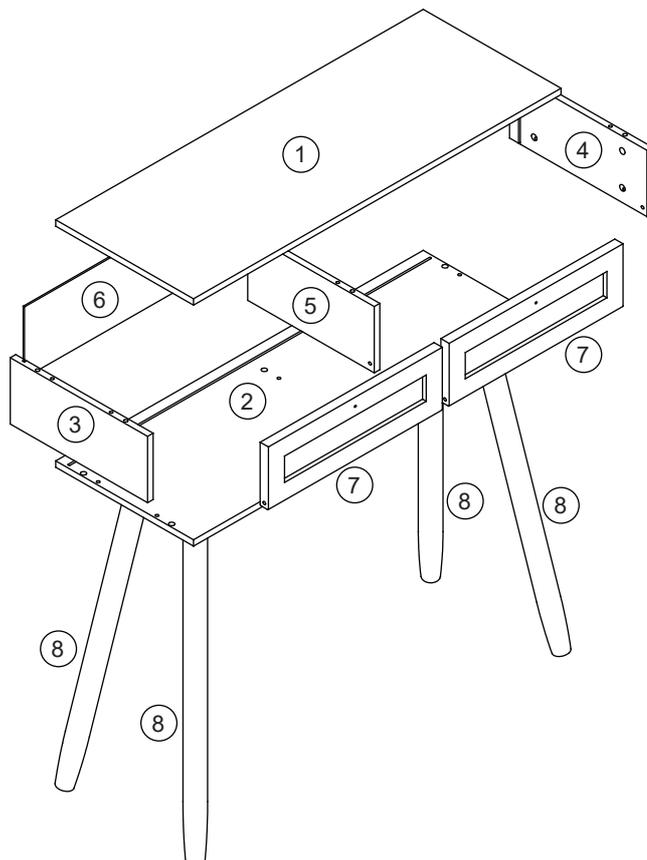

STEP 1


Attach handle (F) to Part (7) by securing with screw(E).

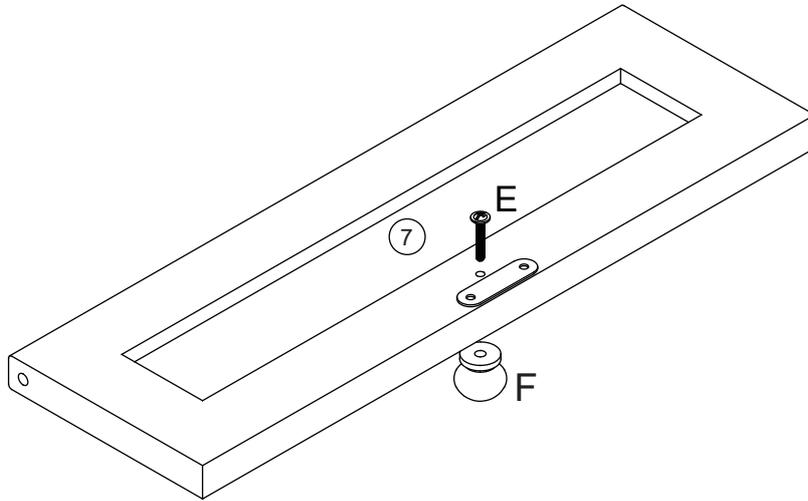


X2

STEP 2

Secure male camlock (B) to Part (1)(2) using a screwdriver as below instruction.

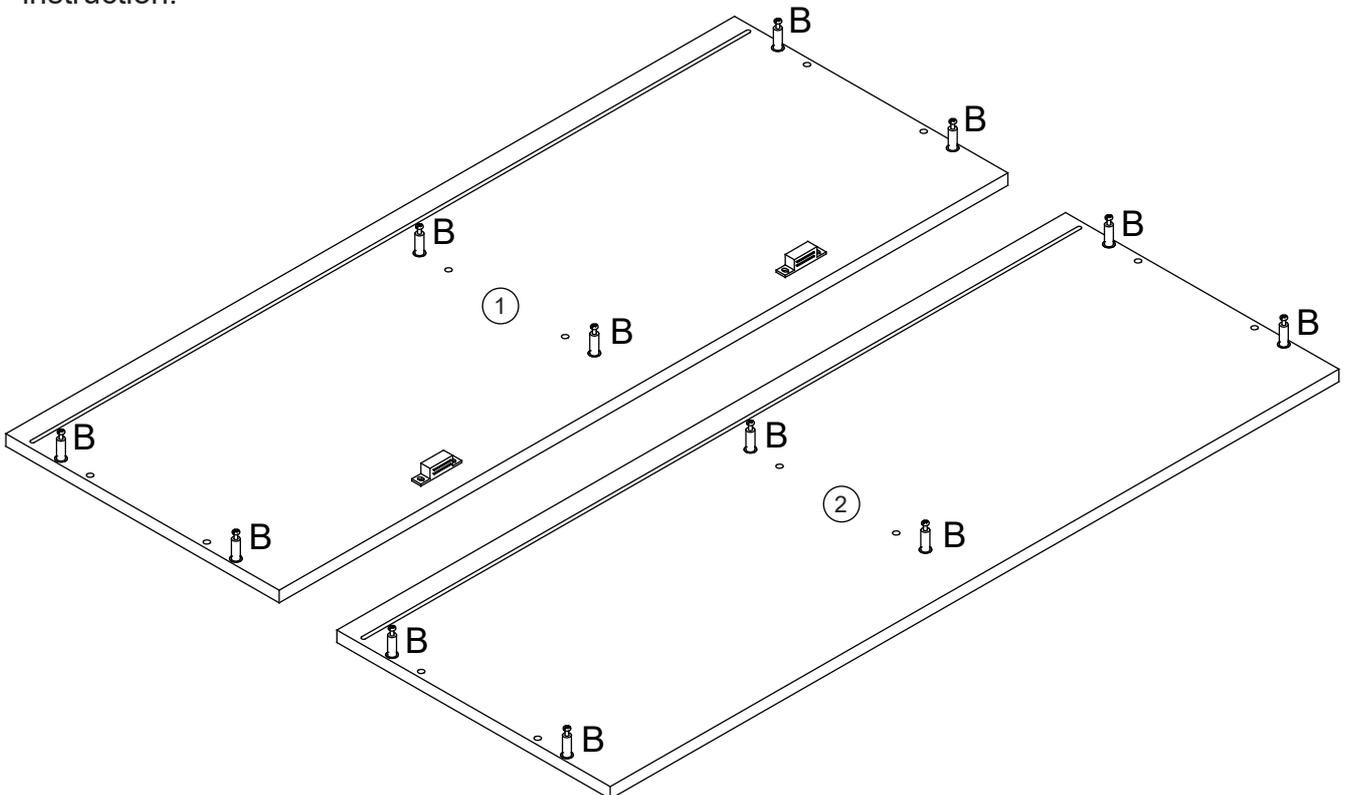


STEP 3

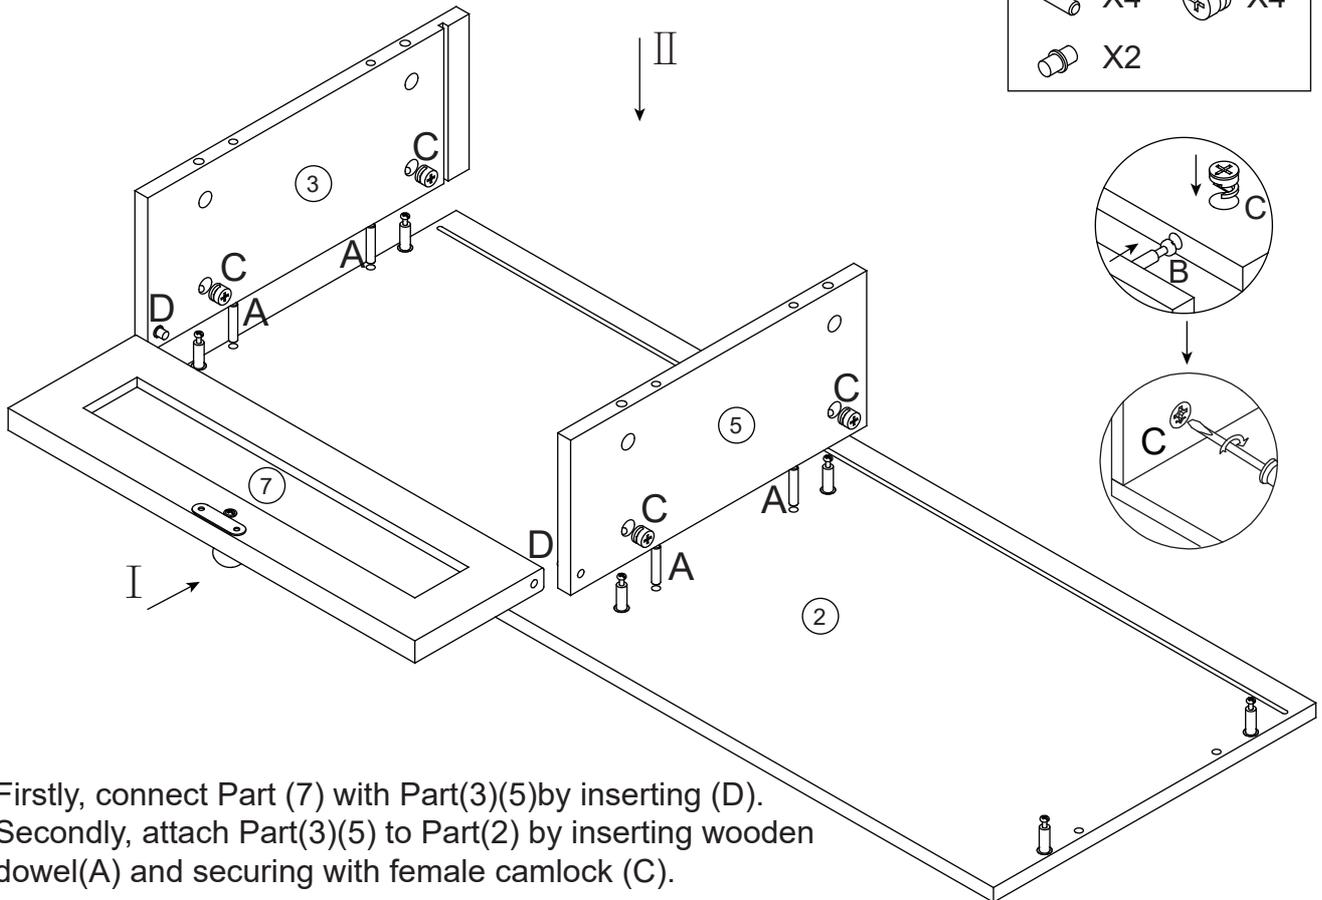

Firstly, connect Part (7) with Part(3)(5)by inserting (D).
Secondly, attach Part(3)(5) to Part(2) by inserting wooden
dowel(A) and securing with female camlock (C).


STEP 4

Firstly, connect Part (7) with Part(4)(5)by inserting (D).
Secondly, attach Part(4) to Part(2) by inserting wooden
dowel(A) and securing with female camlock (C).

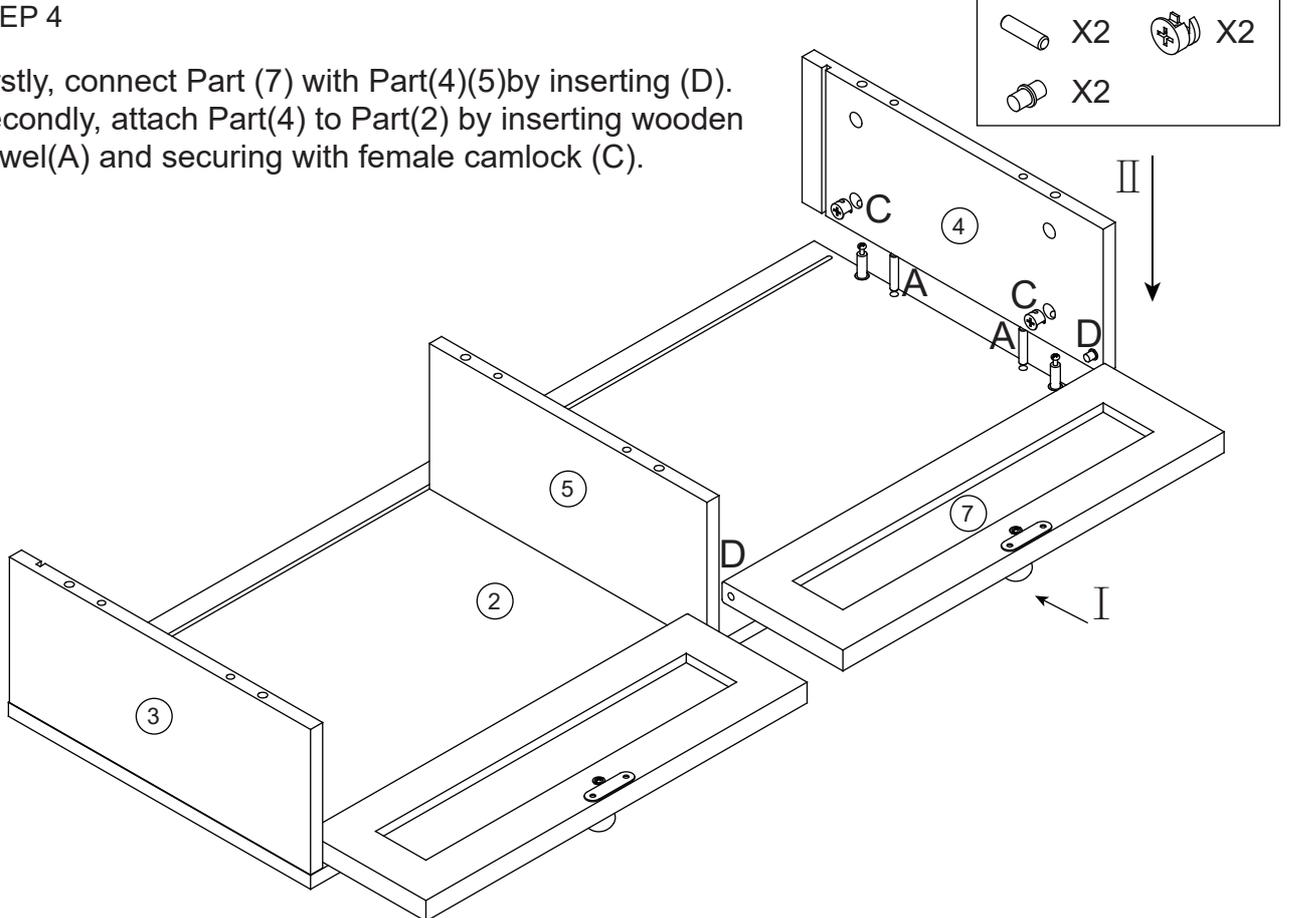


STEP 5

Insert Part(6) as below instruction.

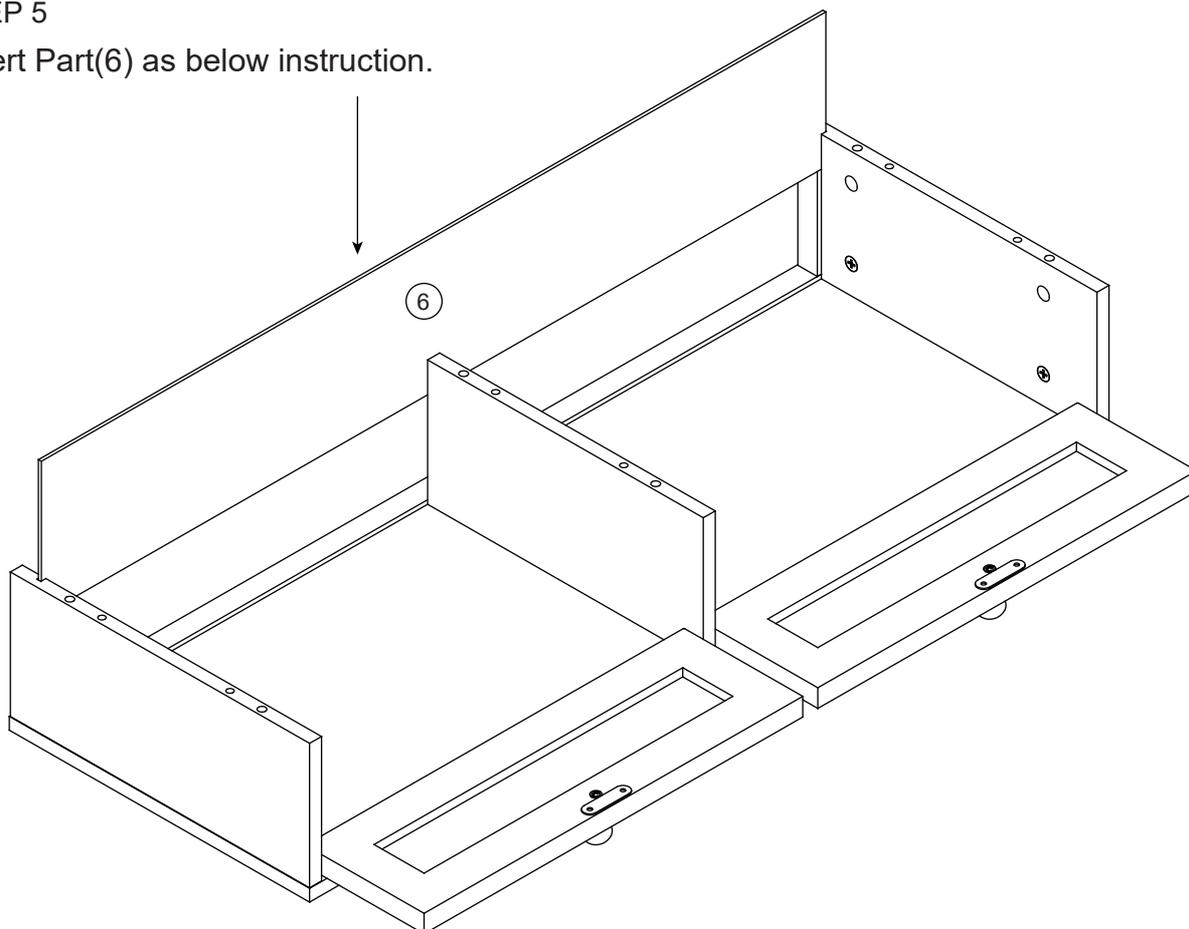

STEP 6


Attach Part (1) to Part (3)(4)(5) by inserting wooden dowel (A) and securing with camlock (B) & (C) .

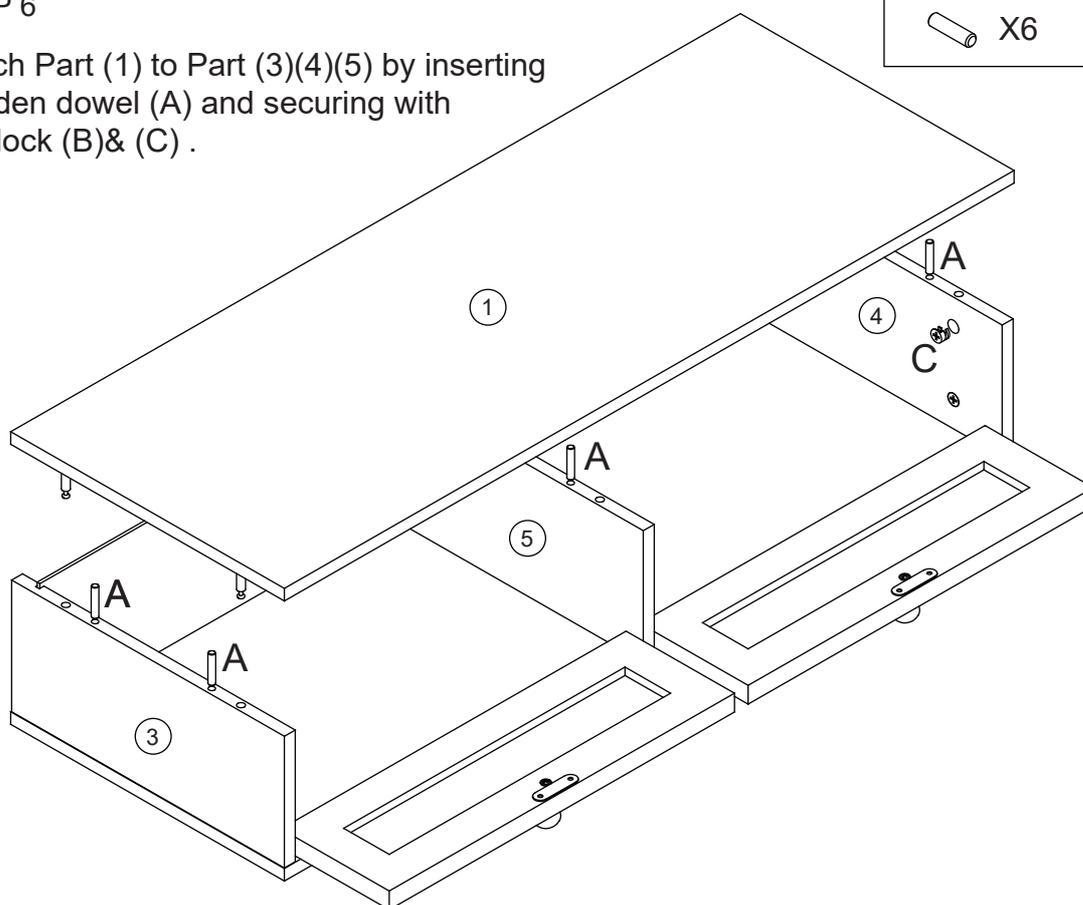


STEP 7

Rotate leg (8) into the bottom one by one by aligning hole.

Tighten each leg before turning assembled product upside down.

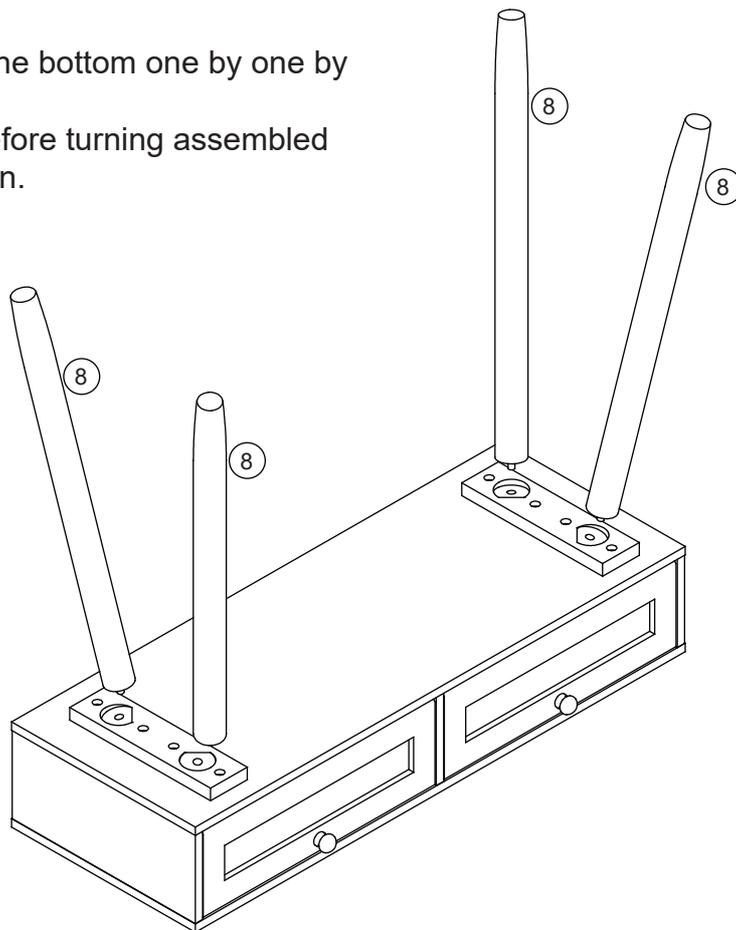

STEP 8

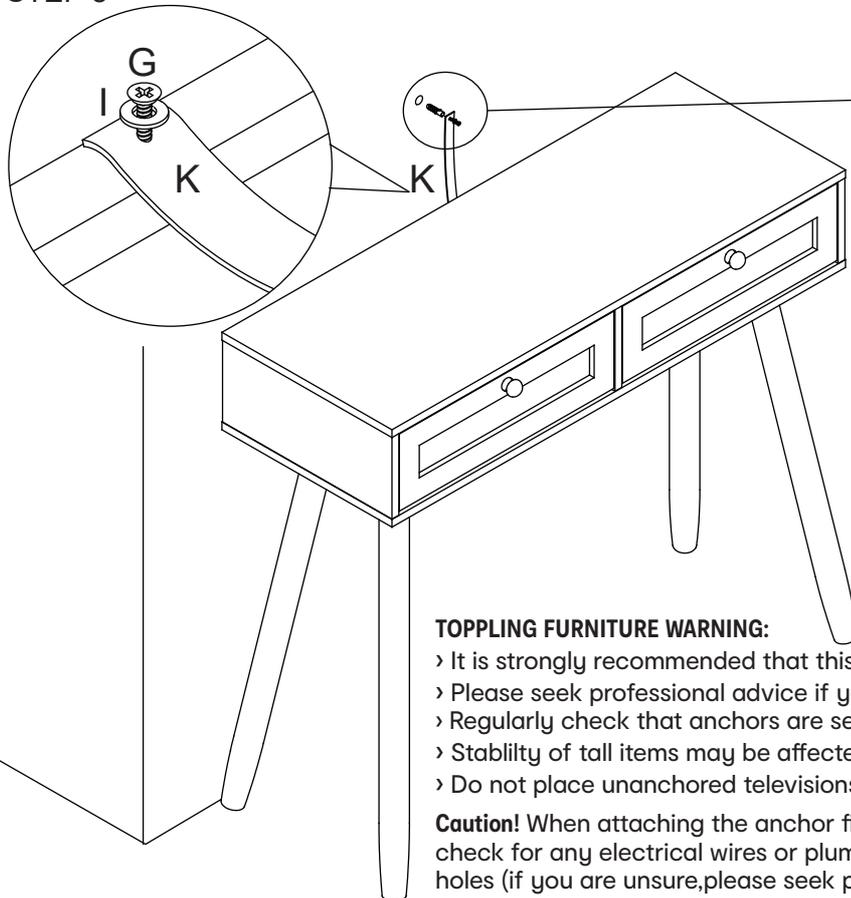

Fix wall strap (K) to the product by securing with screw (G) and washer (I)
Drill hole on the wall
Hammer (J) into the hole on the wall.
Fix wall strap (K) to (J) by securing with screw (H) and washer (I).

TOPPLING FURNITURE WARNING:

- › It is strongly recommended that this product is permanently fixed to the wall.
- › Please seek professional advice if you are in doubt of what fixing device to use.
- › Regularly check that anchors are securely maintained.
- › Stability of tall items may be affected by thick pile carpet or uneven floors.
- › Do not place unanchored televisions on furniture.

Caution! When attaching the anchor fixings, check for any electrical wires or plumbing behind the wall before drilling any holes (if you are unsure, please seek professional advice from a qualified tradesperson).