


# Installation Manual


---

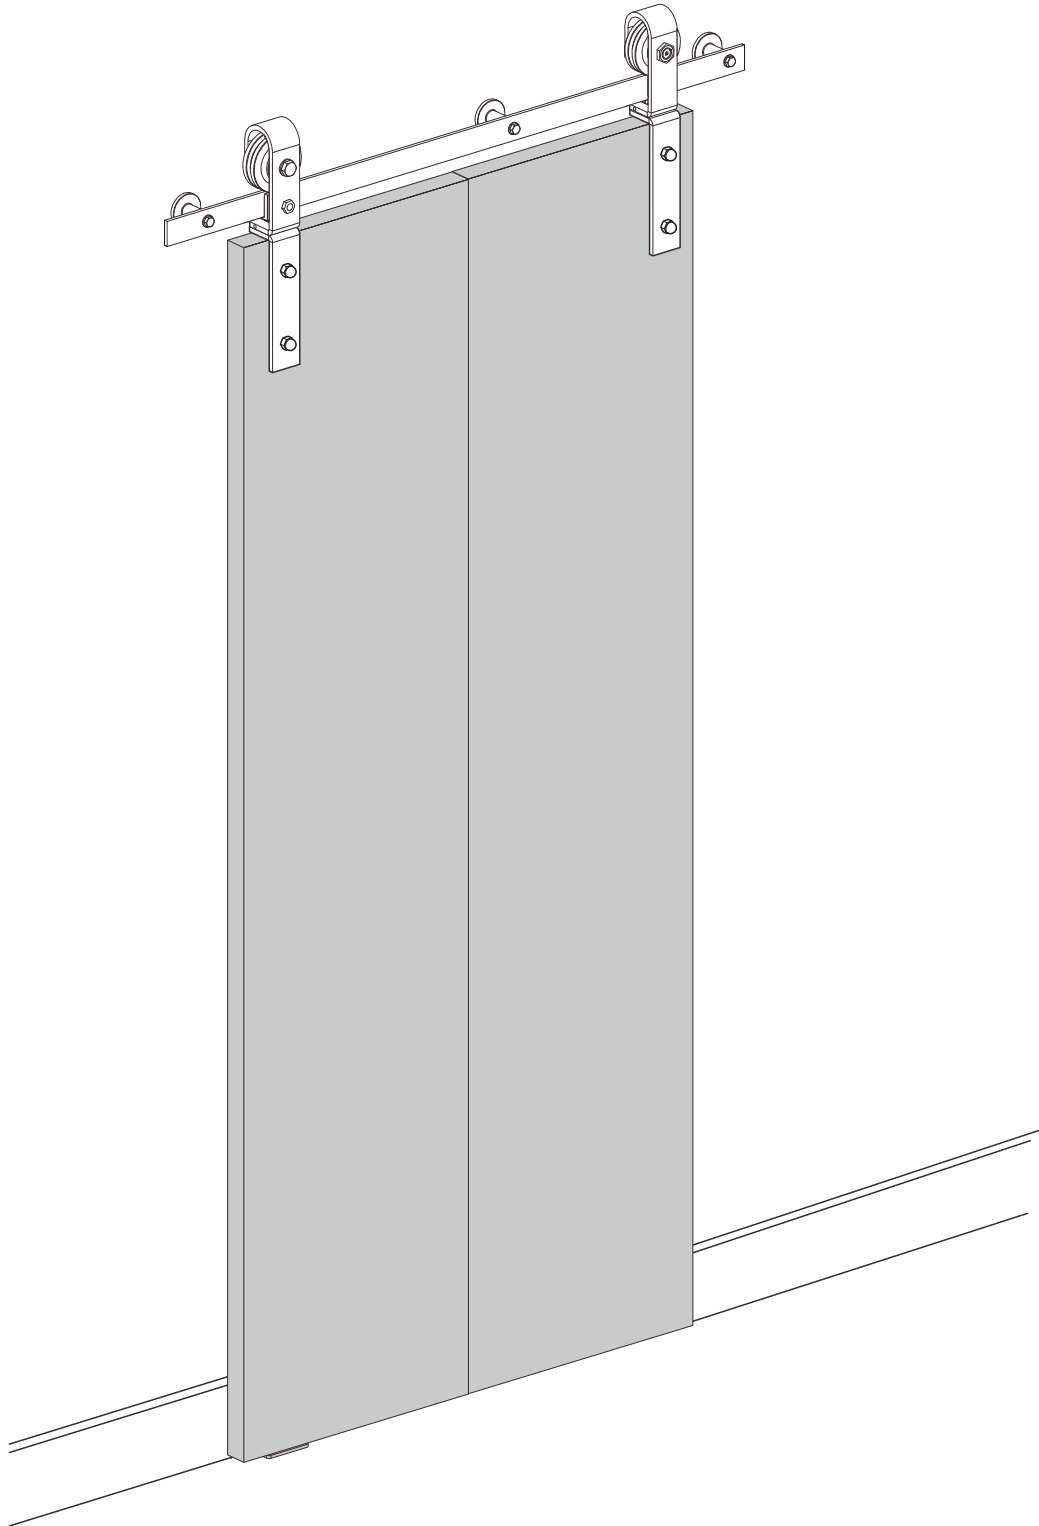


# DOOR PANEL ASSEMBLY INSTRUCTIONS

For best results, carefully follow the instructions in this guide. Glue and other adhesives are not required, and we do not recommend their use during the assembly process.

First, remove all parts from the box and place them on a flat, open surface. Then, using the guide drawings at the bottom of this page, identify each slat. Next, follow the drawing on the left to place each part as shown.

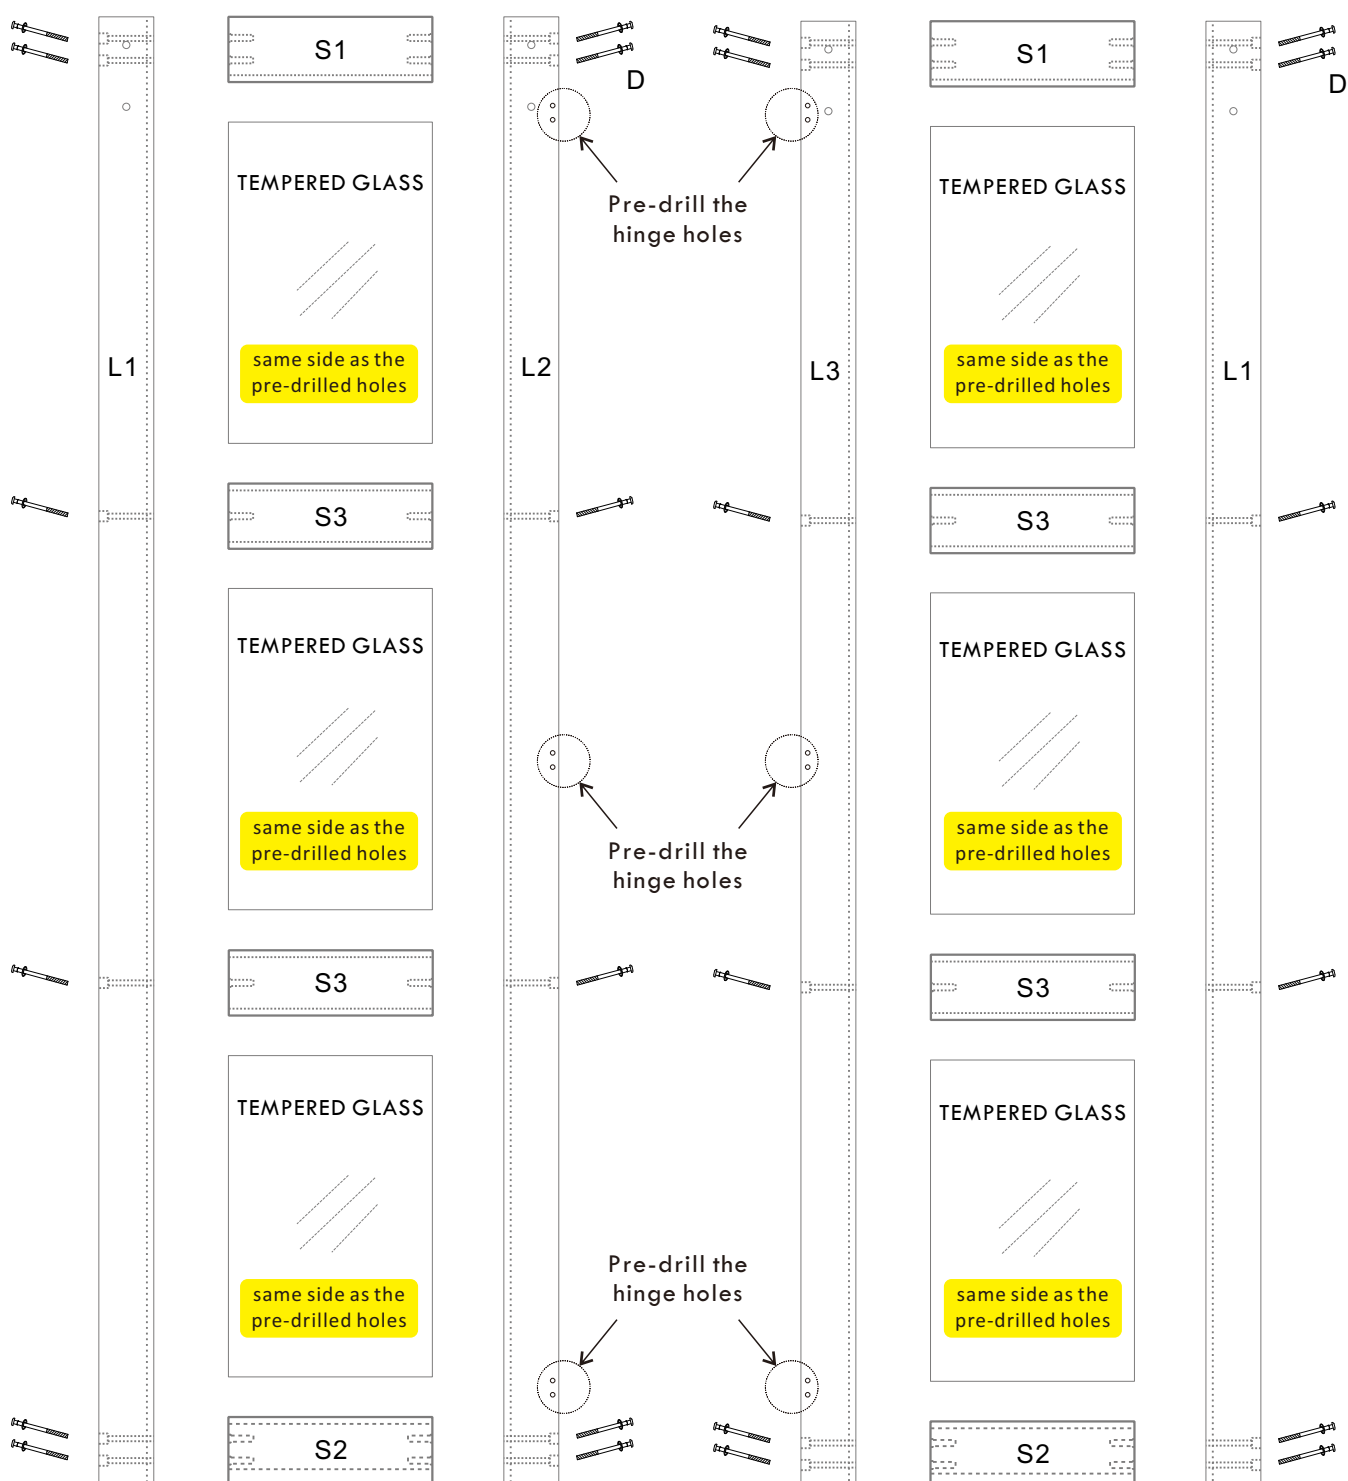

Install the left door with the back side as the reference.

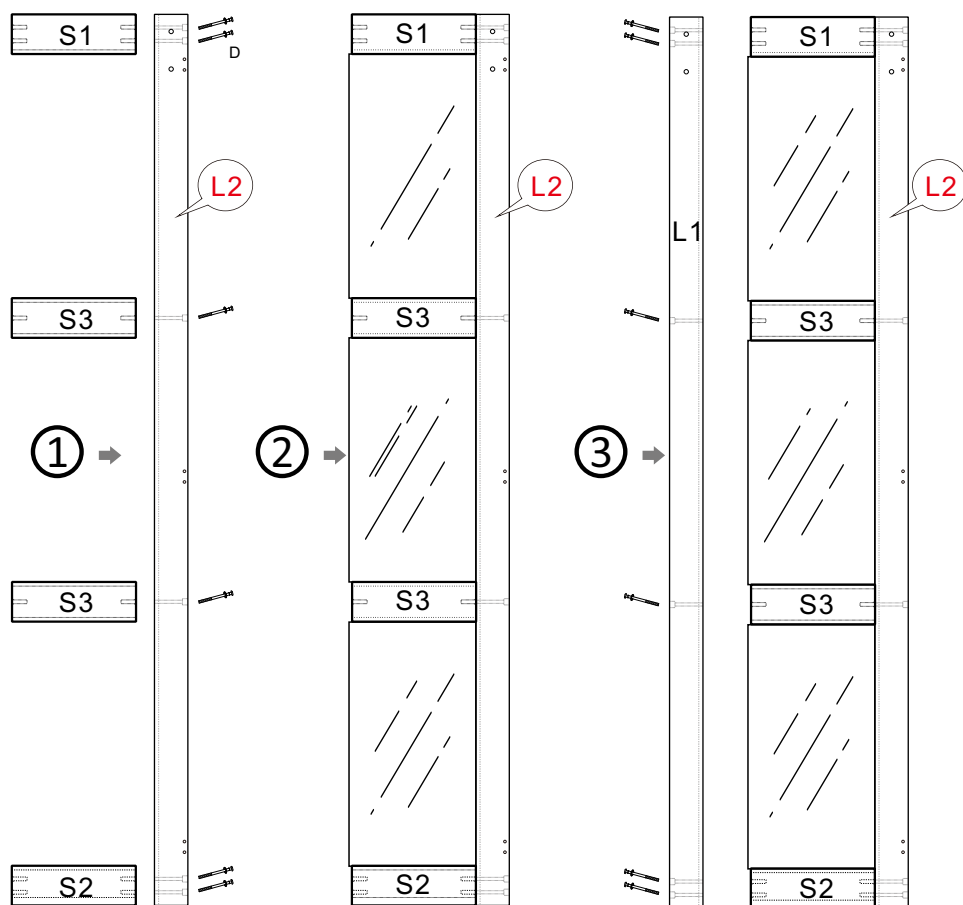

①


Connect the rails S1.S2.S3 with L2 by using 6\*100mm bolts and then cover the bolt holes with stickers E

②


Insert all the tempered glass into the space between short rails.

③

Use the carriage bolts to connect the L1 with S1, S2 and S3. Cover the bolt holes with stickers E

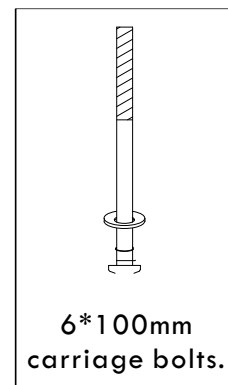

Install the right door with the back side as the reference.

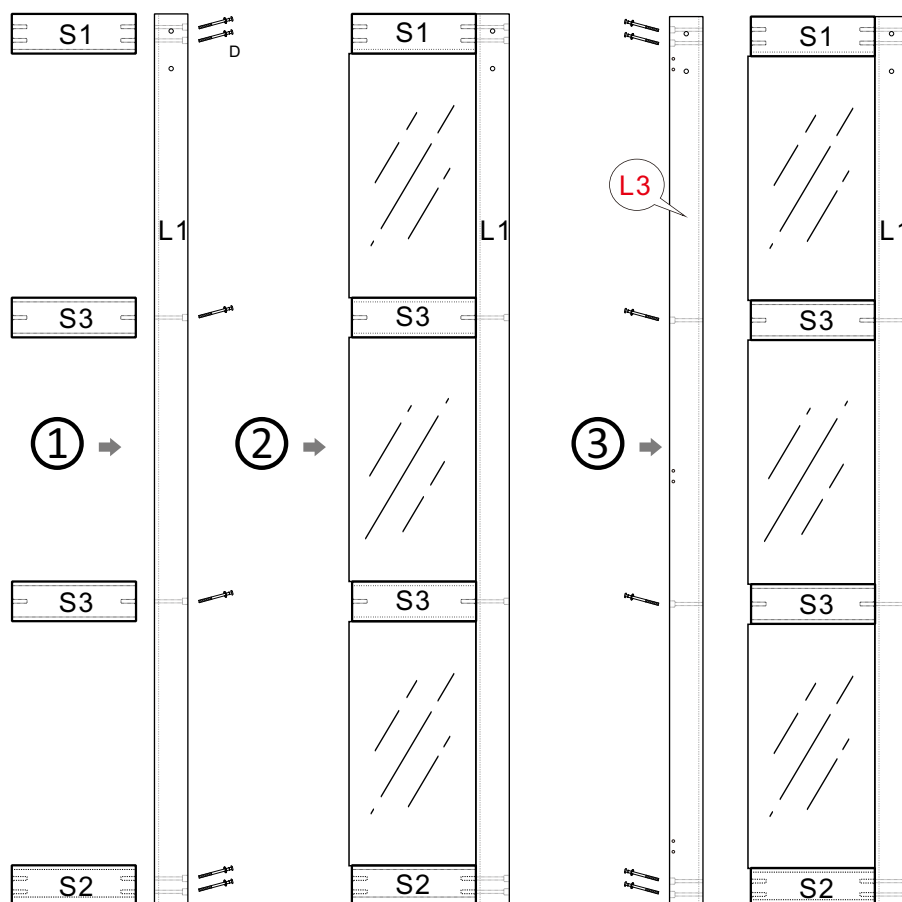

①

Connect the rails S1.S2.S3 with L1 by using 6\*100mm bolts and then cover the bolt holes with stickers E

②

Insert all the tempered glass into the space between short rails.

③

Use the carriage bolts to connect the L3 with S1, S2 and S3. Cover the bolt holes with stickers E

Note: Due to pre-drilled holes on the door panel, L2 and L3 positions cannot be confused.  
All tempered glass is on the same side as the pre-drilled holes.