






ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL# 92905 92910

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

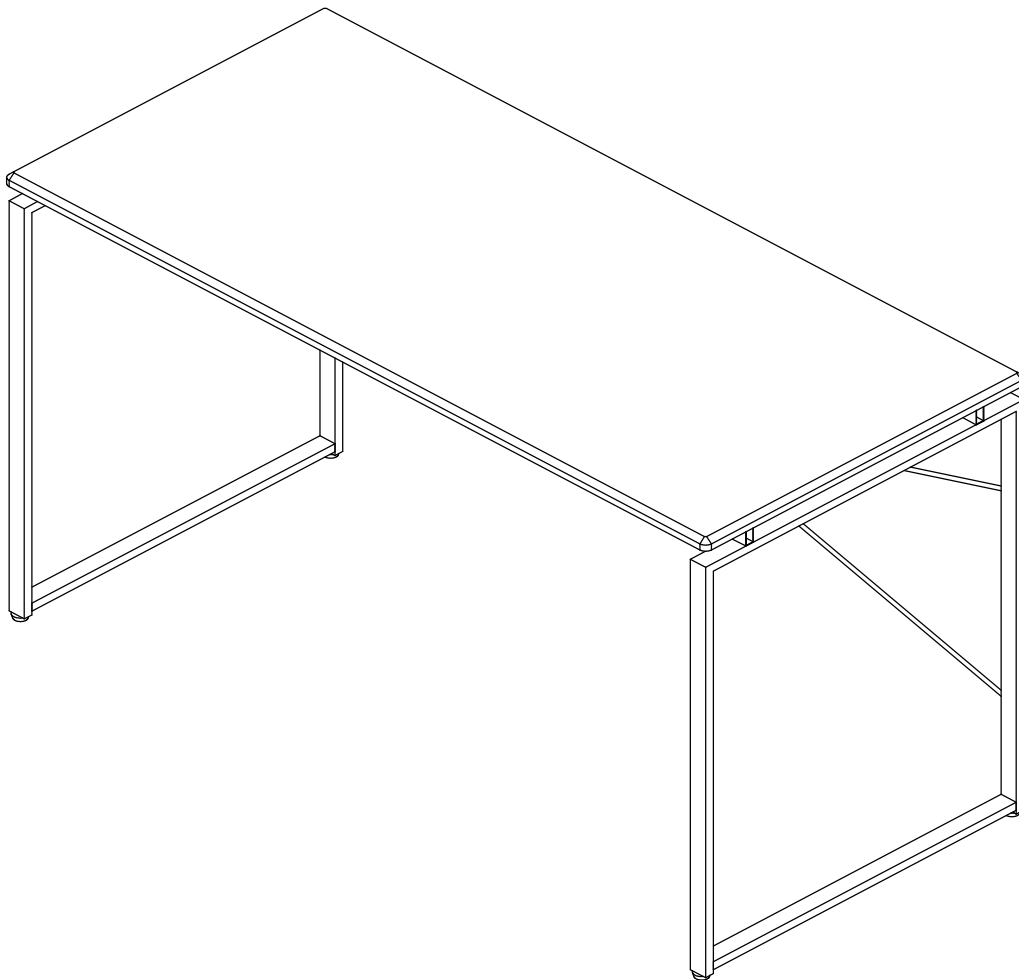

**** Do not fully tighten screws until fully assembled ****

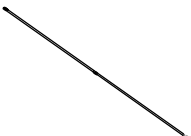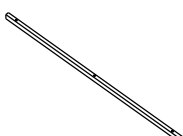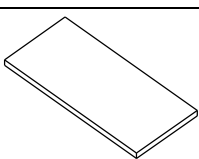COMPONENT PARTS		
DESCRIPTION	PART NAME	QTY(PCS)
①	SIDE FRAME 	2
②	CROSS BAR 	2
③	SUPPORT BAR 	2
④	DESK TOP 	1

HARDWARE REQUIRED



ALLEN BOLT

M6x12MM

5 PCS



ALLEN BOLT

M6x32MM

4 PCS



PIPE THREAD

M6x13MM

4 PCS




NUT

1 PCS



STUD

4 PCS



ALLEN WRENCH

1 PCS



ALLEN BOLT


M6x35MM

4 PCS


Attention

***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.





STEP.1

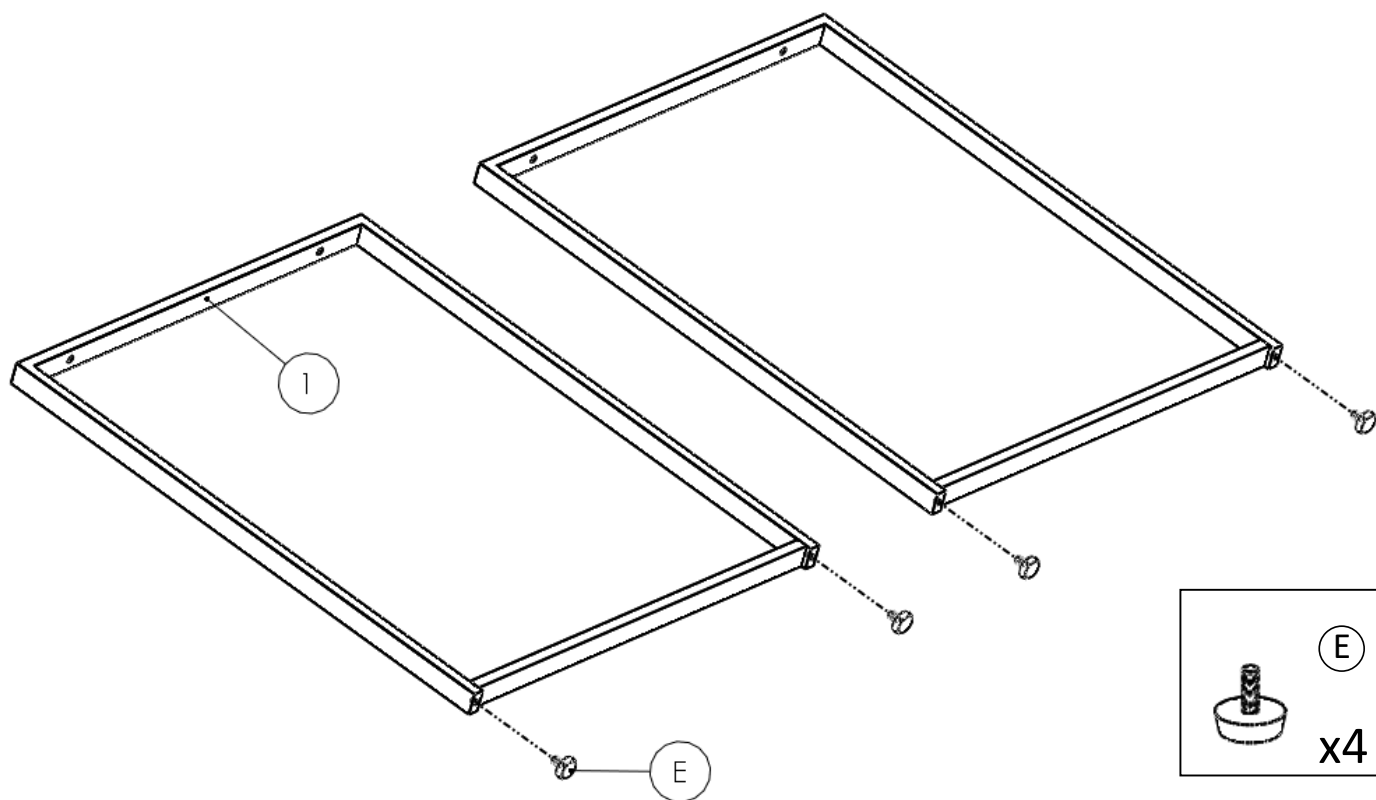

STEP.2

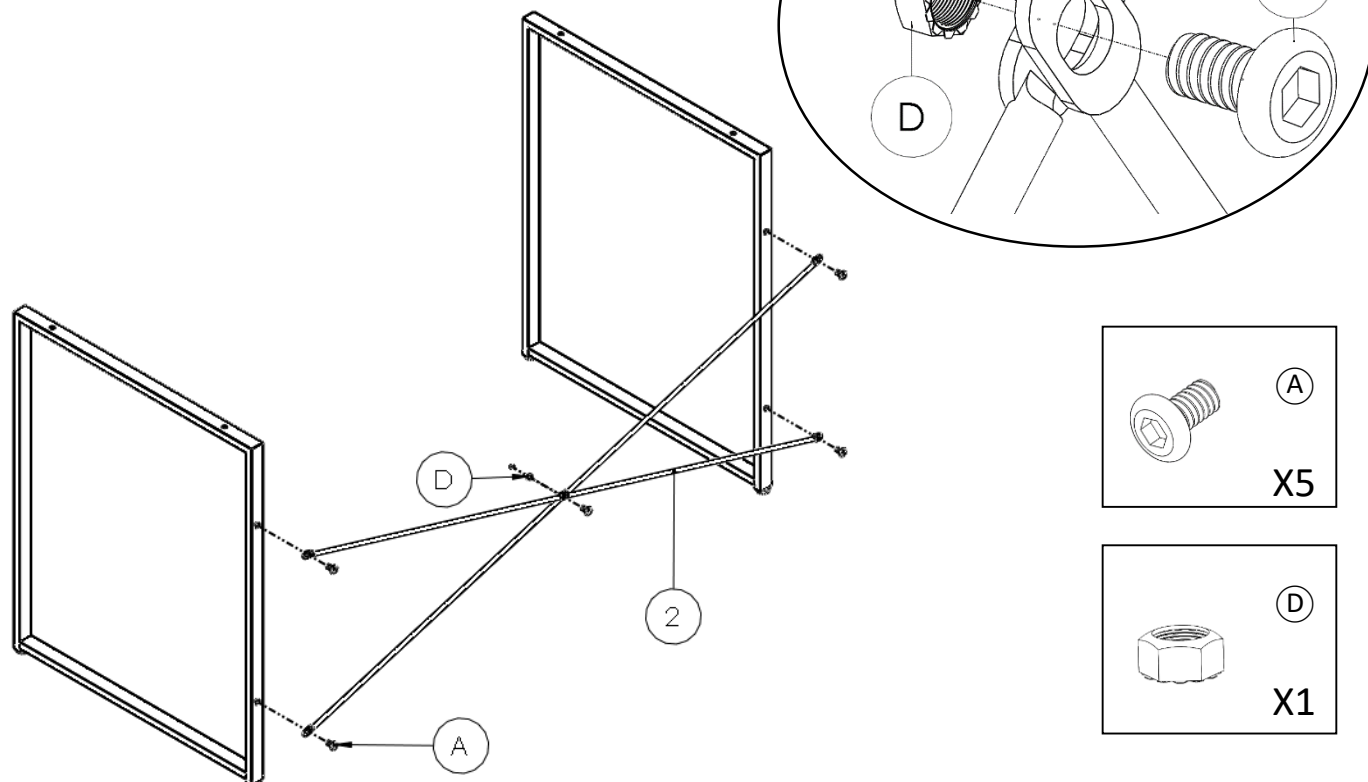

STEP.3

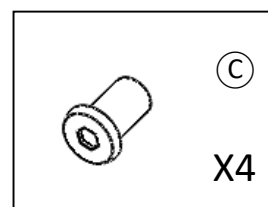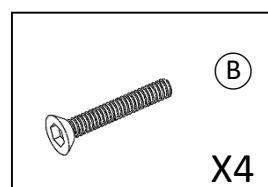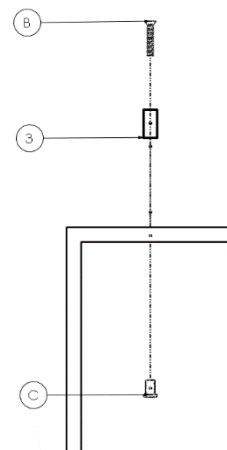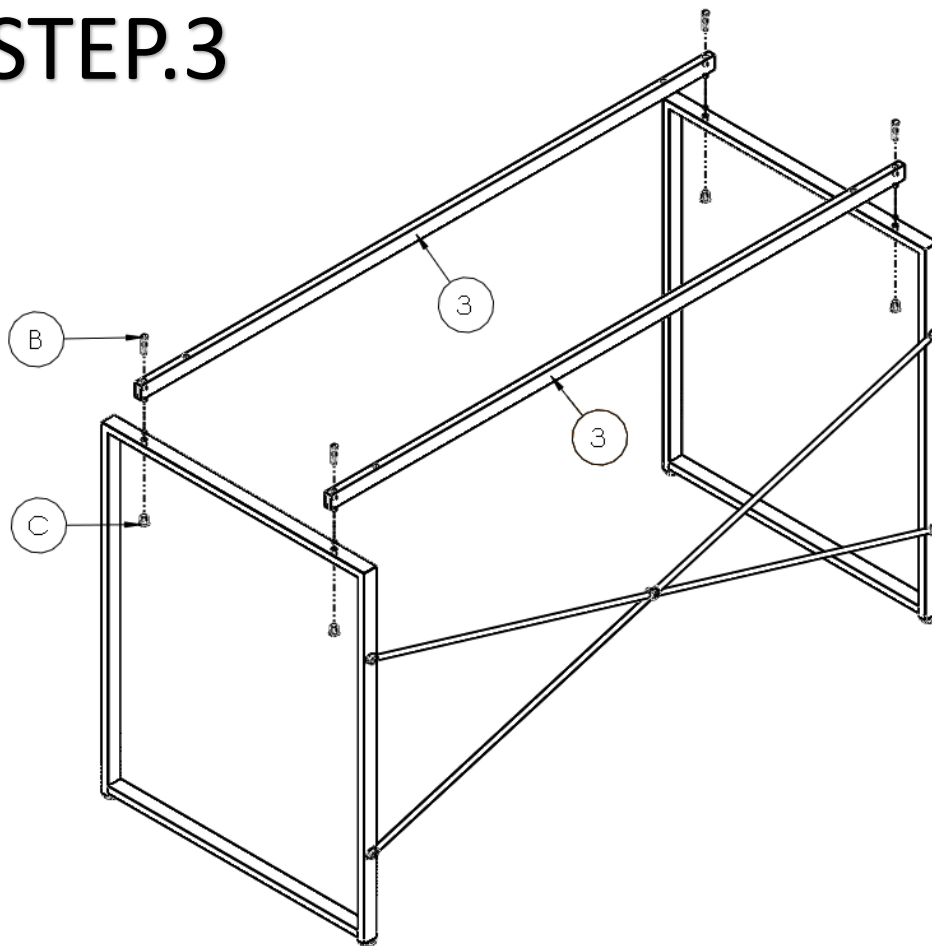

STEP.4

