


5. INSTALL BULBS AND LAMP SHADE

Step 1. Install the G9 bulbs (not included), then install the lamp shade on the socket.

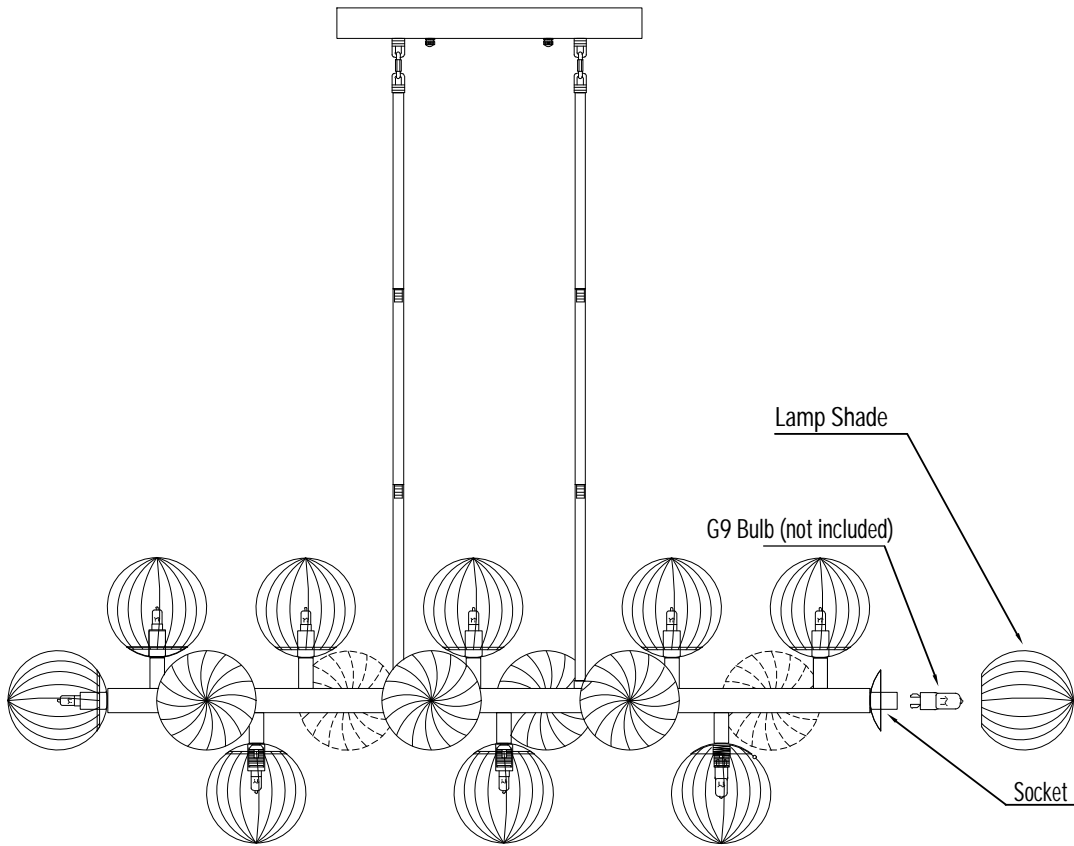


**Note:**  
This lamp uses G9 bulbs base and can only be used in conjunction with LED bulbs up to 7W. Fully dimmable when used with dimmable bulbs and compatible dimming switches (not included).

# INSTALLATION MANUAL

## CHANDELIER

Model No.: 2617-16A

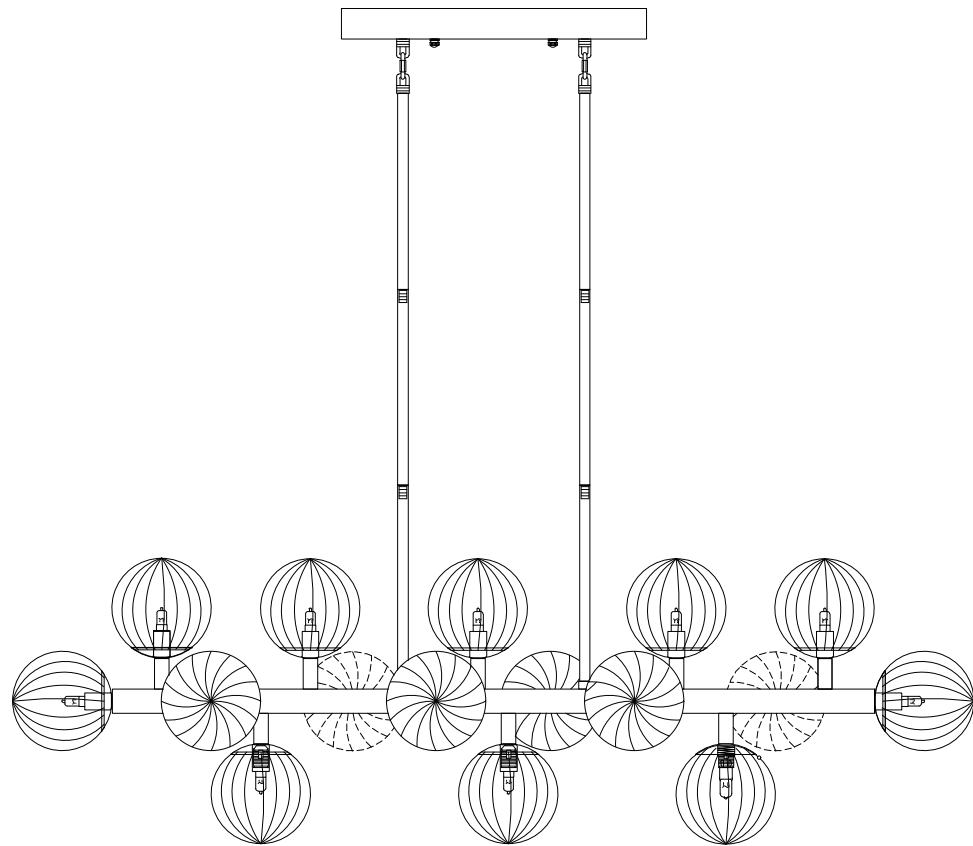

Scan for Installation Video


### TOOLS REQUIRED




Ladder



Pliers




Wire Strippers









Screwdrivers

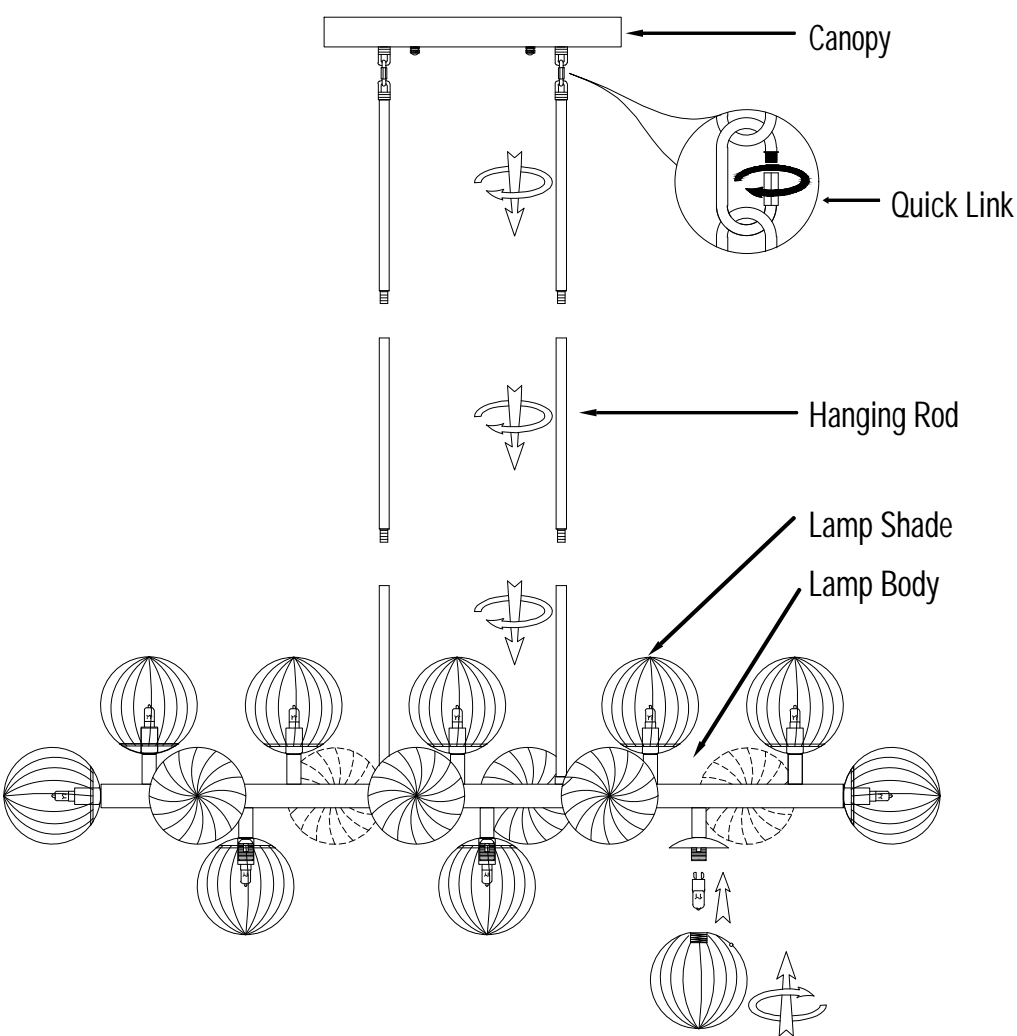1.PACKING LIST




2.INSTALLATION KIT

<b>AA</b>  Wire Nut 3×	<b>BB</b>  Cap Nut 2×	<b>CC</b>  Gloves 1×
<b>DD</b>  Mounting Bracket 1×	<b>EE</b>  Canopy Screw 2×	<b>FF</b>  Outlet Box Screw with Washer 2×


- Note:
- 1. Some extra hardware may be included. The quantity listed above is the number required for installation.
  - 2. Parts "BB,DD,EE,"have already been pre-installed together with canopy.

3.FIXTURE ASSEMBLY

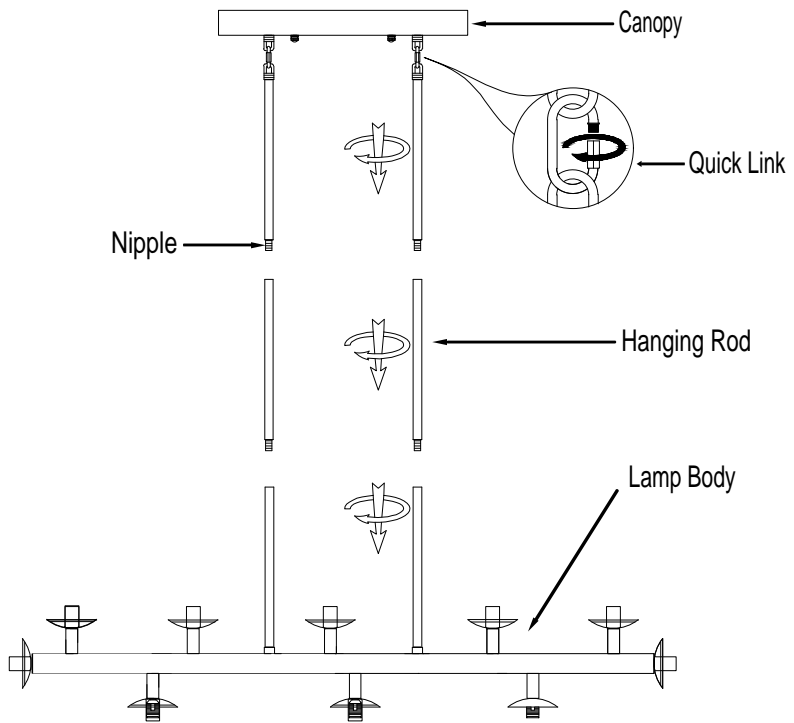


- Step 1. Fix the Hanging Rod with Nipples.
- Step 2. Pass the Main Wire through the Hanging Rod and Canopy.
- Step 3. Fix the Hanging Rod on the lamp body.
- Step 4. Connect the Hanging Rod and Canopy with Quick Link.


4.MOUNTING AND WIRING

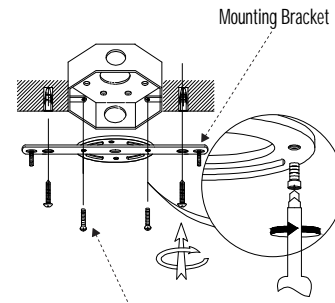

**1. Mount the Mounting Plate**  
**STEP 1:** Loosen the cap nut (BB) from canopy, take out the Mounting Bracket (DD).  
**STEP 2:** Take off the screws from outlet box, secure the Mounting Bracket onto the box with screws taken off or Outlet Box Screw With Washer ( FF ).

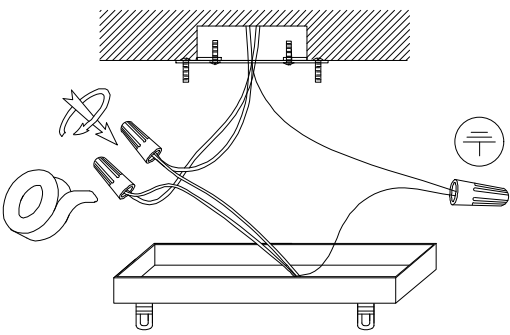

**2. Connect the Wires**  
**STEP 1:** Connect the wires from the fixture to the house supply wires with wire nuts (AA), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.  
**STEP 2:** Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

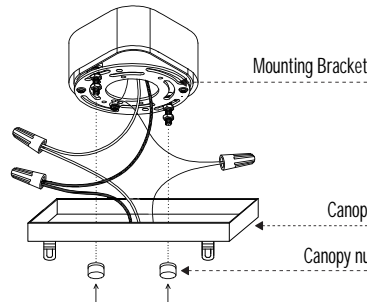

**3. Fix the Canopy**  
Fix the canopy onto the Mounting Bracket with cap nuts (BB).