

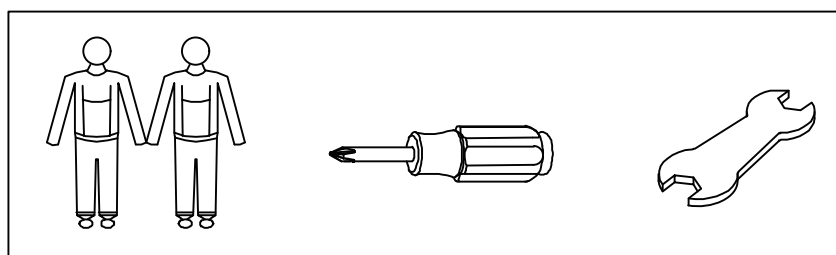



Coat Rack






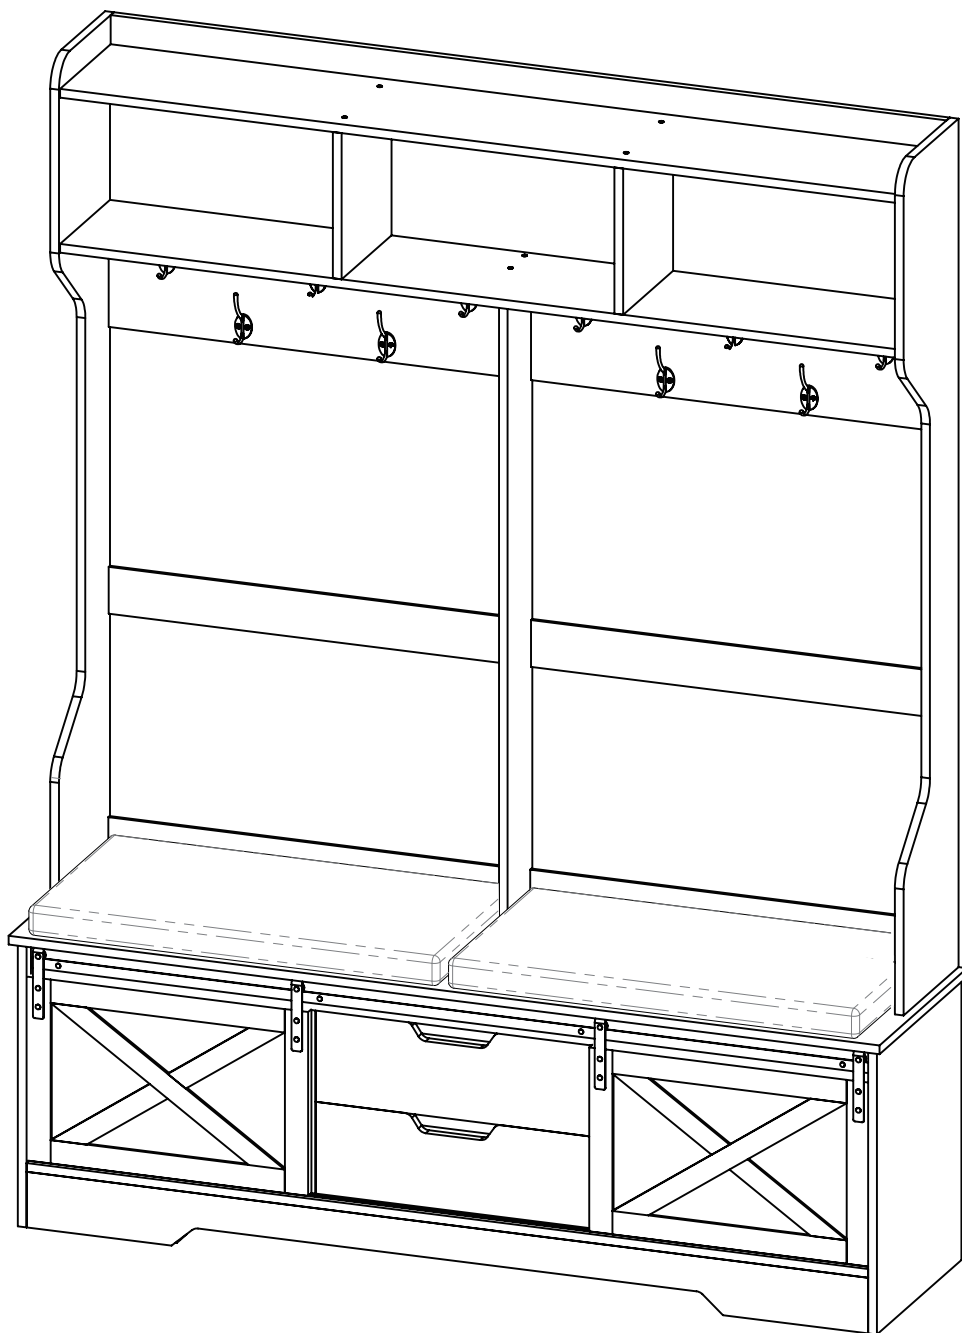


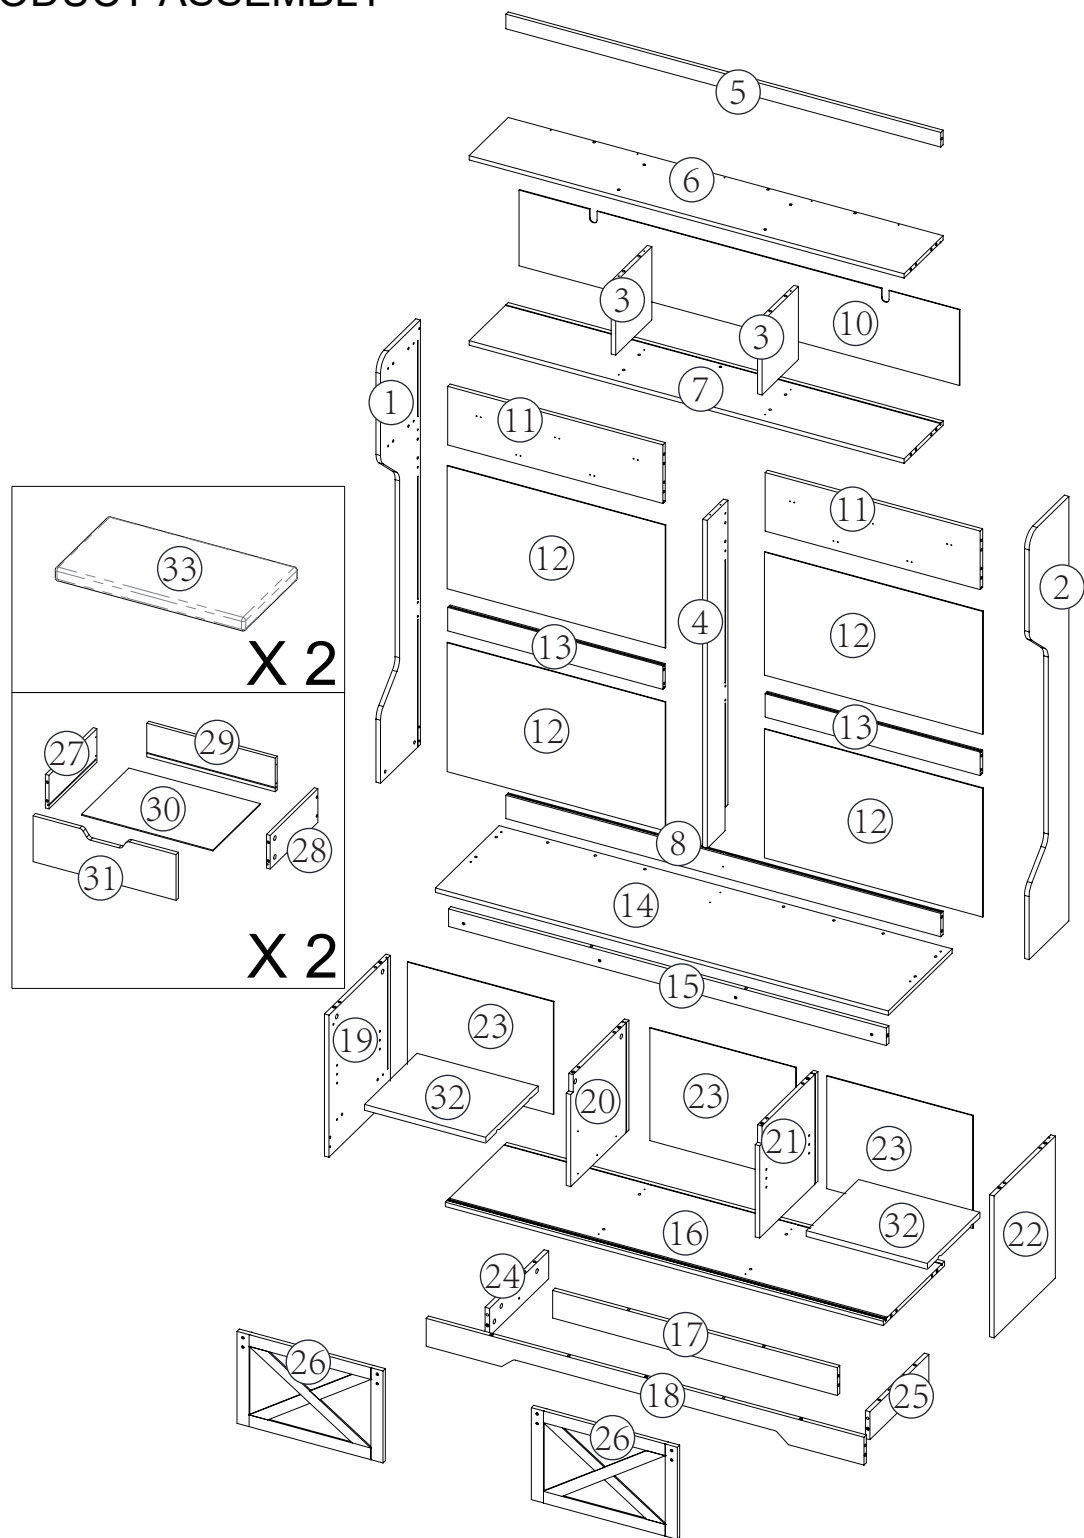

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

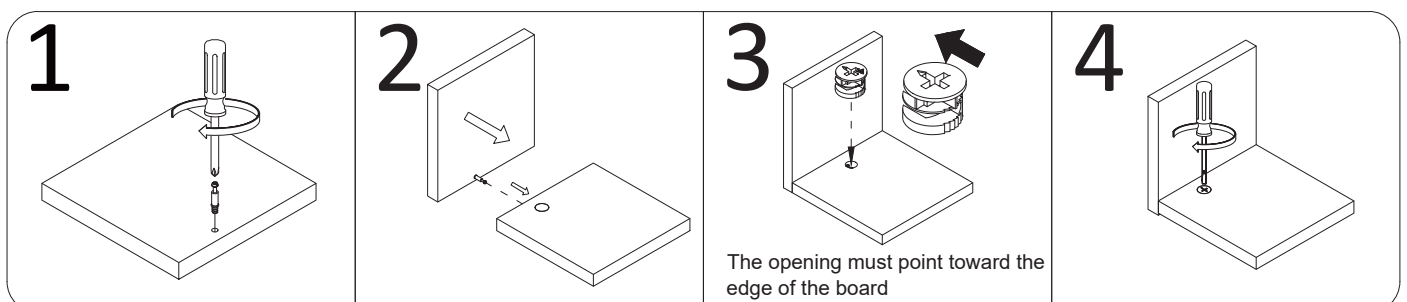

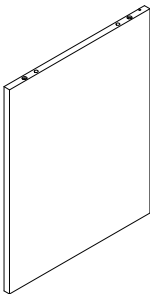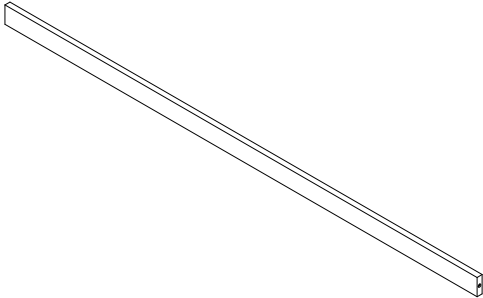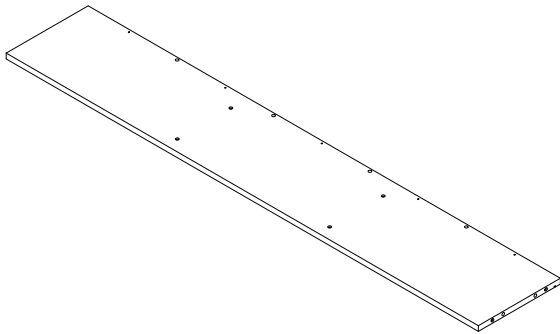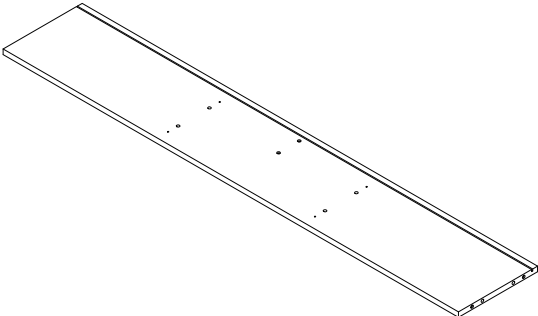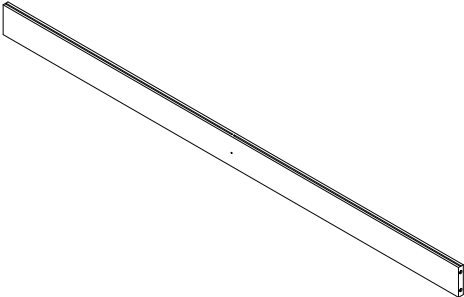1  x1	2  x1
3  x2	4  x1
5  x1	6  x1
7  x1	8  x1


10

×1

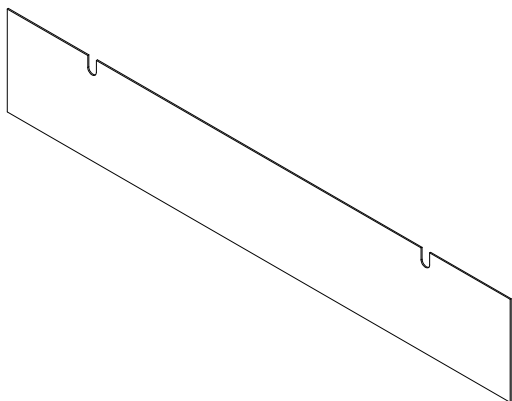


11

×2

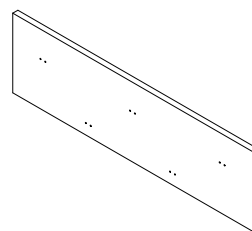


12

×4

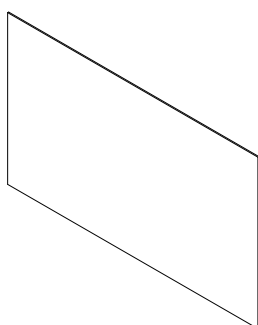


13

×2

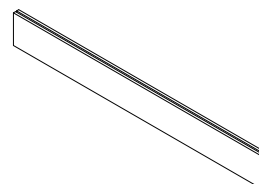


14

×1

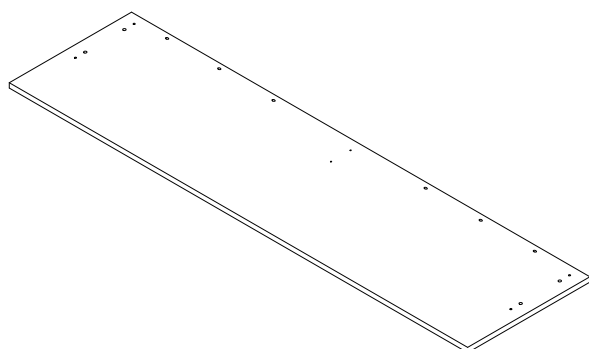


15

×1

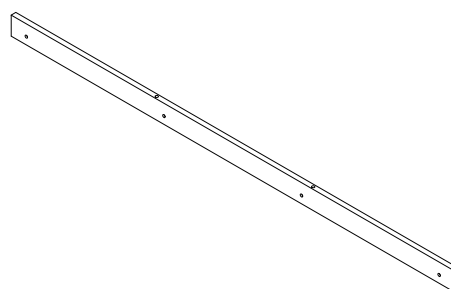


16

×1

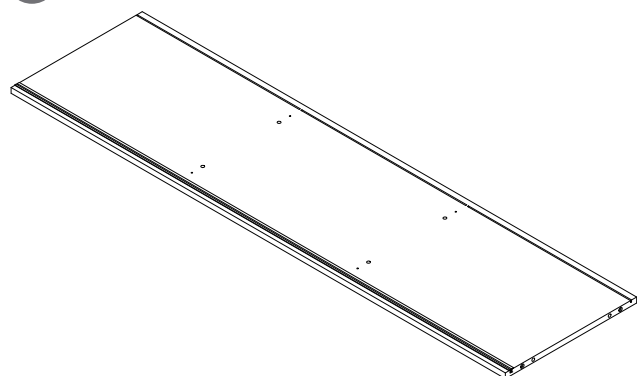


17

×1

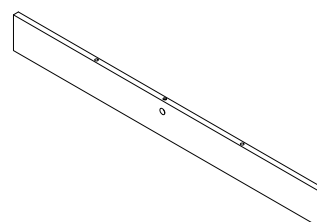


18

×1

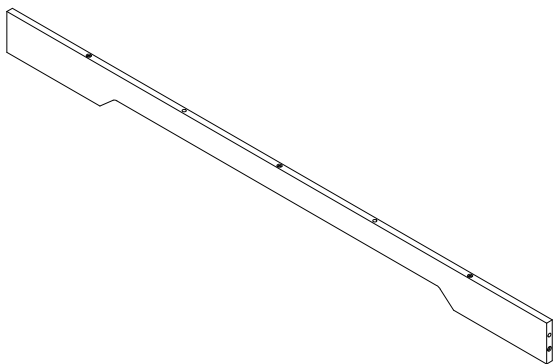


19

×1

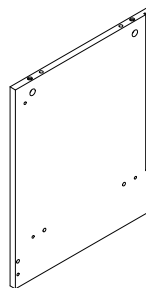


20

×1

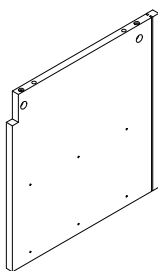


21

×1

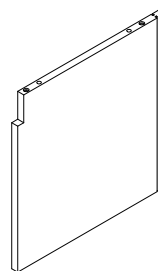


22

×1

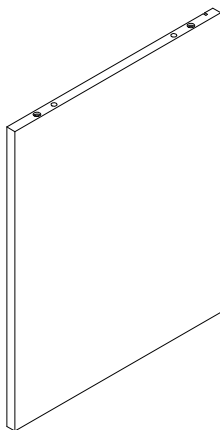


23

×3

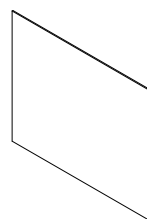


24

×1

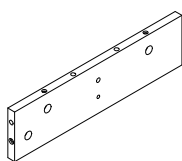


25

×1

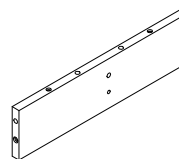


26

×2

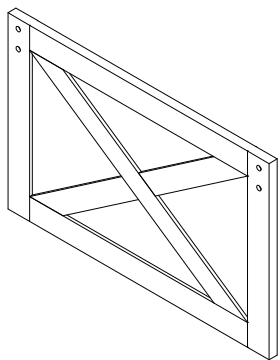


27

×2

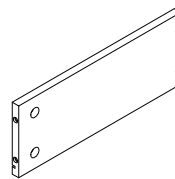


28

×2

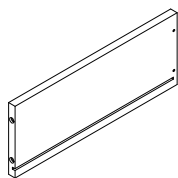


29

×2

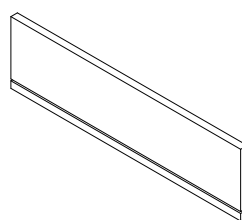


30

×2

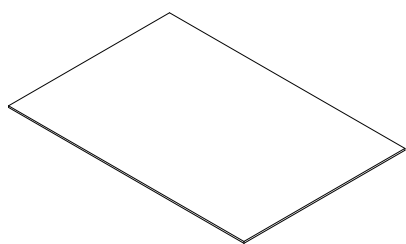


31

×2

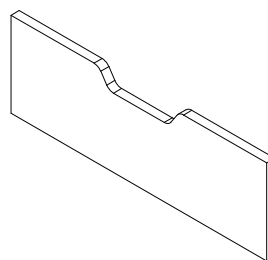


32

×2

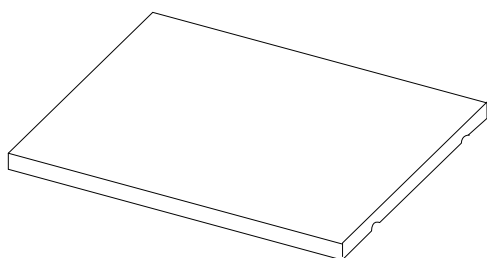

33






















×2

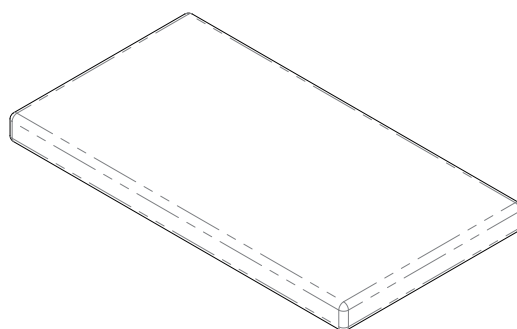

Components - Fittings

Please check you have all the panels listed below


Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

A	 Ø 6*35	60 pcs +5 pcs	B		68 pcs +5 pcs
C	 Ø 8*30	60 pcs +5 pcs	D	 Ø 4*12	13 pcs +1 pc
E	 Ø 3*12	20 pcs +2 pcs	F	 Ø 4*12	8 pcs
G	 Ø 8*50	4 pcs	H	 Ø 8*50	2 pcs
I	 2 pcs	10 sets	J		4 pcs
K		4 pcs	L		8 pcs
M		1 pc	N		4 pcs
O	 Ø 6*45	4 pcs	P	 Ø 10*10	4 pcs
Q	 34 sets +3 sets		R	 2 sets	
S		1 pc	T		4 pcs
U		21 pcs +2 pcs	V		8 pcs
CL	 CL	2 pcs	DL	 DL	2 pcs
CR	 CR	2 pcs	DR	 DR	2 pcs

PRODUCT ASSEMBLY


Step 1

A		10 pcs
---	---	--------

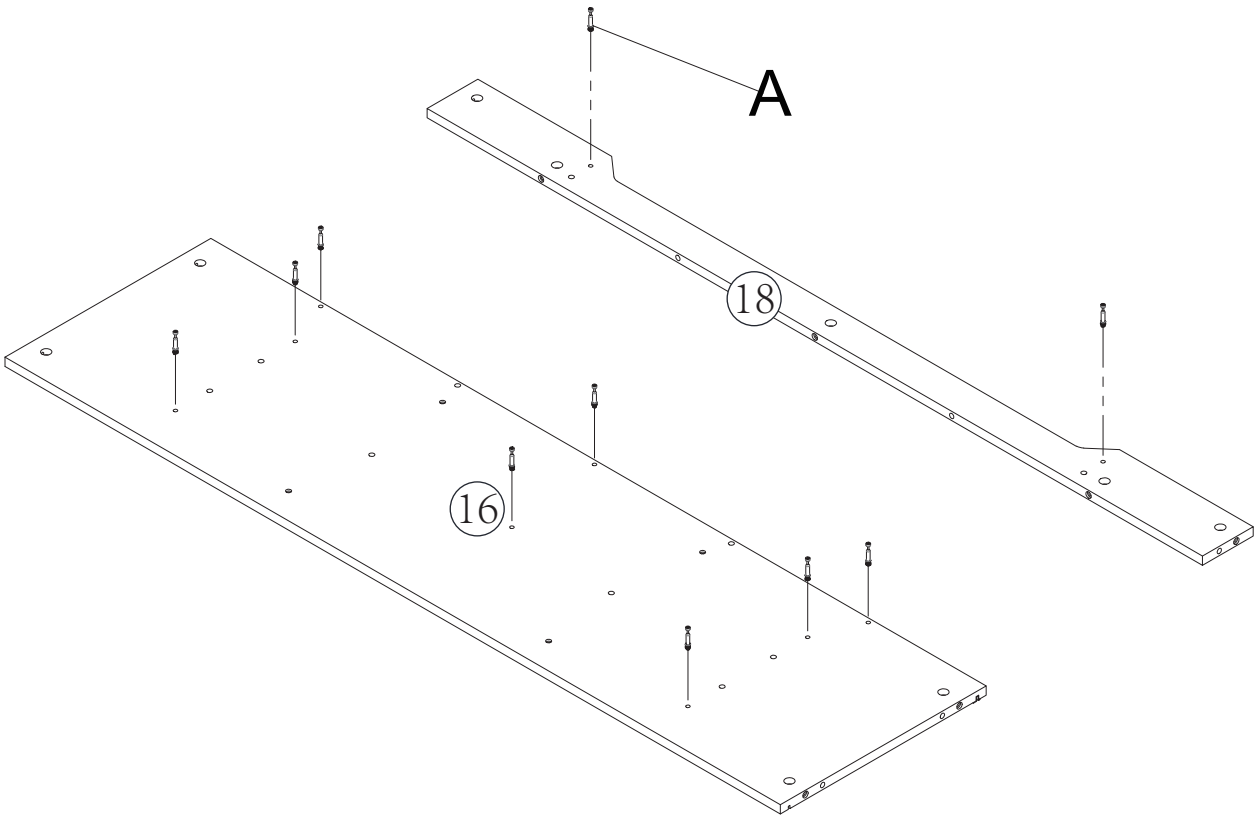


Step 2

S		1 pc
U		4 pcs

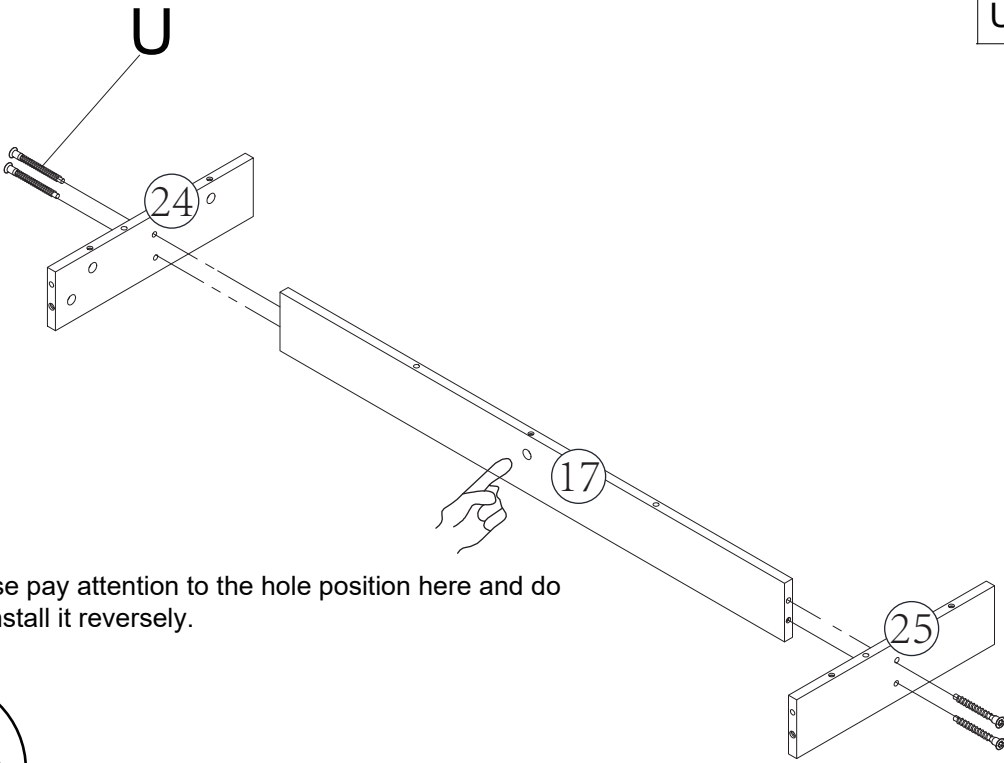


Please pay attention to the hole position here and do not install it reversely.

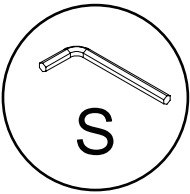

PRODUCT ASSEMBLY


Step 3

B		2 pcs
C		2 pcs

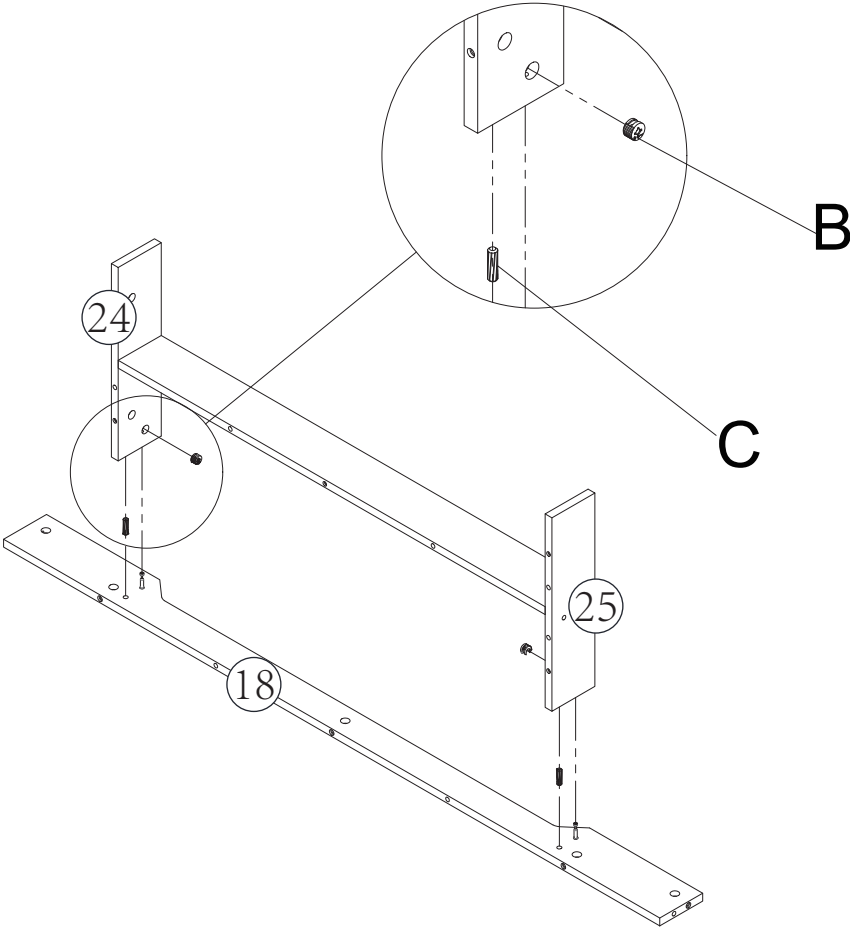


Step 4

B		8 pcs
C		8 pcs

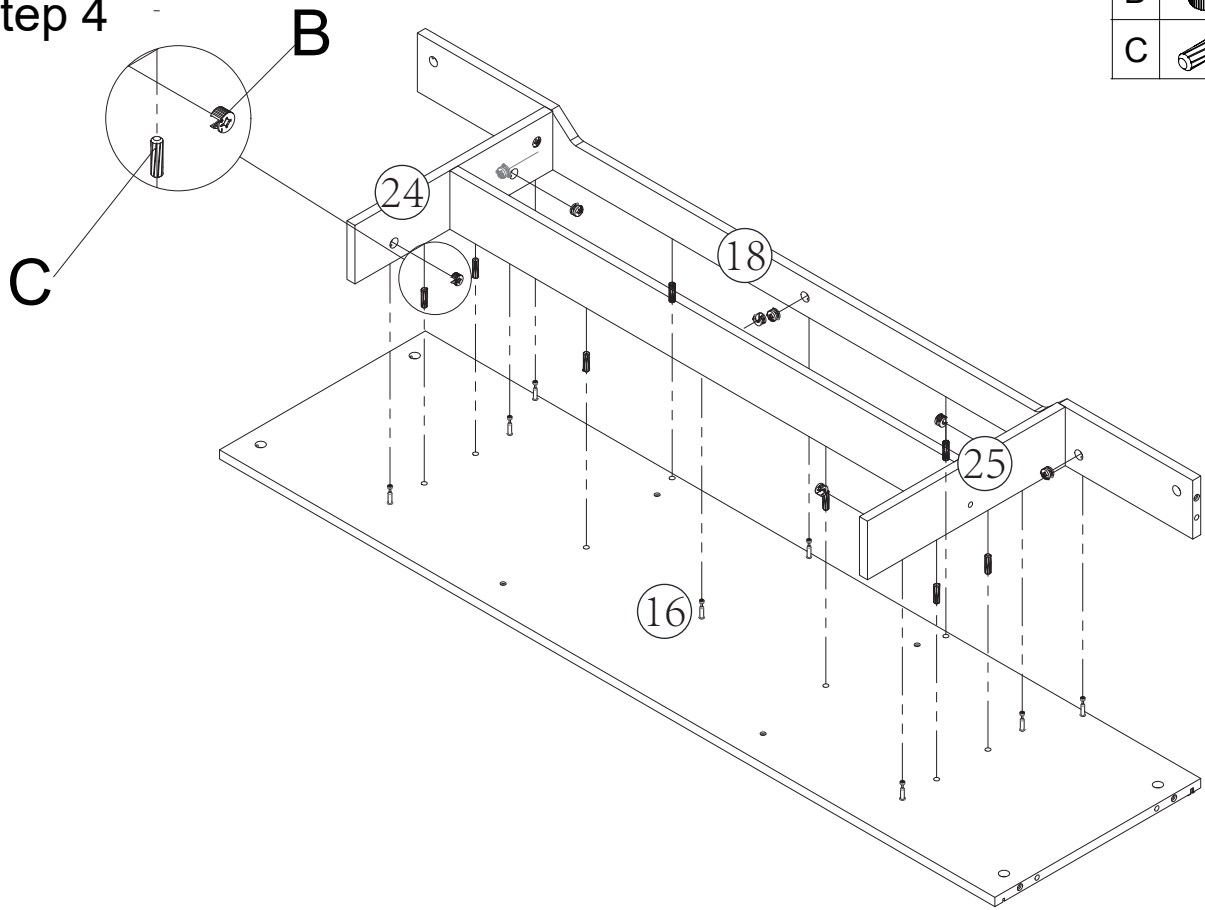

PRODUCT ASSEMBLY


Step 5

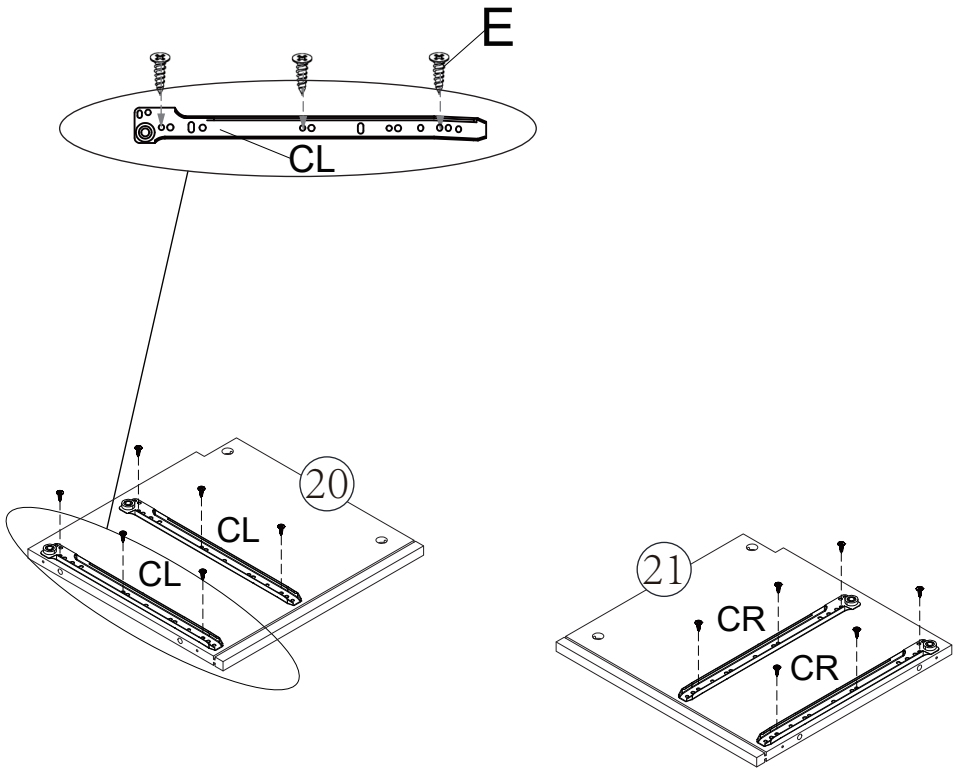

E		12 pcs
CL		2 pcs
CR		2 pcs

Step 6

Please note there is a cutout here

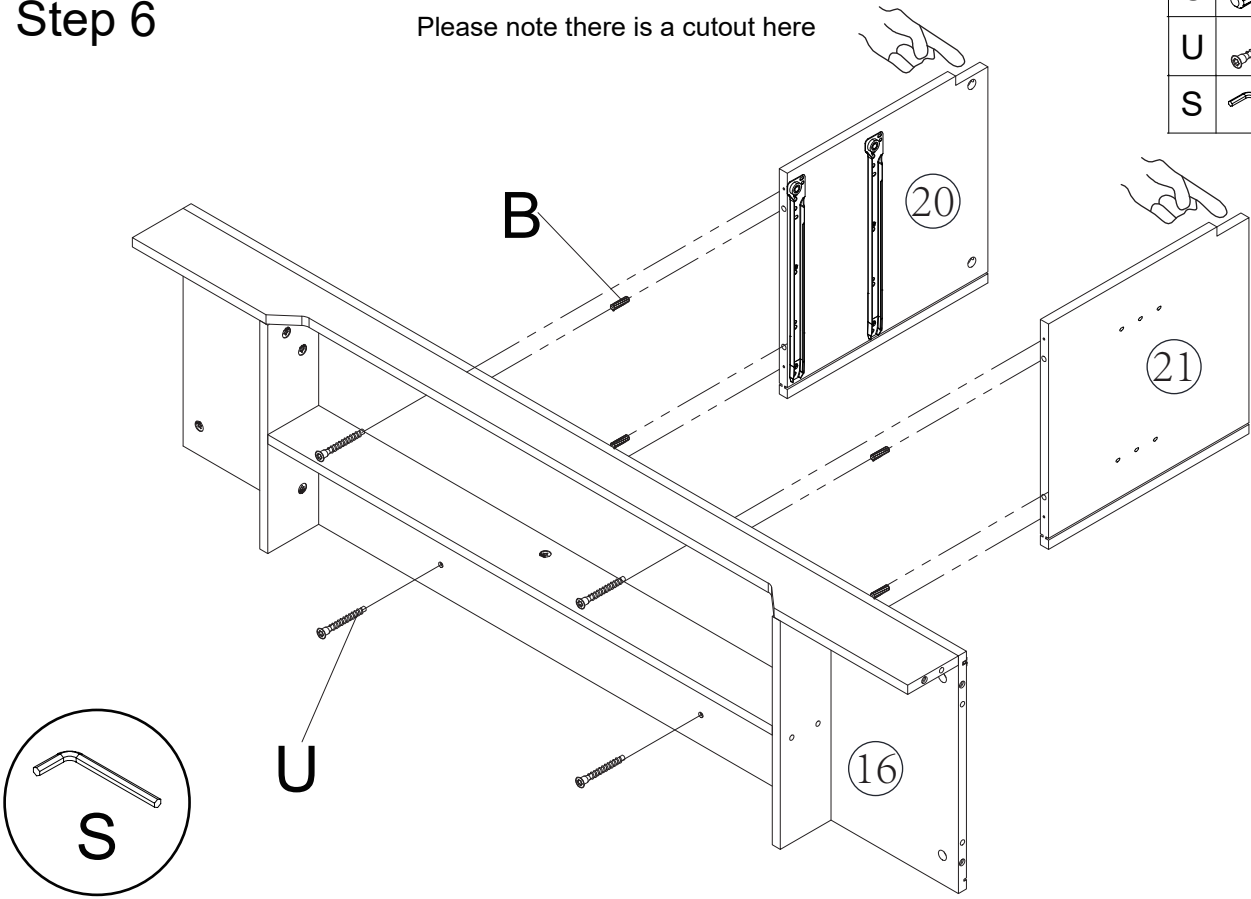


C		4 pcs
U		4 pcs
S		1 pc

PRODUCT ASSEMBLY


Step 7

A		10 pcs
---	---	--------

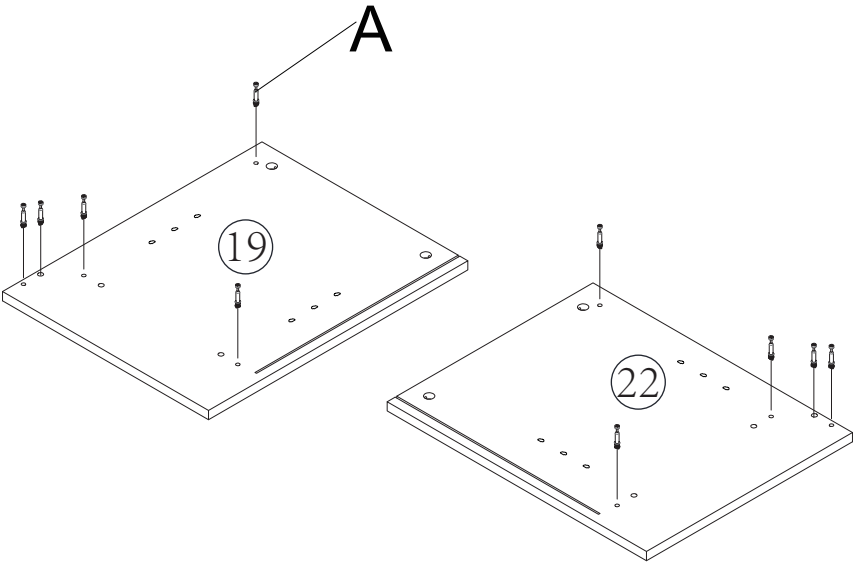

Step 8


M		1 pc
N		4 pcs

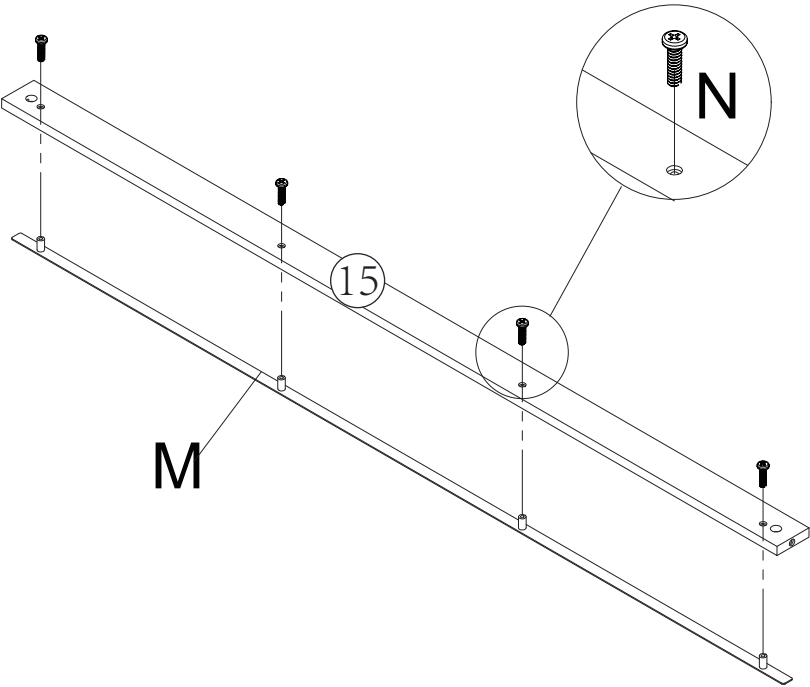


PRODUCT ASSEMBLY

Step 9

B		10 pcs
C		4 pcs

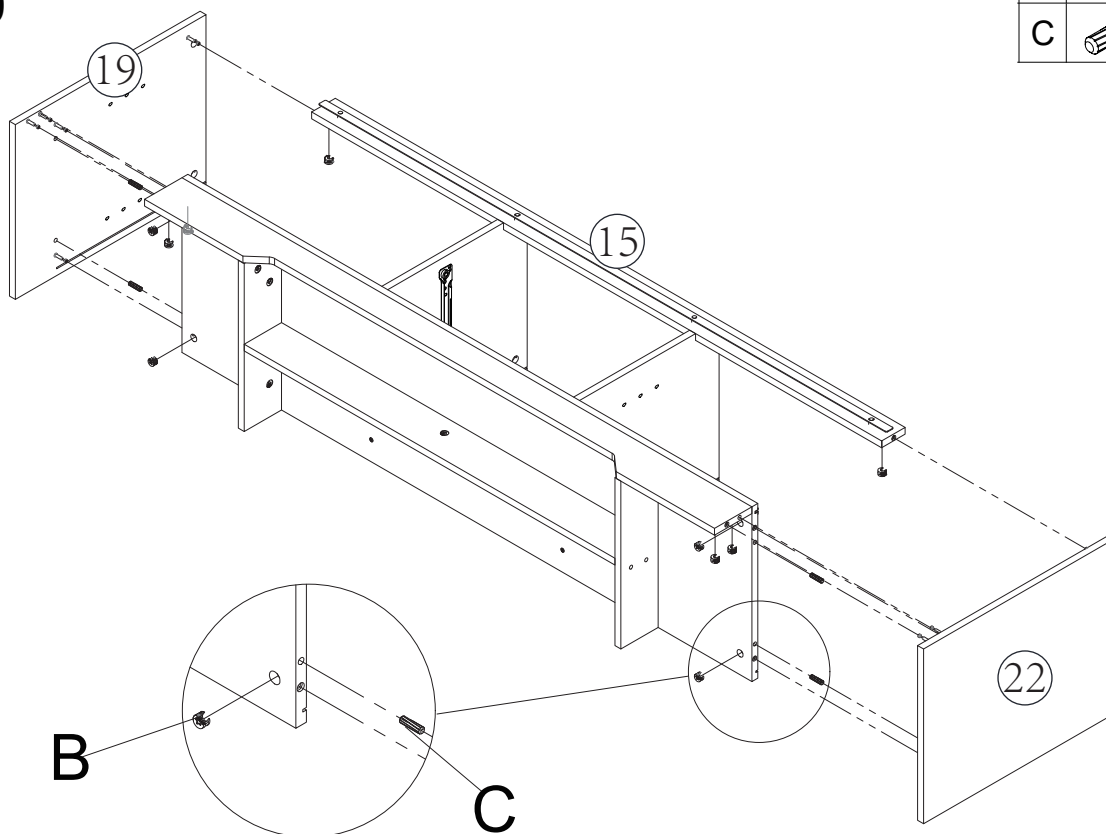


Step 10

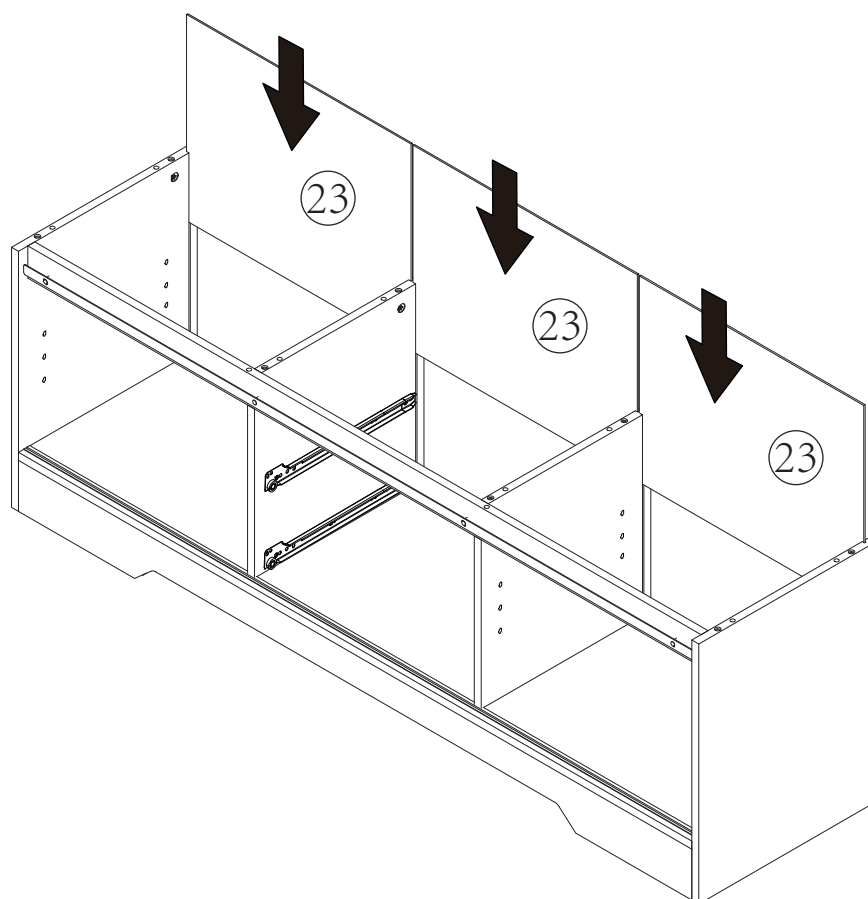

PRODUCT ASSEMBLY


Step 11

A		8 pcs
---	---	-------

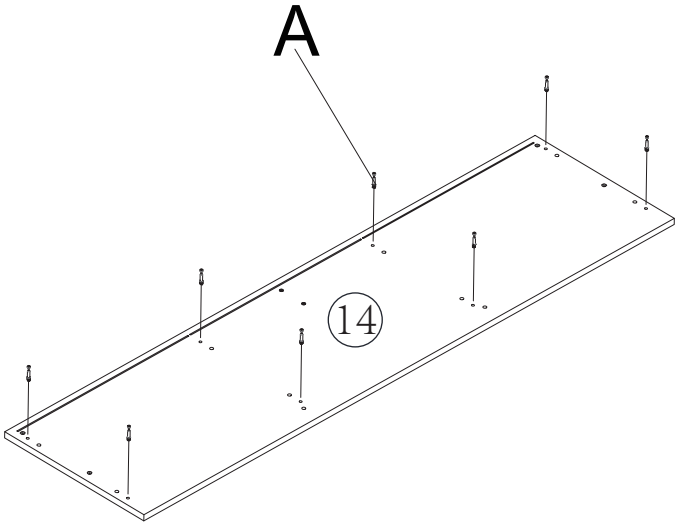


Step 12

A		2 pcs
B		8 pcs
C		18 pcs

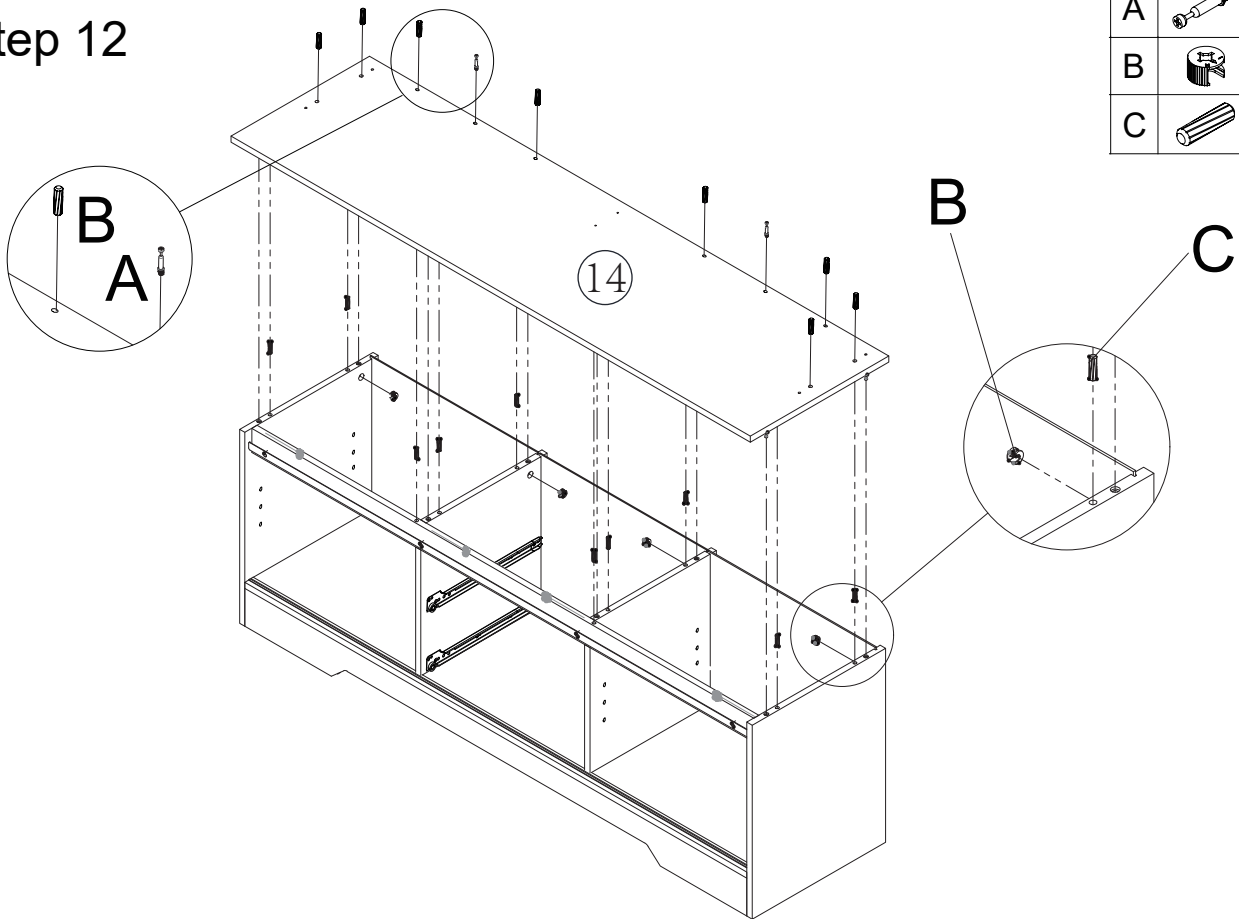

Step 13

I		2 pcs	10 sets
---	---	-------	---------

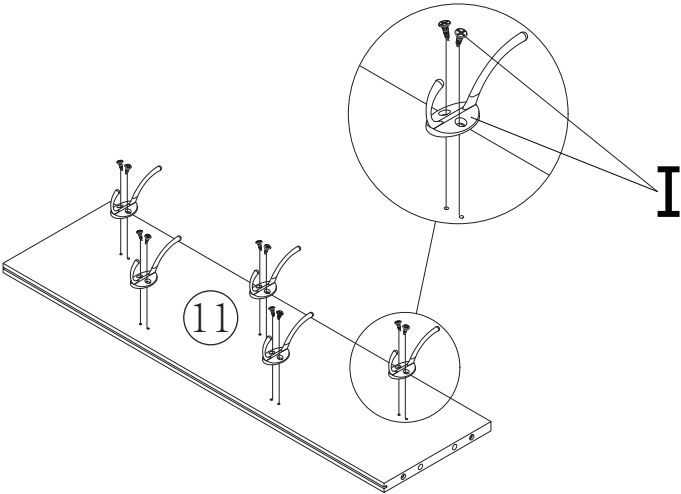


X 2

Step 14

B		4 pcs
G		4 pcs
H		2 pcs

Please pay attention to the installation direction of part 11

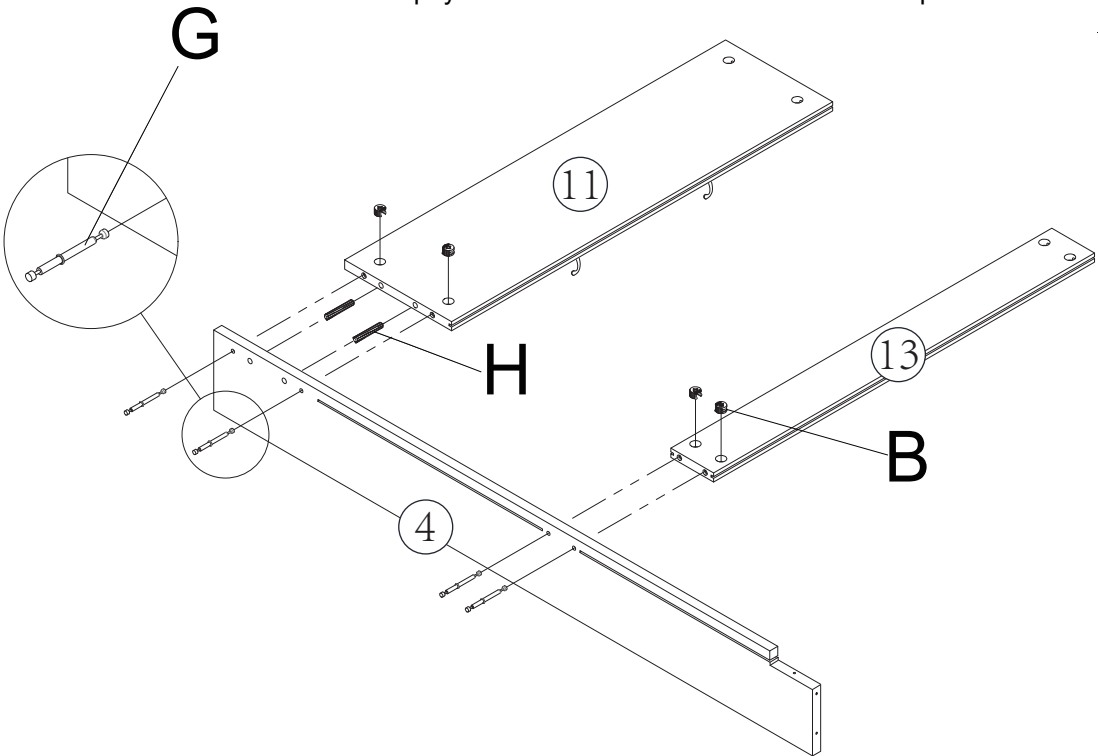


PRODUCT ASSEMBLY

Step 15

B



4 pcs

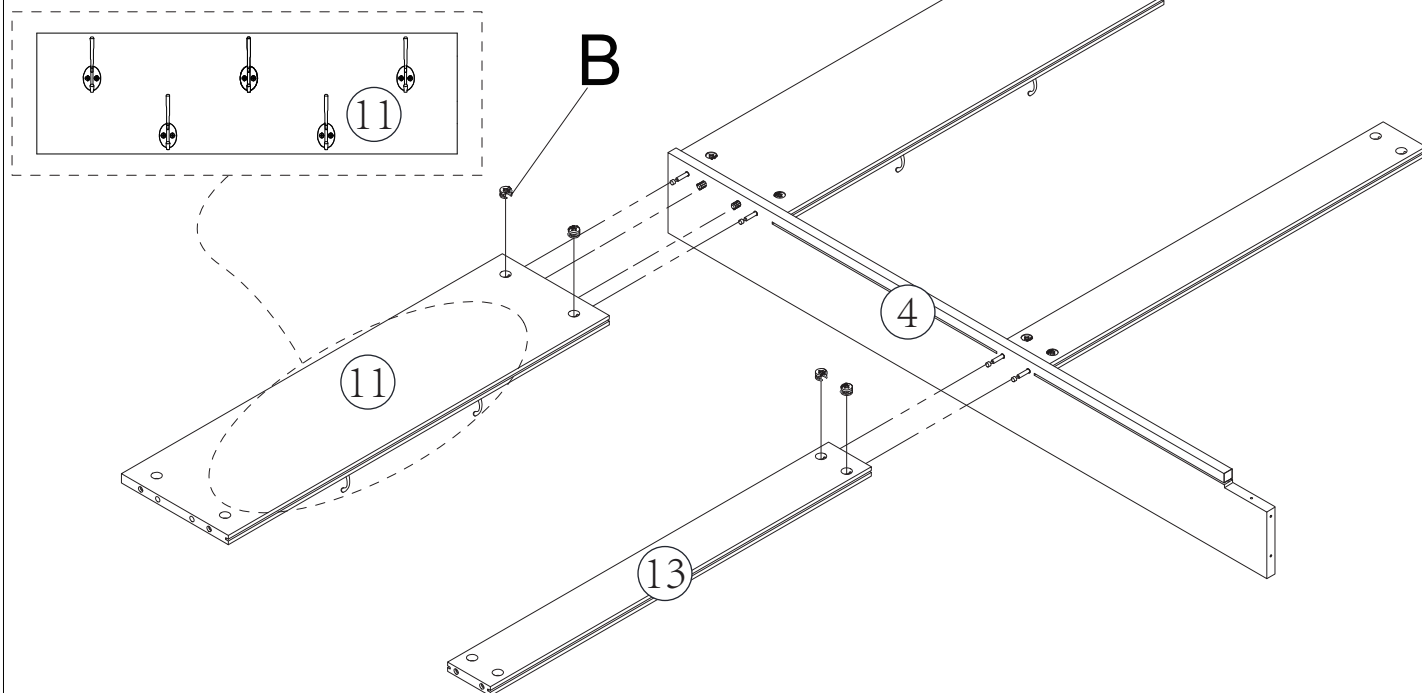


Please pay attention to the installation direction of part 11

Step 16

U




2 pcs

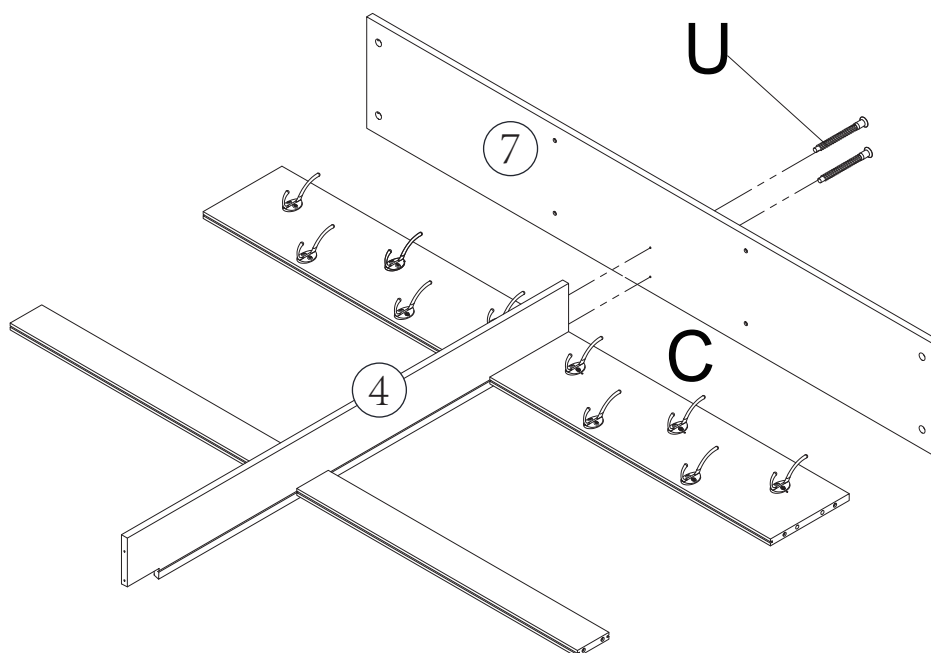

PRODUCT ASSEMBLY



Step 17

C		4 pcs
D		5 pcs

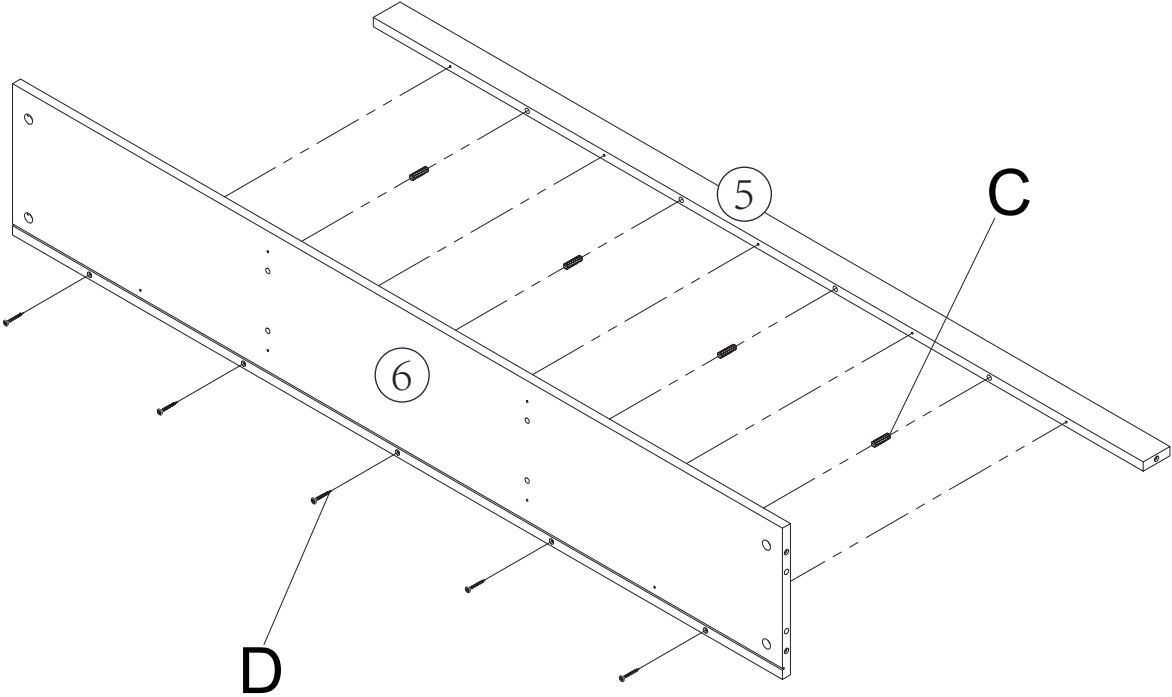

Step 18


C		4 pcs
U		4 pcs

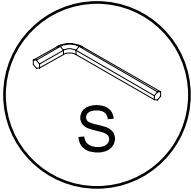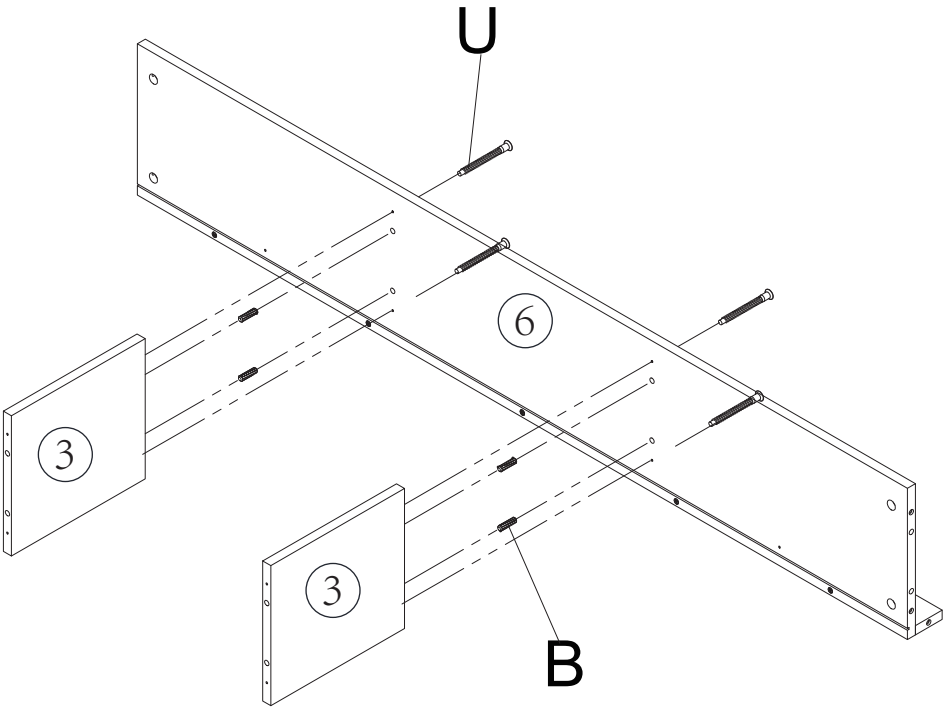

PRODUCT ASSEMBLY


Step 19

C		4 pcs
U		4 pcs

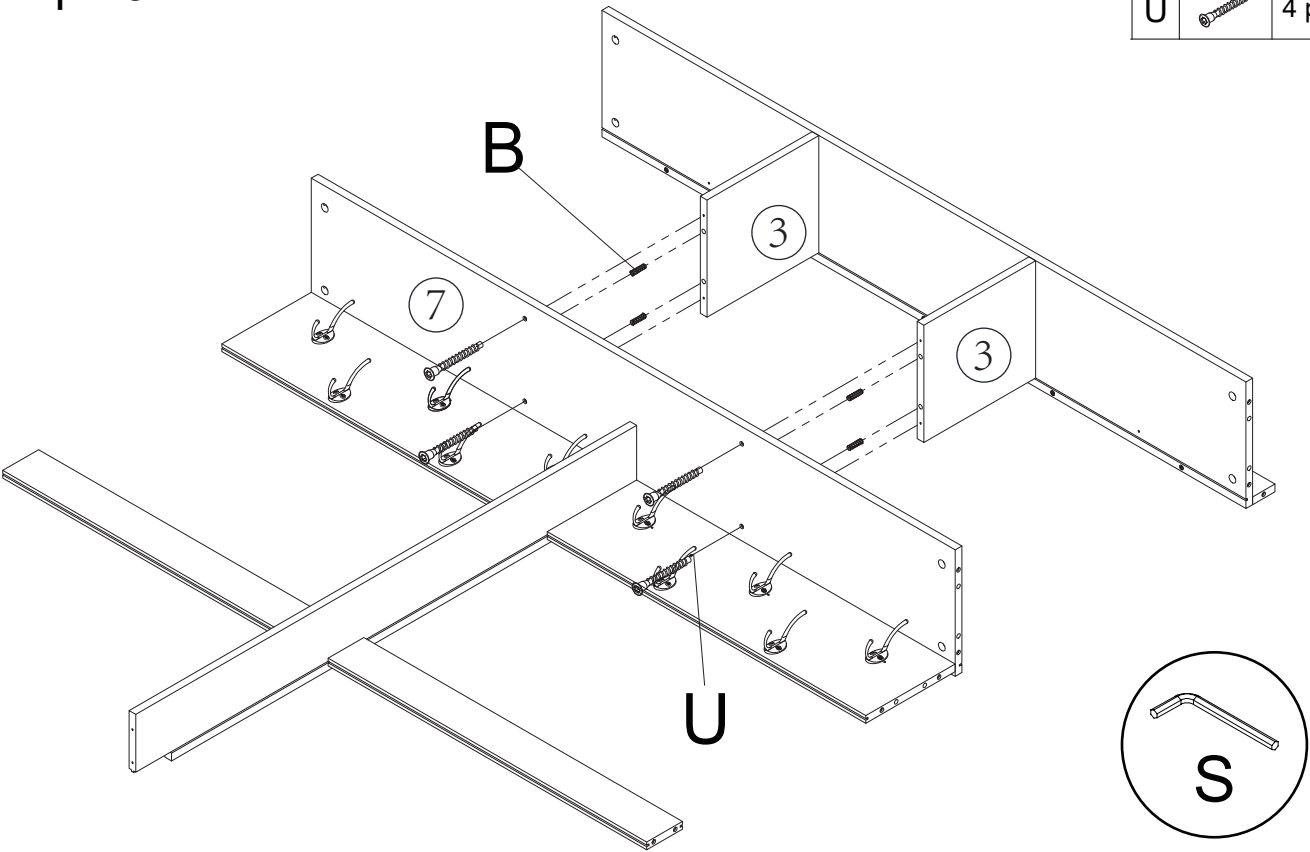


Step 20

U		1 pc
---	---	------

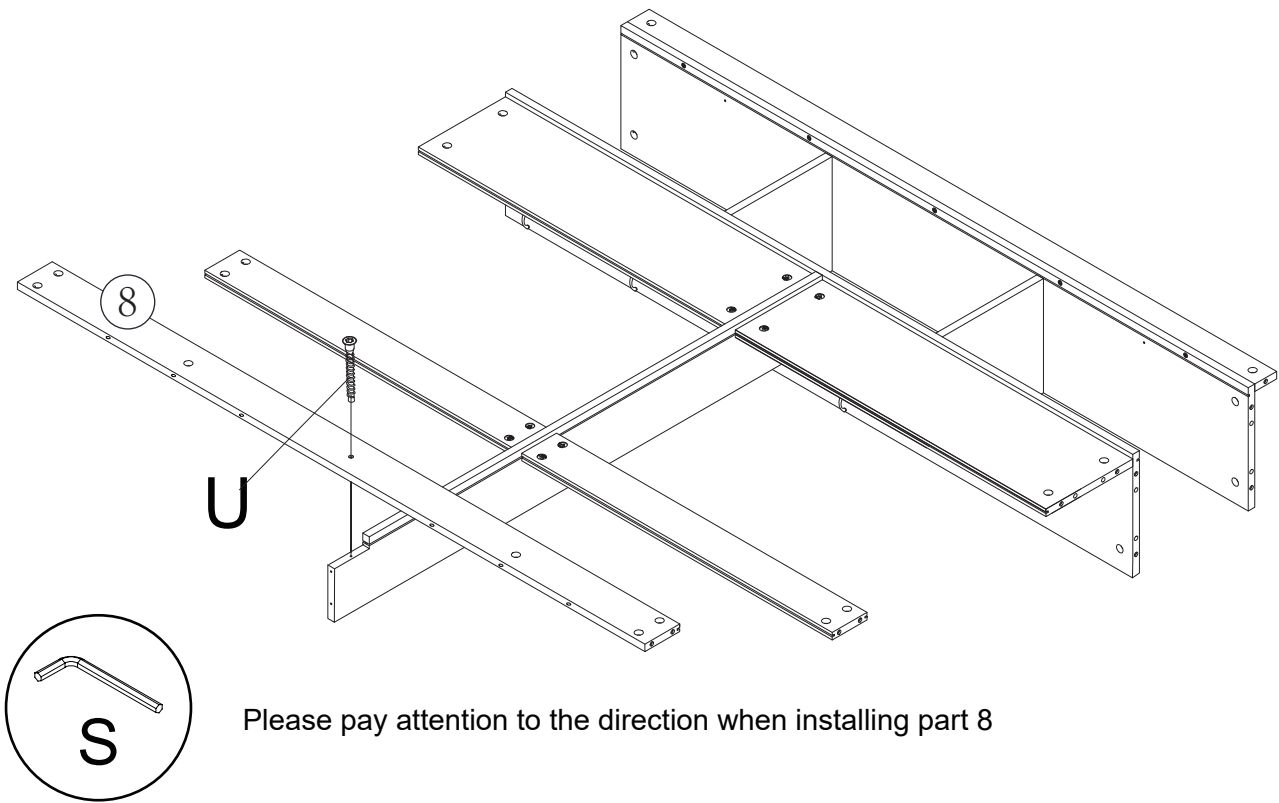


PRODUCT ASSEMBLY

Step 21

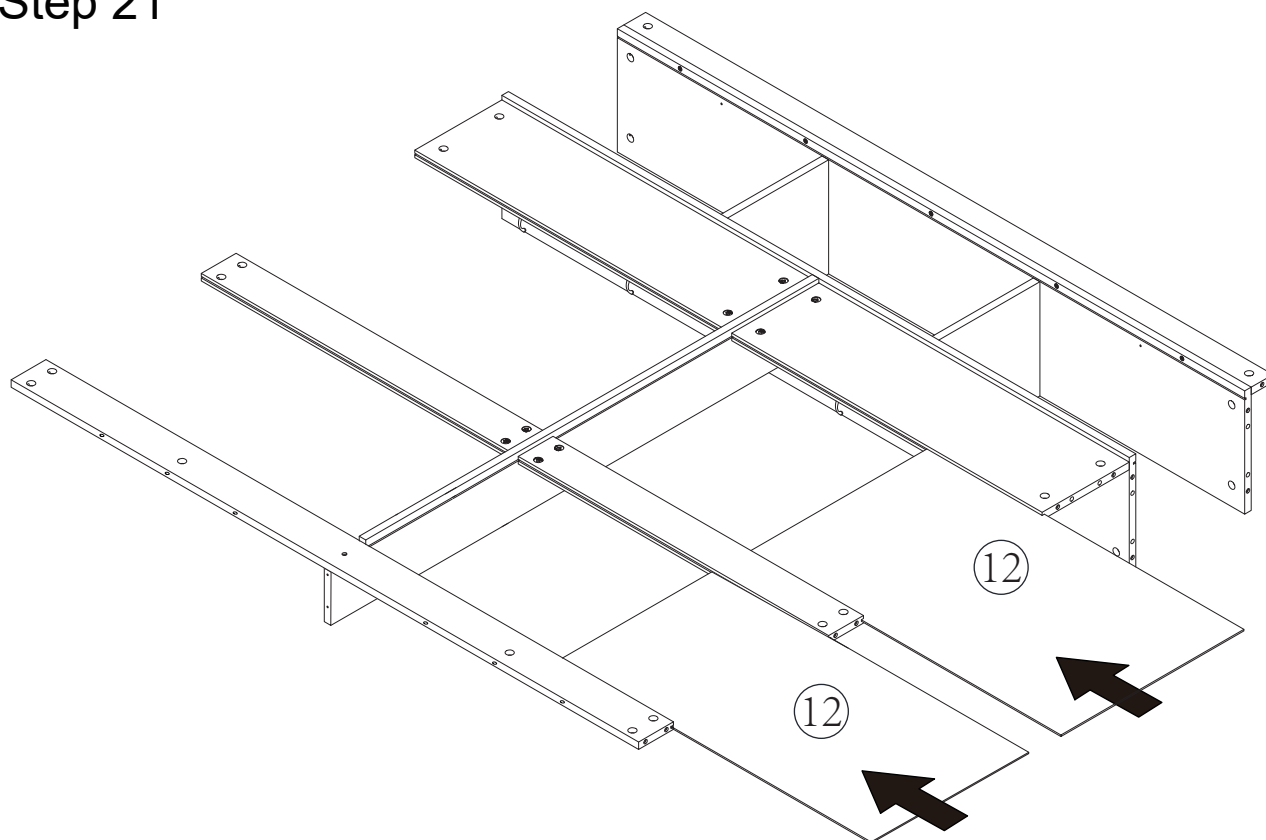

Step 22

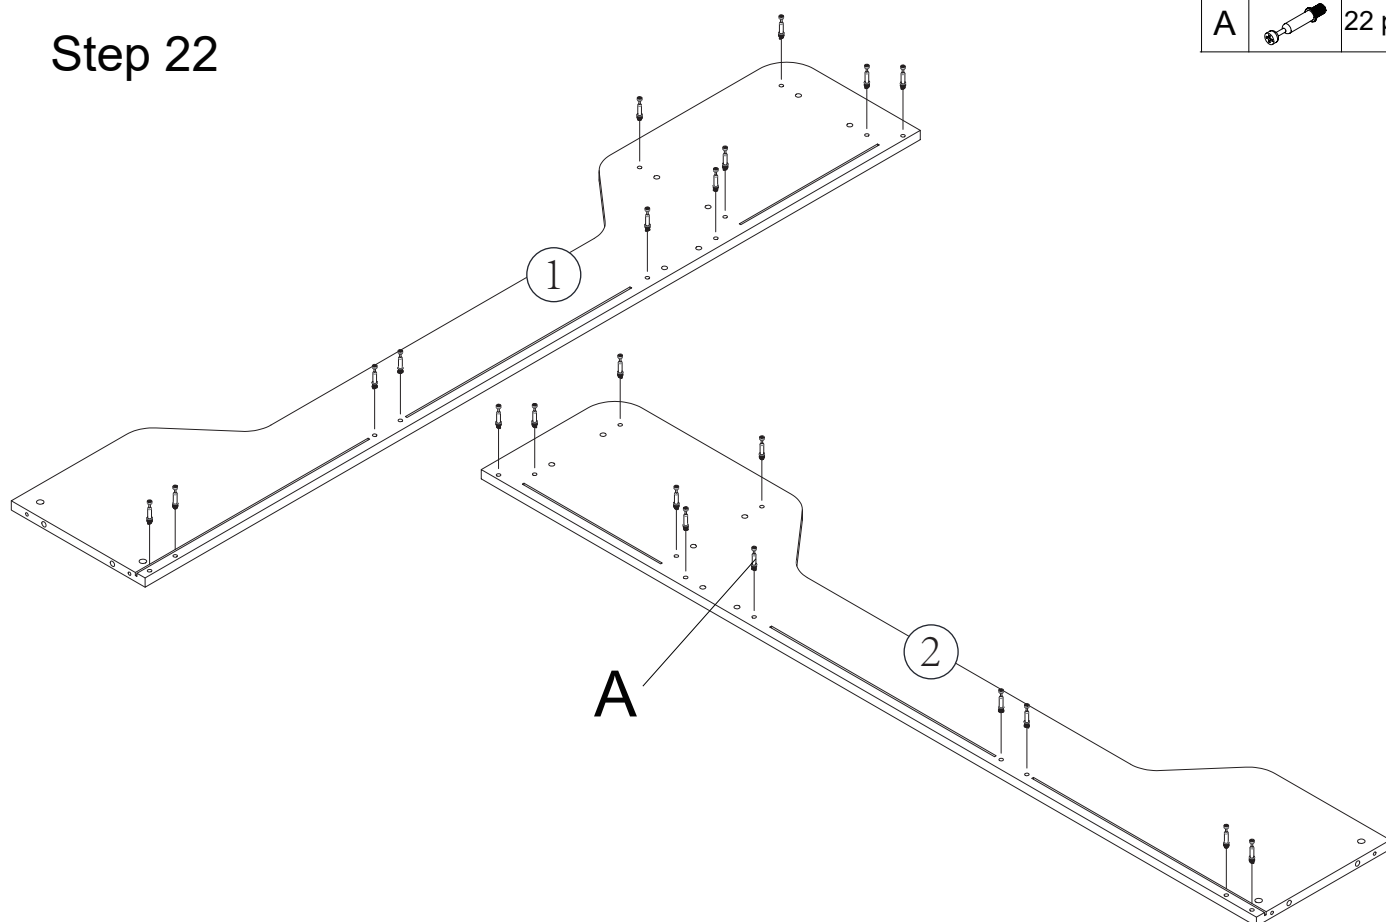


A  22 pcs


PRODUCT ASSEMBLY

Step 23

B		11 pcs
C		6 pcs

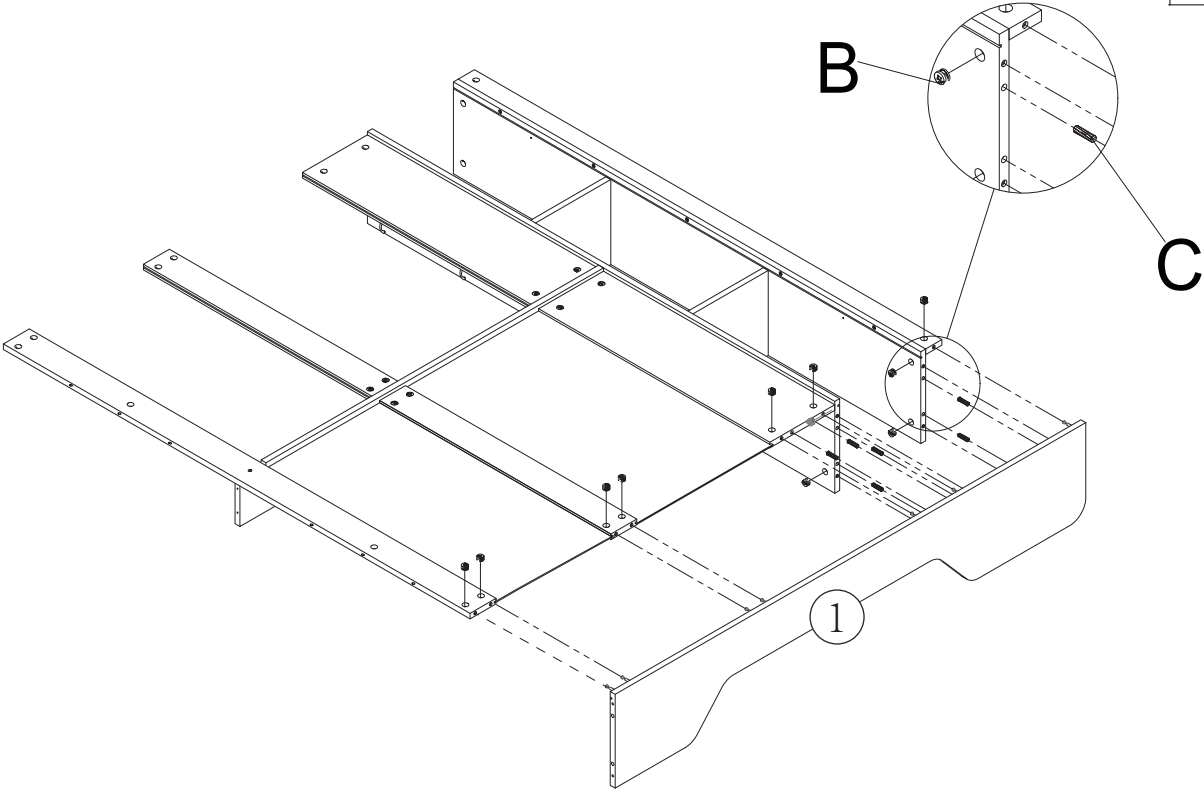


Step 24

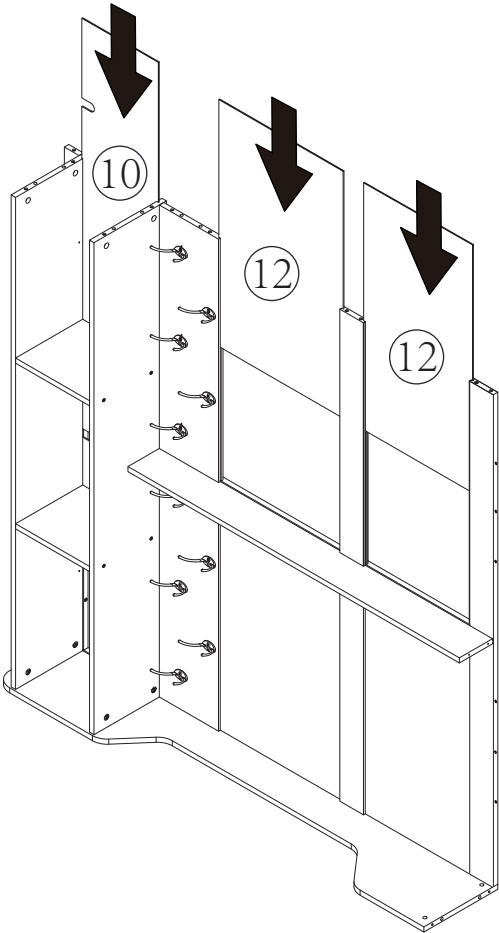

PRODUCT ASSEMBLY


Step 25

B		11 pcs
C		6 pcs

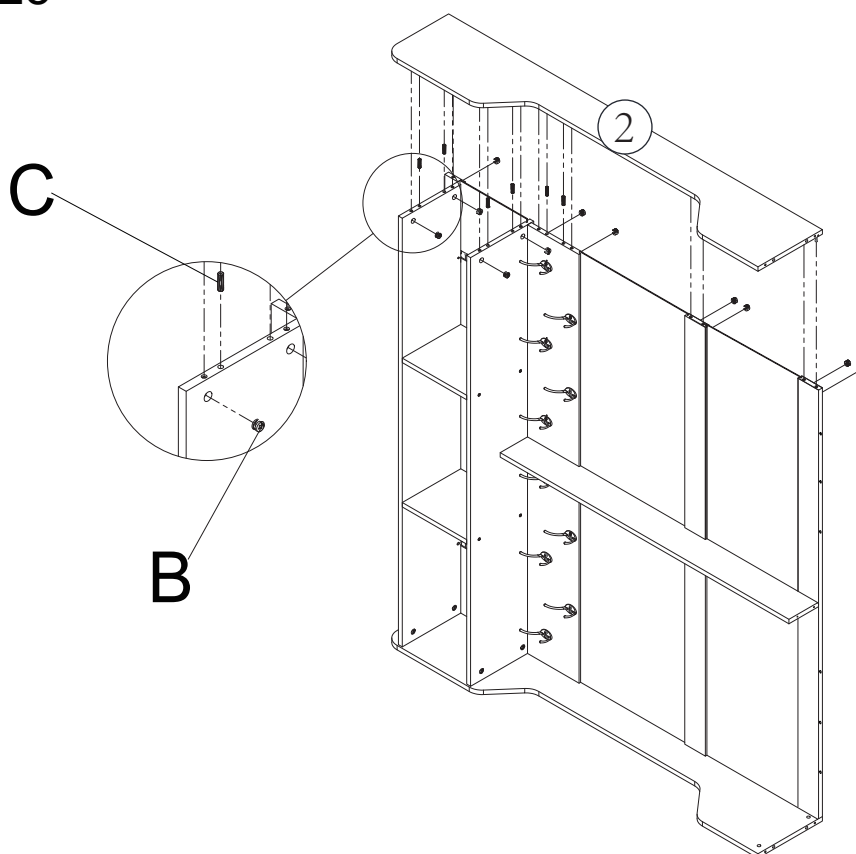

Step 26

Two people are required for this installation.

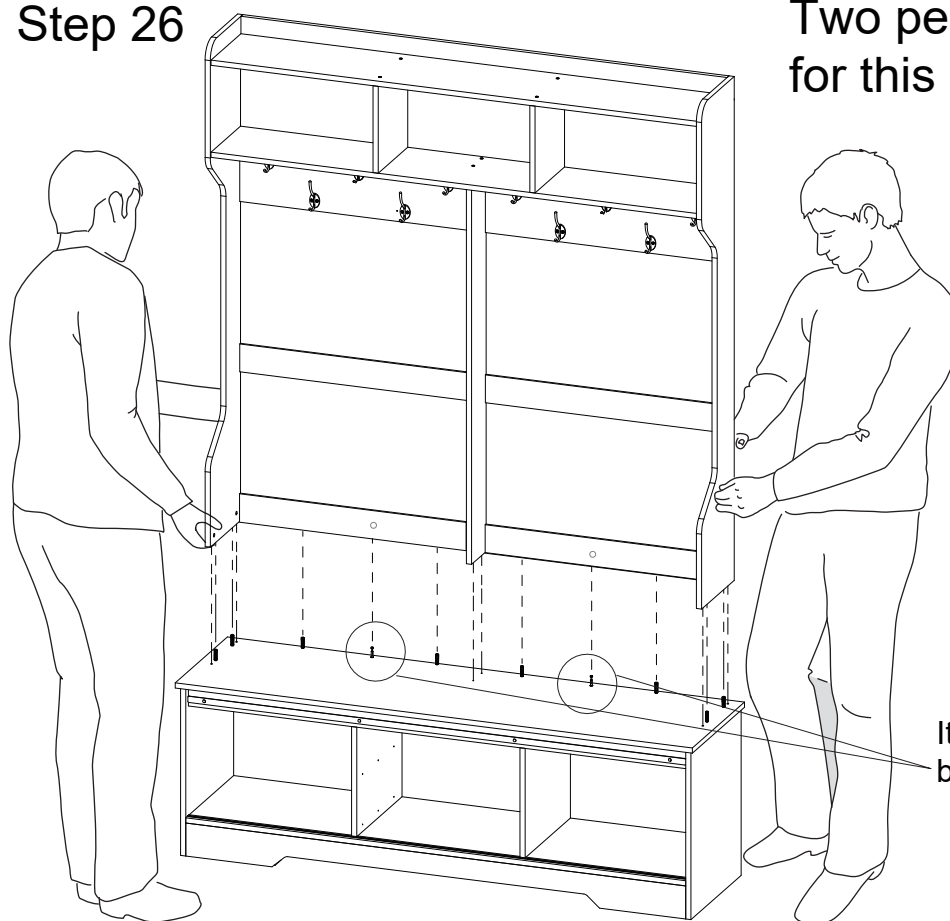


It can be positioned by the hole position in the back

PRODUCT ASSEMBLY

Step 27

When you screw,
you must have a person to hold the cabinet to avoid tipping;


B		2 pcs
---	---	-------

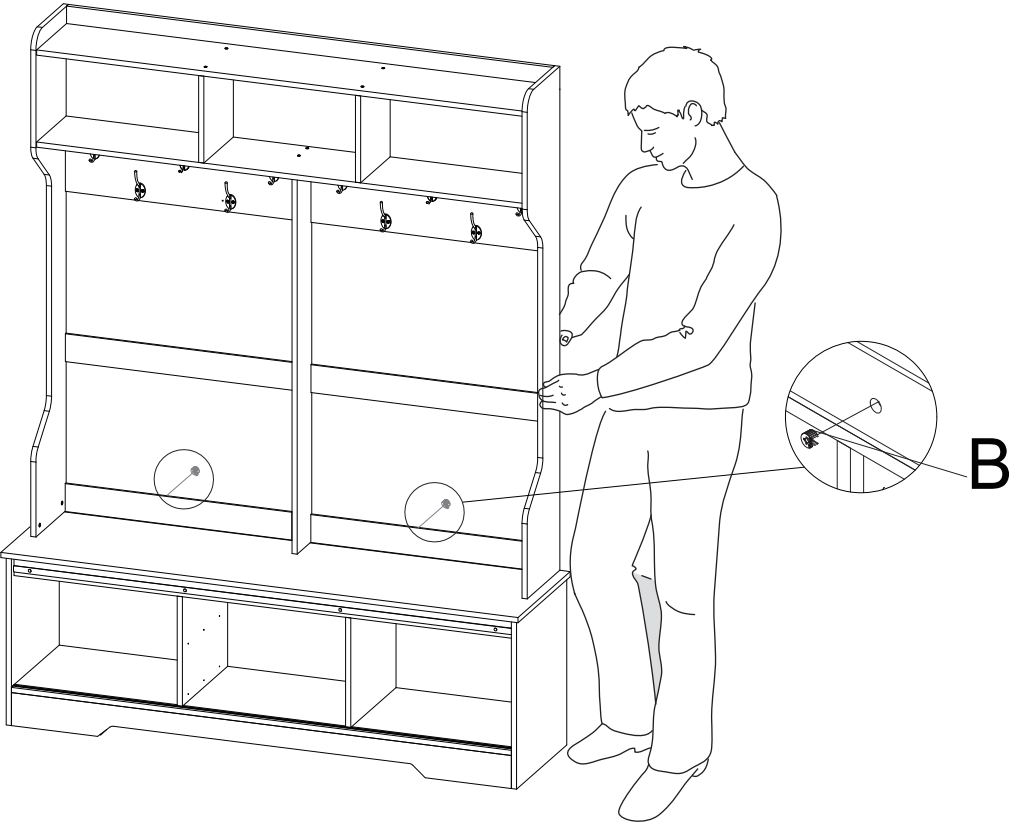

Step 28

When you screw,
you must have a person to hold the cabinet to avoid tipping;



U		2 pcs
O		4 pcs
P		4 pcs
T		4 pcs

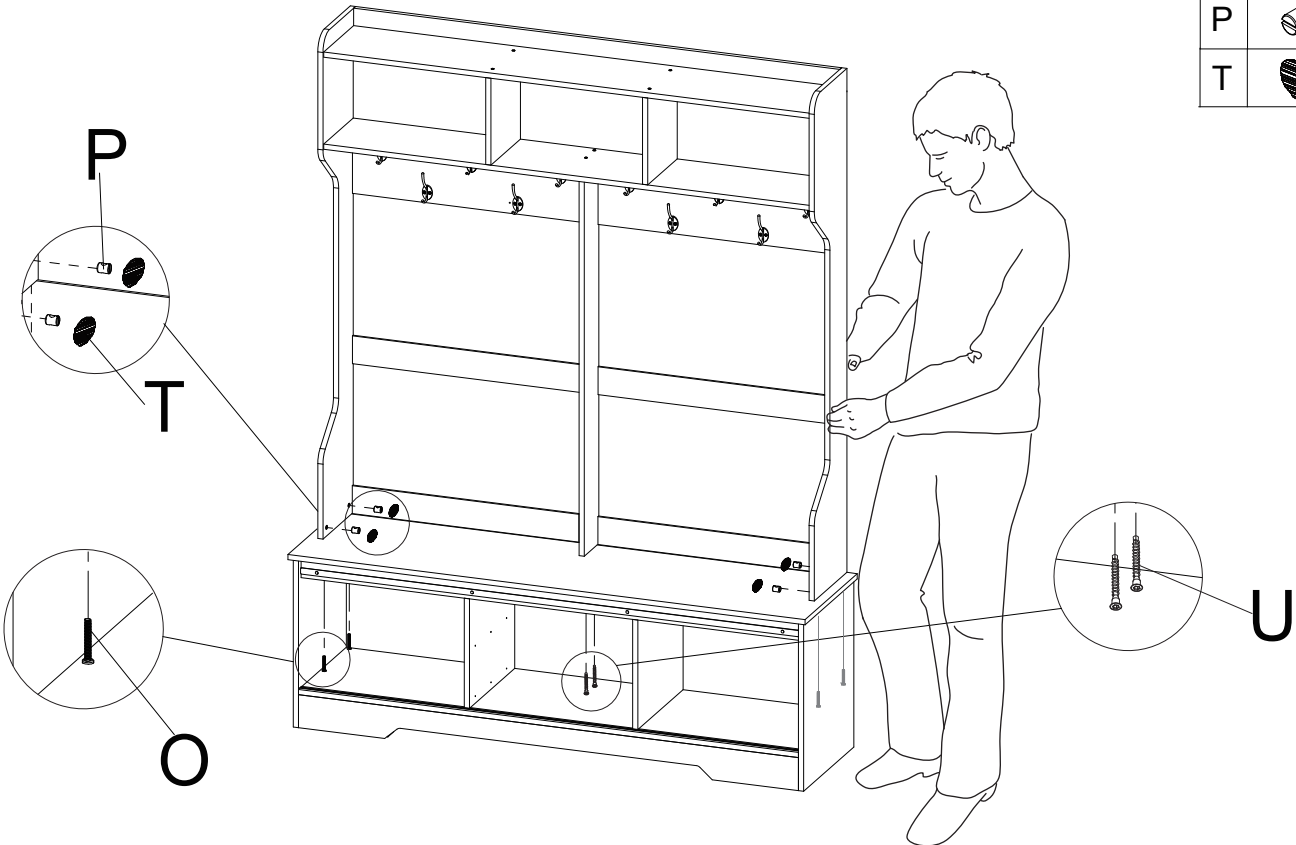

PRODUCT ASSEMBLY

Step 29

Q			34 sets
---	---	---	---------

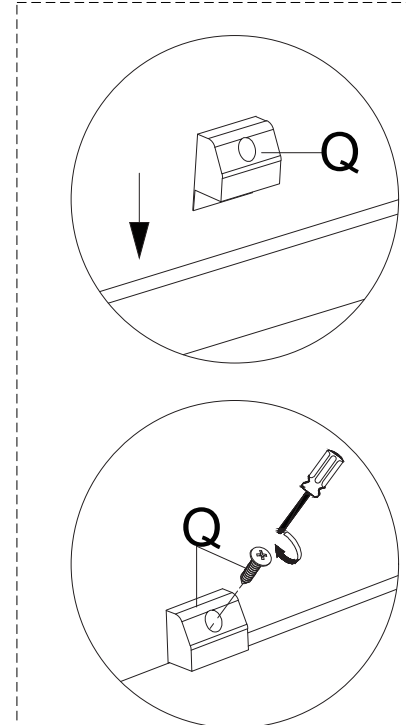
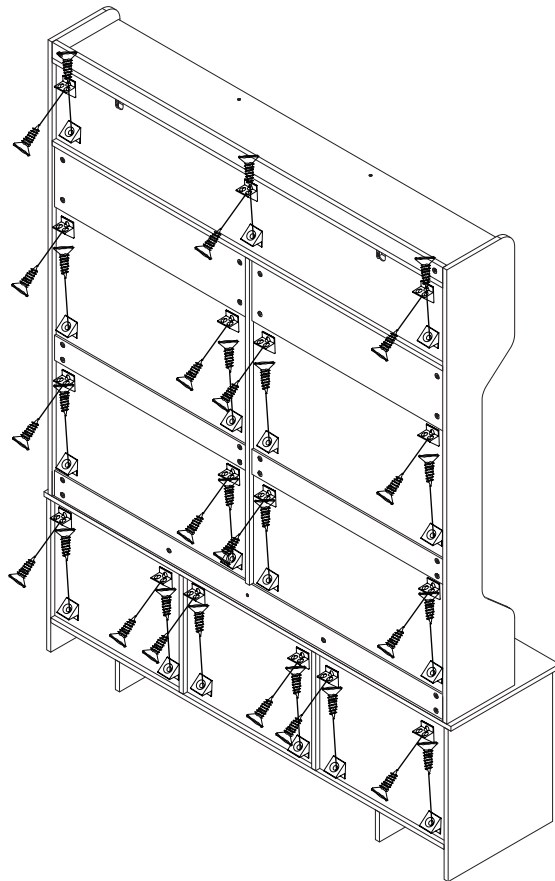


Step 30

WARNING!

IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH THE
WALL ATTACHMENT DEVICE PROVIDED

R			2 sets
V			8 pcs

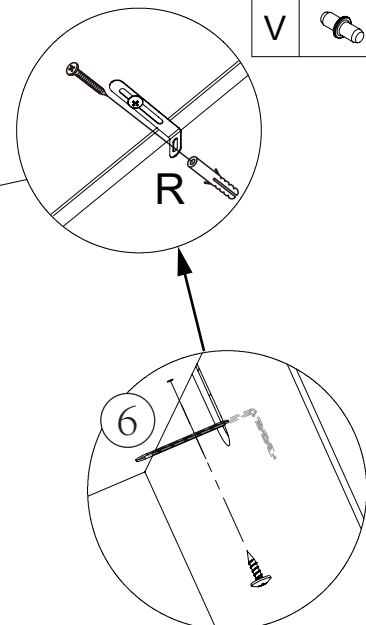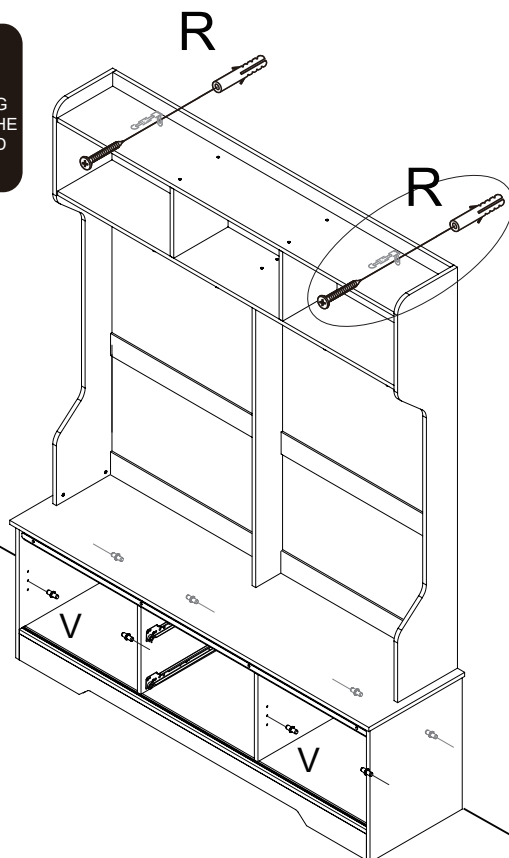


WARNING: Before
drilling, check wall
for hidden pipes and
cables

PRODUCT ASSEMBLY


Step 31

D		8 pcs
---	---	-------

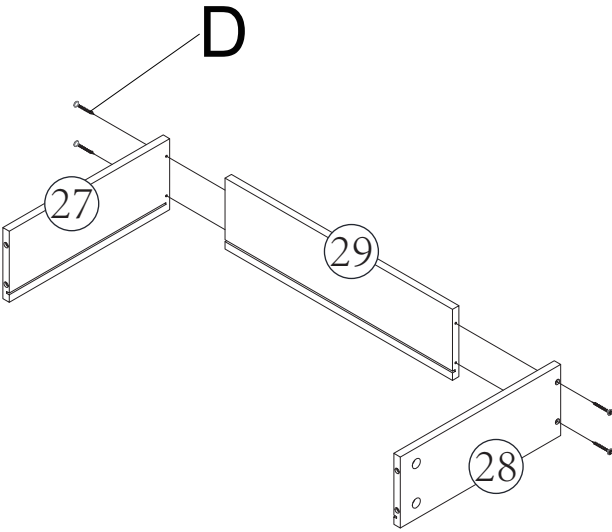

X2


Step 30

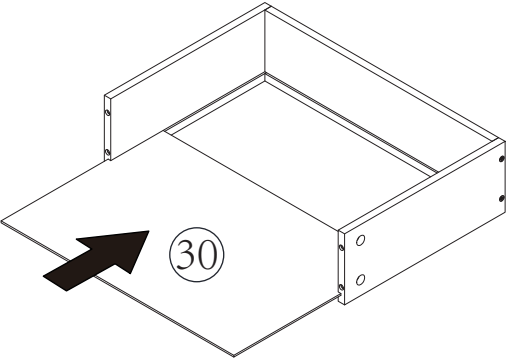

X2

Step 32


A		8 pcs
B		8 pcs

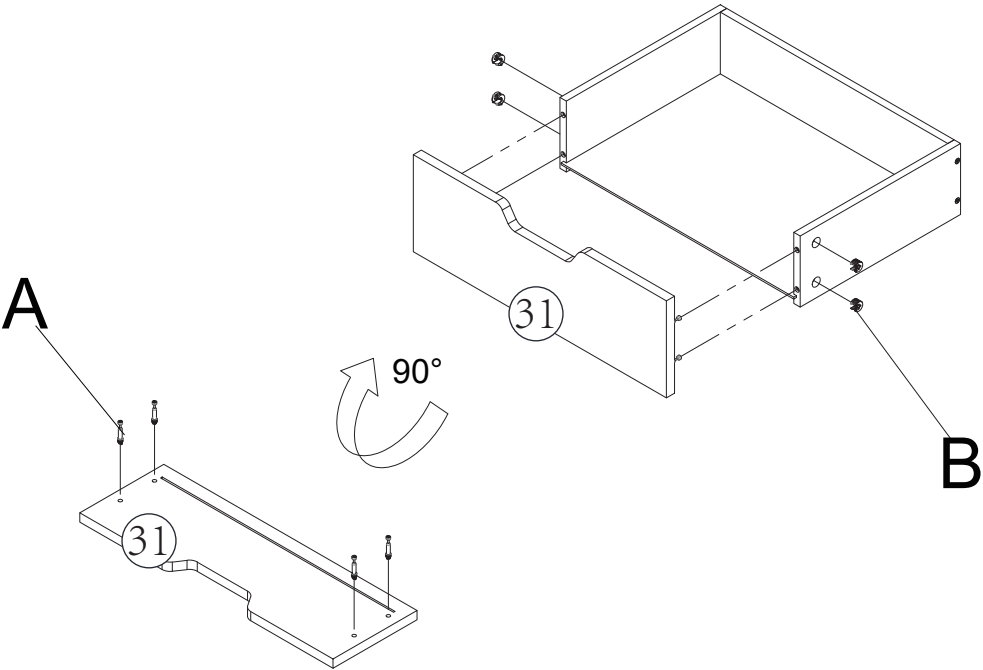

X2

PRODUCT ASSEMBLY


Step 33

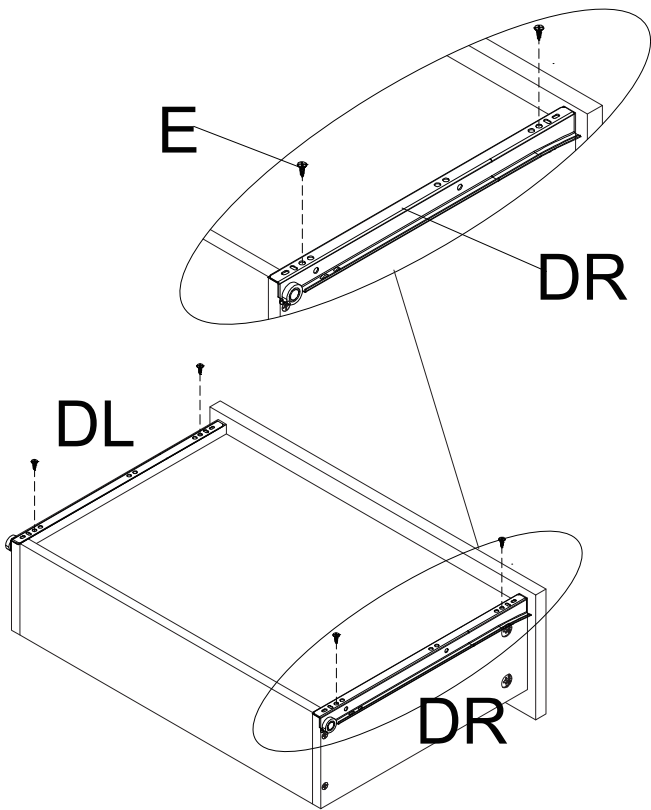

E		8 pcs
DL		2 pcs
DR		2 pcs

X2


Step 34

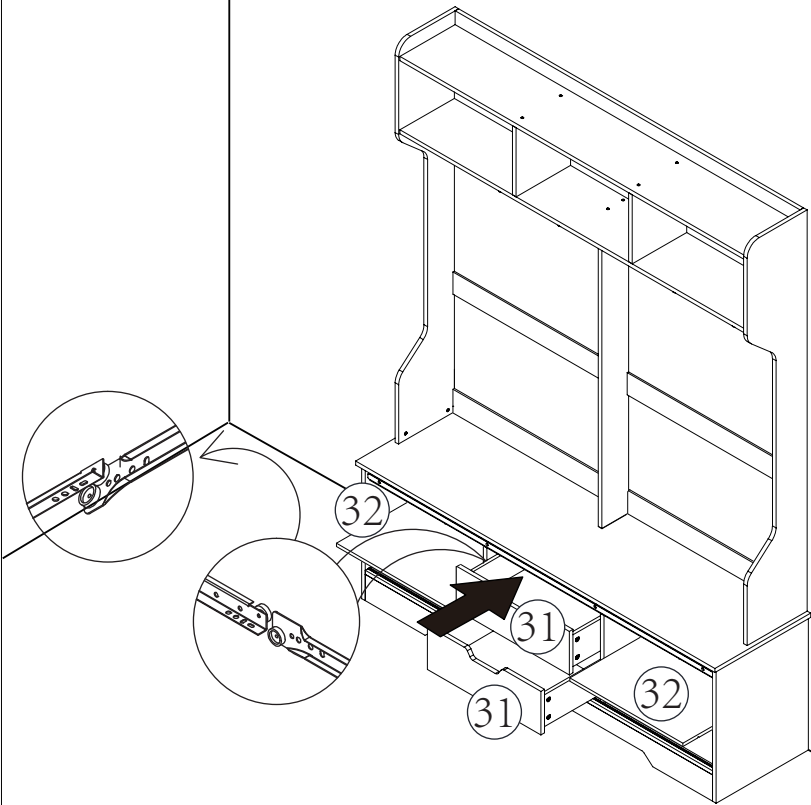

PRODUCT ASSEMBLY

Step 35

F		8 pcs
J		4 pcs
K		4 sets
L		8 pcs

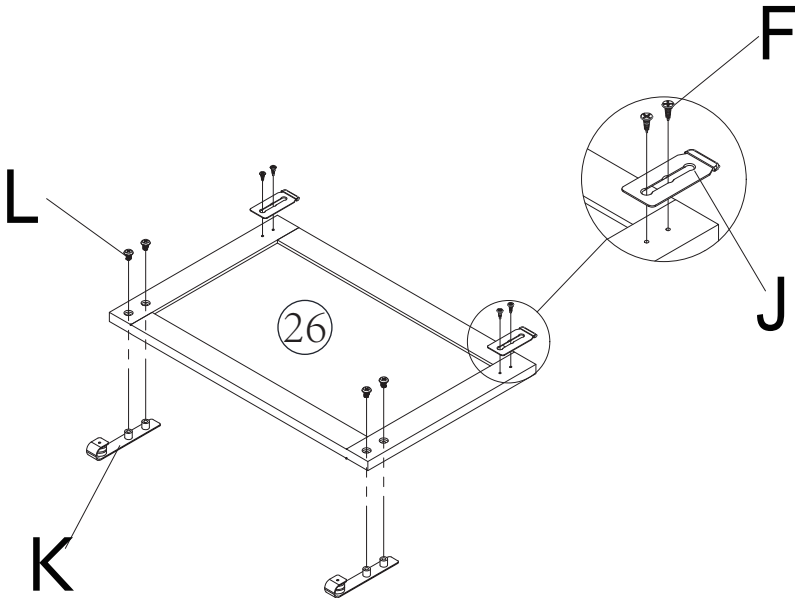

X2

Step 36

