

Platform Bed

Contains One (1) Bed and Hardware

IMPORTANT NOTE:
Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.


TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST


A. Headboard (1 pc)




B. Footboard (1 pc)




C. Siderail (2 pcs)



D. Wood Slat System (1 pc)

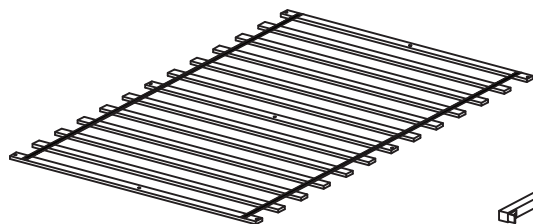

E. Center Support (1 pc)

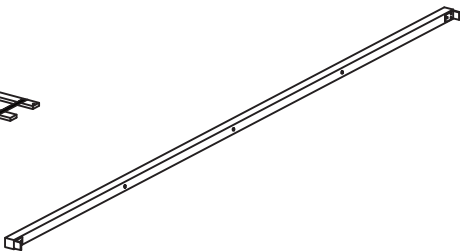

F. Center Leg (3 pcs)




G. Corner Leg (4 pcs)



HARDWARE LIST


H. Bolt (8 pcs)

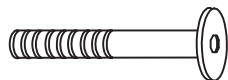

I. Screw (9 pcs)



J. Hex Key (1 pc)

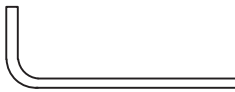


K. Washer (4 pcs)




ASSEMBLY INSTRUCTIONS

STEP 1

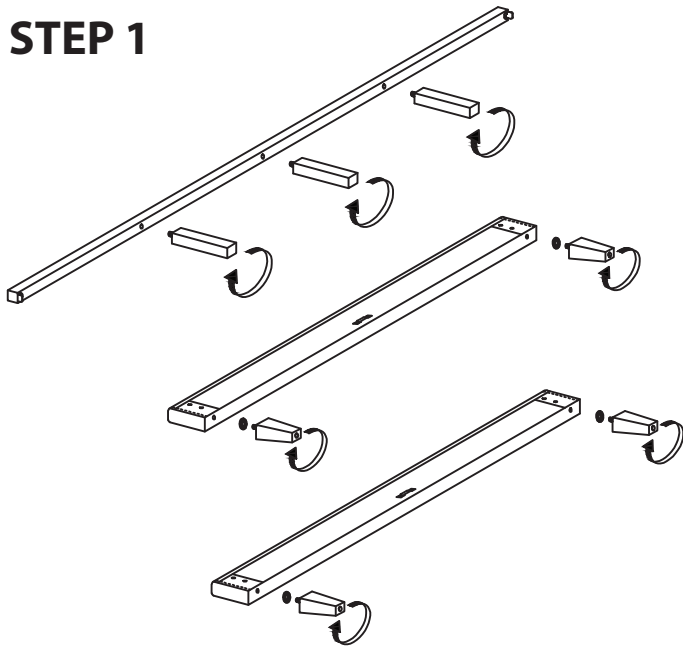


Screw the Center Legs (Part F) into the Center Support (Part E). Screw the Corner Legs (Part G) into the Headboard (Part A) and Footboard (Part B) using one Washer (Part K) for each Corner Leg.

STEP 2

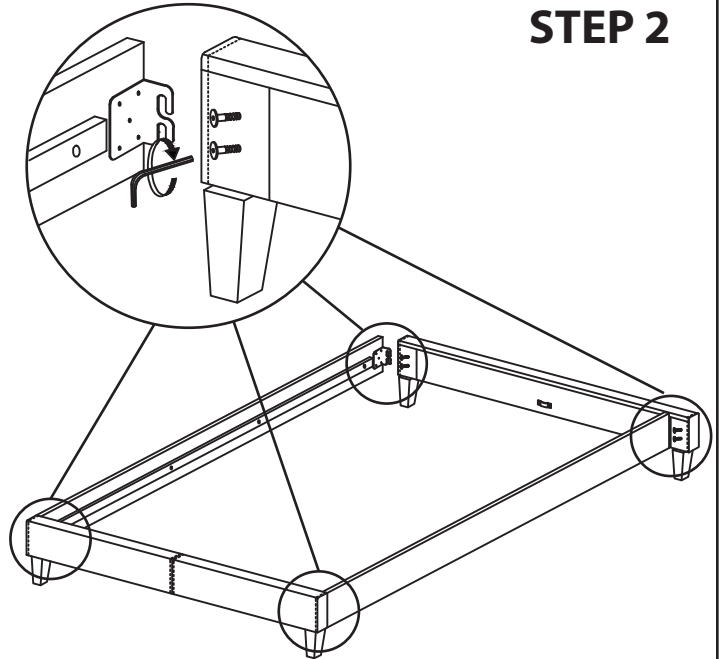


Screw the bolts (Part H) half way into the Headboard and Footboard. Hang the Siderails (Part C) from the bolts then tighten the bolts using the hex key (Part J).

STEP 3

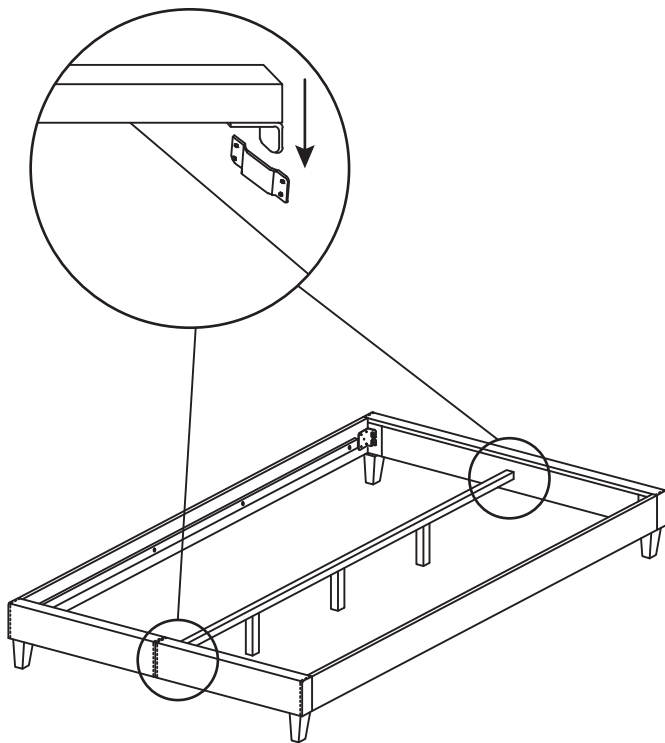

Insert the Center Support into the brackets on the Headboard and Footboard.

STEP 4

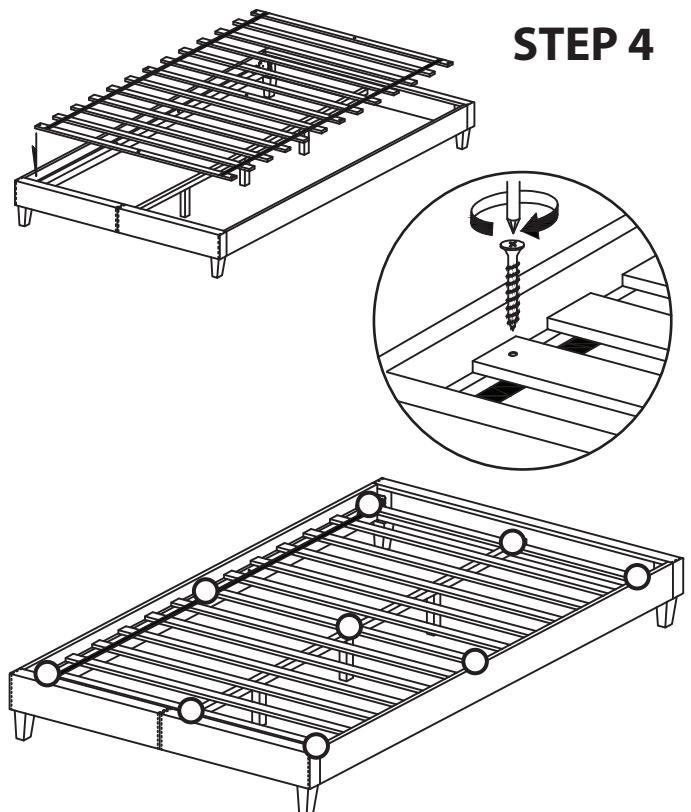

Roll out the Wood Slat System (Part D) and secure it in place with 9 screws (Part I) using the pre-drilled holes and a phillips screwdriver. Your Platform Bed is now completely set up and ready for use.