

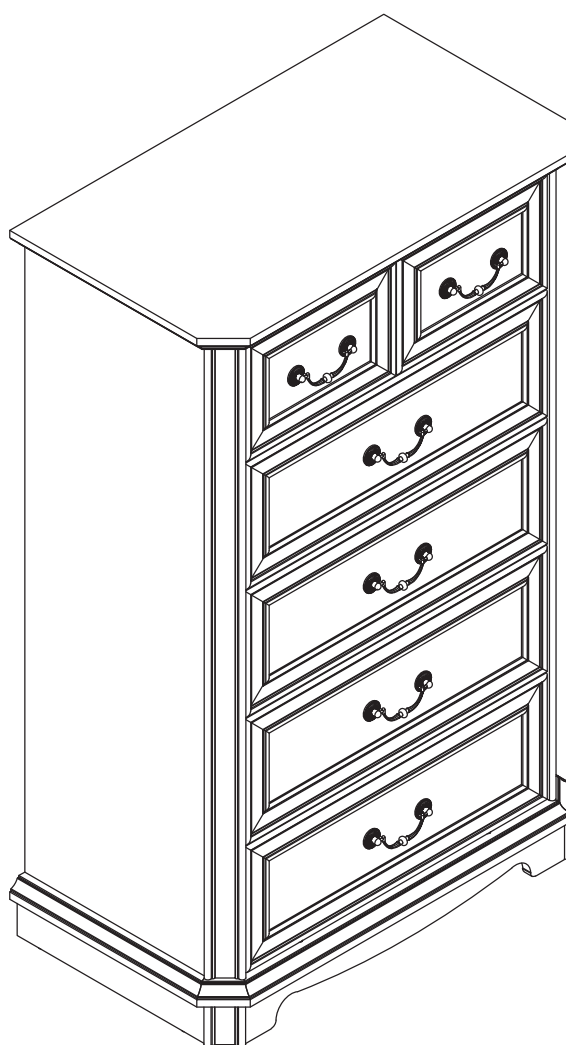



EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

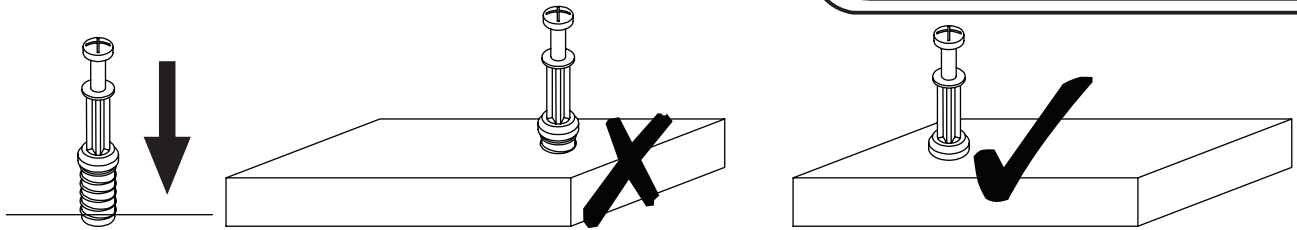


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

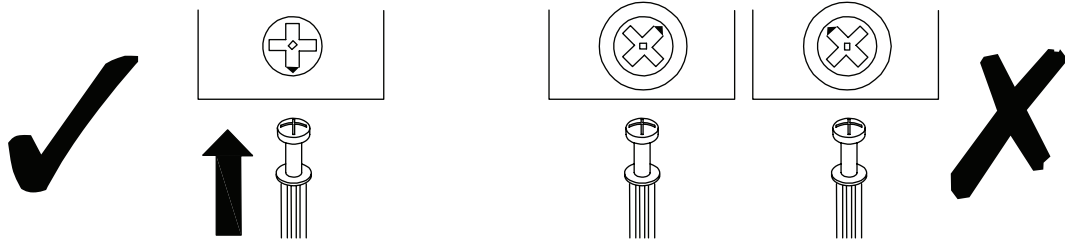










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










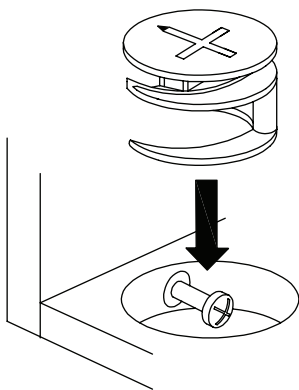










EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

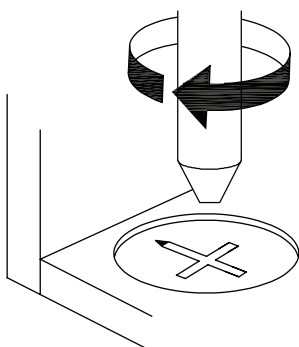




EN_Turn cam lock clockwise to tighten.

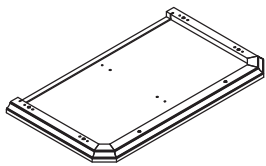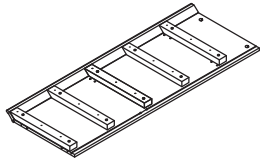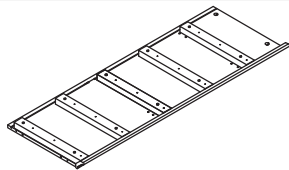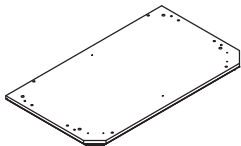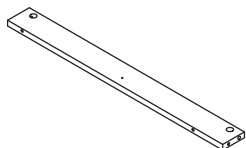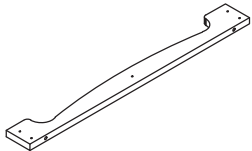NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x2	

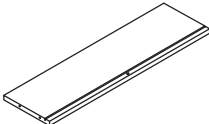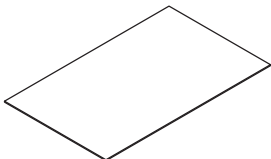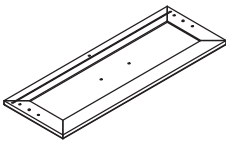NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x6	
⑬		x6	
⑭		x4	
⑮		x4	
⑯		x4	
⑰		x4	
⑱		x2	
⑲		x2	
⑳	 Left	x1	

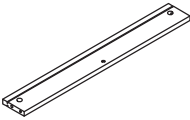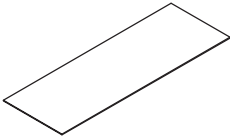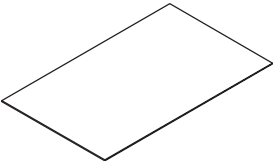NO.	PARTS	QTY	SPARE
21	 Right	x1	
22		x1	
23		x1	
24		x1	
25		x1	
26		x1	
27		x2	
	 Hardware Kit		

[illegible]

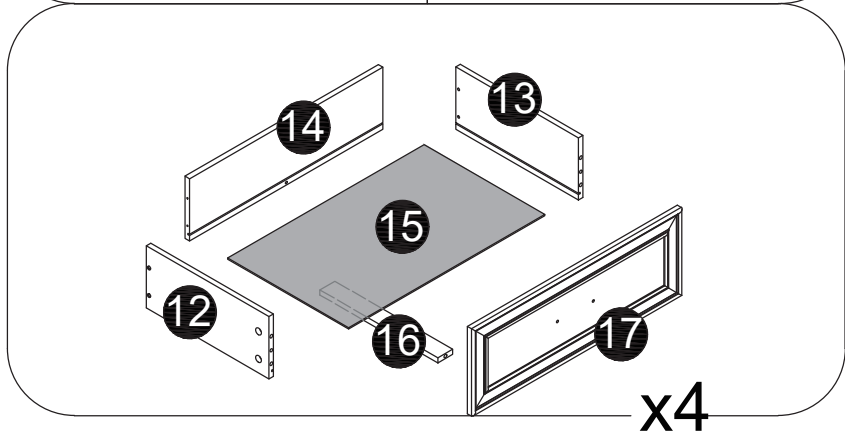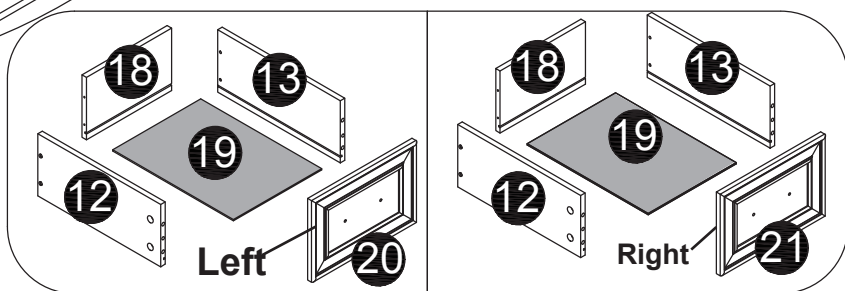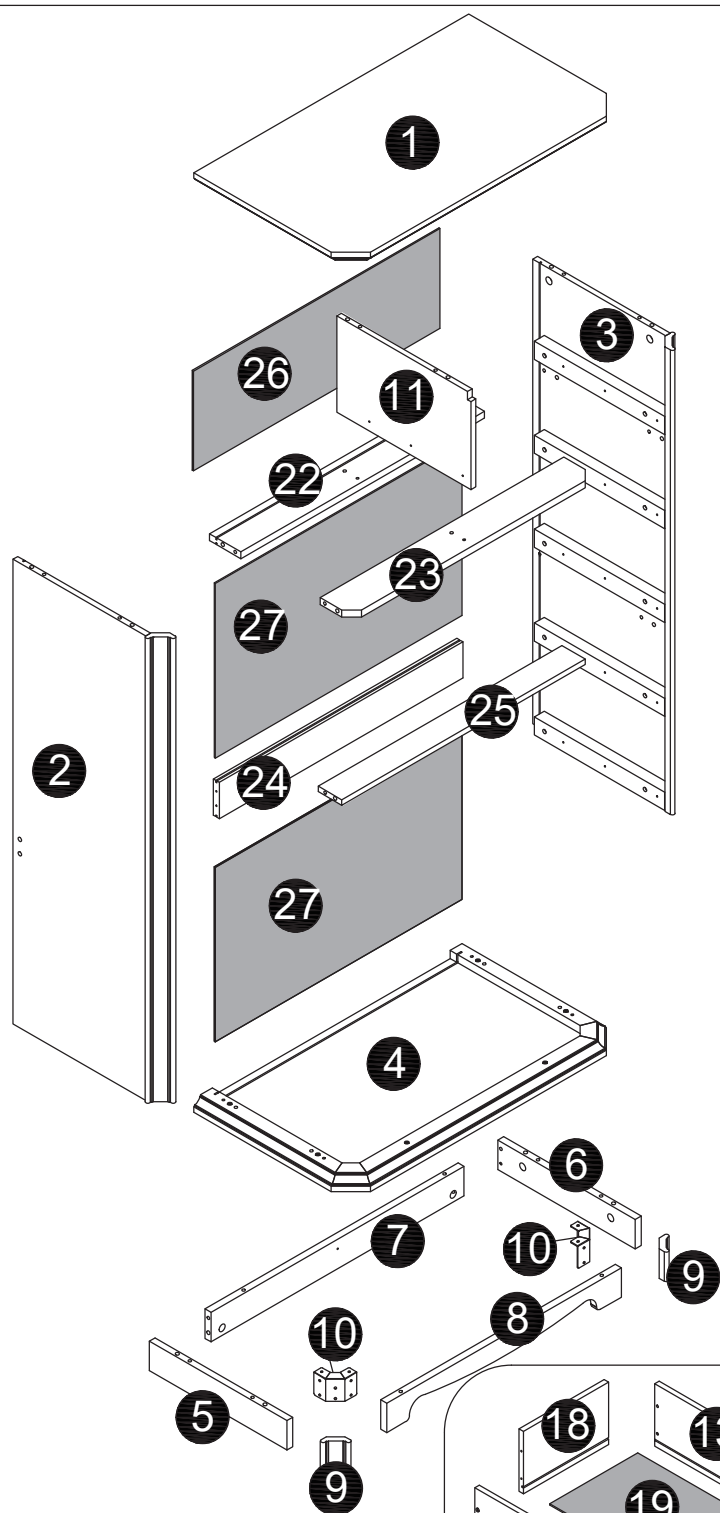




x4



A x46 Ø6x35mm +3(spare)	B x46 Ø15x10mm +3(spare)	C x40 Ø6x30mm +2(spare)	D x32 Ø4x35mm +2(spare)	E x76 Ø3.5x12mm +6(spare)	F x6 F1 F2
G x12	H x18 Ø3x16mm +1(spare) H1 H2	I x2 Ø6x30mm	J x18 Ø4x14mm +2(spare)	K x4 Ø5x50mm	L x4 Ø15mm
M x4 Ø5x40mm	N x2	O x2	CL x6 L300mm	CR x6 L300mm	DL x6 L300mm
DR x6 L300mm					



A x8	B x8	C x4	D x8
-------------	-------------	-------------	-------------



x2

01

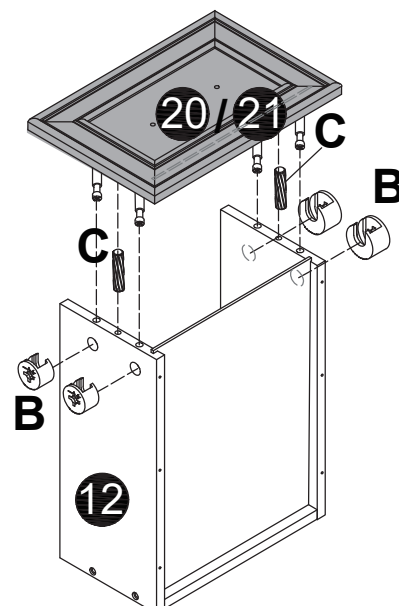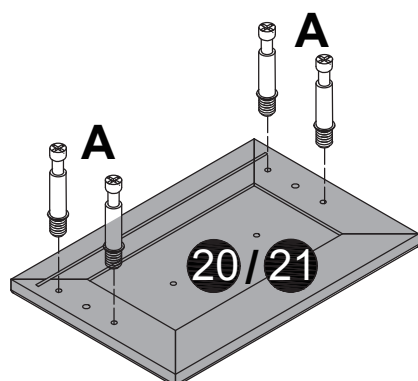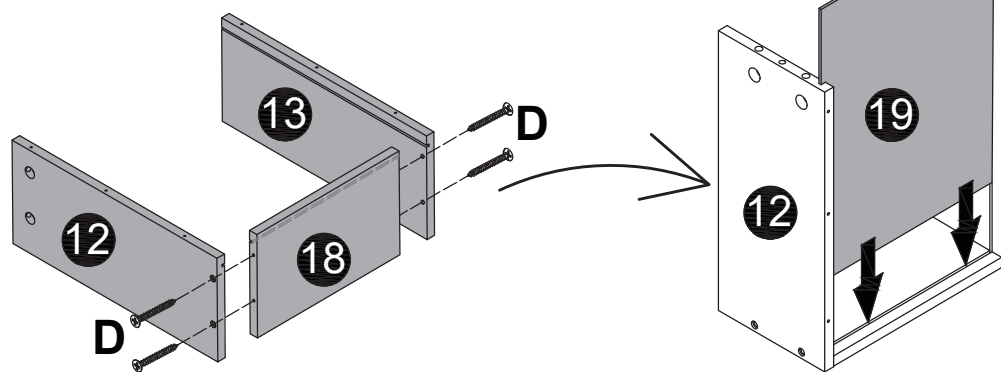

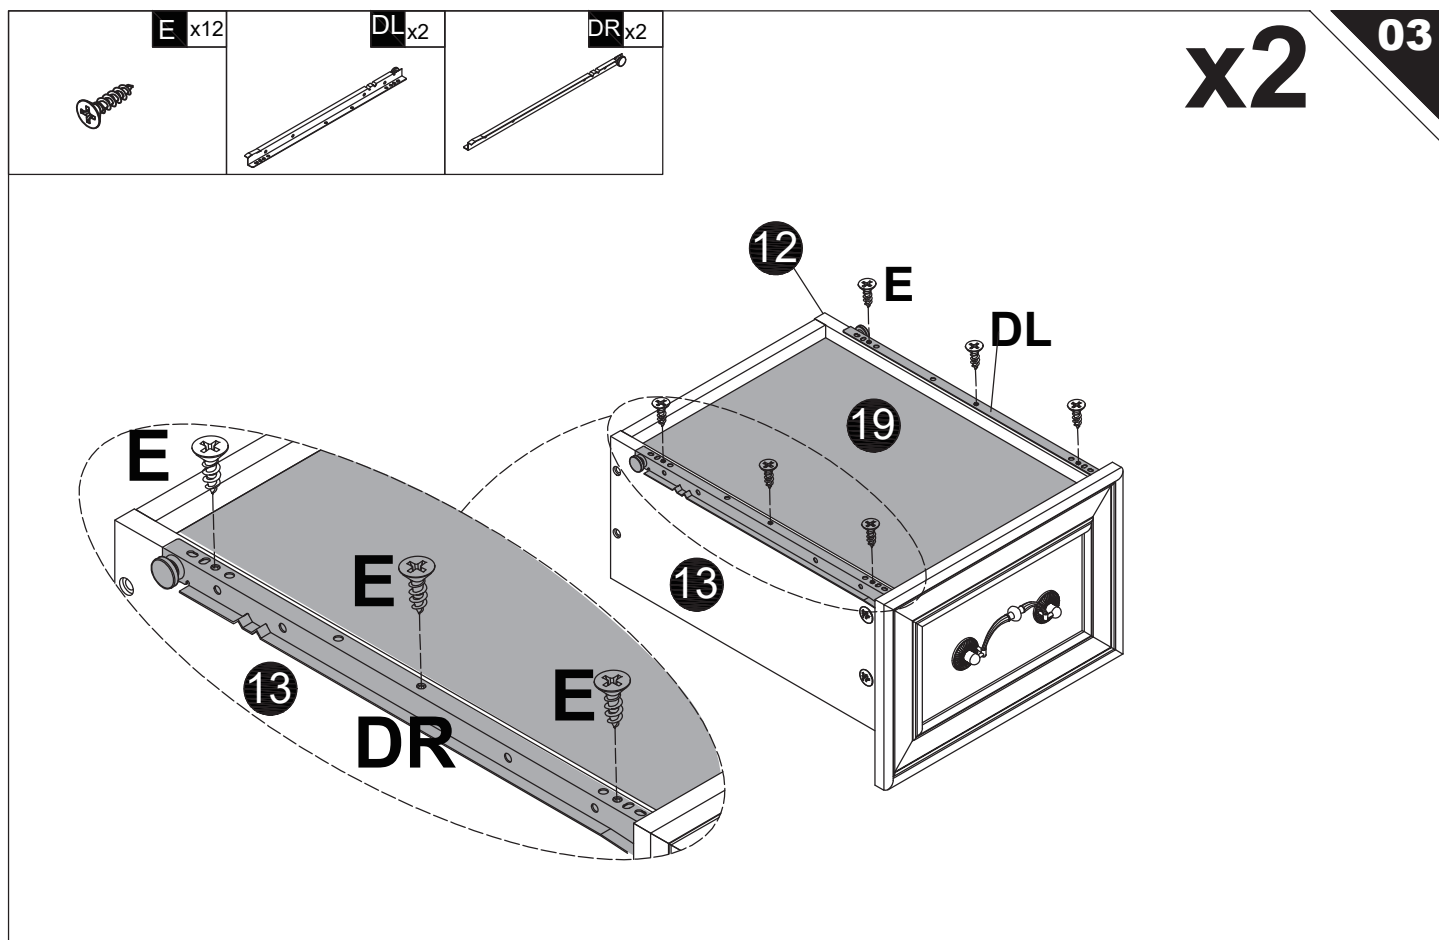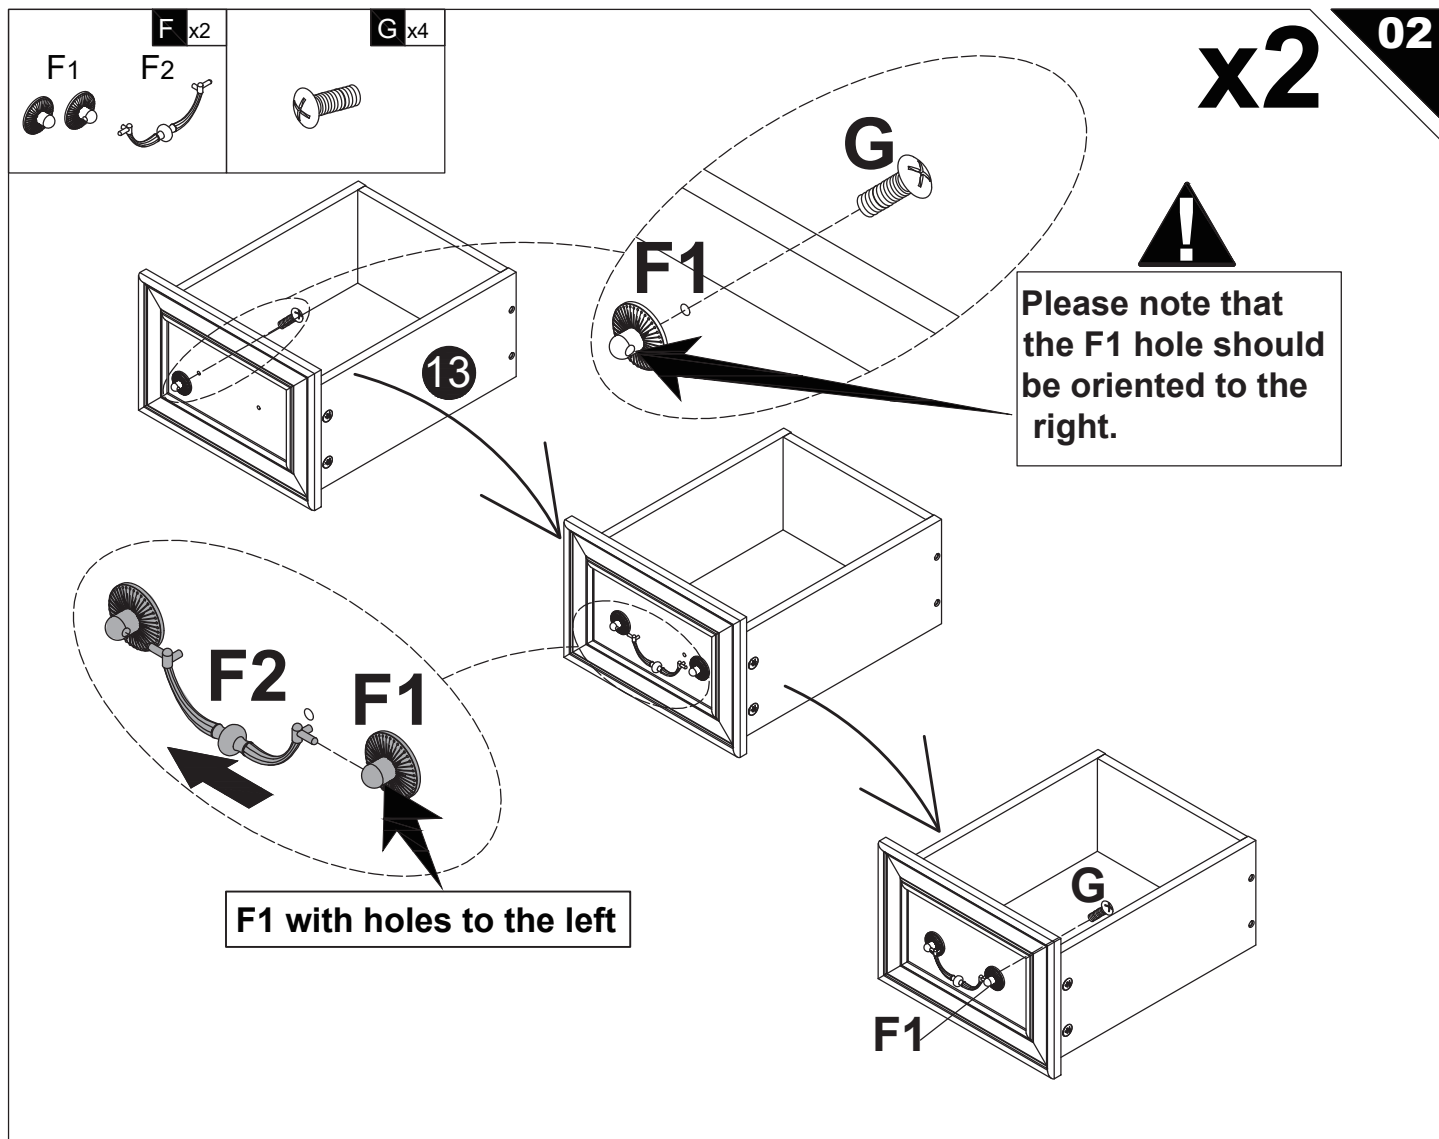

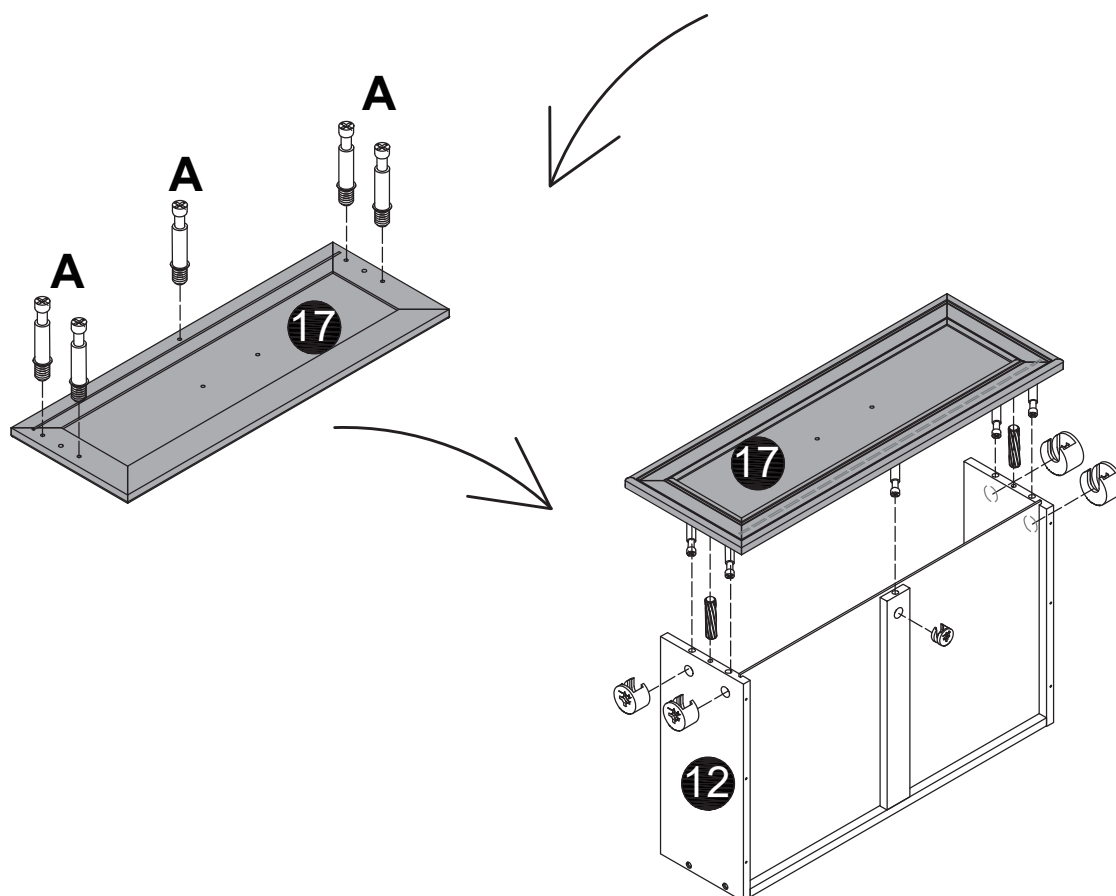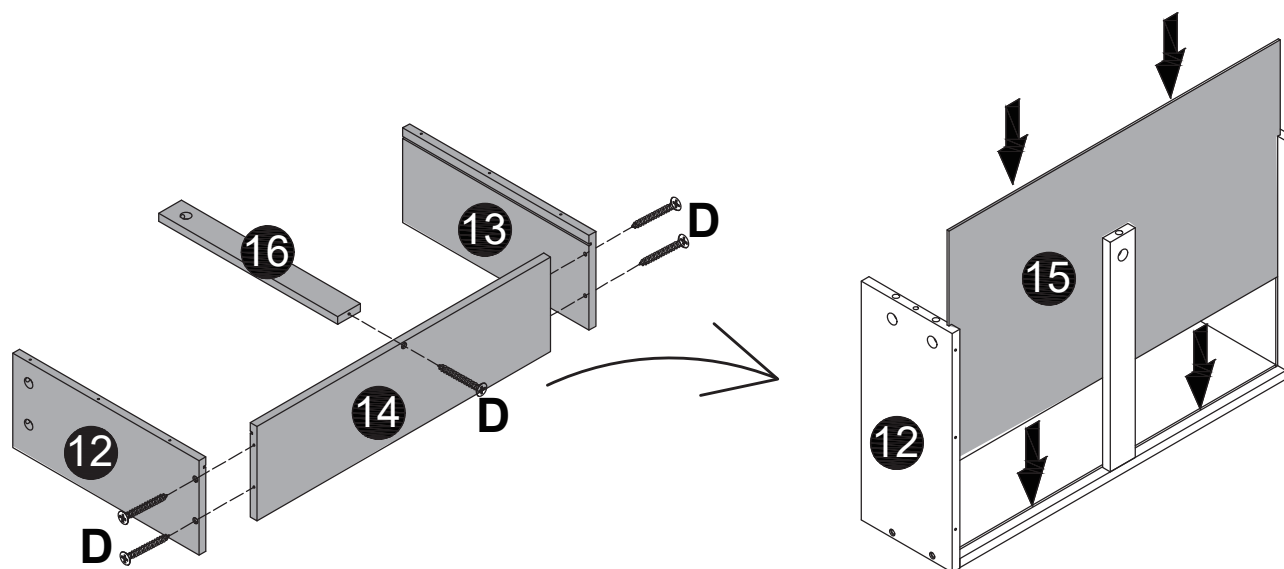A x20**B** x20**C** x8**D** x20**x4****04**


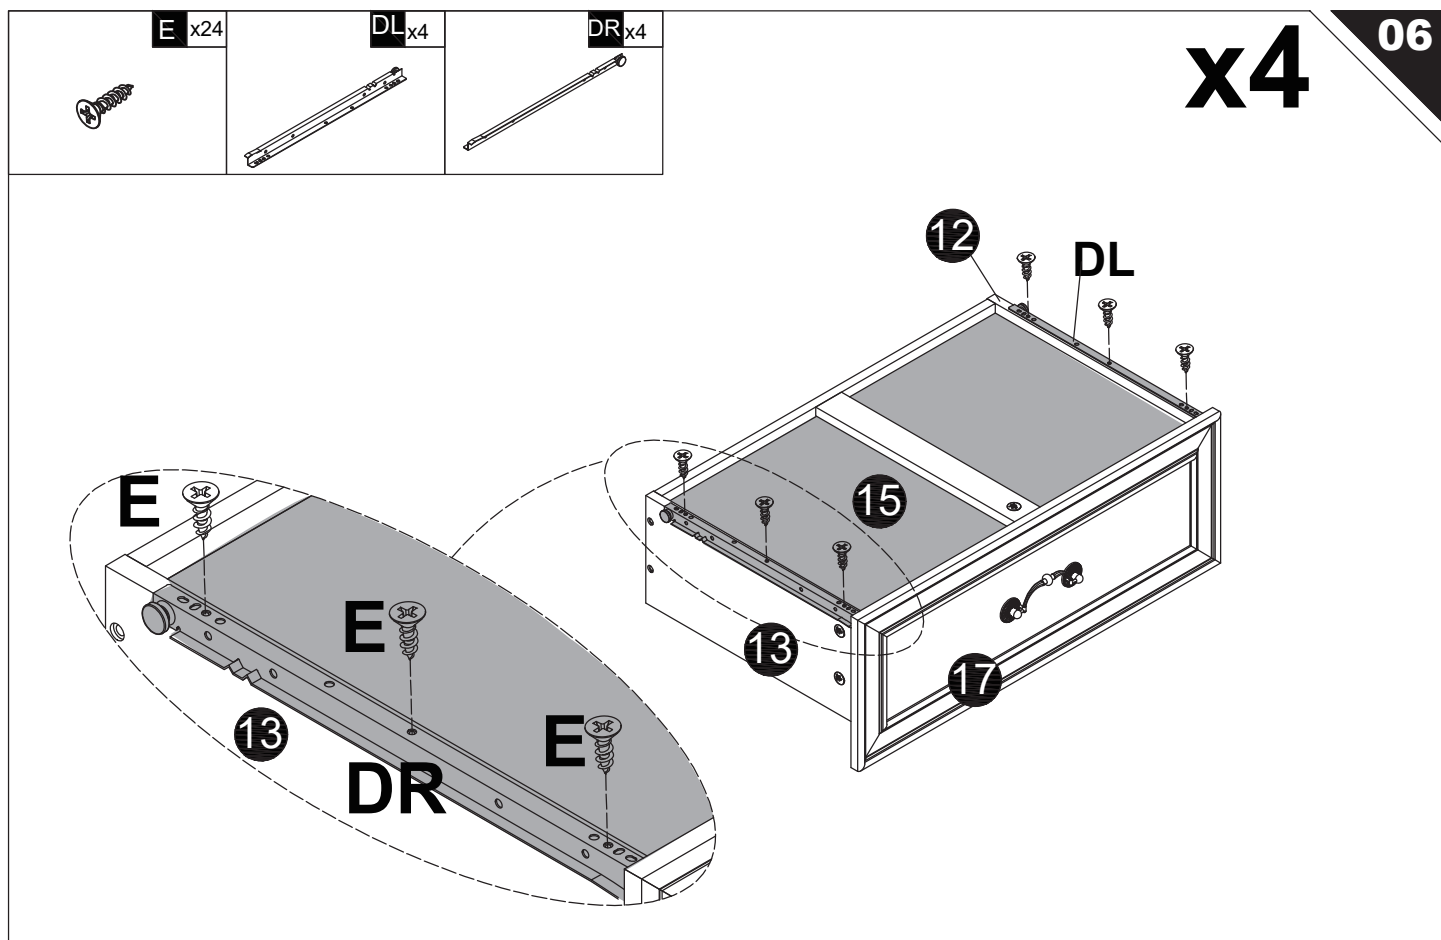
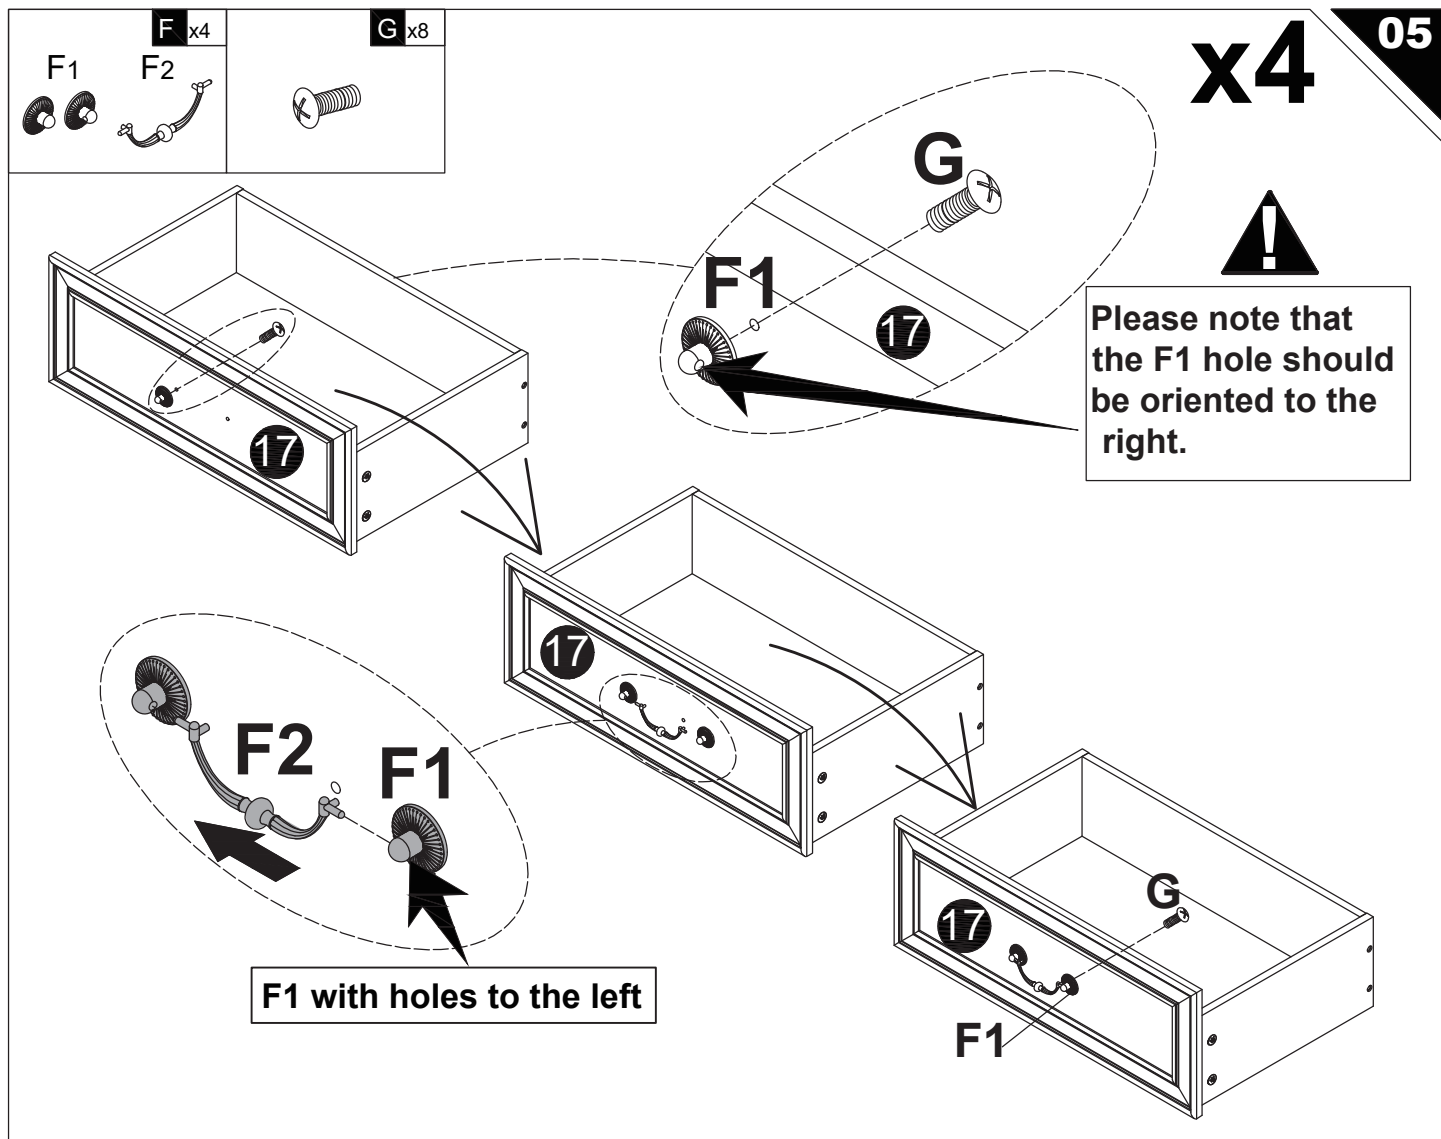


E x30

CL x5



CR x5

07

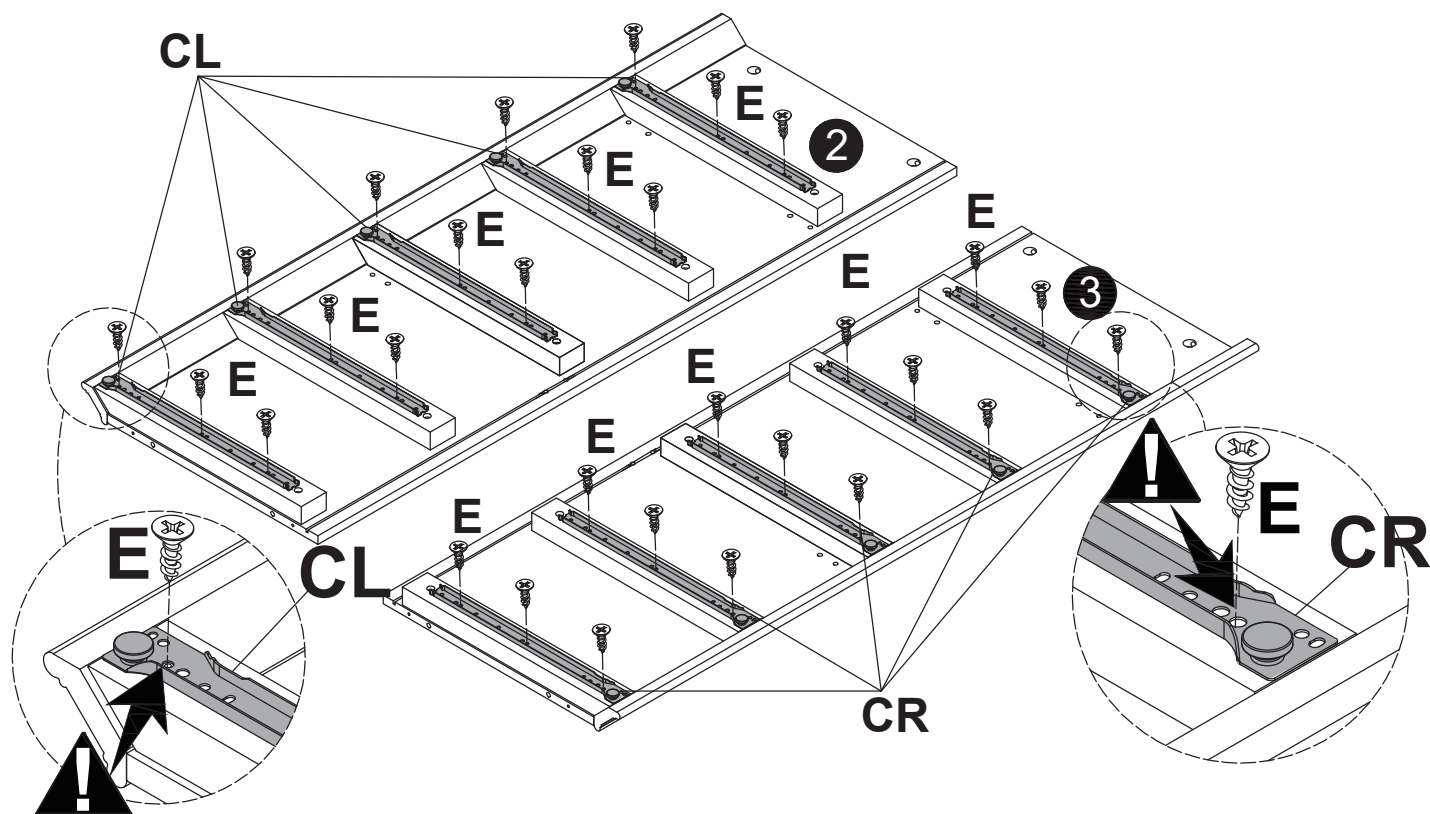

A x6


08

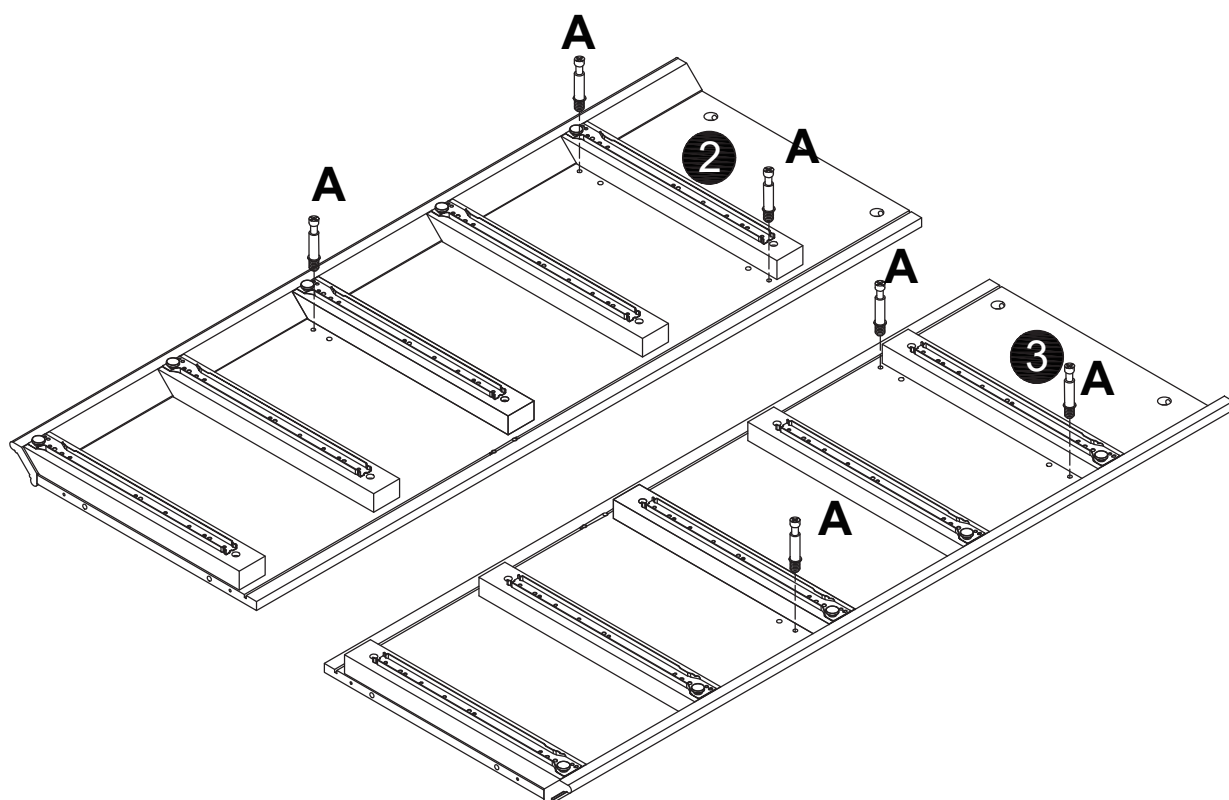

M x2



09

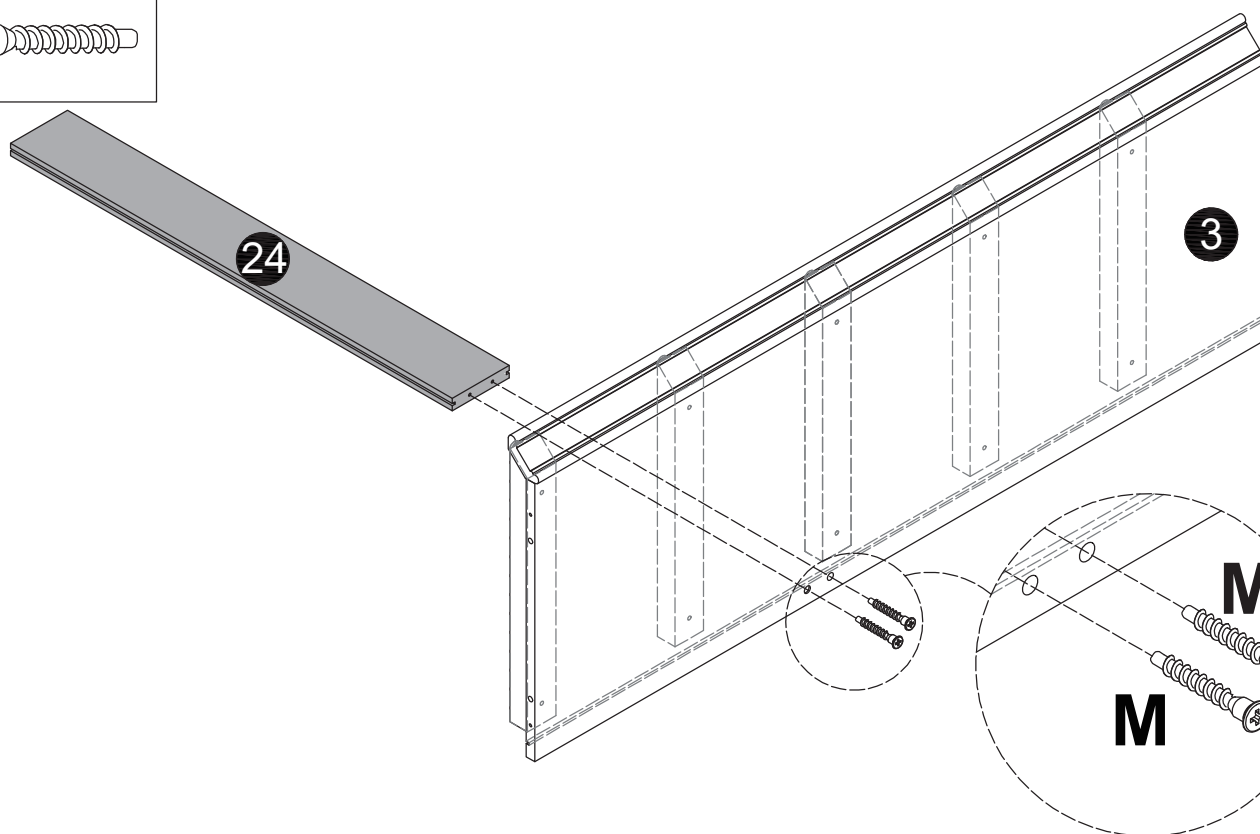


B x3



C x3




10

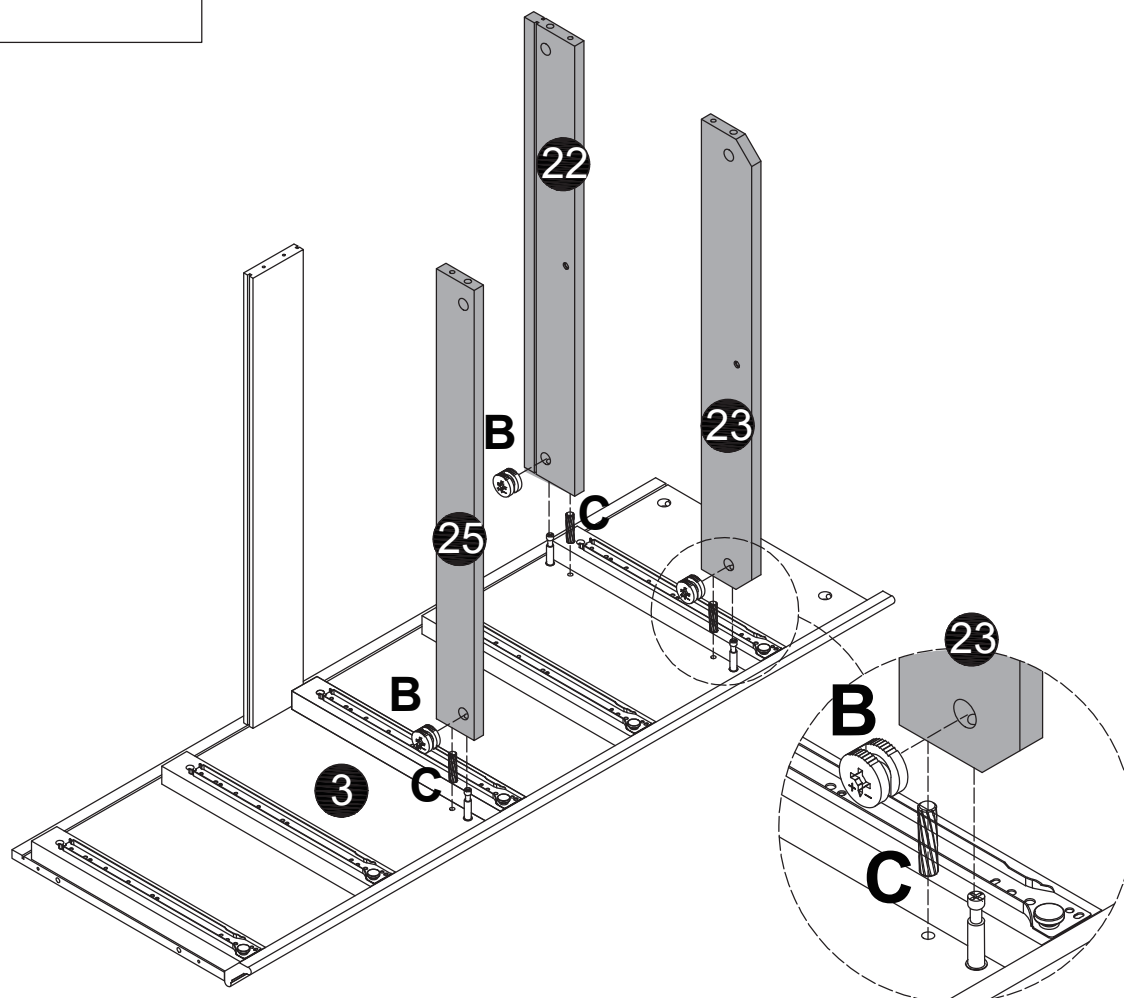

C x3



11

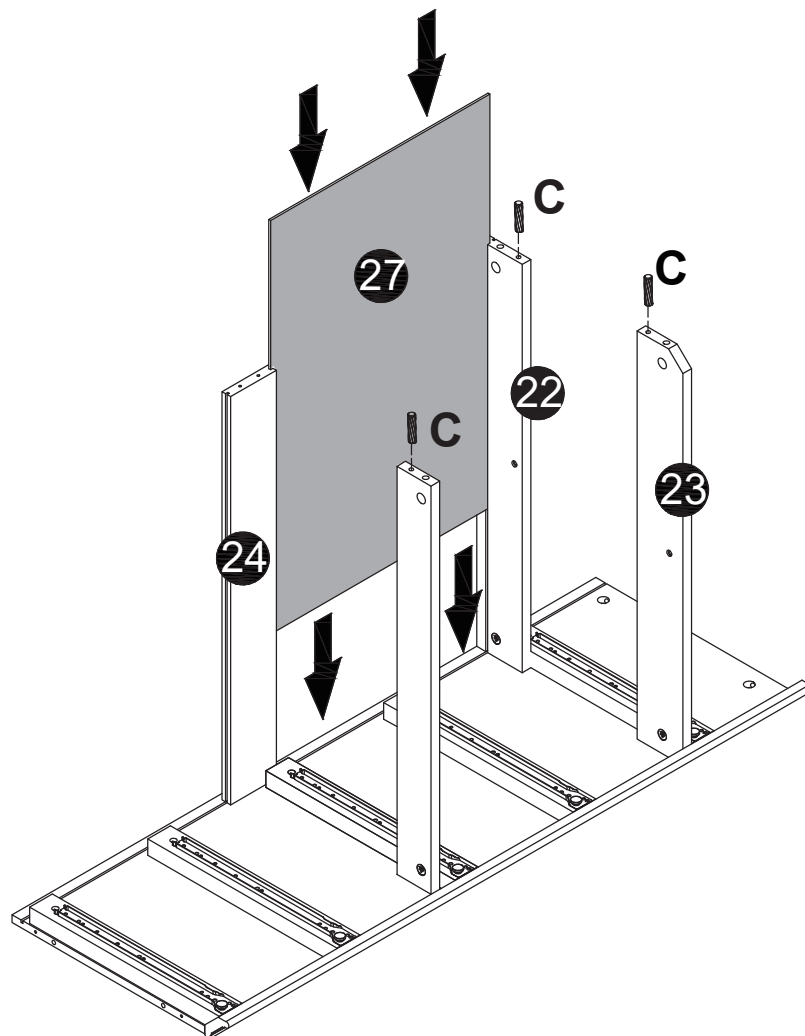


E x2

N x2



12

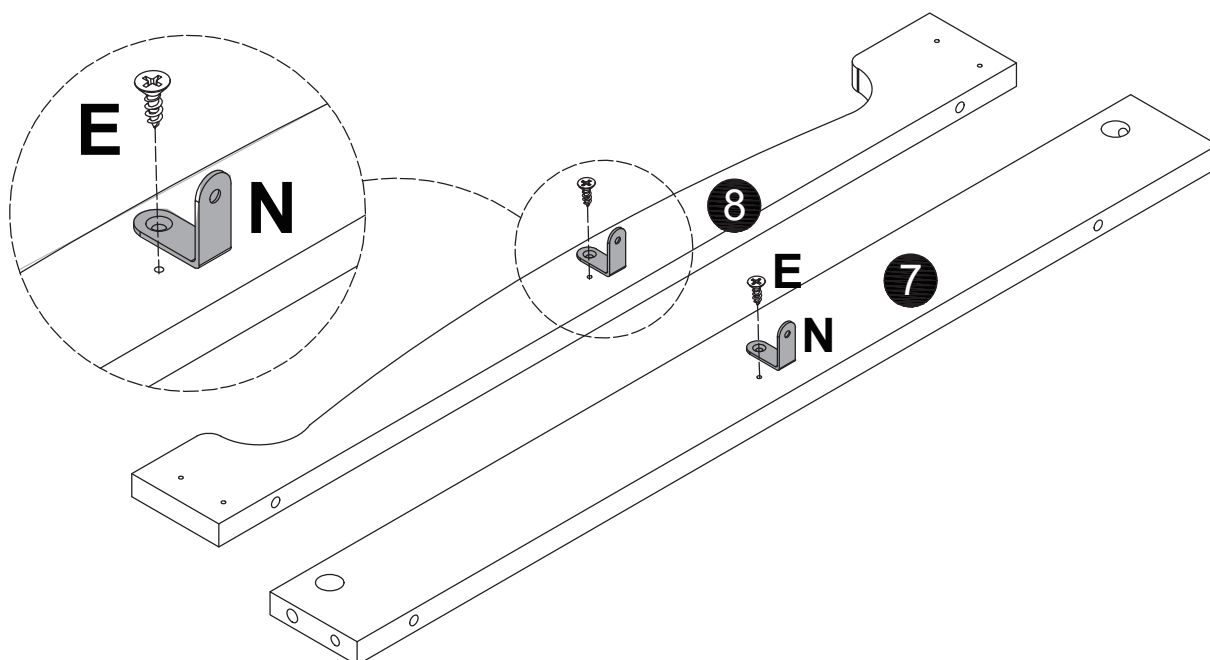




B x3

M x2




13

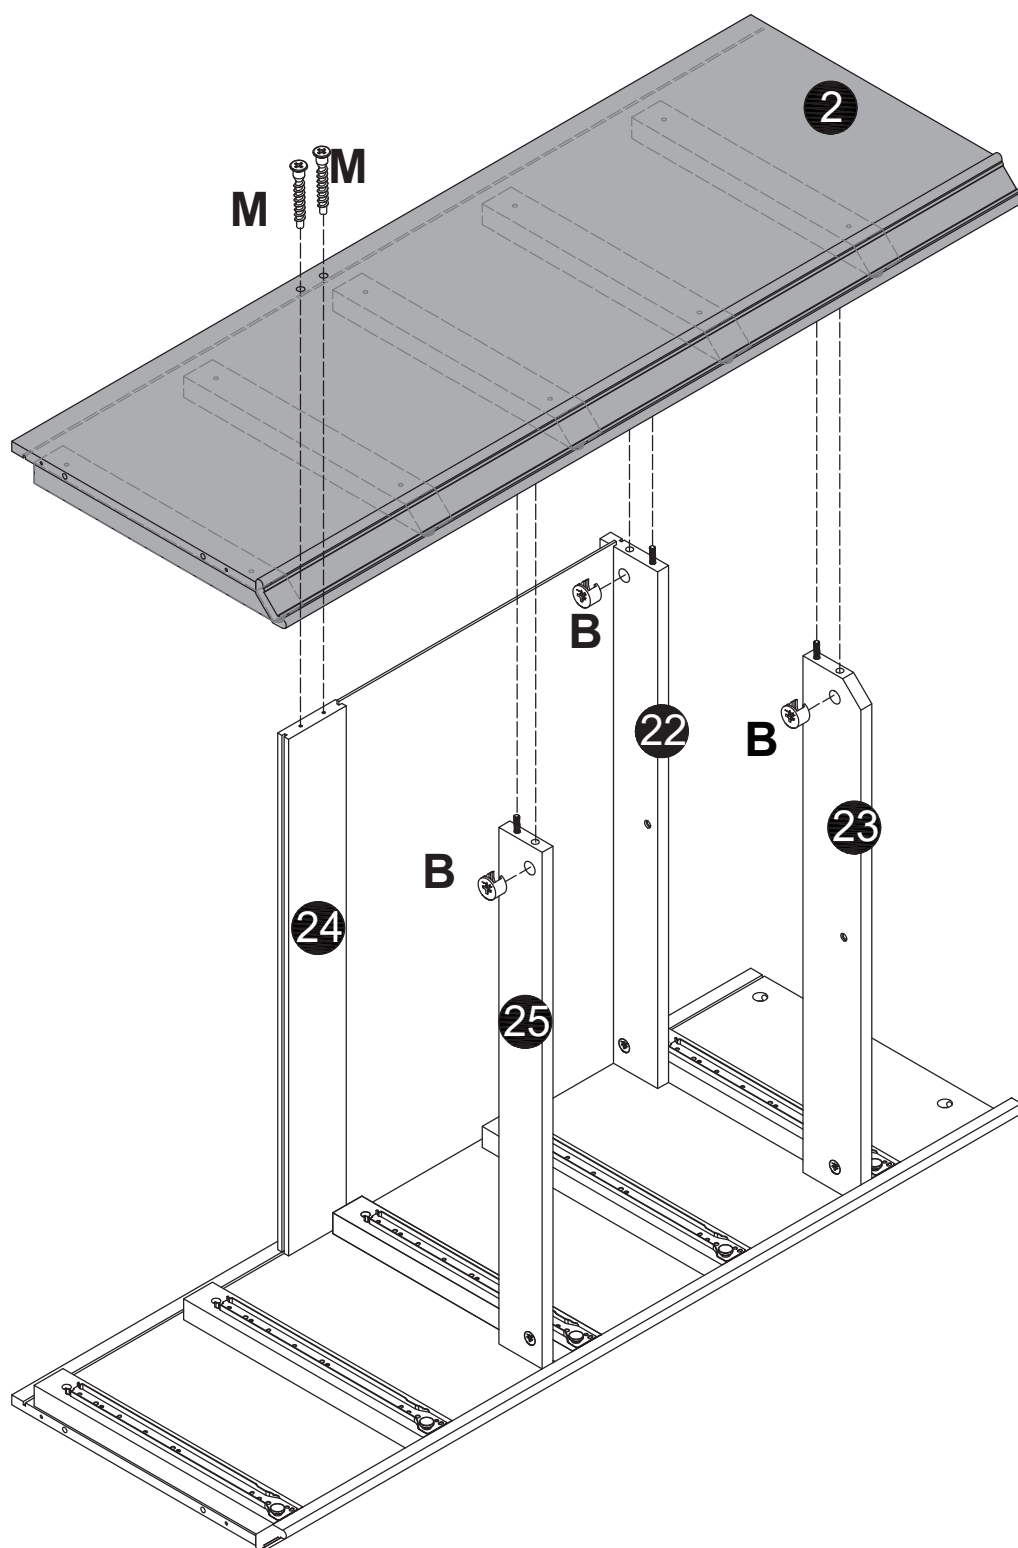


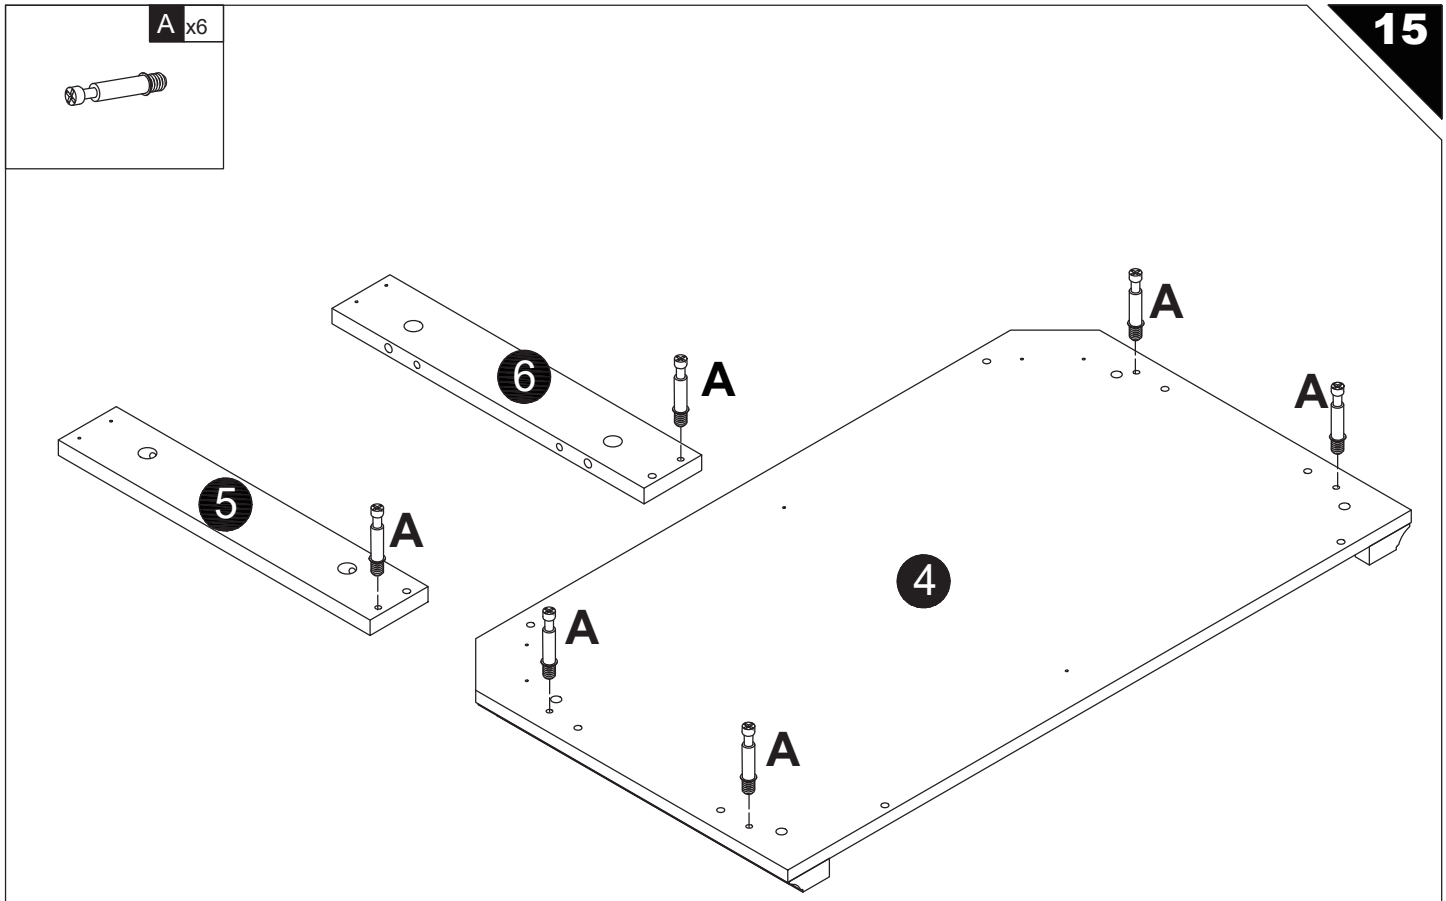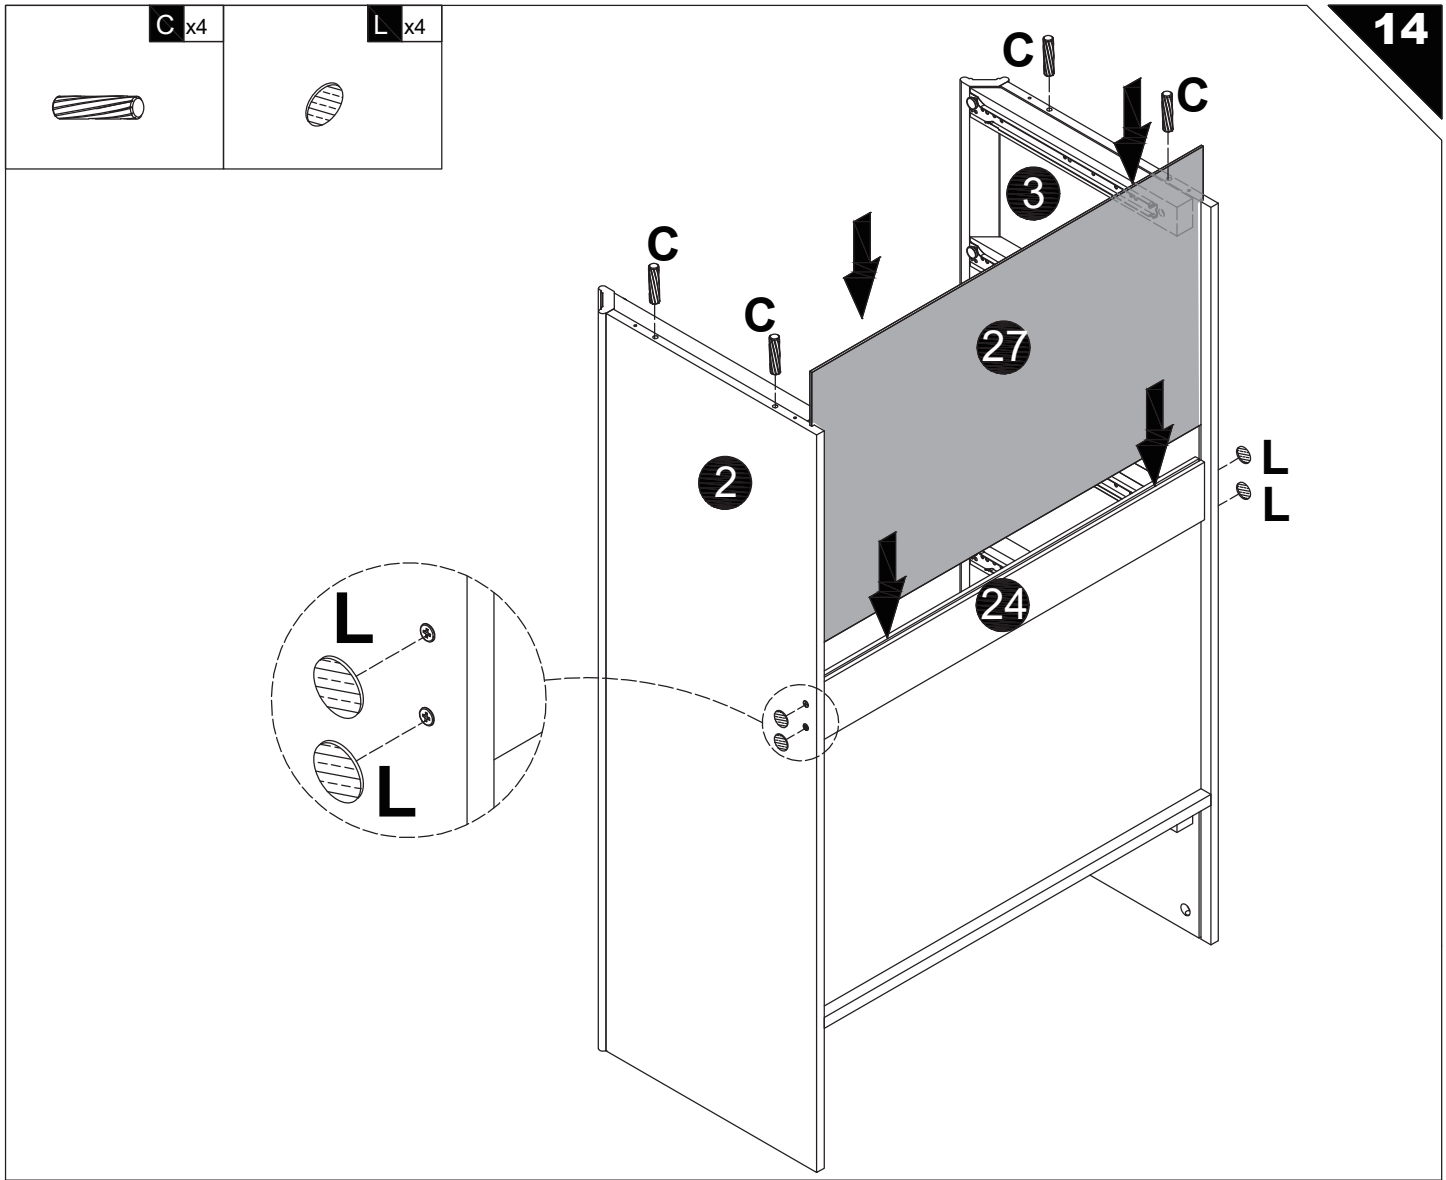

K x4



16

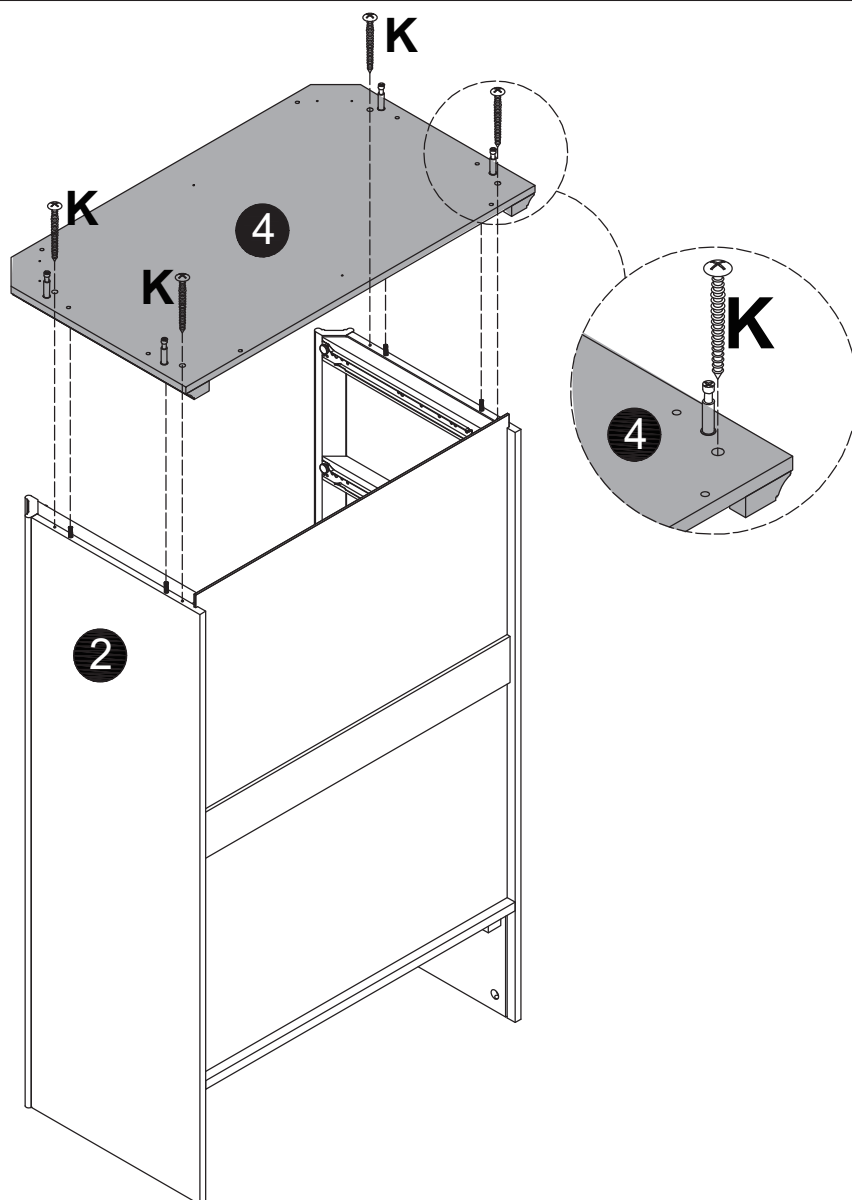


B x2



C x2




17

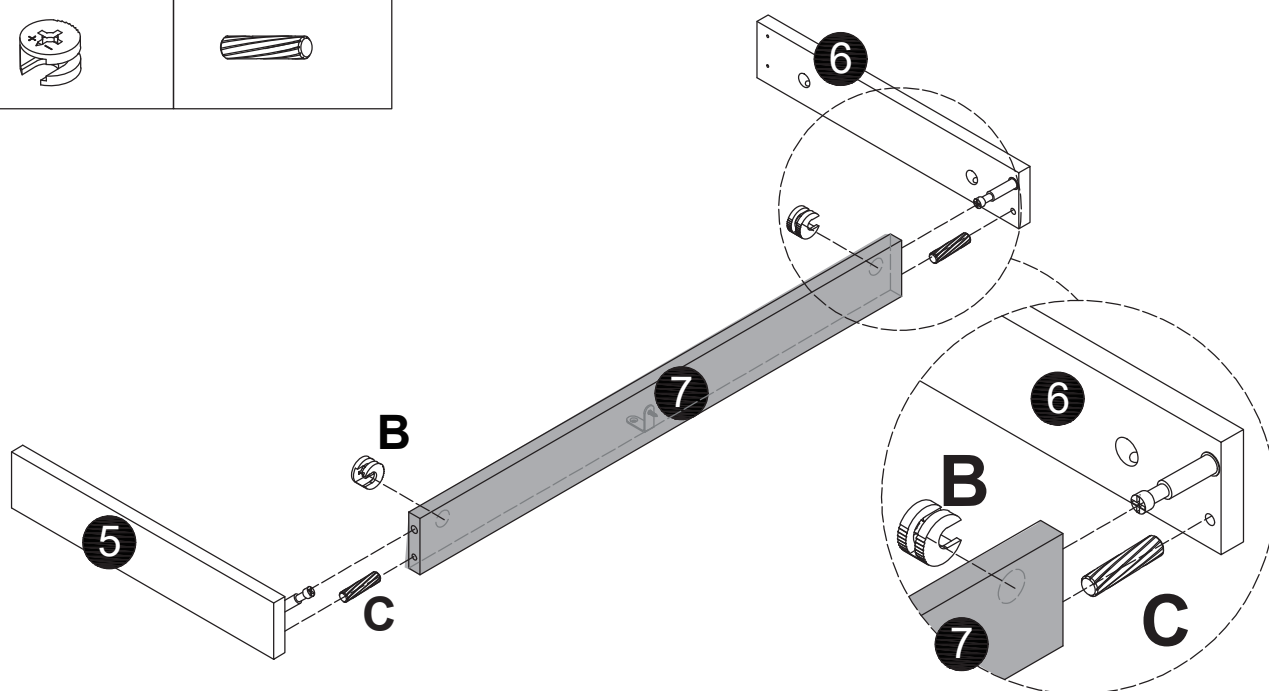


B x4

C x6

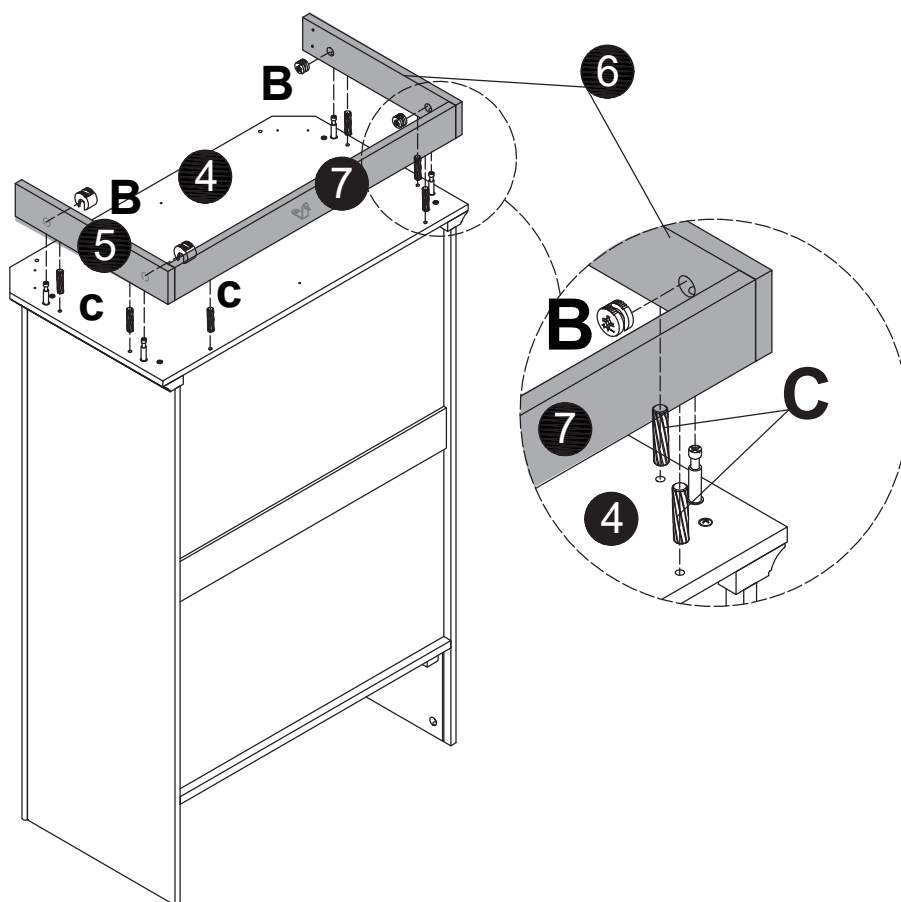


C x2

E x1

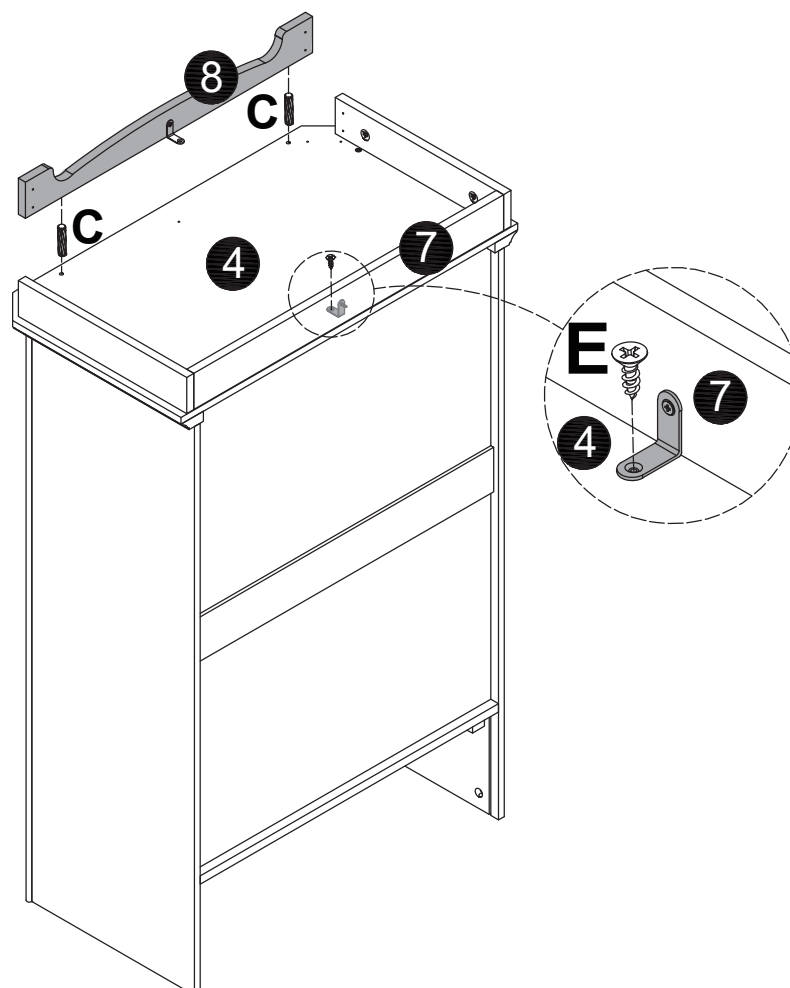


J x12

Attention: Screw J should be locked to 90%, not to 100%.

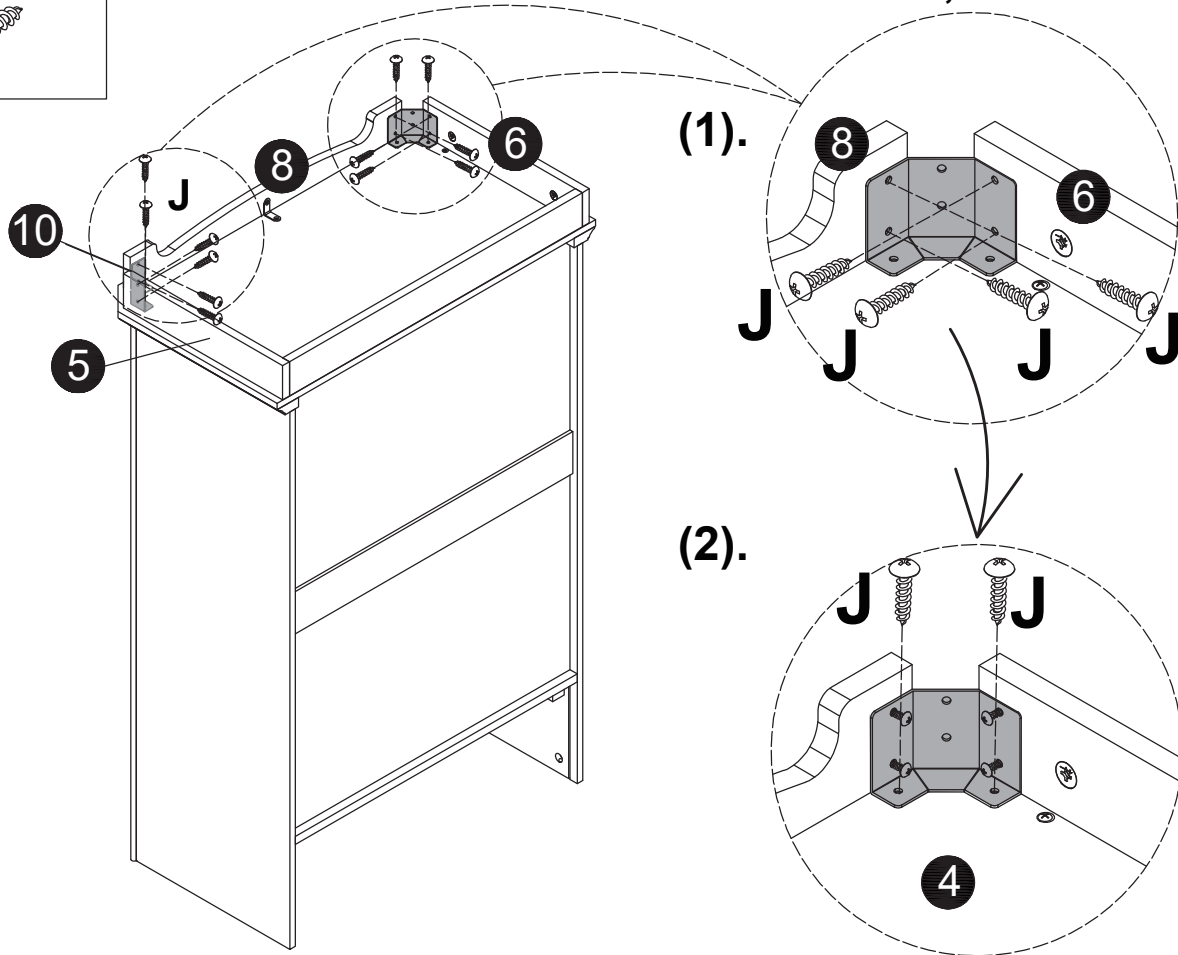

E x1




J x4

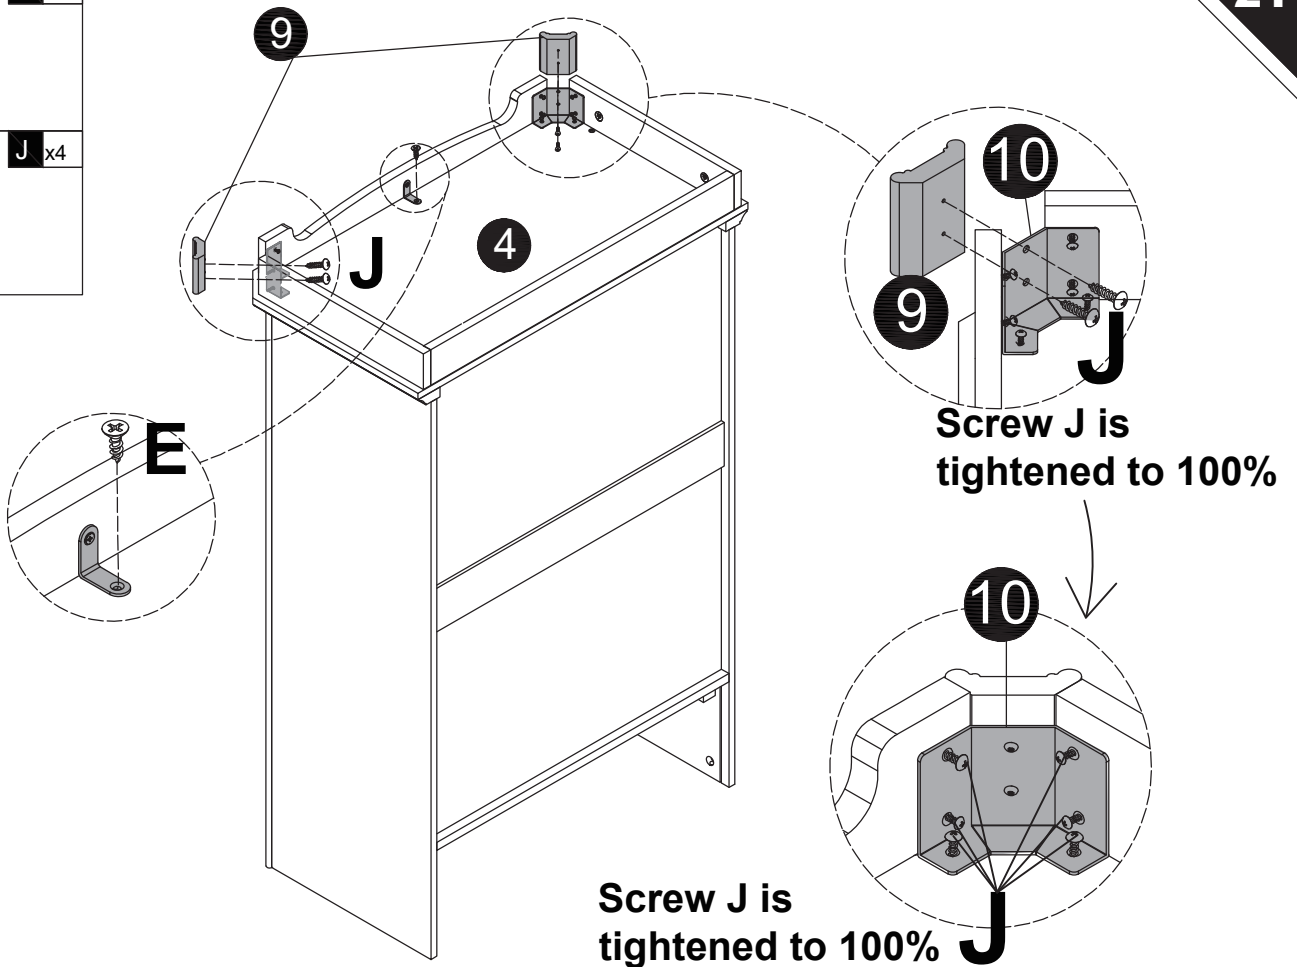

E x6

CL x1



CR x1

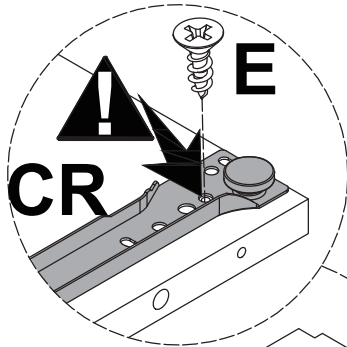

Notice



Notice

180°

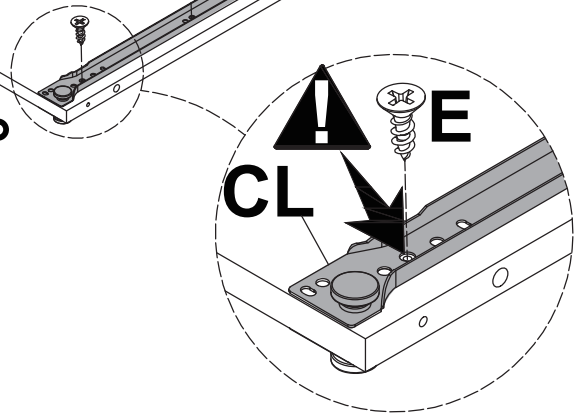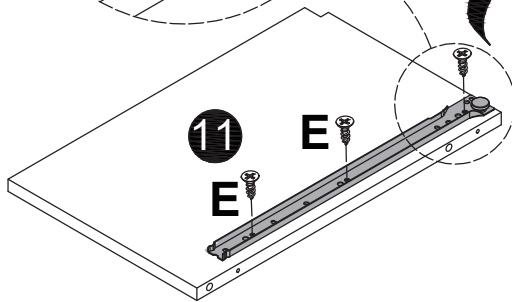

C x2


D x2

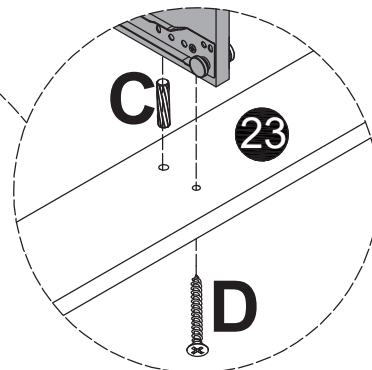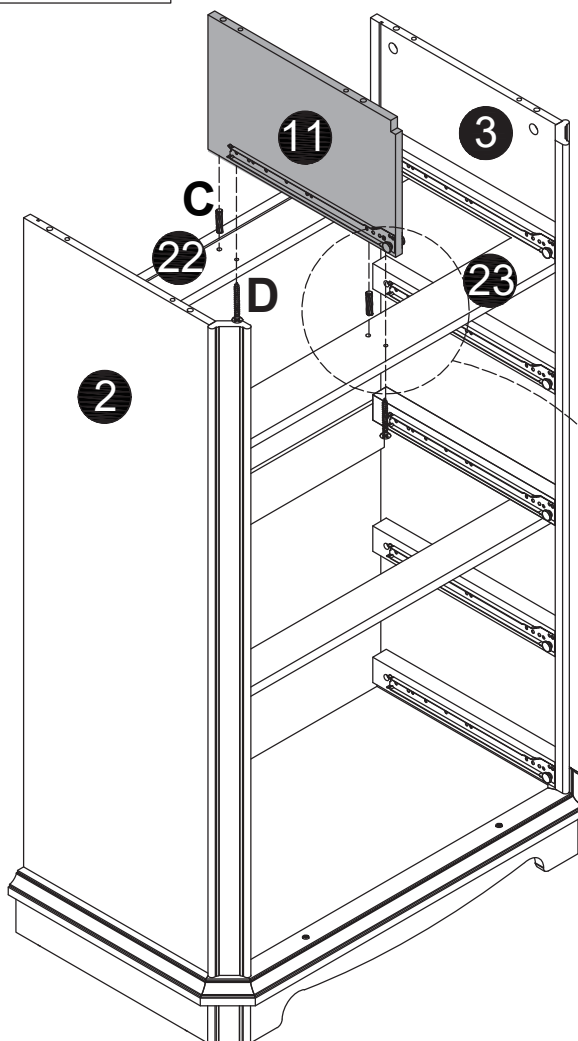

A x6




24

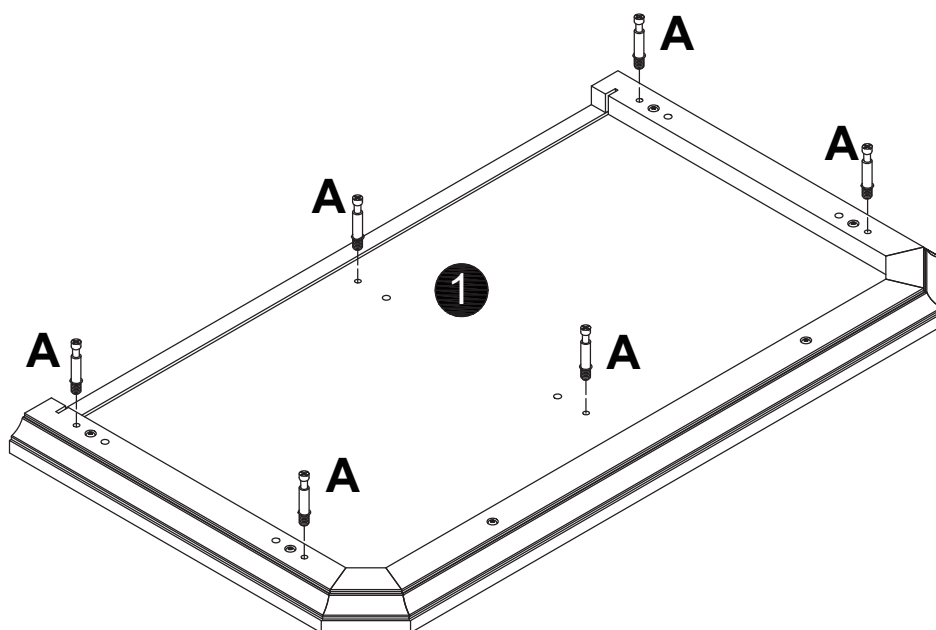

C x6




25

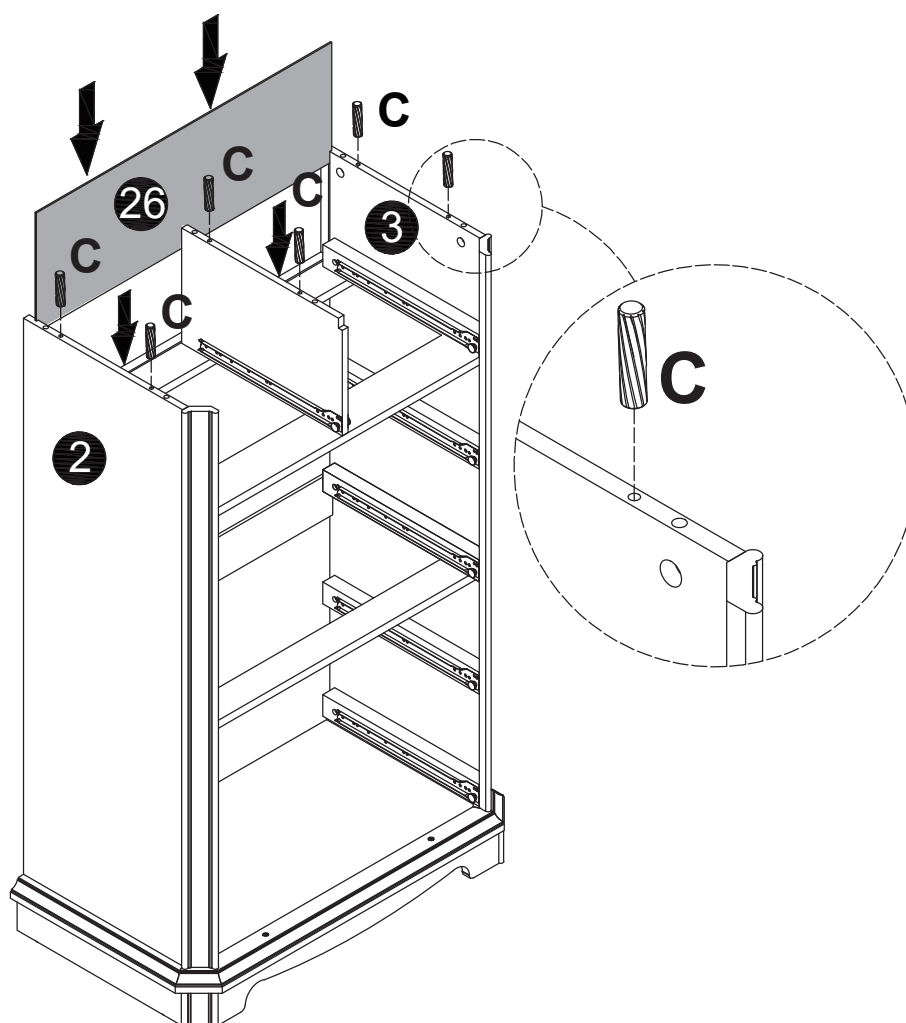

B x6



26

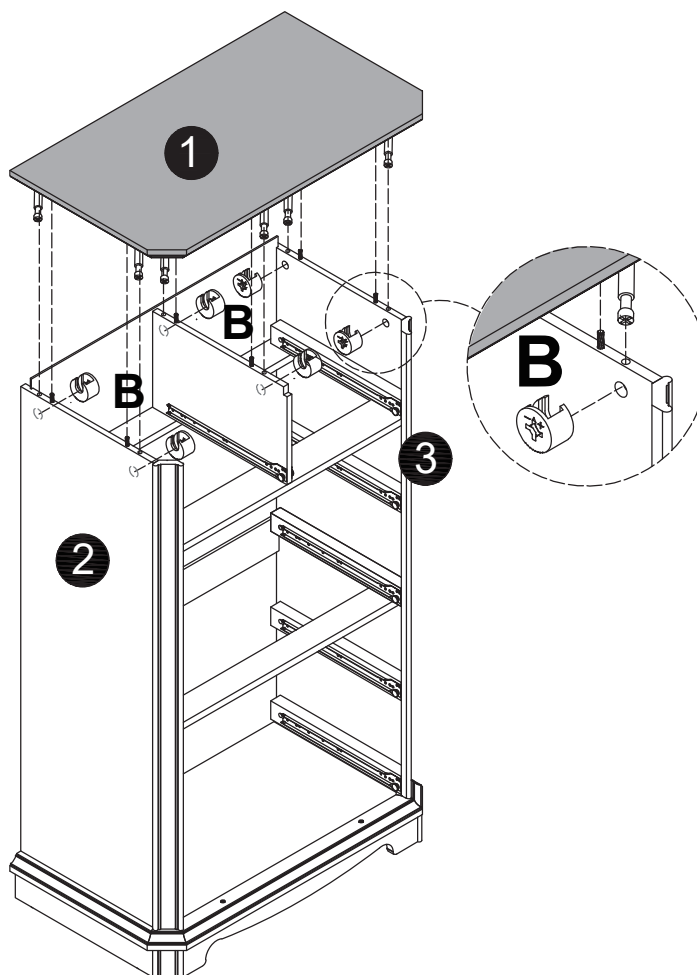


H1



H x18

H2



27

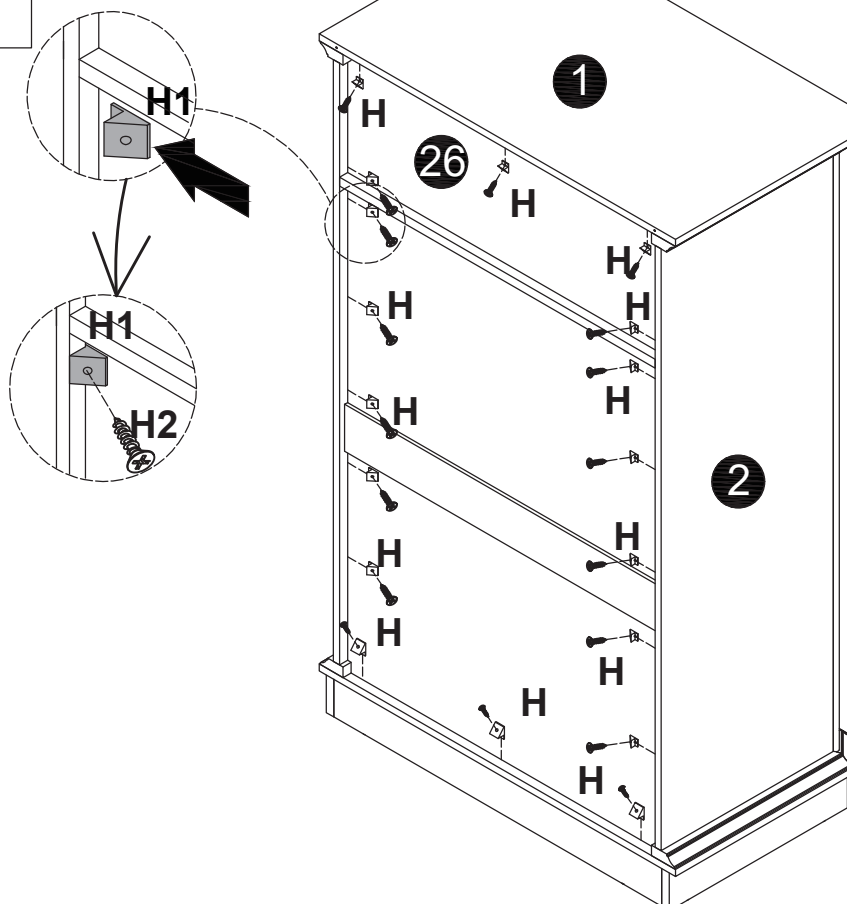

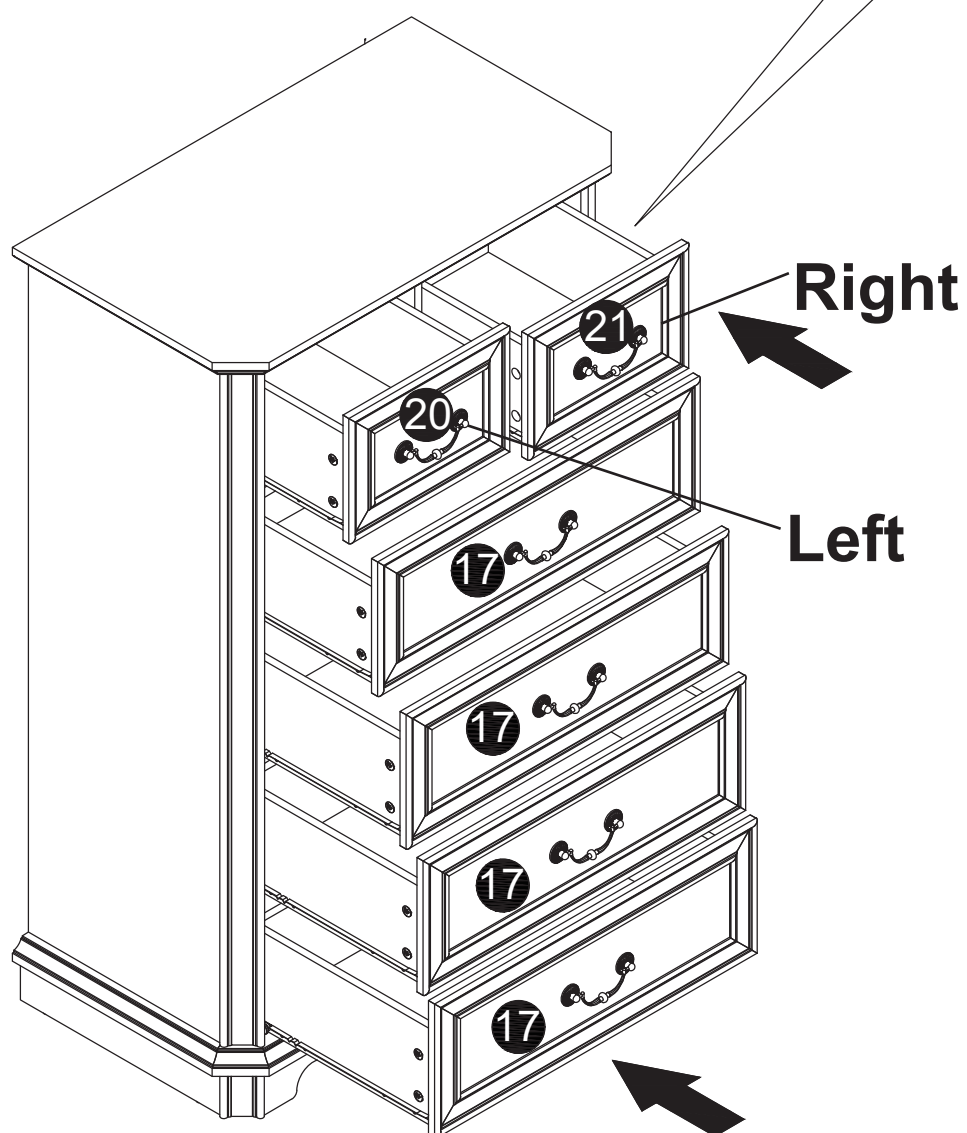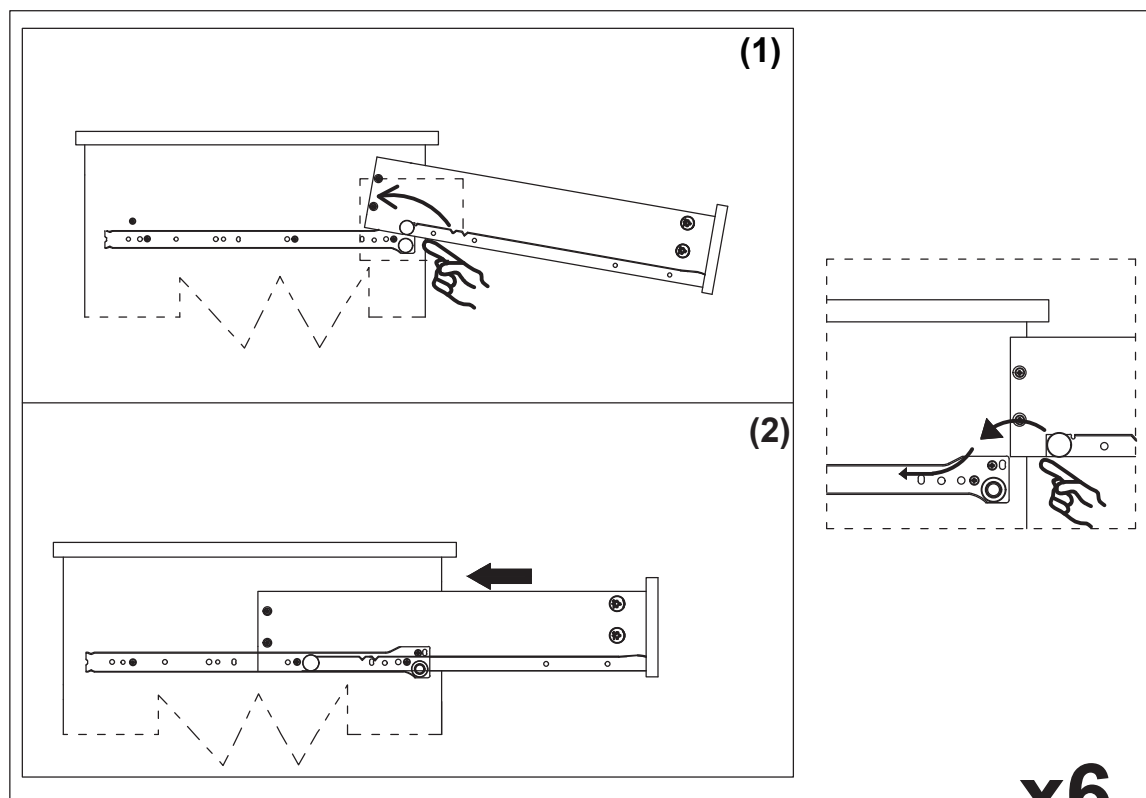

D x2




I x2




J x2




O x2

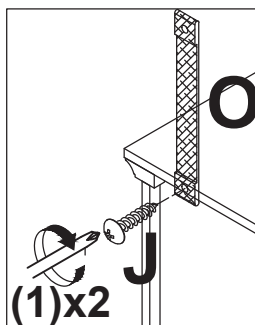


First fix the anti-rewind screw in the reserved hole of the product.

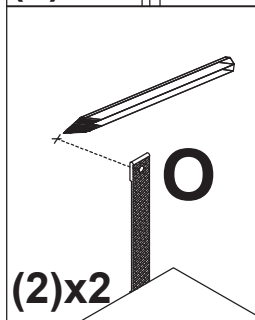


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

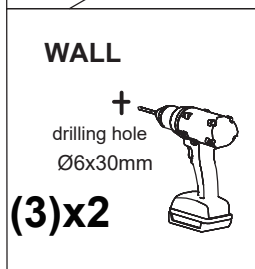

Then use a tape drill to make holes in the wall that are suitable for the product screws.

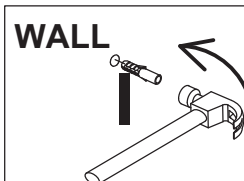

Then, put the expansion bolt into the hole

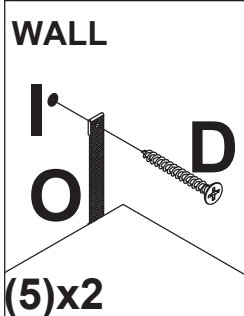

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

