



BED FRAME

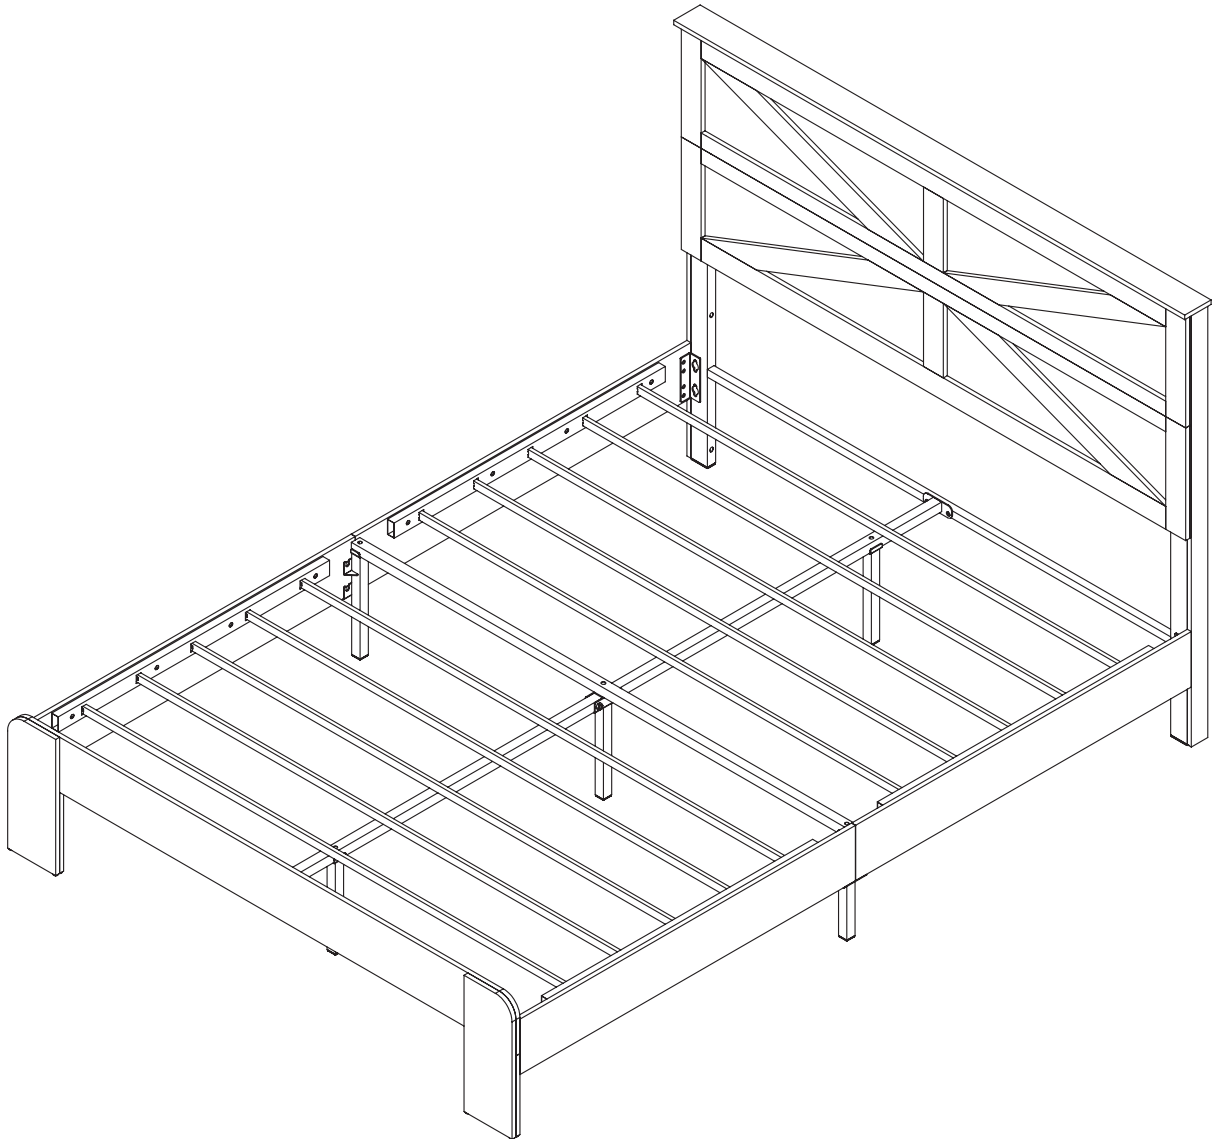

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




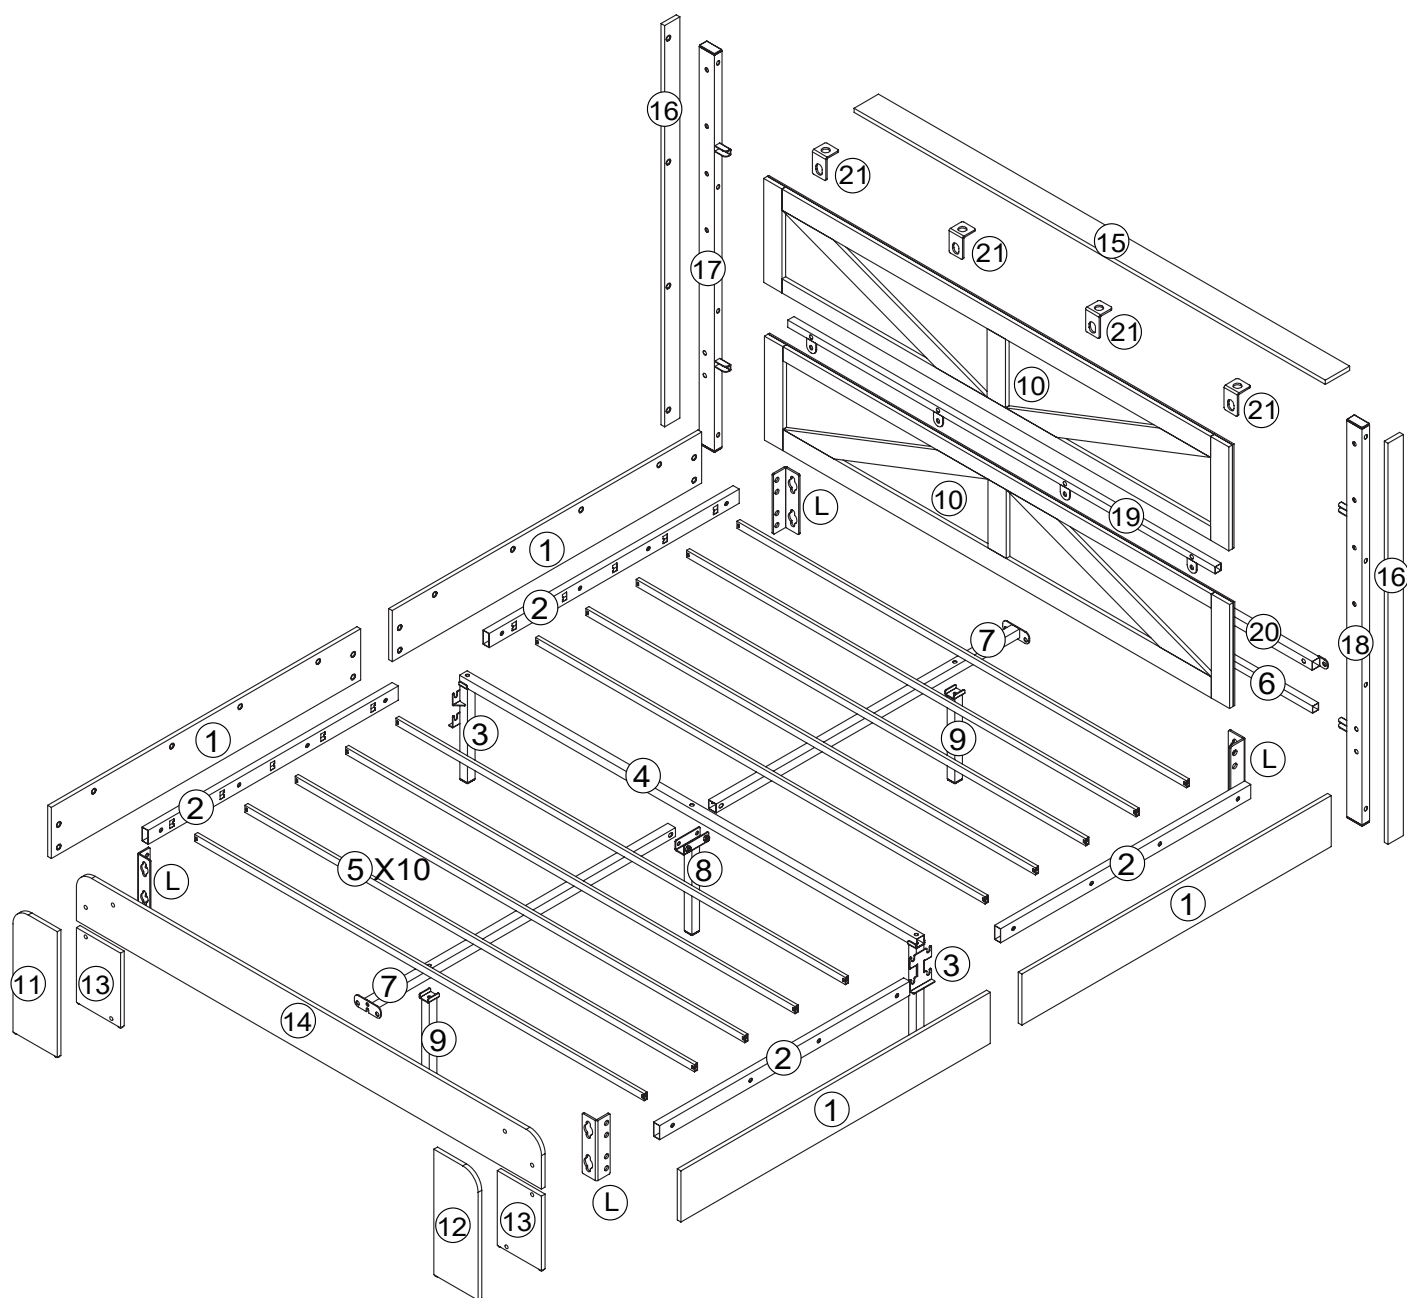


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Components

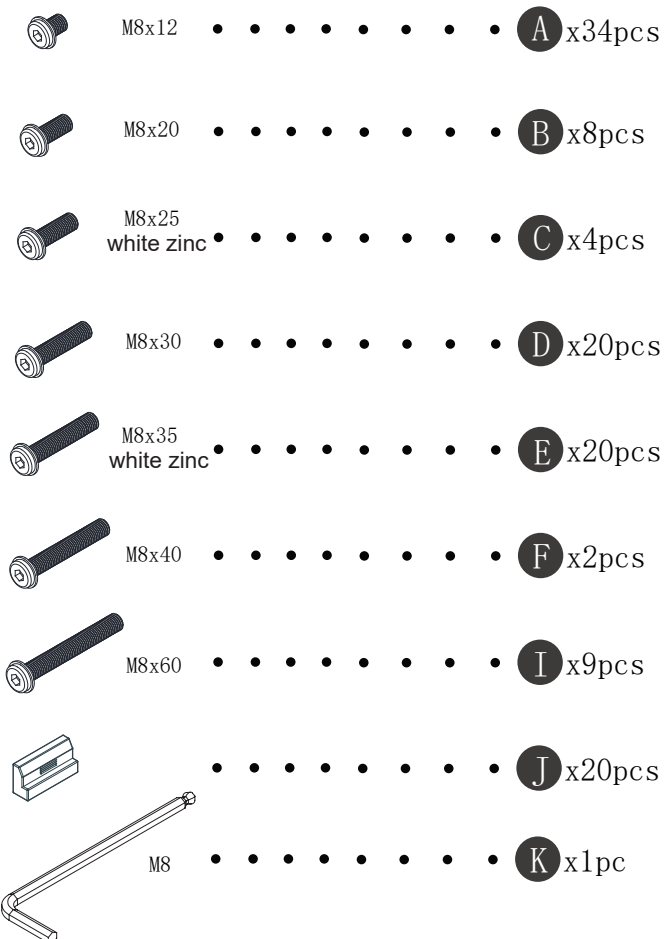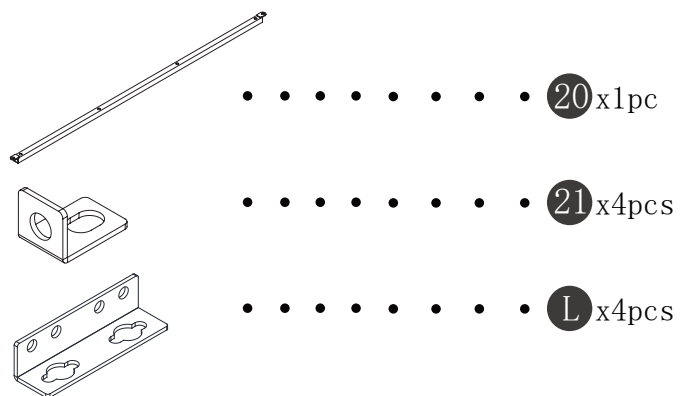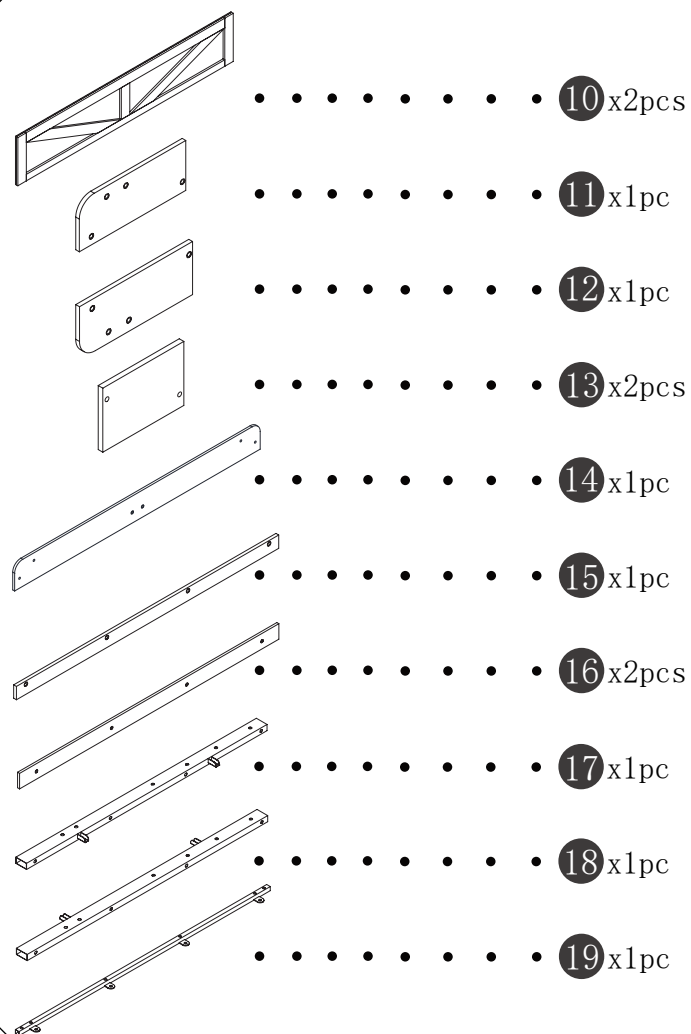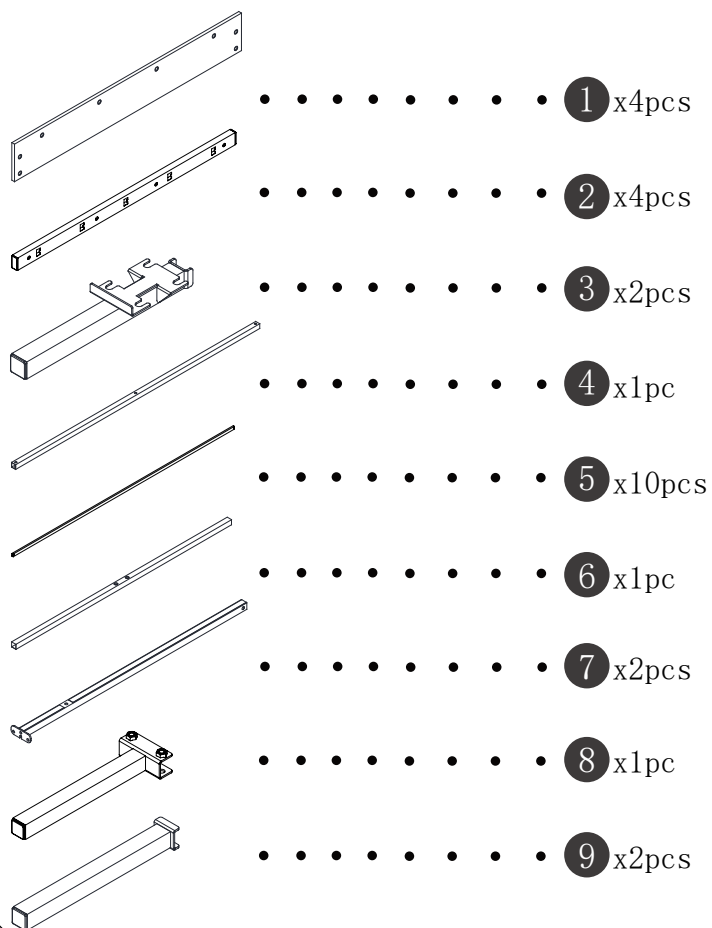


1

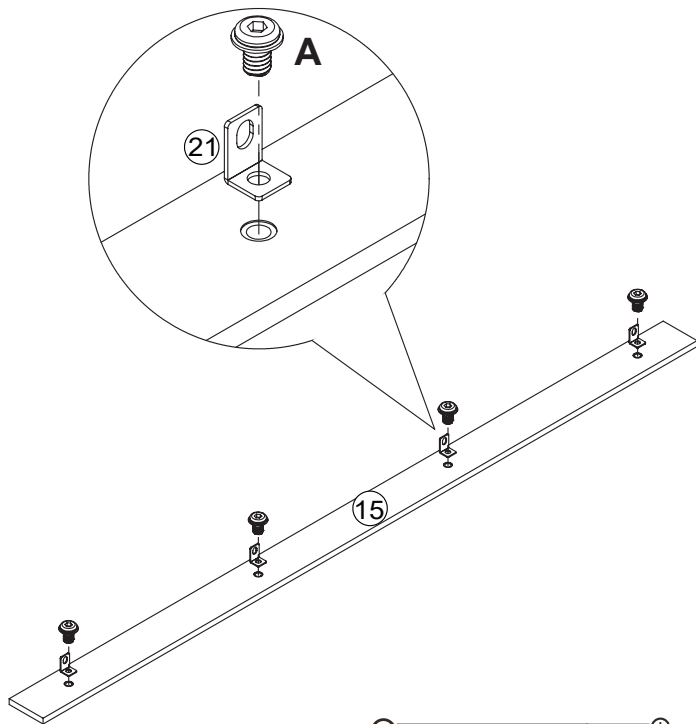


A		4pcs
---	--	------

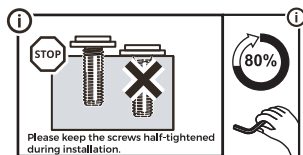


2

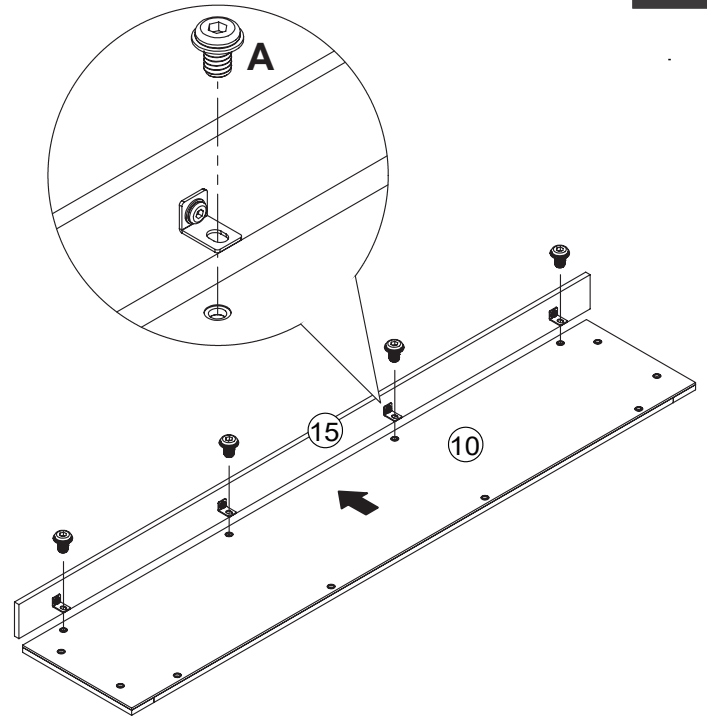


A		4pcs
---	---	------

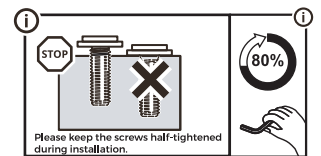


3

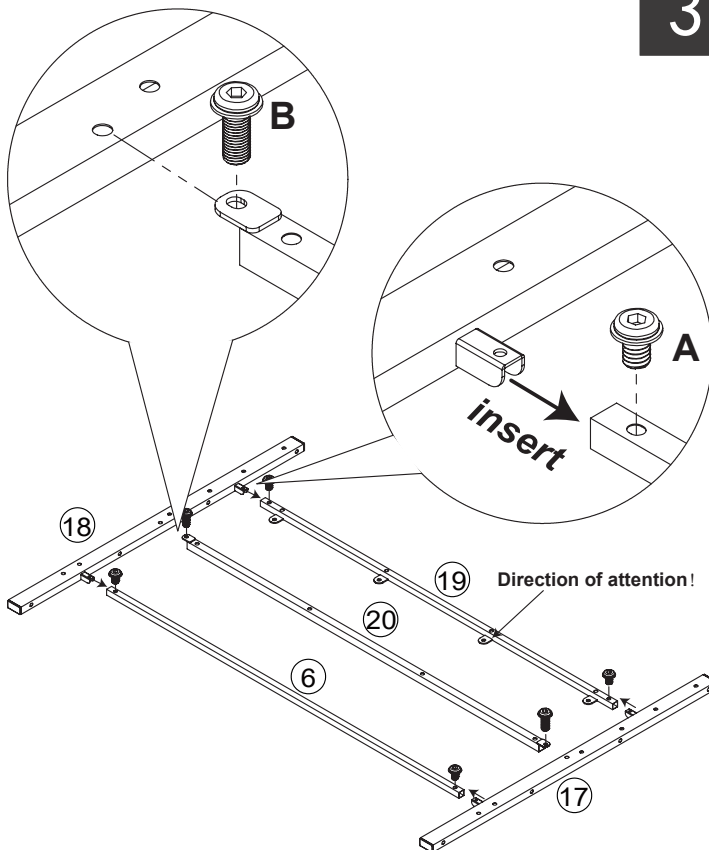


A		4pcs
B		2pcs

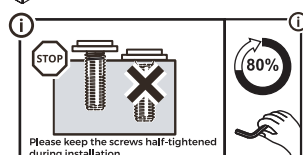


4

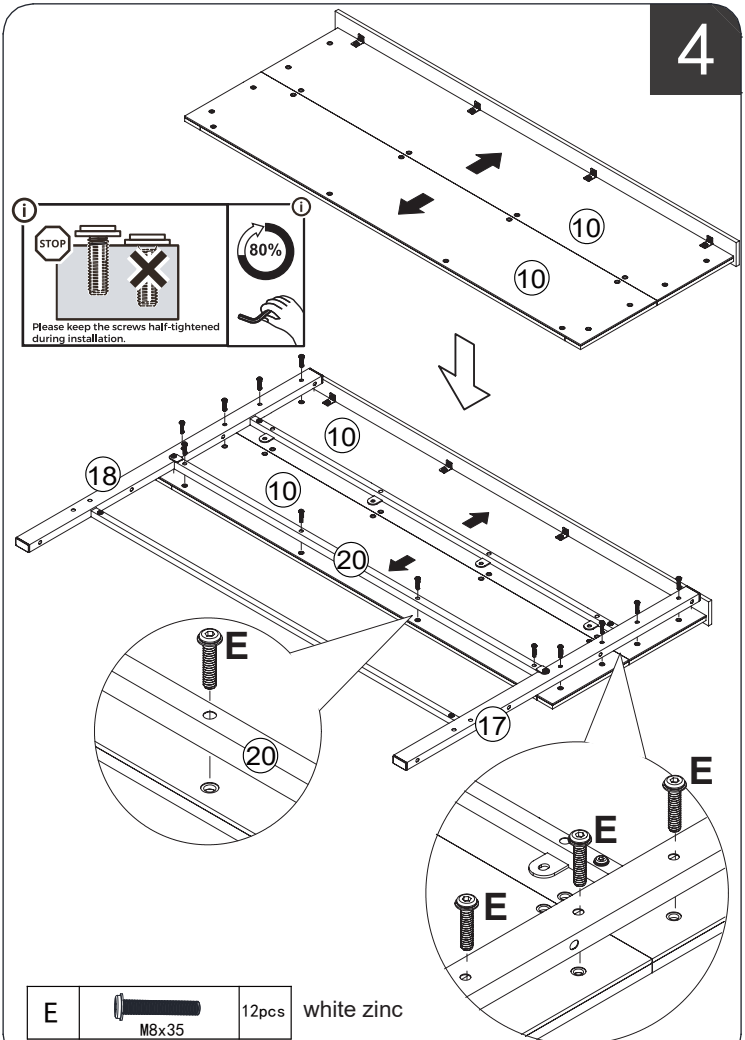

E		12pcs	white zinc
---	---	-------	------------

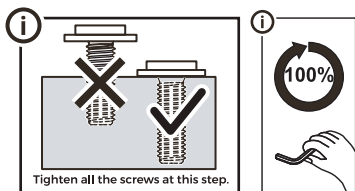


5

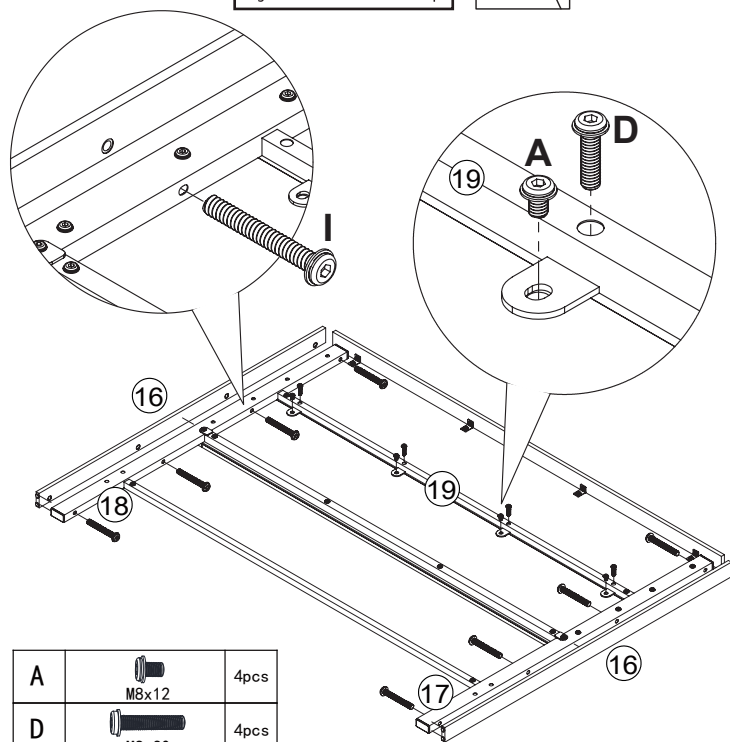

A	 M8x12	4pcs
D	 M8x30	4pcs
I	 M8x60	8pcs

6
x2

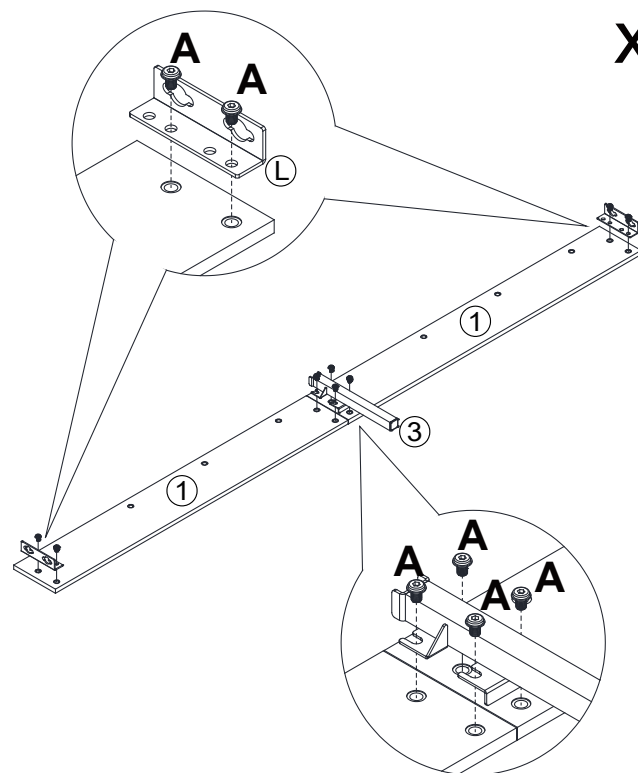


A	 M8x12	16pcs
---	---	-------

7

x2




Note the orientation
of the slot

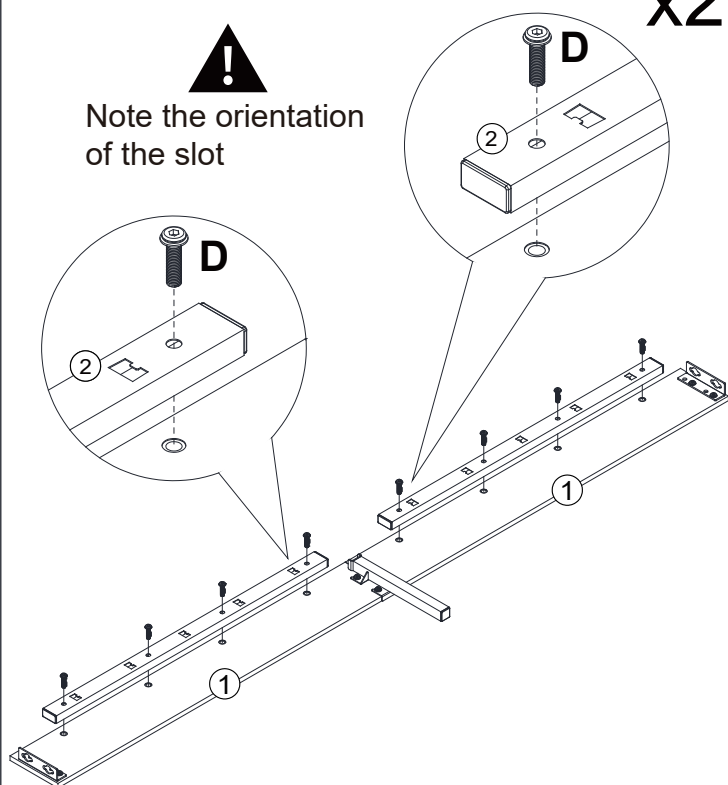

D	 M8x30	16pcs
---	---	-------

8

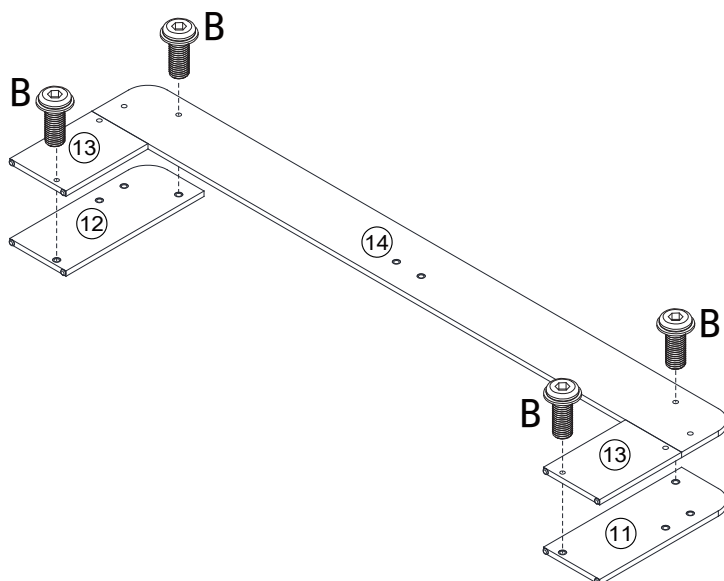

B	 M8x20	4pcs
---	---	------

