
ASSEMBLY INSTRUCTIONS


FULL BED

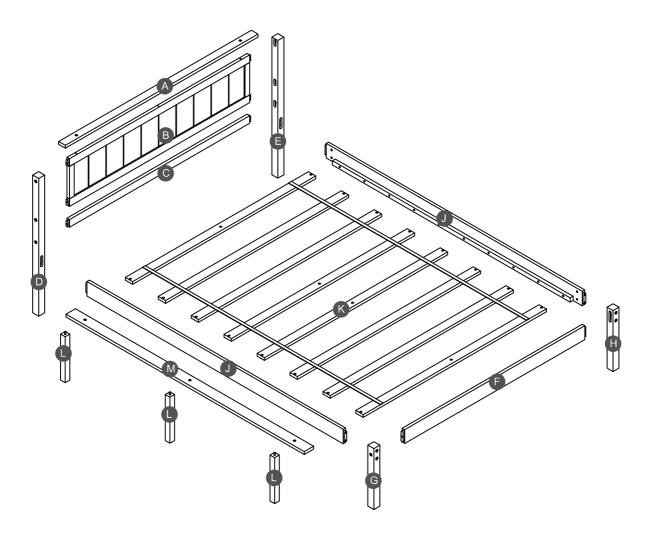

Detail View




Part List

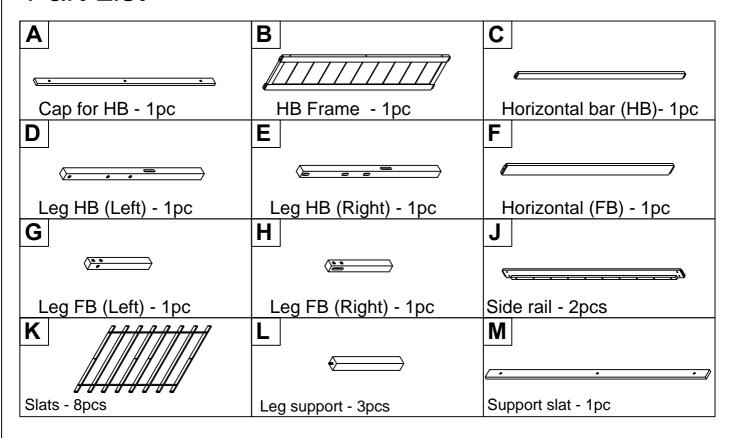

Hardware List


1	2	3
(1/4")4.5*58mm	(Ø15)1/4"*100mm	(Ø15)1/4"*80mm
Allen key (1pc)	Hex-Head bolts (8pcs)	Hex-Head bolts (8pcs)
4	5	6
(Ø12)1/4"*40mm	1/4"*15 (9.5mm)	Ø4*30mm
Hex-Head bolts (3pcs)	Horizontal-Hole bolts(16pcs)	Wood screws (20pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT!

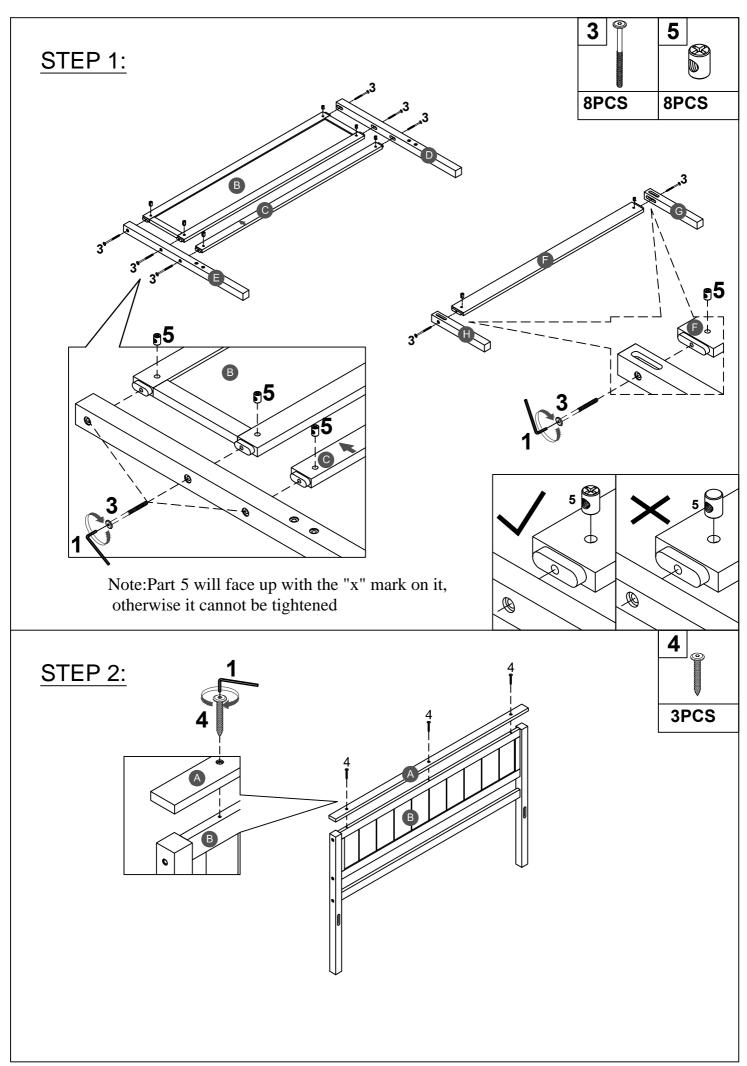



<u>STEP 3:</u>

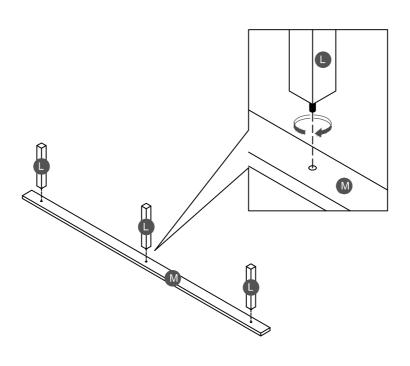


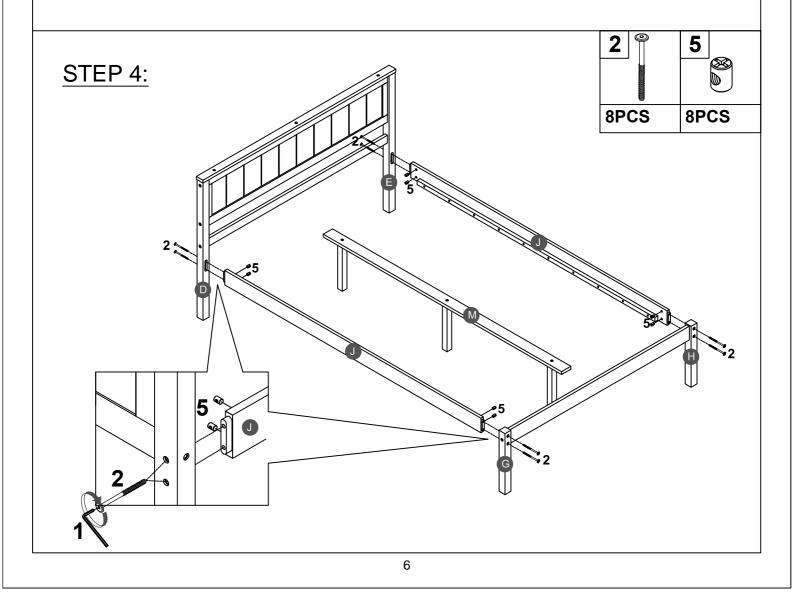


STEP 5:



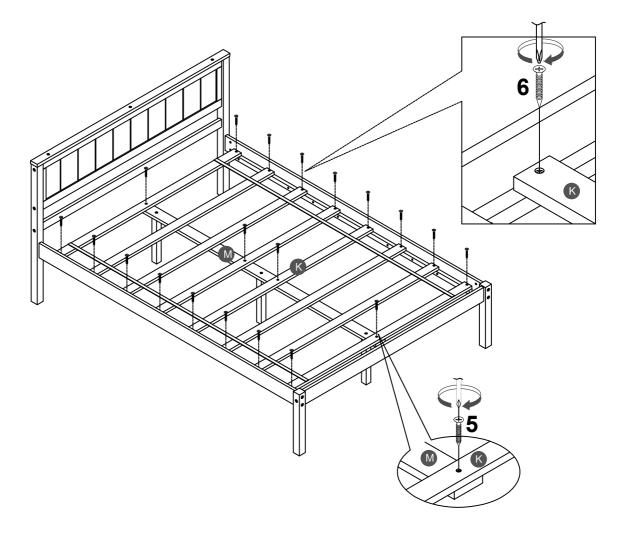





Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break