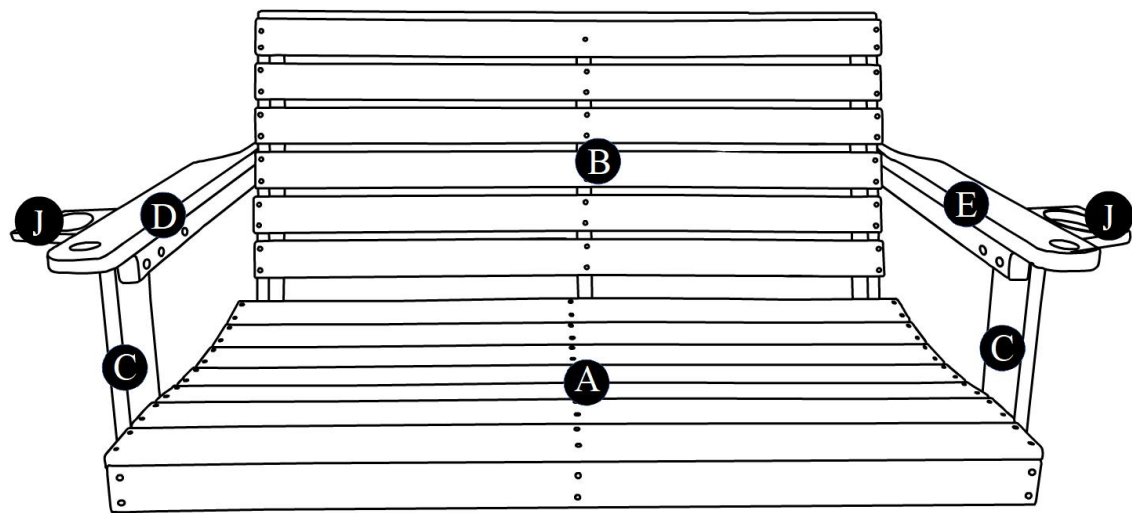


IMPORTANT

RETAIN FOR FUTURE REFERENCE READ

CAREFULLY

ASSEMBLY INSTRUCTIONS



1. Do not use electric screwdriver.
2. Required to assemble this item. Assemble the item on a flat, solid and even surface.
3. Make sure that all the necessary parts are in the box before starting the assembly.
4. Please secure all parts and Bolts loosely, only when the frame is complete should you full tighten the Bolt.
5. If any instability occurs, loosen the Bolt, re-align the components as necessary and re-tighten the Bolt.
6. This item is not a climbing frame or toy.
7. Danger of suffocation. Keep out of reach of children.

NOTE:

Before beginning assembly of product, make sure all parts are present.

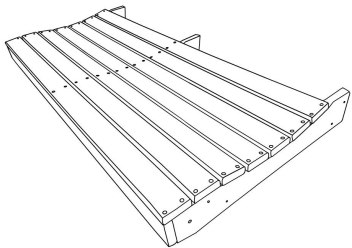
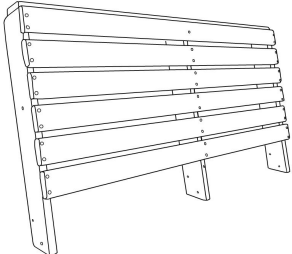
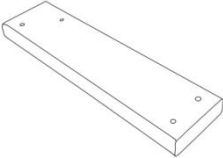
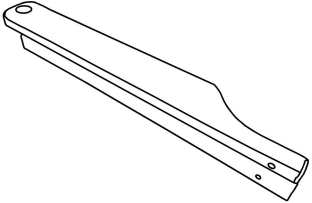
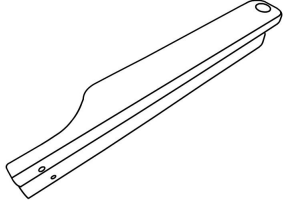
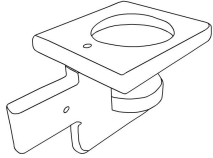
Compare parts with package content list.

If any part is missing or damaged, do not attempt to assemble the unit. Contact customer service for replacement parts.


Customer service:

Contact our professional customer support at
mwoutdoors@outlook.com

Parts List

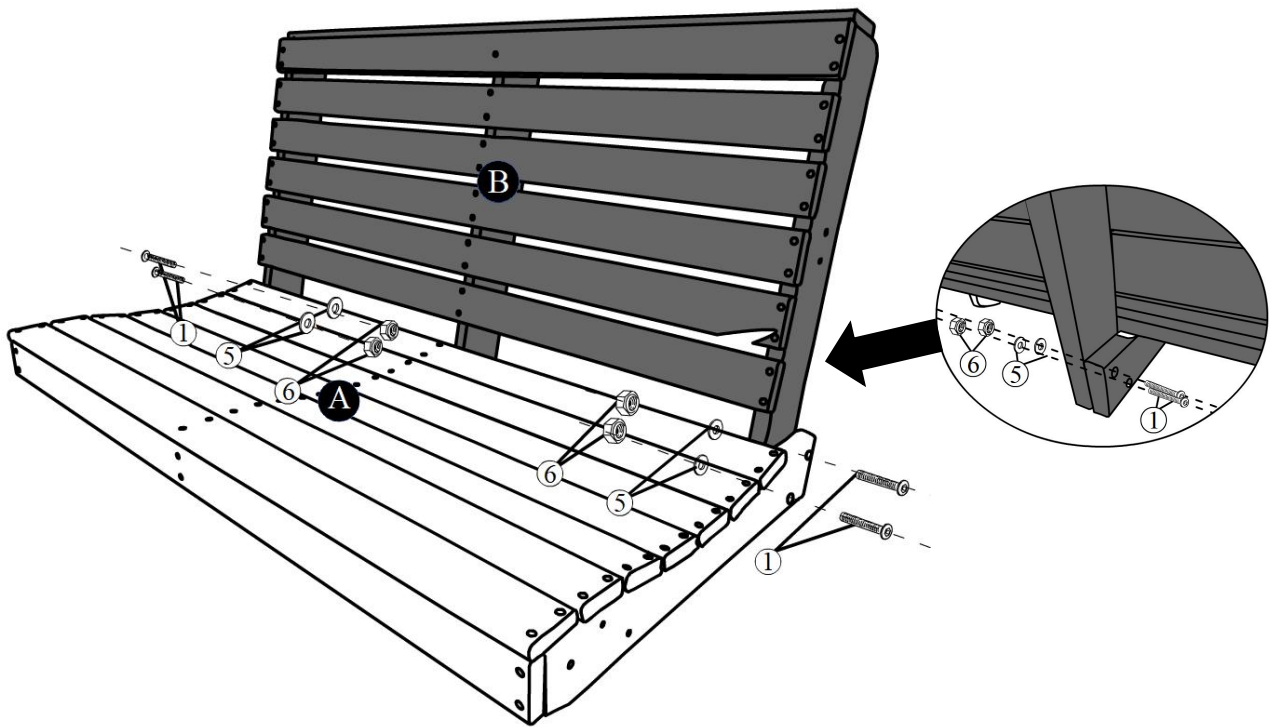
A Seat Board  1pc	B Backrest  1pc	C Support Bar  2pcs
Right Armrest  1pc	E Left Armrest  1pc	J Cup Holder  2pcs

Hardware List

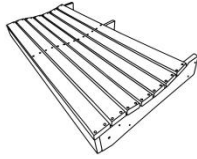
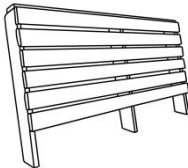

1 M6X60mm Bolt  16pcs	2 M6X50mm Bolt  2pcs	3 M8X90mm  2pcs	4 M8X50mm  2pcs	5 M6 Washer  18pcs	6 M6 Nut  18pcs
7 M8 Washer  8pcs	8 M8 Nut  4pcs	9 Wrench  1pcs	10 Wrench  1pc	11 Allen Key  1pc	12 Metal Chain  2pcs

Step1:

Fix **A** (Seat Board) and **B** (Backrest) together with Bolt ① (M6X60mm Bolts) ⑤ (Washer) and ⑥ (Nut), as shown in the figure.

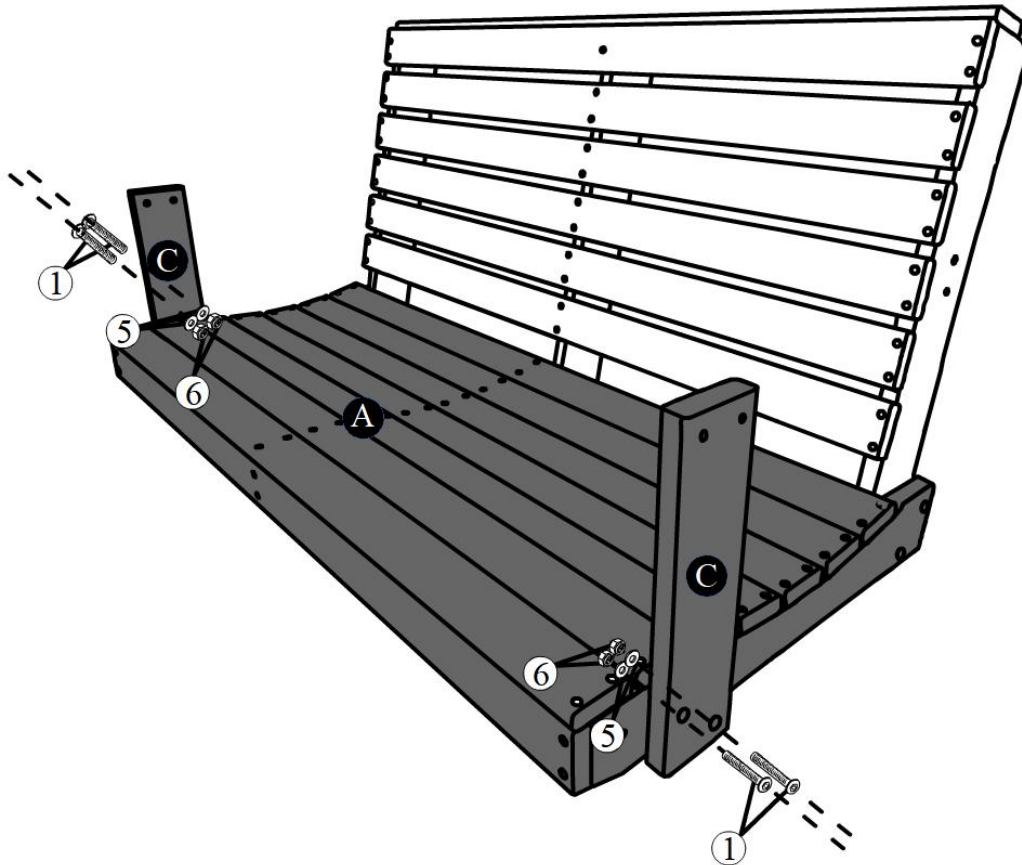


Parts & Hardware Needed

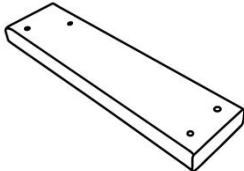
A Seat Board	B Backrest	1 M6x60mm Bolt	5 M6 Washer	6 M6 Nut
				
1pc	1pc	6pcs	6pcs	6pcs

Step 2:

Fix **C** on **A** with a Bolt**①** (M6X60mm)**⑤** (Washer) and **⑥**(Nut), as shown in the figure.

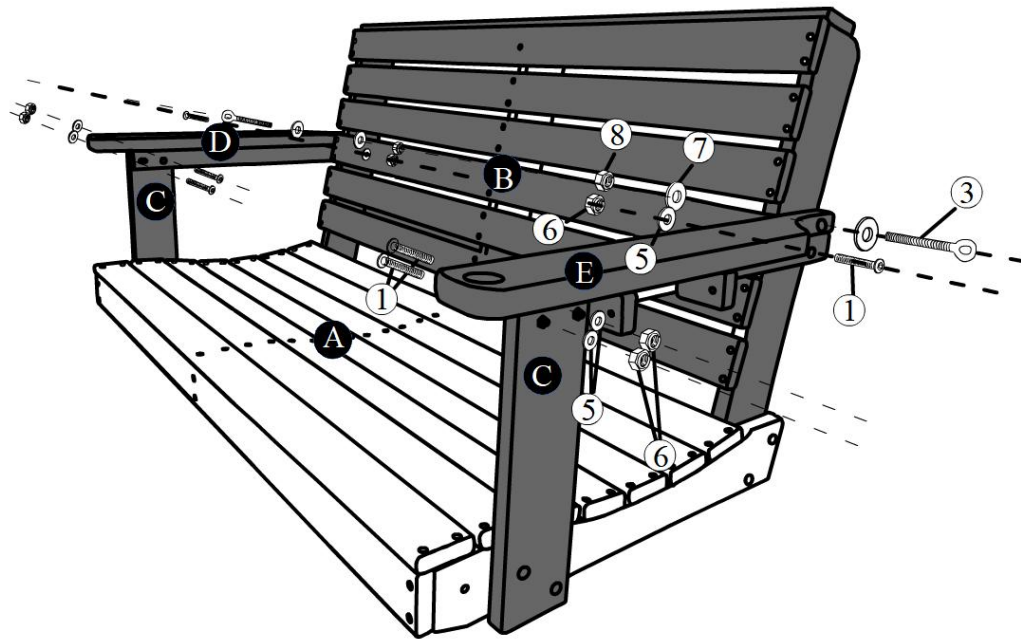


Parts & Hardware Needed

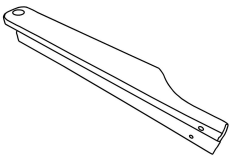
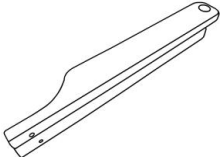

C	Support Bar	1	M6x60mm Bolt	5	M6 Washer	6	M6 Nut
							
2pcs		4pcs		4pcs		4pcs	

Step 3:

Fix the right D and left E armrests to Part C using Bolt ① (M6X60mm) ⑤ (Washer) and ⑥ (Nut). Secure the small holes of D & E to Part B with the same M6 hardware, and the large holes to B using ③ (M8x90mm) ⑦ (M8 Washer) and ⑧ (M8 Nut)。



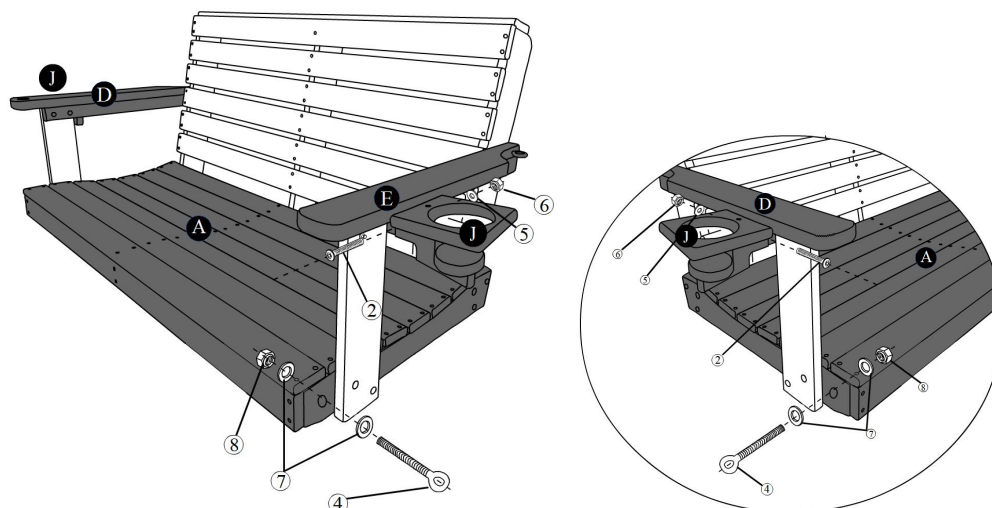
Parts & Hardware Needed

D Right Armrest  1pc	E Left Armrest  1pc	1 M6x60mm Bolt  6pcs	3 M8x90mm  2pcs
5 M6 Washer  6pcs	6 M6 Nut  6pcs	7 M8 Washer  4pcs	8 M8 Nut  2pcs



Step 4:

Finally, use Bolt ② (M6X50mm) to fix F (Cup Holder) to D and E, as shown in the figure. and the large holes to A using ④ (M8x50mm) ⑦ (M8 Washer) and ⑧ (M8 Nut) .

***Tip:** 2 positions available for cup holder assembly on each armrest(front&middle).



Parts & Hardware Need

J Cup Holder  2pcs	2 M6x50mm Bolt  2pcs	4 M8x50mm  2pcs	5 M6 Washer  2pcs
6 M6 Nut  2pcs	7 M8 Washer  4pcs	8 M8 Nut  2pcs	

Kind Reminder

1. Fully tighten all the screws before use.
2. Chains' length up to you according to your assembly situation.

Now you can enjoy your Porch Swing!