


USER'S MANUAL MINI-CHANDELIER

WARNING

- 1.Shut off the power to the area where you will be working
- 2.Use 60Watt maximum type B bulb.
- 3.Do not use polish or cleaner on your lamp. just wipe with soft cloth.

STEP 1--UNPACK

- 1.Carefully unpack your new fixture and lay out all the parts on a clear surface.
- 2.The bag includes acrylic bead strings as followings:
A[4pcs], B[8pcs], C[1pc], D[28pcs], E[6pcs], F[5pcs] as shown on the right

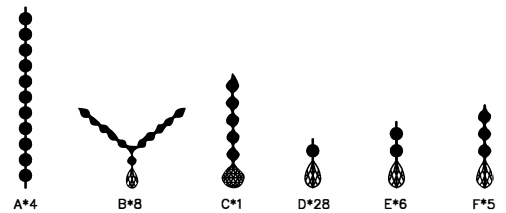

STEP2--CHANDELIER ASSEMBLY

- 1.Tube(K2) into coupling(J) in clockwise.
- 2.Hook the acrylic bead string(A) between top disk and each arms' disk;
Hook the acrylic bead string(B) between each arm's disk.
- 3.Hook the acrylic bead string(C) under the bottom disk.
- 4.Hook the acrylic bead string(D) on the ring of each arm.
Hook the acrylic bead string(D) on each disk.
- 5.Hook the acrylic bead string(E) on the bottom bowl.
Hook the acrylic bead string(F) on the bottom disk.
- 6.Insert the Candlestick(N) onto socket and install E12 bulb(not included) into socket.

*IMPORTANT NOTICE

THERE ARE 2 WAYS TO INSTALL THIS CHANDELIER-PORTABLE WIRE(STEP3) OR FIXED WIRE(STEP4) INSTALLATIONS. FOR FIXED WIRE INSTALLATION,WE ADVISE CALLING A QUALIFIED ELECTRICIAN WHEN MAKING THE WIRE CONNECTIONS TO THE JUNCTION BOX.

STEP3--PORTABLE WIRE INSTALLATION(1ST alternative)

*NOTE:CUT OFF THE FIXTURE COPPER GROUND WIRE.

*CAUTION:

- 1.INSTALLATION SHOULD NOT BE MADE ON A RADIANT-HEATING CEILING.
- 2.THE HOOKS ARE TO ENGAGE THE CHAIN ONLY AND NOT THE ELECTRIC WIRE.

A.HOOK INSTALLATION(PACKET INCLUDED TWO HOOKS)

For plaster or plaster board ceilings

- 1.Drill a hole in the ceiling to the same diameter as the closed flaps of the enclosed TOGGLE BOLT assembly(A).
- 2.Insert flaps and bolt into the ceiling with the TOGGLE BOLT protruding through the ceiling lock the assembly by threading on the hook as shown.
- 3.Drape your chain to second hook or let it hang straight.

For wood or acoustic board ceilings(minimum thick size is 1-1/2 Inch).

- 1.Select a place on the ceiling where a wood beam exists.
- 2.Thread the steel screw(B) into hook(C).
- 3.Screw the assembly into the wood beam.
- 4.Drape your chain to second hook or let it hang straight.

