
ZEAFIVE®

ASSEMBLY INSTRUCTIONS BATHROOM VANITY TOP

MODEL.
T-42W

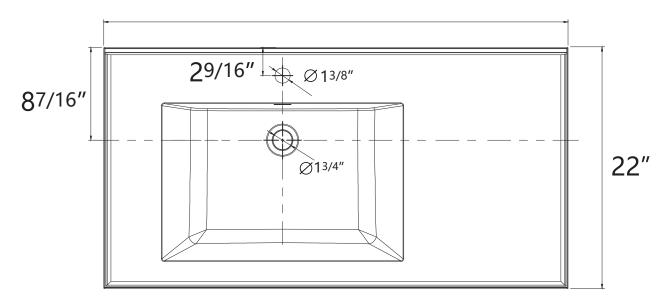


423/8"






INSTALLATION STEPS

- **1.Prepare the Vanity:** Make sure the vanity is in place and securely attached to the wall.
- 2.Seal the Edges: To prevent water damage and ensure a clean finish, apply a bead of silicone caulk along the edges where the countertop meets the vanity.

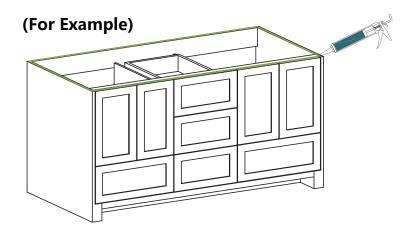

3.Attach the Countertop: Secure the solid surface countertop on the vanity.

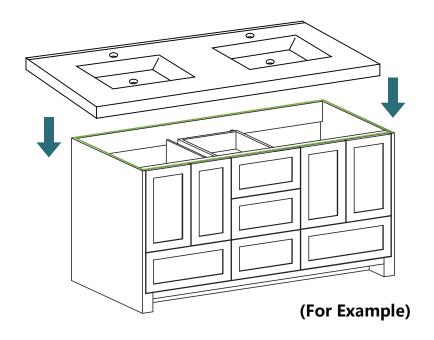



HOME SERVICES



INSTALLATION VIDEO

Missing Part or Defective?

Please Contact the Customer Service Team

