

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance


	●Not for commercial use. For residential use only.
	●Do not put hot items directly on furniture surface.
	●Do not clean furniture with harsh cleansers or polish.
	●Do not place furniture under direct sunlight.
	●Do not place furniture near heating or cooling vents.
	●Do not write on furniture without a padded barrier to protect the surface.
	●Do not place furniture outside . For indoor use only.
	●Stains may be removed with mild soap solution and damp cloth.
	●Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Corner carton for hardware packs.

Assembly Instructions

CHEST

45 MINUTE ASSEMBLY

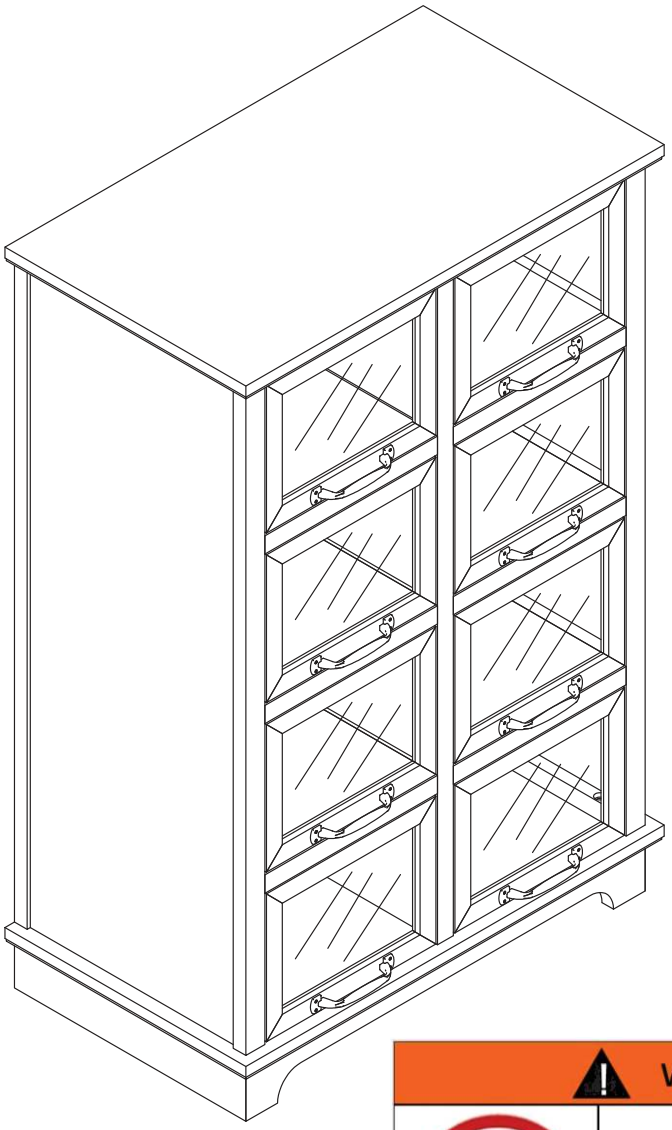

WARNING










CSU

This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Caution: This Chest is NOT a TOY. Keep your child / children at bay during the assembly process. Whenever lifting or moving the Chest and to prevent damage to the Chest, two adults may be needed to execute these actions.





ASSEMBLY INSTRUCTION

Parts List

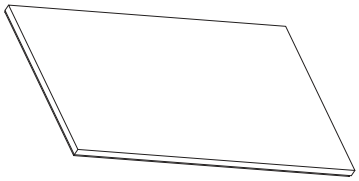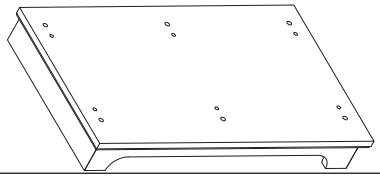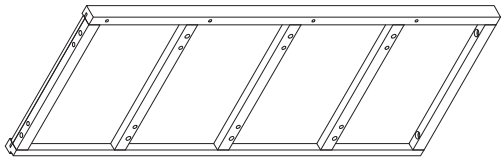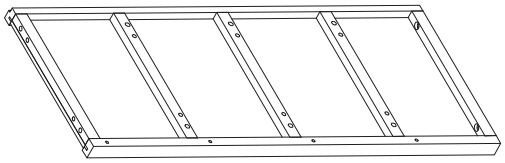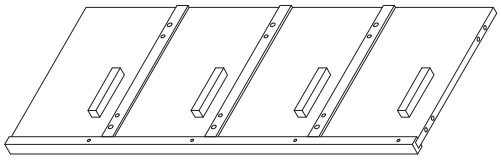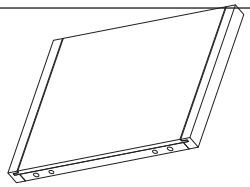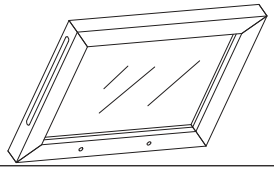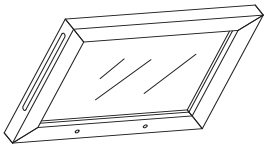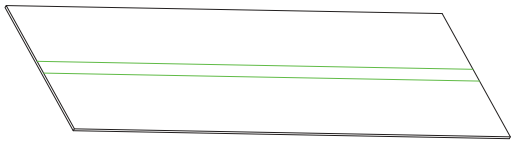Label	Picture	Description	QTY
A		Top	1
B		Bottom	1
C		Right Panel	1
D		Left Panel	1
E		Middle Panel	1
F		Shelf	6
G		Left Door	4
H		Right Door	4
I		Back Panel	1


ASSEMBLY INSTRUCTION

Hardware

Label	Picture	Description	QTY
1		Metal Pin 6 x 20	17
2		Wooden Dowel 8 x 28	37
3		Cam Bolt 6 x 28	5
4		Cam Lock 10 x 15	5
5		Bolt 1/4'' x 25	33
6		Spring Washer 6 x 13	33
7		Flat Washer 6 x 13	33
8		Mushroom Screw 3 x 15	17
9		Handle	8
10		Bolt of Handle M4 x 25	17
11		Allen Wrench (K4 x 80)	1
12		Screwdriver	NOT PROVIDED
13		Anti tip Kit	2 sets
13.1		Plastic Anchor	2
13.2		Metal Bracket	4
13.3		Long Screw 4 x 40	2
13.4		Short Screw 4 x 15	2
13.5		Steel Wire	2

Assembly Preparation


Before Beginning Assembly:

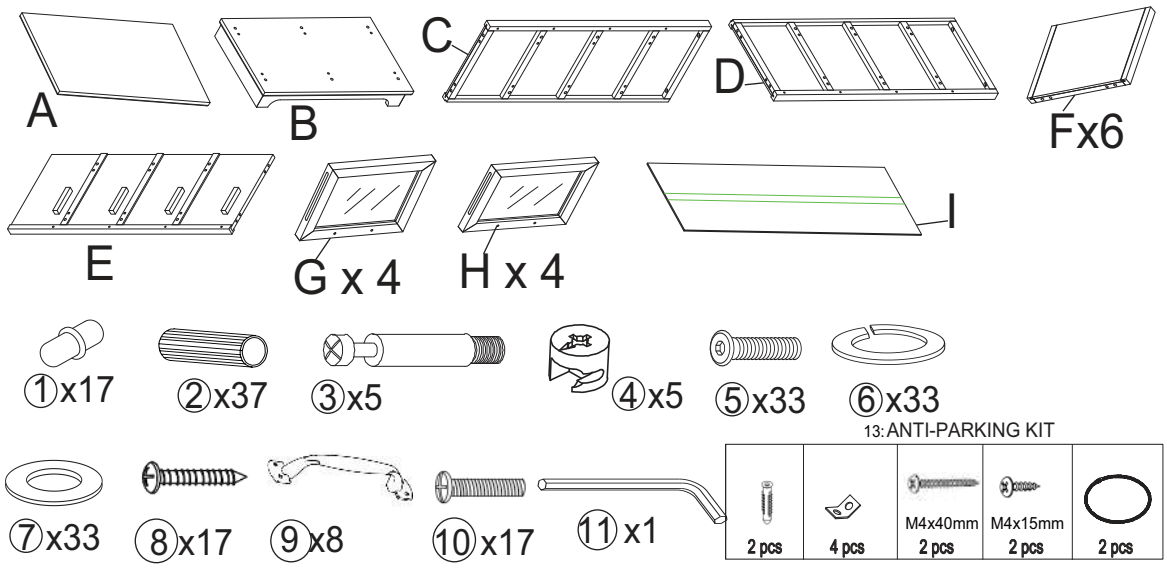

- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- Save all packaging until finished-

Assembly Steps


Overview

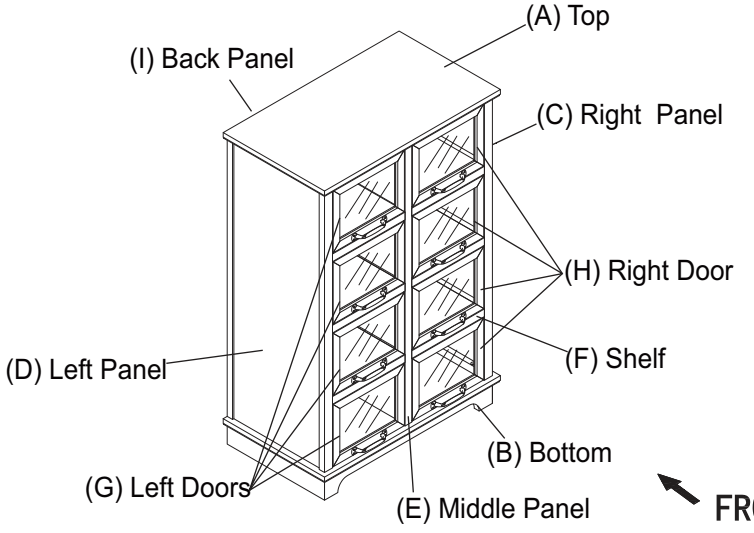

This Chest has multiple parts and may require up to some 45 minutes to assemble. To give you an overview of the Chest parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

ASSEMBLY INSTRUCTION

Step 1

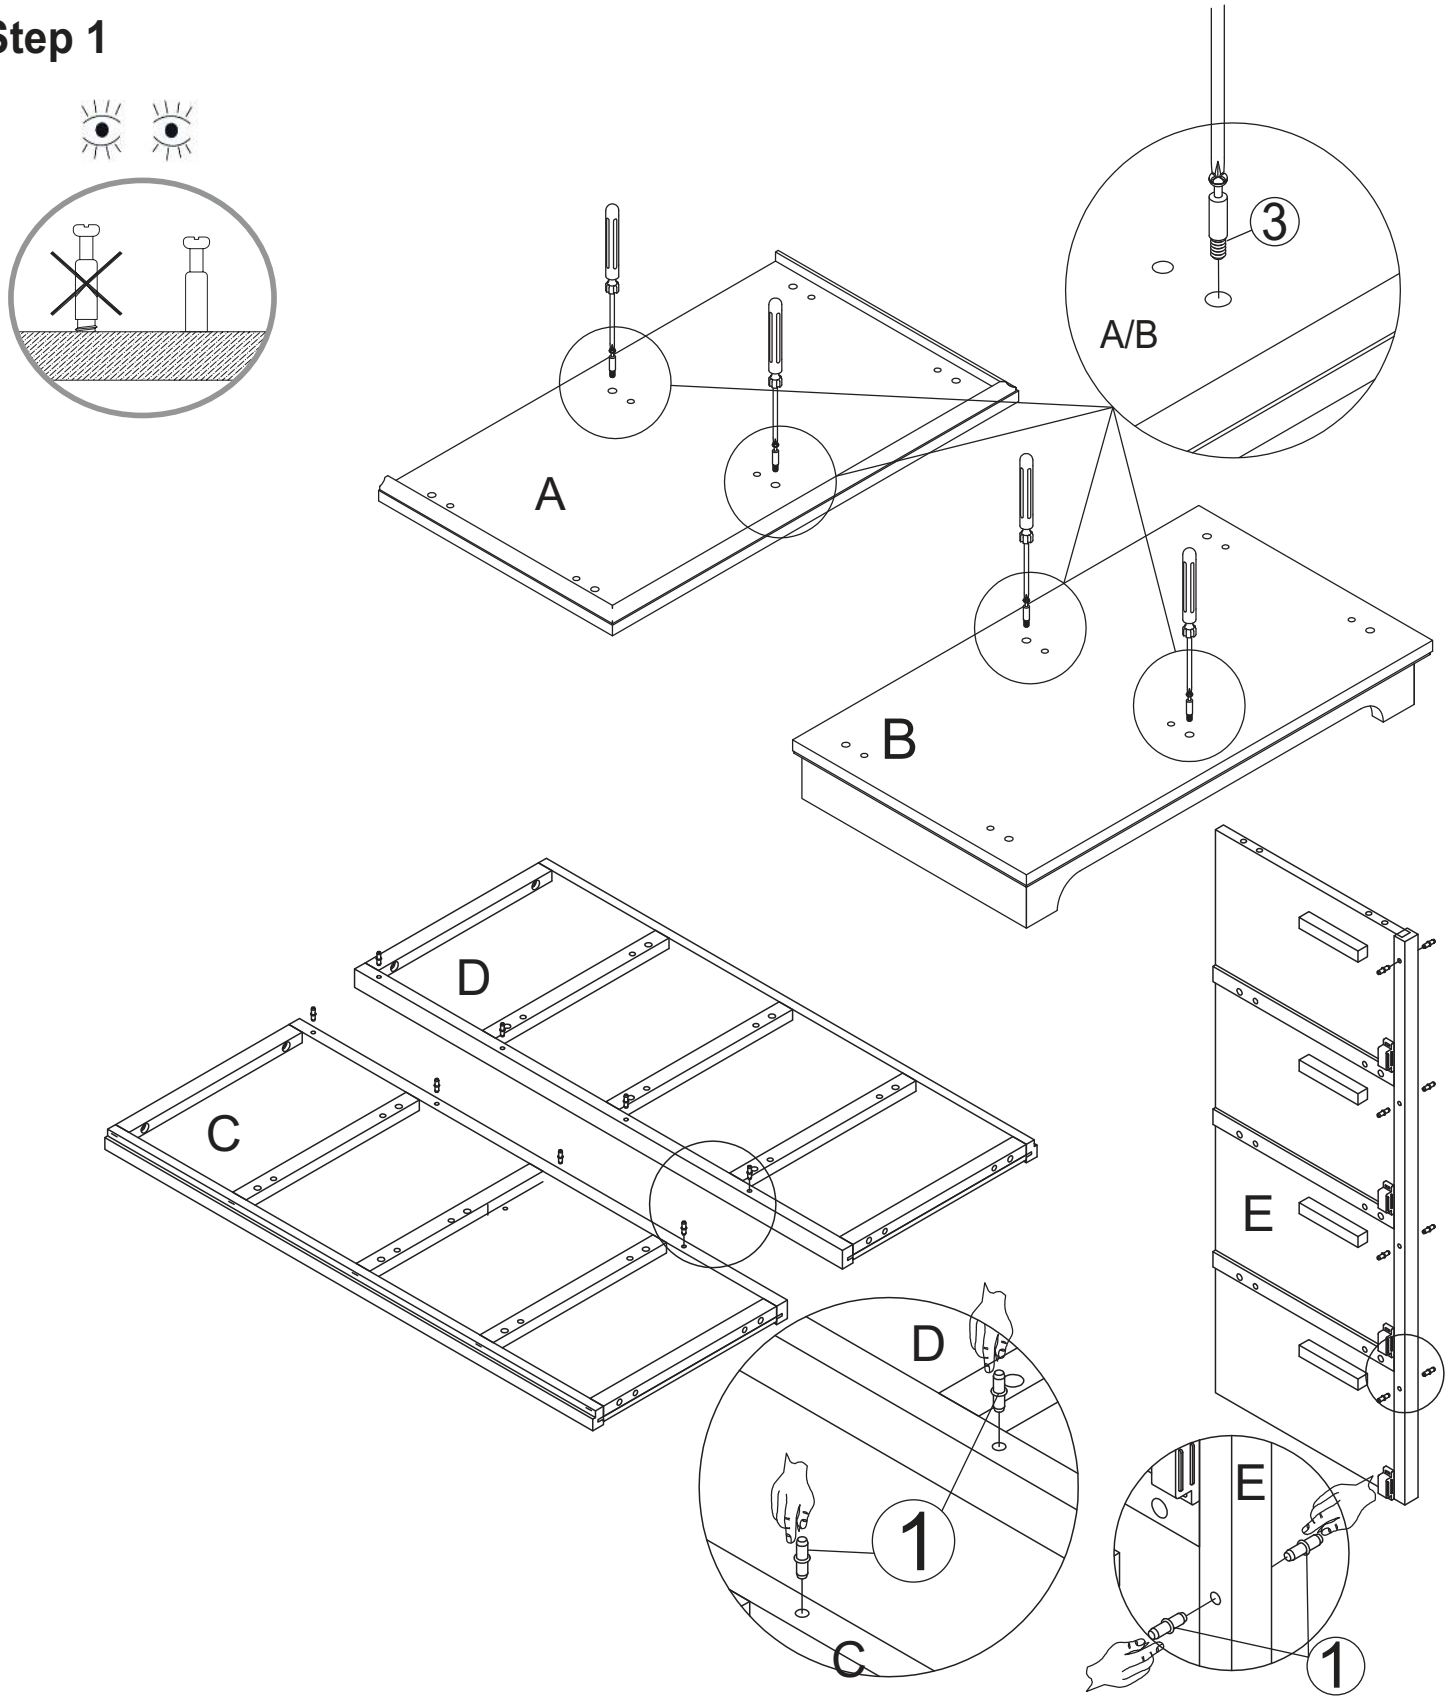


Unpack and place all parts on clean, non - marring suface.

Install the cam bolts (3) into Top A and Bottom B using a screwdriver

Install the Metal Pin (1) into Right Panel (C),Left Panel (D) and Middle Panel (E) by hand as picture

ASSEMBLY INSTRUCTION


Step 2

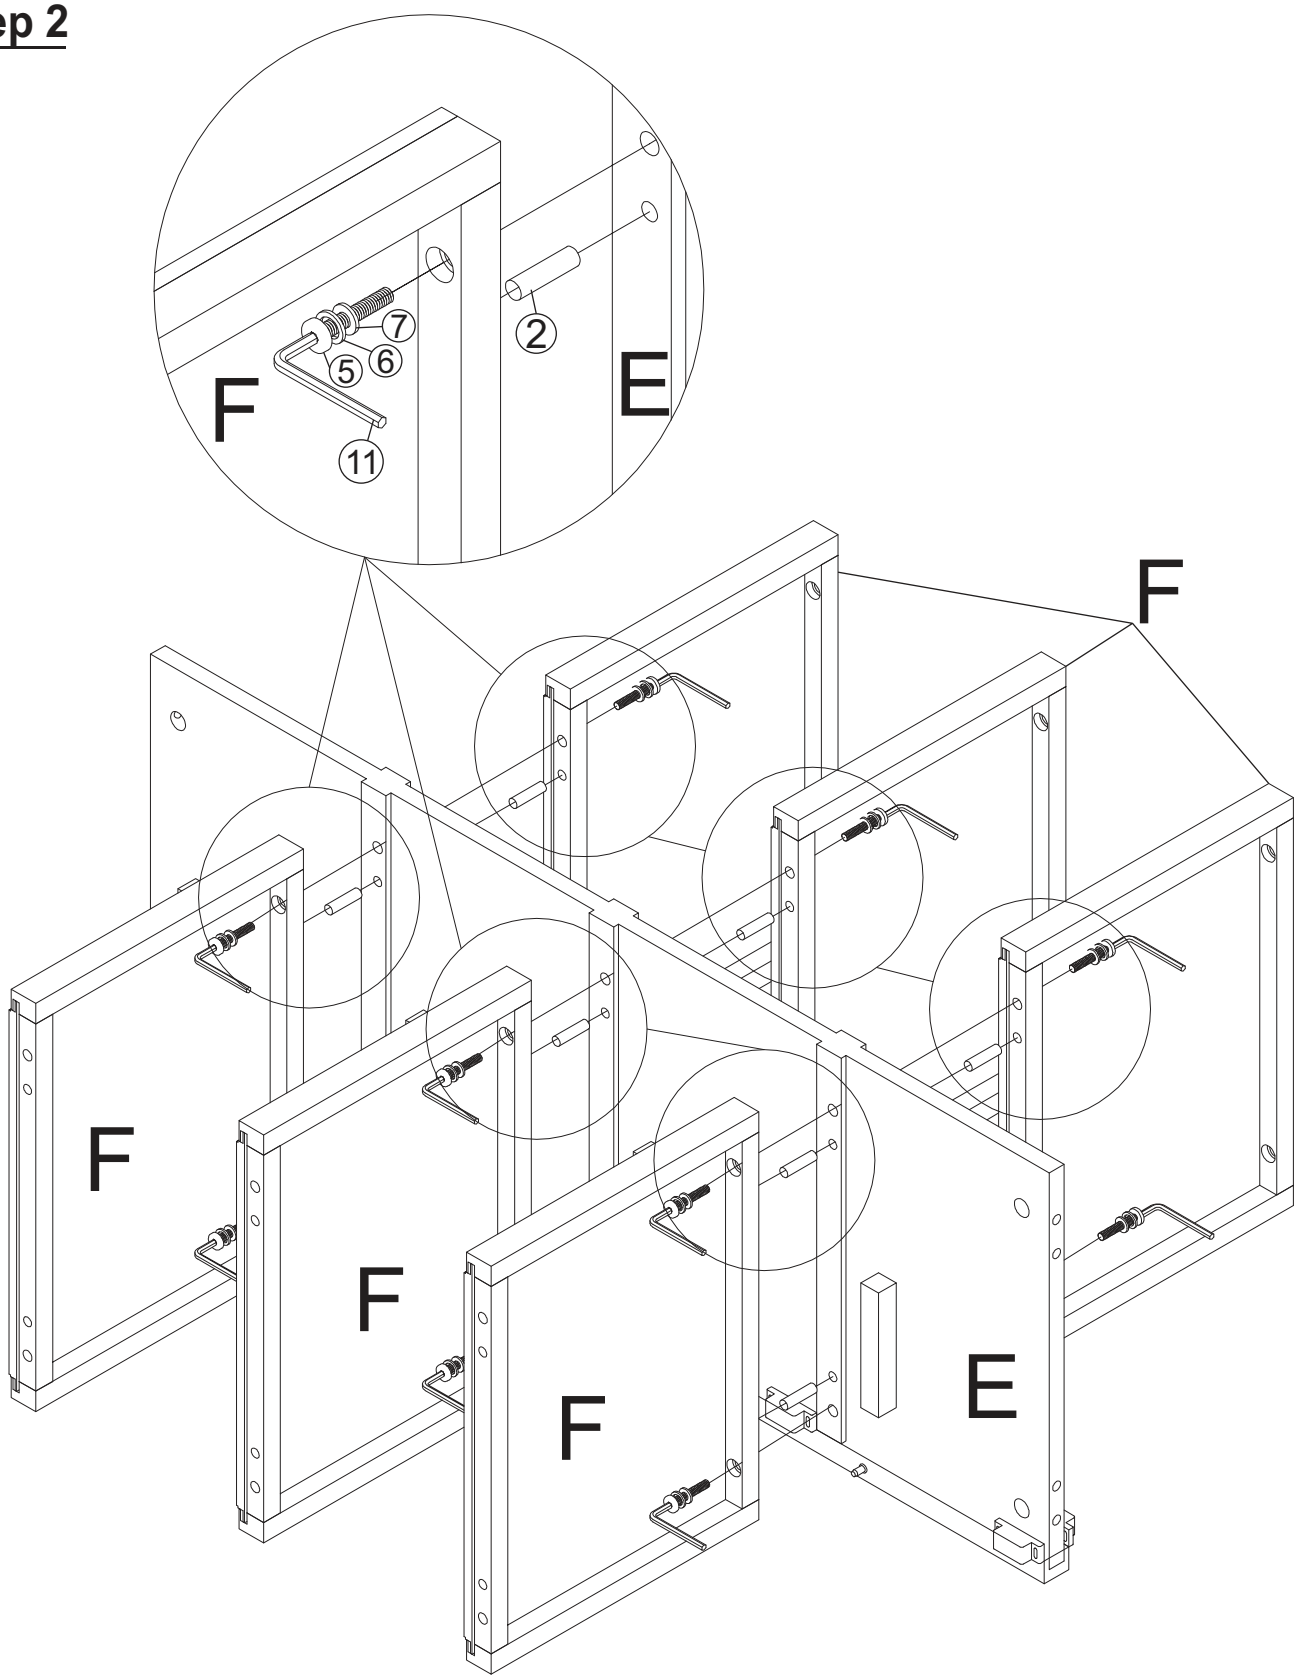

Align the mounting position for the Shelf (F) to Middle panel (E) with wooden dowel (2) . Affix the Shelf(F) to Middle panel (E) by using the Bolt (5), Spring washer (6) , Flat washer (7) with Allen Wrench (11).


ASSEMBLY INSTRUCTION

Step 3

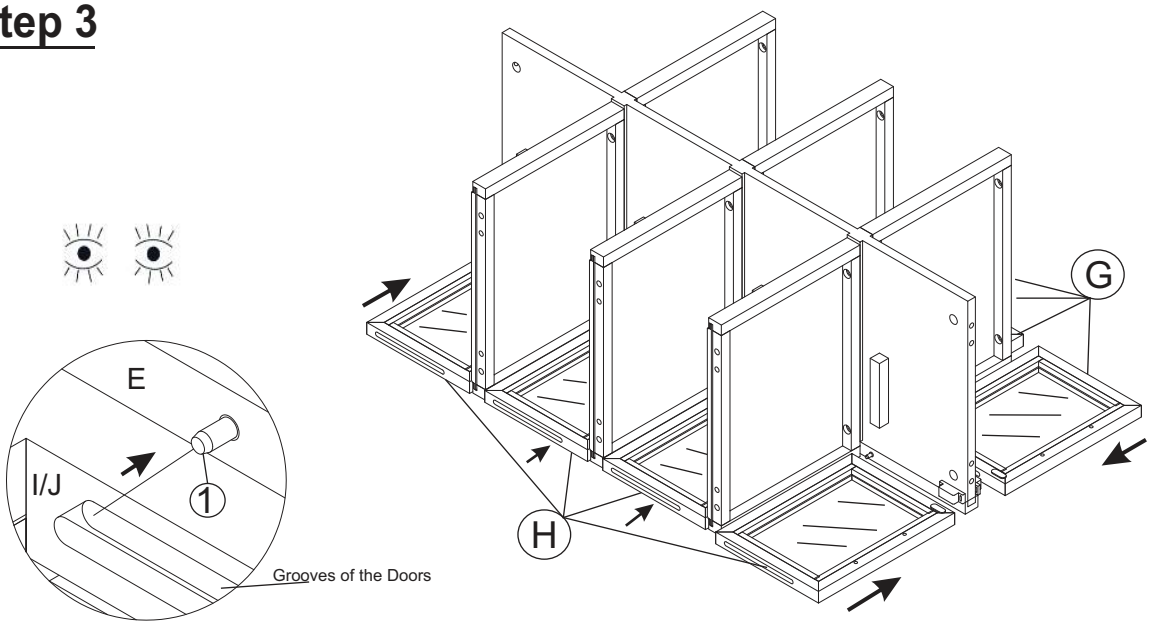

Next, insert the Left Door (G) and Right doors (H) into the Middle panel (E), making sure that the grooves on the Doors properly engage with the Metal pins (1) installed in Step 1.

Step 4

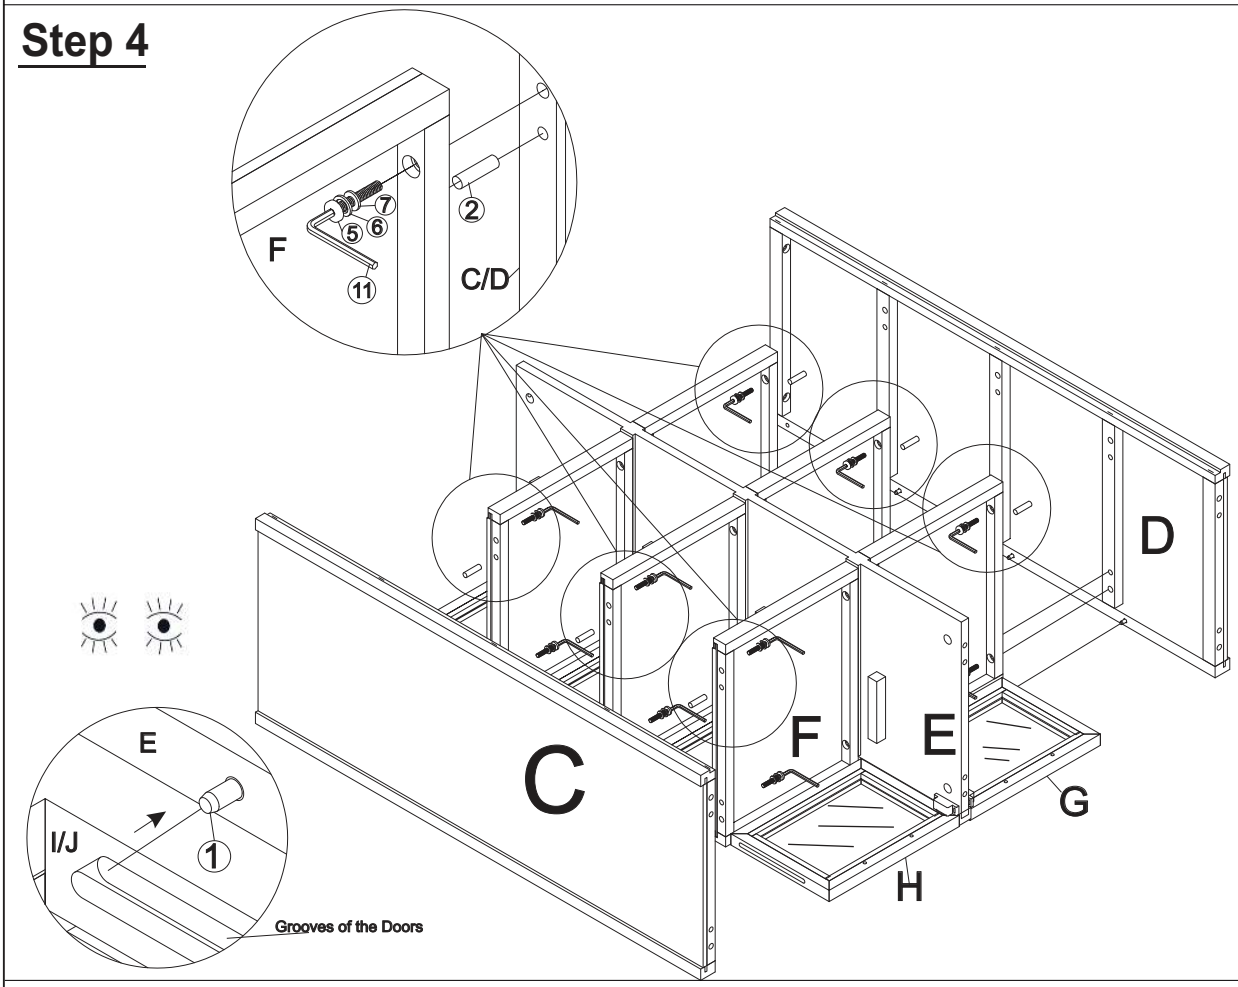


Next step, Attach the Right panel (C) and the Left Panel (D) onto the the Shelf (F). Align the mounting position with wooden dowel (2) and ensure that the metal pin(1) fit into the groove of the Doors, Affix them by using the Bolt (5), Spring Washer (6), Flat washer (7) and Allen Wrench (11).

At this step, fully tighten the Bolt.

ASSEMBLY INSTRUCTION

Step 5

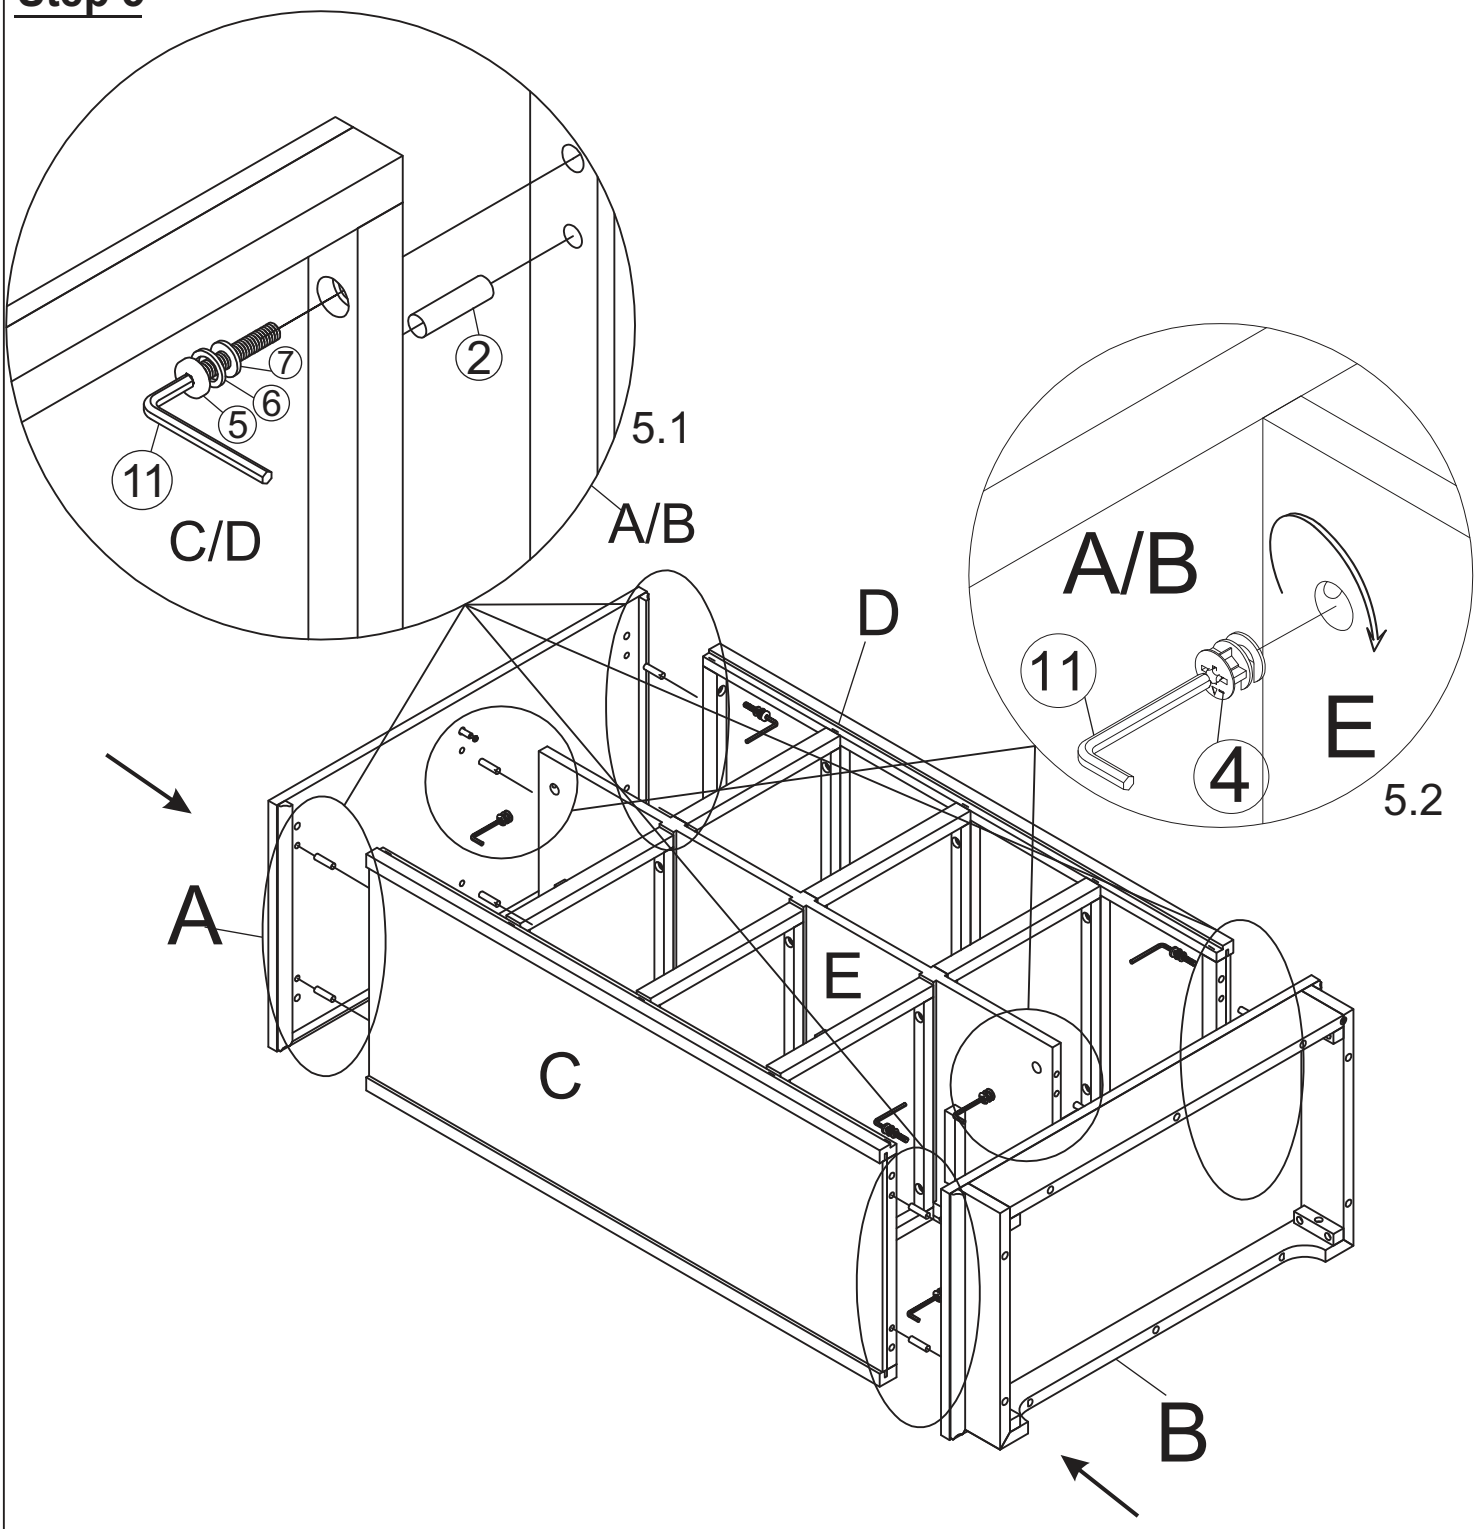


5.1, Attach the Top (A) and Bottom (B) onto the Right Panel(C) and Left Panel (D) and Middle Panel (E) aligning them with the wooden 8 × 30 (2),Affix the Top (A) to side Panel (C&D) by using the Bolt (5), Spring Washer (6), Flat washer (7) and Allen Wench (11)

5.2. Affix the Top (A) to Middle Panel (E) by using the Allen Wrench (11) and Cam locks (4).


ASSEMBLY INSTRUCTION

Step 6

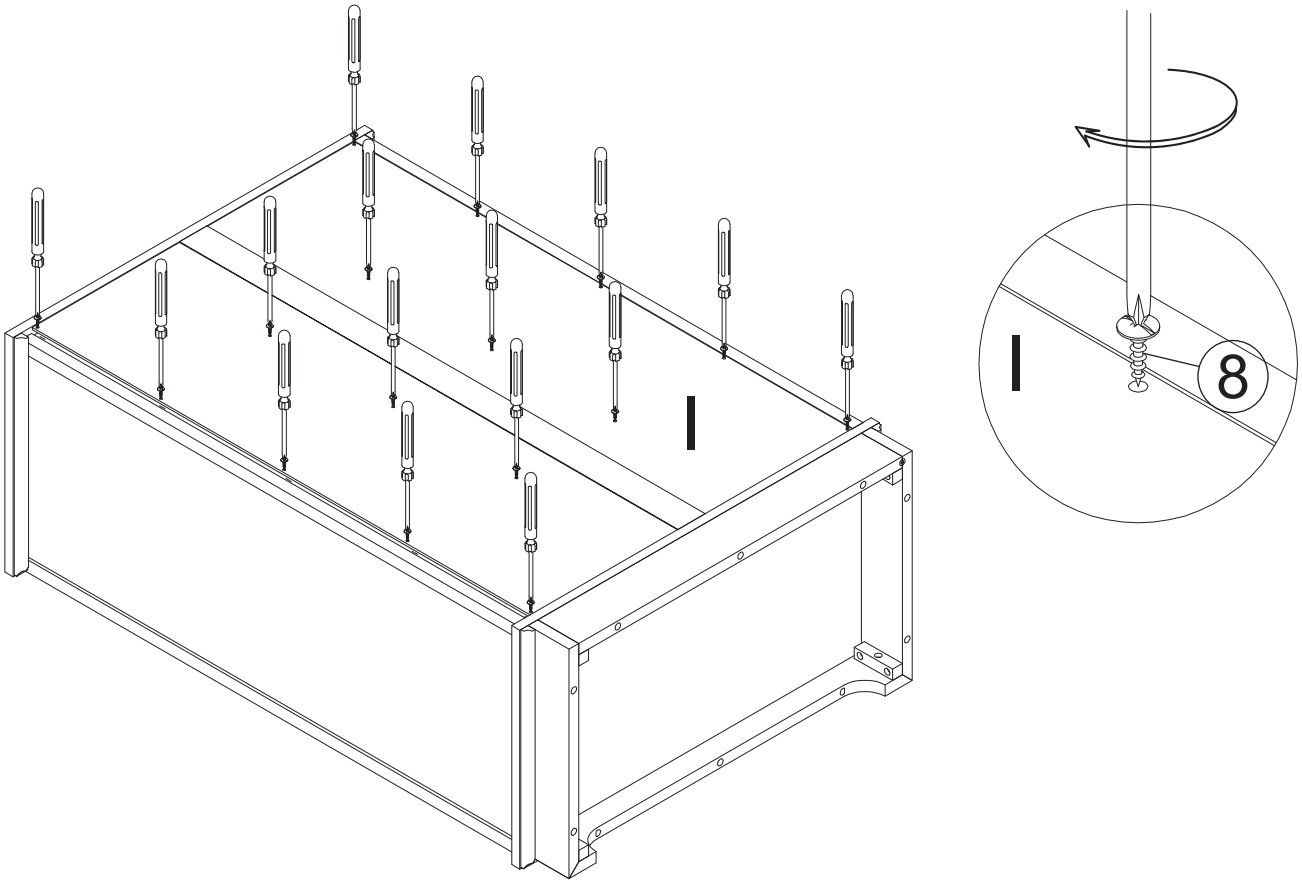

Use the Screwdriver (12) and Mushroom screw (8) to assemble The Back Panel (I) onto Chest.


Step 7

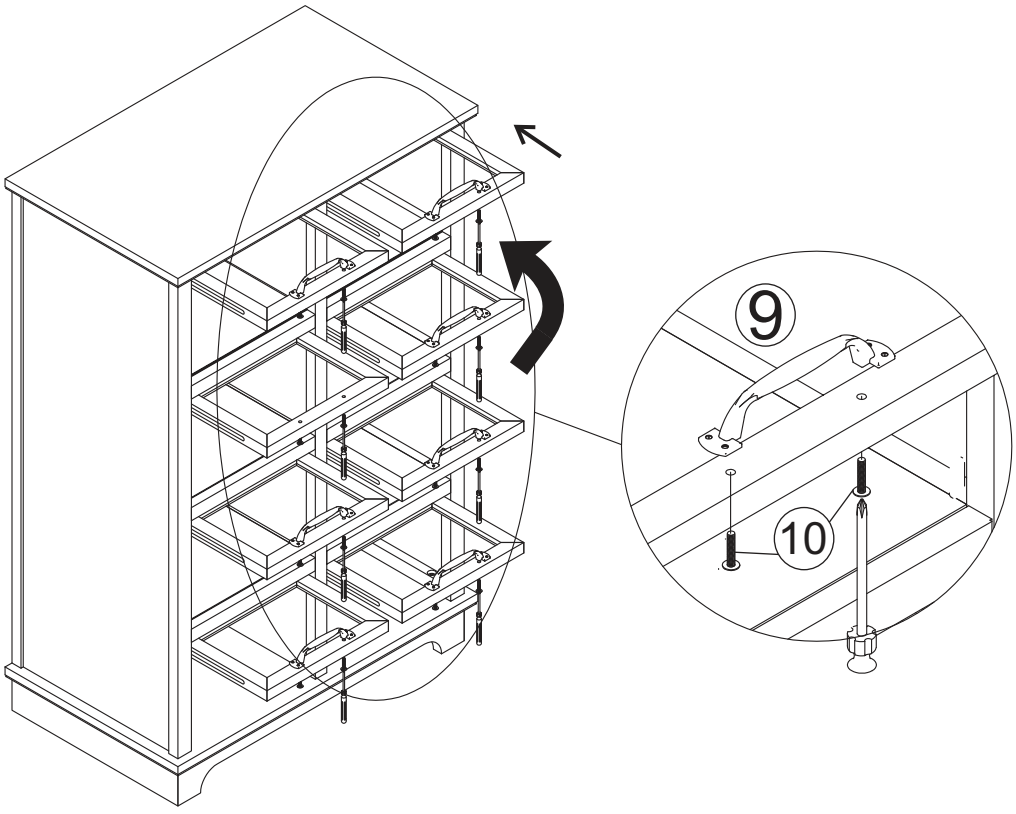


Carefully rotate the unit so that the top side is facing upward with the assistance of two adults. swing the doors (G and H) outward and push them inward into the Chest. Attach the Handle (9) to the Doors by using Bolt (10) with Screwdriver.

ASSEMBLY INSTRUCTION

Step 8

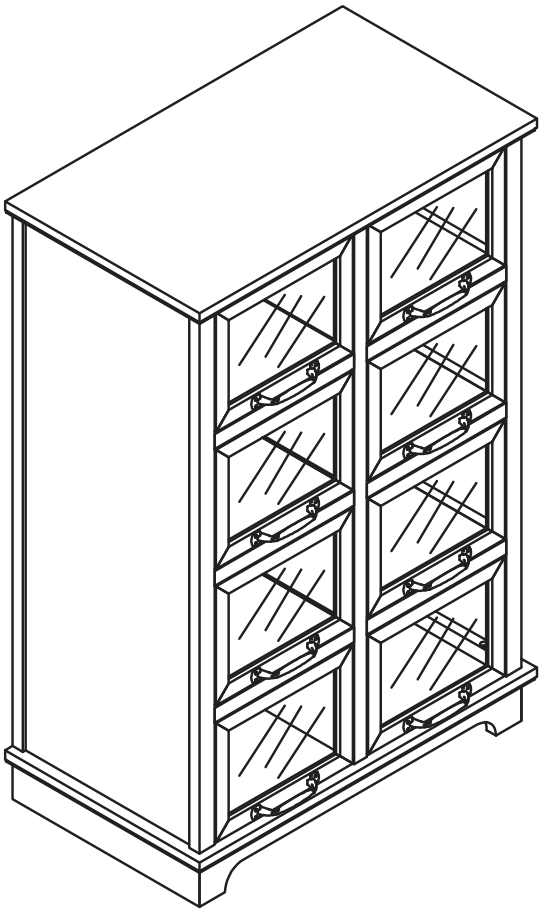

Close the Door

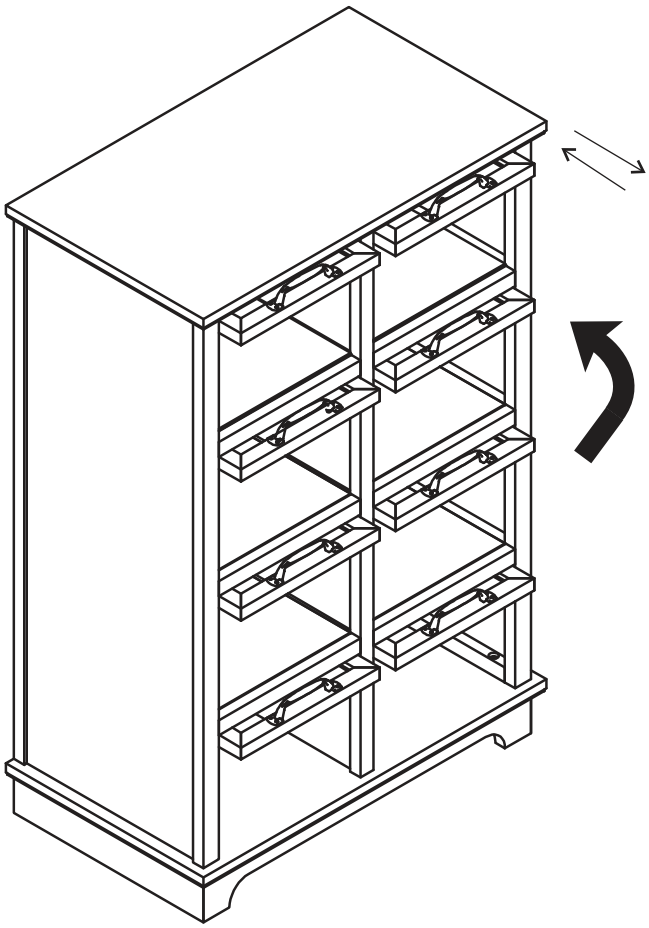

Open the Door

Exert pressure floorwards onto the Table top of Chest with both your hands.

This pressure will help the Legs and Table Top reach full alignment status.

Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts and screws in a sequential manner until evenly secured.

Your Chest is ready for use,


This Chest can only be used on the flat, level surface

ASSEMBLY INSTRUCTION


Step 9

13: ANTI-PARKING KIT


13.1	13.2	13.3	13.4	13.5
				
2 pcs	4 pcs	M4x40mm 2 pcs	M4x15mm 2 pcs	2 pcs

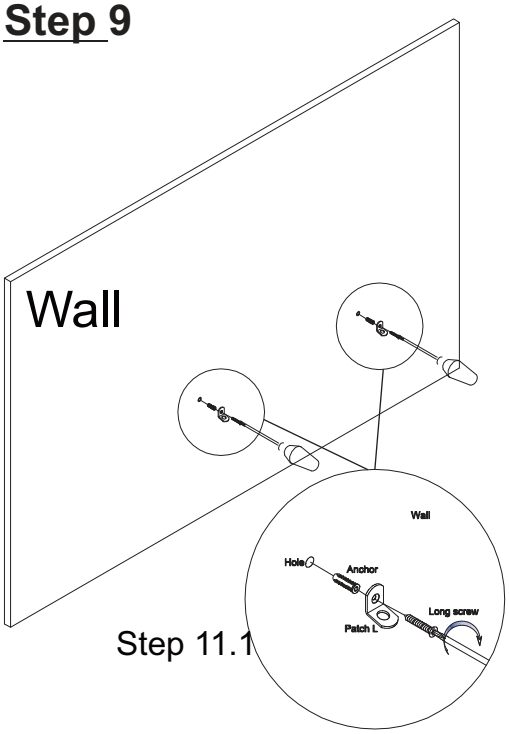

Step 11.1

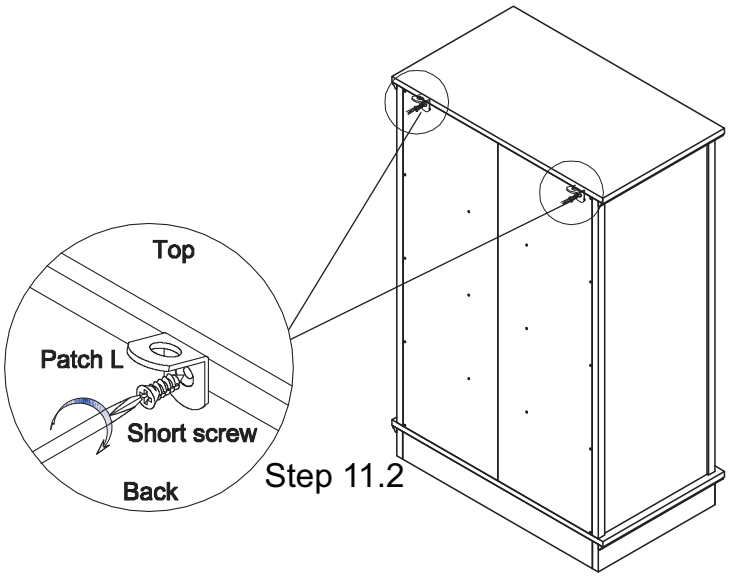

Step 11.2

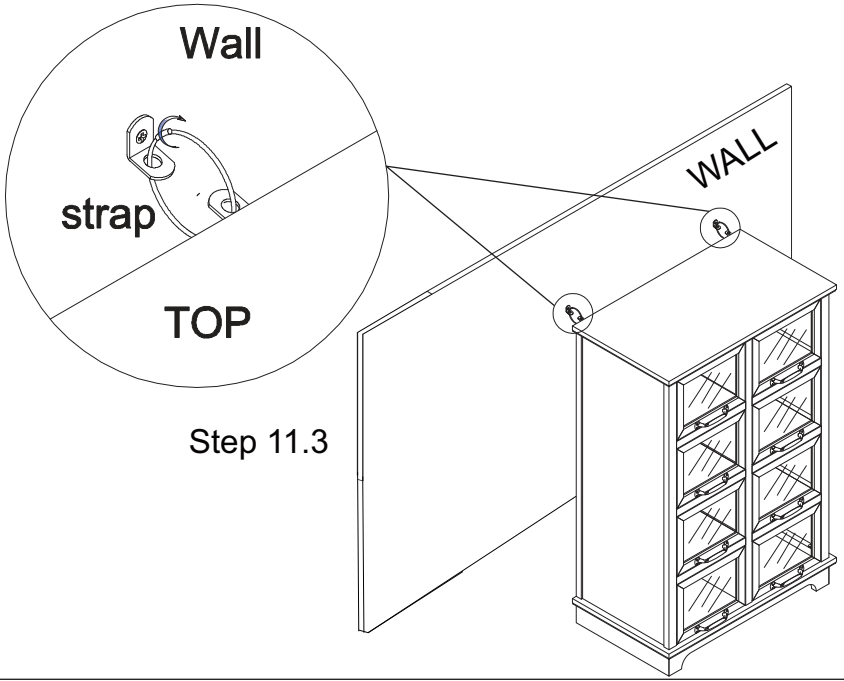

Step 11.3

9.1: Find the location of the screw holes on the wall. Move the Sideboard back to the wall.

Mark two points the same height as the Sideboard on the wall.

NOTE: The metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder (not provided) if needed to lacate the Wall Frame. Insert the Plastic Anchors (13.1) into the wall and attach Metal Brackets (13.2) to Plastic Anchors (13.1) using long screw (13.3) with Screwdriver.

9.2: Attach the Metal Brackets (13.2) to the Chest using the short screw (13.4) with Screwdriver.

9.3: Thread the Strap (13.5) through the 2pcs Metal Brackets (13.2) to secure the Chest to the wall.

CAUTION: Restraint Strap (13.5) between the product and Metal Brackets (13.2) on the wall should be \within 3.5")