



Installation Manual

TSQAL05N-10FT-2D

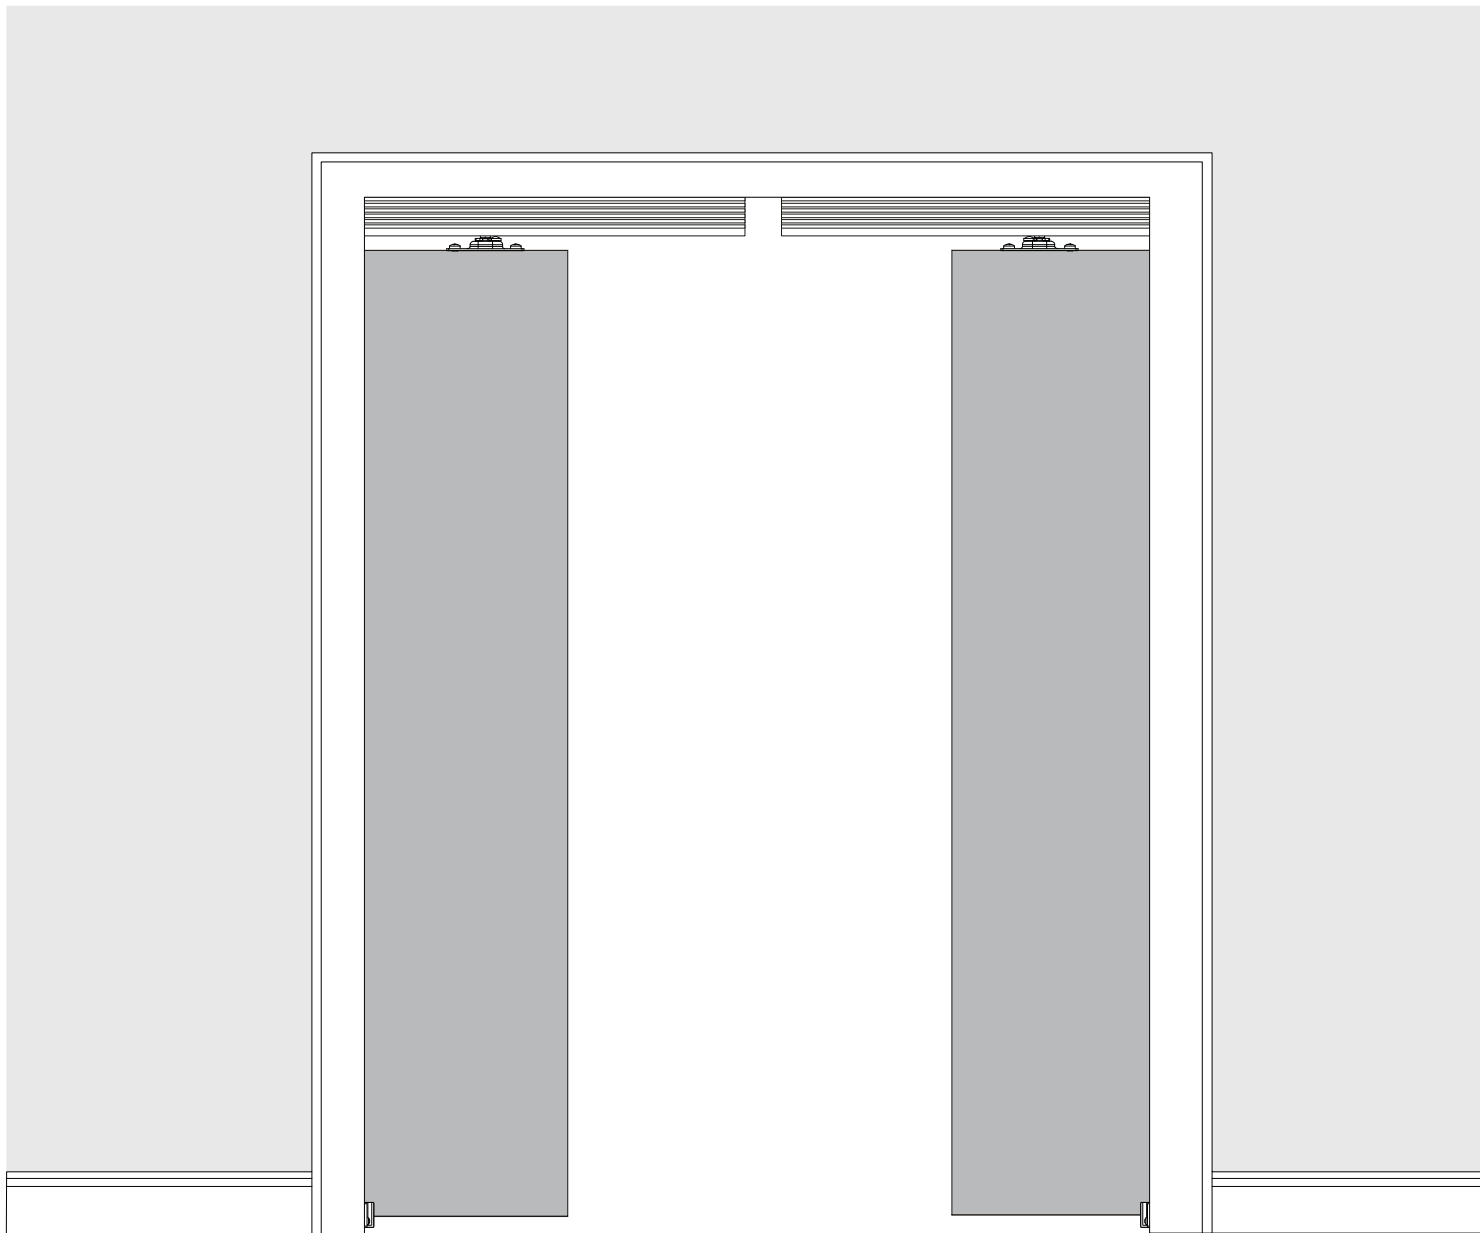


Components list

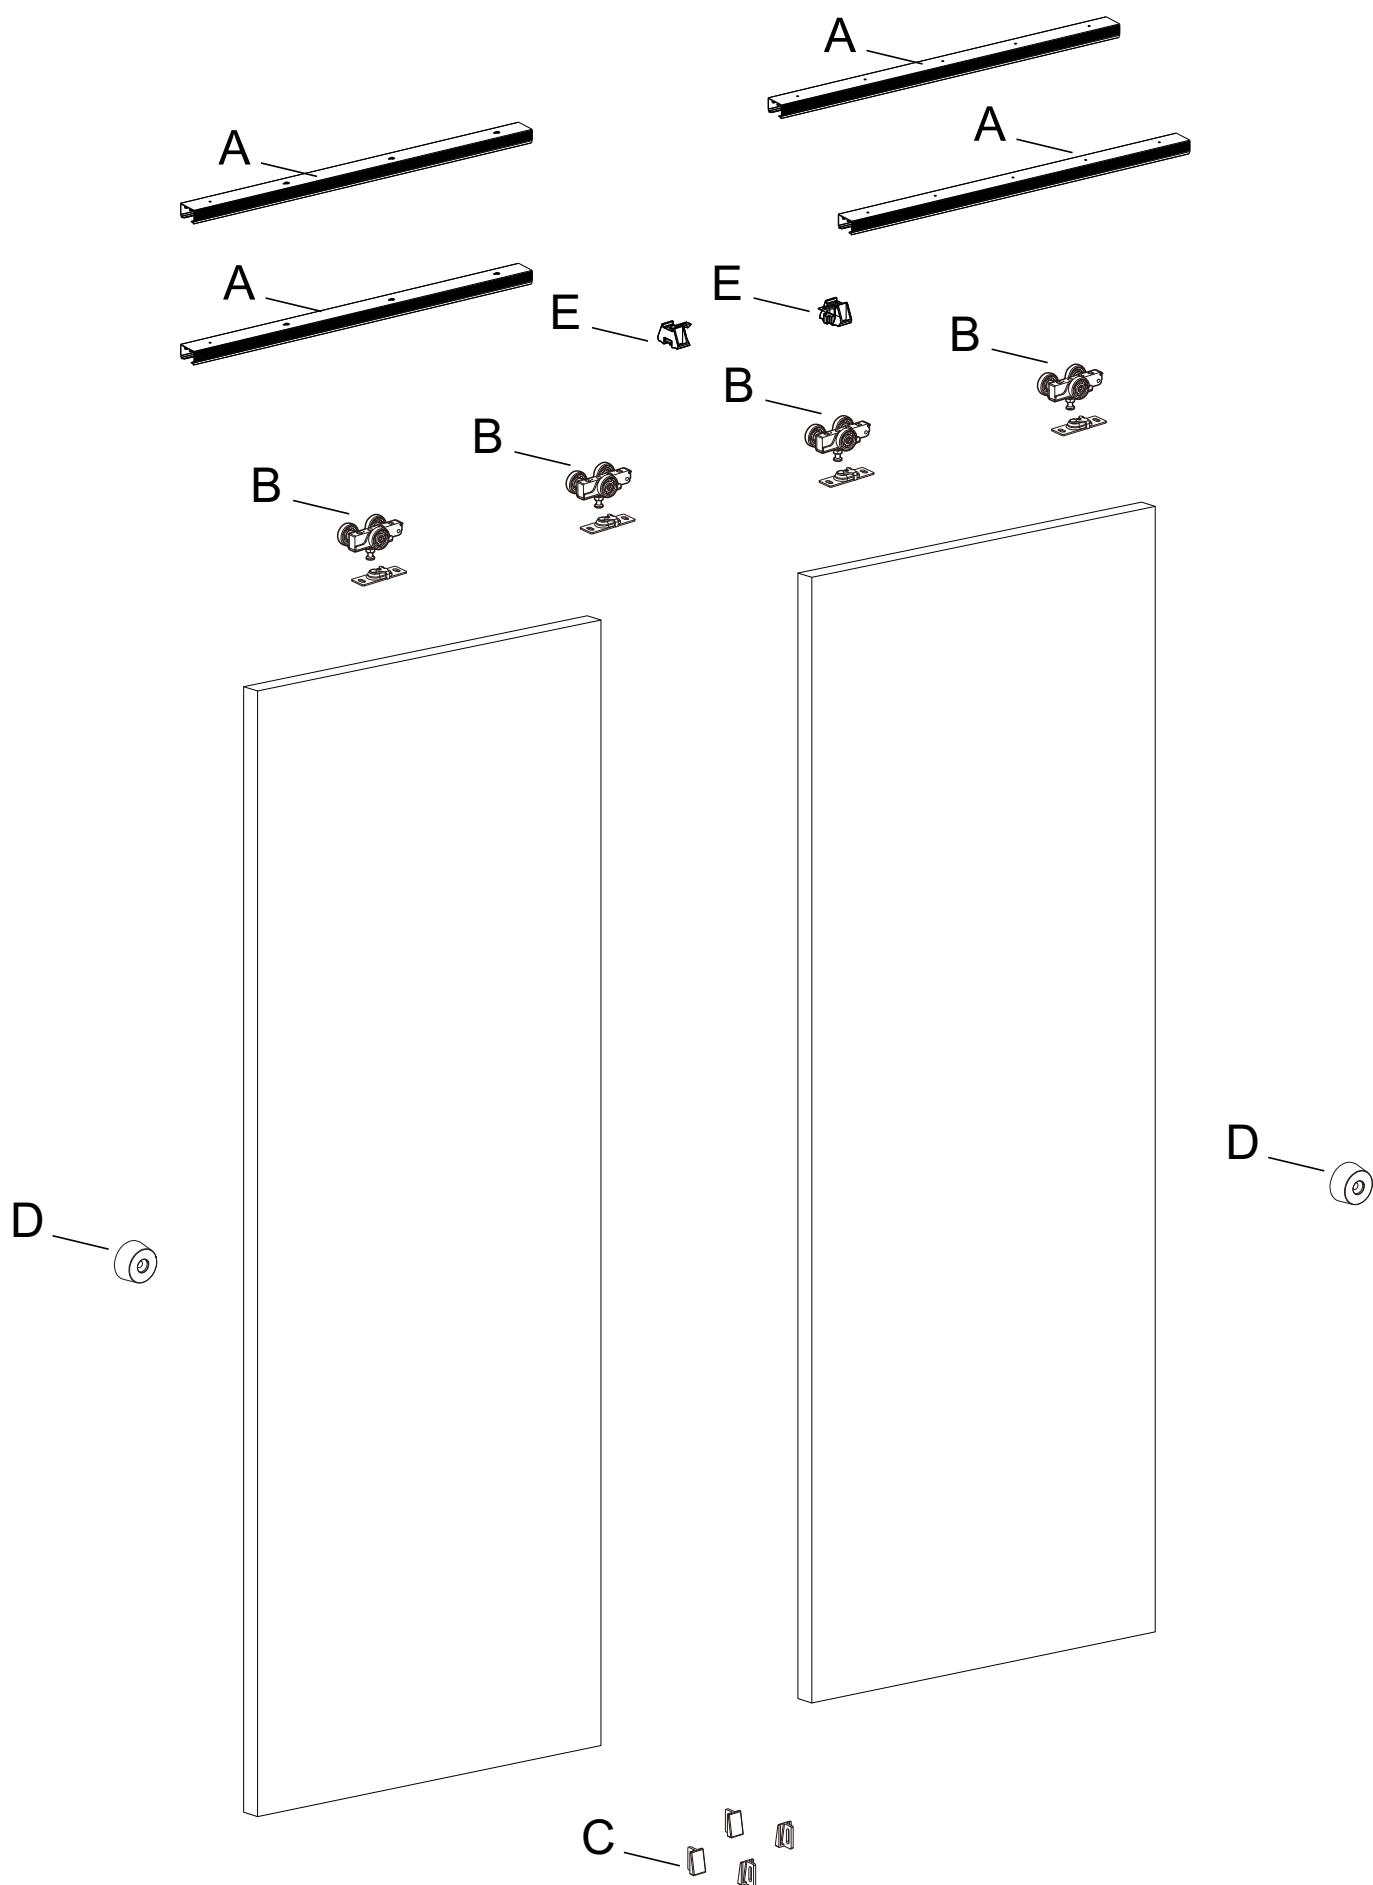

PRE -INSTALLATION

TOOLS REQUIRED

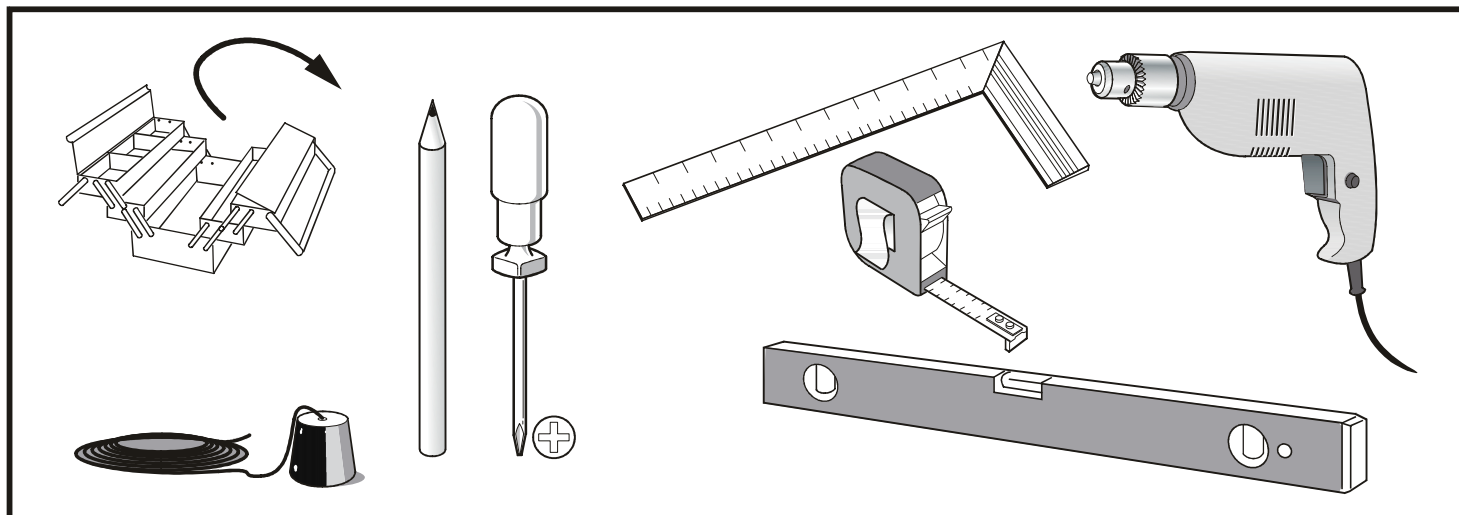

HARDWARE INCLUDED

A ST4.2x32 (x16) (x2) (x2)	B (x4) ST5.5x32 (x8)	C (x4) ST4.2x13 (x4)
D (x2) ST4.2x31.7 (x2)	E (x1) (x1)	(x2) (x4)
(x1)	(x1)	


To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

PREPARE THE ROUGH OPENING



Width of Rough Opening	
Nominal Door Width	Width of Rough Opening
24"	96"
26"	104"
28"	112"
30"	120"
32"	128"
34"	136"
36"	144"
Custom	4 X Door Width

1 PREPARE ROUGH OPENING

Plumb the rough studs and ensure the header is square and level.
Minimum Height of ROUGH OPENING = Door Height + 2 41/64"(67mm)
Width of ROUGH OPENING = 4X Door Width

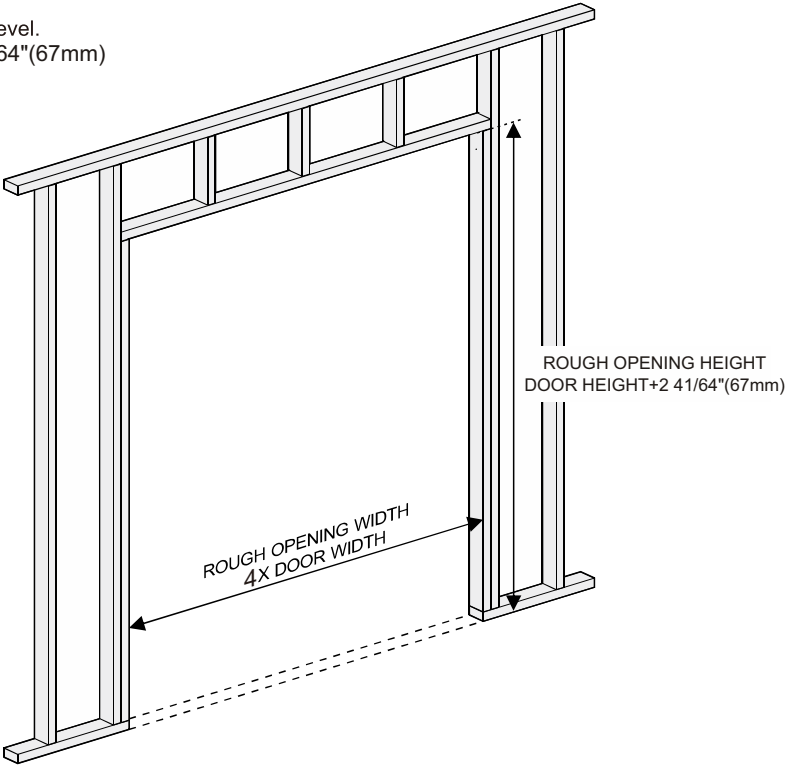



2 connector connection

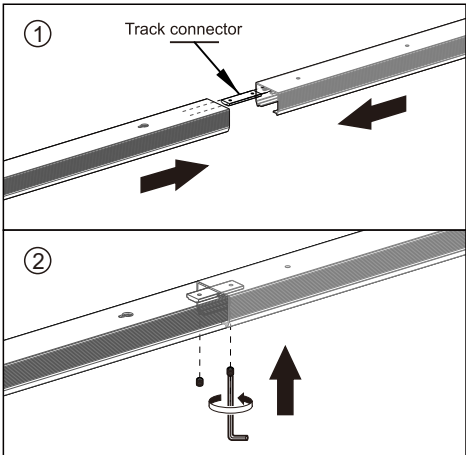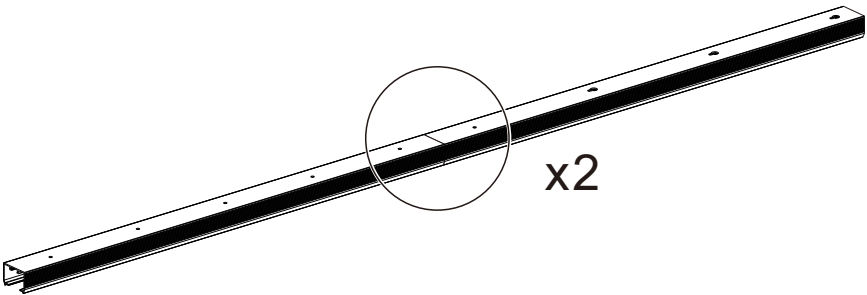

Installation



3 INSTALL THE RAIL

Put the screws insert the holes.

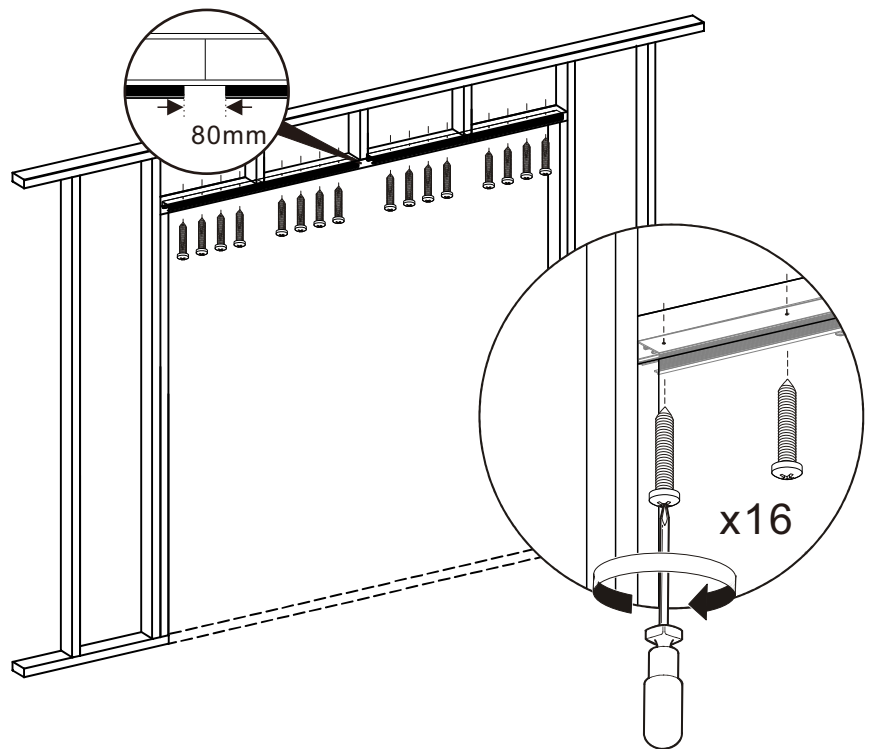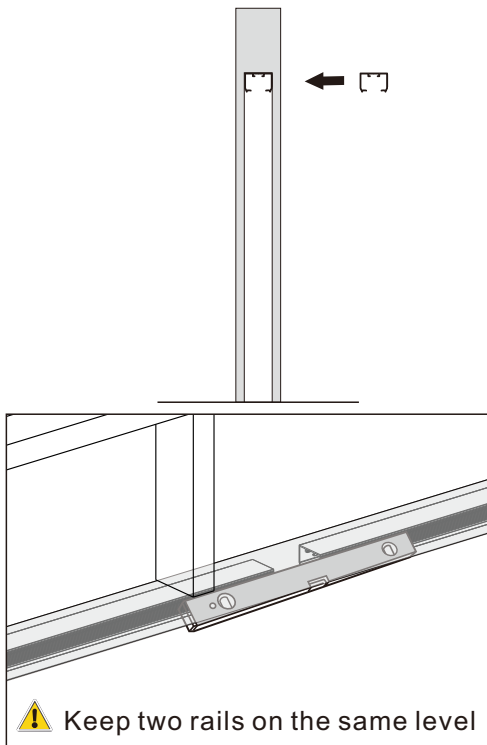

3 INSTALL HANGER WITHOUT SOFT CLOSE


INSERT Ball Bearing Hanger Wheel assembly into Track, leave untightened as this will be done in step 8.

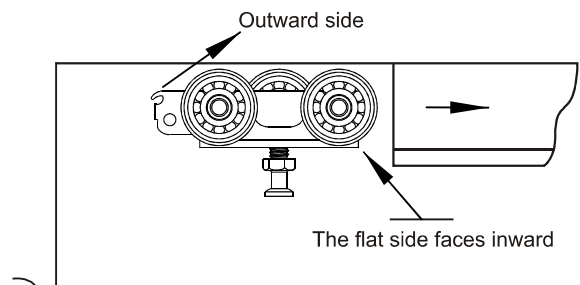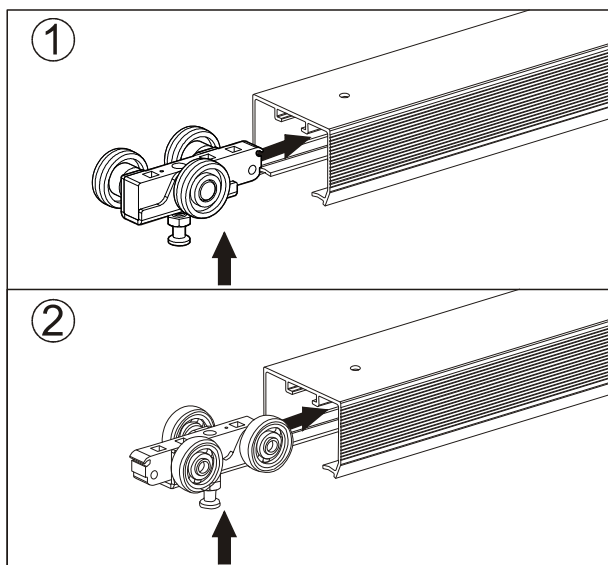

Installation



4 PREPARE DOOR PANEL

Apply desired wall material and seal all edges and face of door panel with paint or sealing stain.

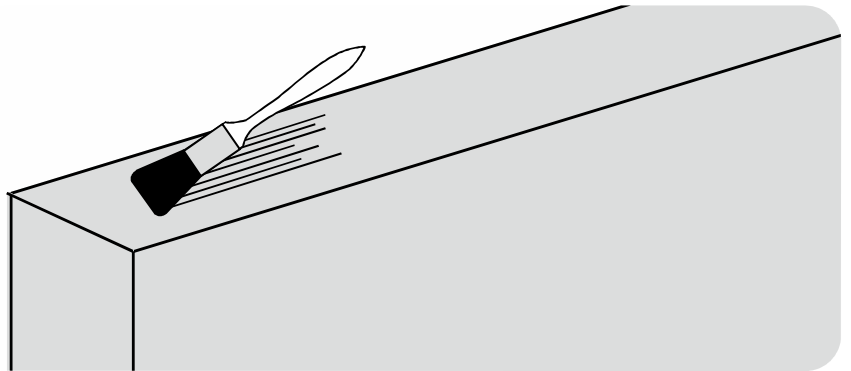

5 INSTALL THE BUMPER





Fasten the bumper on back edge of door 1m from bottom edge.

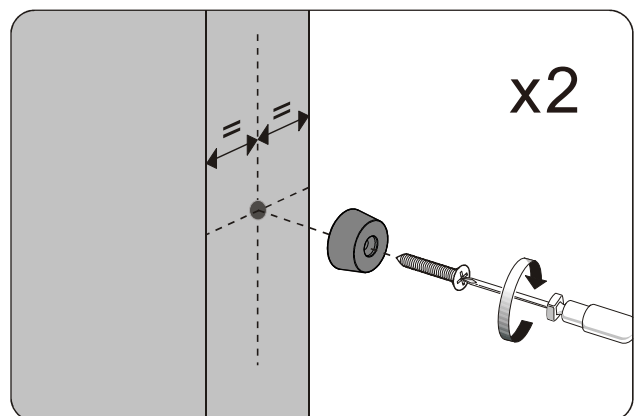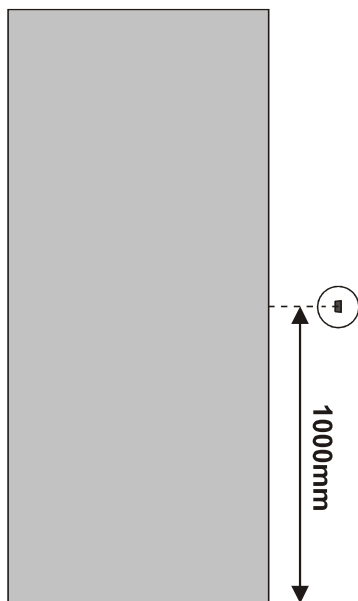

Installation


6 INSTALL DOOR PLATES ON DOOR PANEL

AB/Attach door plates on top of door 2-3/4"(70mm) from each edge with lock tabs on the same side.
CD/Mount door by locating door plate under adjusting bolt of hanger. Lift door and push bolt into door plate, then click the tab in place. Repeat with other hanger/door plate.

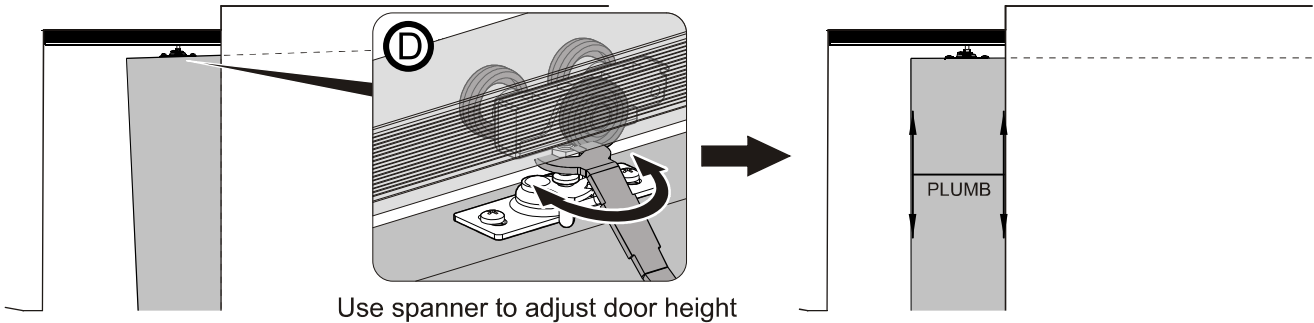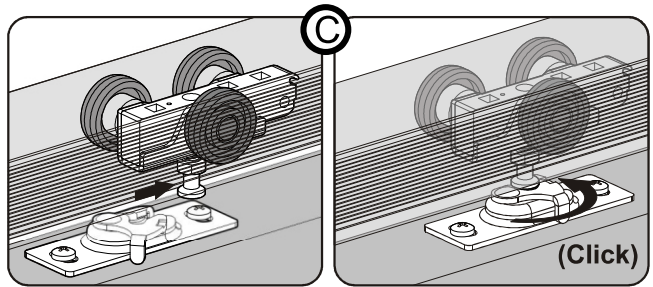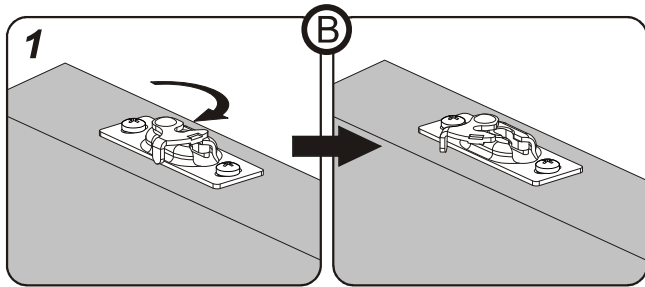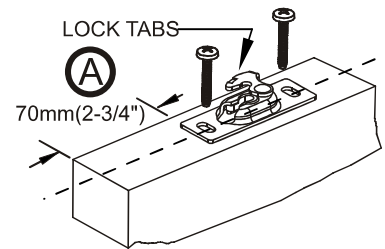

7 INSTALL DOOR GUIDE

Fasten Guides on finished split jambs at door bottom so door is held in center of opening.

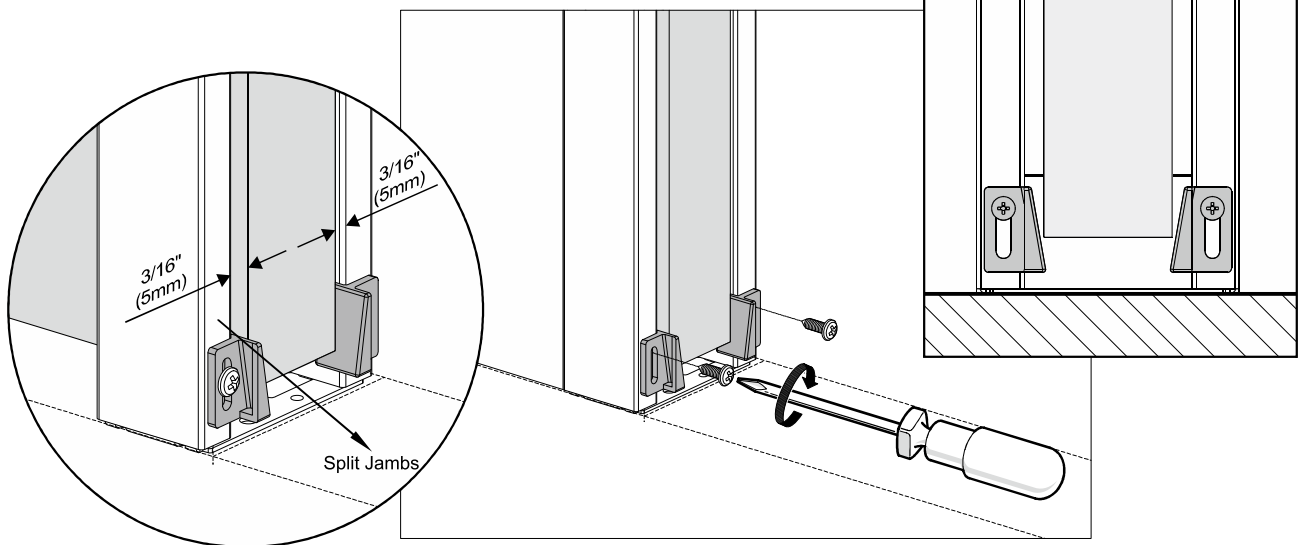

Installation

8 INSTALL THE STOPPERS

Insert the stoppers into the track, To adjustable the position.
Then tighten the screws.

