

Barber Chair Instruction



warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork



Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

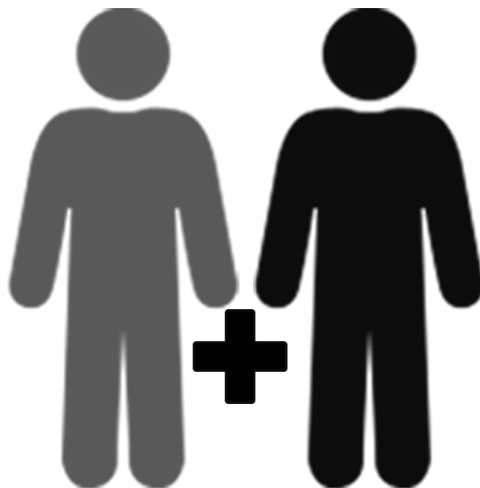

Components

Step 1


Check all parts you received.

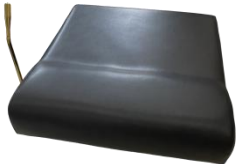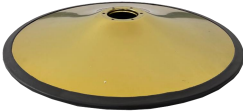Part List				
				
Ax1	Bx2		Cx1	Dx1
				
Ex6	Fx4	Gx1	Hx1	Ix1
				
Jx1	Mx1			

Assembly Instructions

Step 2

Insert threaded bolts on bottom of pump "M" into the holes on top of base "G". Tighten and locking 6 nuts "E" onto threaded bolts.

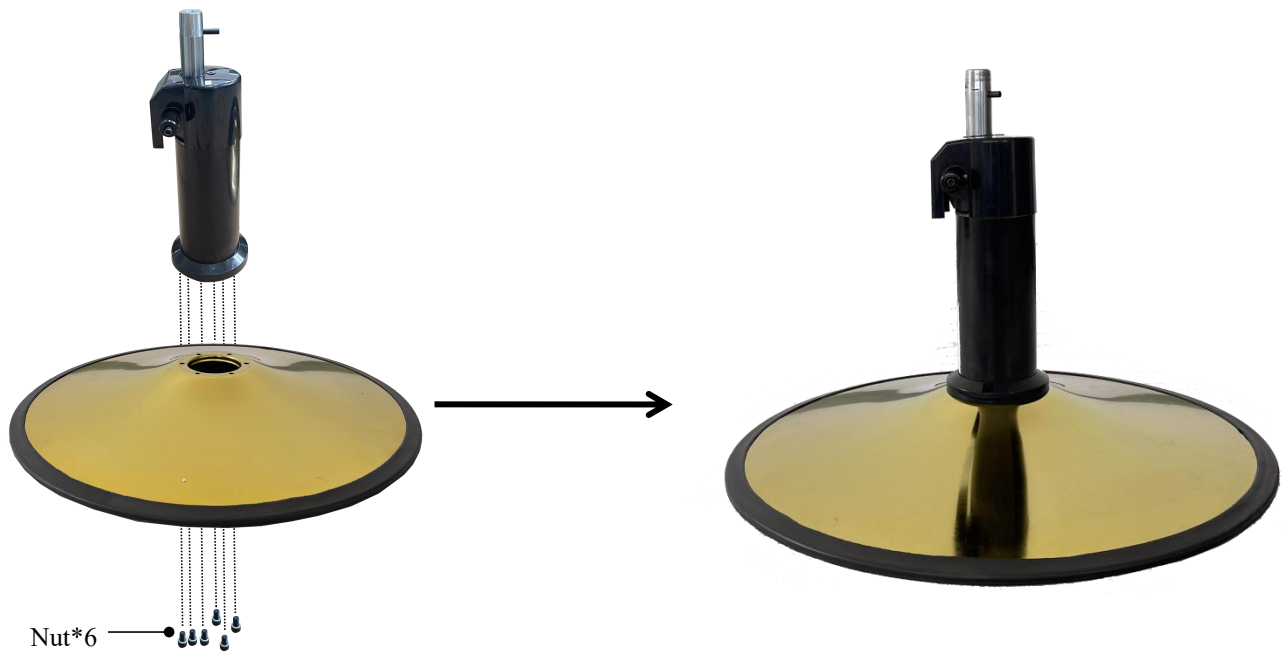

Step 3

Insert foot bar "J" into the assembled hydraulic pump "M", tighten the black set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)



Assembly Instructions


Step 4

Unscrew the screws on both sides of the armrests "B", assemble connecting iron "F" to armrests by those screws. Tighten. (Noted: The direction of connecting iron)



Step 5

Unscrew the screws on the seat cushion "A", assemble the armrests "B" to seat cushion by those screws, tighten. (Please pay attention to the direction of the armrests and install it exactly as shown in the picture)

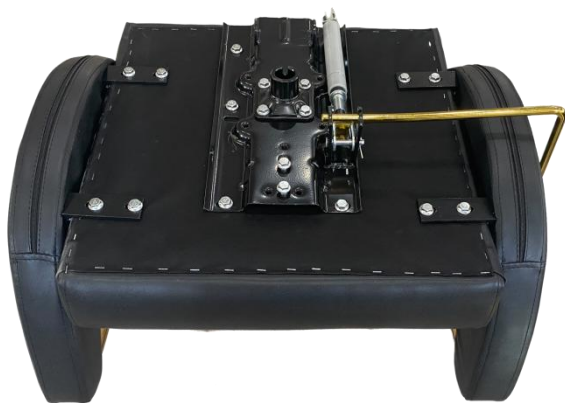

Use a screwdriver to align the holes when you felt it's hard to assemble.

Assembly Instructions

Step 6


Firstly: Loosen the 2 embedded silver screws on the both sides of the round tube under the bottom of the backrest iron. Photo ① for reference.

Secondly: Attach the backrest to the assembled seat of chair, make sure the angle of backrest correct, Tighten by the 2 silver screws in last step (Noted: Need tighten the two screws in the middle of the round tube as well). Photo ①② for reference.

Finally: Loosen nut and bolt on the iron of backrest, Link gas pump and the iron on backrest by the nut and bolt as photo ③.

Tighten the two screws after attached the backrest to the assembled seat of chair

Do not rotate the gas pump to change the distance between the gas lever and the rocker lever.

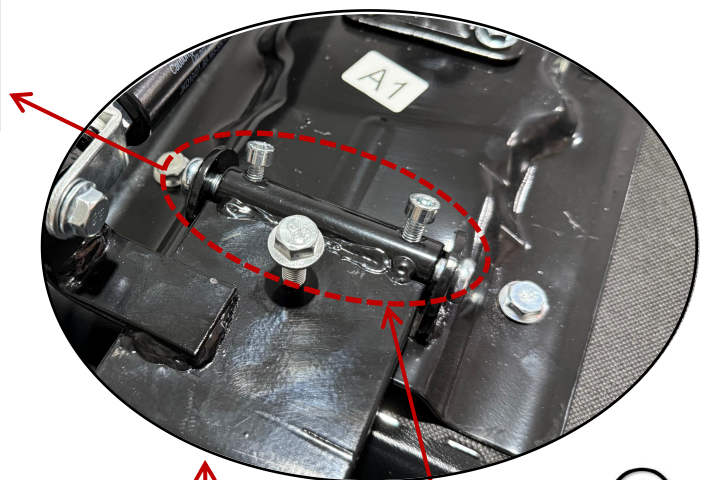


Attach backrest and assembled seat of chair by the 2 screws



Assembly Instructions

Tighten this screw after assembled gas pump(Noted:Please push the reclining lever backwards ,make the backrest reclining a litter bit ,then the iron on the backrest will much closer to the gas pump.When you felt it' s hard to link the gas pump and the iron of backrest)

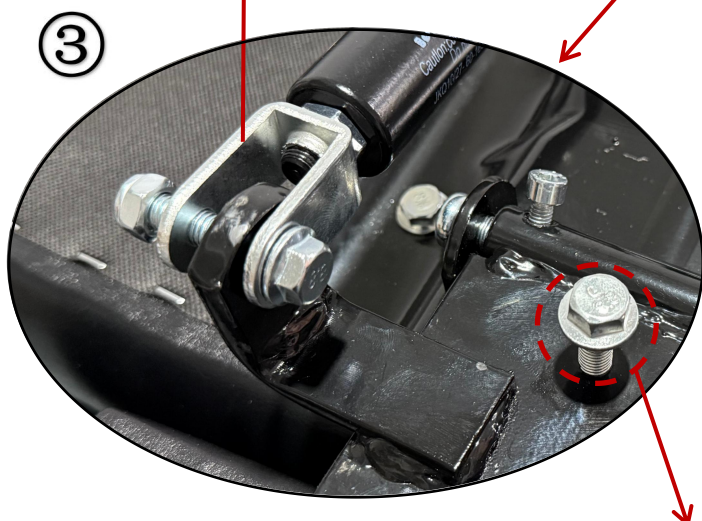

Please notice that the more you tighten the screw in, the greater the Angle between the back and the seat cushion; When you loosen this screw outward, the smaller the Angle between the back and the seat cushion (closer to 90 degrees).

Assembly Instructions


Step 7

Unscrew 2 screws previously assembled on the pedal, Attach the pedal "H" to footrest "I" by those screws. Tighten, as picture.



Step 8

Loosen 2 screws previously assembled on the seat cushion, attach footrest to seat cushion by those screws. Tighten, as picture.

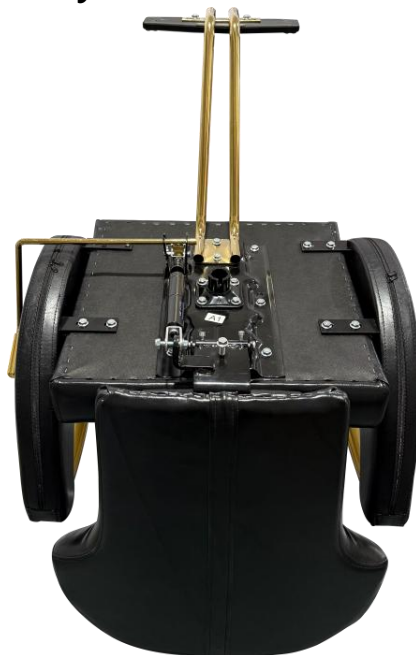

Assembly Instructions

Step 9

Put the assembled seat to the hydraulic pump. insert pillow into backrest.



Noted: the tray on the set plate must be aligned with the black pin of hydraulic pump.