


# ASSEMBLY INSTRUCTION QUEEN BED

Page : 1 OF 1


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

## STEP 1.

Attach the Side Rail to the Headboard & Footboard. Use Screw M8 & Screw Driver to fix.

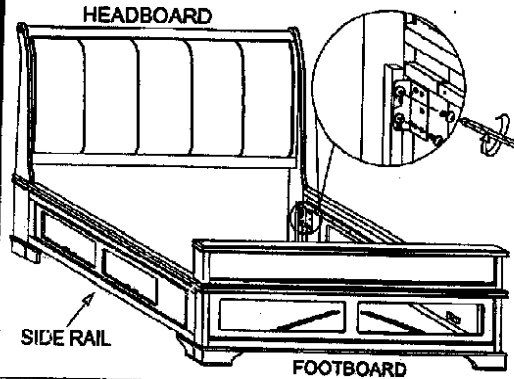

## STEP 2.

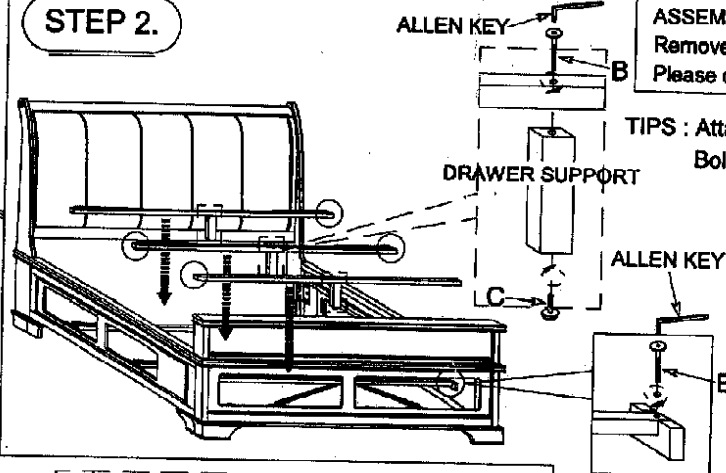

### ASSEMBLY TIPS:

Remove hardware from box and sort by size.

Please check to see that all hardware and part are present prior start of assembly.


TIPS : Attach the drawer support and Slat Support to Footboard. Use JCBC Bolt M6 X 35mm & Allen Key to fix.

NO	HARDWARE DESCRIPTION	QTY
A.	Screw M4 x 32mm	30PCS
B.	Bolt M6 x 35mm	16PCS
C.	Adjuster Screw M6 x 24mm	3PCS
D.	Screw M4 x 16mm	2PCS


Screw Driver Not Provide !!!

## STEP 3.

TIPS : Attach the drawer support and slat support to side rail and fasten with Bolt.

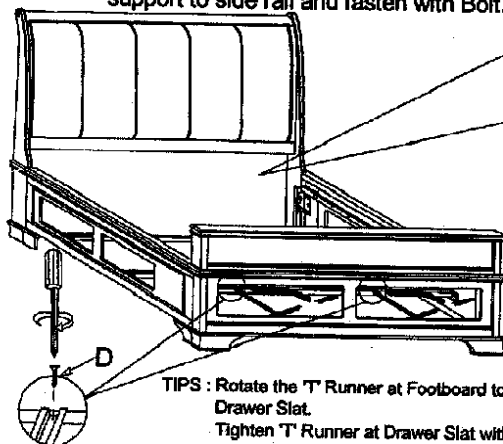

TIPS : Rotate the 'T' Runner at Footboard to Drawer Slat. Tighten 'T' Runner at Drawer Slat with Chipboard Screw M4 x 16mm.

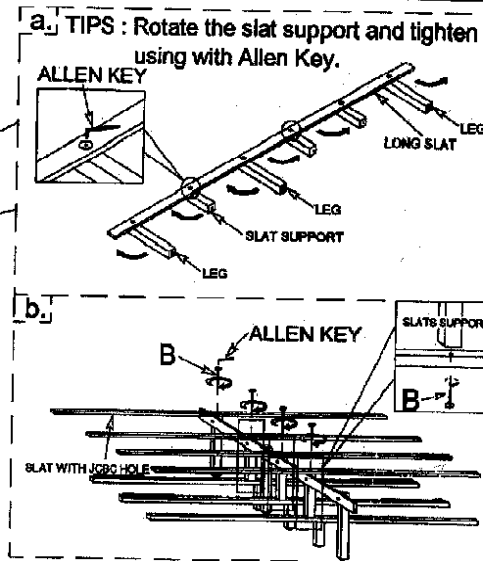

## STEP 4.

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten screw through the pre-drilled hole of Bed Slat.

