


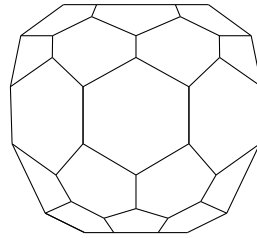

7




6



5

1

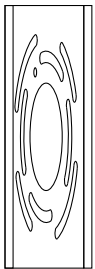


3

N:white

L:black

Green

2

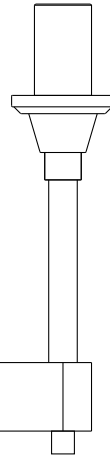

4



G9 Max 60W Not included

# Wall Sconce Instruction

## Safety First

Turn OFF power at the breaker panel and verify the wires are not live before beginning.

---

## Installation Steps

- **Step 1: Attach the Mounting Plate**

Attach the round mounting plate to the wall junction box with the two screws supplied. The two threaded posts must face outward and sit level.

- **Step 2: Wire the Fixture**

Wire the fixture body:

1. Connect black (hot) to black, white (neutral) to white, and green/bare (ground) to green/bare or the ground screw on the plate.
2. Twist connectors clockwise and tuck all splices neatly inside the box.
3. Slide the fixture's backplate onto the threaded posts and hand-tighten the decorative cap nuts until the backplate is snug against the wall.

- **Step 3: Install the Socket Stem**

Install the socket stem (short tapered piece) by threading it onto the top of the arm until finger-tight.

- **Step 4: Add the Decorative Down-Rod**

Thread the long decorative down-rod into the coupler at the bottom of the arm and tighten by hand.

- **Step 5: Position the Glass Shade**

Carefully lower the faceted glass shade over the socket, centering it on the stem.

- **Step 6: Secure the Shade Collar**

Place the small square retaining collar over the socket and turn it clockwise to clamp the glass shade securely. Do not overtighten.

- **Step 7: Insert the G9 Bulb**

Insert one G9 bulb (max 60 W, not included) straight into the socket until it clicks fully into place.

---

## Final Check

Restore power at the breaker panel and test the sconce. The bulb should illuminate evenly and the shade should be stable with no wobble.