


Assembly Instructions

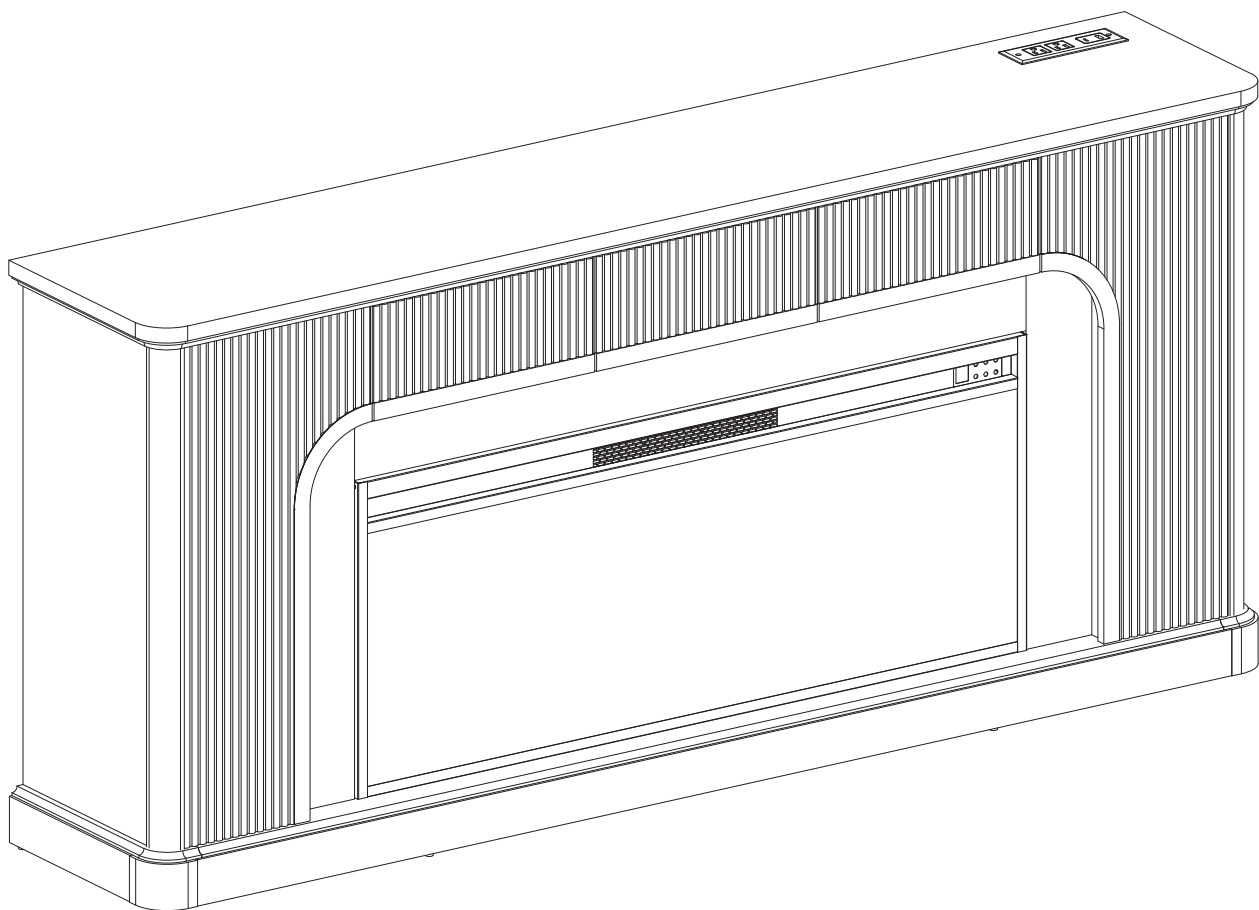


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

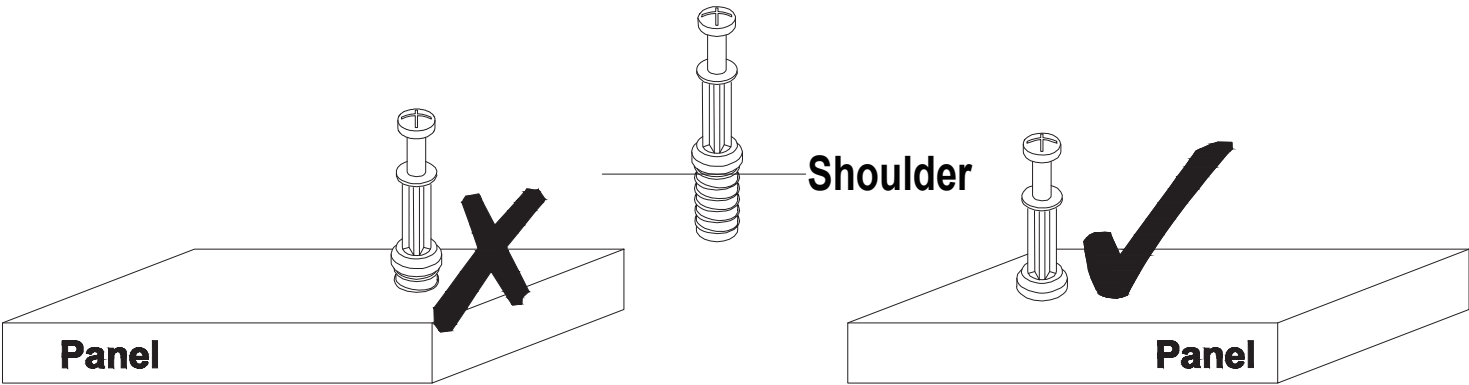

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

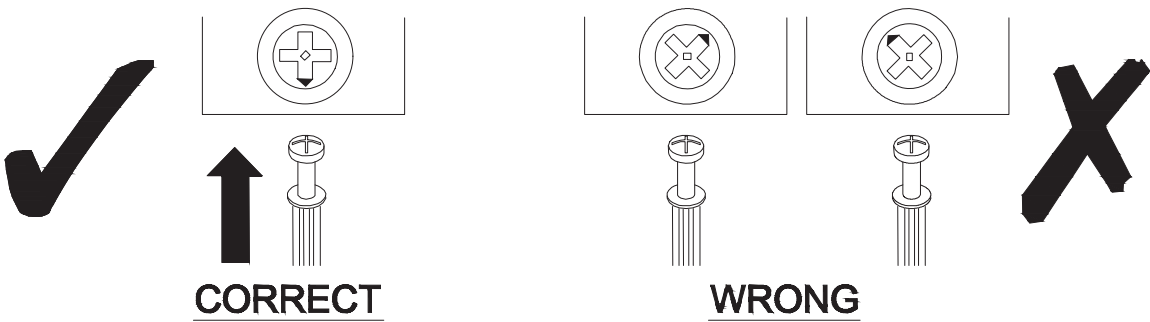

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT





















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

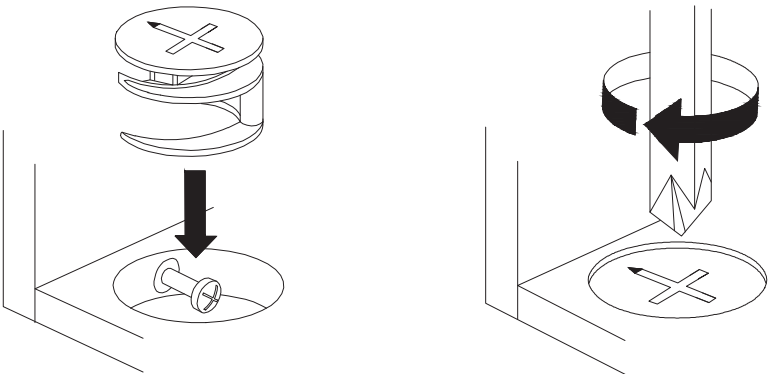


Turn cam lock clockwise to tighten.


Part List

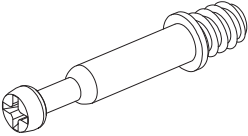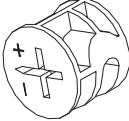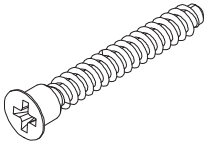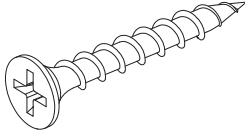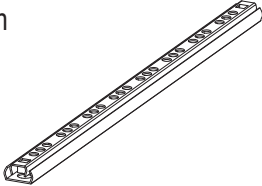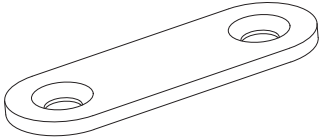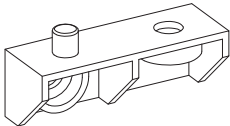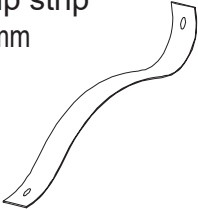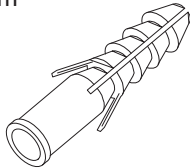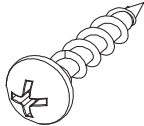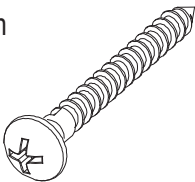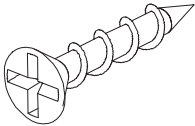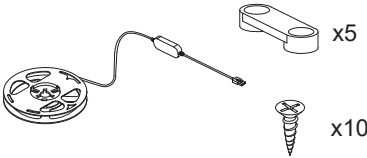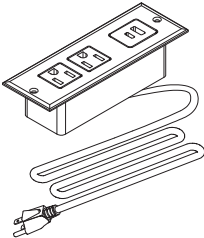No. A Quantity: 60+2 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 60+2 PCS Cam ø15x9.5mm 	No. C Quantity: 60+2 PCS Sticker ø20mm 	No. D Quantity: 80+2 PCS Dowel ø6x30mm 
No. E Quantity: 27+2 PCS Screw ø5x48mm 	No. F Quantity: 36+2 PCS Screw ø3.5x12mm 	No. G Quantity: 12+1 PCS Screw ø4x30mm 	No. H Quantity: 6 PCS Drawer Slider 278mm 
No. I Quantity: 6+1 PCS Screw M4x10mm 	No. J Quantity: 20+2 PCS Bolt M6x12mm 	No. K Quantity: 2 PCS Bolt M6x35mm 	No. L Quantity: 8 PCS 45x12x1mm 
No. M Quantity: 10 PCS Connector 57x27x27mm 	No. N Quantity: 2 PCS Anti-slip strip 190x20mm 	No. O Quantity: 2 PCS Plastic Expansion ø8x40mm 	No. P Quantity: 2 PCS Screw ø4x16mm 
No. Q Quantity: 2 PCS Screw ø4x38mm 	No. R Quantity: 6 PCS Screw ø3x16mm 	No. S Quantity: 6 PCS Back Buckle 15x15x10mm 	No. T Quantity: 1 PC LED Strip light 
No. U Quantity: 1 PC 	Tip: To ensure greater product stability, please install Accessory S during Step 25. Do not omit this step.		


Product structure

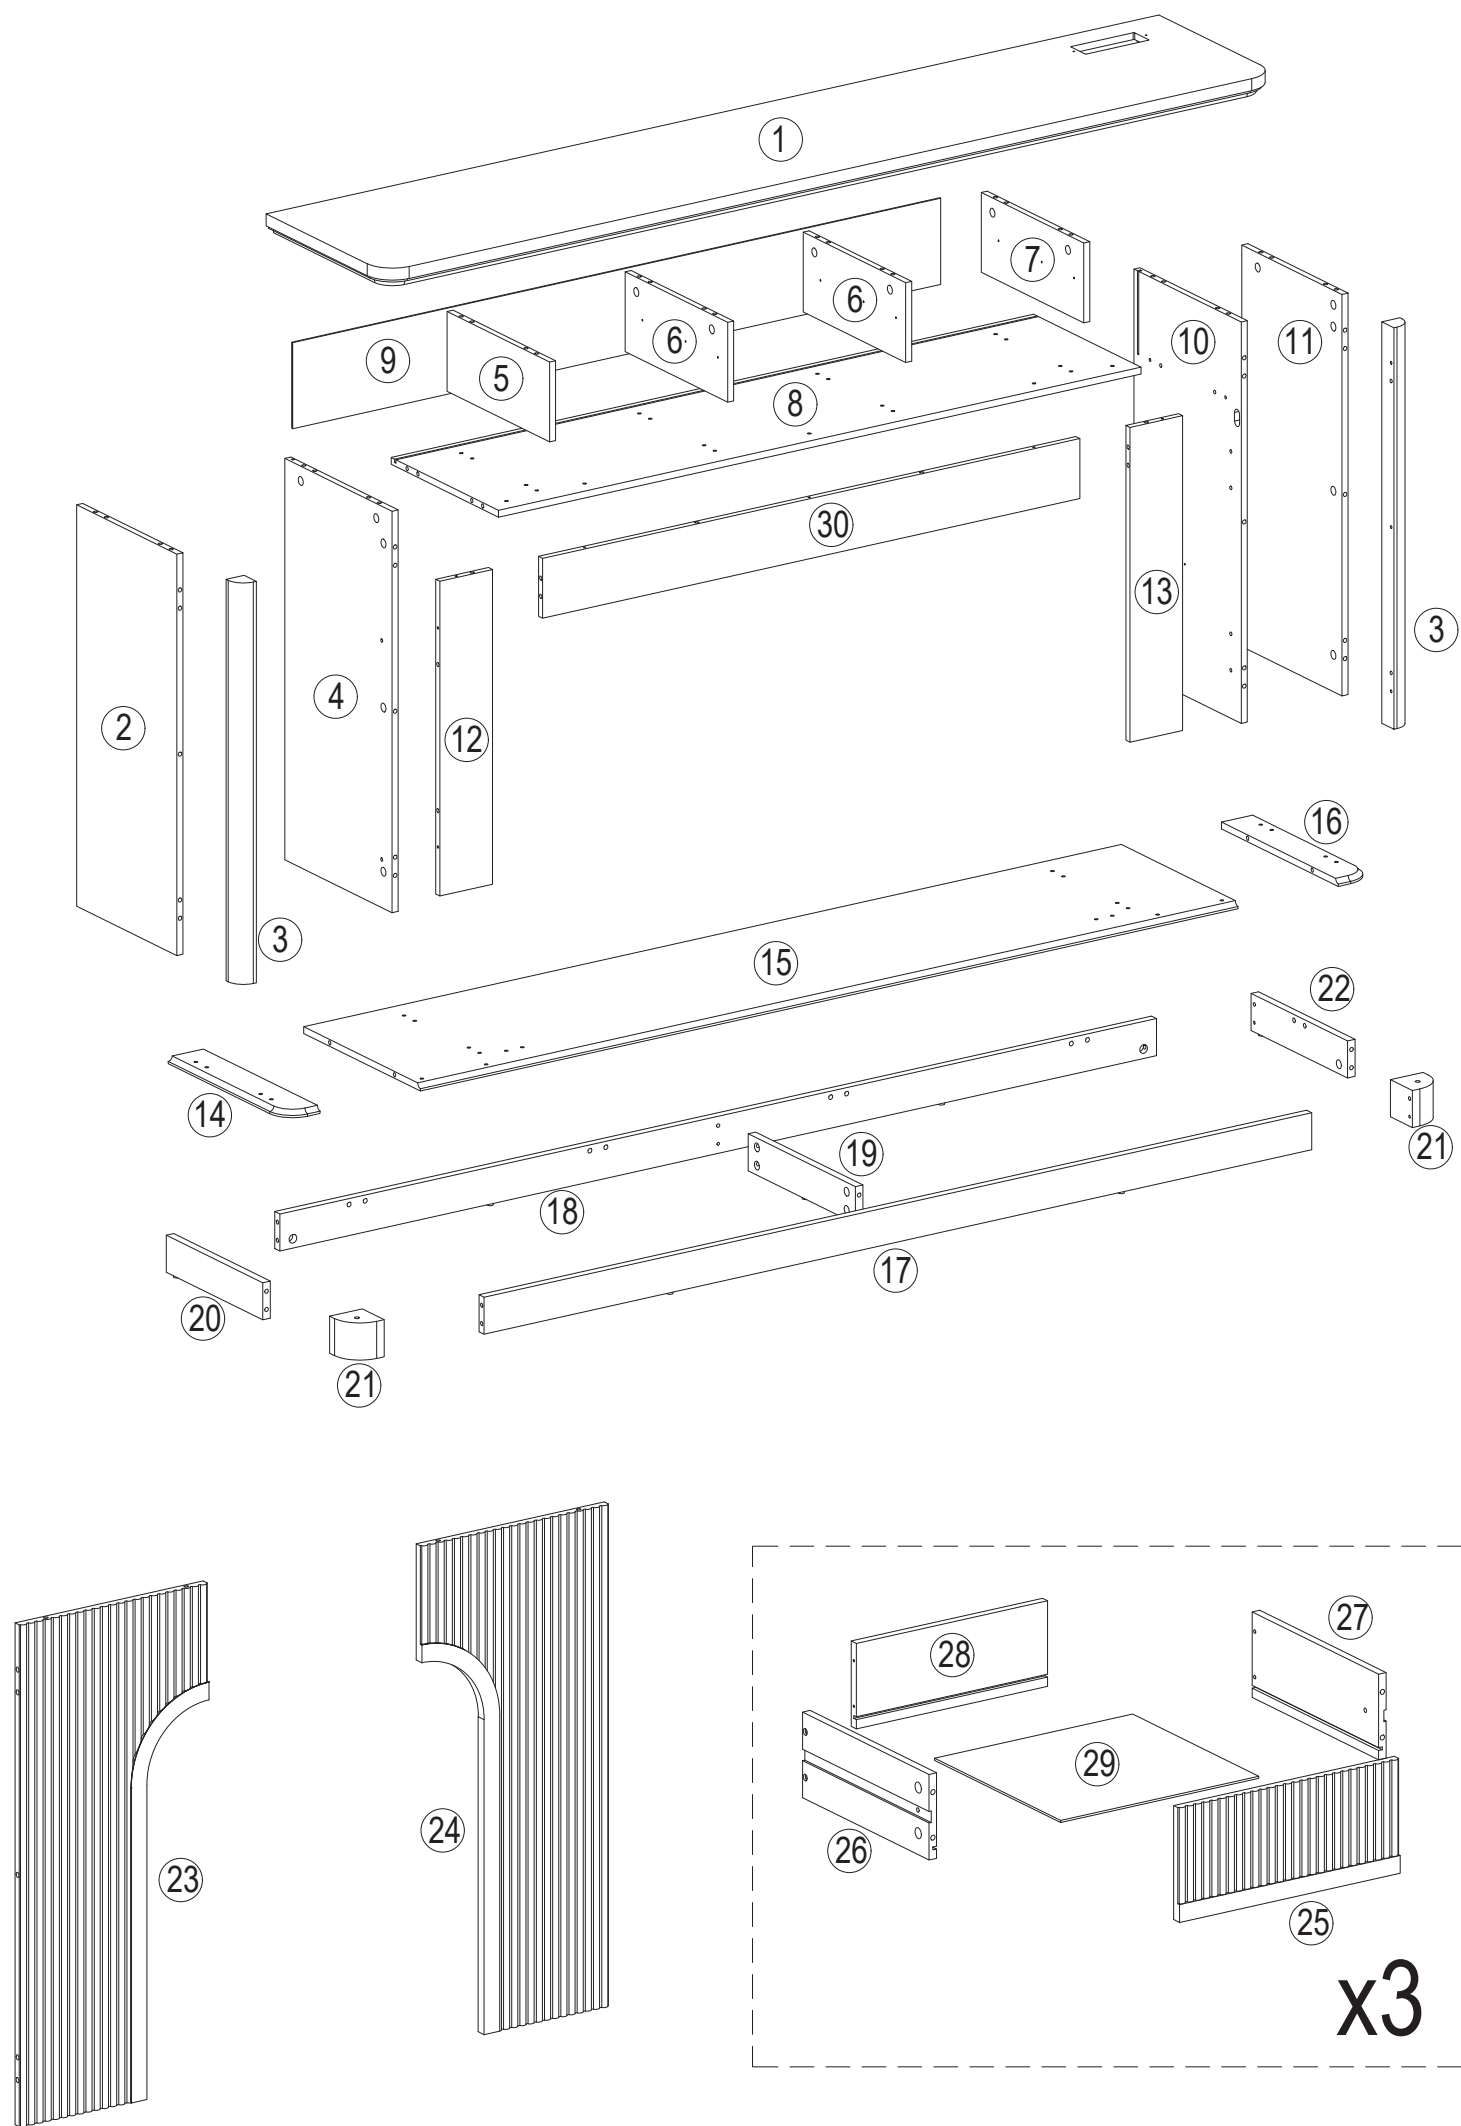

Step 1

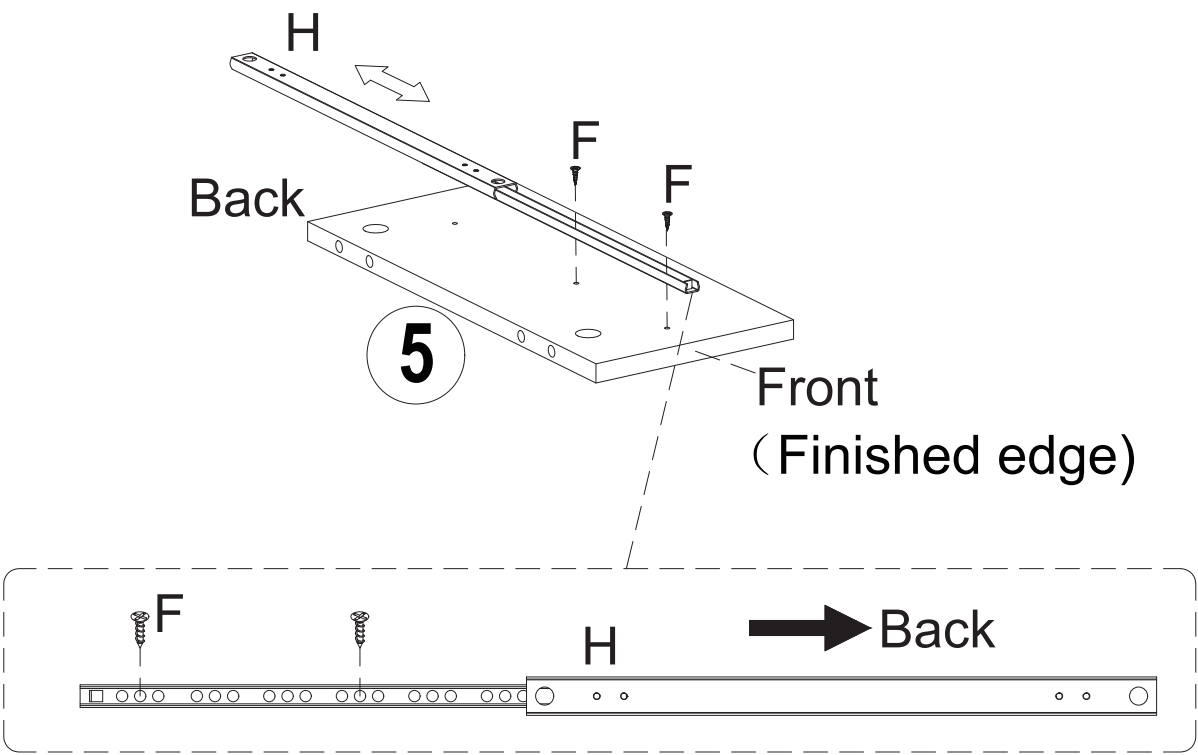


Tip: The slide rail must be pulled back; install the two front F-screws first.

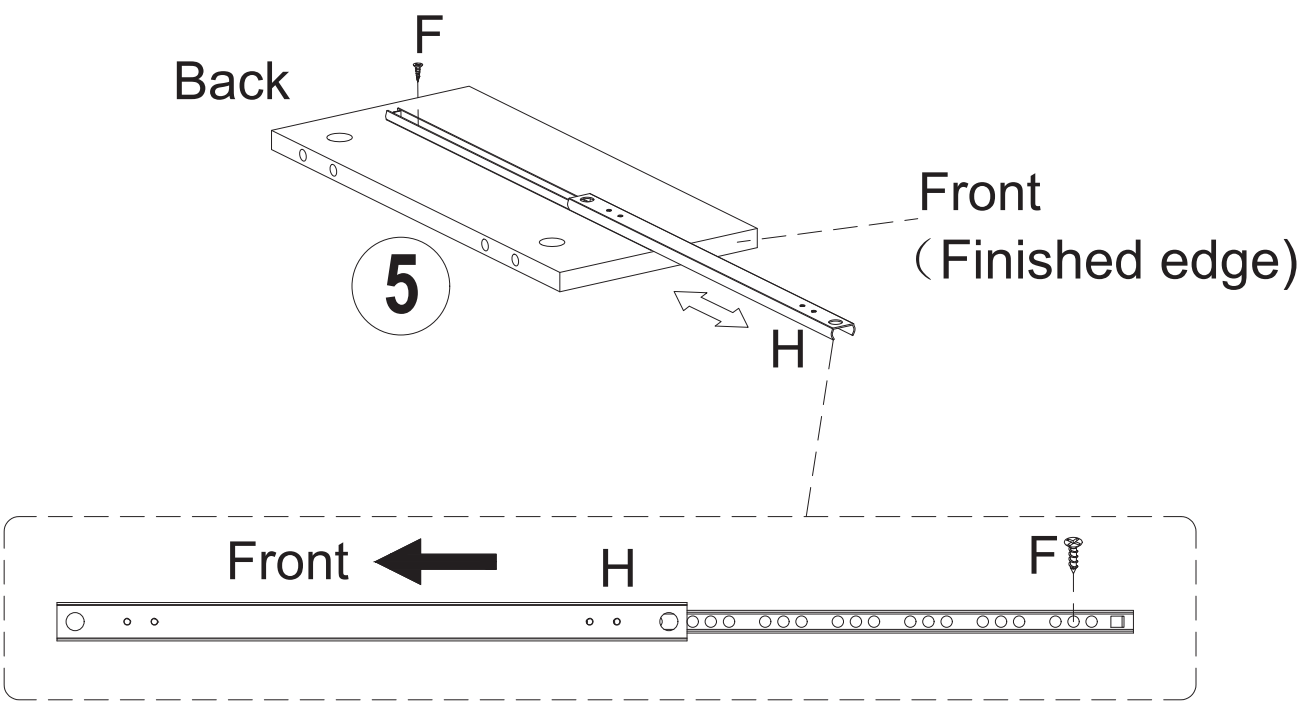


Tip: You need to pull the slide rail forward to install the rear F-screw.


No. F
Quantity: 3 PCS
Screw
ø3.5x12mm




No. H
Quantity: 1 PCS
Drawer Slider
278mm

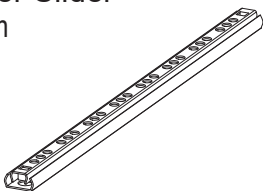

Step 2

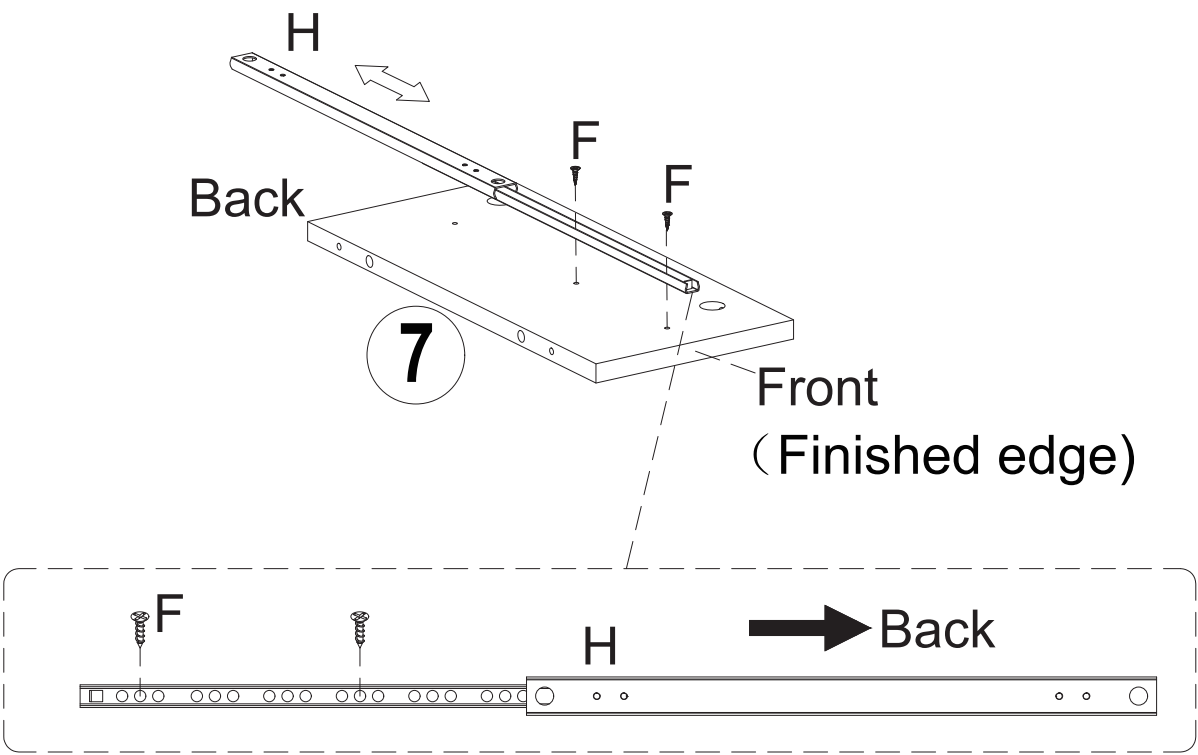


Tip:The slide rail must be pulled back;install the two front F-screws first.

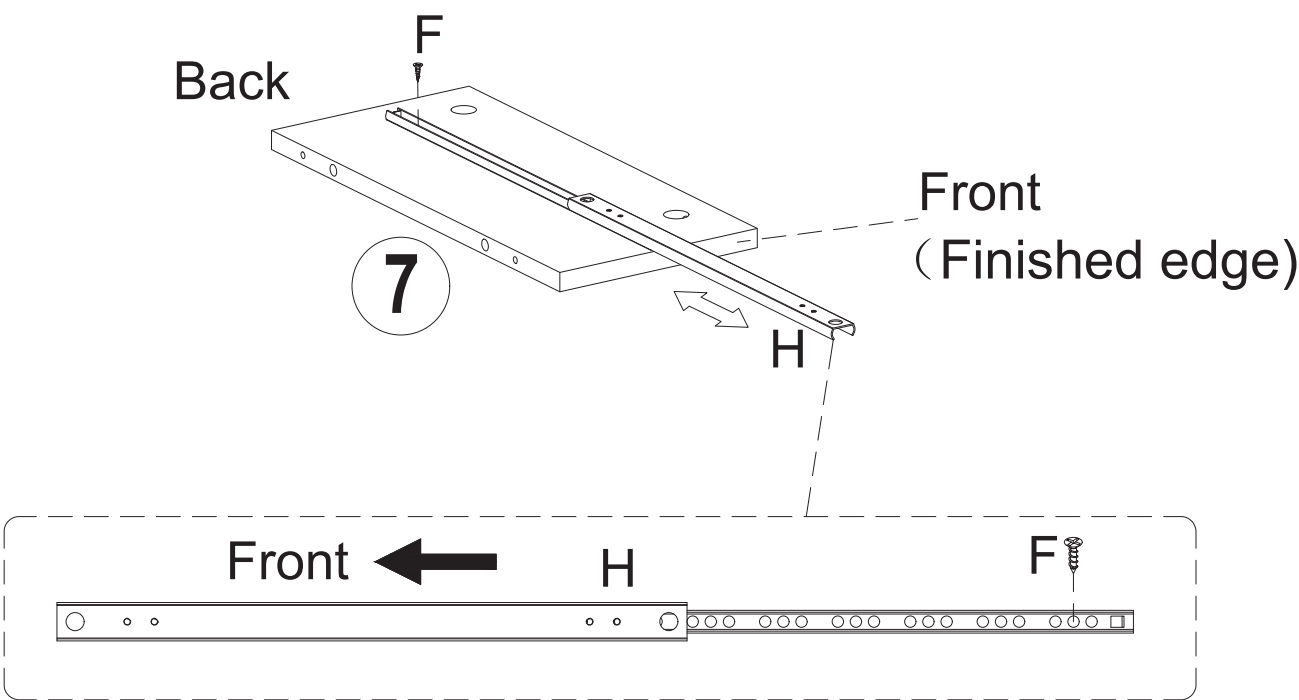


Tip:You need to pull the slide rail forward to install the rear F-screw.


No. F
Quantity: 3 PCS
Screw
ø3.5x12mm




No. H
Quantity: 1 PCS
Drawer Slider
278mm

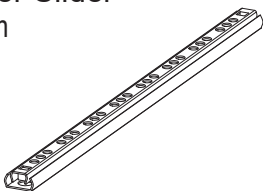


Step 3

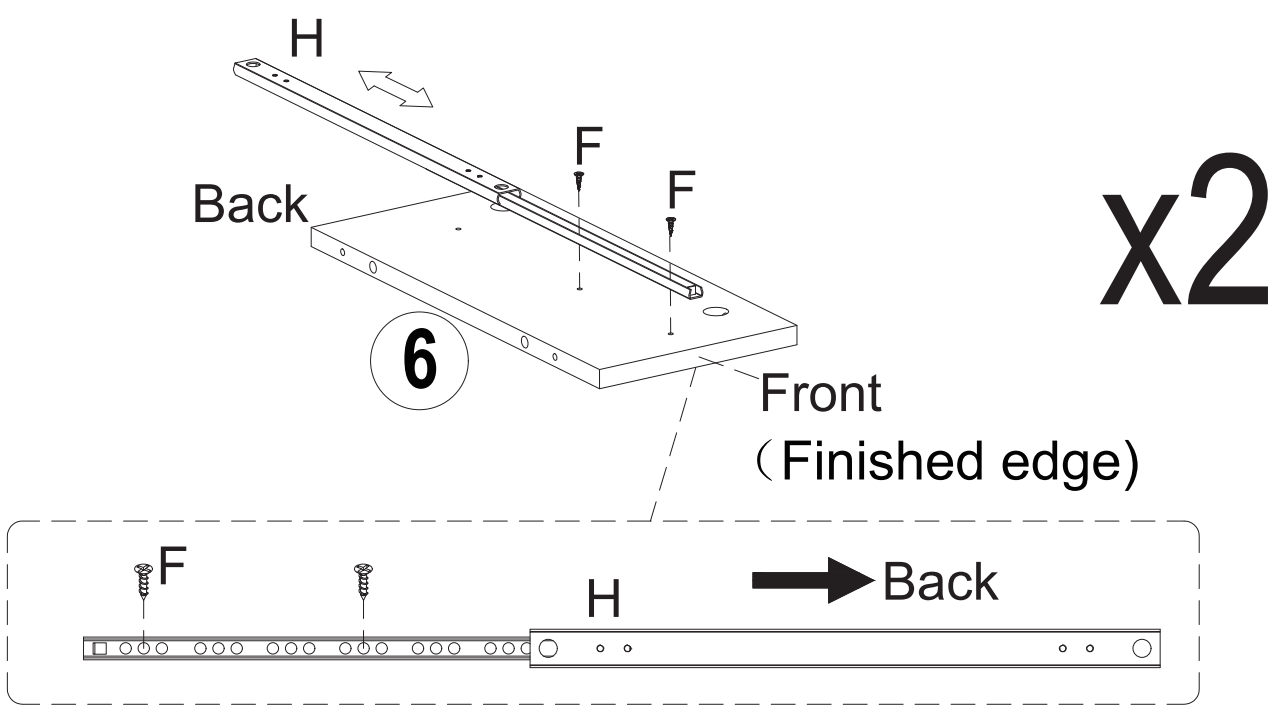

Tip: The slide rail must be pulled back; install the two front F-screws first.

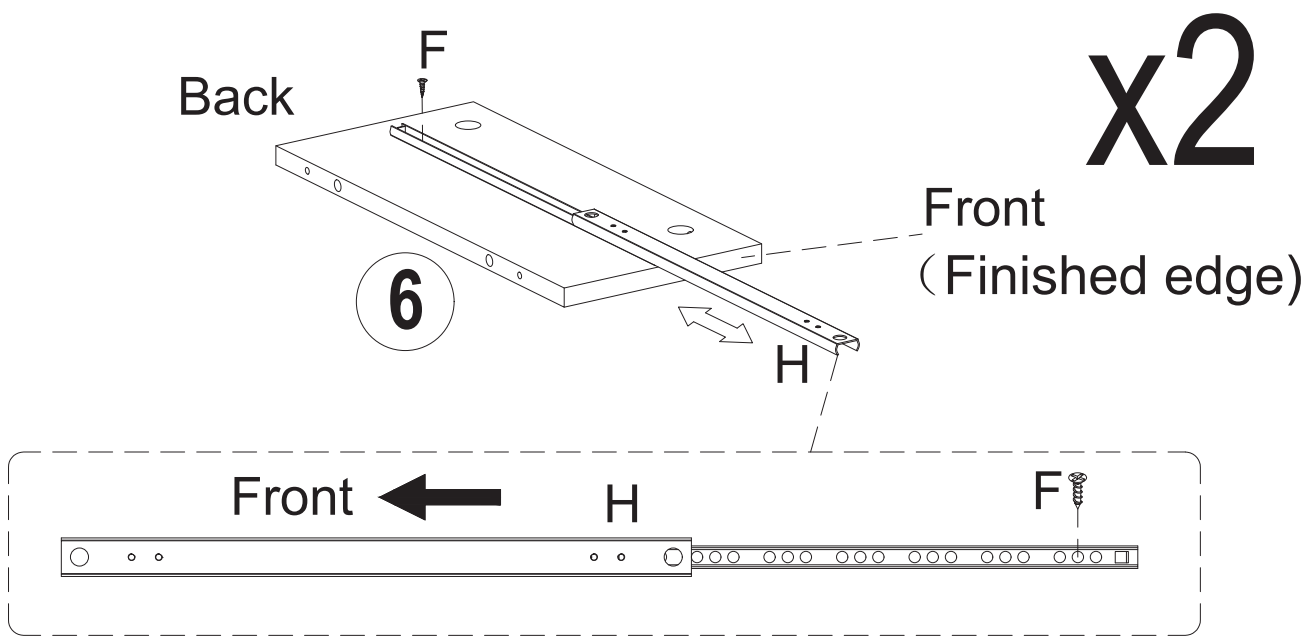


Tip: You need to pull the slide rail forward to install the rear F-screw.

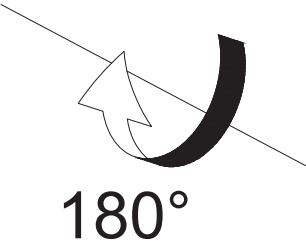


Tip: After completing Step 4 (installing the slide rail), flip the unit over to the other side to proceed with Step 5 (installing the remaining slide rail). Please carefully verify the orientation of the slide rail installation.


No. F
Quantity: 6 PCS
Screw
ø3.5x12mm




No. H
Quantity: 2 PCS
Drawer Slider
278mm

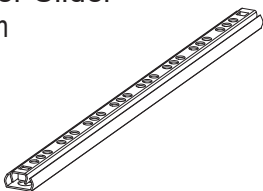


Step 4

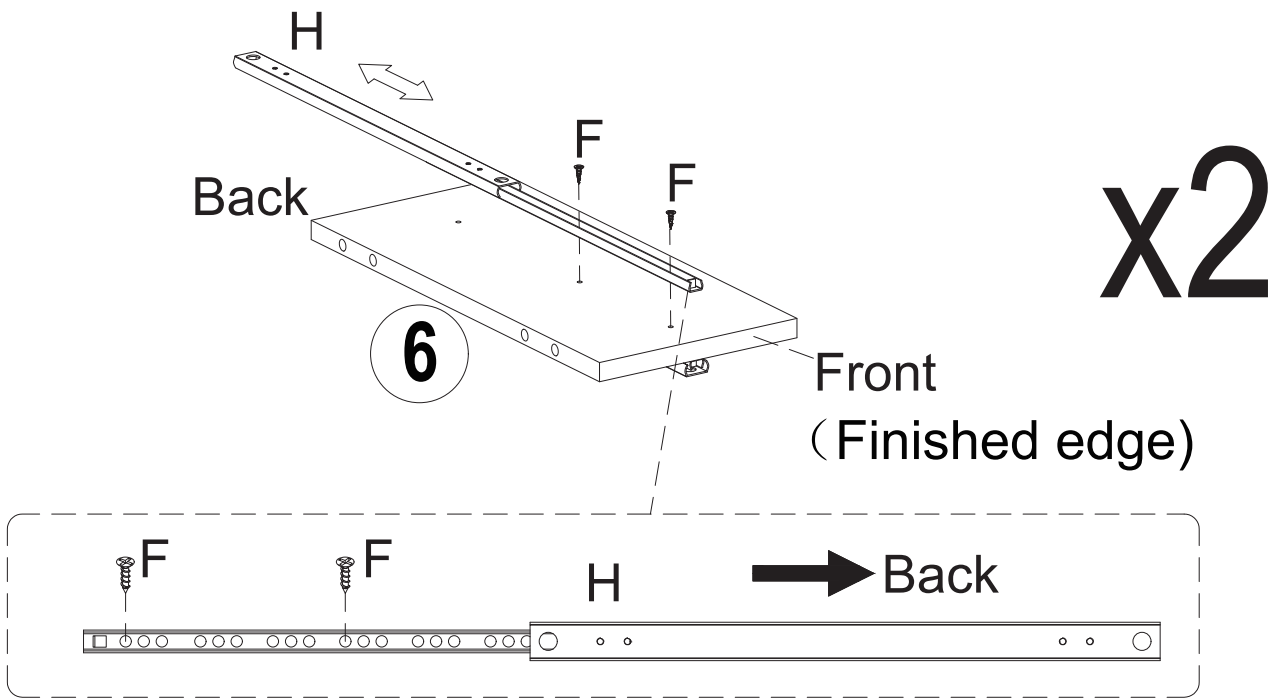

Tip: The slide rail must be pulled back; install the two front F-screws first.

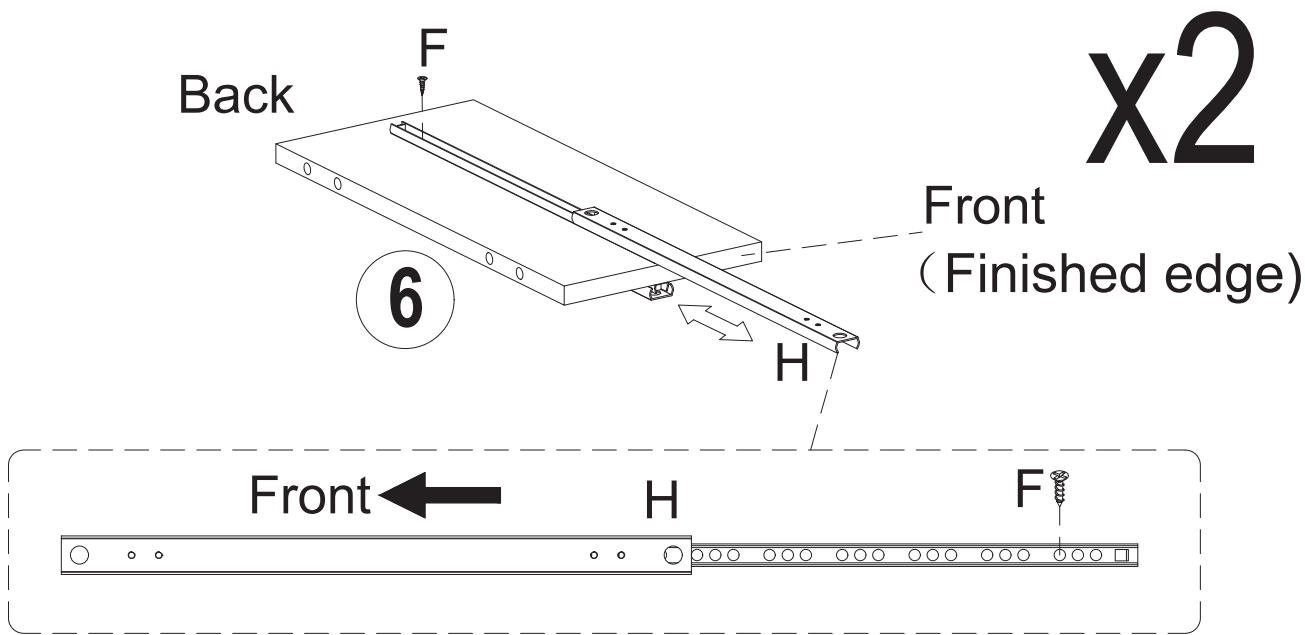


Tip: You need to pull the slide rail forward to install the rear F-screw.

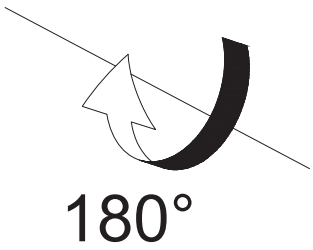


Tip: After completing Step 4 (installing the slide rail), flip the unit over to the other side to proceed with Step 5 (installing the remaining slide rail). Please carefully verify the orientation of the slide rail installation.


No. F
Quantity: 6 PCS
Screw
ø3.5x12mm




No. H
Quantity: 2 PCS
Drawer Slider
278mm

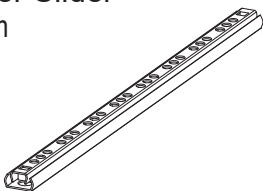




Step 5

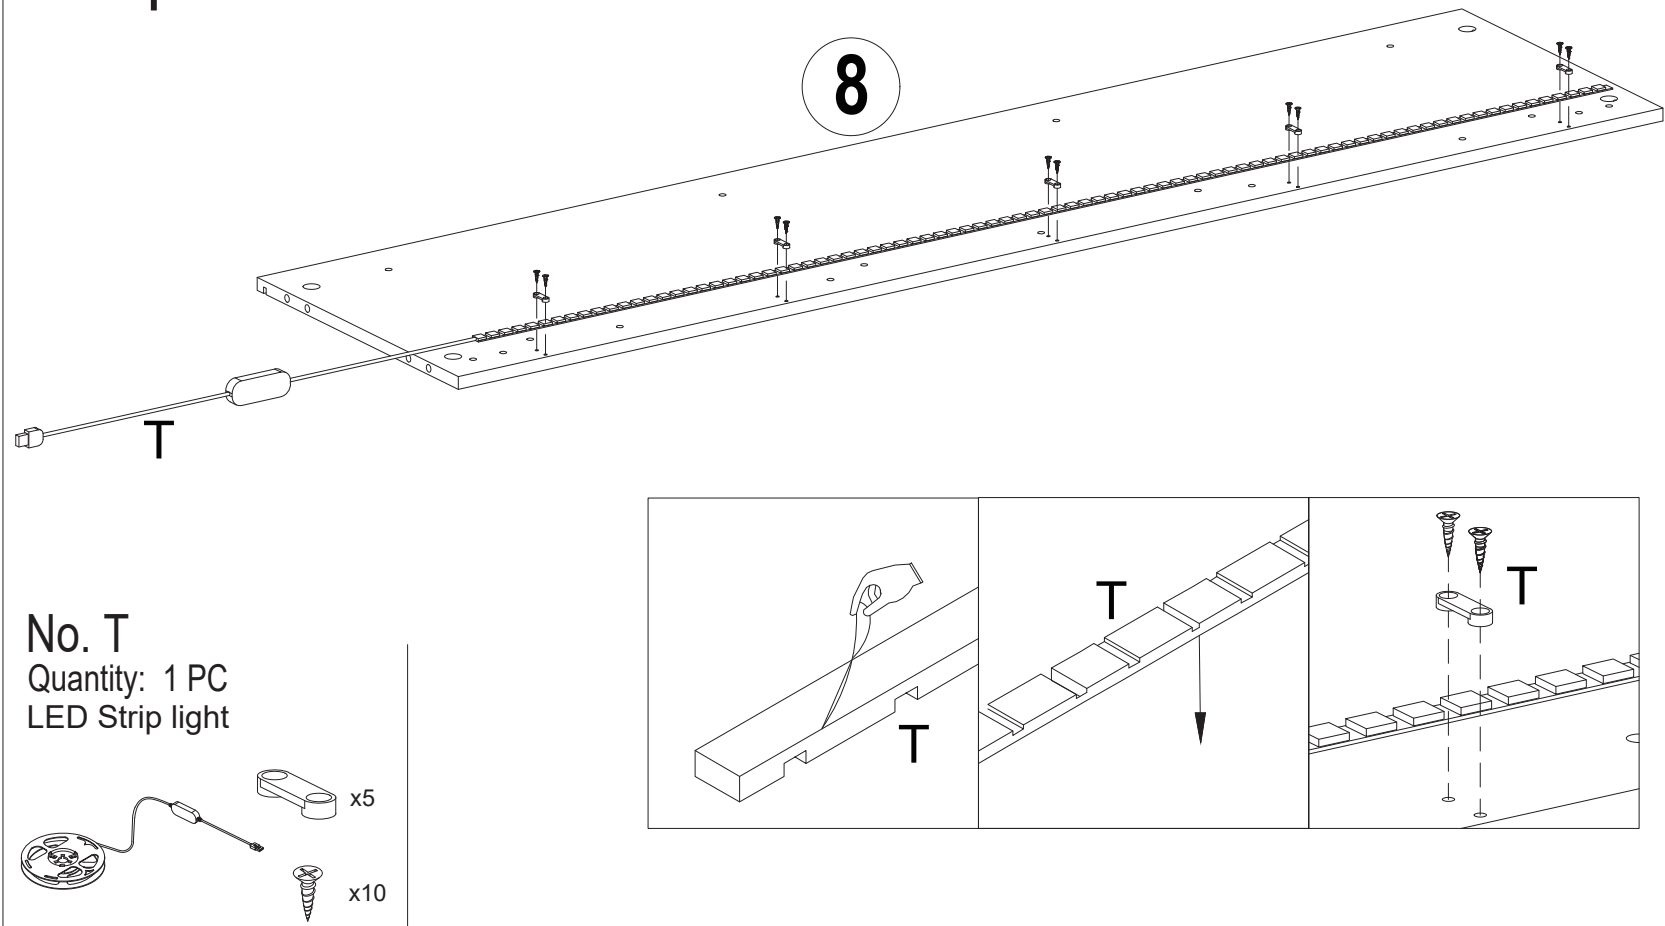


Step 6

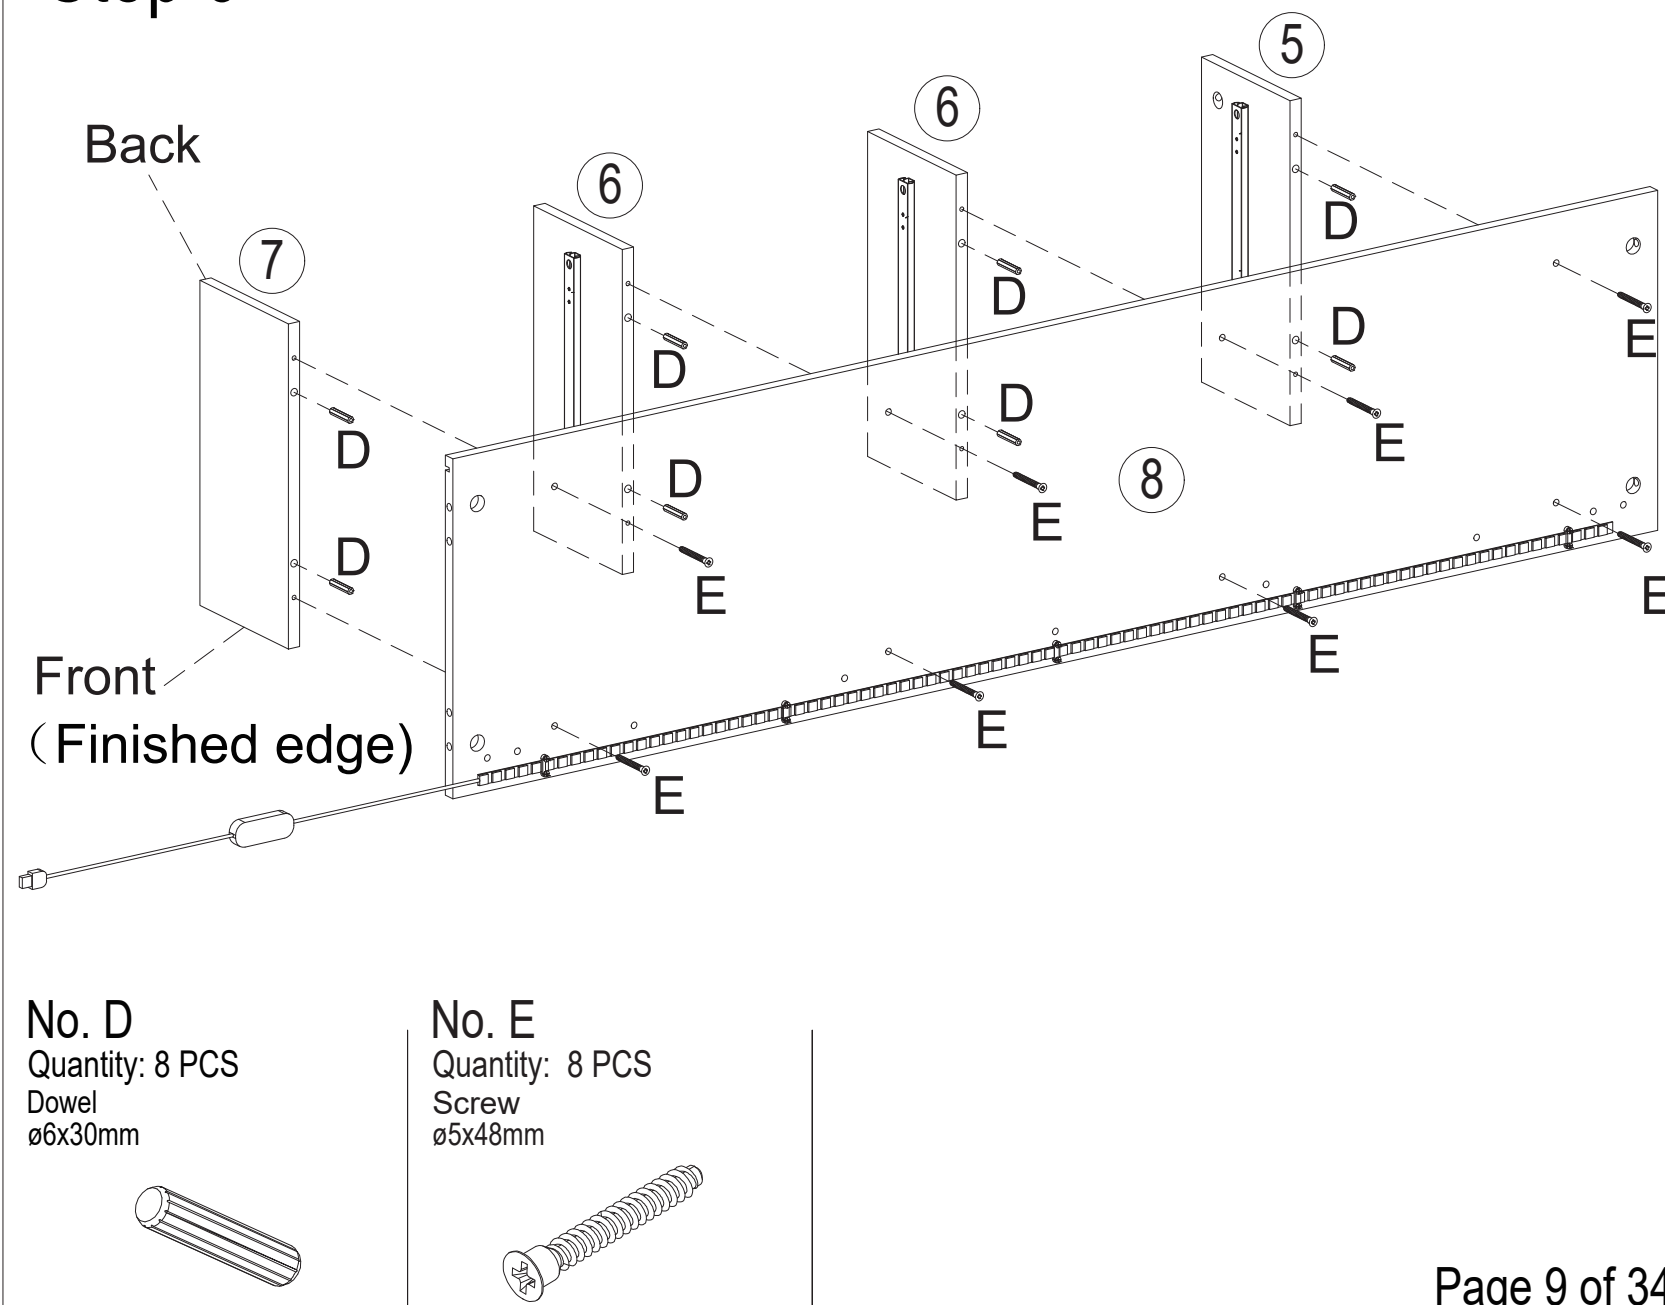


Step 7

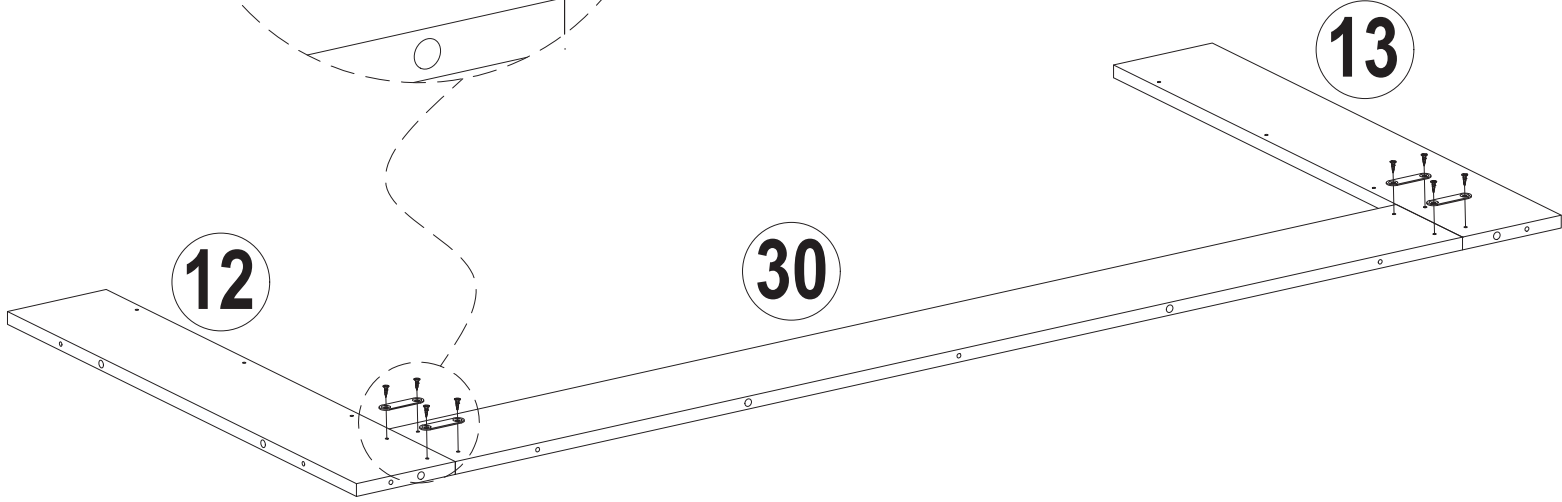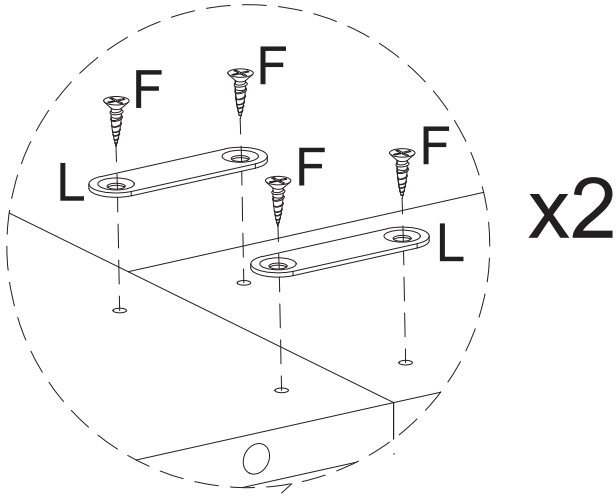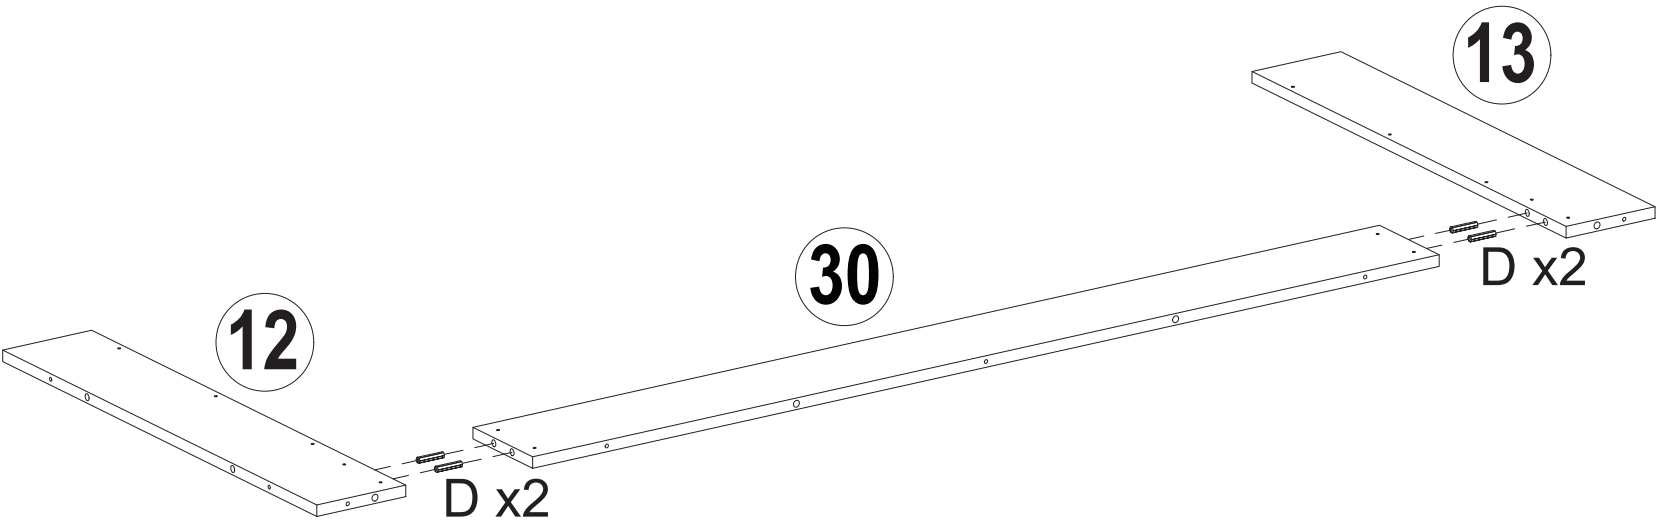


No. D
Quantity: 4 PCS
Dowel
ø6x30mm





No. L
Quantity: 4 PCS
45x12x1mm

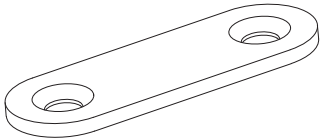


No. F
Quantity: 8 PCS
Screw
ø3.5x12mm




Step 8

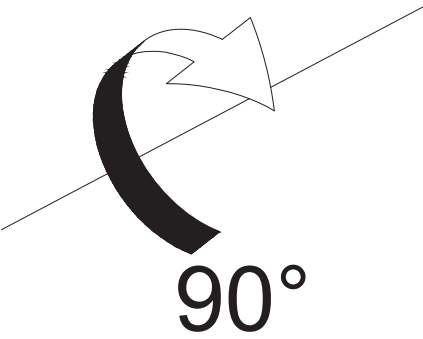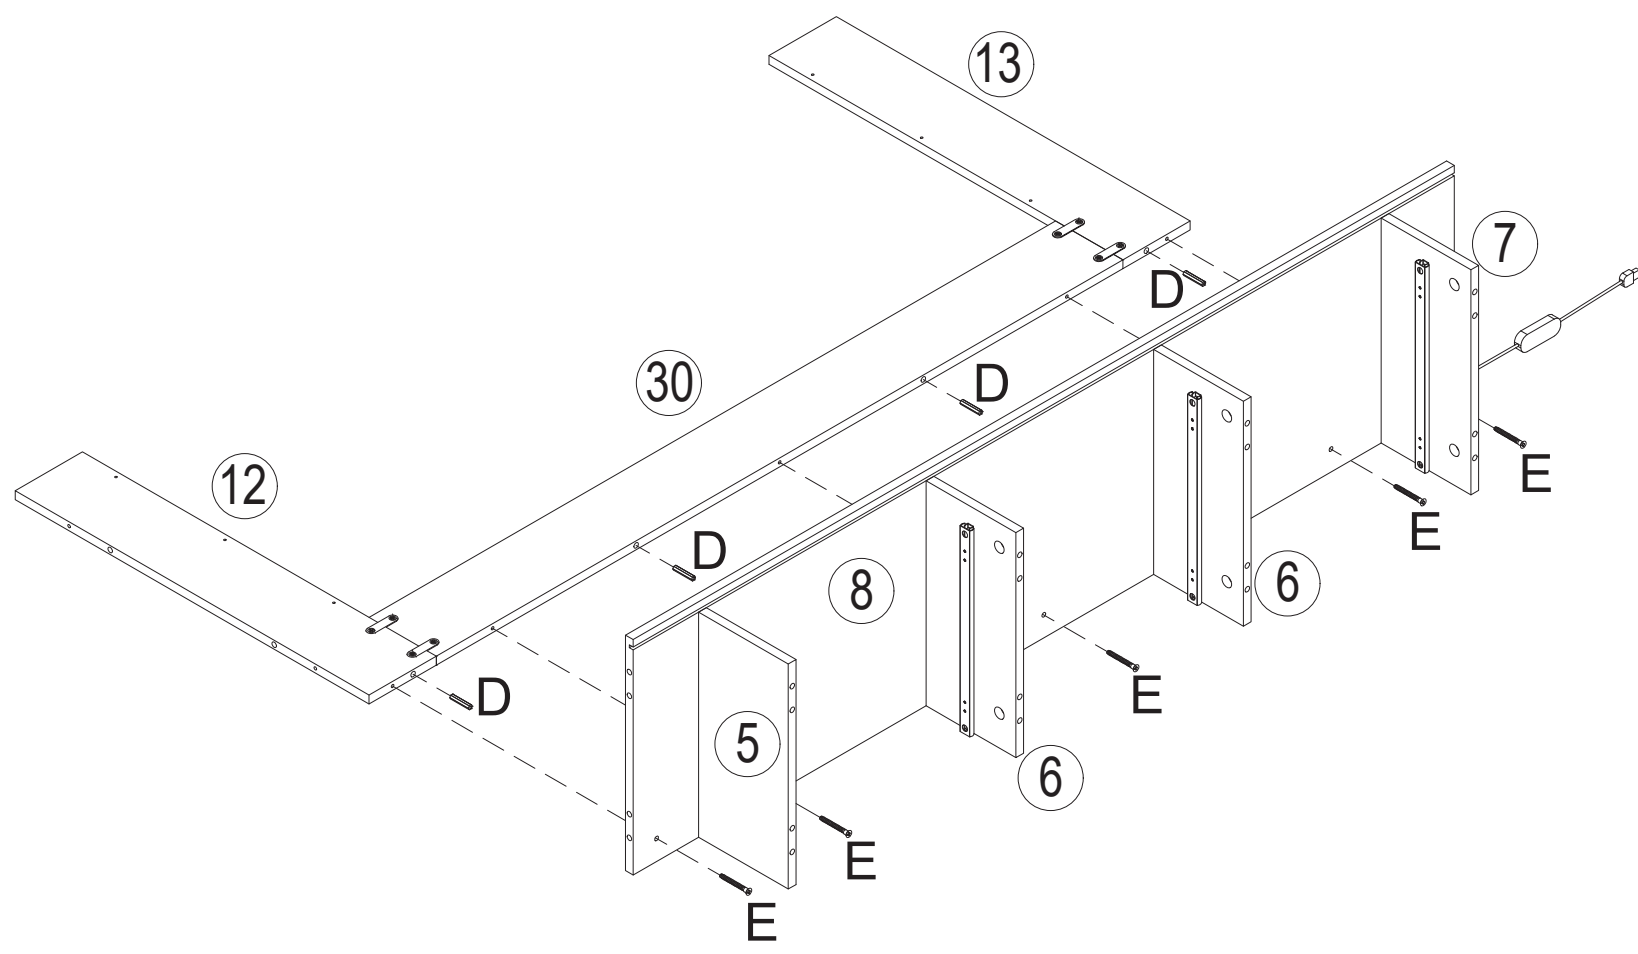


No. D
Quantity: 4 PCS
Dowel
ø6x30mm




No. E
Quantity: 5 PCS
Screw
ø5x48mm

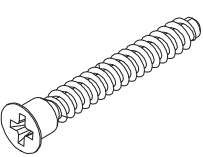


Step 9

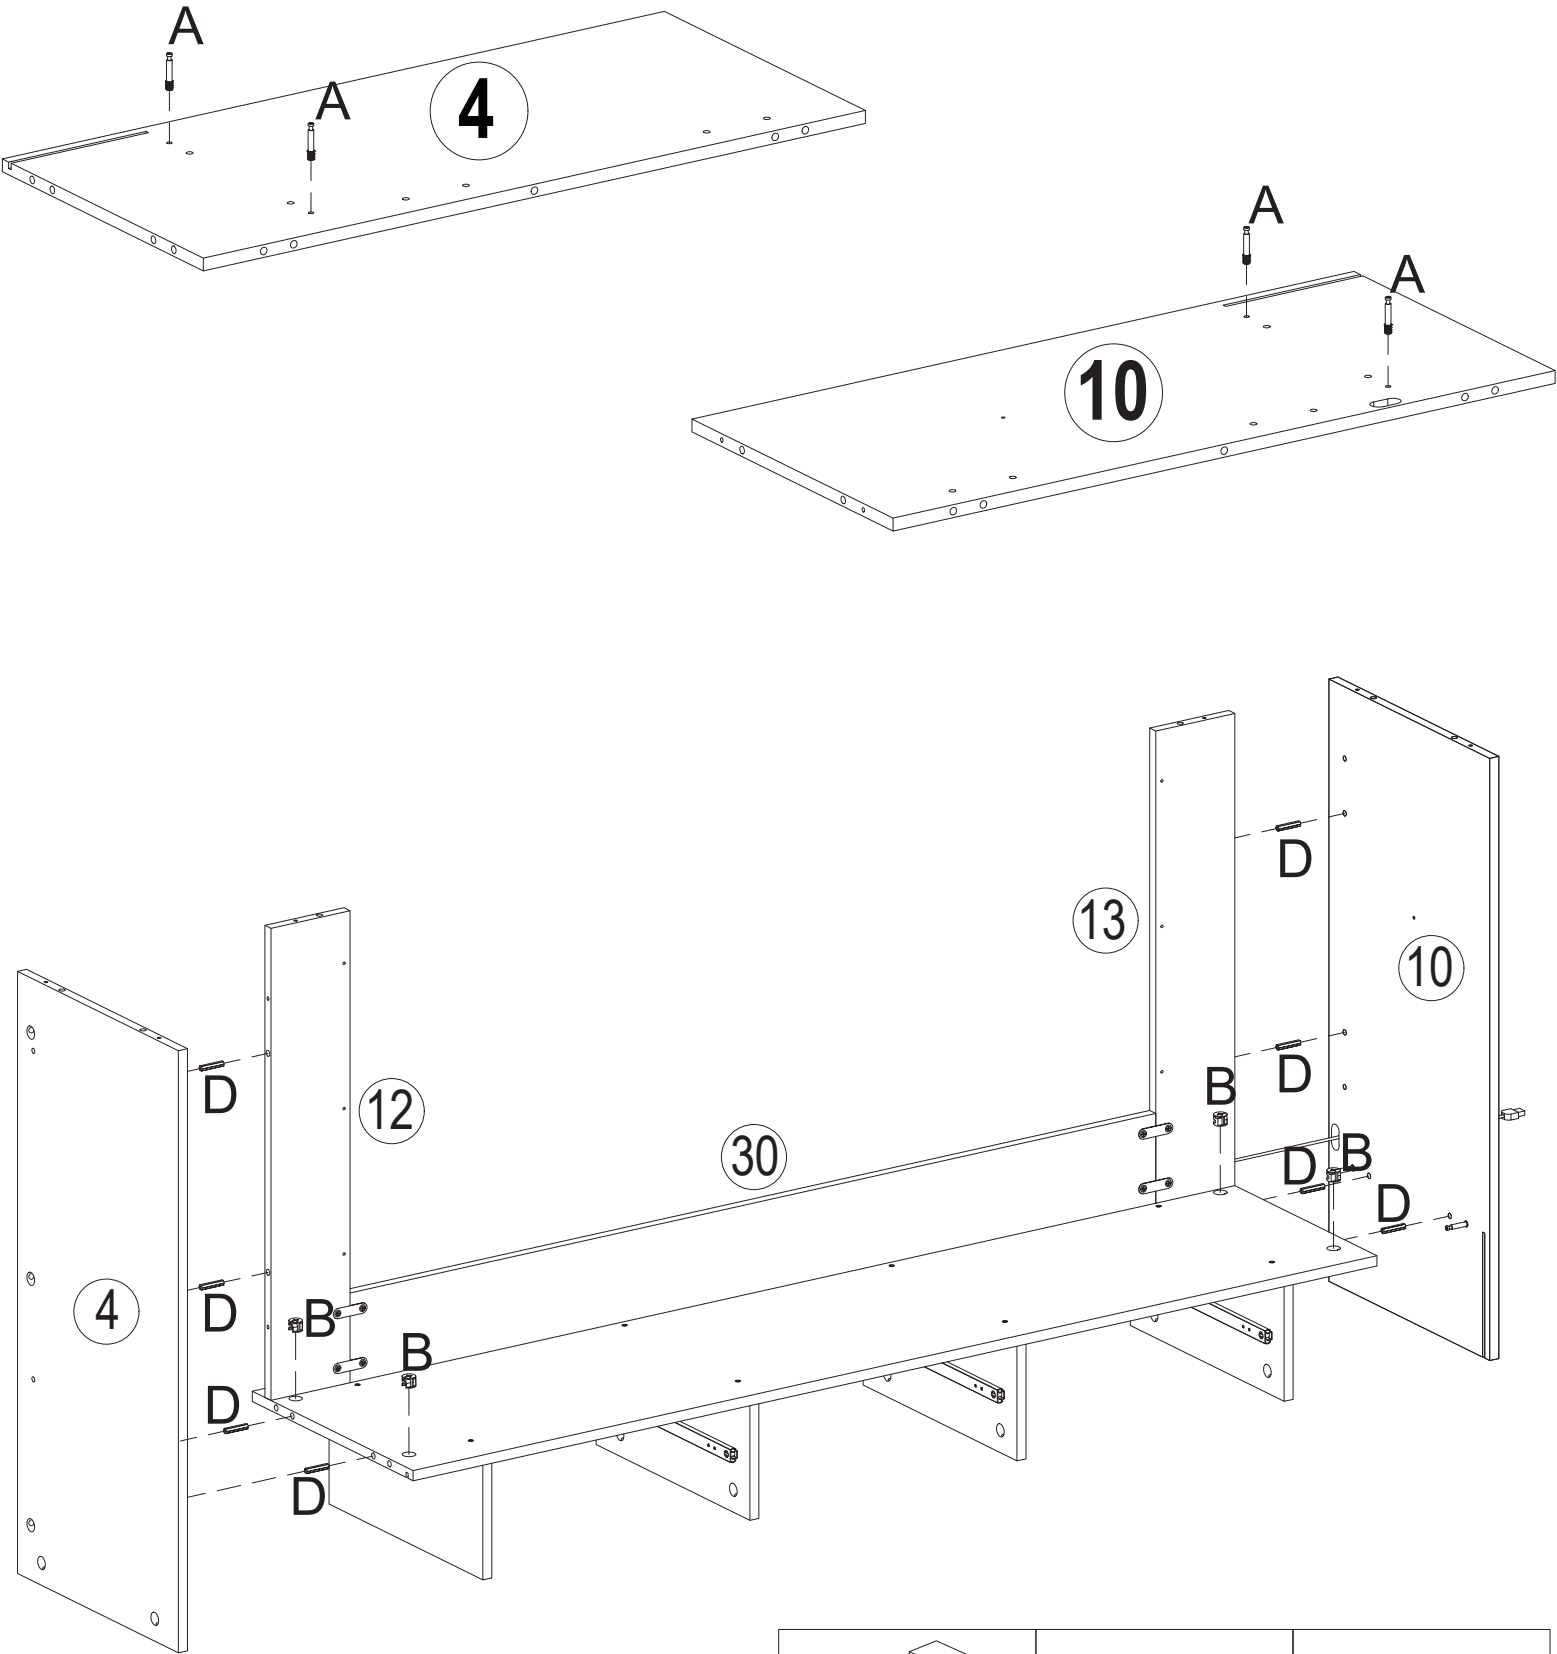


No. D
Quantity: 8 PCS
Dowel
ø6x30mm




No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm

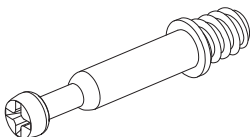


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm

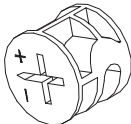




Step 10

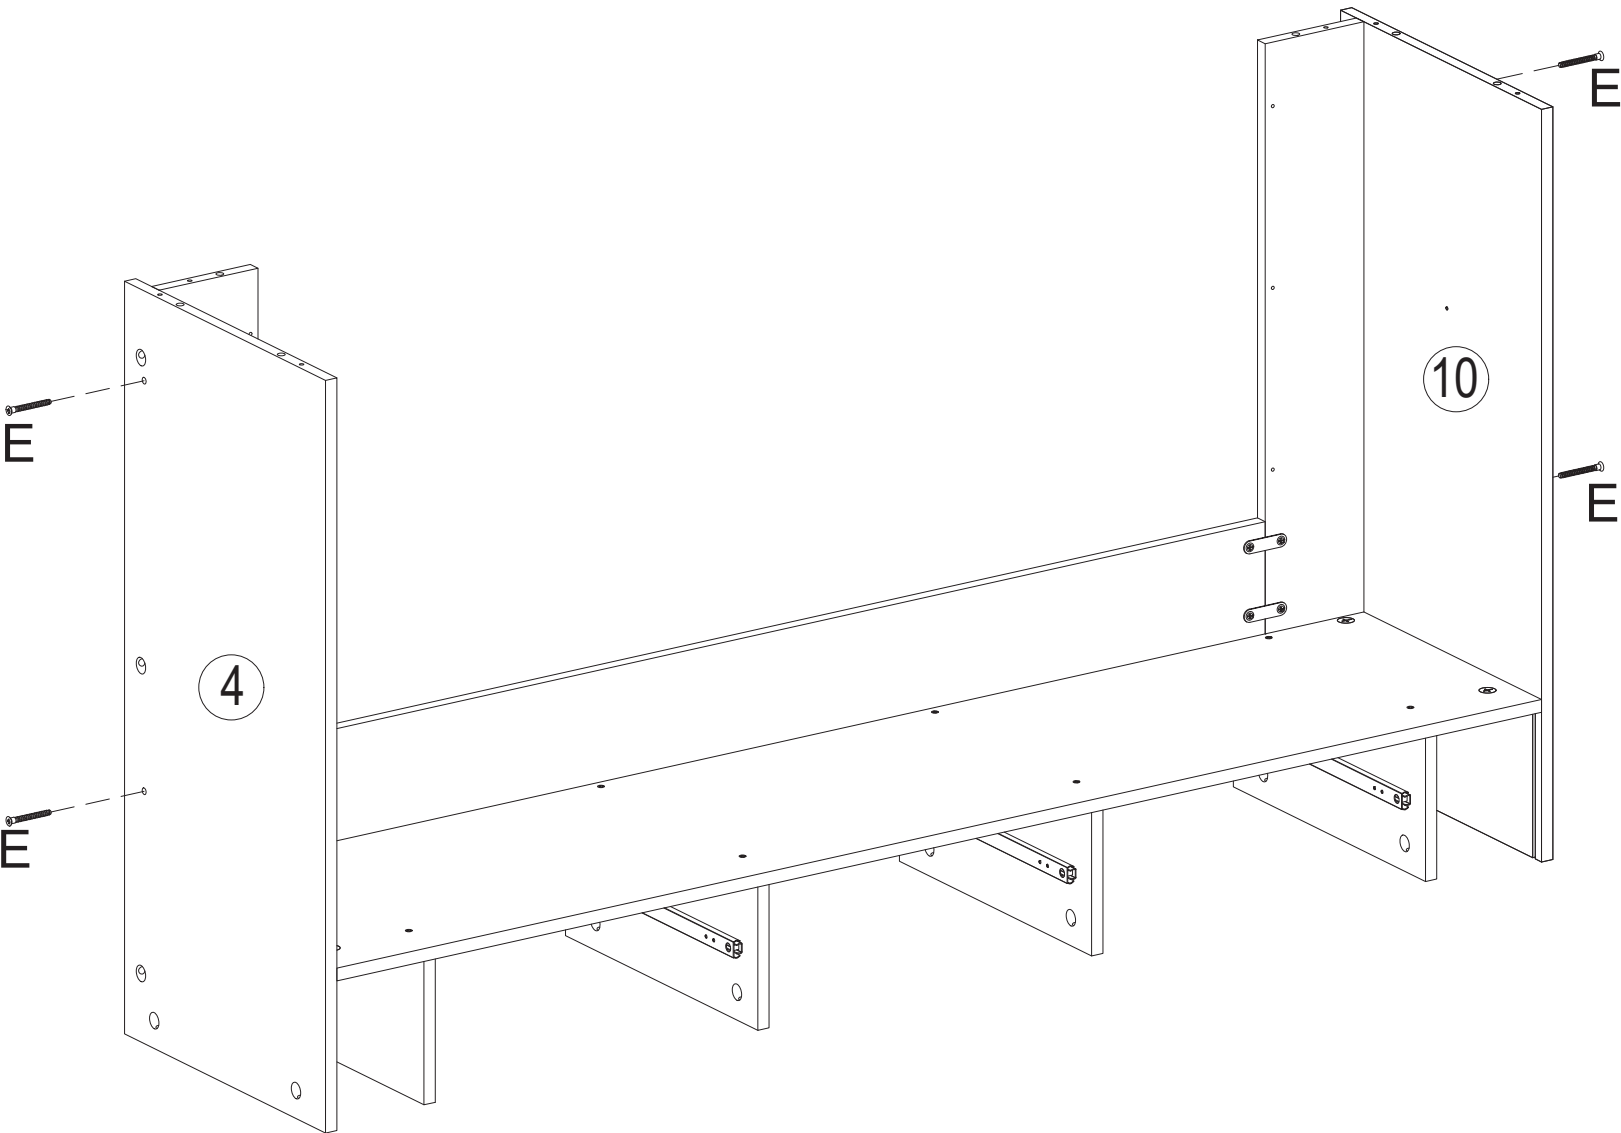


No. E
Quantity: 4 PCS
Screw
ø5x48mm

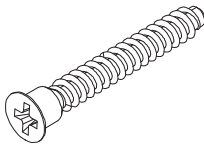



Step 11

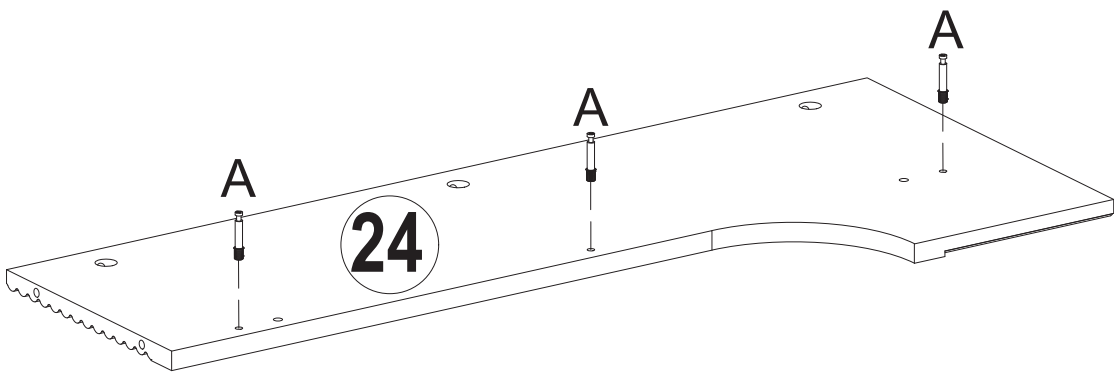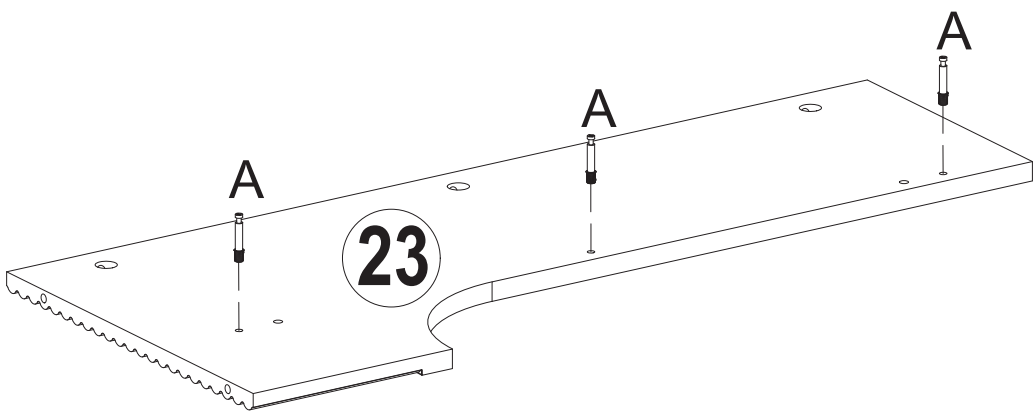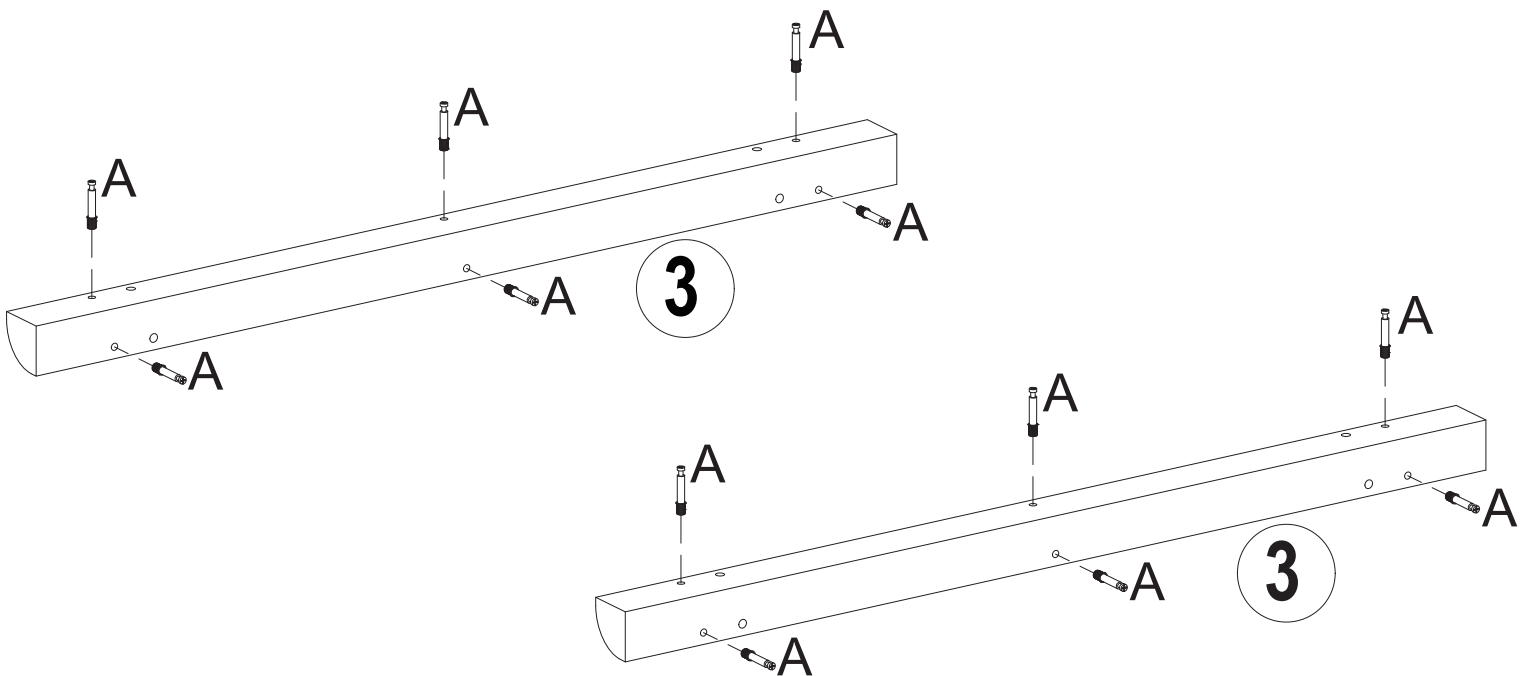


No. A
Quantity: 18 PCS
Cam Bolt
ø6x33.5mm

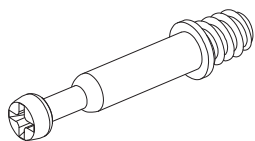

Step 12

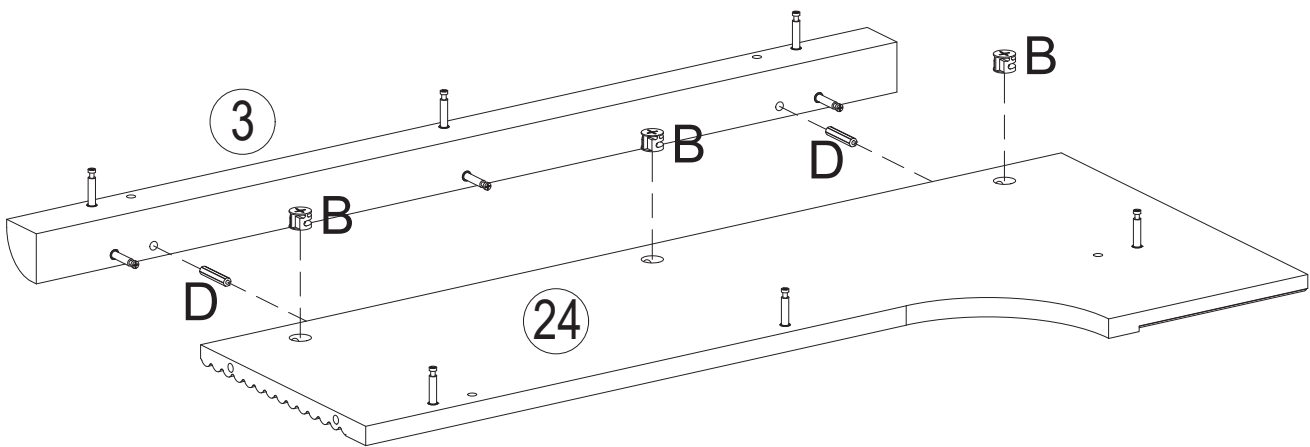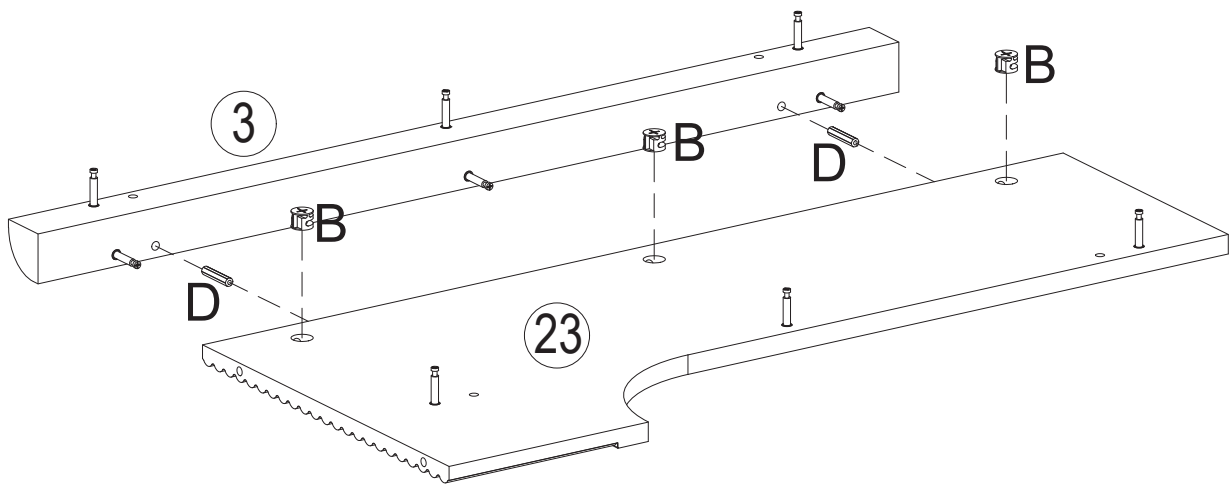


No. D
Quantity: 4 PCS
Dowel
ø6x30mm




No. B
Quantity: 6 PCS
Cam
ø15x9.5mm



Step 13

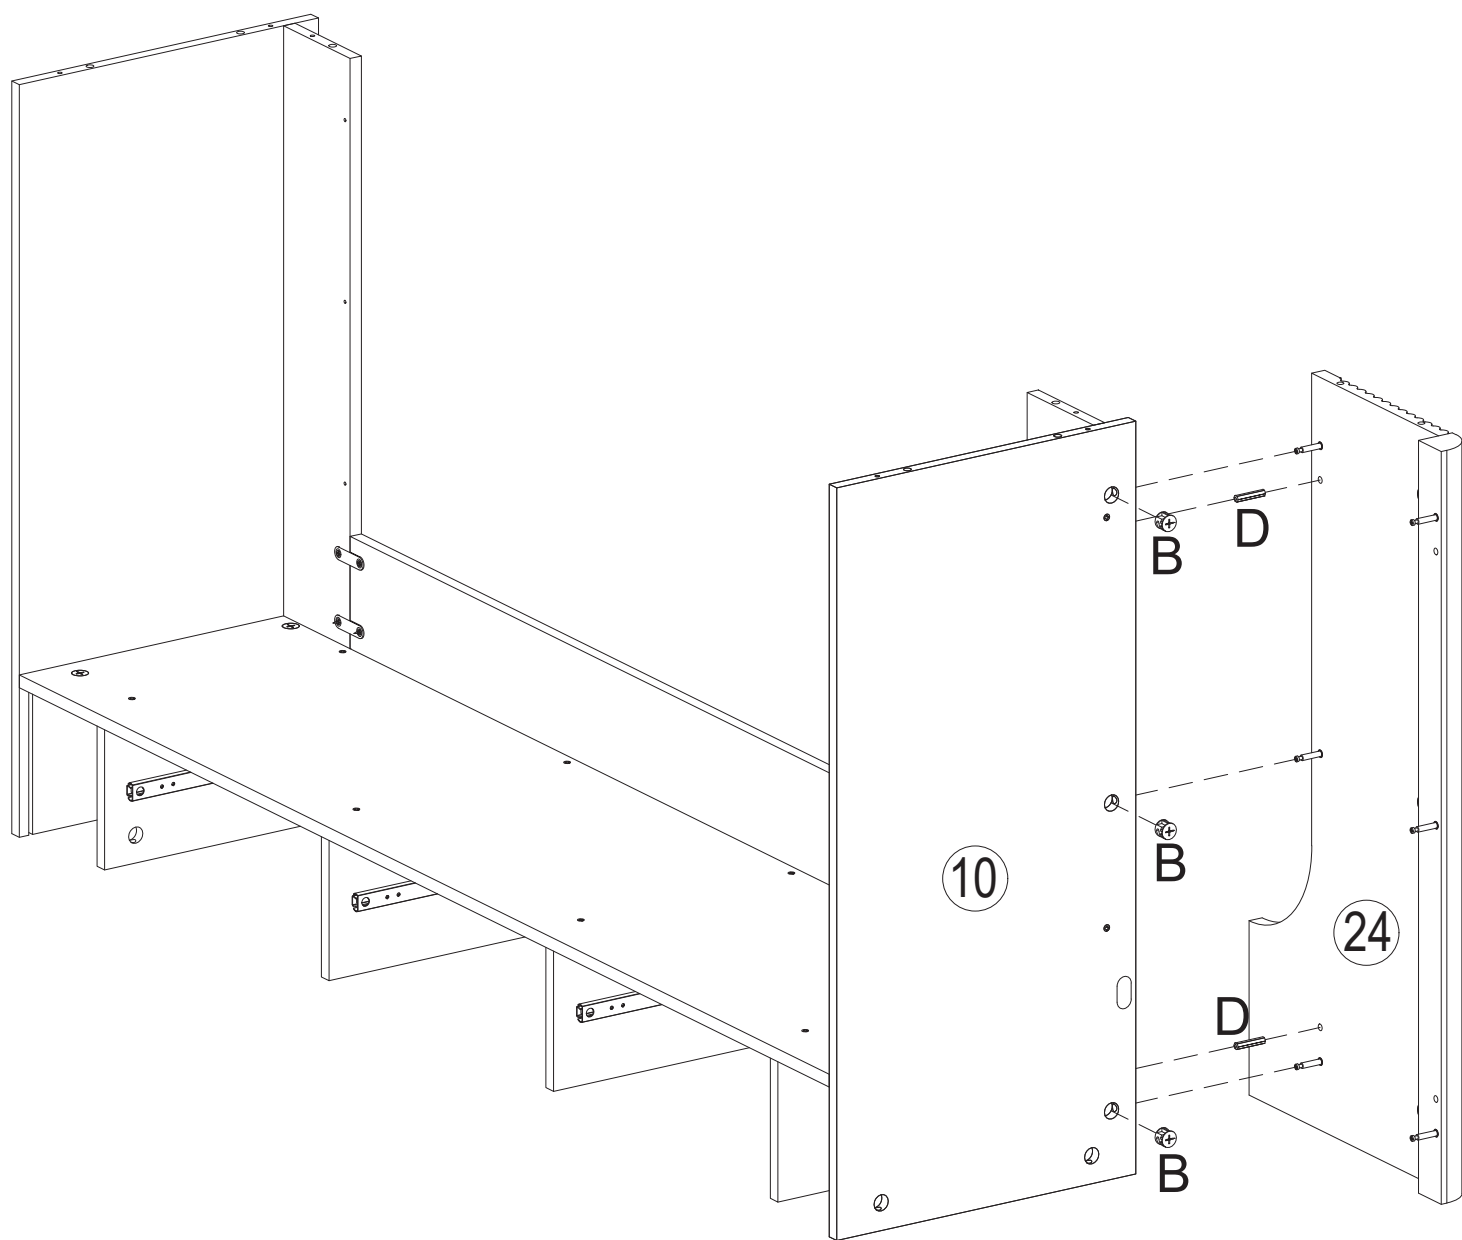


No. D
Quantity: 2 PCS
Dowel
ø6x30mm




No. B
Quantity: 3 PCS
Cam
ø15x9.5mm



Step 14

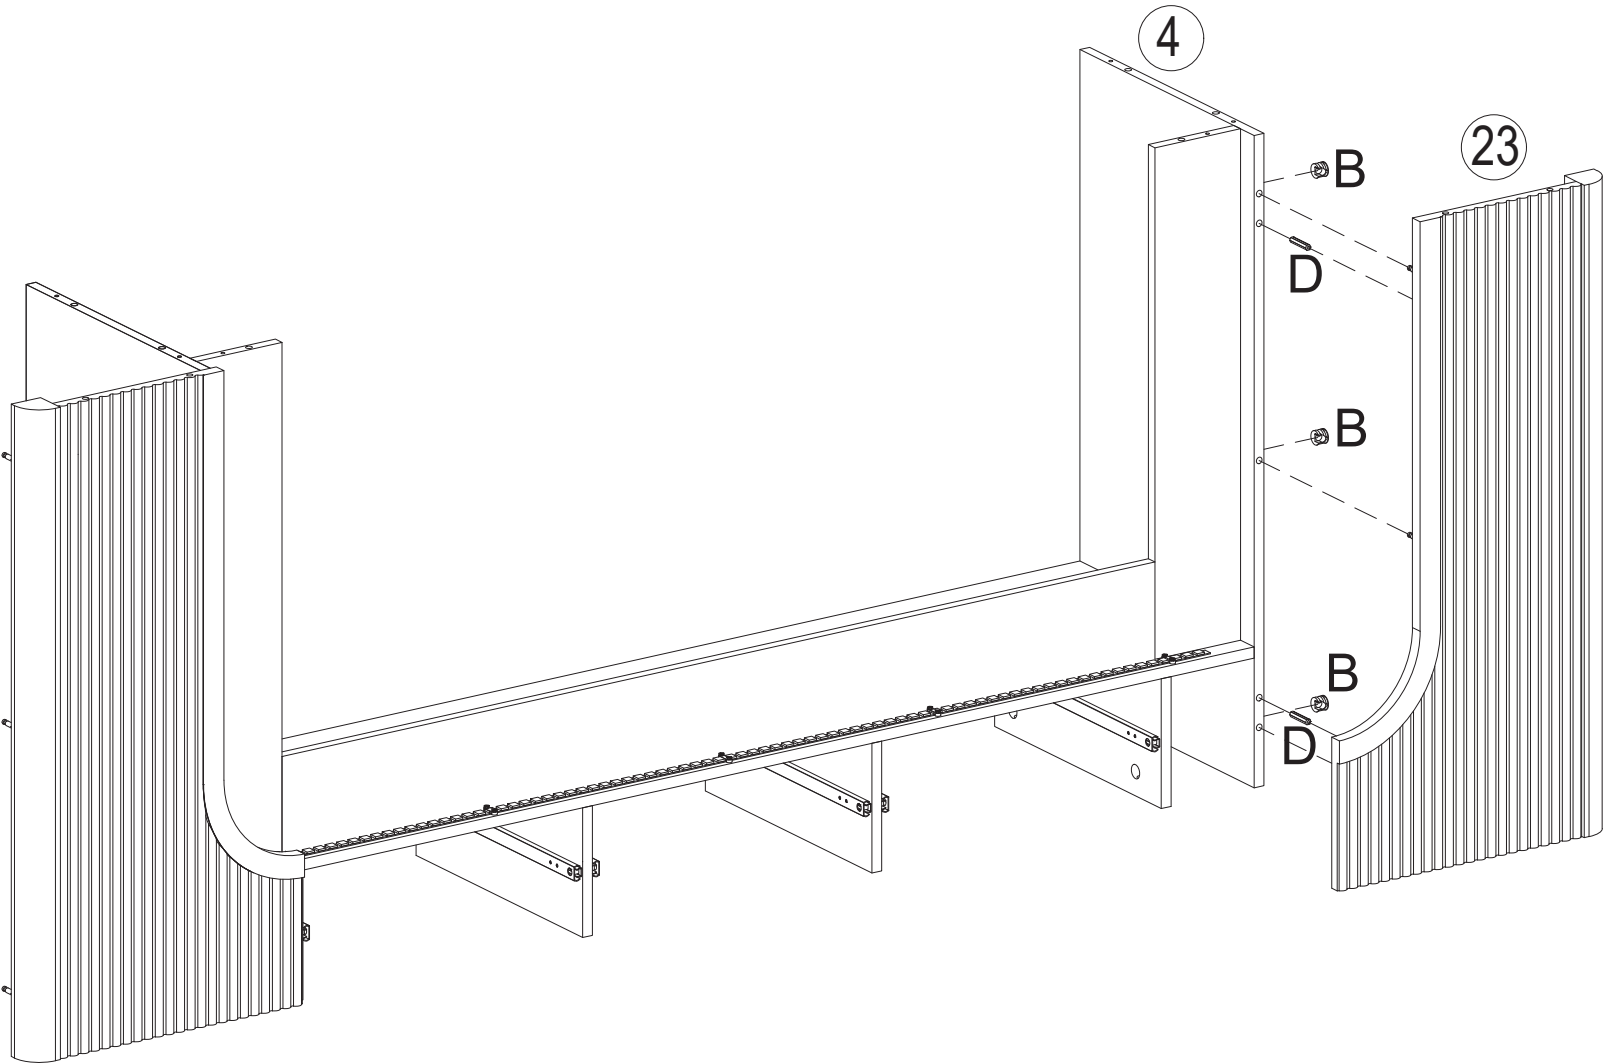


No. D
Quantity: 2 PCS
Dowel
ø6x30mm




No. B
Quantity: 3 PCS
Cam
ø15x9.5mm




Step 15

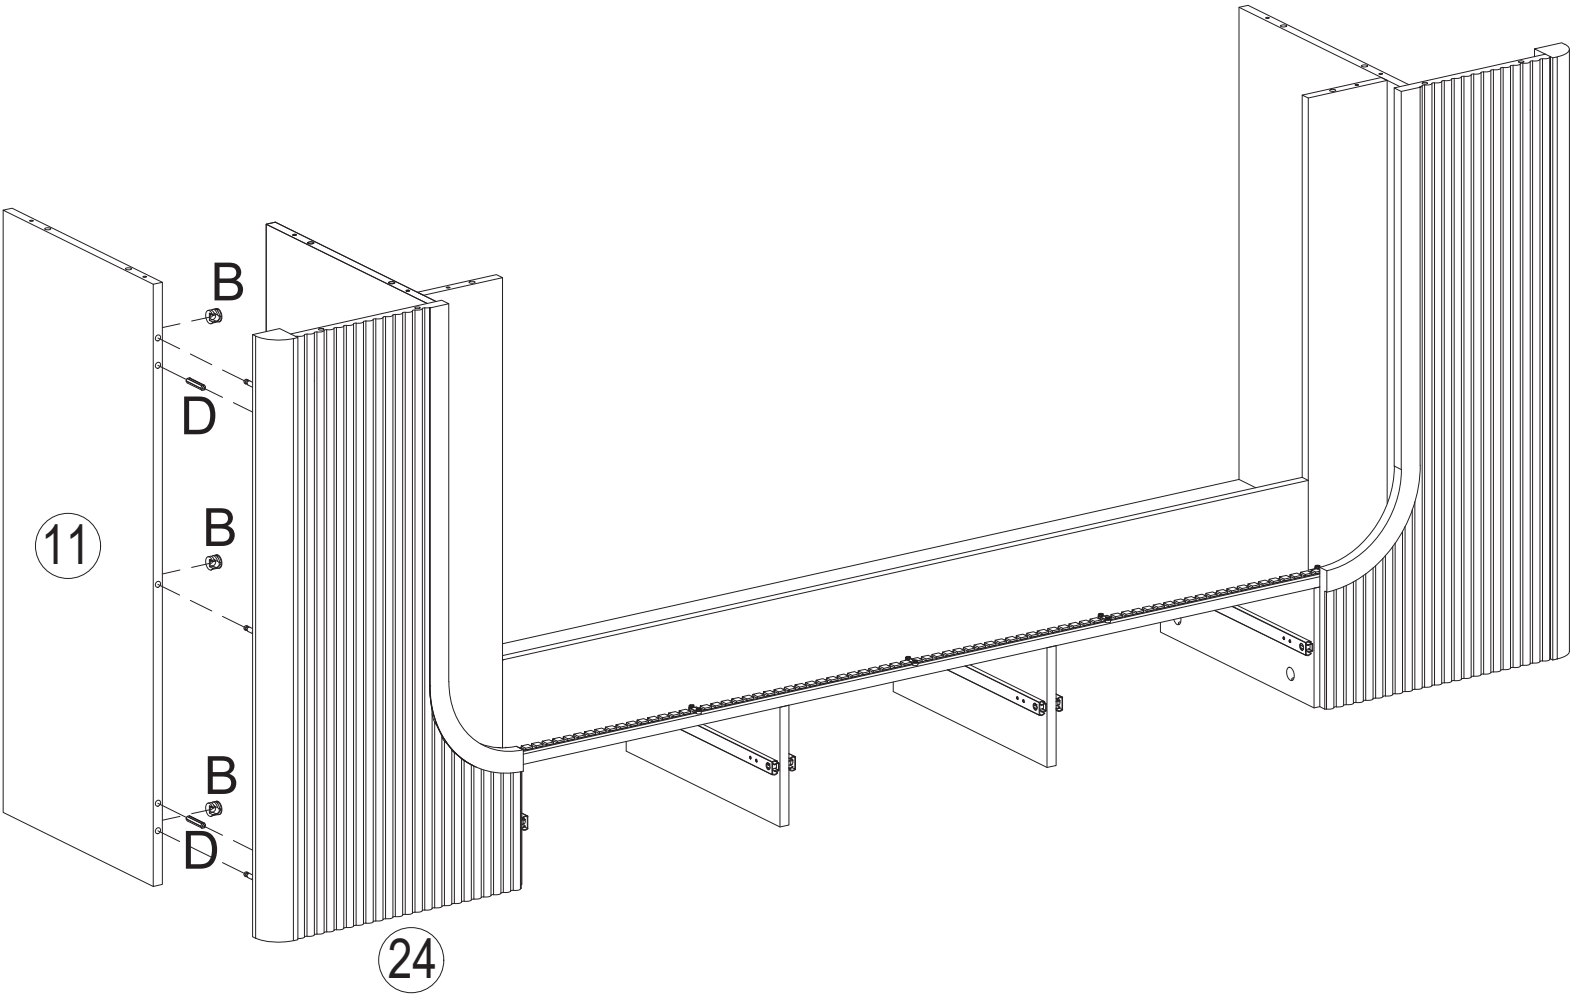


No. D
Quantity: 2 PCS
Dowel
ø6x30mm




No. B
Quantity: 3 PCS
Cam
ø15x9.5mm

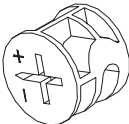

Step 16

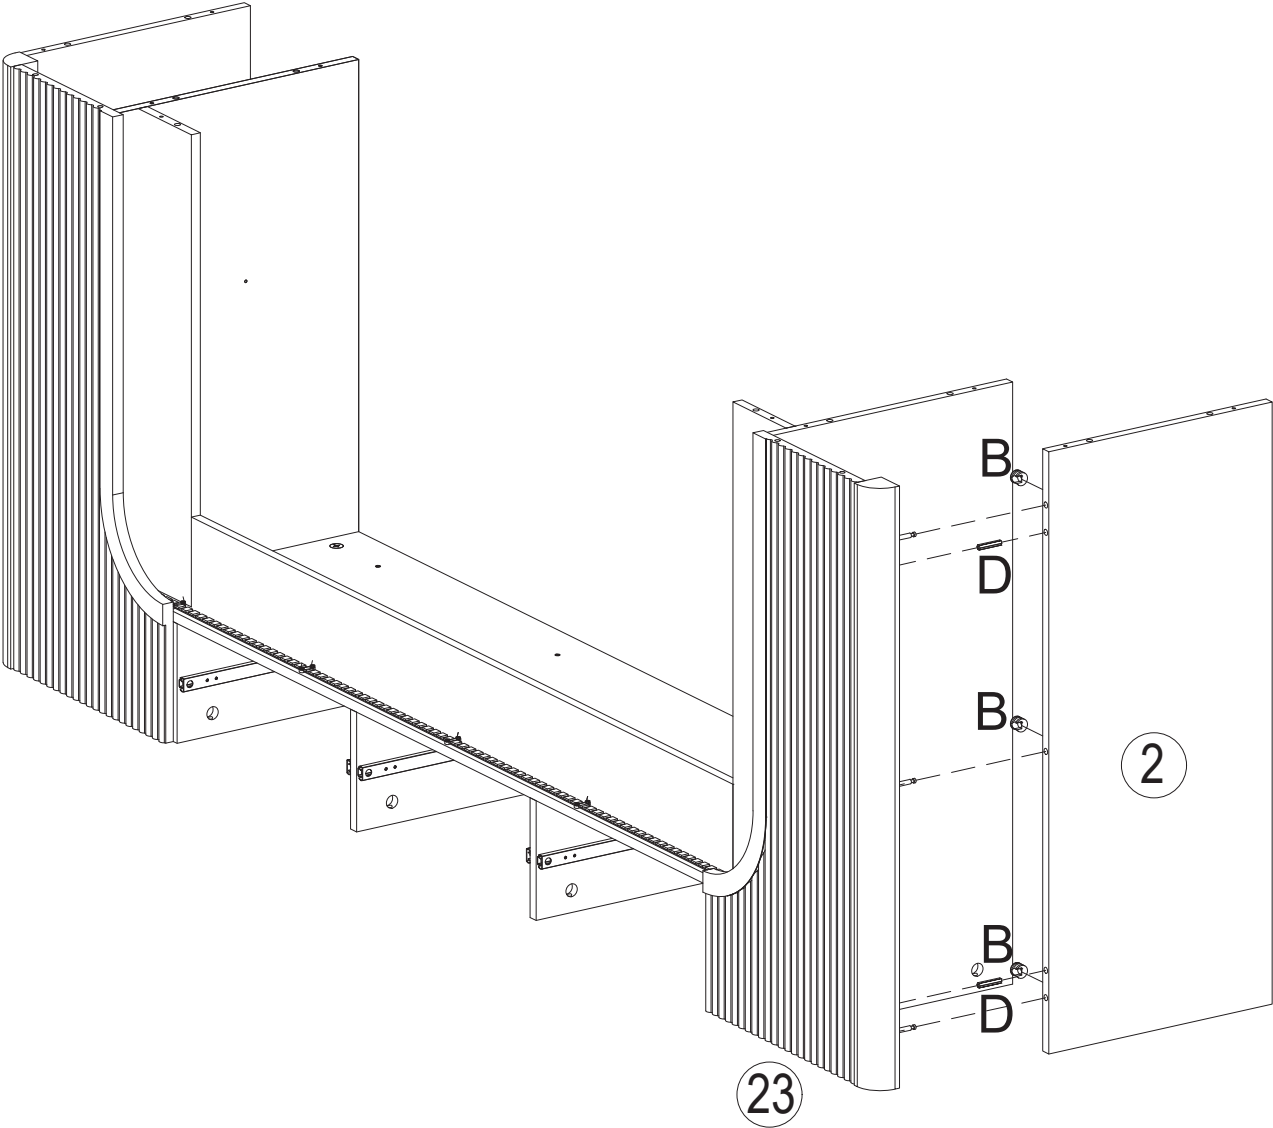


No. D
Quantity: 2 PCS
Dowel
ø6x30mm




No. B
Quantity: 3 PCS
Cam
ø15x9.5mm





Step 17

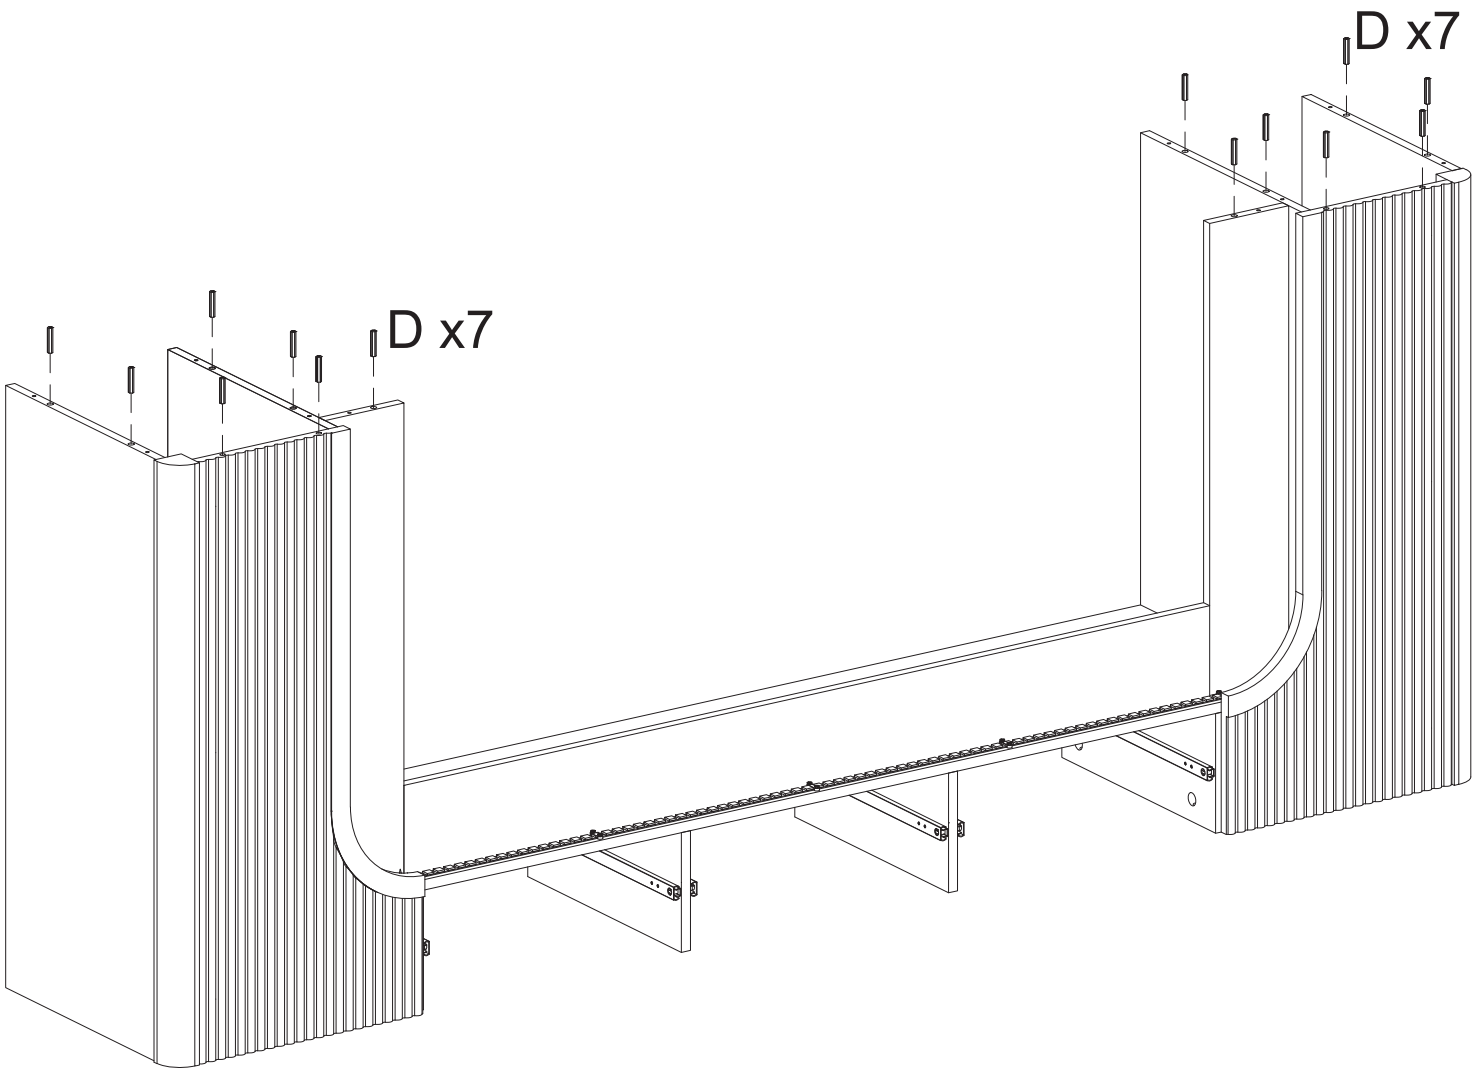


No. D
Quantity: 14 PCS
Dowel
ø6x30mm




Step 18

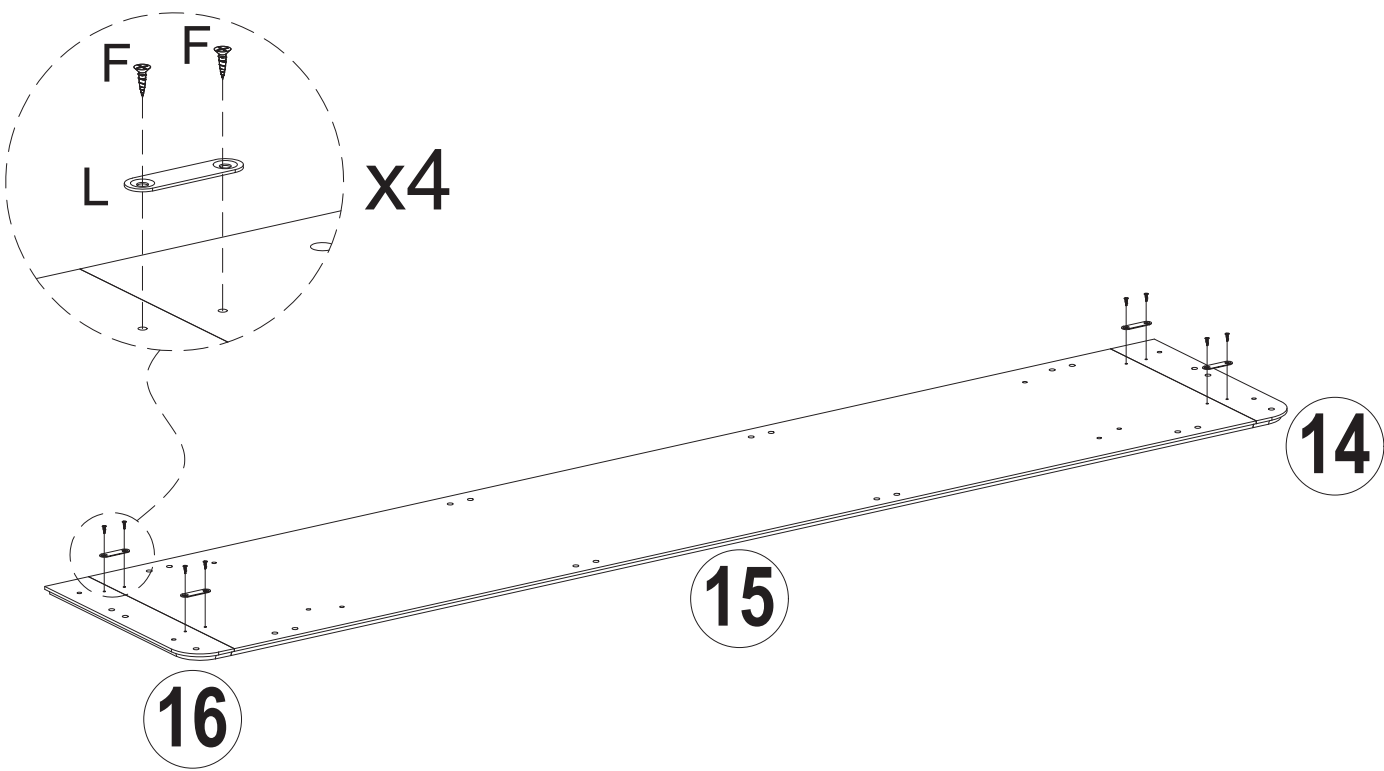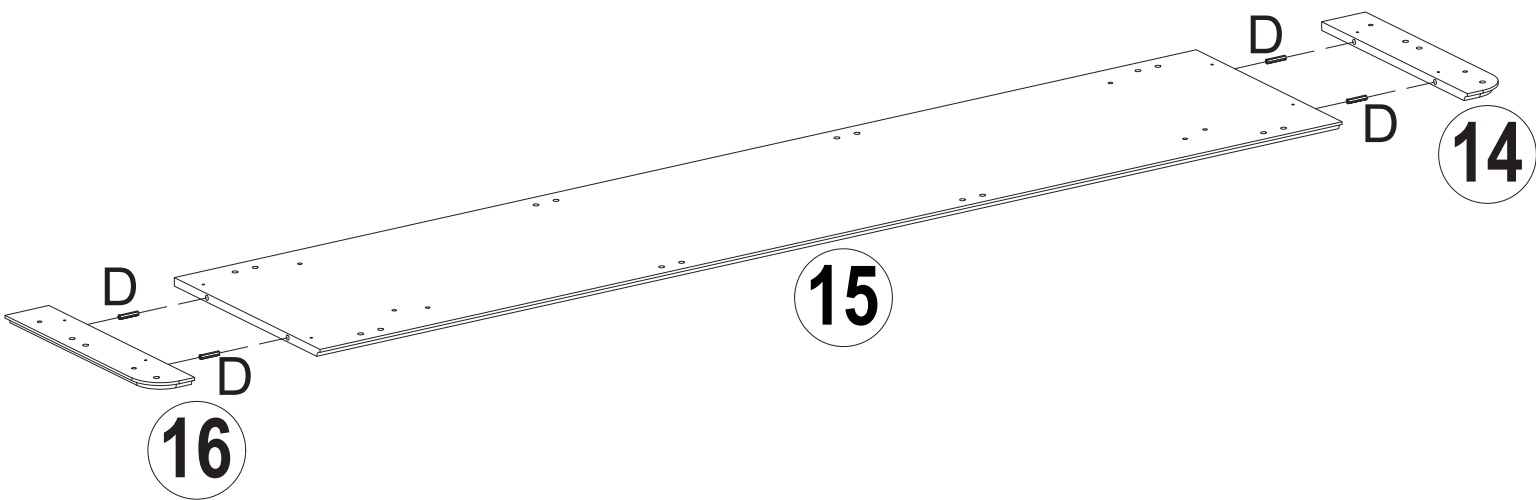


No. D
Quantity: 4 PCS
Dowel
ø6x30mm




No. L
Quantity: 4 PCS
45x12x1mm

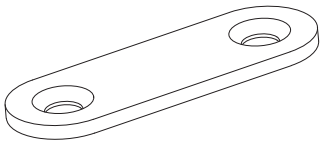


No. F
Quantity: 8 PCS
Screw
ø3.5x12mm







Step 19

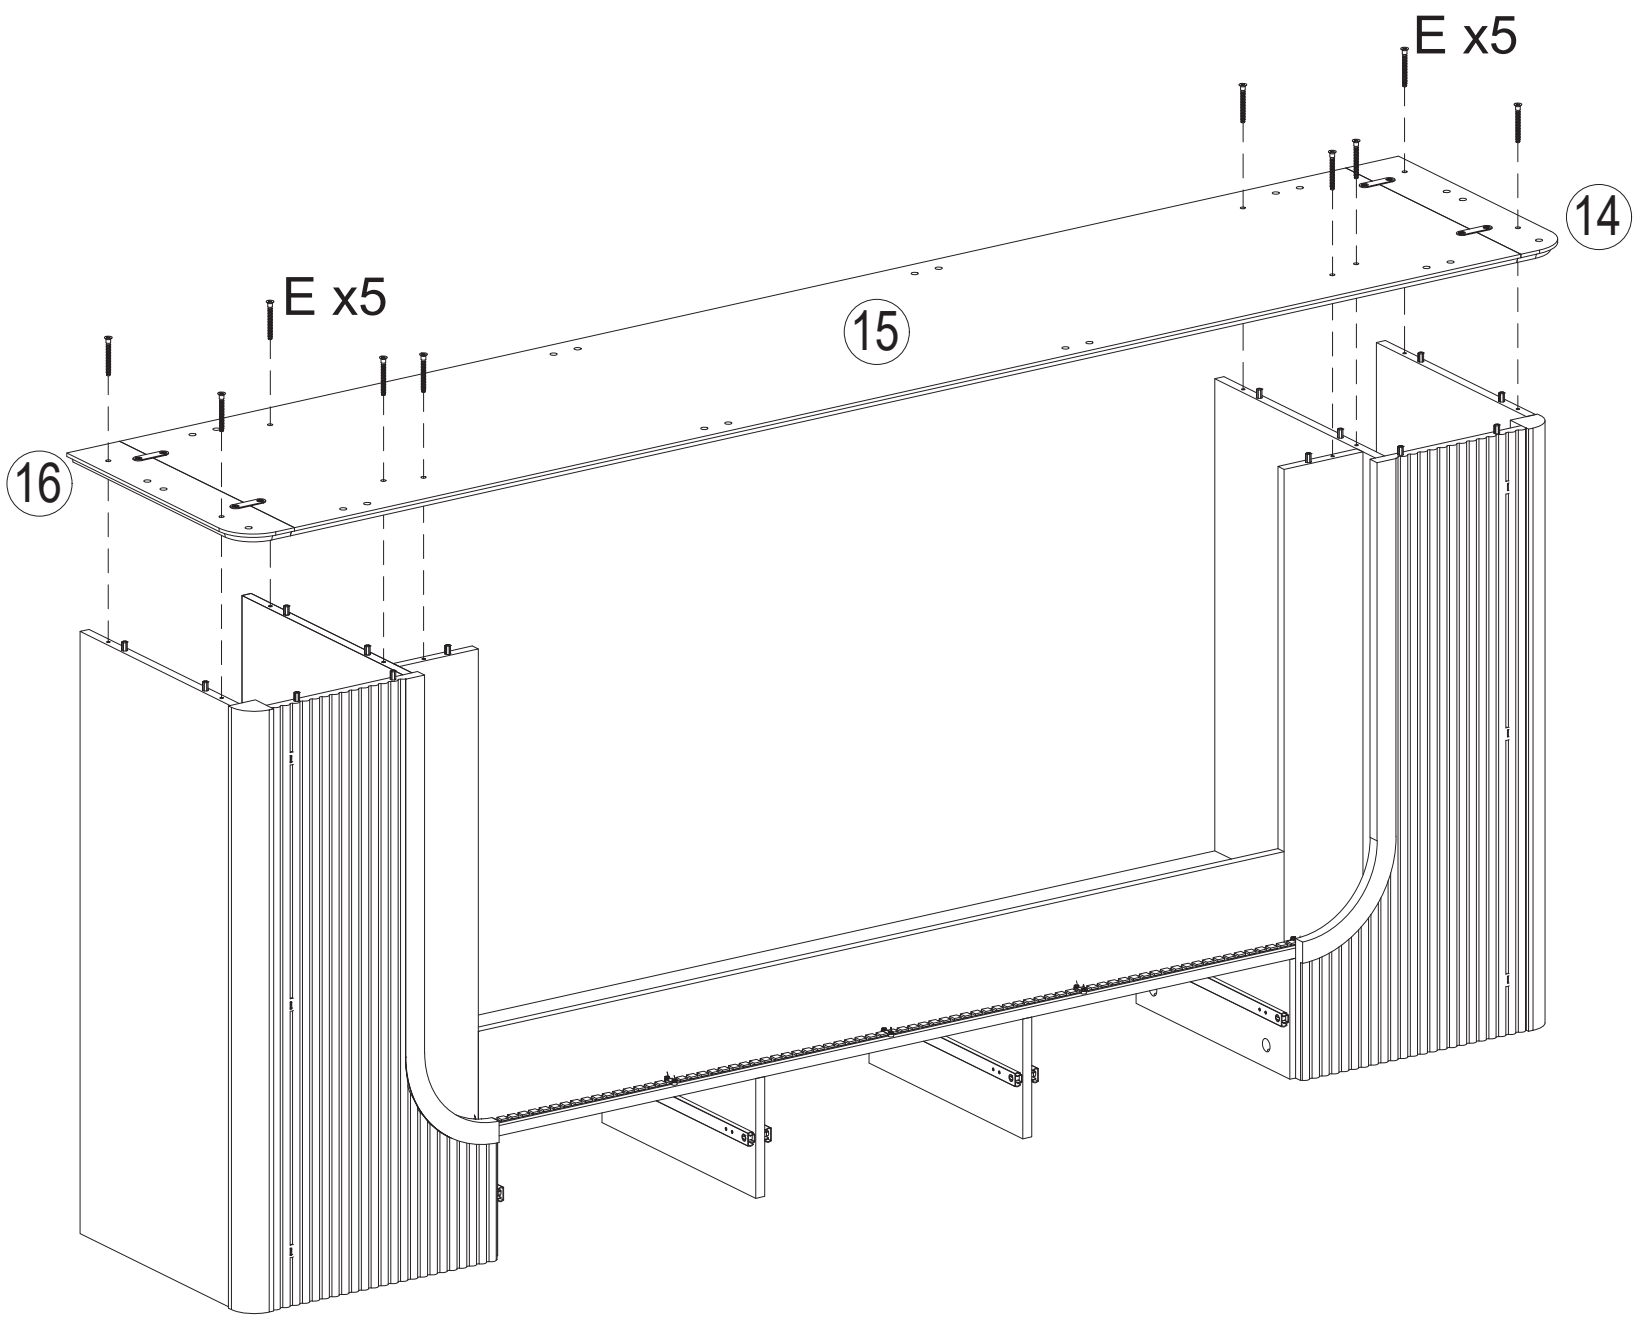


No. E
Quantity: 10 PCS
Screw
ø5x48mm

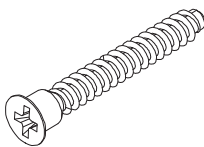


Step 20

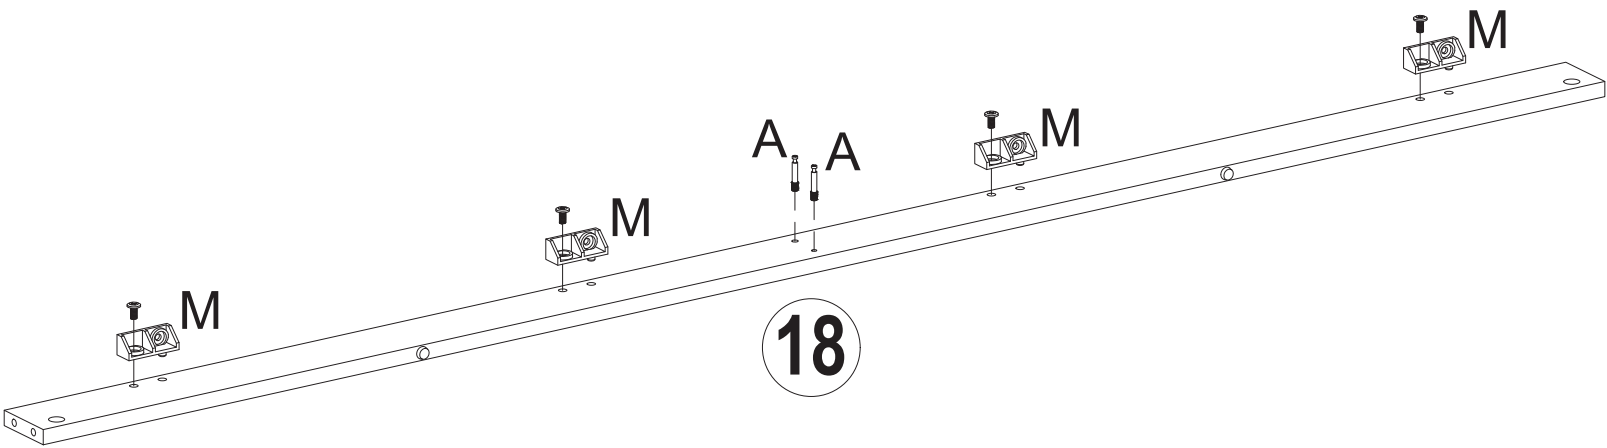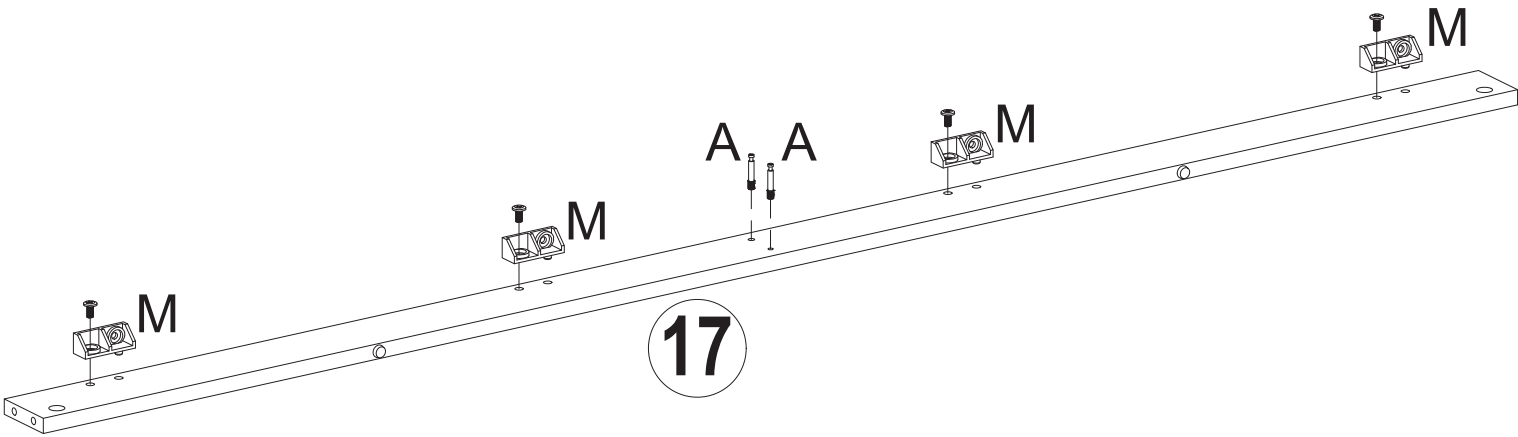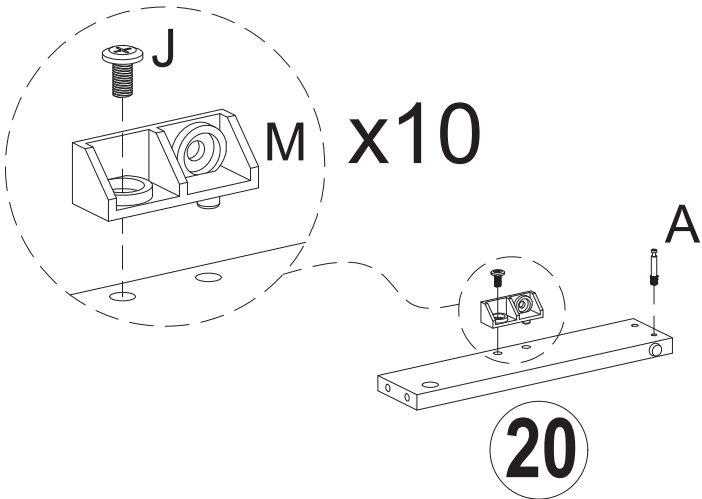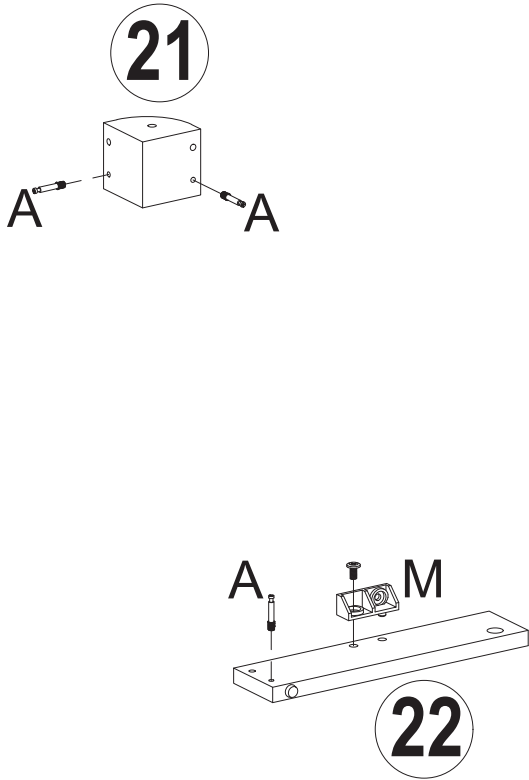


No. A
Quantity: 10 PCS
Cam Bolt
ø6x33.5mm

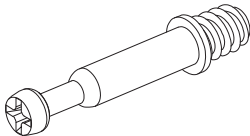


No. J
Quantity: 10 PCS
Bolt
M6x12mm




No. M
Quantity: 10 PCS
Connector
57x27x27mm

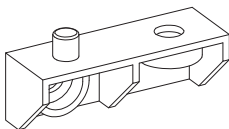

Step 21

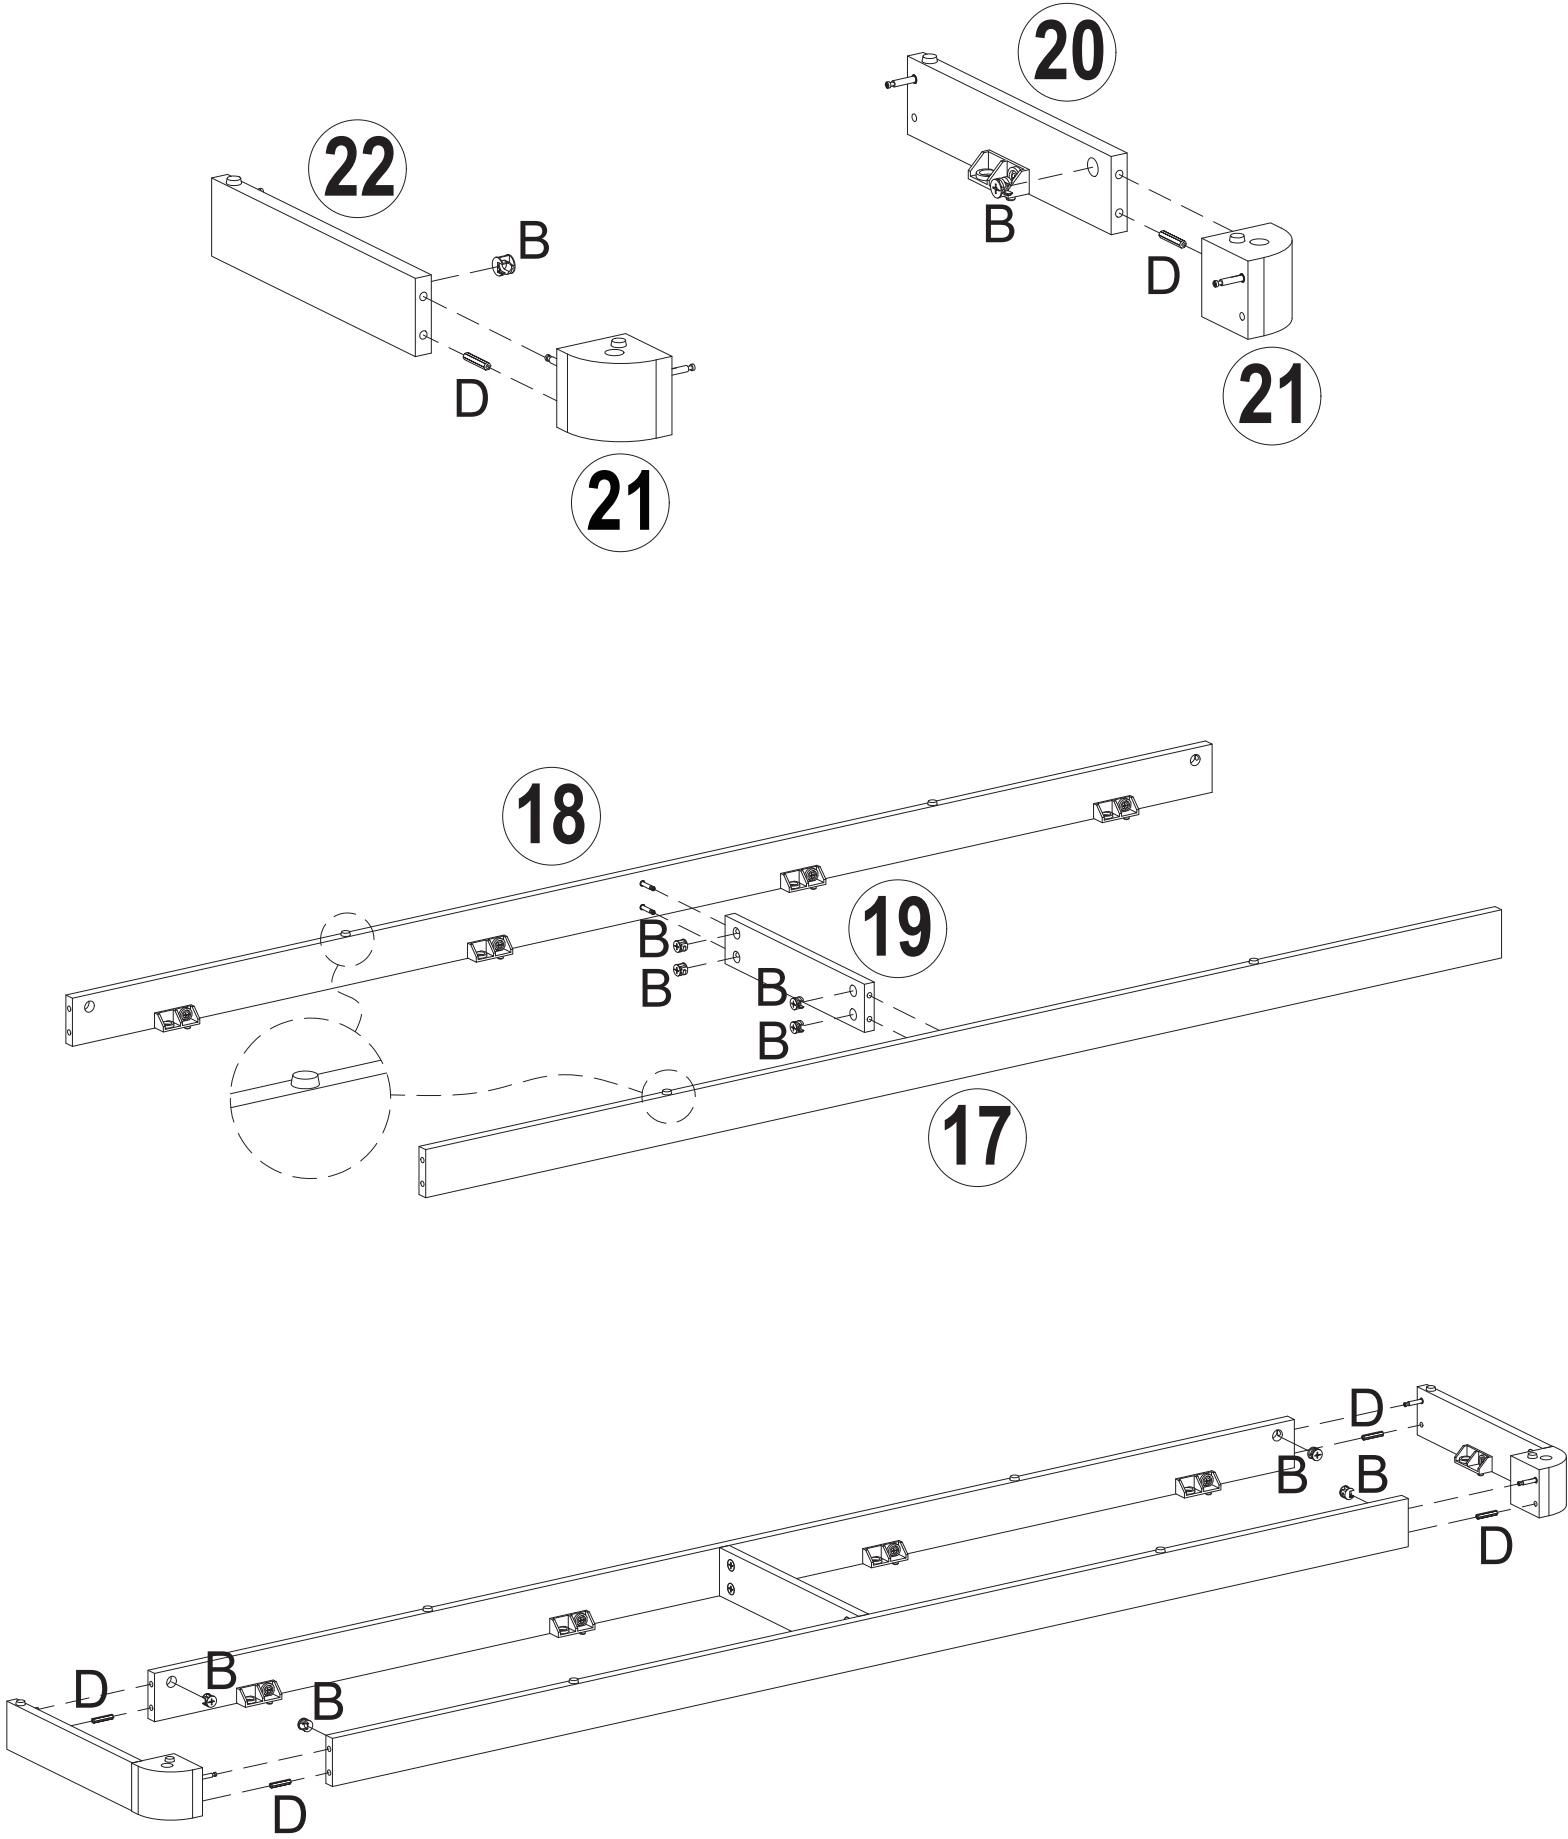



No. D
Quantity: 6 PCS
Dowel
ø6x30mm




No. B
Quantity: 10 PCS
Cam
ø15x9.5mm




Step 22

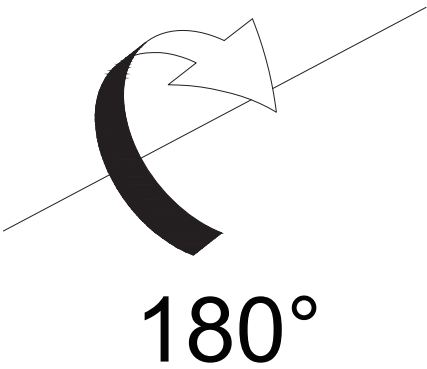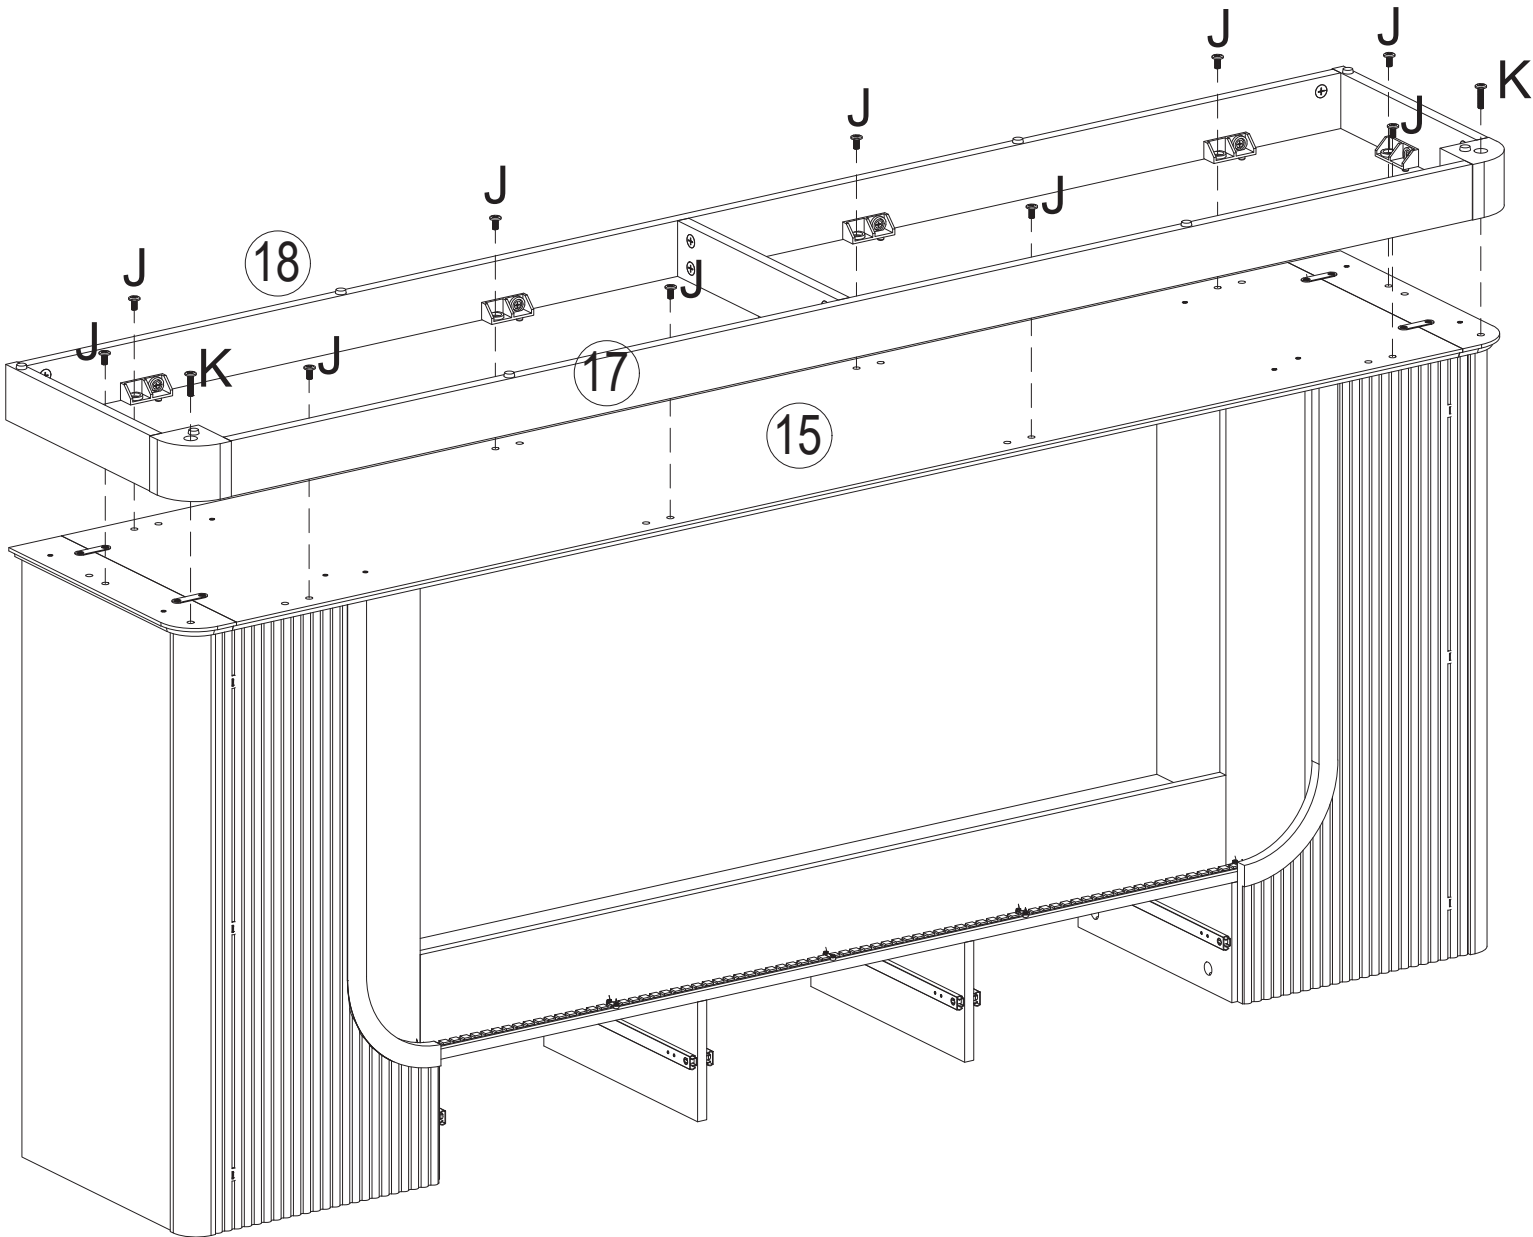



No. J
Quantity: 10 PCS
Bolt
M6x12mm




No. K
Quantity: 2 PCS
Bolt
M6x35mm




Step 23

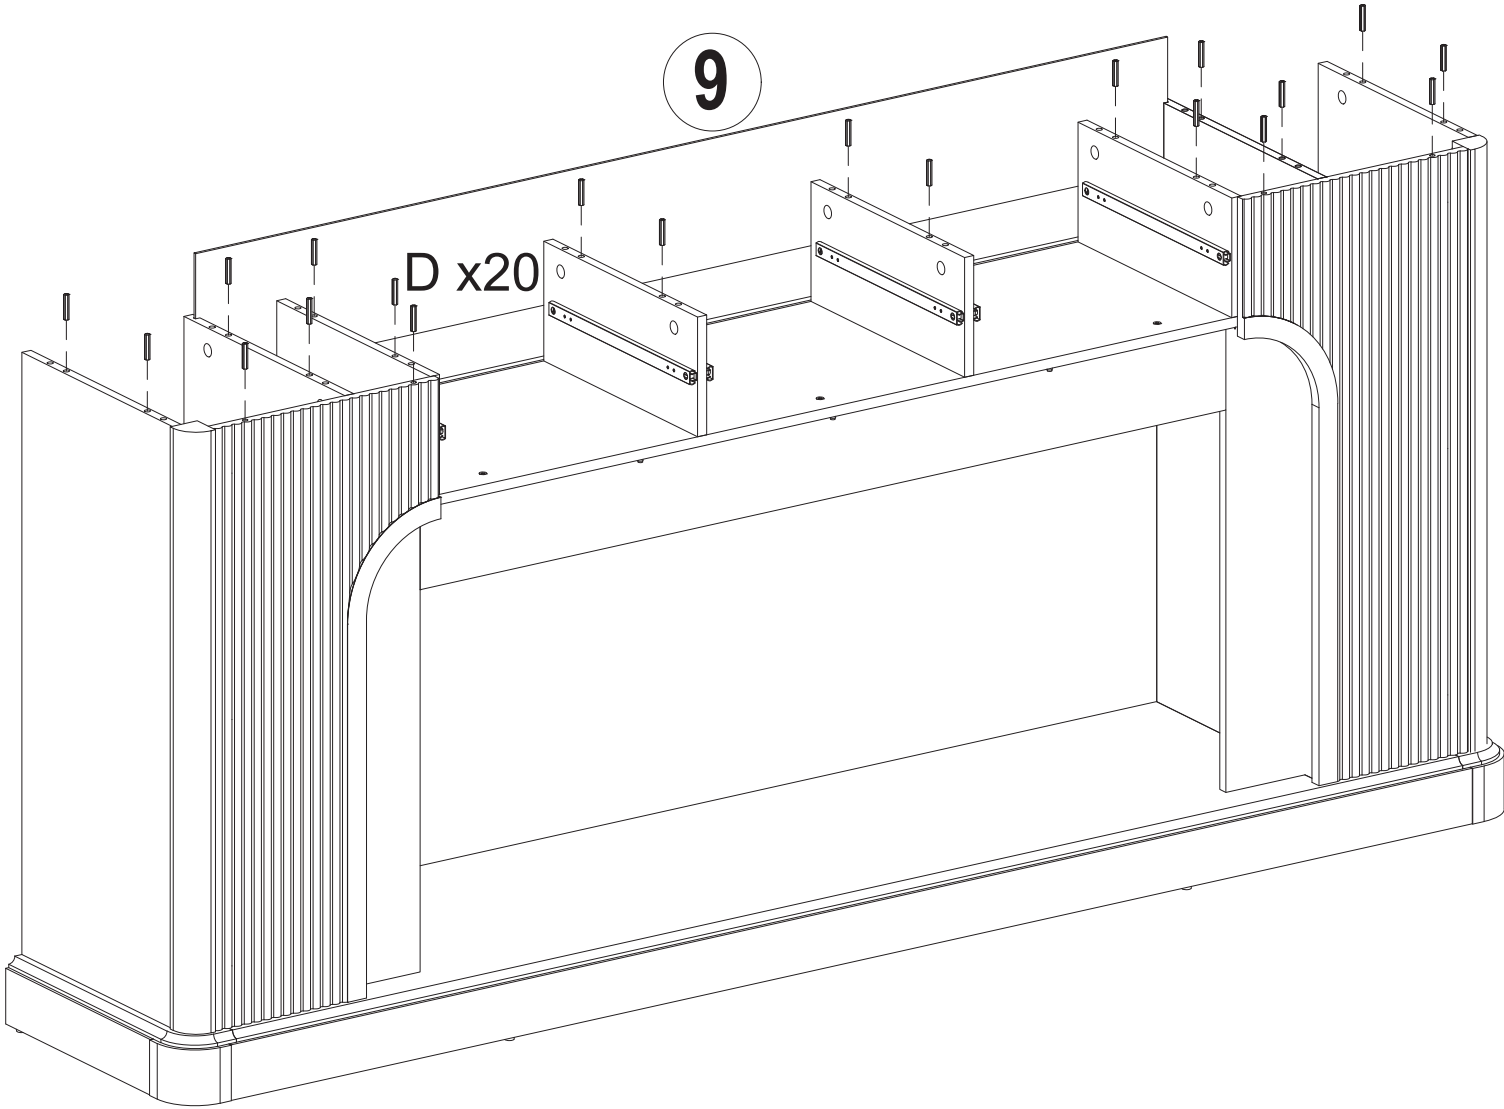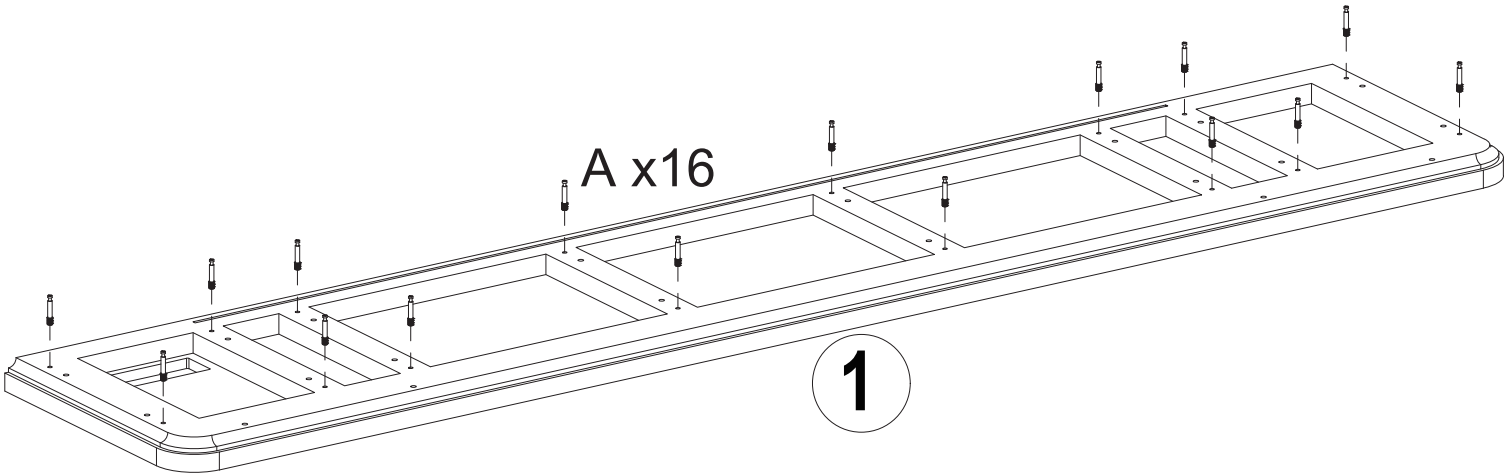


No. A
Quantity: 16 PCS
Cam Bolt
ø6x33.5mm

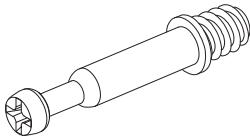

No. D
Quantity: 20 PCS
Dowel
ø6x30mm




Step 24

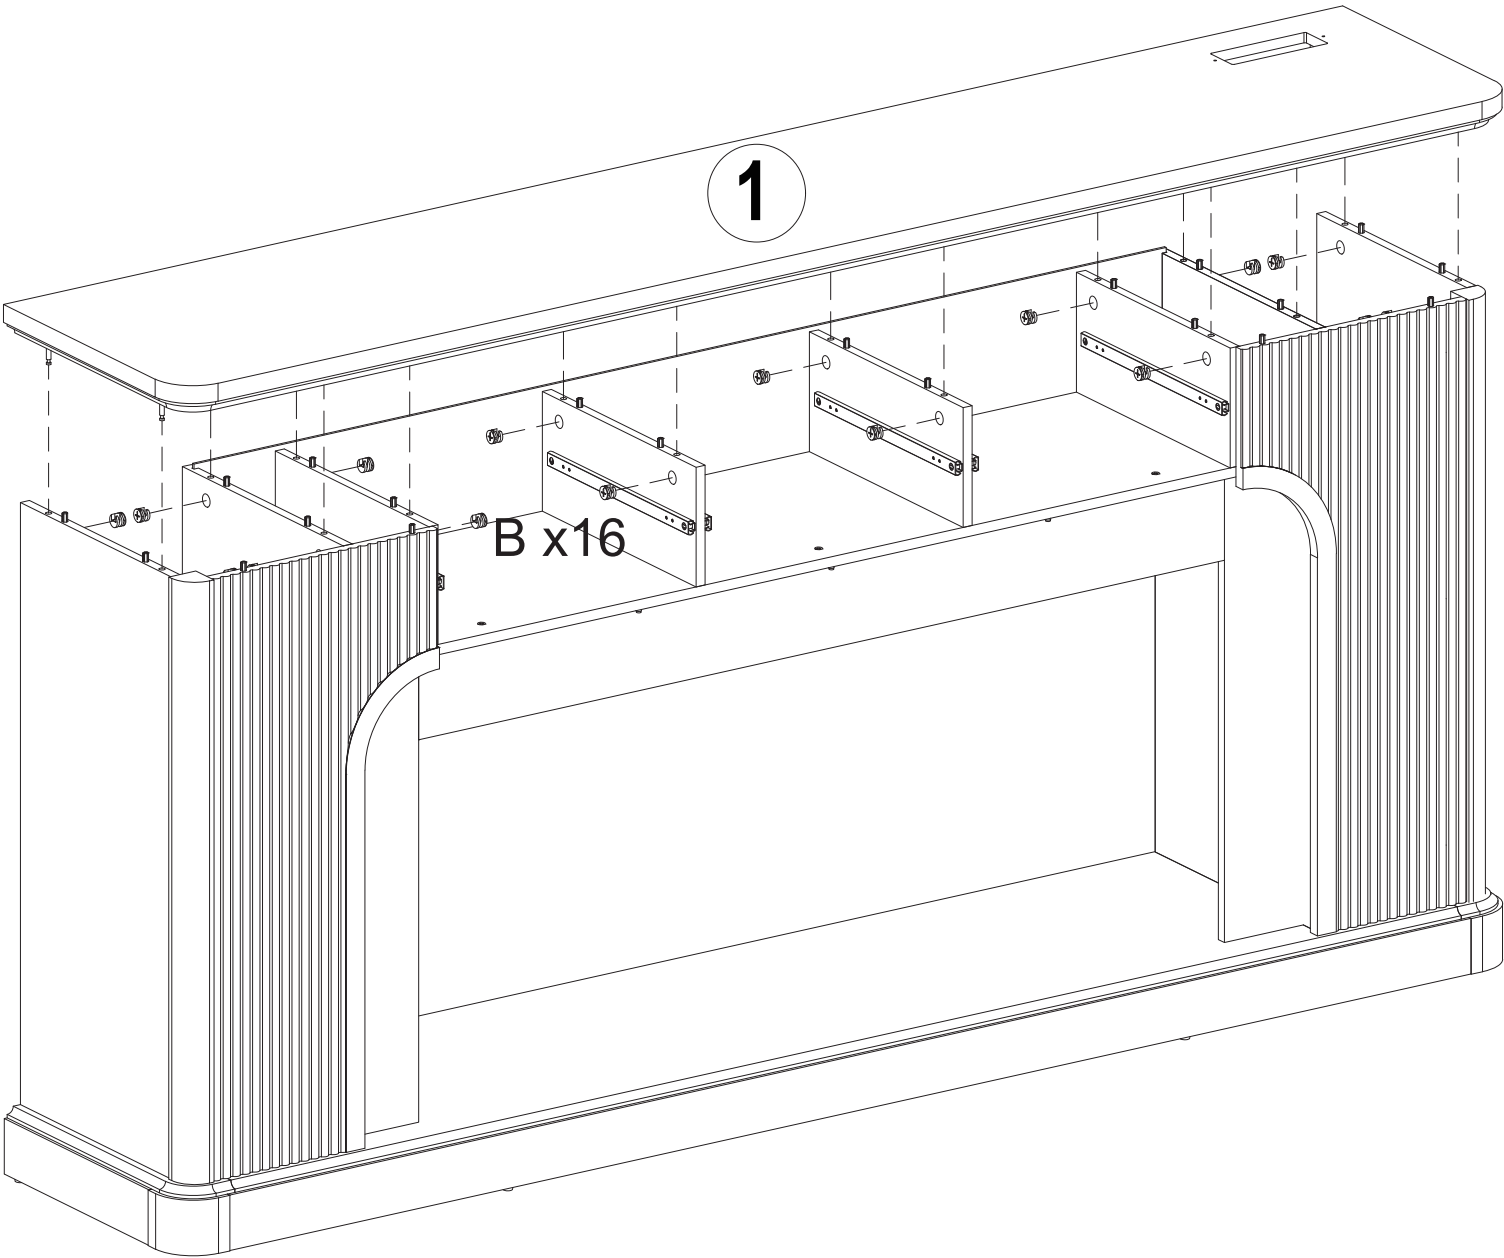




No. B
Quantity: 16 PCS
Cam
ø15x9.5mm



Step 25

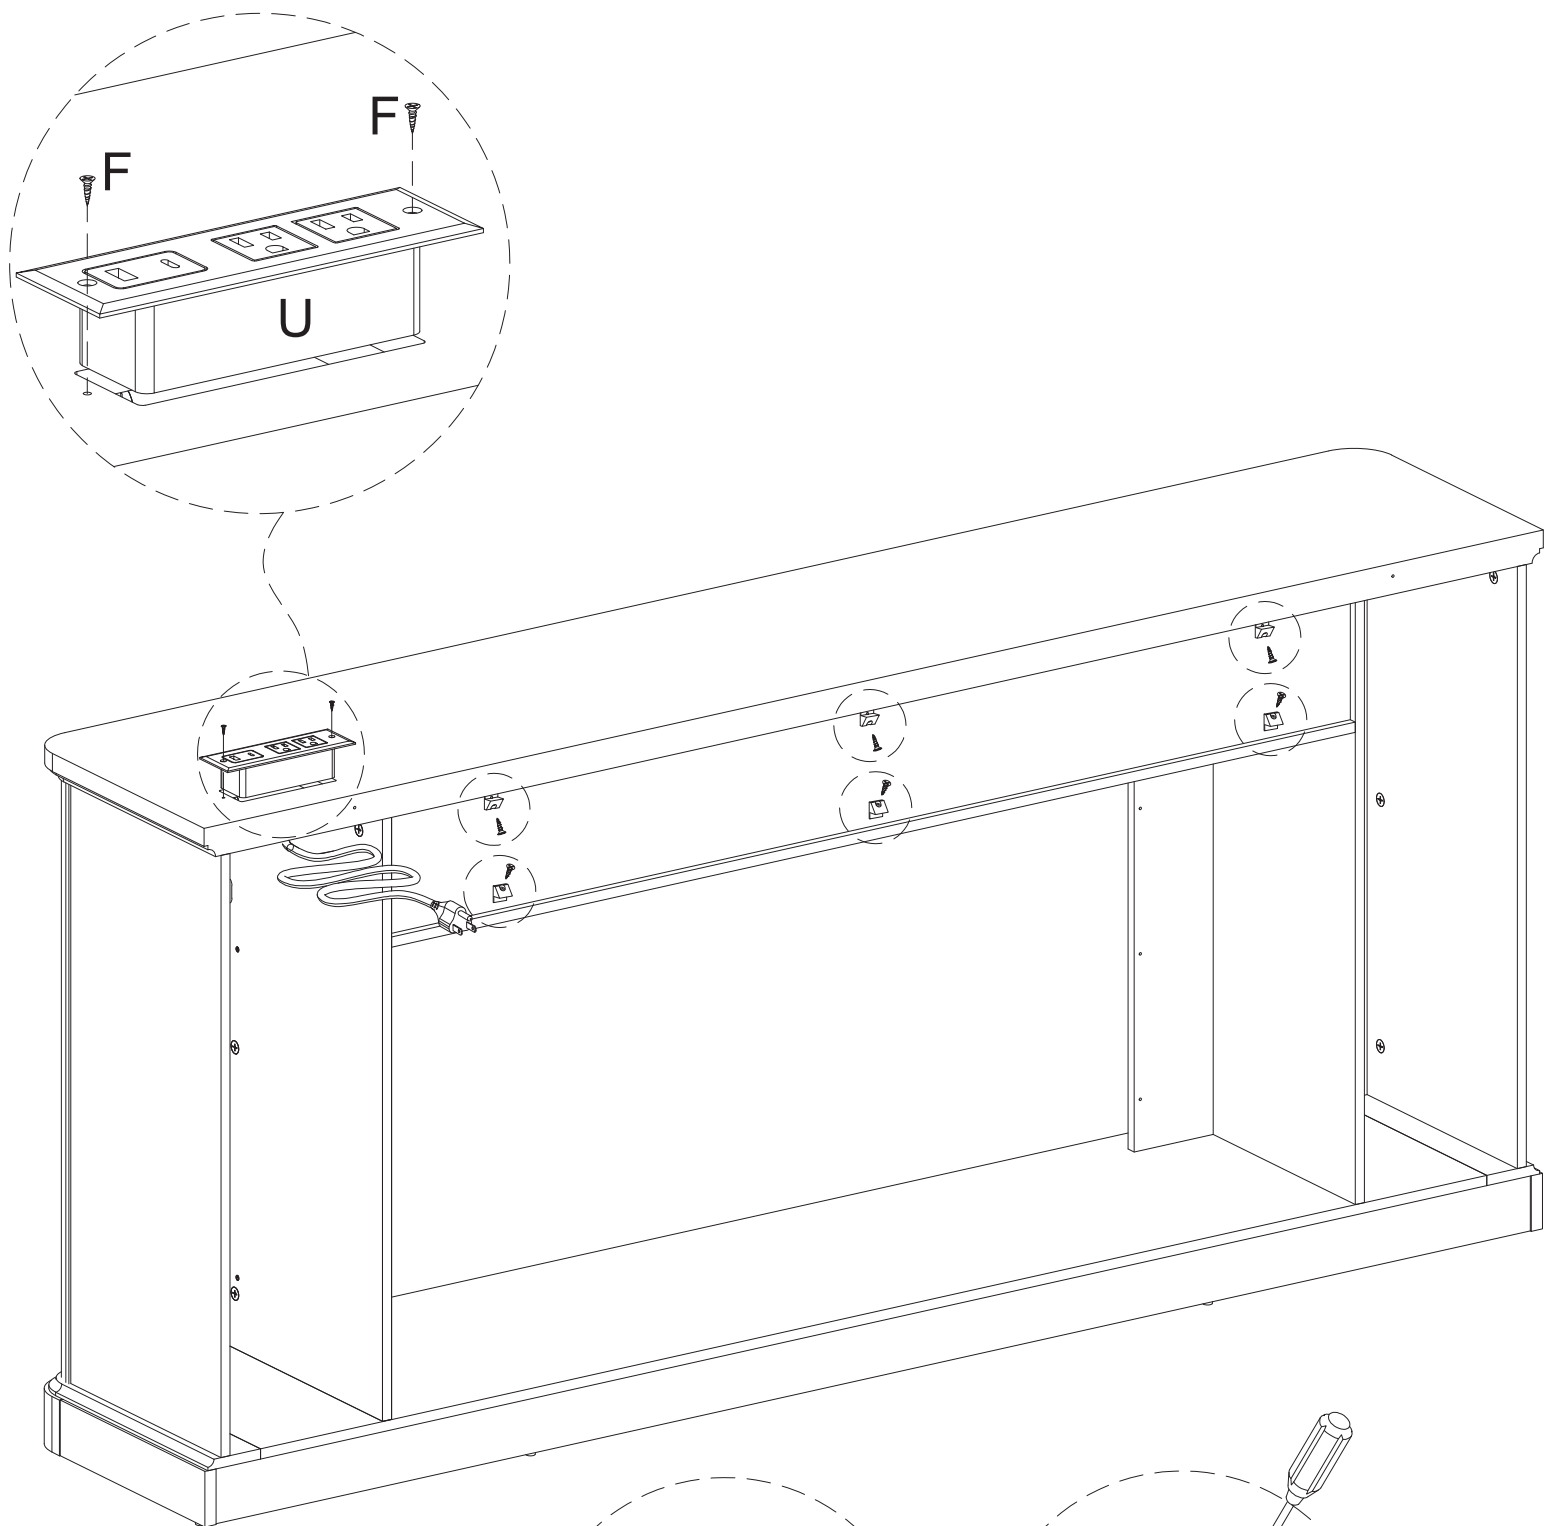


No. F
Quantity: 2 PCS
Screw
ø3.5x12mm

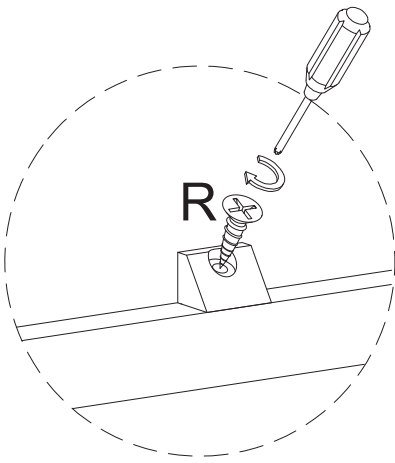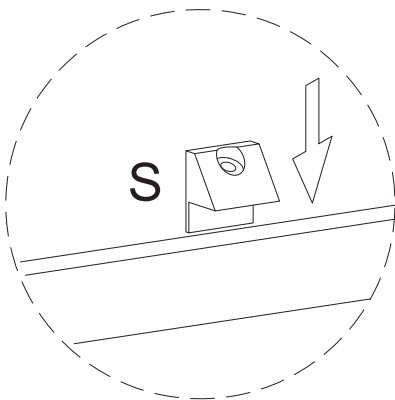


x6


No. U
Quantity: 1 PC

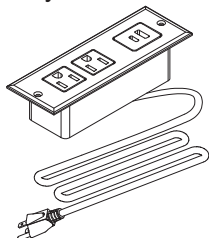


No. R
Quantity: 6 PCS
Screw
ø3x16mm

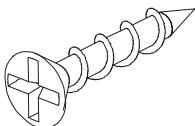

No. S
Quantity: 6 PCS
Back Buckle
15x15x10mm




Step 26

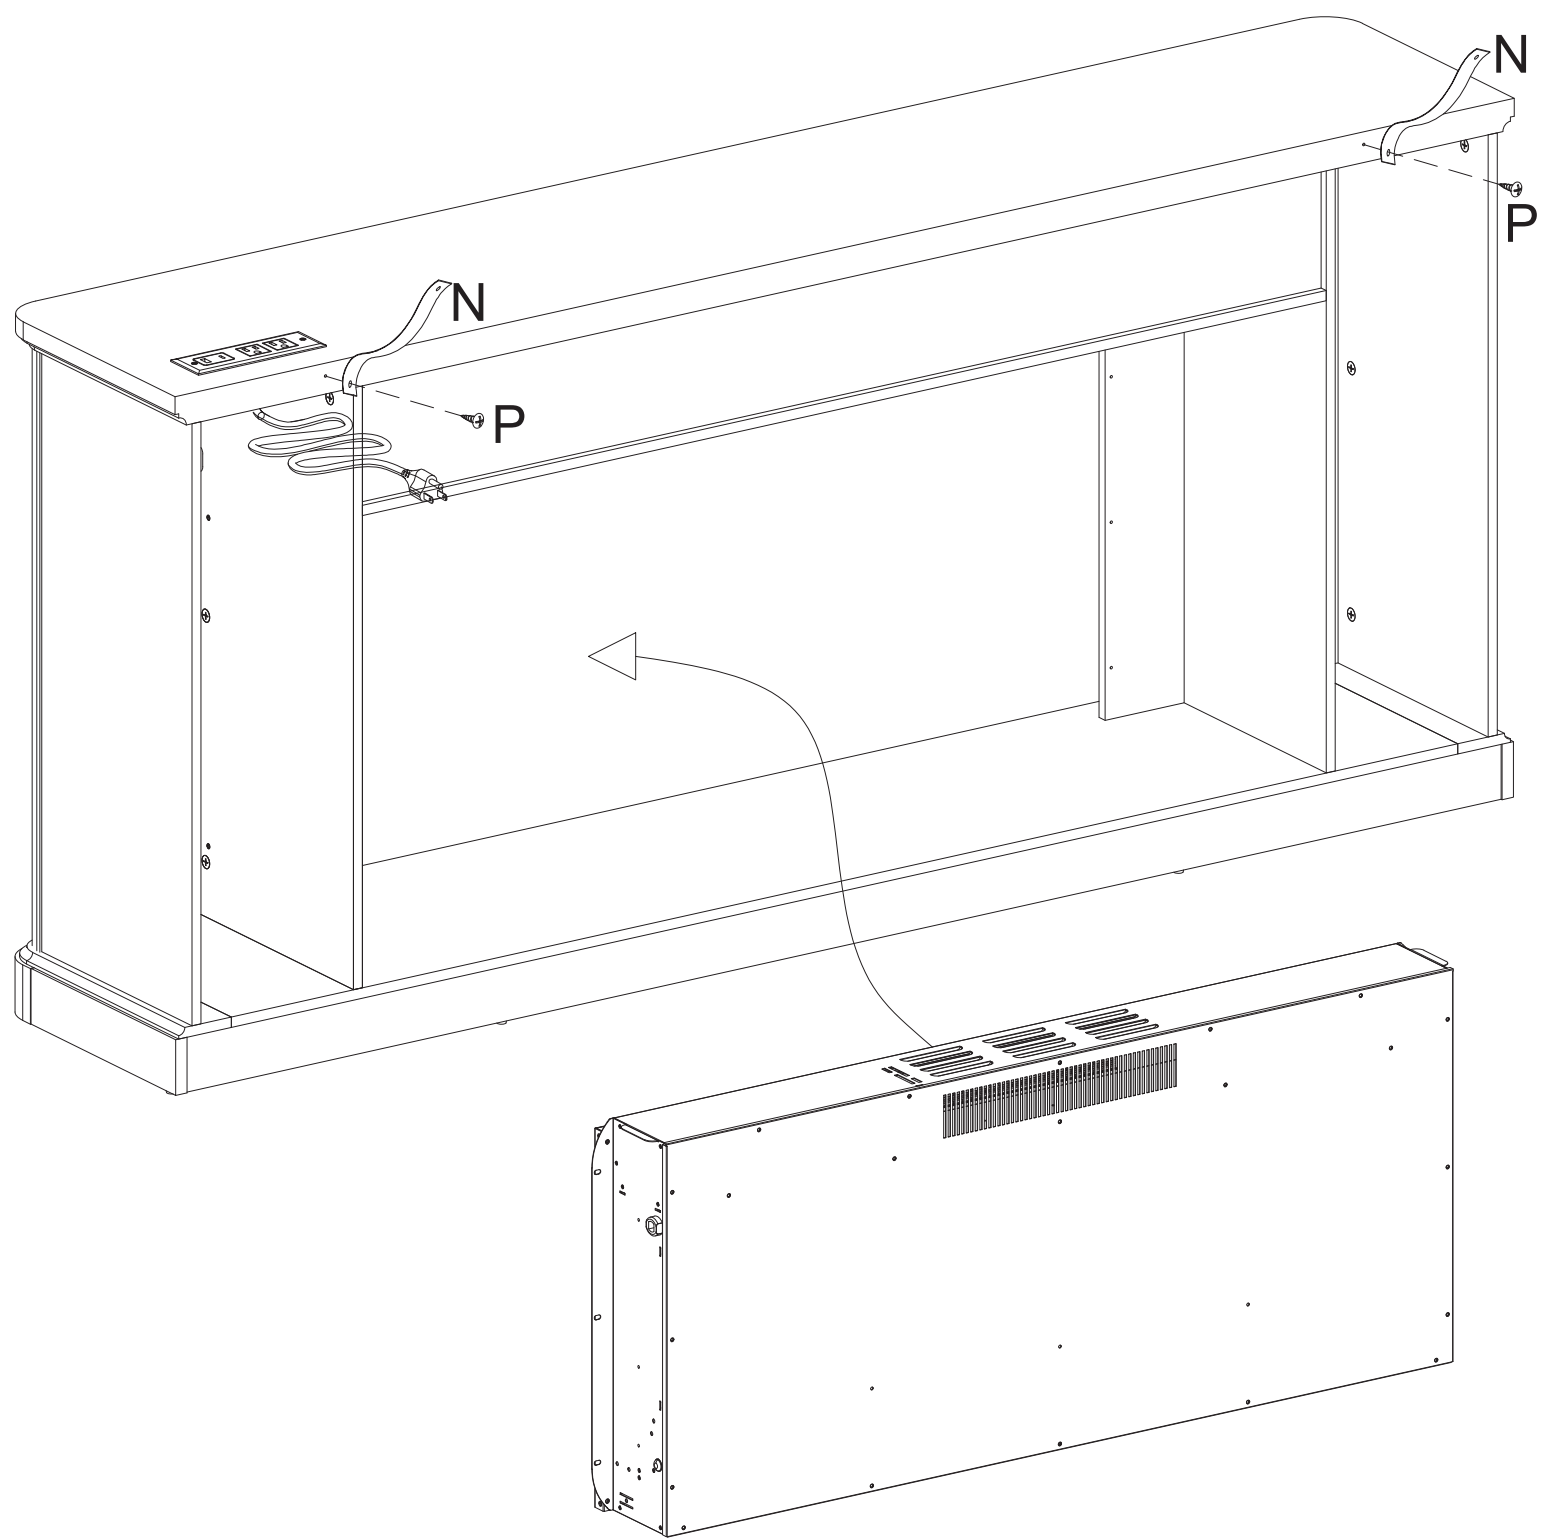


Please assemble the fireplace by following the instruction manual.


No. N
Quantity: 2 PCS
Anti-slip strip
190x20mm

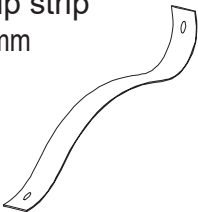


No. P
Quantity: 2 PCS
Screw
ø4x16mm

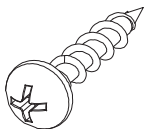

Step 27

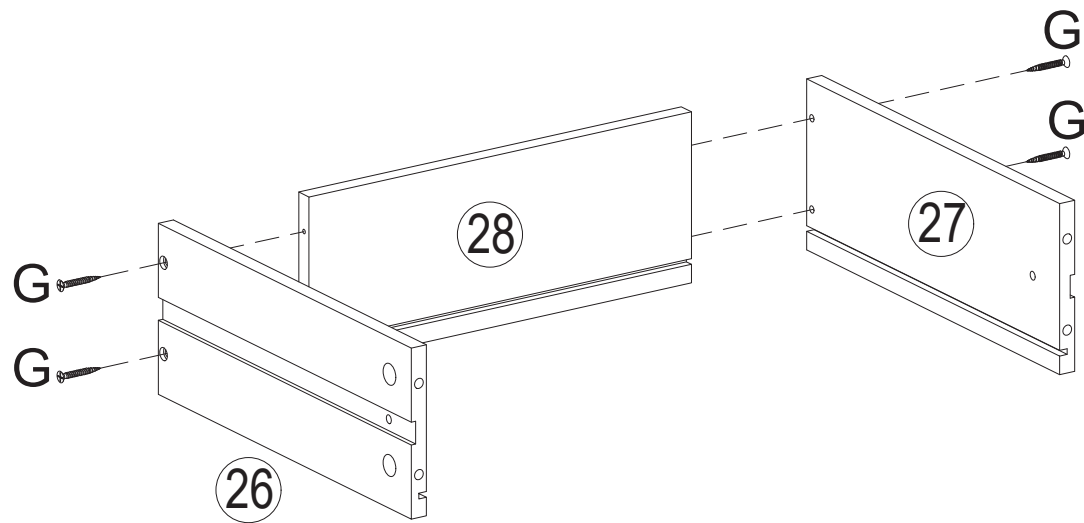


x3

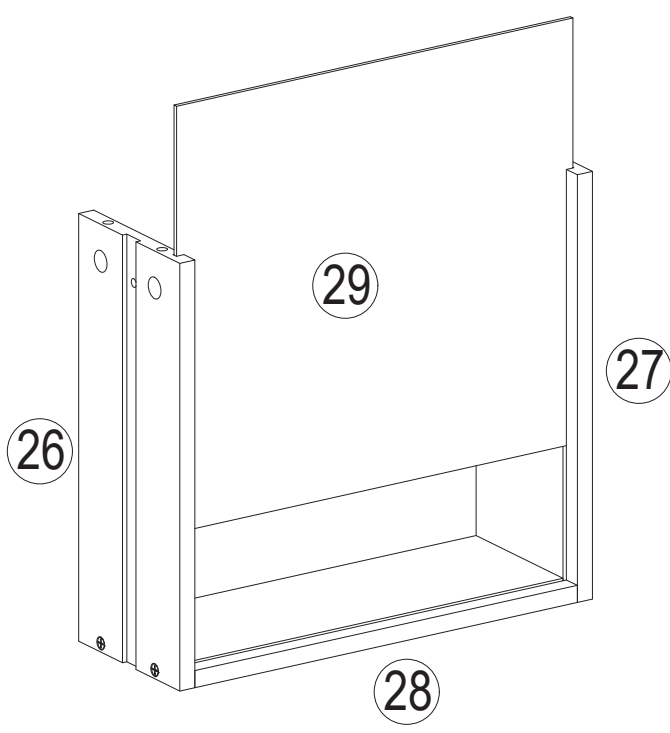


x3


No. G
Quantity: 12 PCS
Screw
ø4x30mm

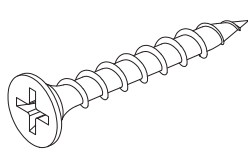

Step 28

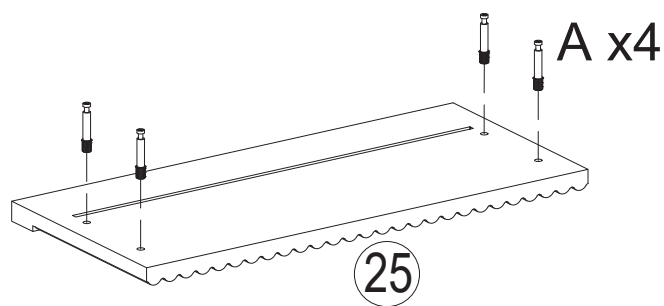


x3

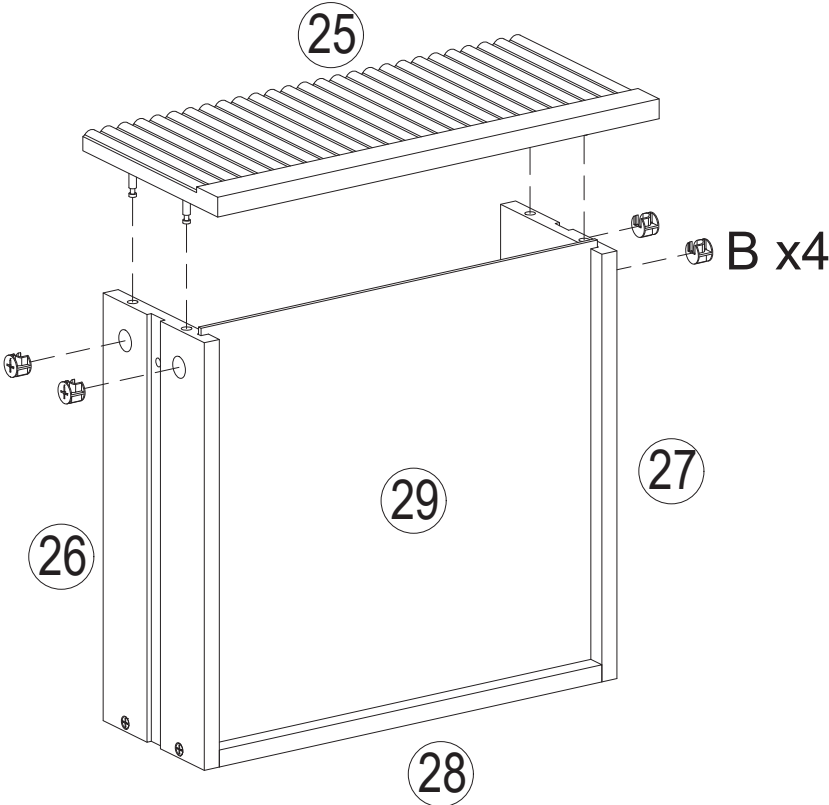

x3


No. A
Quantity: 12 PCS
Cam Bolt
ø6x33.5mm

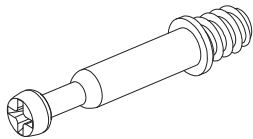






No. B
Quantity: 12 PCS
Cam
ø15x9.5mm



Step 29

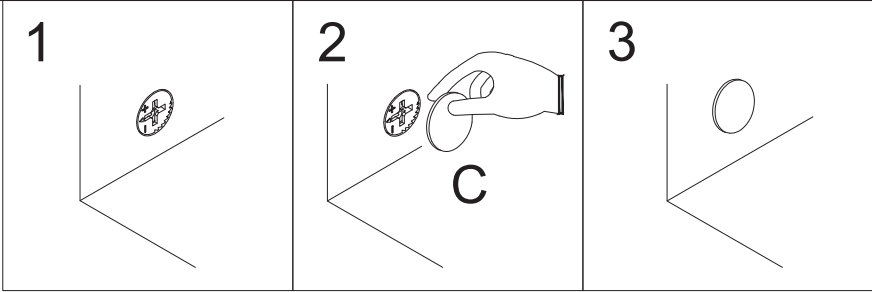

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

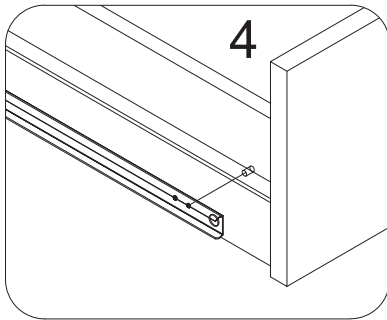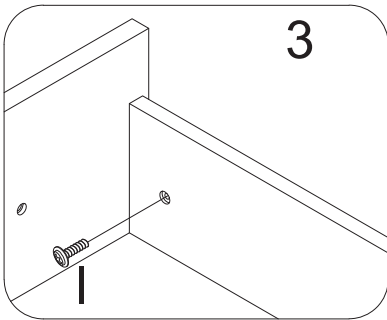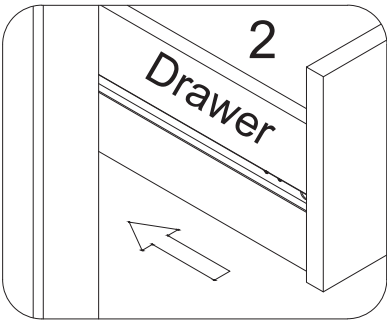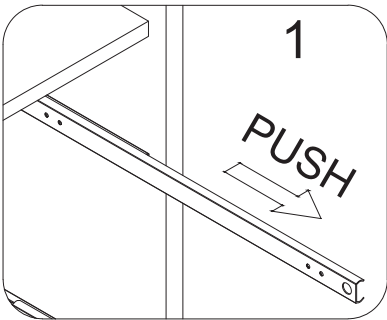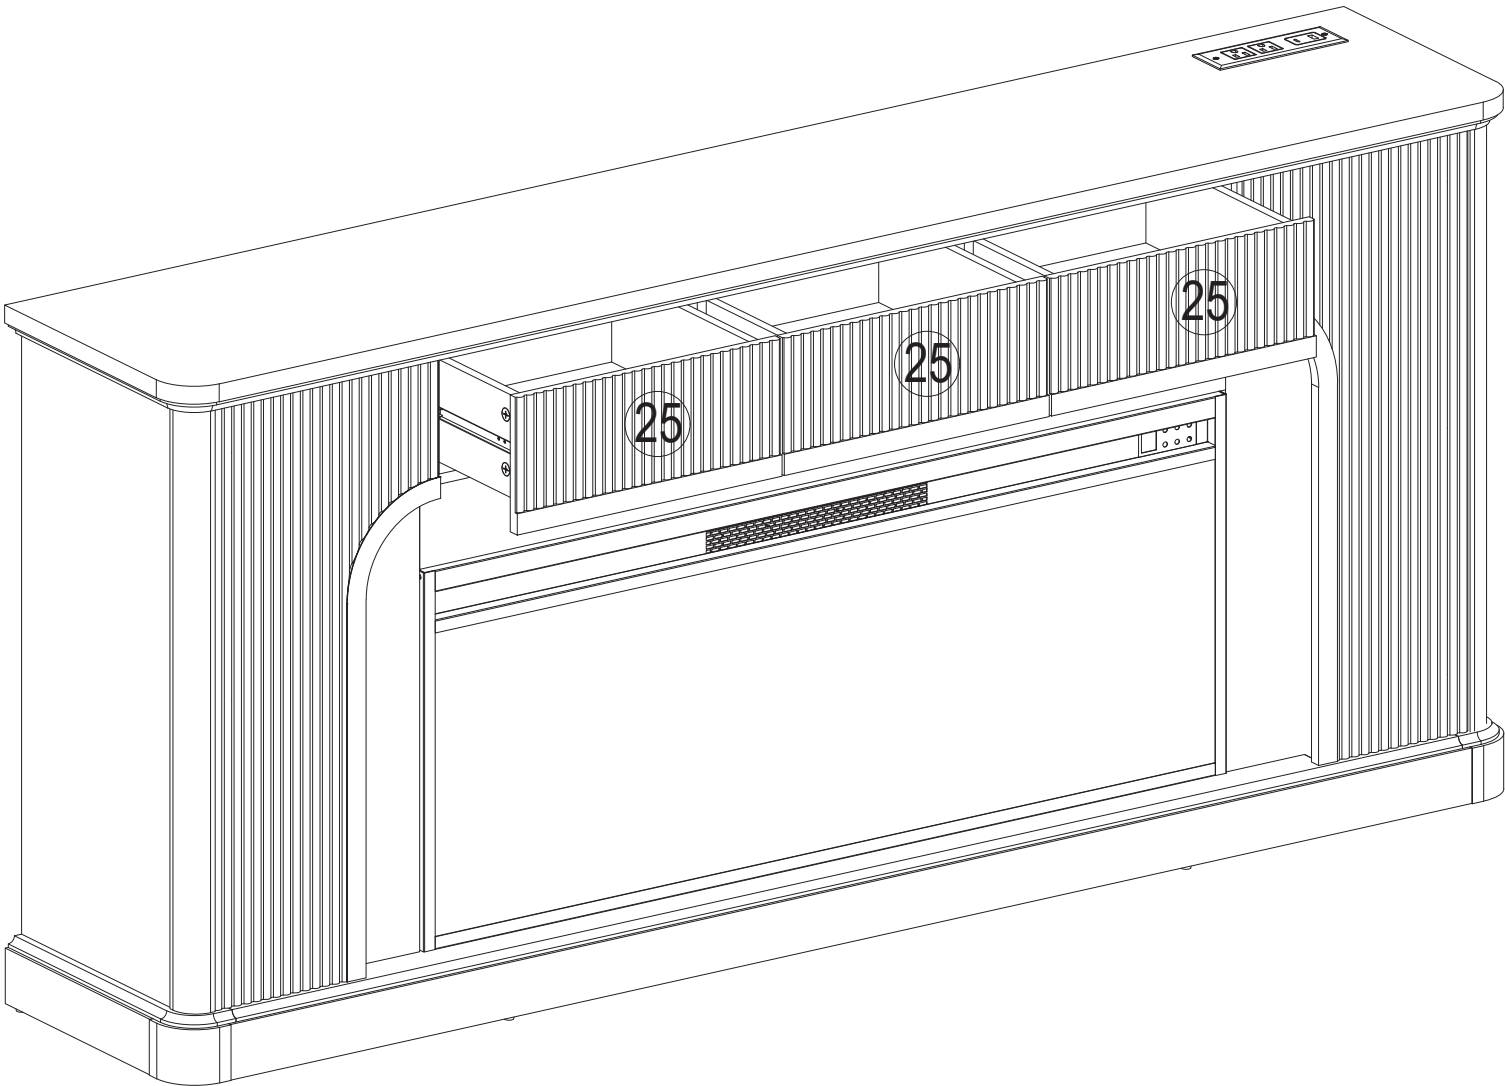


Tip:I-Screws must be installed on both sides of the drawer.
This applies to all 3 drawers; please ensure none are omitted.


No. C
Quantity: 60 PCS
Sticker
ø20mm




No. I
Quantity: 6 PCS
Screw
M4x10mm




Step 30

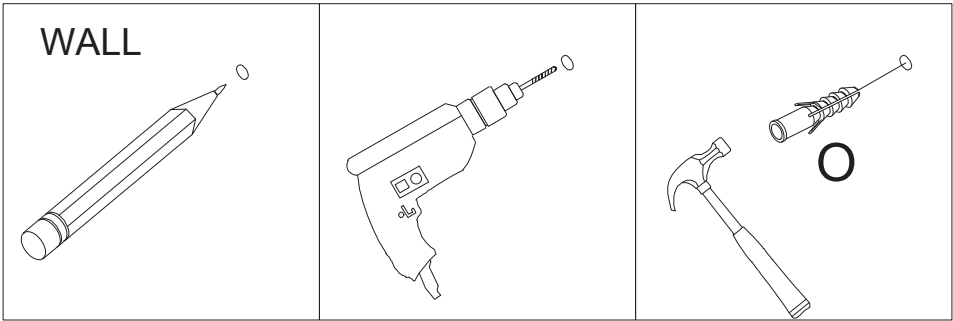


- 1.The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
- 2. Use a hammer to tap the two plastic expansion anchors into the wall.
- 3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

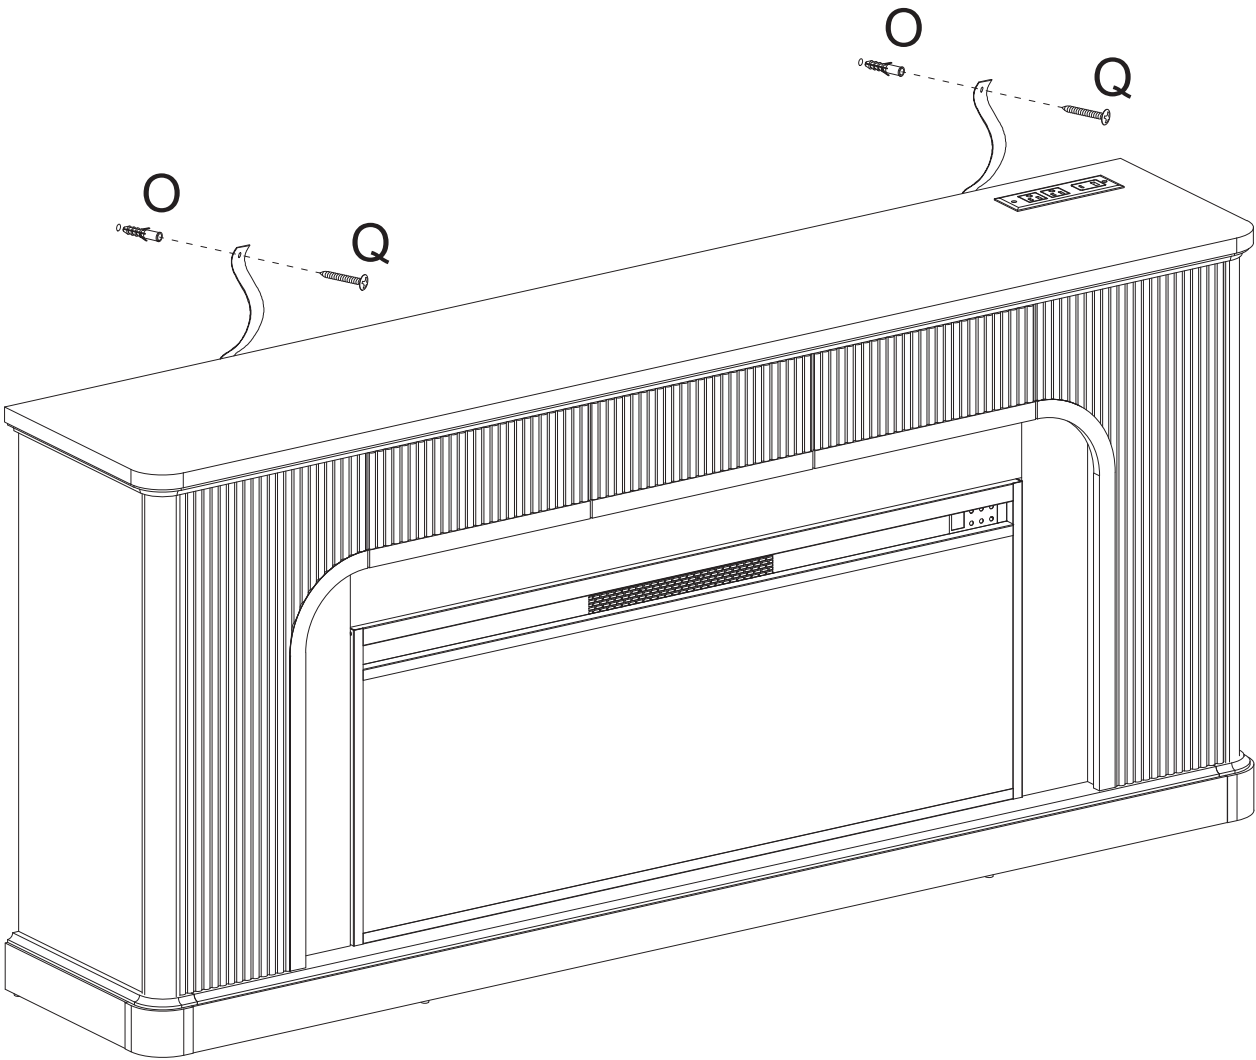

No. O
Quantity: 2 PCS
Plastic Expansion
ø8x40mm

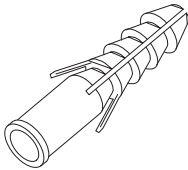

No. Q
Quantity: 2 PCS
Screw
ø4x38mm

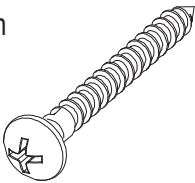

Step 31

