


# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

## STORAGE BENCH

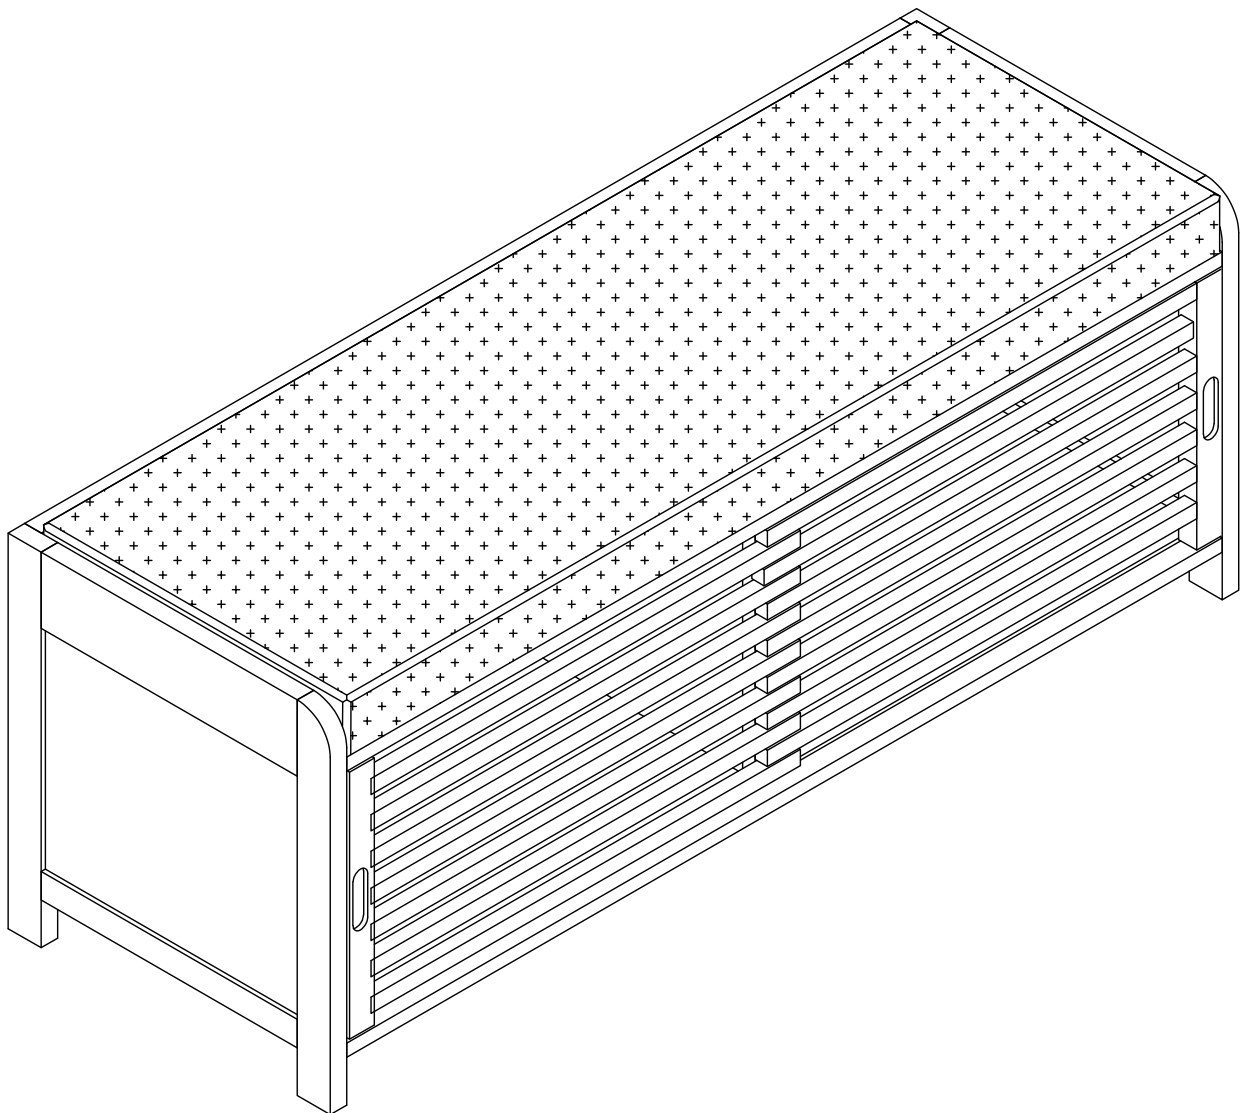

# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

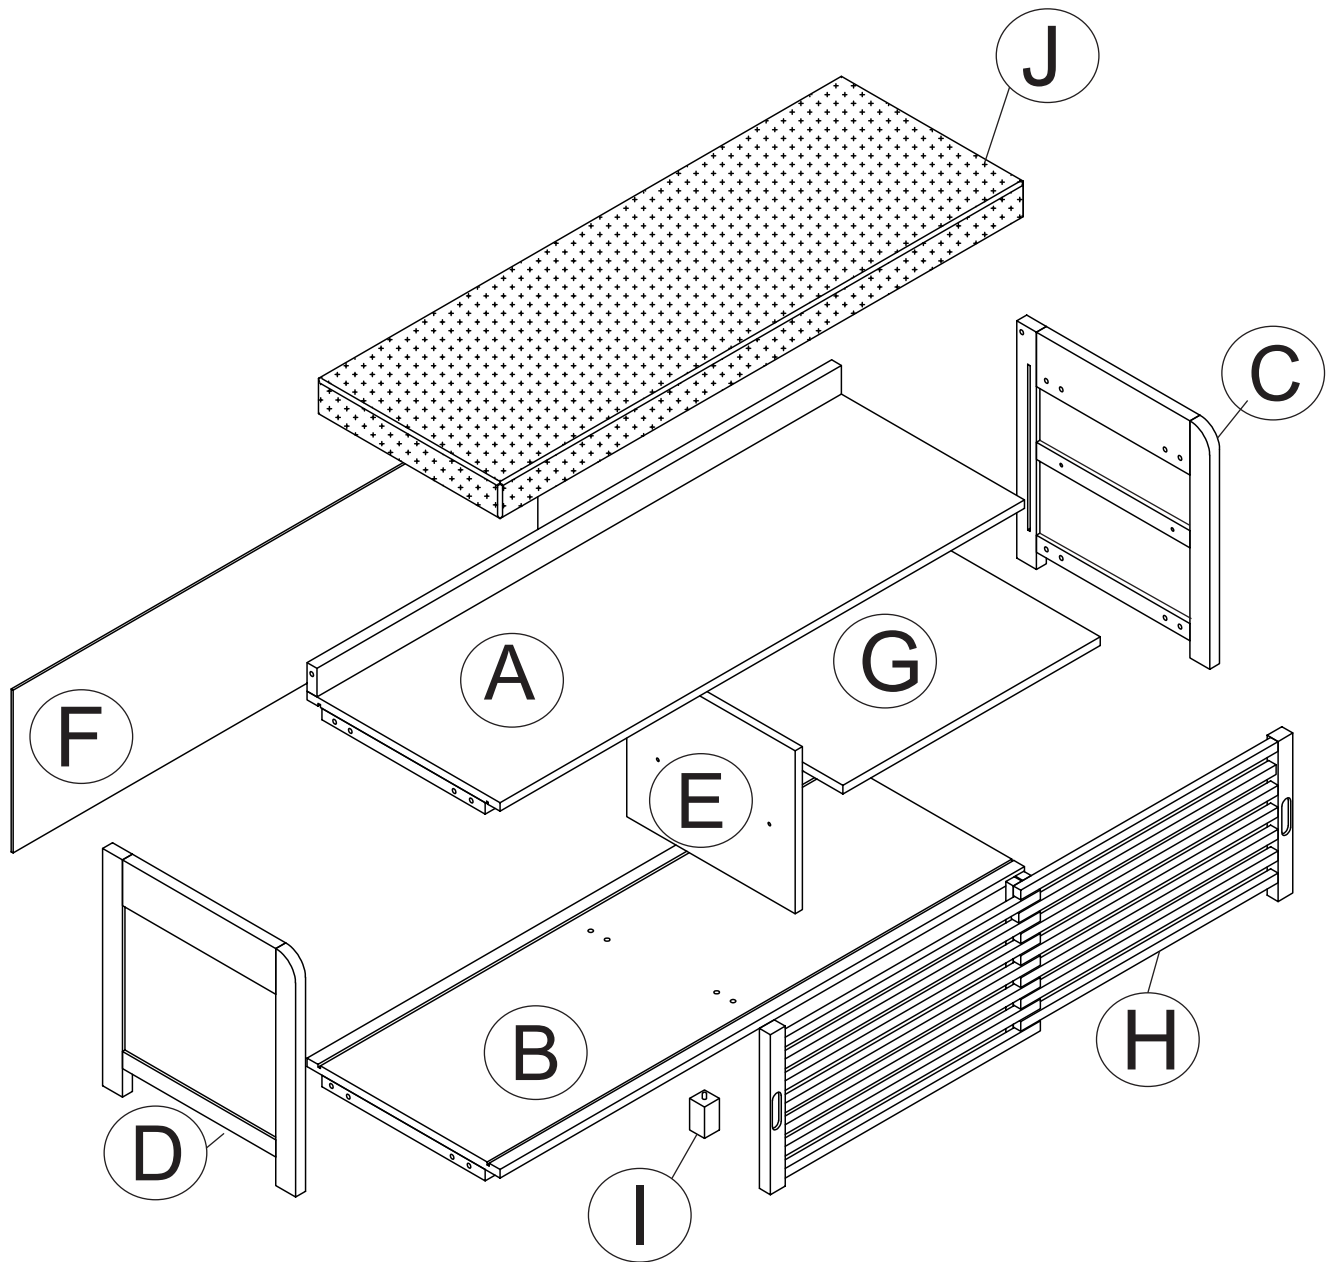


# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968


## Part List

**A**

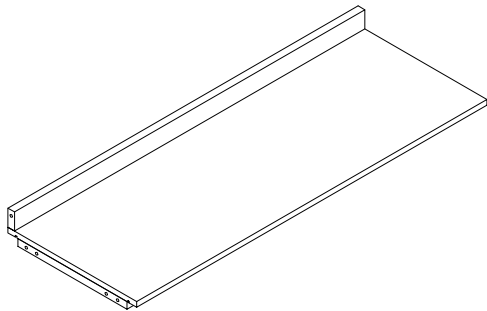


TOP (1 pc)

**B**

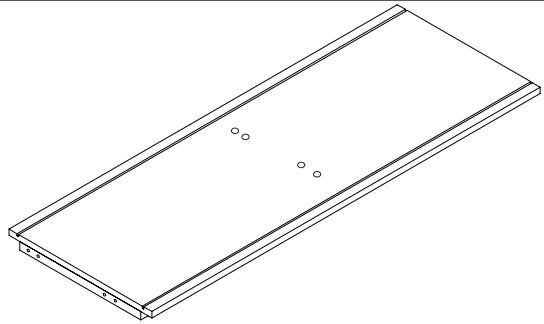


BOTTOM (1 pc)

**C**

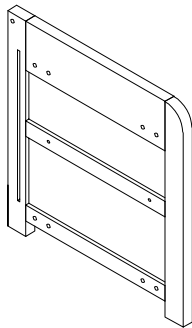


RIGHT SIDE PANEL (1 pc)

**D**

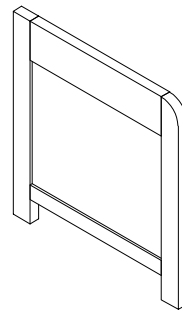


LEFT SIDE PANEL (1 pc)

**E**

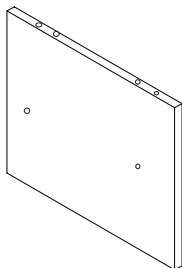


MIDDLE PANEL (1 pc)

**F**

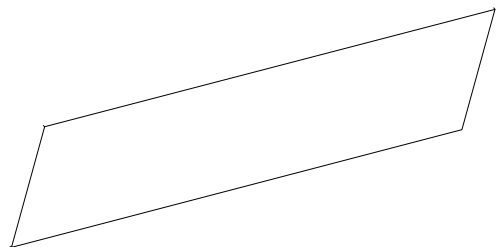


BACK PANEL (1 pc)

**G**

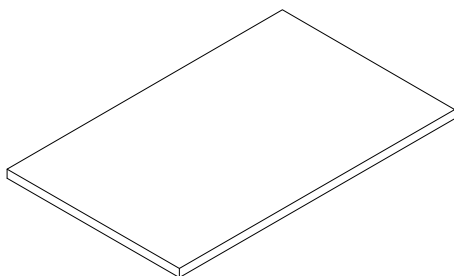


SHELF (1 pc)

**H**

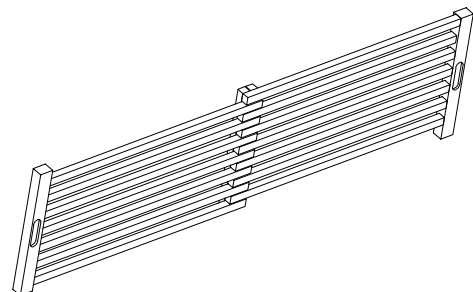


DOOR (1 Set)

**I**



SUPPORT LEG (1 pc)

**J**





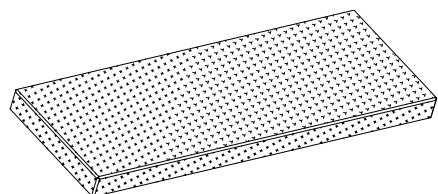


CUSHION (1 pc)

# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968


## Hardware List

|                                                                                                                                            |                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <p>①</p>  <p>Ø 6 x 28 mm</p> <p>Cam Bolt (2 pcs)</p>      | <p>②</p>  <p>Ø 15 x 12 mm</p> <p>Cam Lock (2 pcs)</p>    |
| <p>③</p>  <p>Ø 8 x 30 mm</p> <p>Wooden Dowel (14 pcs)</p> | <p>④</p>  <p>Ø 6 x 30 mm</p> <p>SHORT BOLT (8 pcs)</p>   |
| <p>⑤</p>  <p>Ø6 x 38mm</p> <p>LONG BOLT (2 pcs)</p>     | <p>⑥</p>  <p>Ø6 x 12mm</p> <p>Flat Washer (10 pcs)</p> |
| <p>⑦</p>  <p>Ø6 x 12mm</p> <p>Lock Washer (10 pcs)</p>  | <p>⑧</p>  <p>Ø9 x 12 mm</p> <p>T Nut (2 pcs)</p>       |
| <p>⑨</p>  <p>Allen Key (1 pc)</p>                       | <p>⑩</p>  <p>Ø6 x 10 mm</p> <p>Support Pin (4pcs)</p>  |
| <p>⑪</p>  <p>Slide Guide (4 pcs)</p>                    | <p>⑫</p>  <p>Metal Spindle Lock (4 pcs)</p>            |

# ASSEMBLY INSTRUCTION


ITEM NO.N715P196968

## STEP 1:

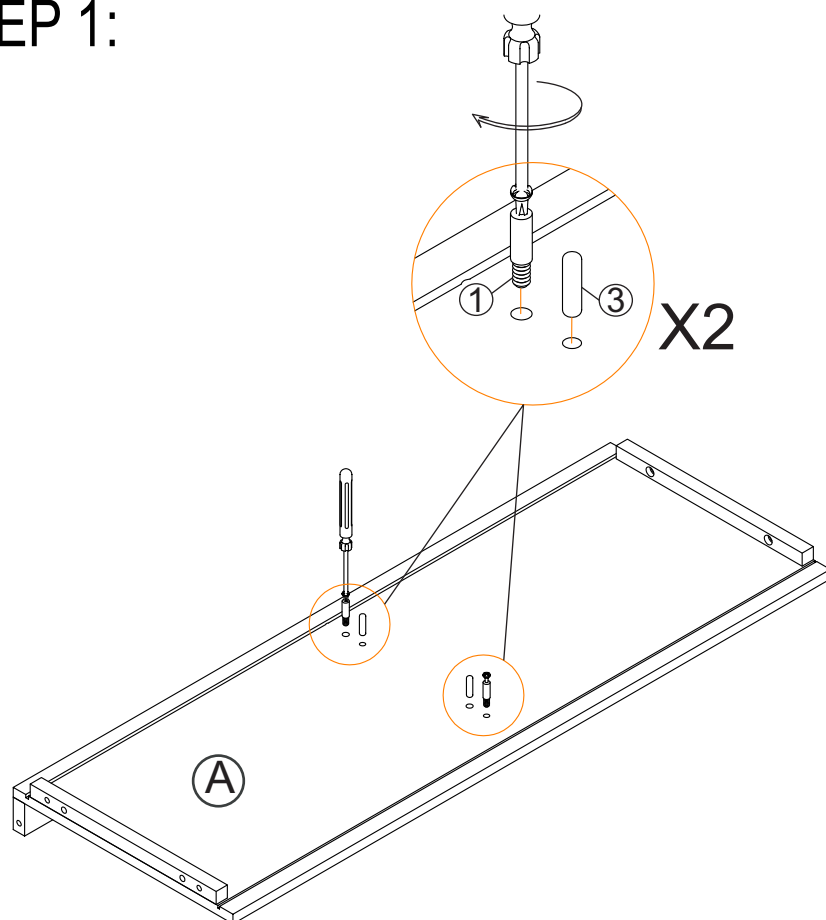

| Cam Bolt                                                                              | Wooden Dowel                                                                          |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Ø 6 x 28 mm                                                                           | Ø 8 x 30 mm                                                                           |
|  |  |
| ① x 2                                                                                 | ③ x 2                                                                                 |

## STEP 2:

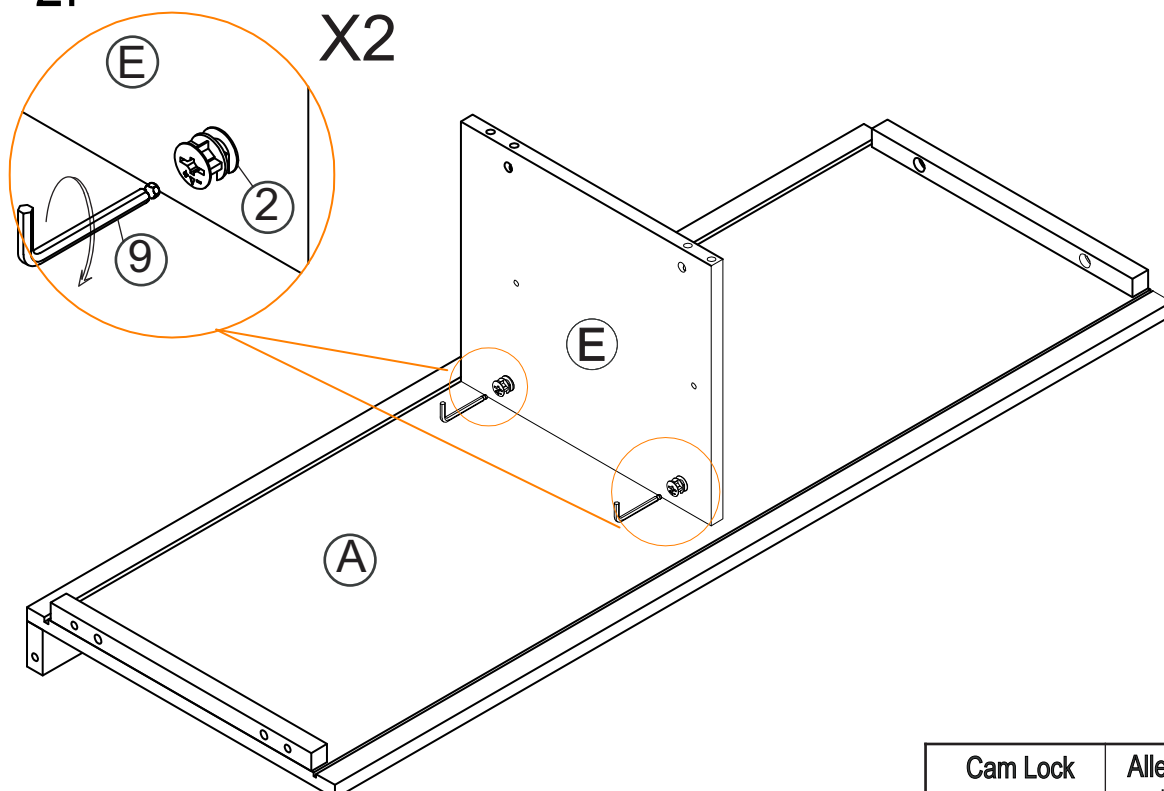


| Cam Lock                                                                              | Allen Key                                                                             |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Ø 15 x 12 mm                                                                          | K4                                                                                    |
|  |  |
| ② x 2                                                                                 | ⑨ x 1                                                                                 |

# ASSEMBLY INSTRUCTION


ITEM NO.N715P196968

## STEP 3:

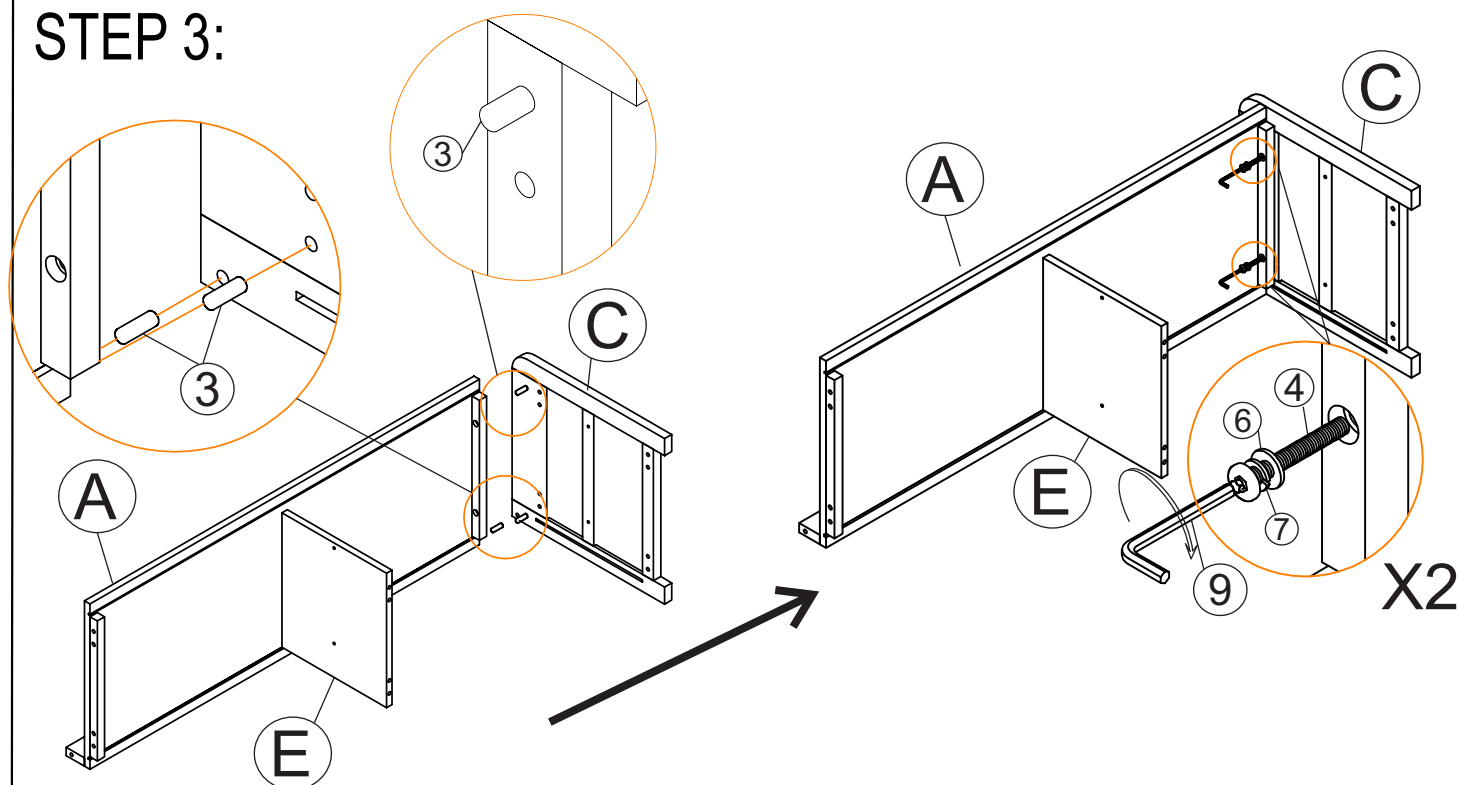

| Wooden Dowel<br>Ø 8 x 30 mm                                                         | Short Bolt<br>Ø 6 x 30 mm                                                           | Flat Washer                                                                           | Lock Washer                                                                           | Allen Key<br>K4                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |  |  |
| ③ x 3                                                                               | ④ x 2                                                                               | ⑥ x 2                                                                                 | ⑦ x 2                                                                                 | ⑨ x 1                                                                                 |

## STEP 4:

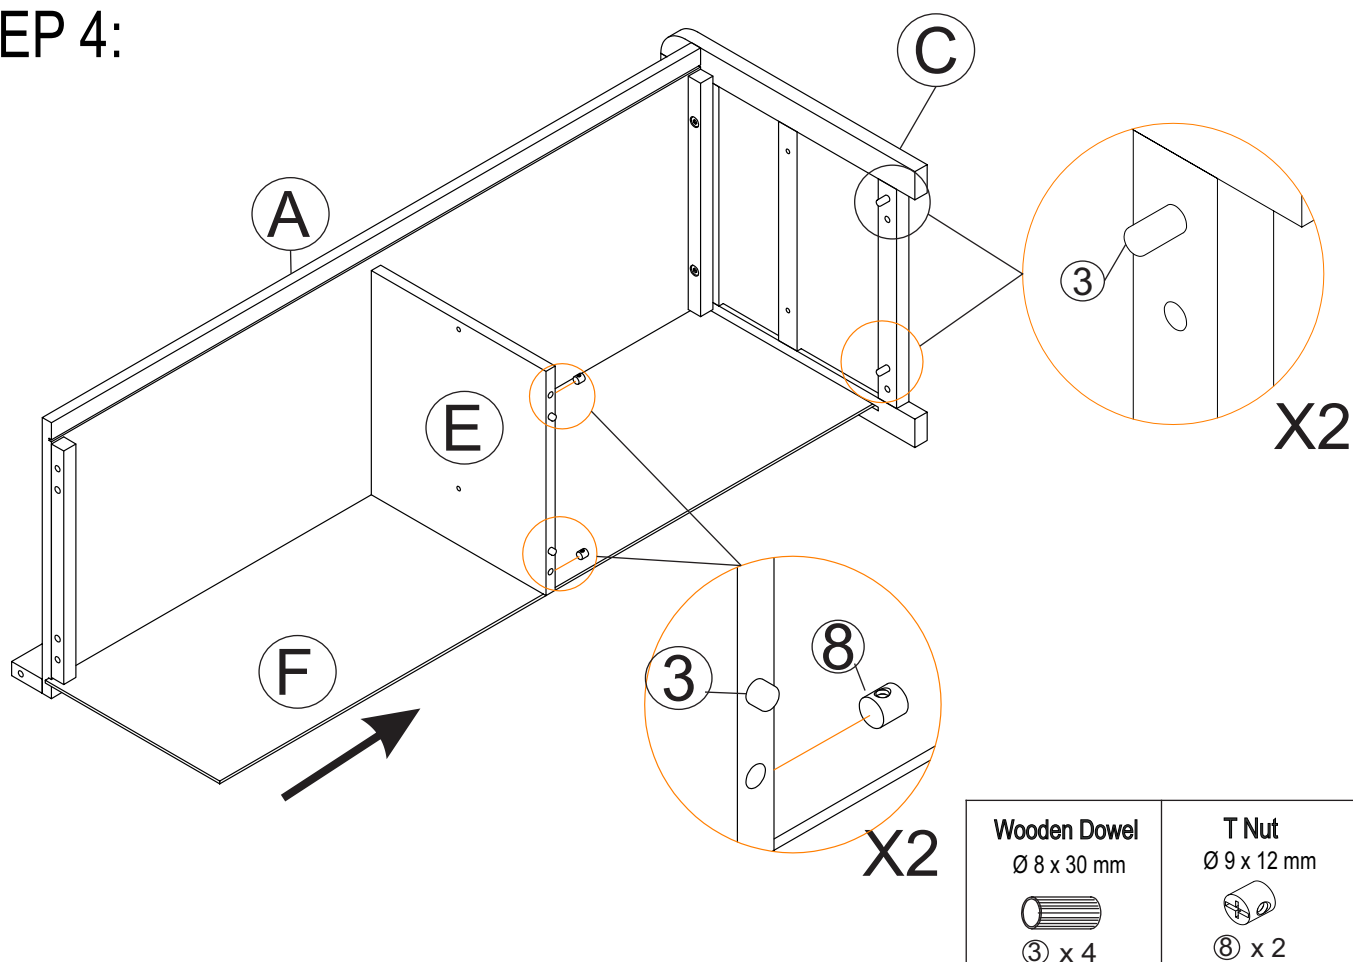


| Wooden Dowel<br>Ø 8 x 30 mm                                                           | T Nut<br>Ø 9 x 12 mm                                                                  |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |
| ③ x 4                                                                                 | ⑧ x 2                                                                                 |


# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

## STEP 5:

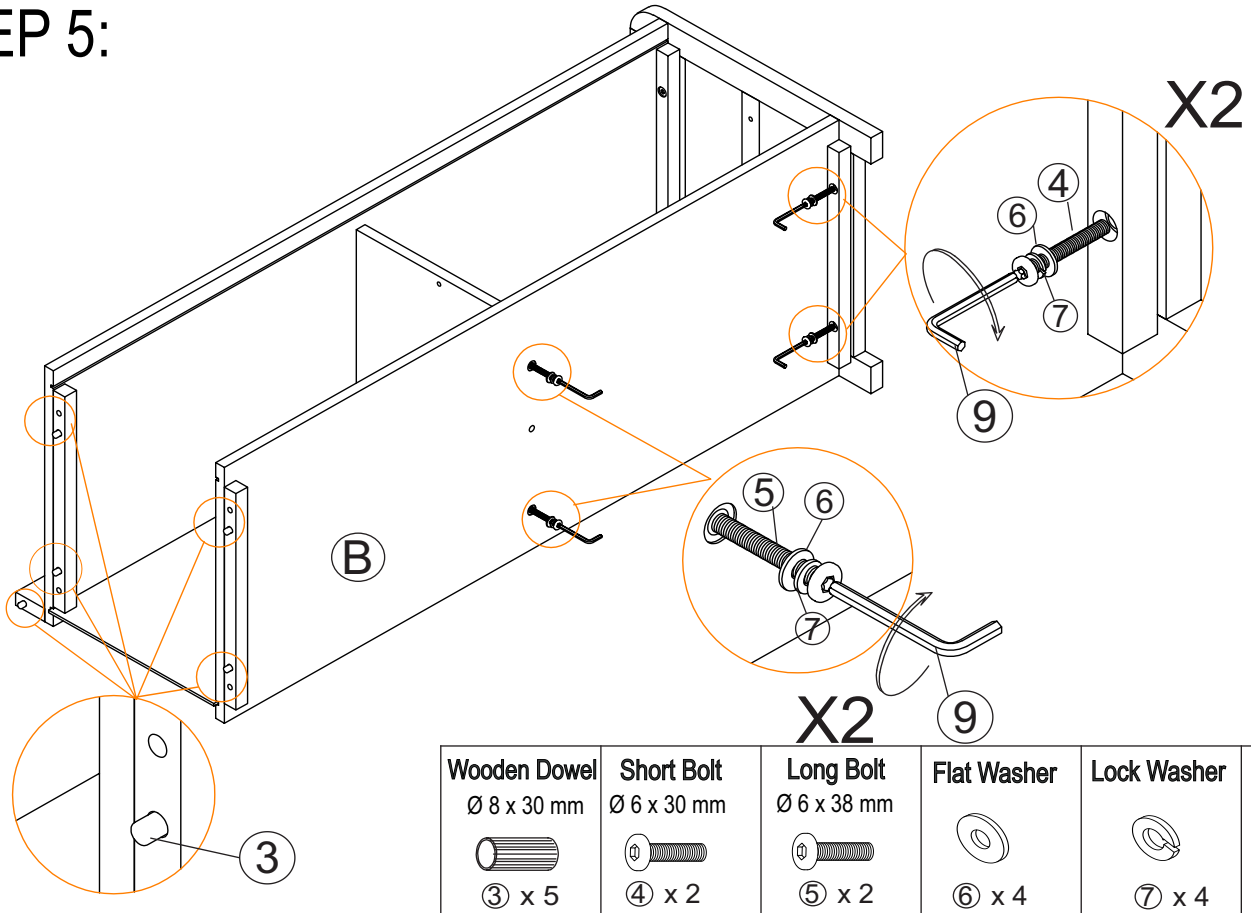


## STEP 6:

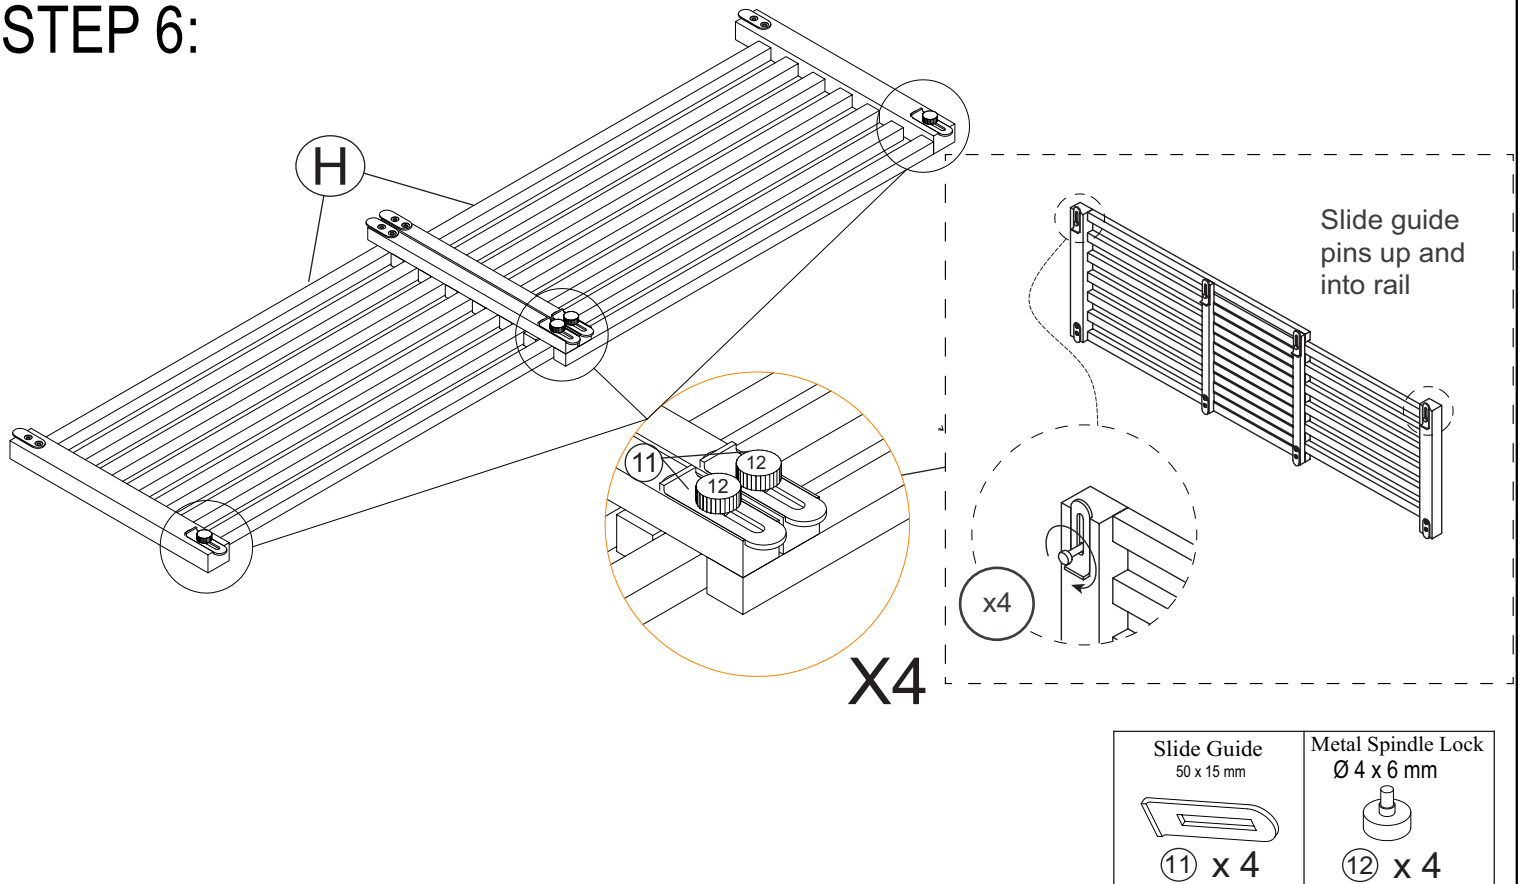


# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

## STEP 7:

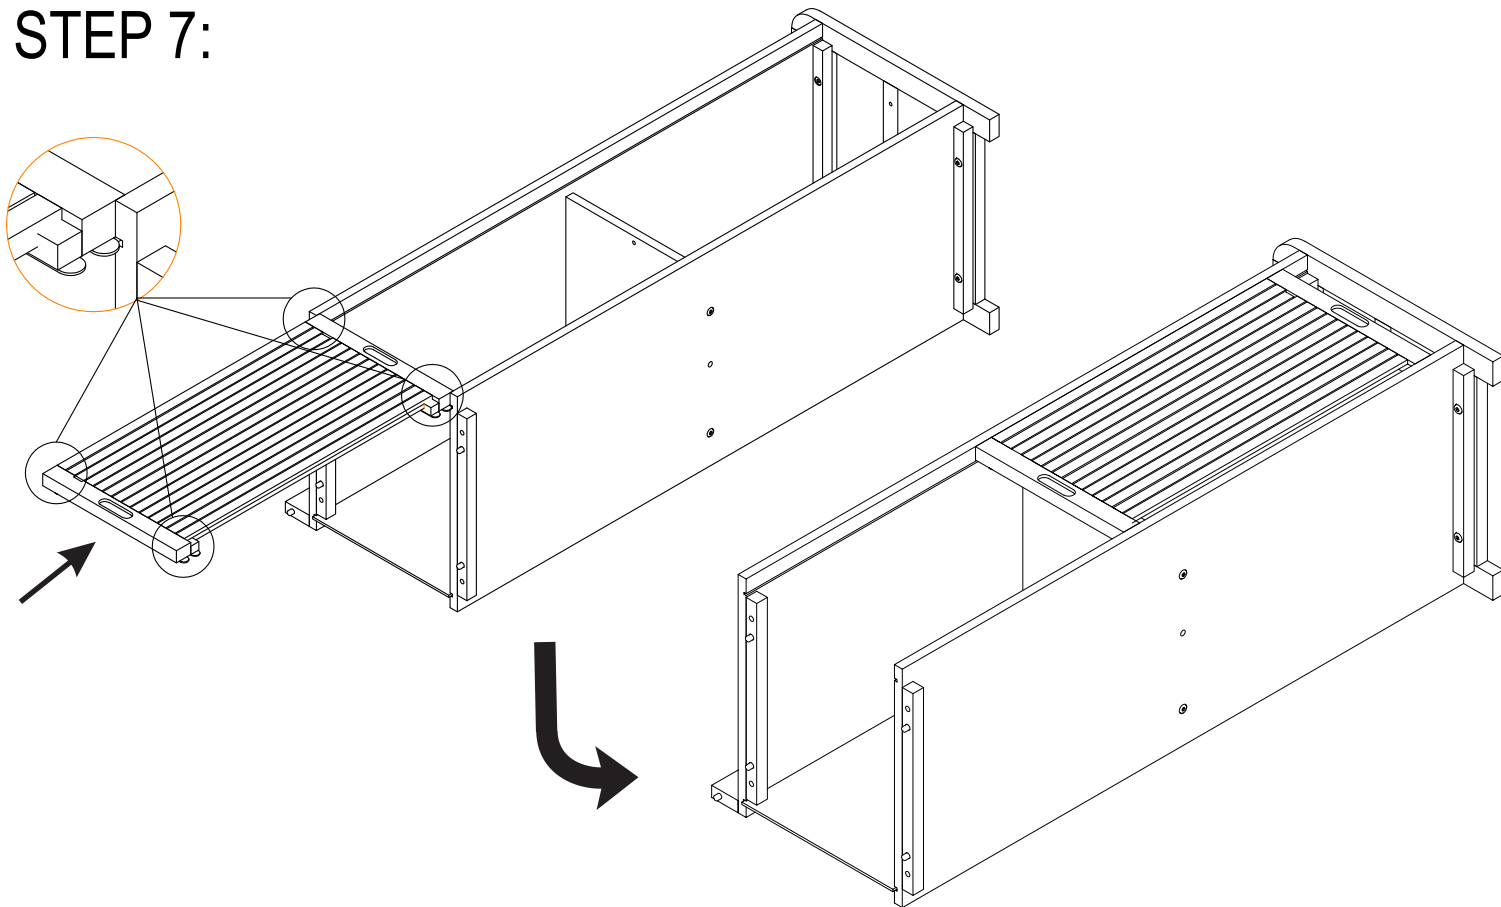

## STEP 8:

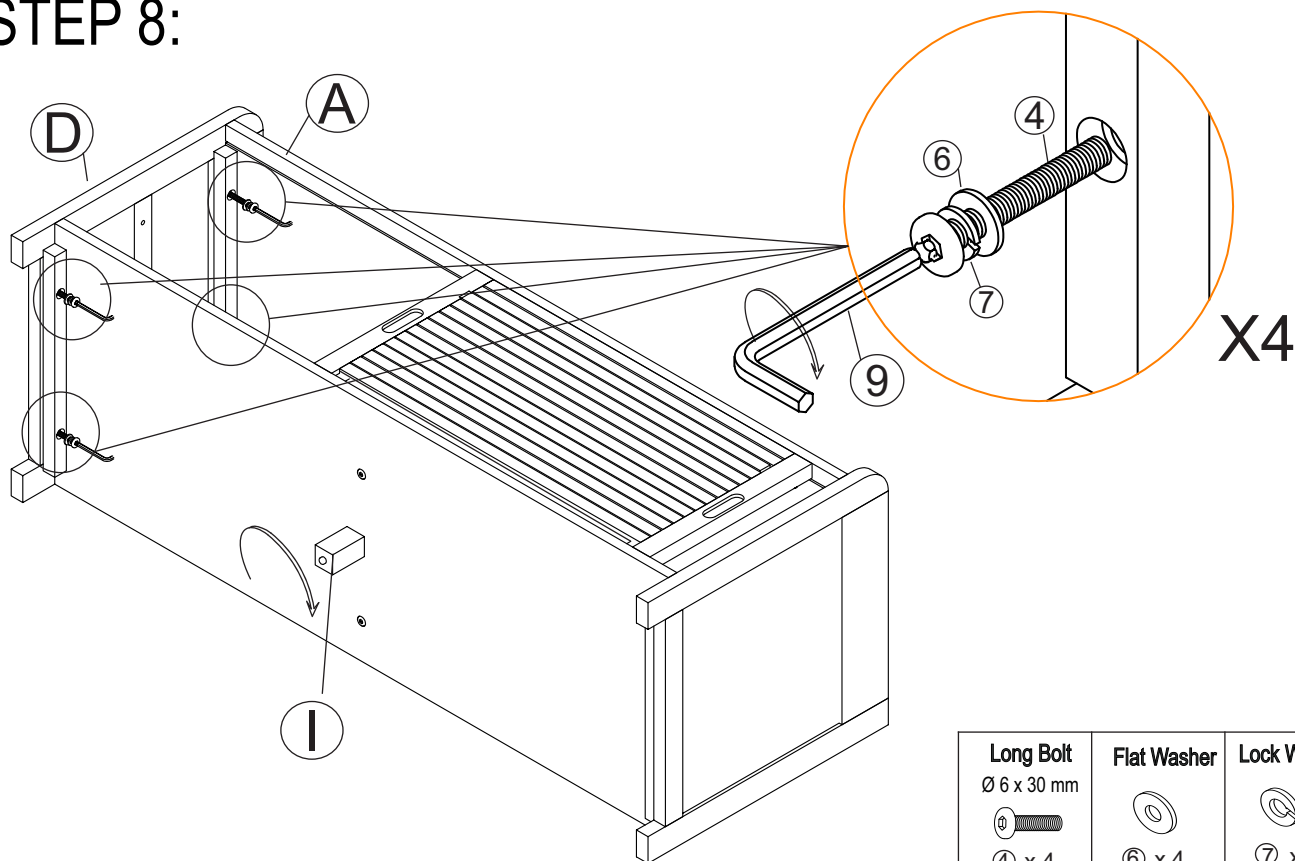


| Long Bolt<br>Ø 6 x 30 mm                                                              | Flat Washer                                                                           | Lock Washer                                                                           | Allen Key<br>K4                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |  |
| ④ x 4                                                                                 | ⑥ x 4                                                                                 | ⑦ x 4                                                                                 | ⑨ x 1                                                                                 |

# ASSEMBLY INSTRUCTION

ITEM NO.N715P196968


**STEP 9 :** The Shelf can be put in the left or right compartment, the process is the same

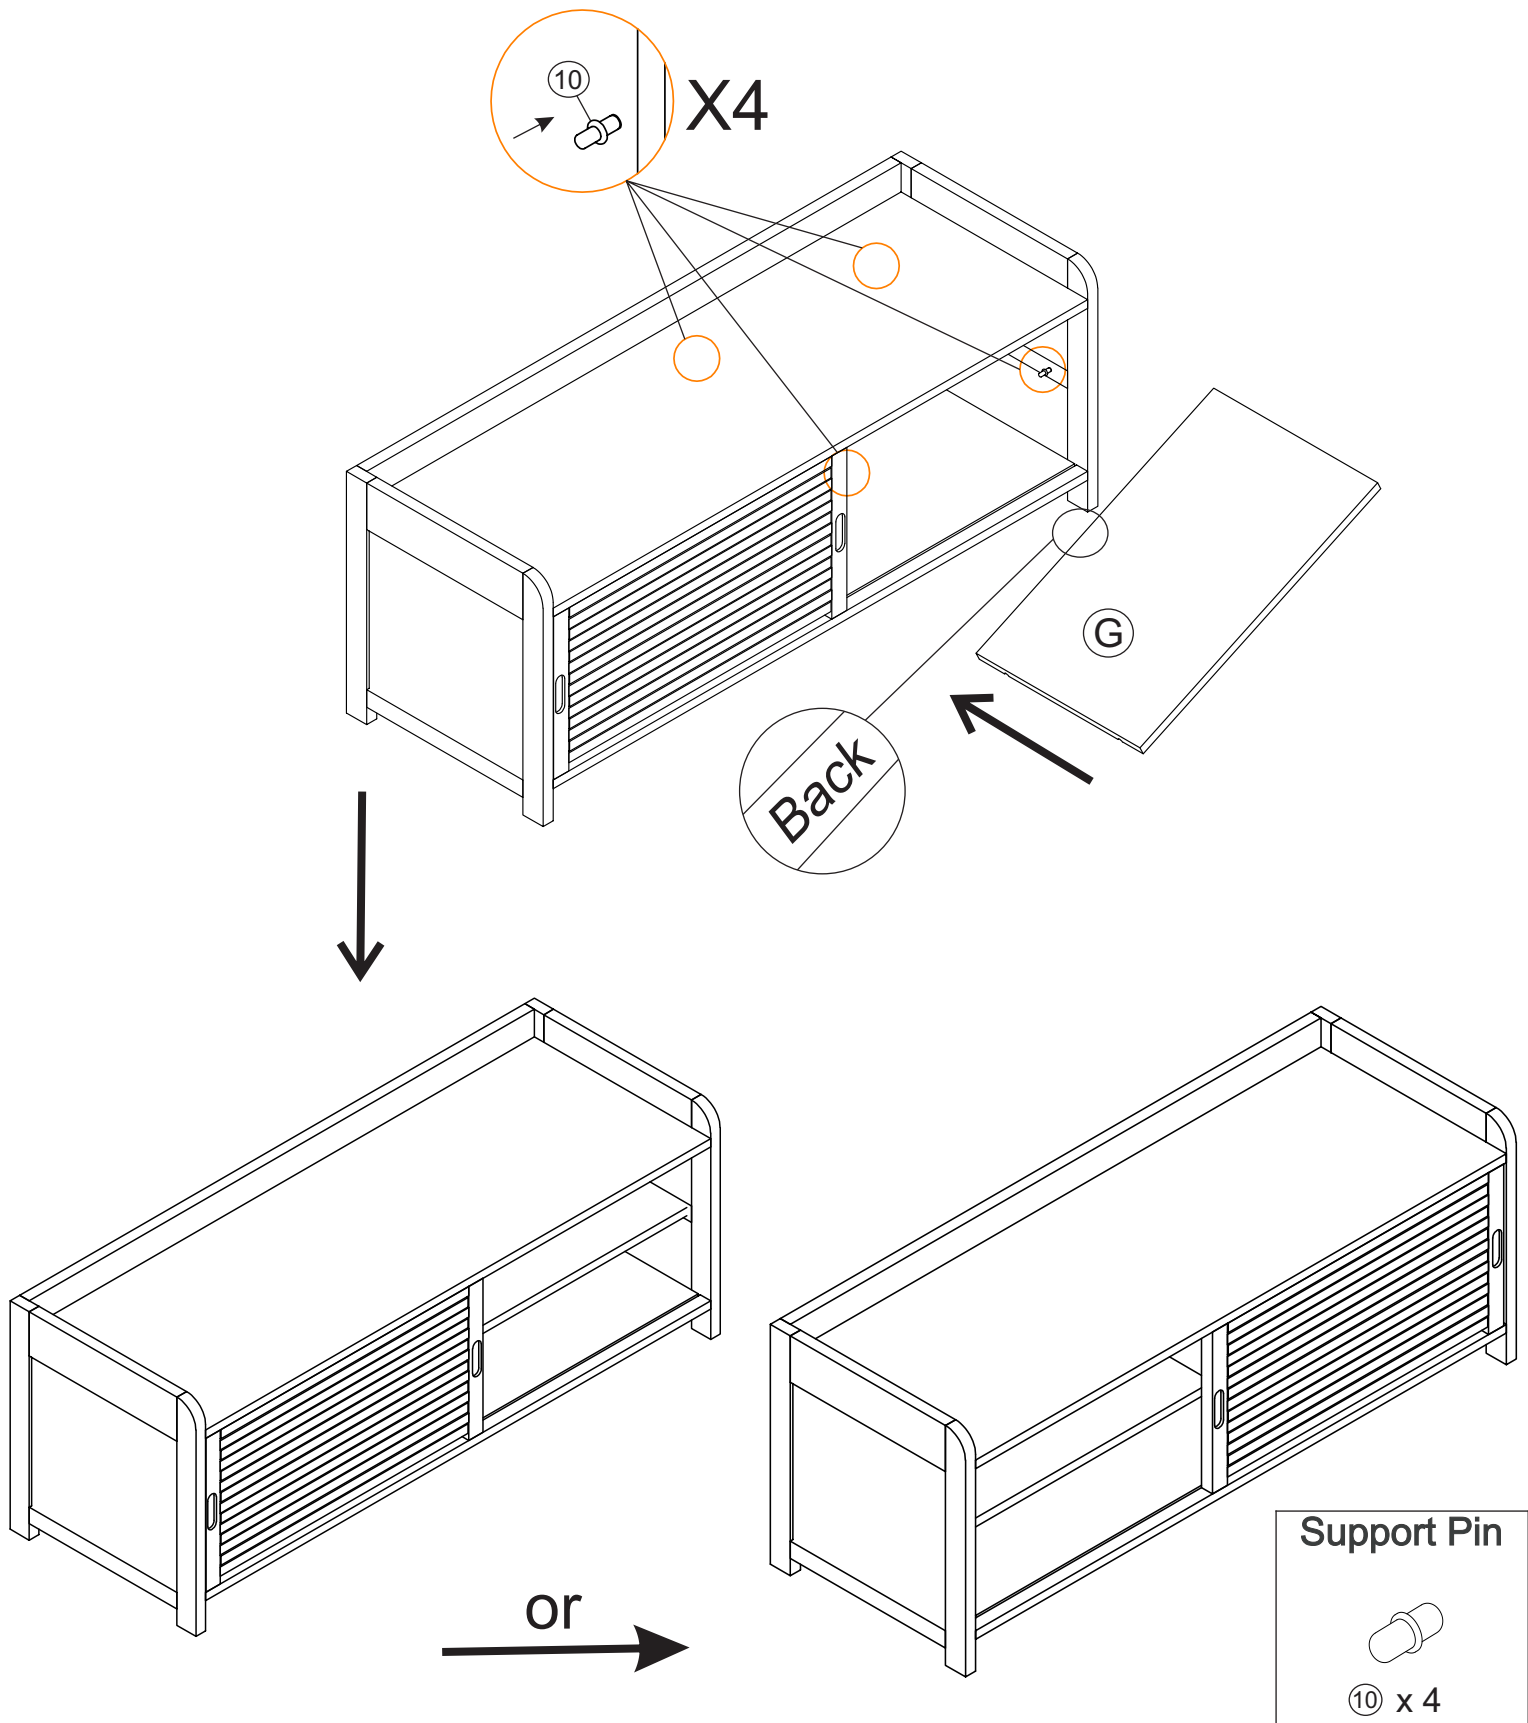

# ASSEMBLY INSTRUCTION

ITEM NO. N715P196968

STEP 10 :

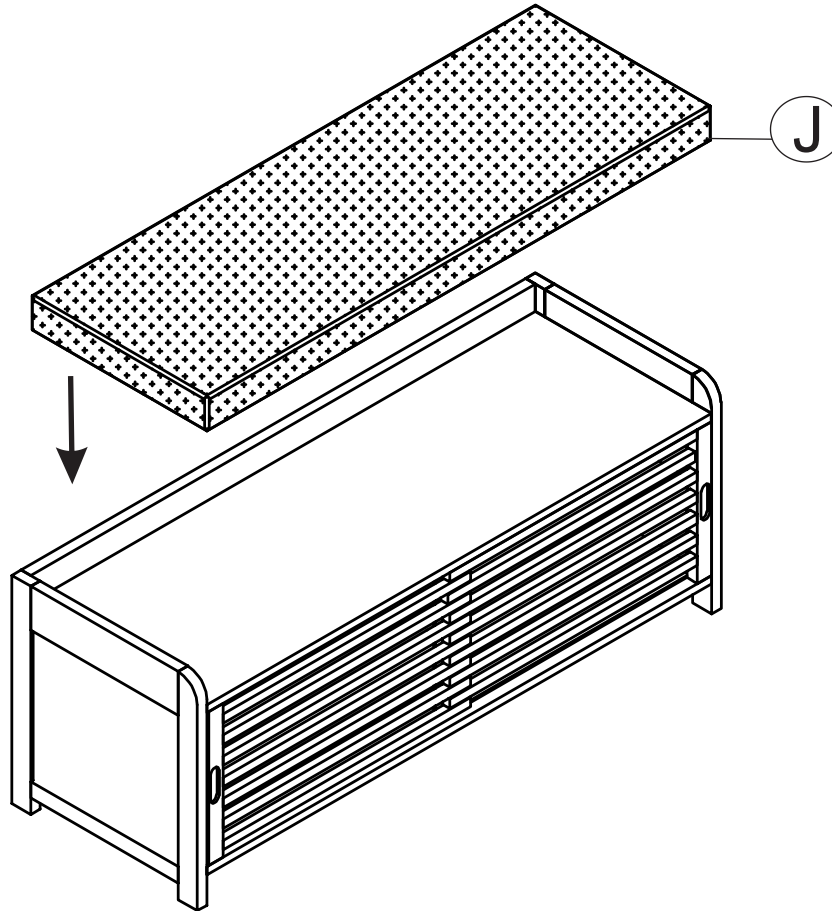

Finished :

