

# ASSEMBLY INSTRUCTIONS

## MODEL : WM2008B-DT

### IMPORTANT NOTE :


- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

### HARDWARE LIST

|   |   |       |
|---|---|-------|
| A | JCBB M8 x 60mm + S/W 5/16" + F/W 5/16" x 22mm | 10PCS |
| B | JCBC M6 x 40mm + S/W M6 + F/W M6 x 13mm       | 10PCS |
| C | ALLEN KEY M5                                  | 1PC   |
| D | ALLEN KEY M4 (Ball Shape)                     | 1PC   |

### PART LIST


|   |                |       |
|---|----------------|-------|
| 1 | TABLE TOP      | 1PC   |
| 2 | LEG            | 10PCS |
| 3 | BASE FRAME     | 1PC   |
| 4 | WEIGHTED PANEL | 1PC   |

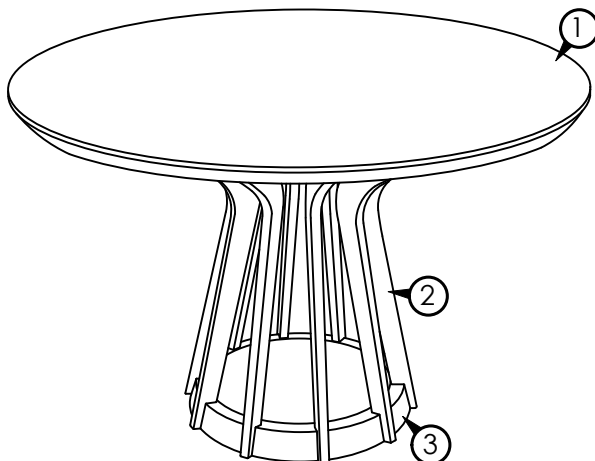


COMPLETED TABLE ASSEMBLY.

### STEP 1 BEFORE ASSEMBLY PLEASE LOOSEN THE JCBC M6 x 40MM WITH SPRING AND FLAT WASHER (3PCS) TO TAKE OUT THE WEIGHTED PANEL (4).

\*PLEASE KEEP JCBC BOLT TO FIX WEIGHTED PANEL (4) INTO THE BASE FRAME (3) AT STEP 5

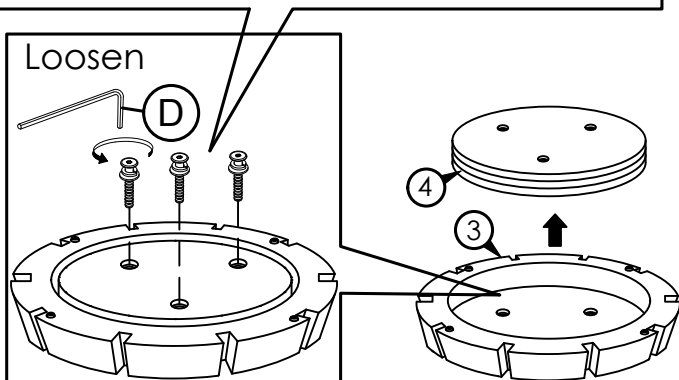


### STEP 2

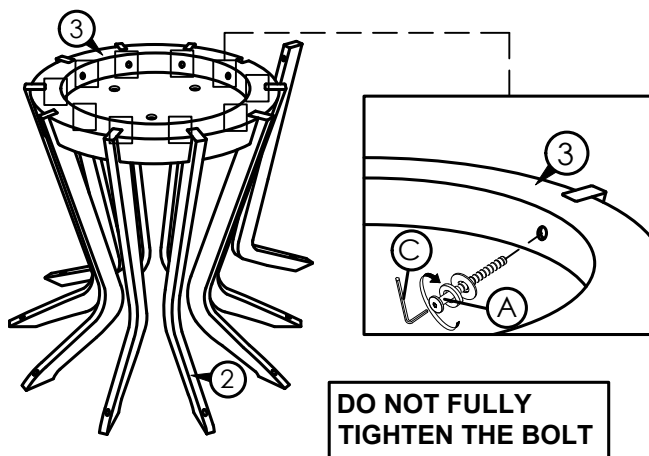


DO NOT FULLY TIGHTEN THE BOLT

### STEP 3

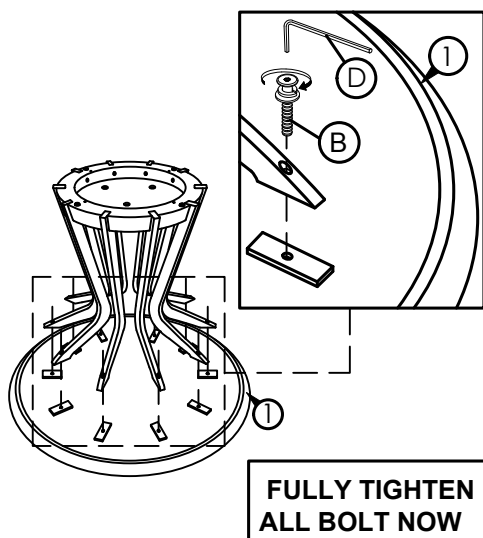


FULLY TIGHTEN ALL BOLT NOW

### STEP 4

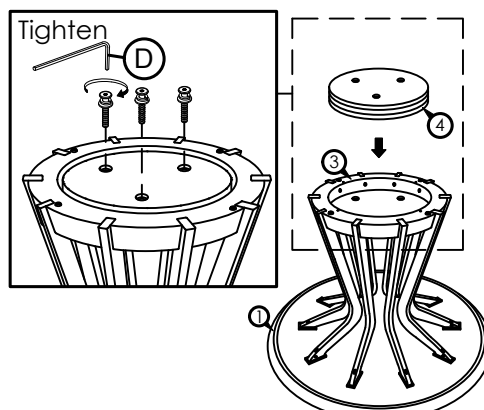

PLEASE FIX THE WEIGHTED PANEL (4) INTO THE BASE FRAME (3) AND TIGHTEN USING JCBC M6 x 40MM WITH SPRING AND FLAT WASHER (3PCS)

### STEP 5

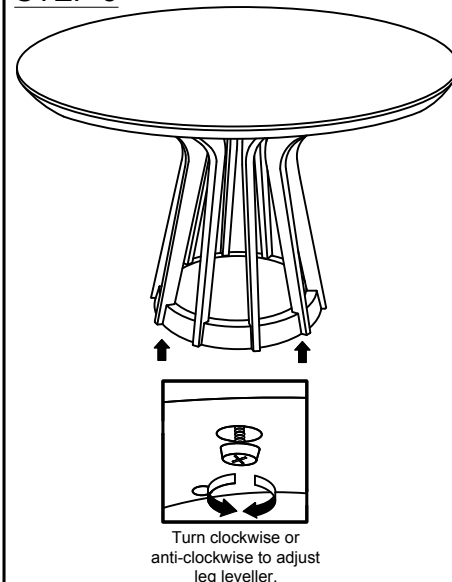

Turn clockwise or anti-clockwise to adjust leg leveller.