


# ASSEMBLY INSTRUCTION

## MODEL : LOUIS PHILIPS (FULL BED 54"x75")


Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

Page : 1 Of 1

### STEP 1.

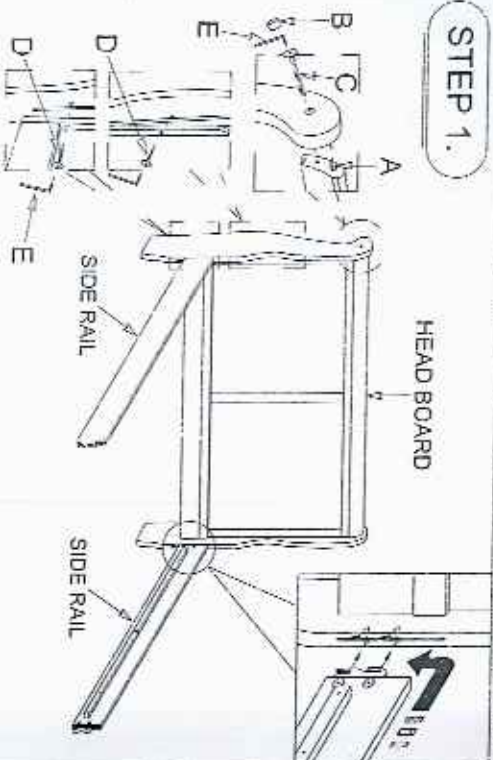

### STEP 2.

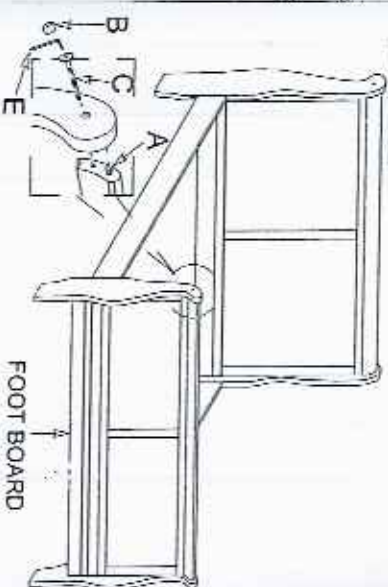

TIPS : REPEAT STEP 1 TO JOINT FOOT BOARD.

#### HARDWARE PART 1


| NO | HARDWARE DESCRIPTION  | QTY  |
|----|-----------------------|------|
| A. | Wood Dowel M12 x 50mm | 4PCS |
| B. | Wood Botton M15 x 9mm | 4PCS |
| C. | JCBC Bolt M6 x 50mm   | 4PCS |
| D. | JCBC Bolt M6 x 35mm   | 8PCS |
| E. | Allen Key             | 1PC  |

#### HARDWARE PART 2

| NO | HARDWARE DESCRIPTION         | QTY  |
|----|------------------------------|------|
| F. | Ch-phboard Screw M4 x 32 T.T | 6PCS |
| G. | JCBC Bolt M6 x 35mm          | 3PCS |
| H. | Adjuster Screw M6 x 24mm     | 3PCS |

Screw Driver No. Provide It

### STEP 3.

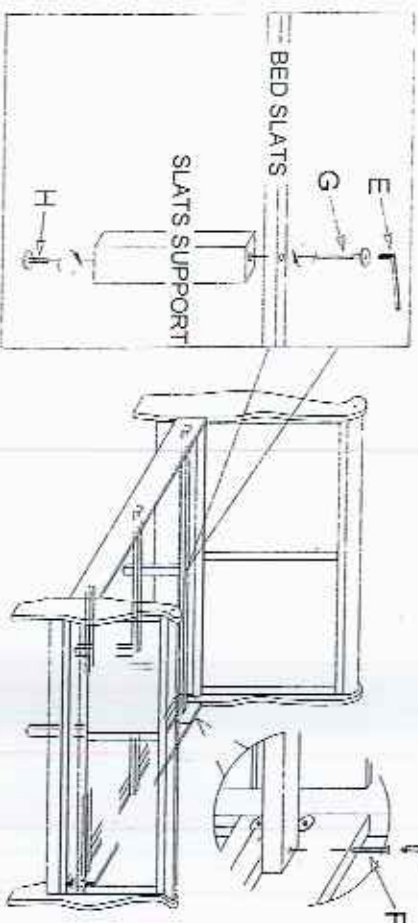

\* TOTAL SLAT : 3PCS (WITH JCBC HOLE) + 3PCS (SLATS SUPPORT)

### COMPLETE SET

