



ASSEMBLY INSTRUCTIONS

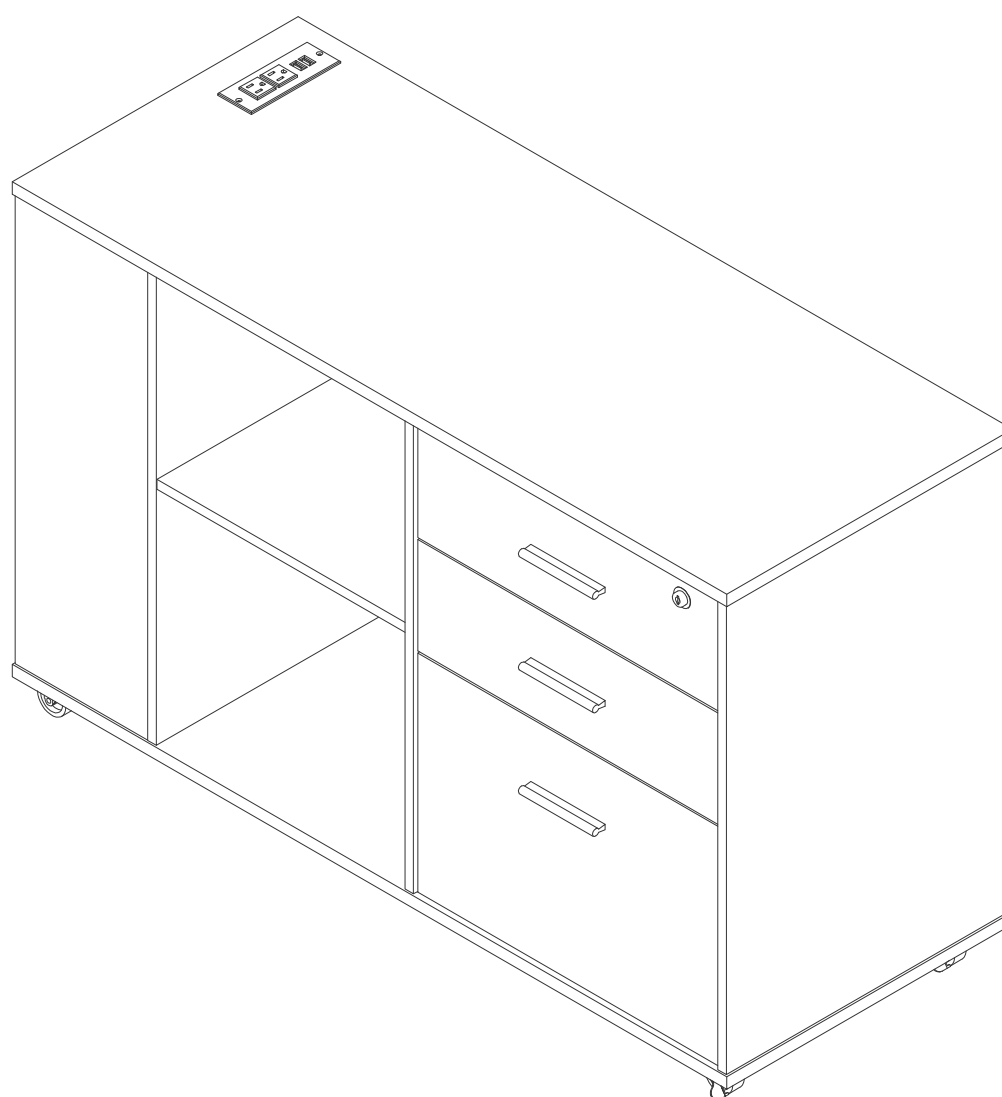













Notice:



1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly, Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service





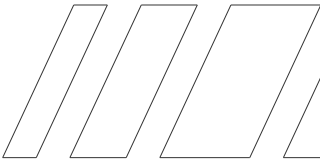


1	2	3
4	5	6
7	8	9 x2
10	11	12
13	14	15 x2

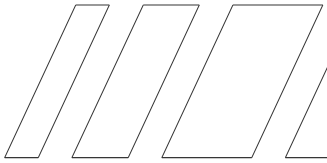

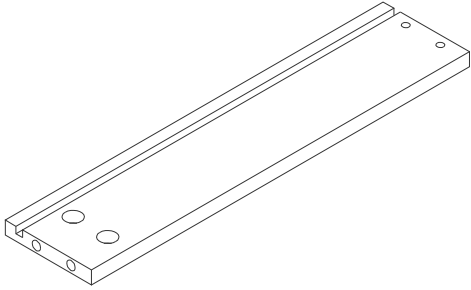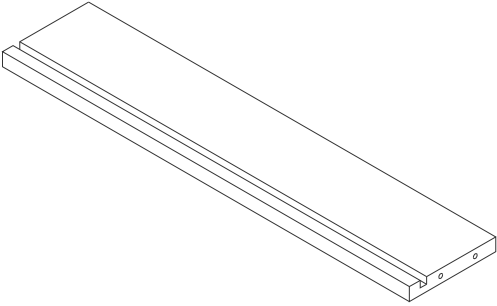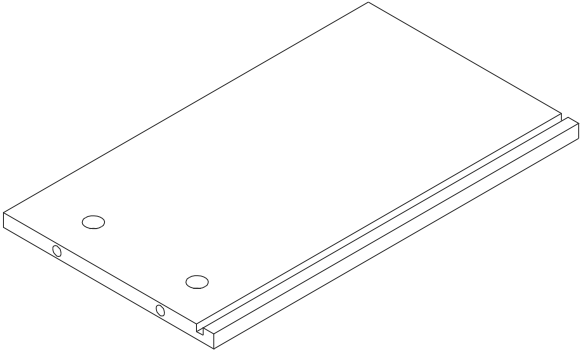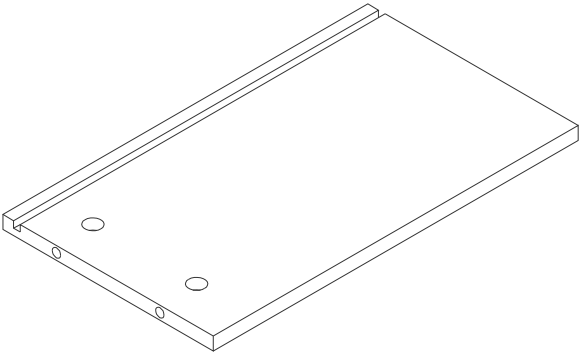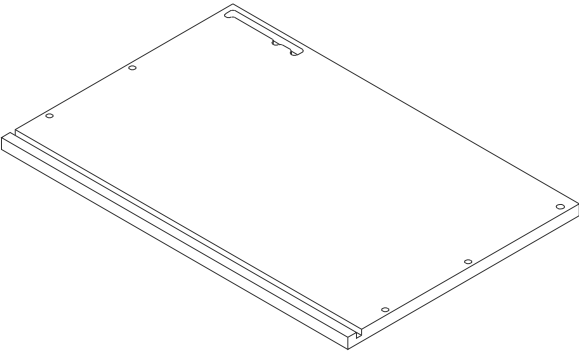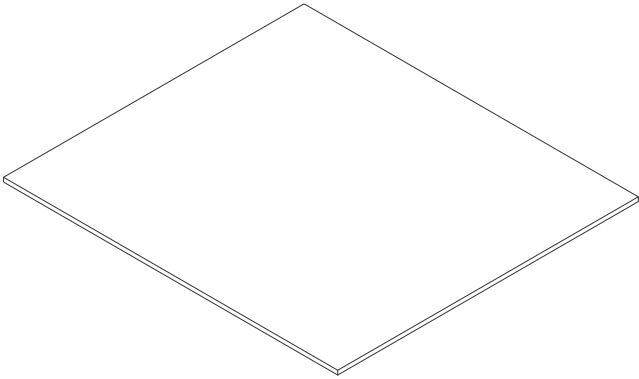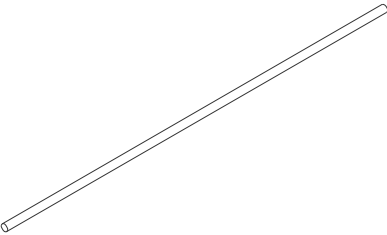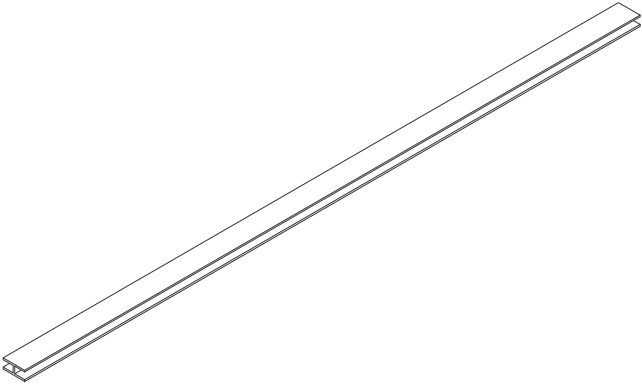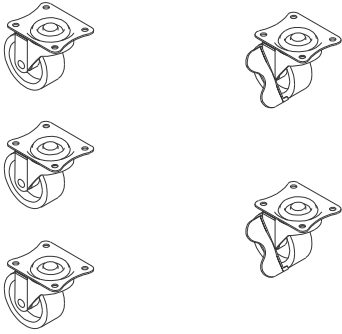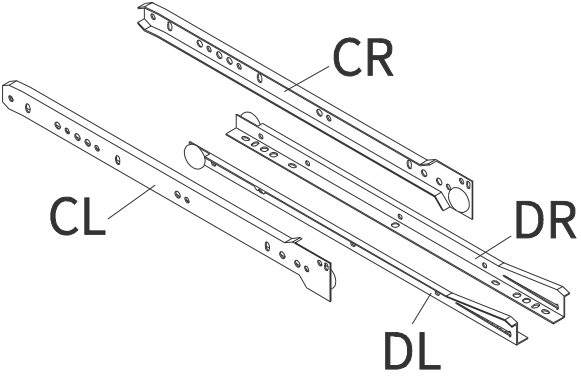
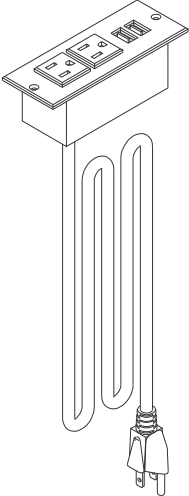
16  x 2	17  x 2	18 
19 	20 	21  x 3
22  x 2	23 	24  1.5"
25  14" x 3	26 	

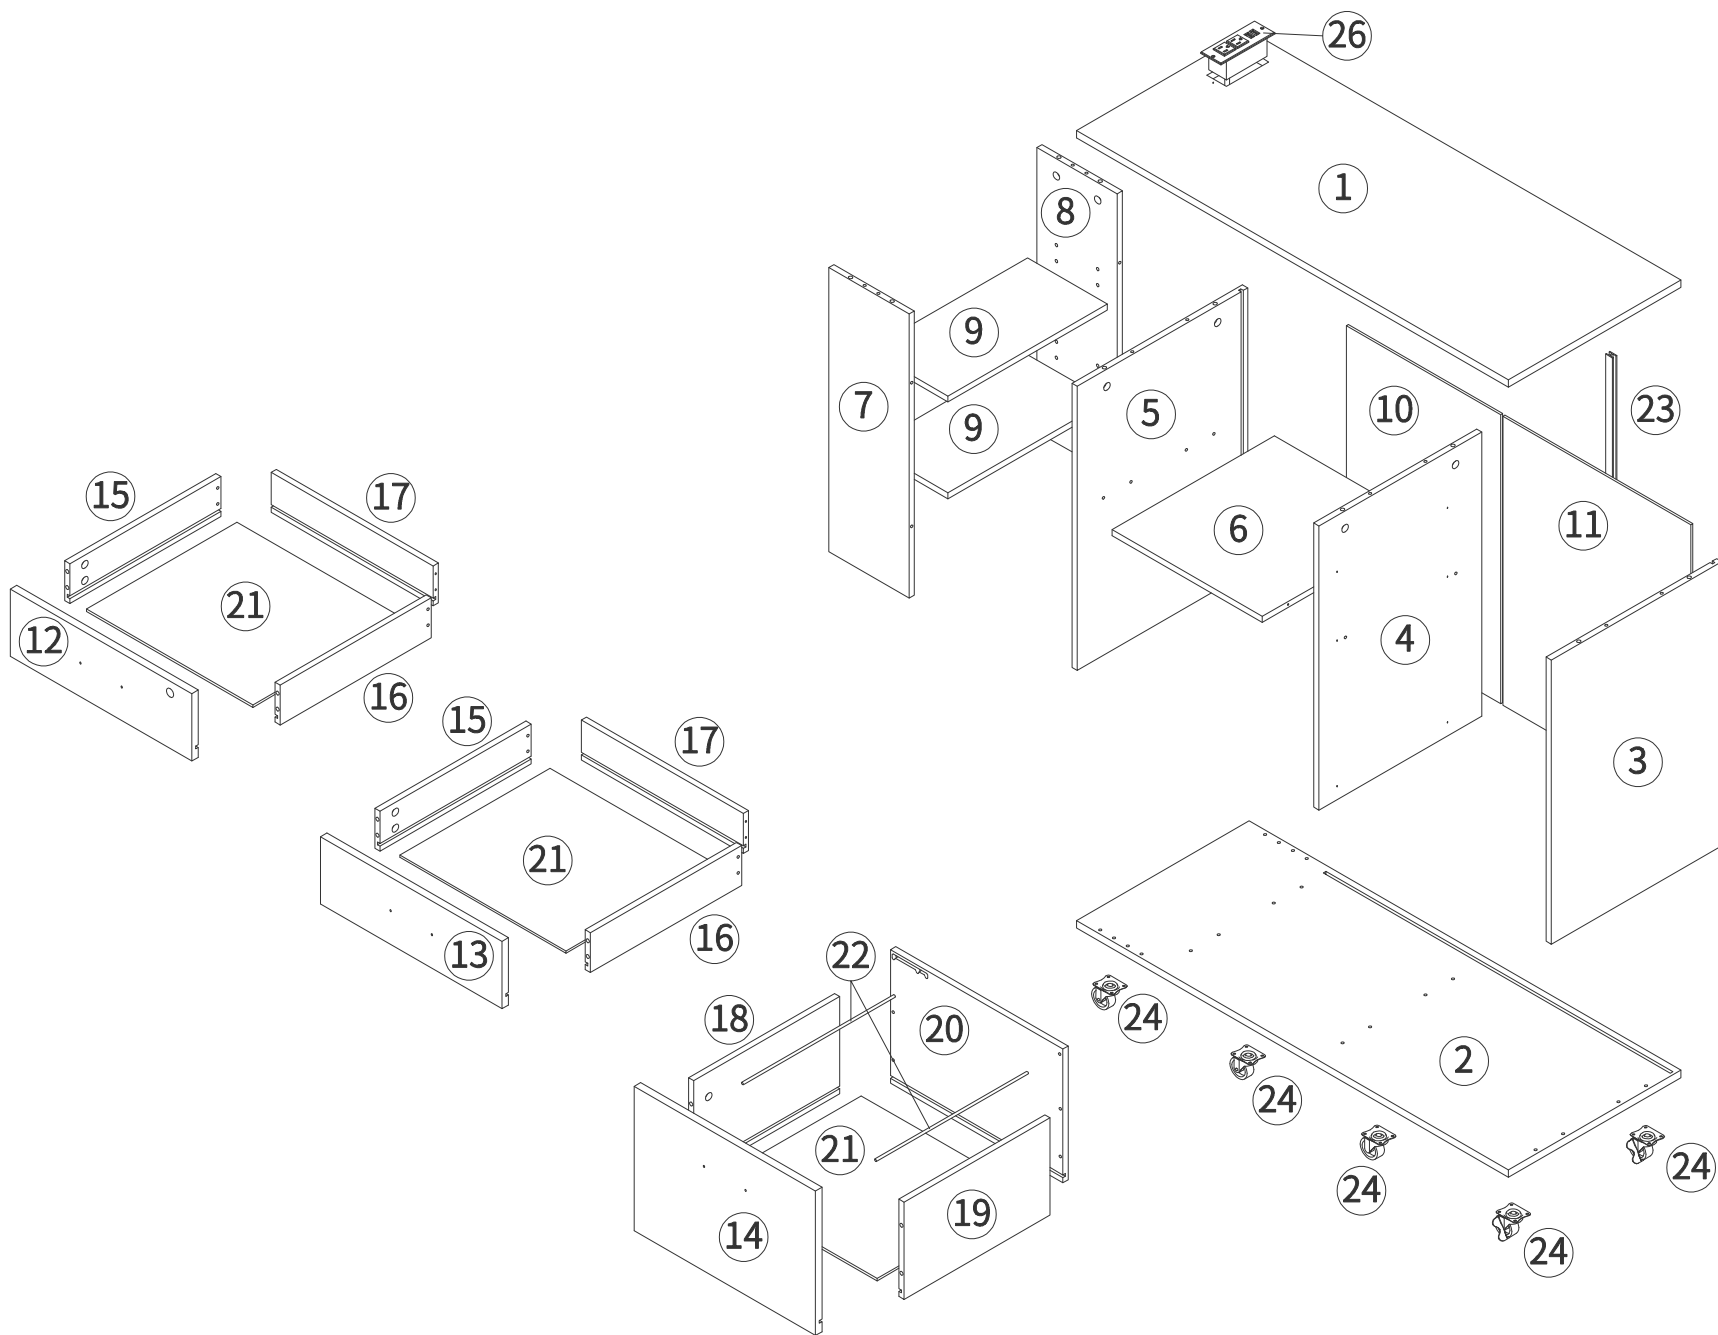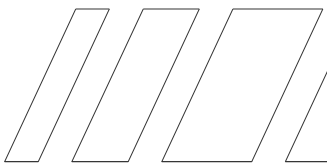


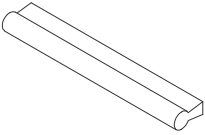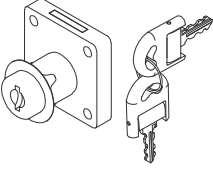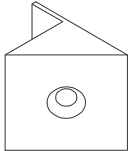A M6X42  22 PCS	B Ø15X10  22 PCS	C M4X18  6 PCS	D M5X40  26 PCS	E M3.5X12  58PCS	F Ø6X40  28 PCS
G  3 PCS	H M3X18  4 PCS	I  1 PCS	J  8 PCS	K  12 PCS	 1 PCS

Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process

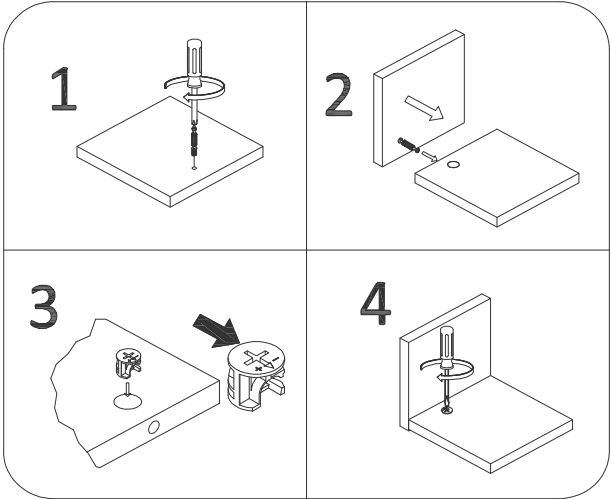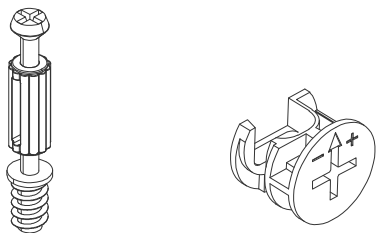

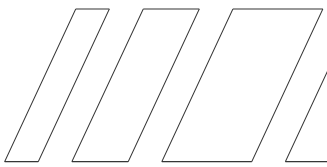


1

E M3.5X12



6 PCS

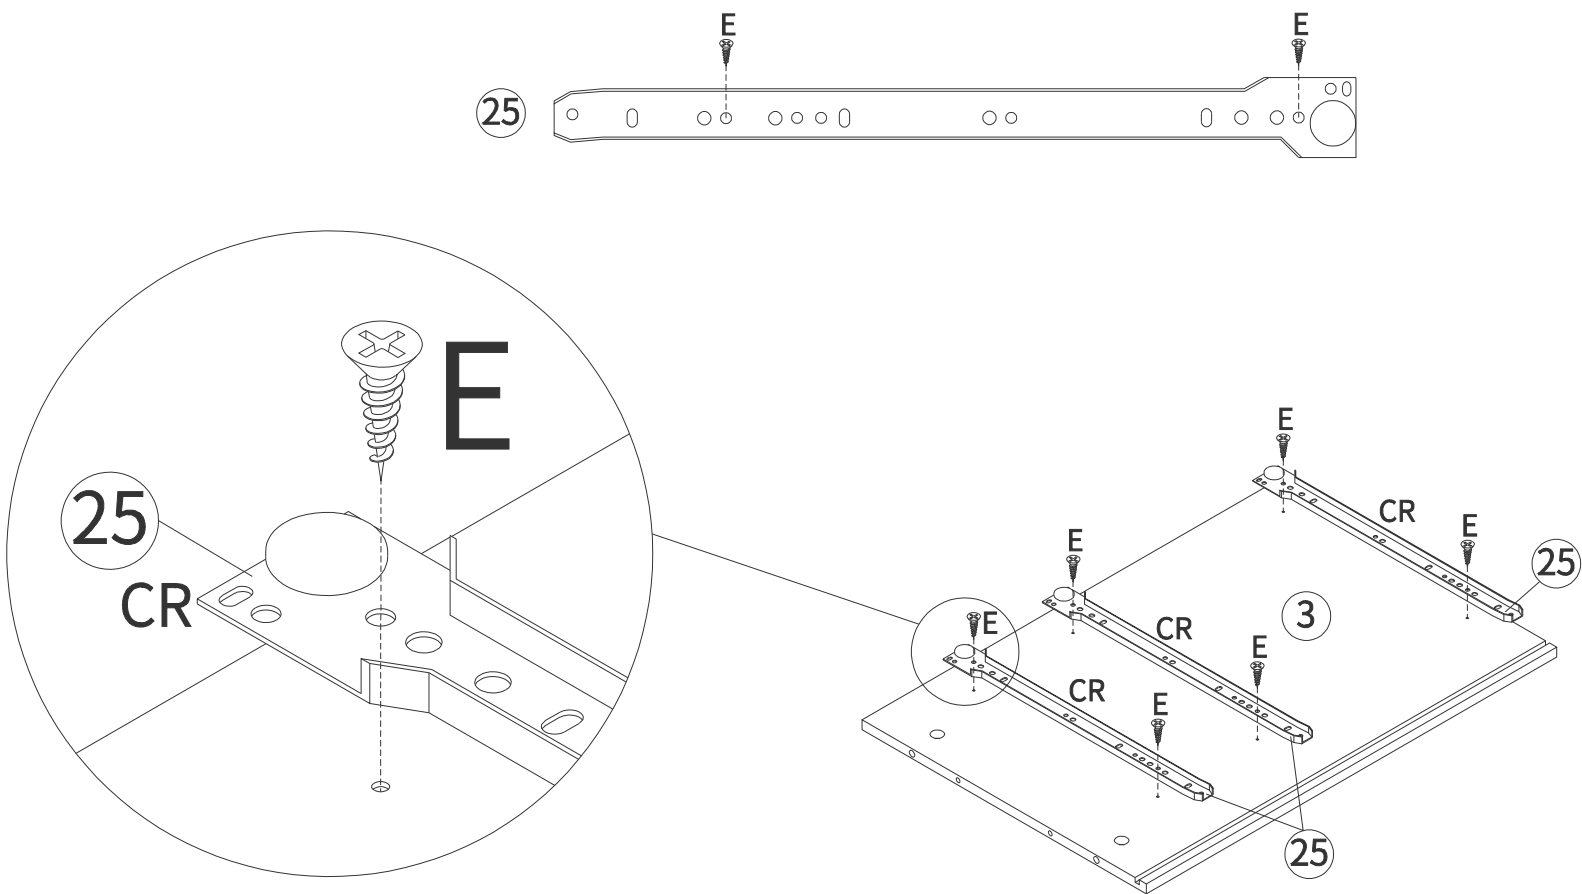



2

E M3.5X12






4 PCS

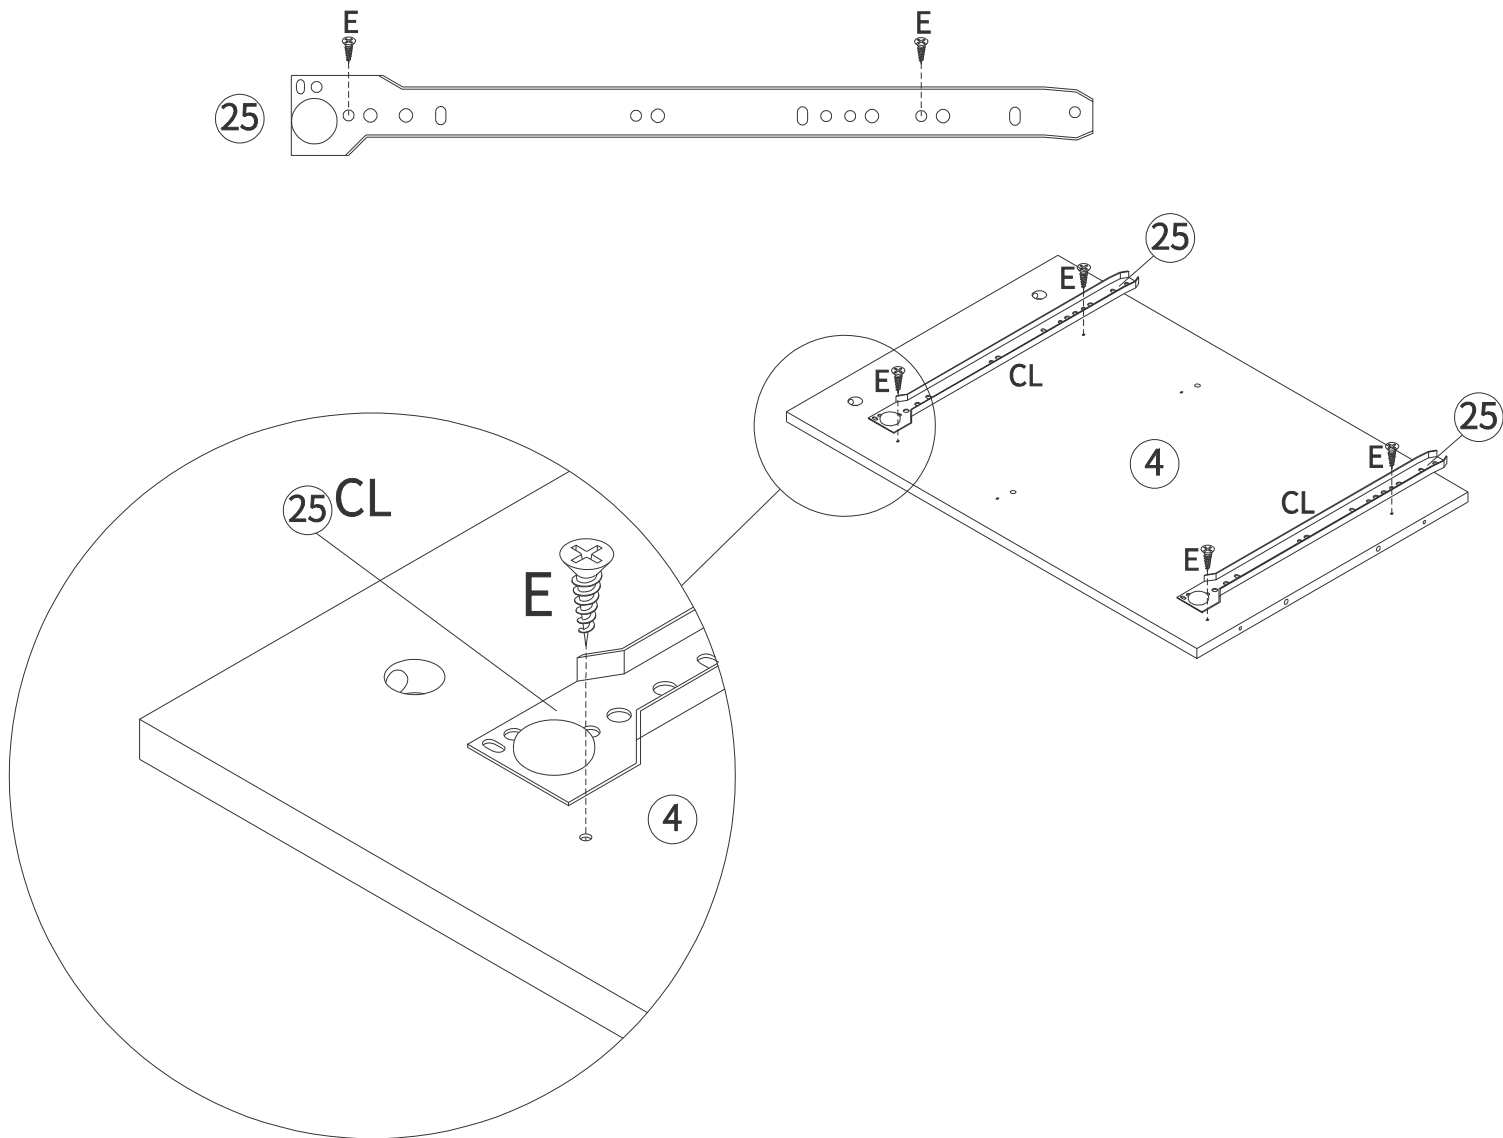

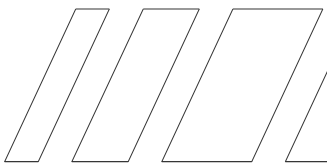




3


D	M5X40	F	Ø6X40
			
4 PCS		4 PCS	

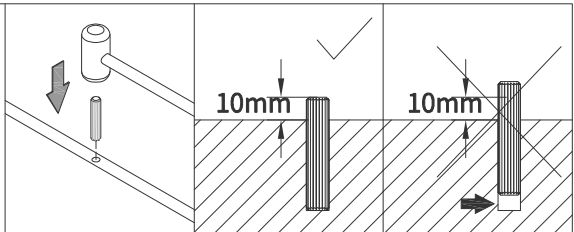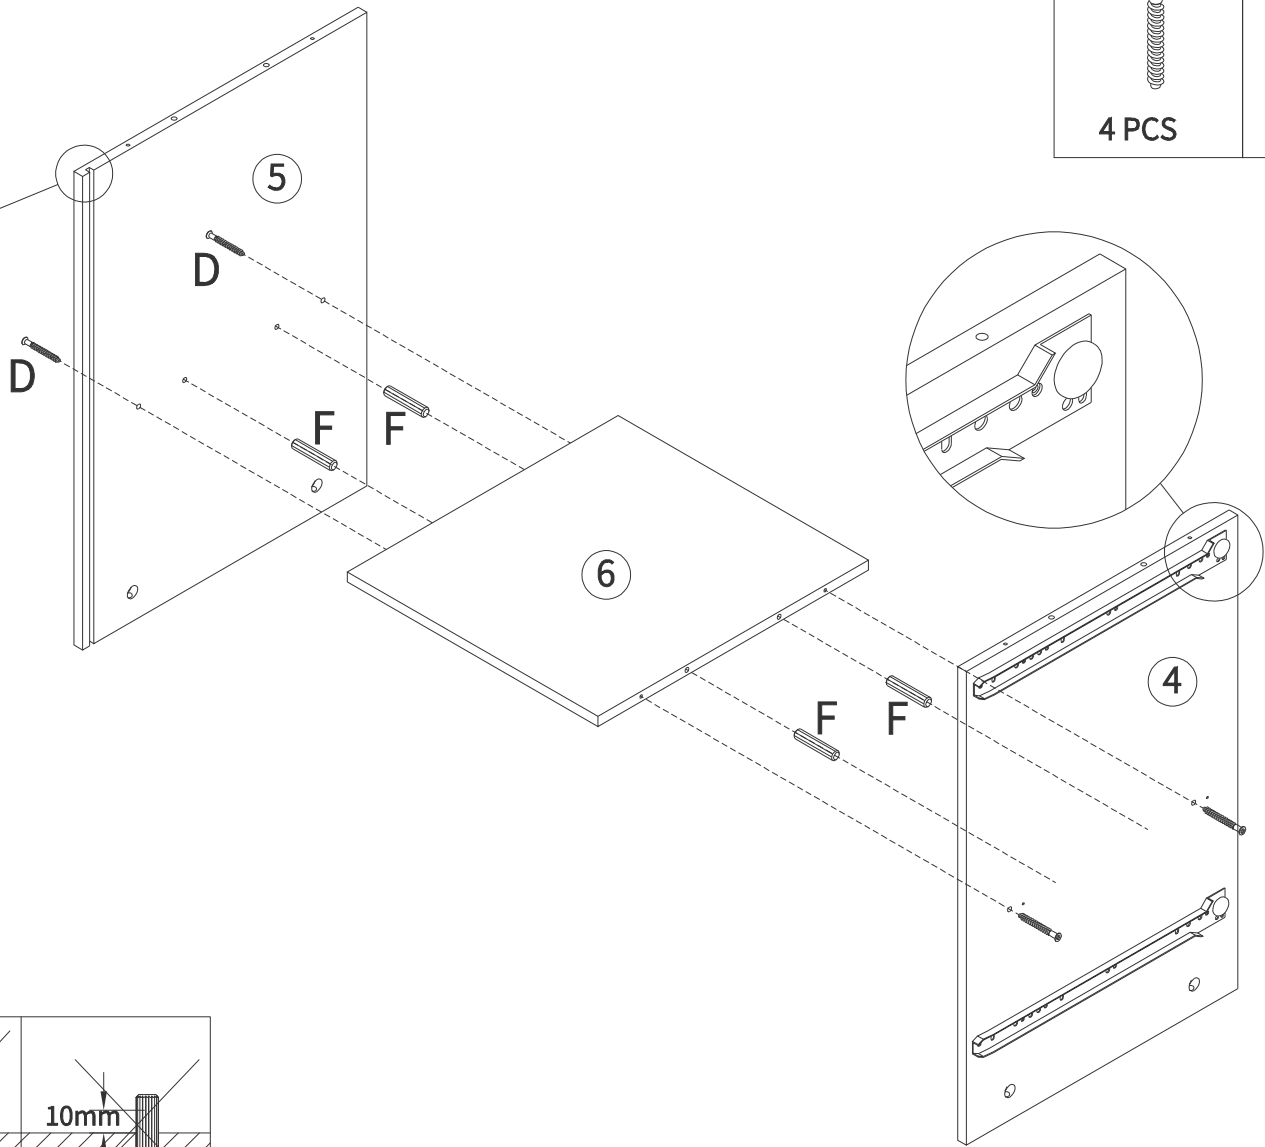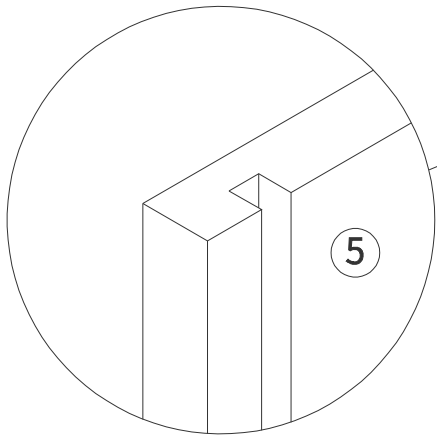


4

E	M3.5X12
	
2 PCS	

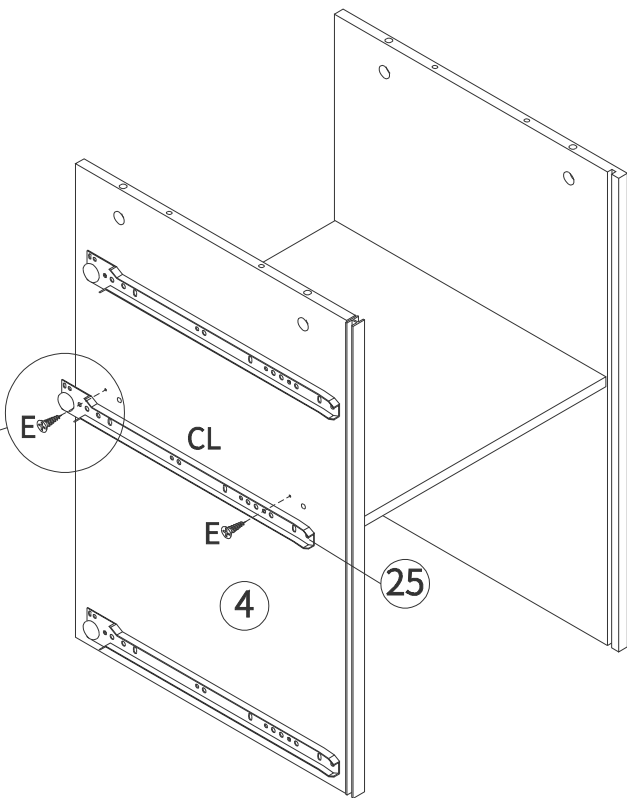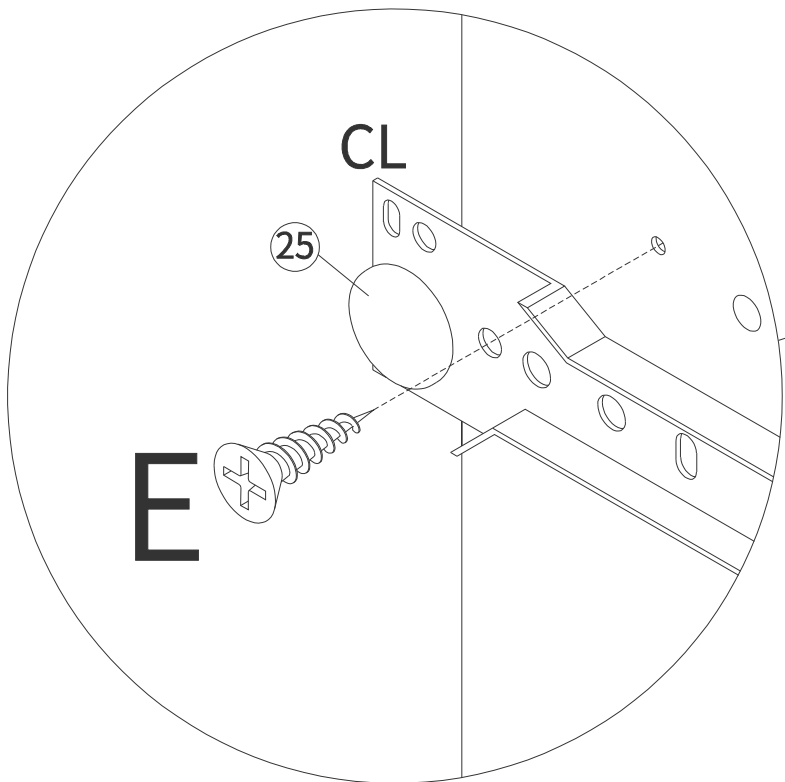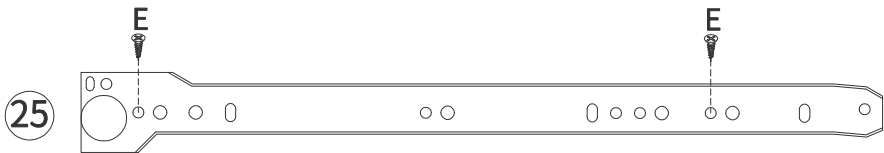


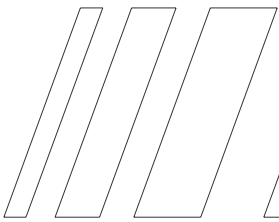


5

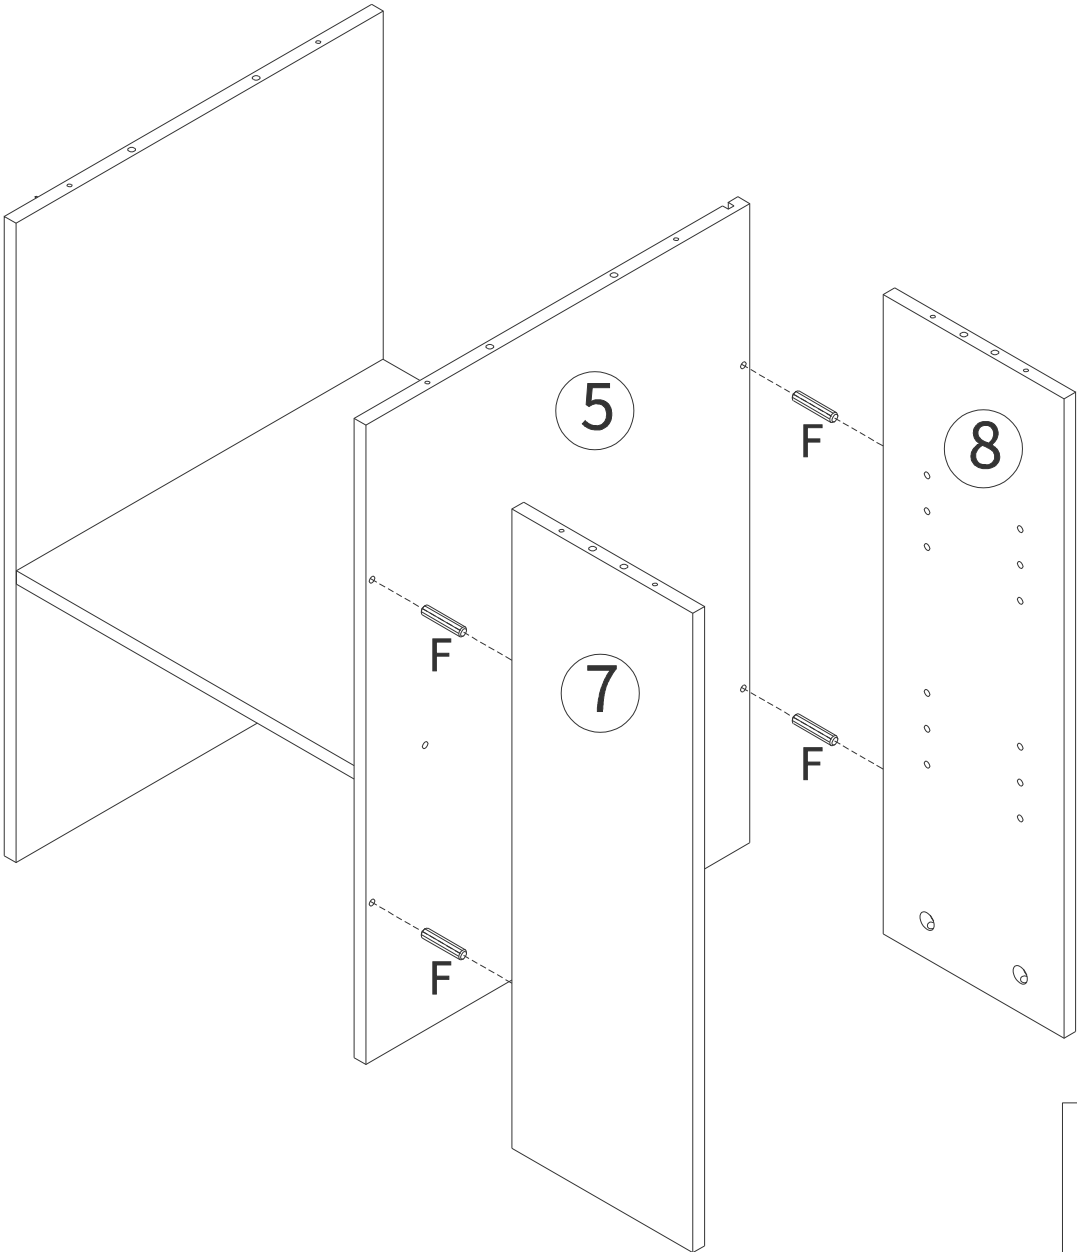


F Ø6X40
4 PCS

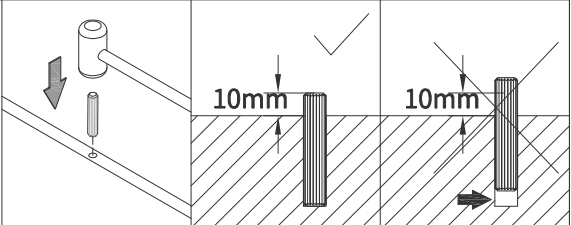


6

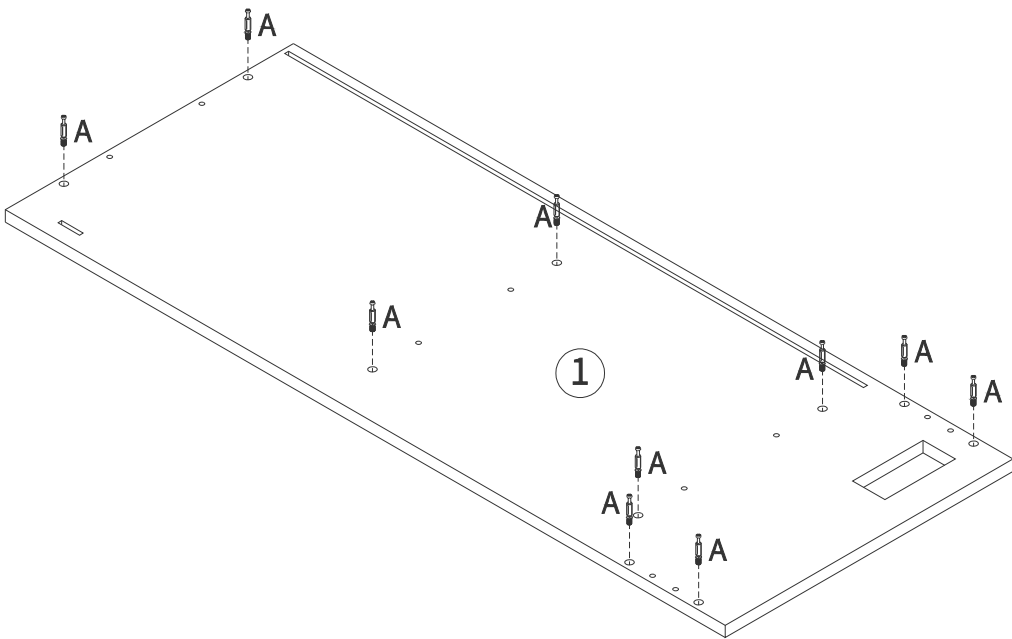




A M6X42
10 PCS

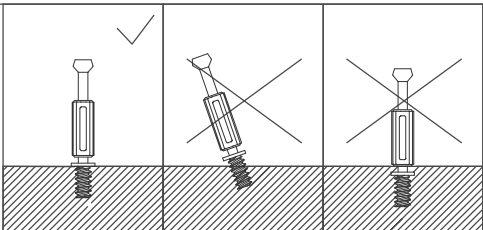


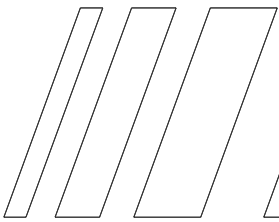


7

B Ø15X10	F Ø6X40
	
10 PCS	10 PCS

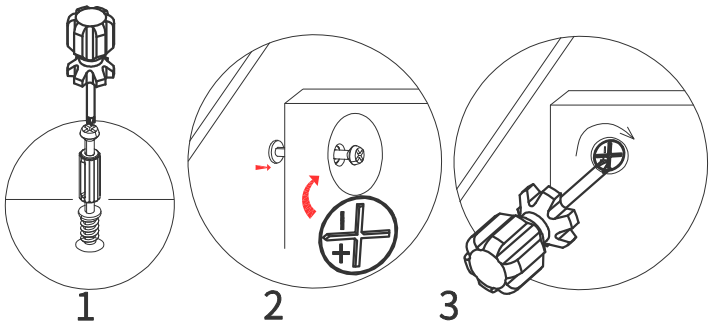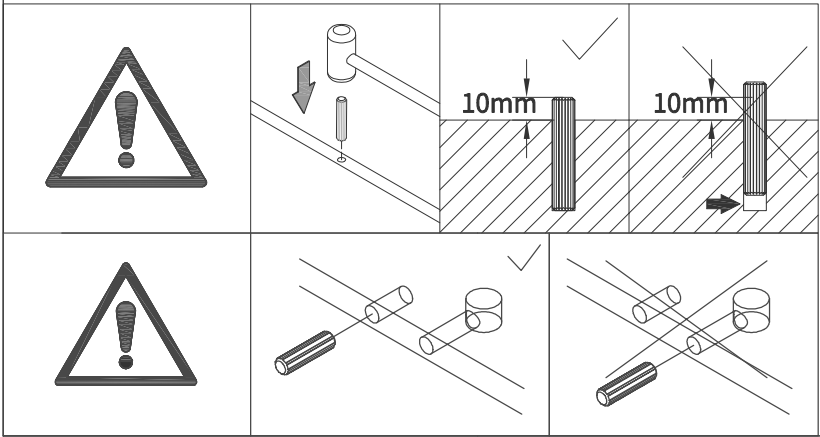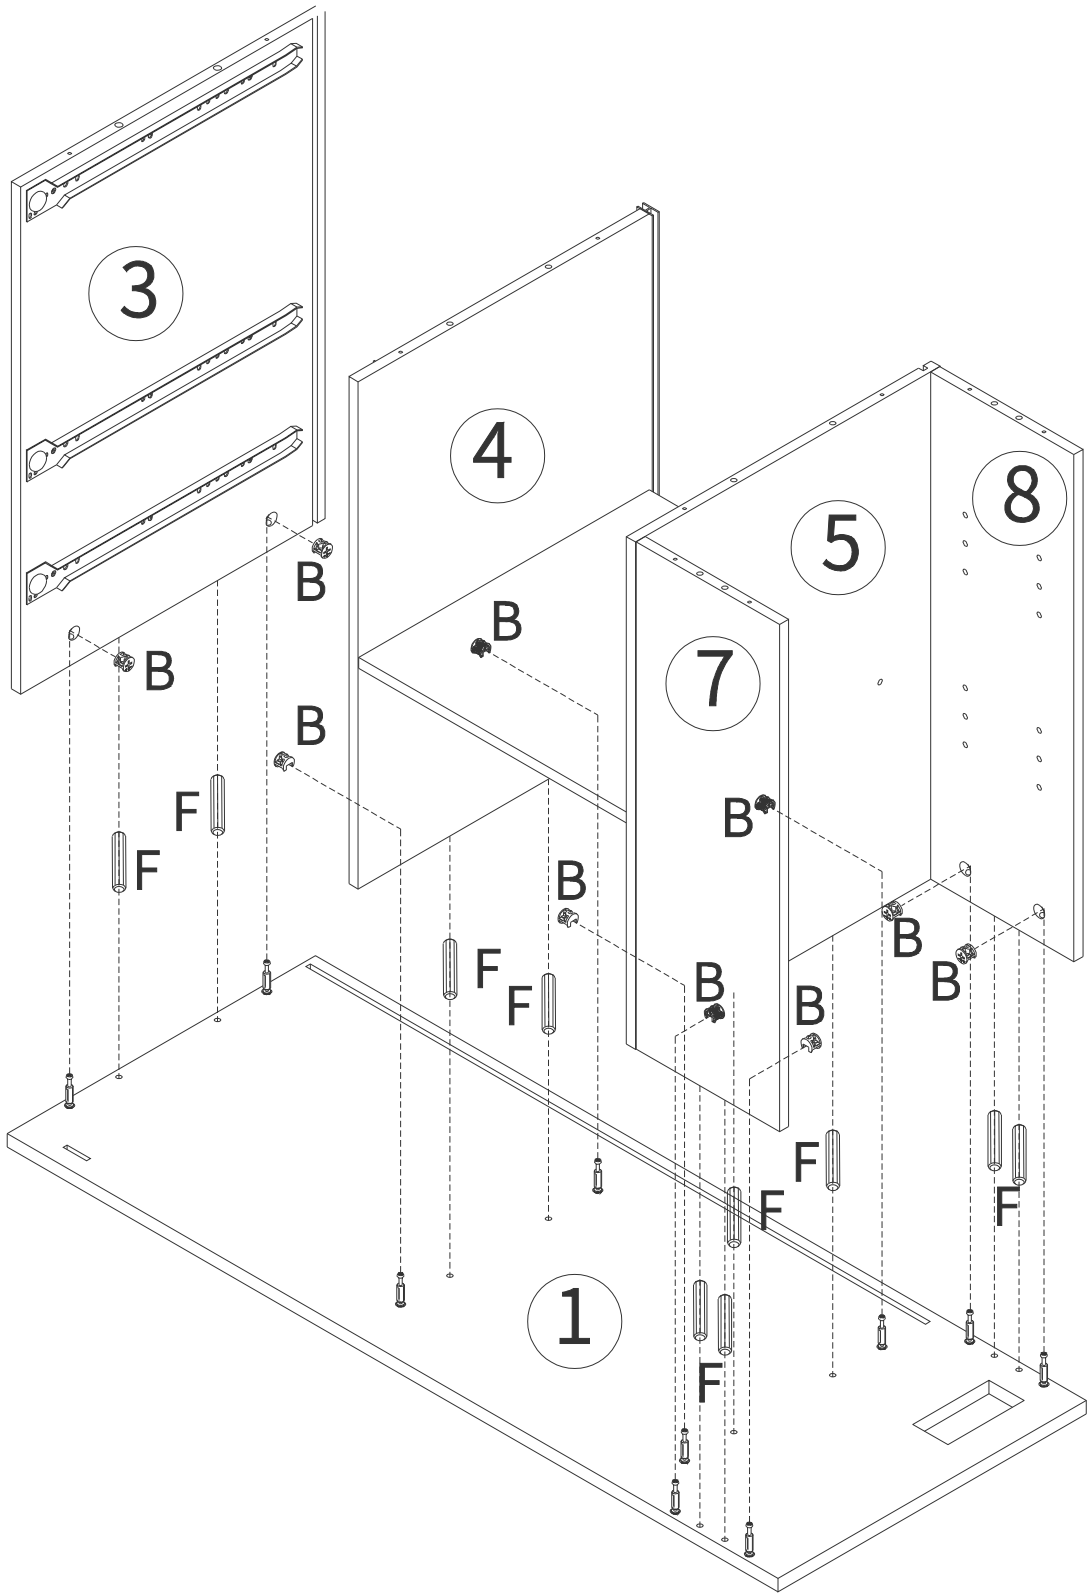


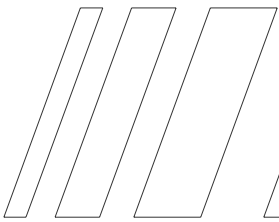


8

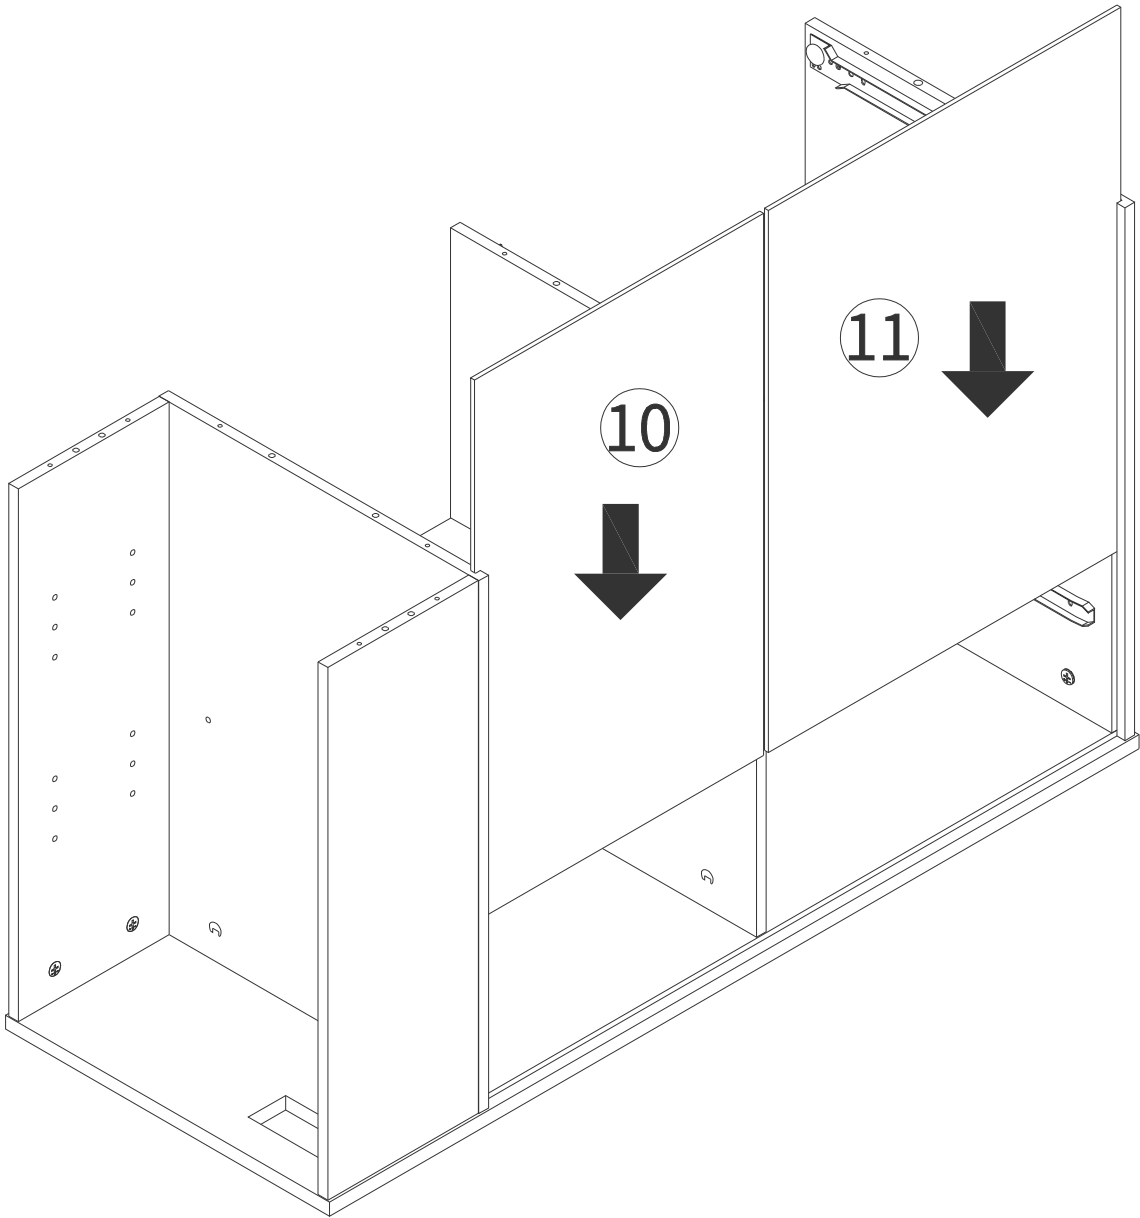



9

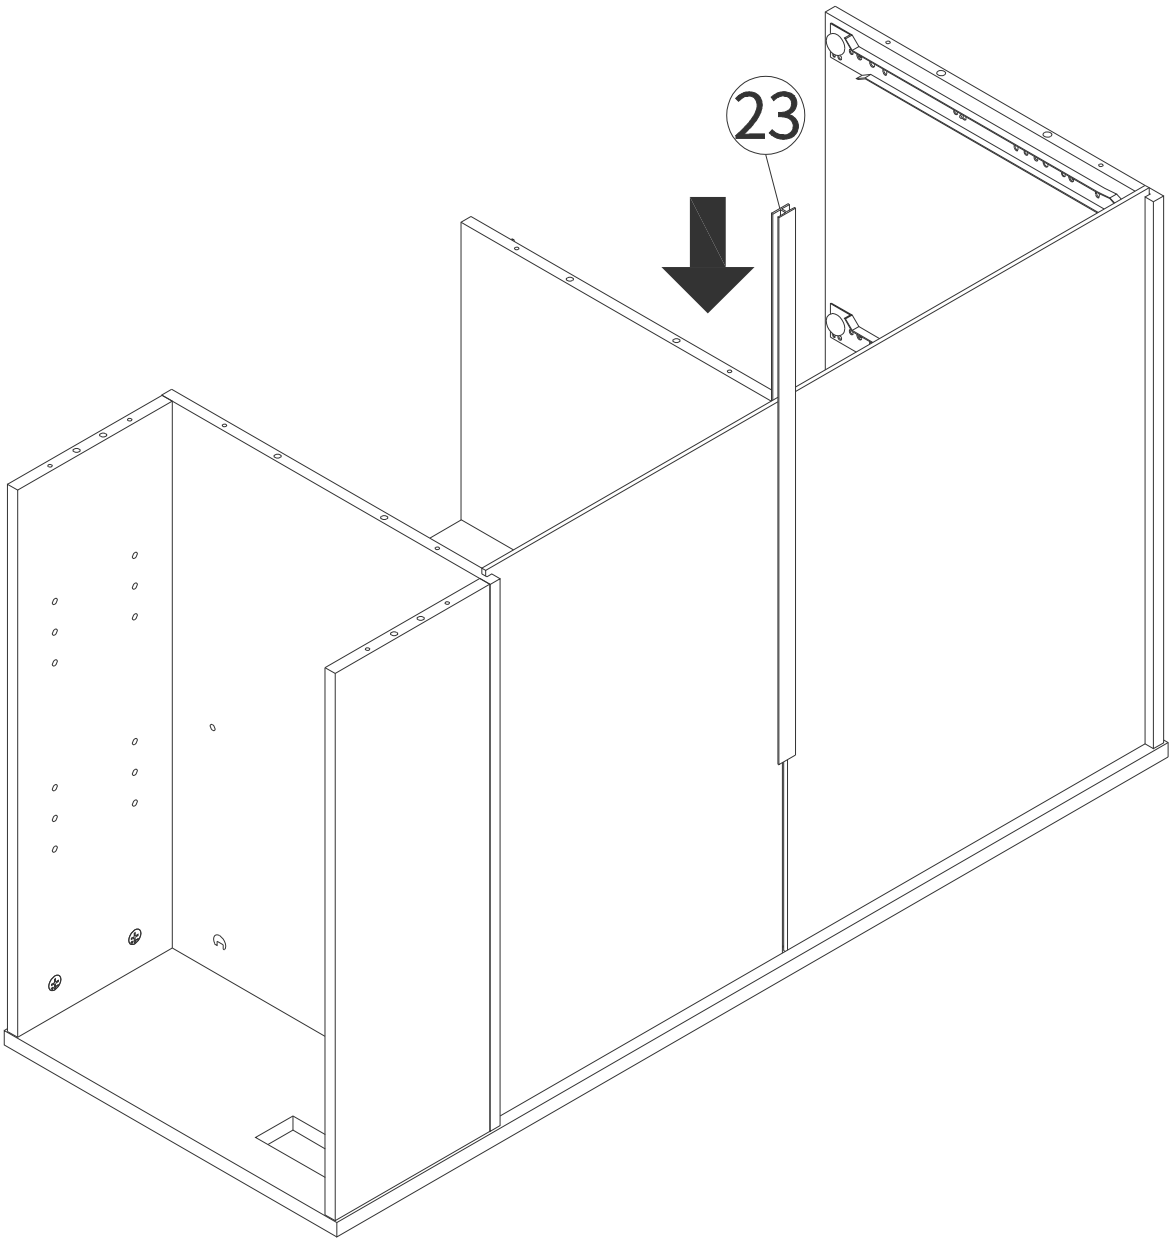


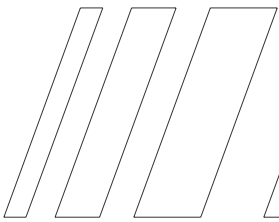

10


D	M5X40	F	Ø6X40
			
10 PCS		10 PCS	

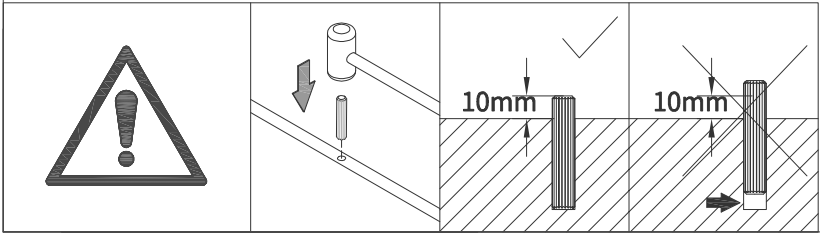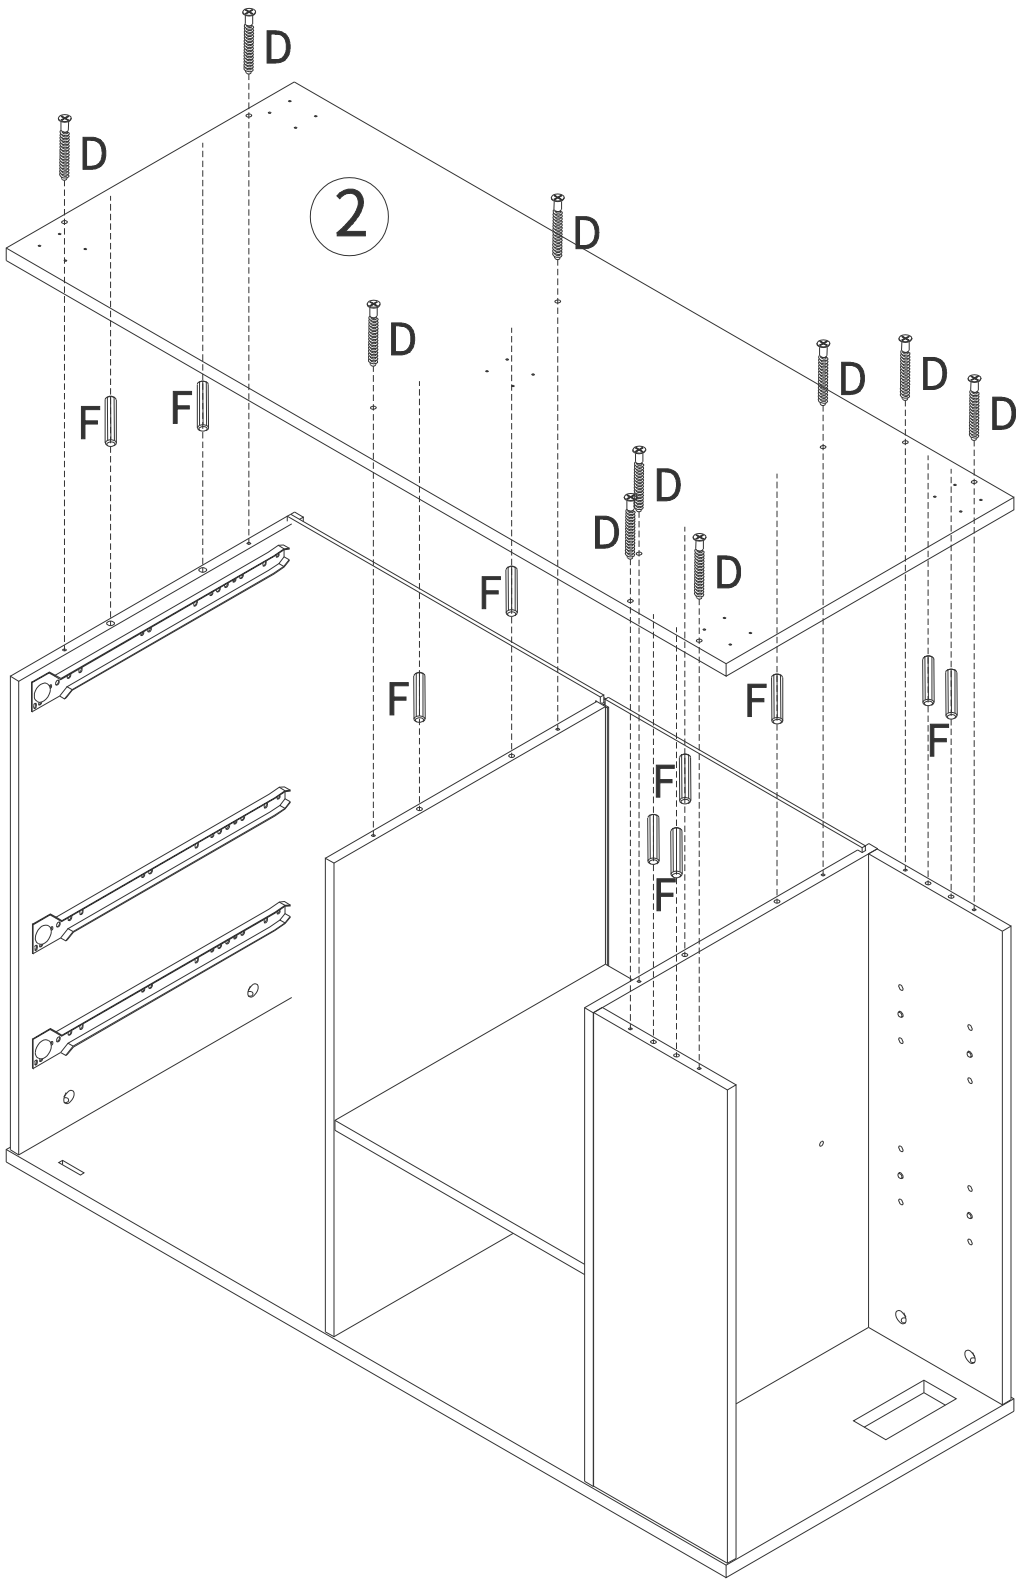



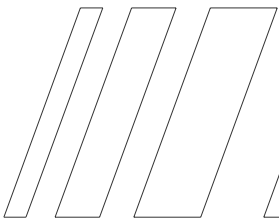


11


These two wheels have brakes.

E M3.5X12	K
	
32 PCS	12 PCS


The lockable casters must be installed on the same side.

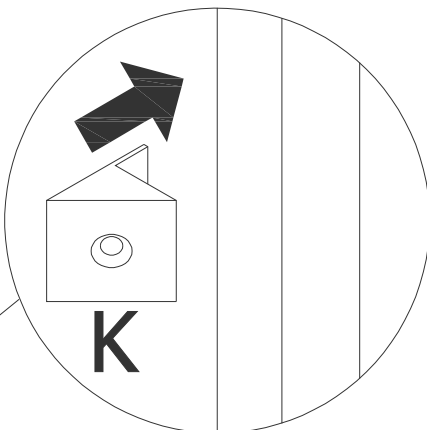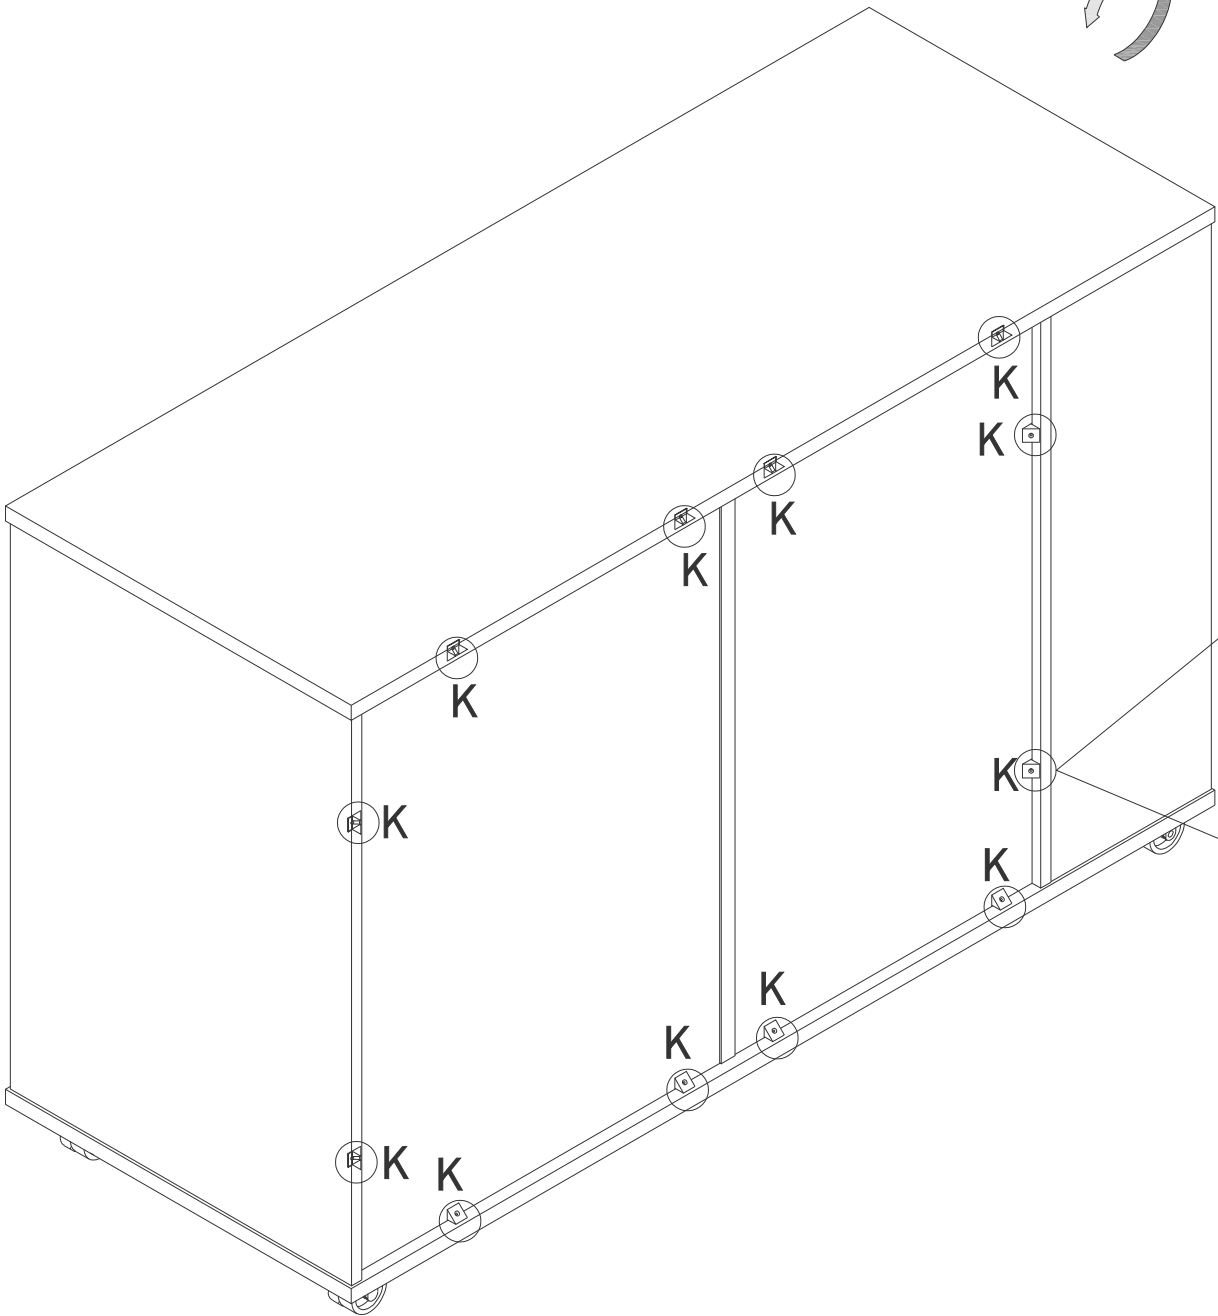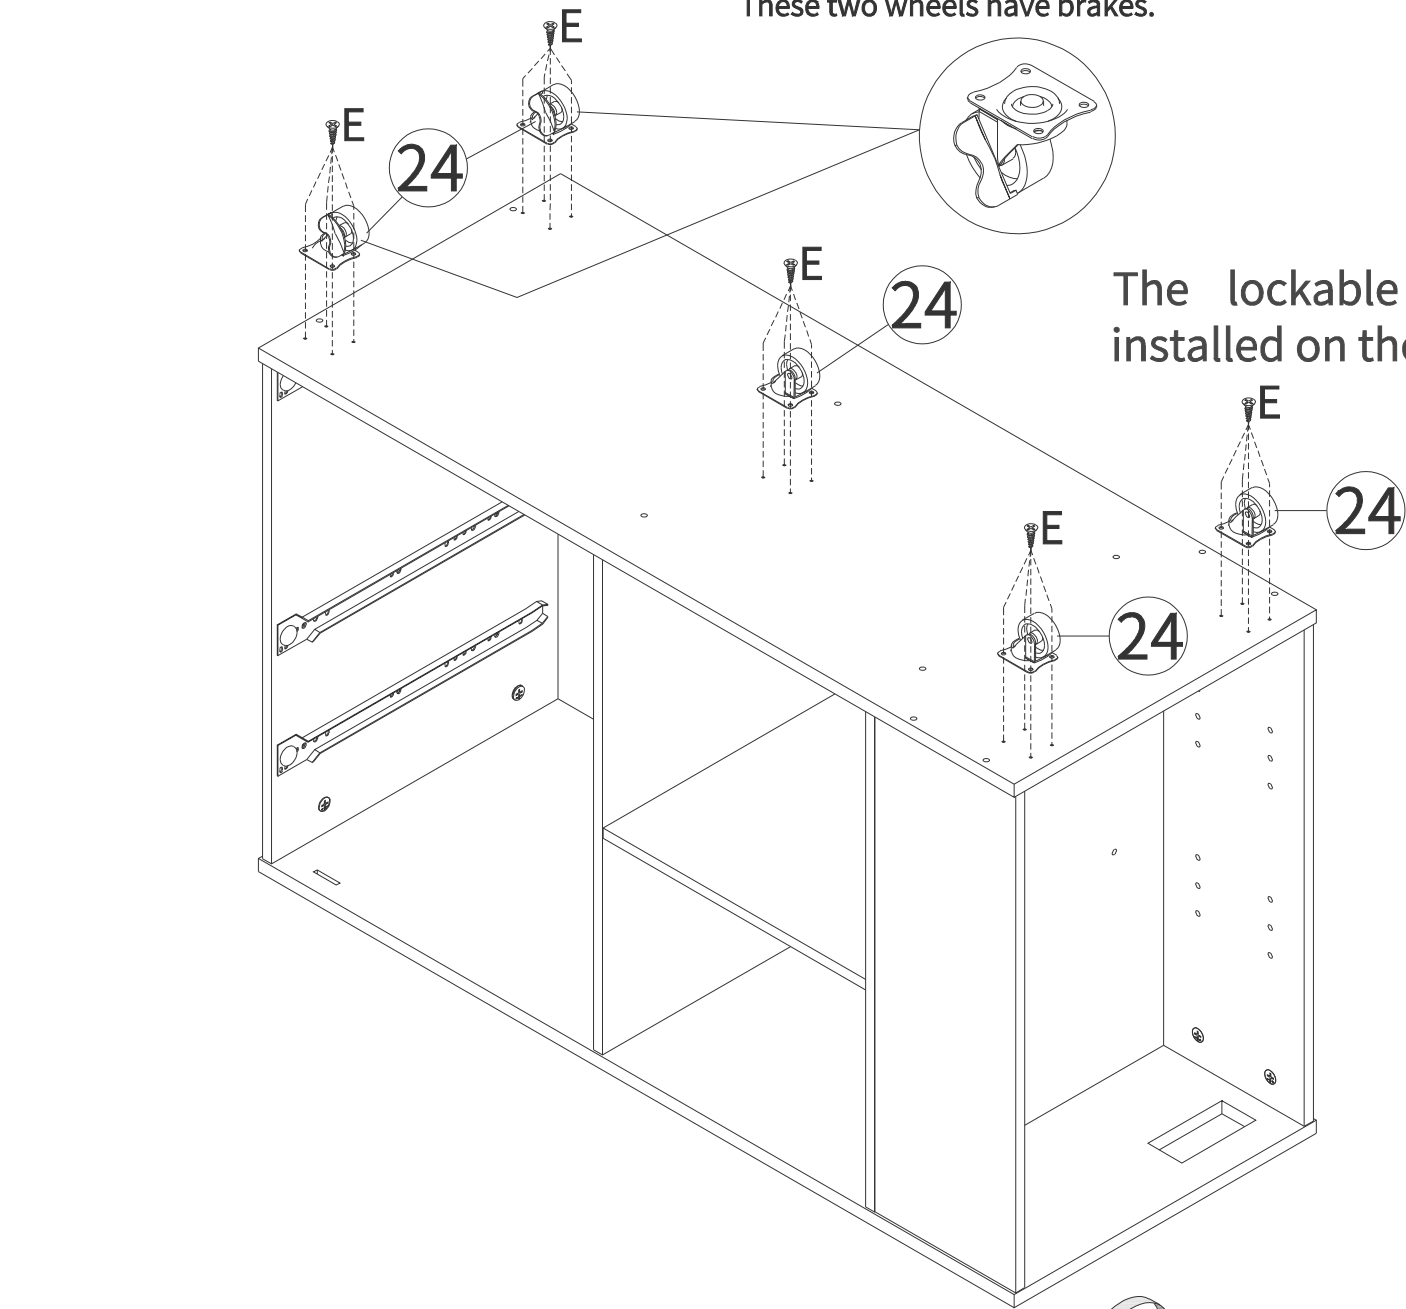


Step 1

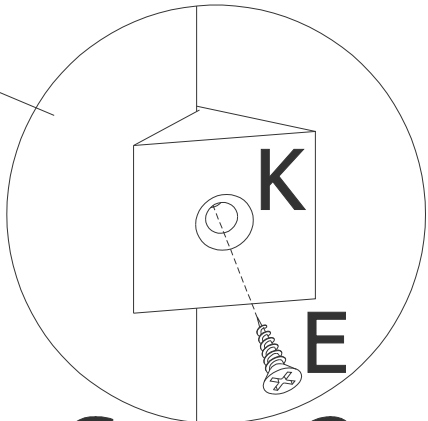



Step 2

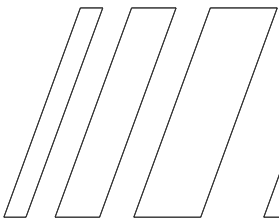


12

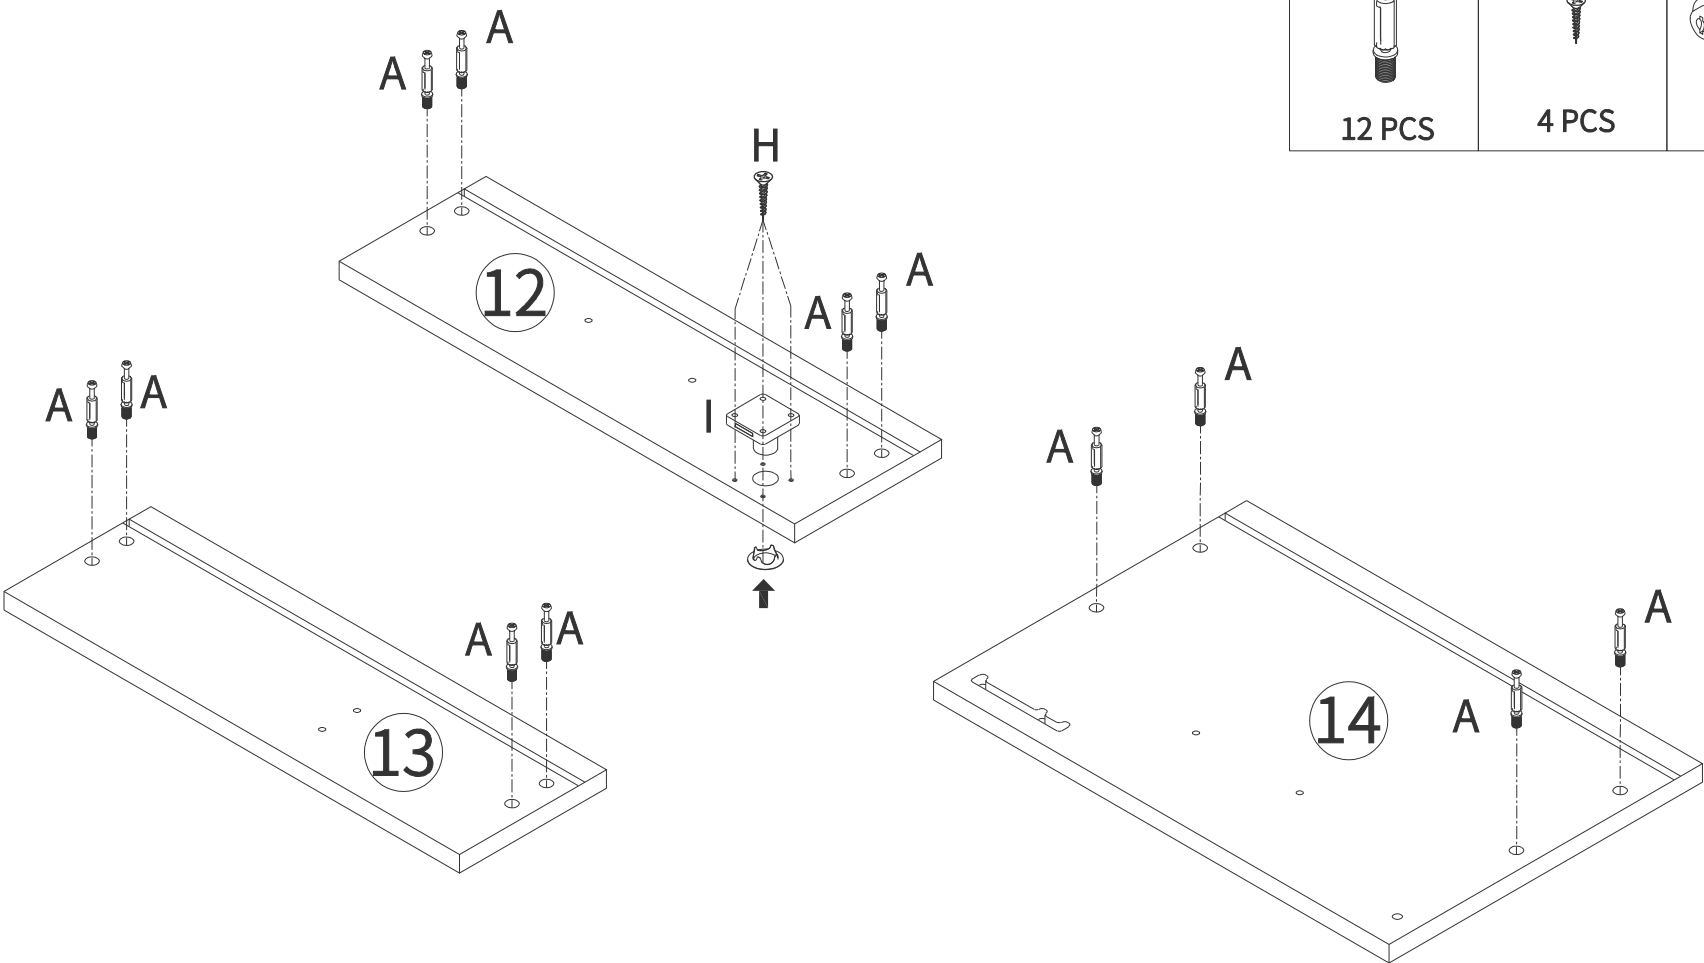

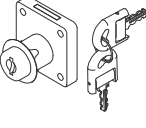
A M6X42	H M3X18	I
		
12 PCS	4 PCS	1 PCS

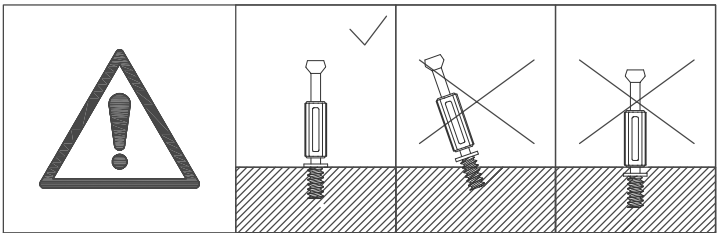


13

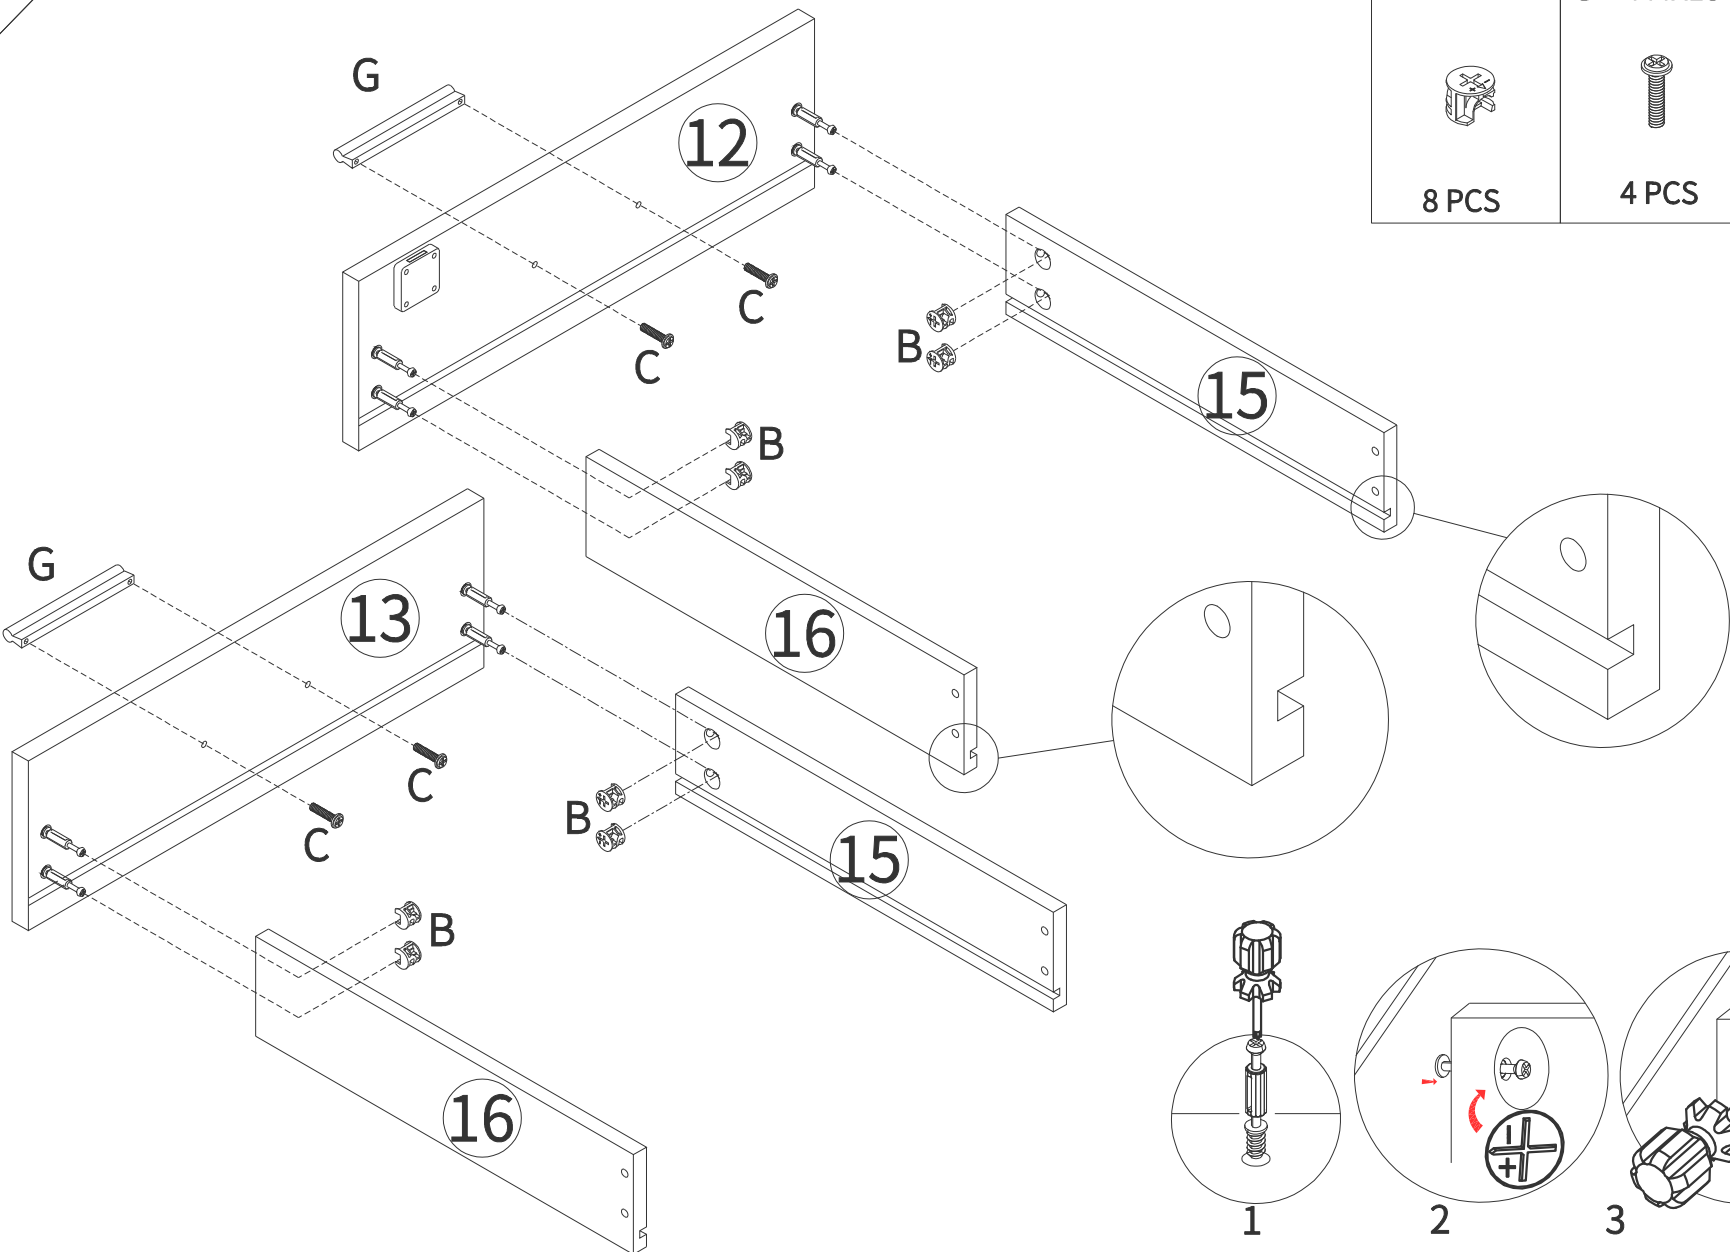


B Ø15X10	C M4X18	G
		
8 PCS	4 PCS	2 PCS

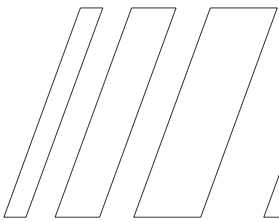


14

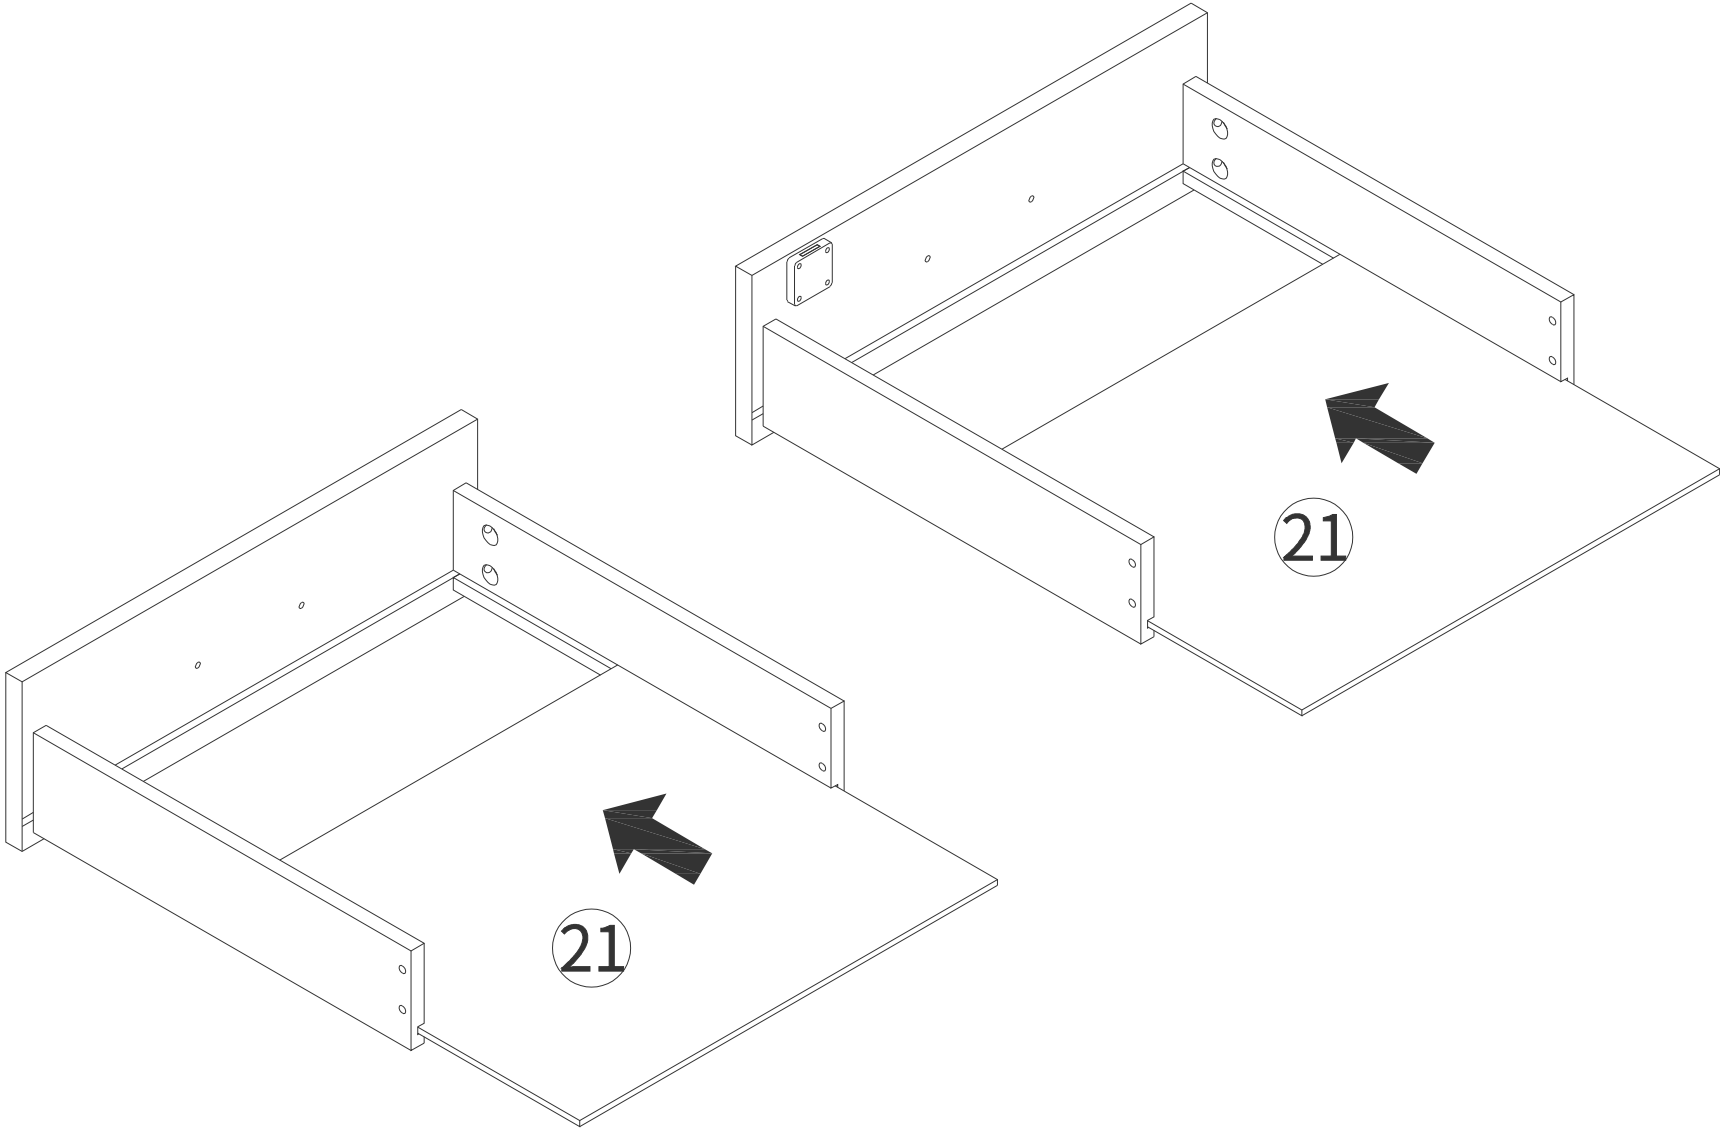


15

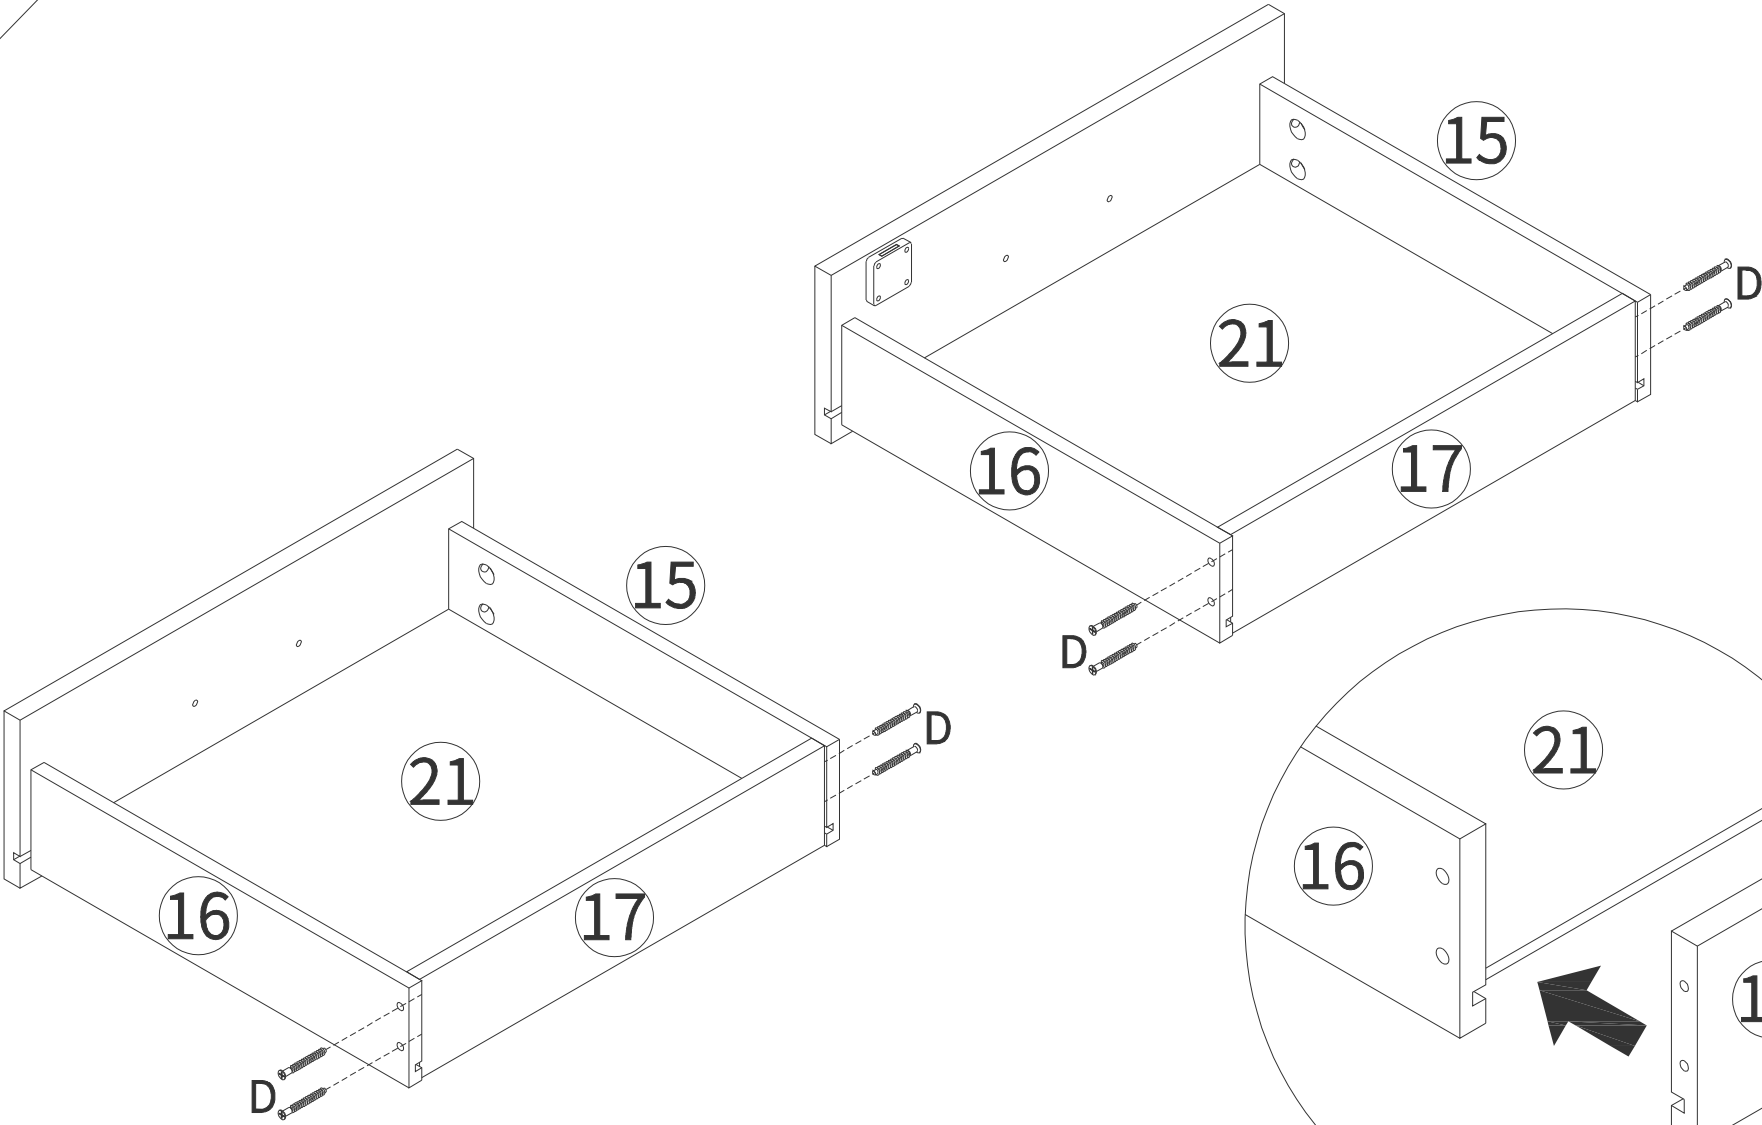

D M5X40
8 PCS

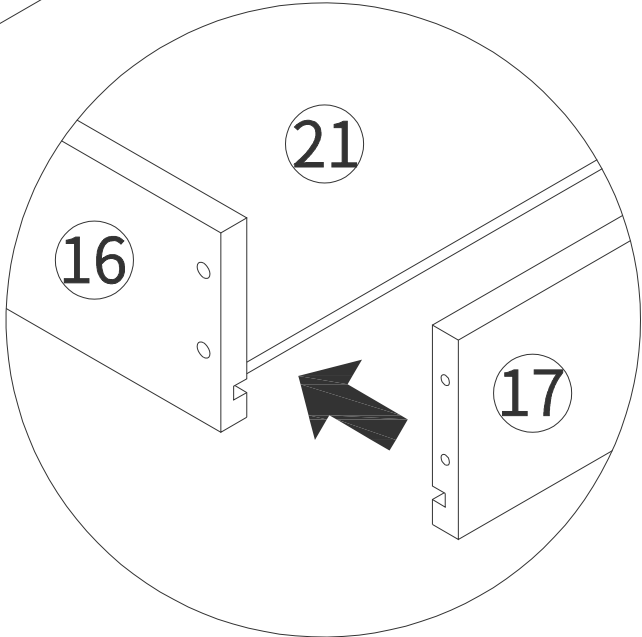

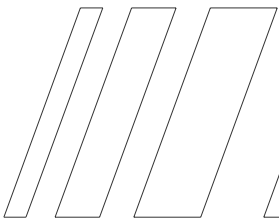


16

E M3.5X12



8 PCS

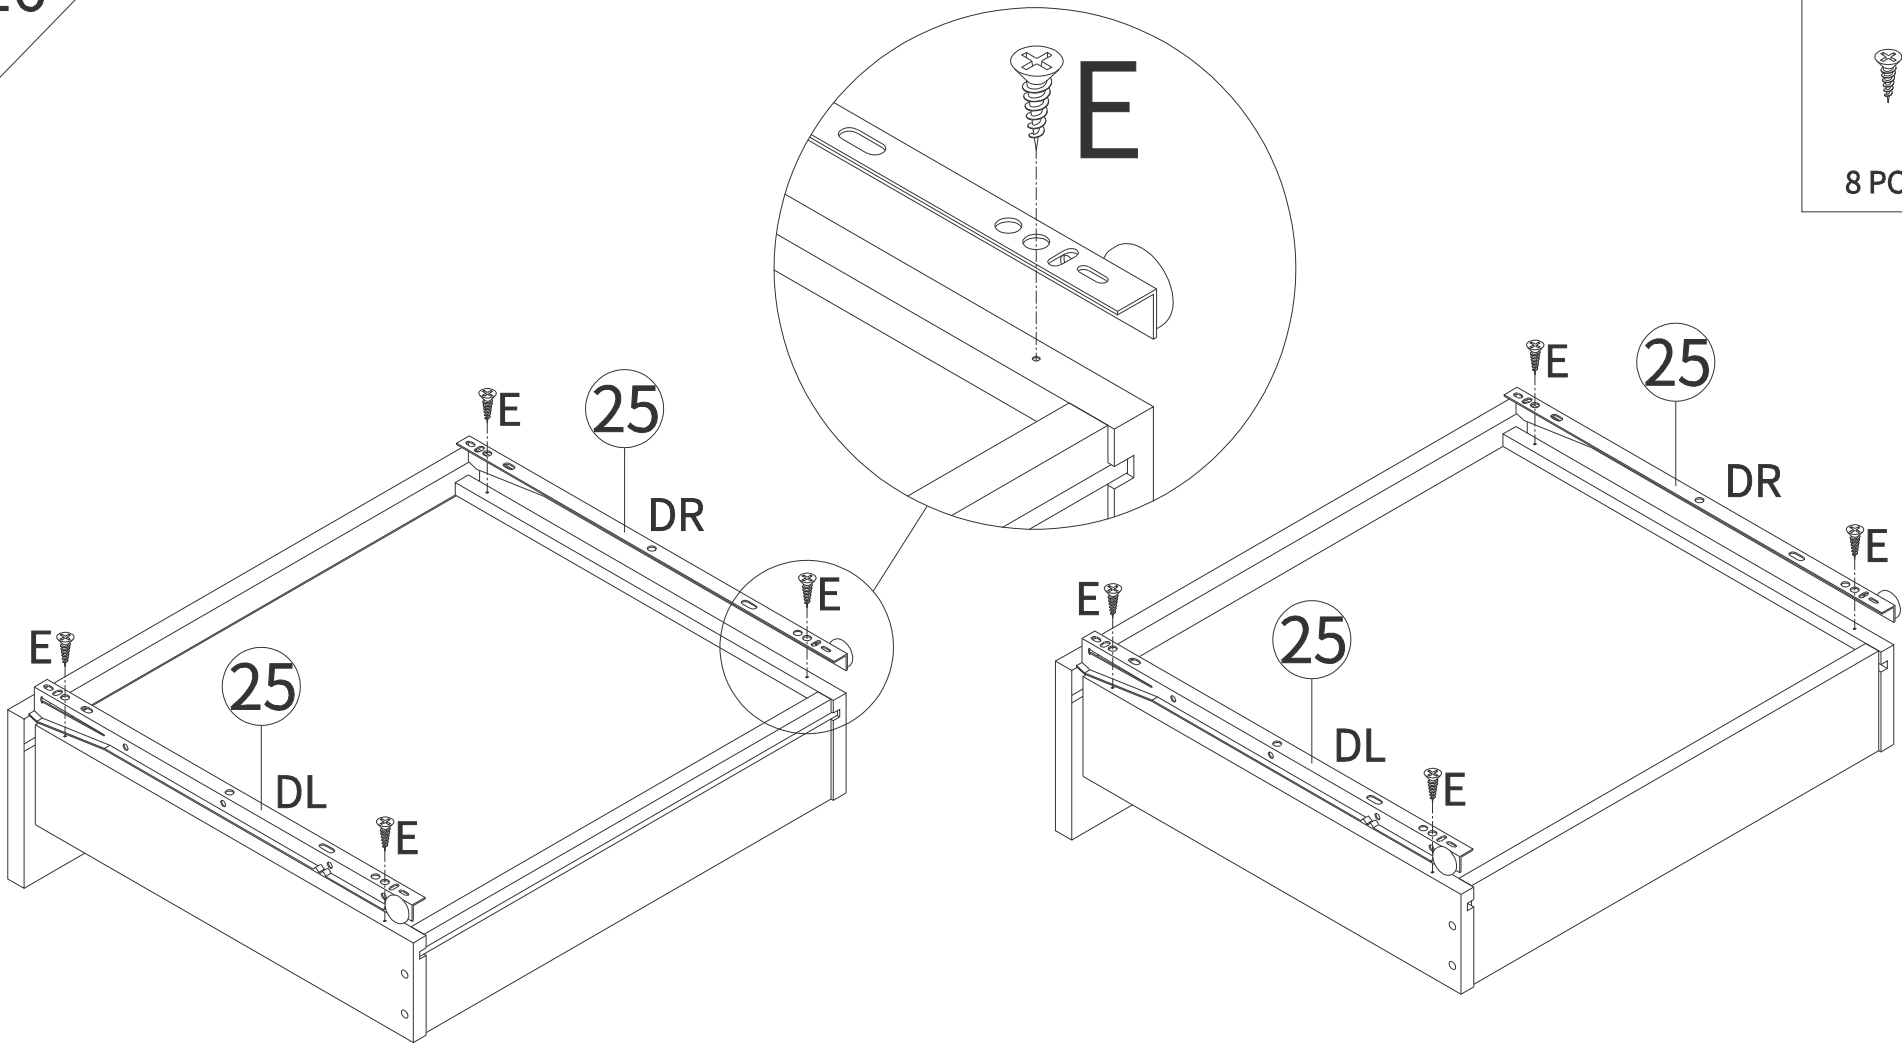

17

B Ø15X10




4 PCS

C M4X18





2 PCS

G




1 PCS

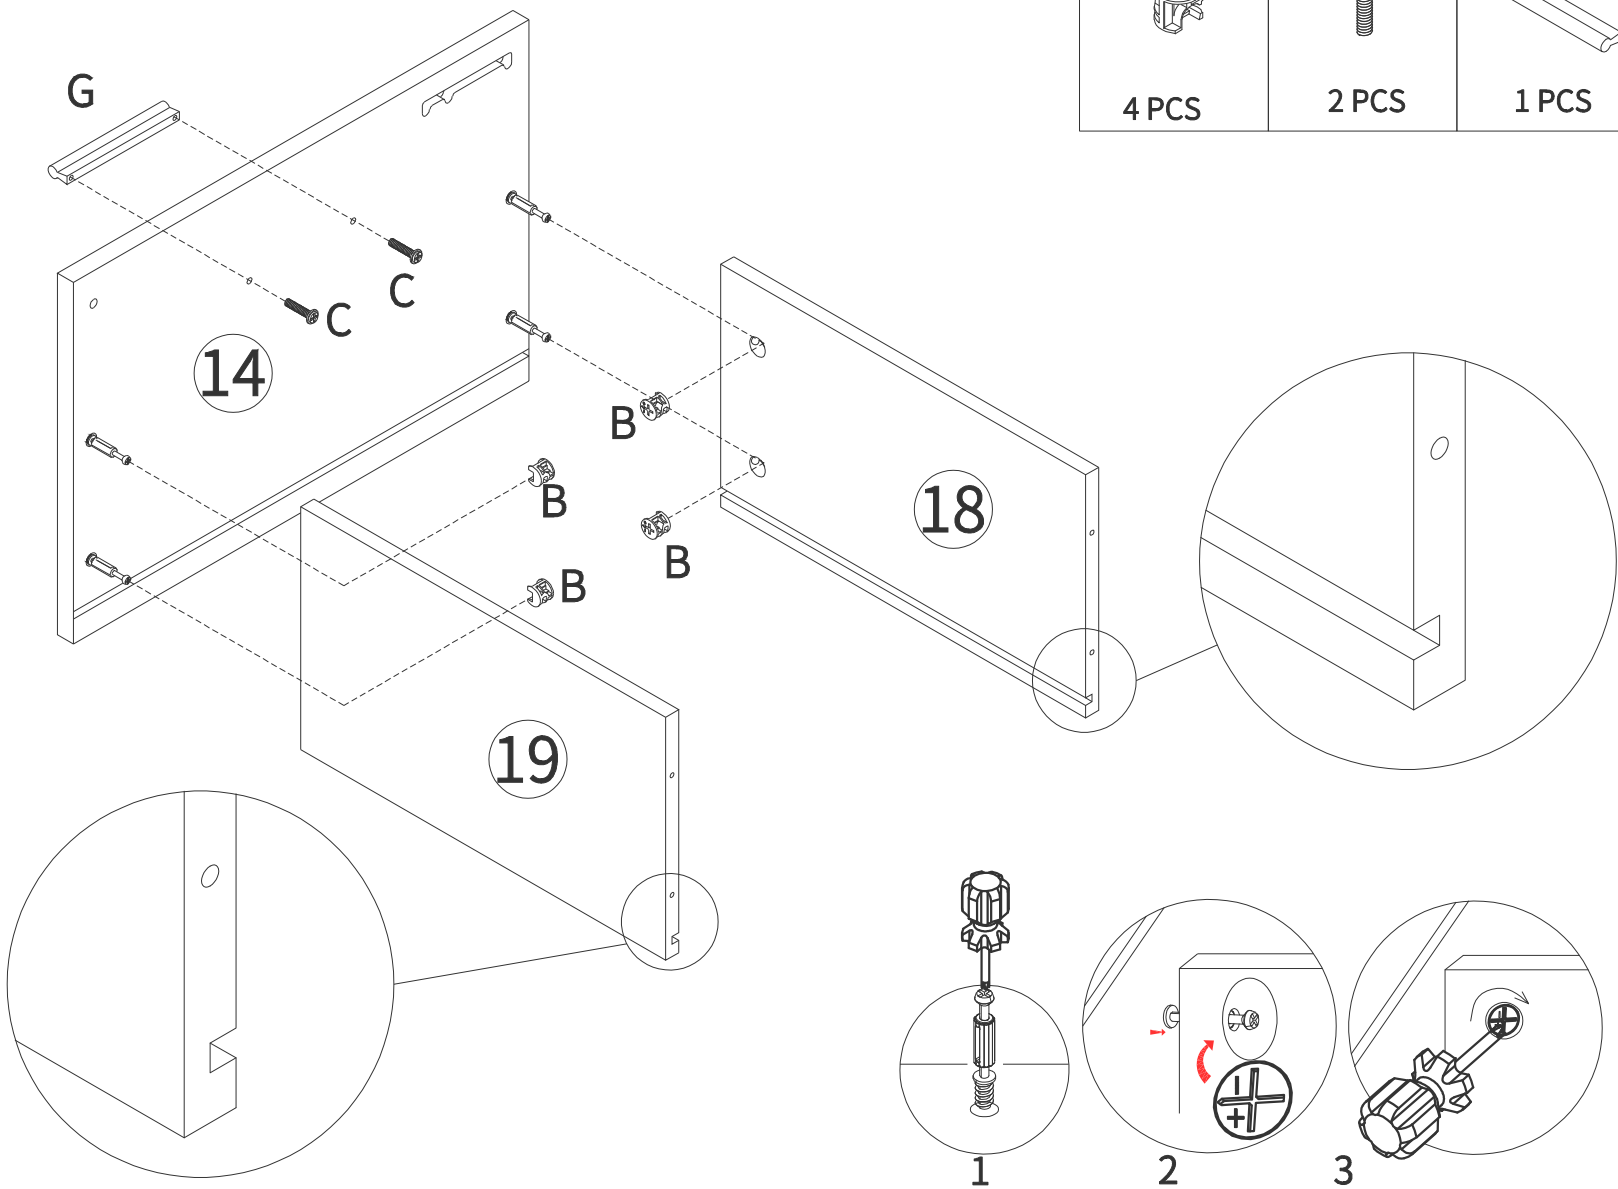

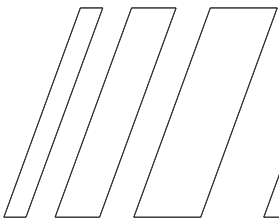

18

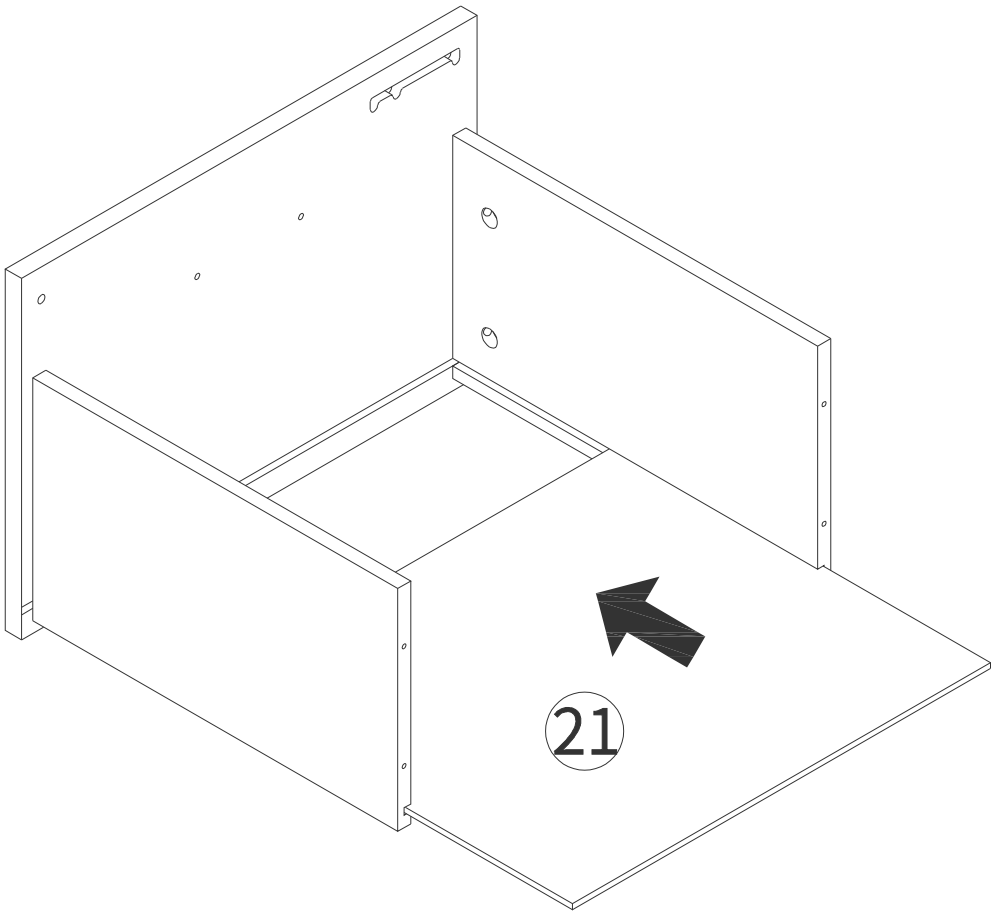



19

D M5X40



4 PCS

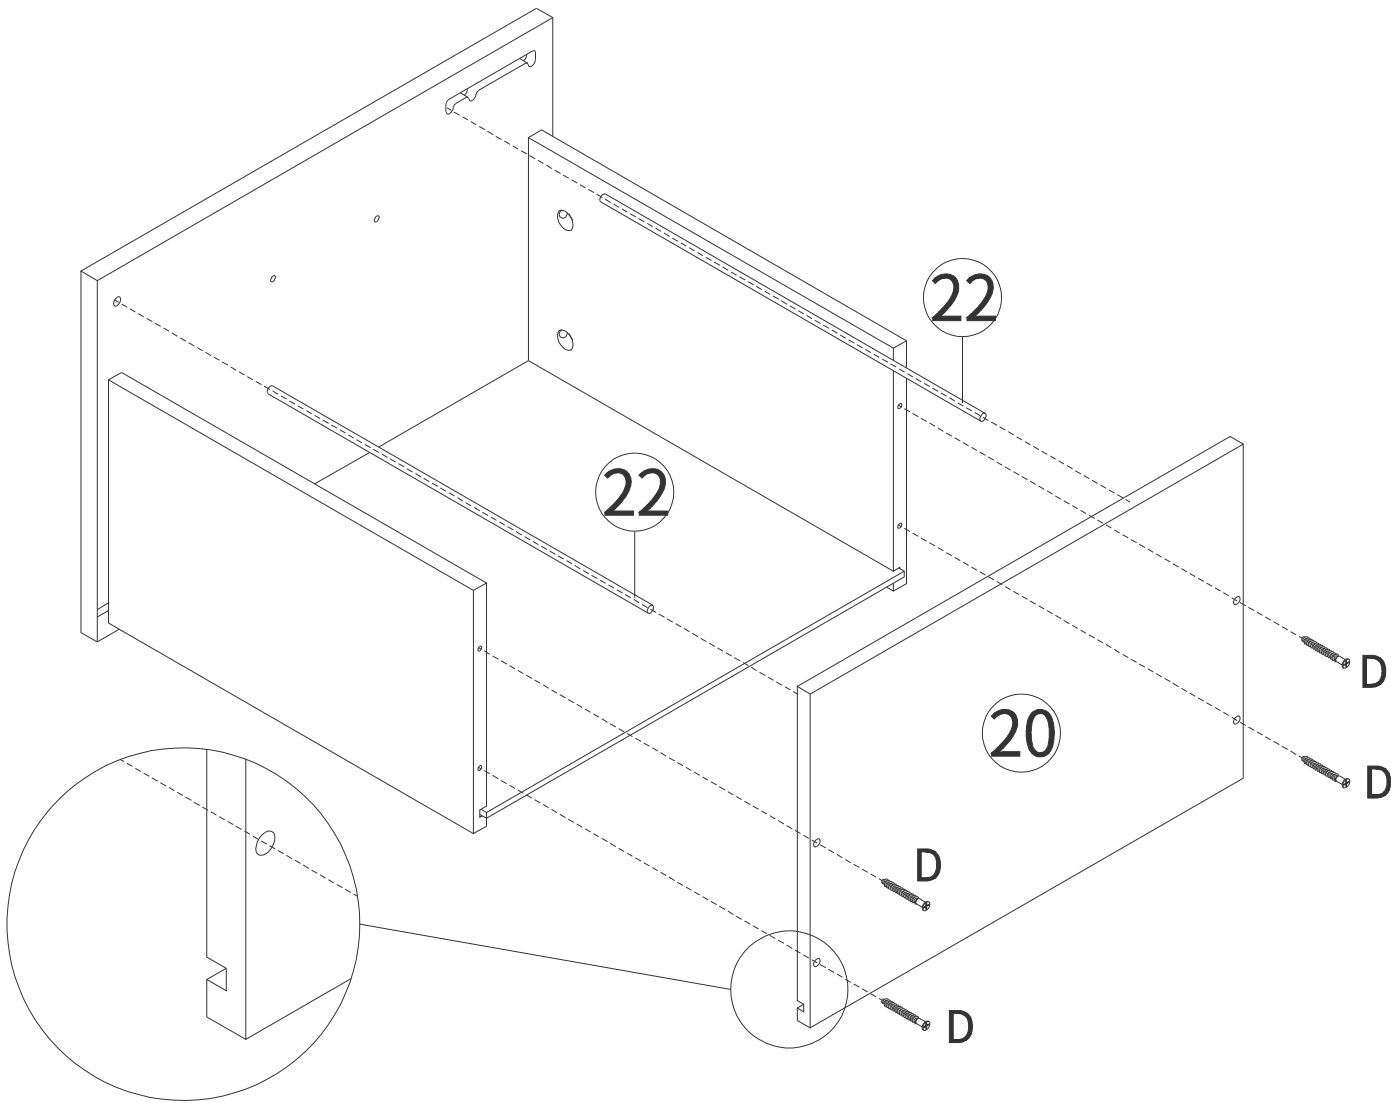

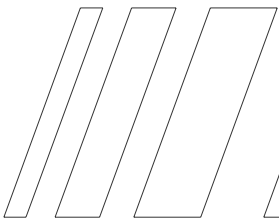


20


E M3.5X12




4 PCS

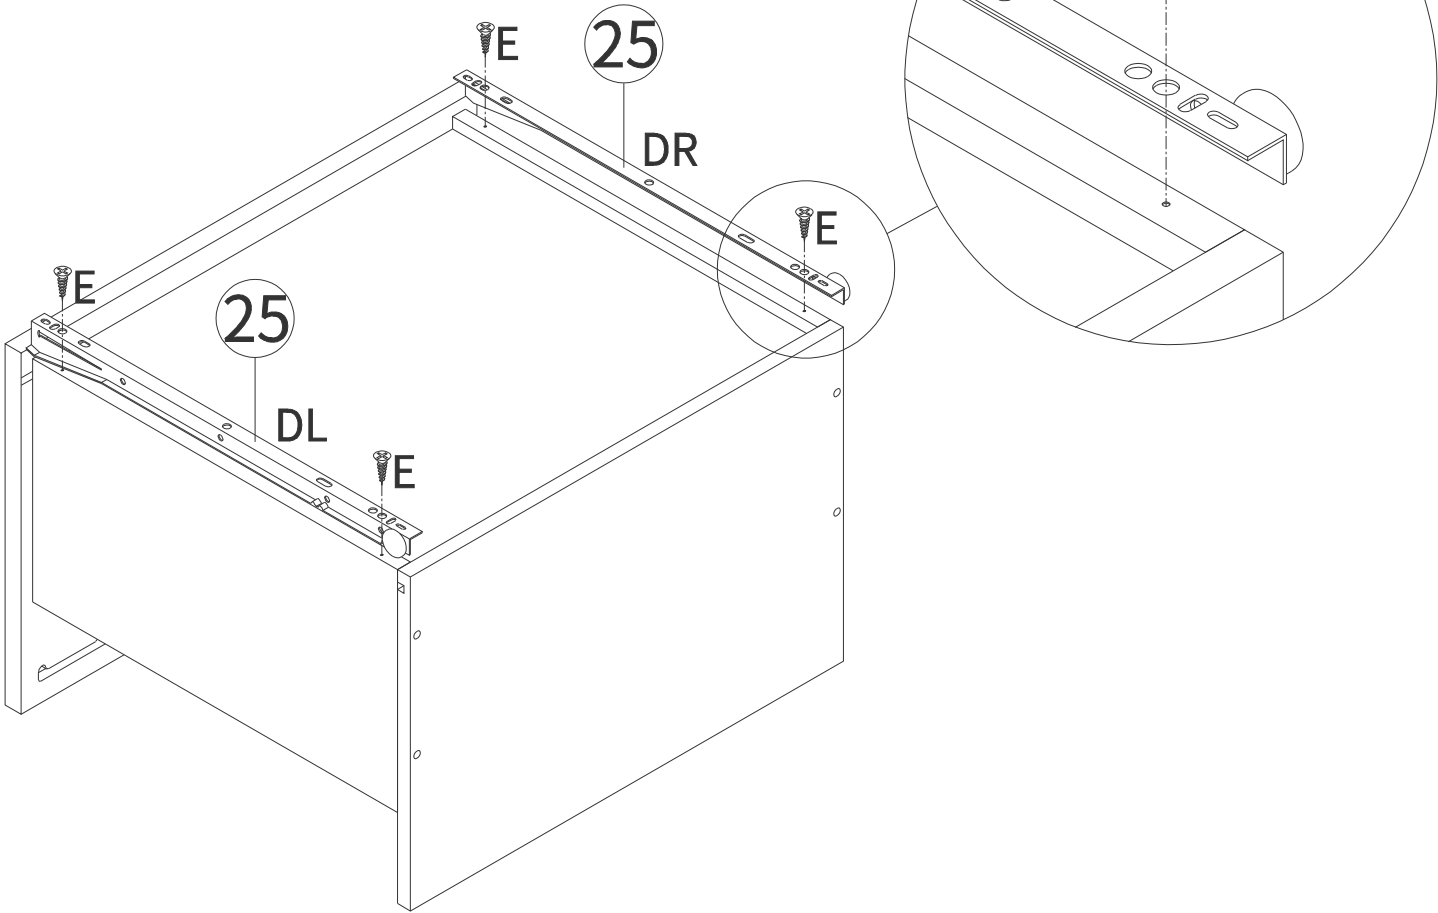


21

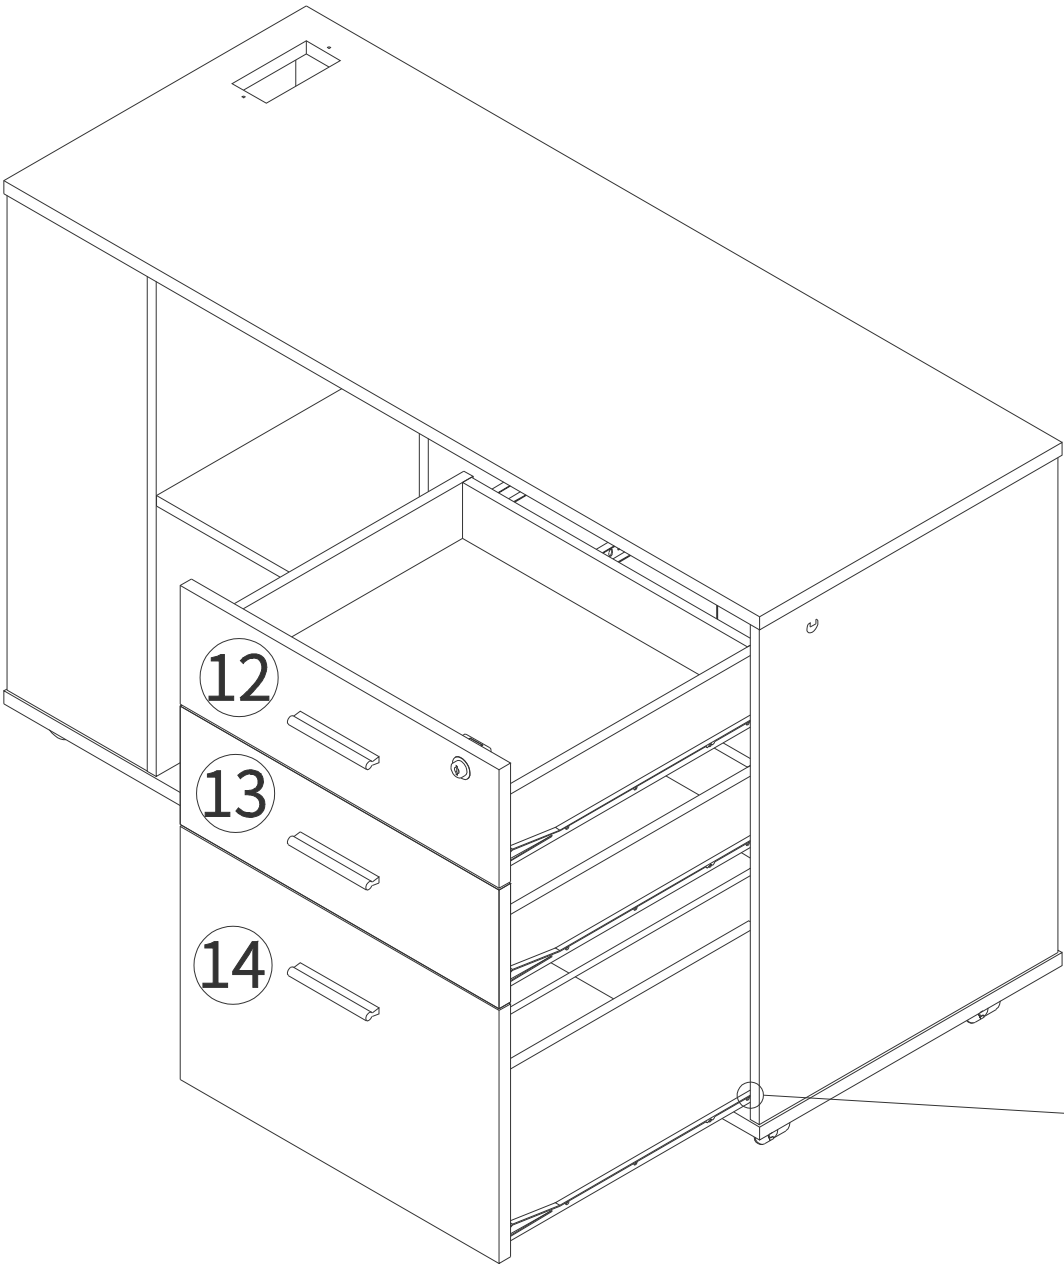

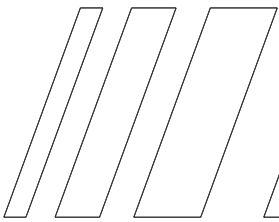


22

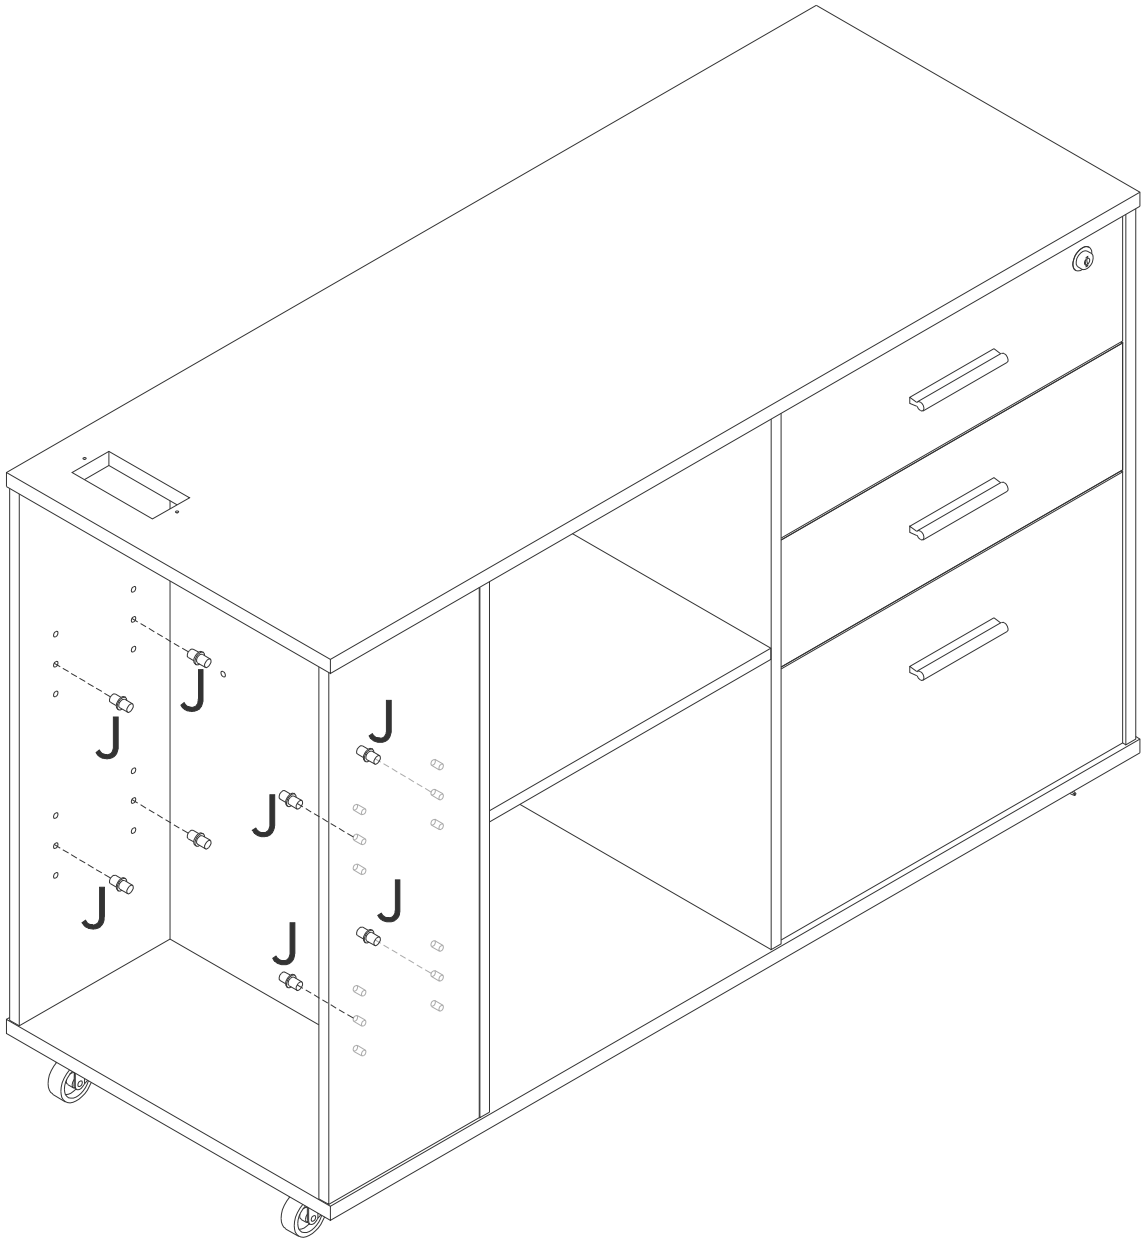



J




8 PCS

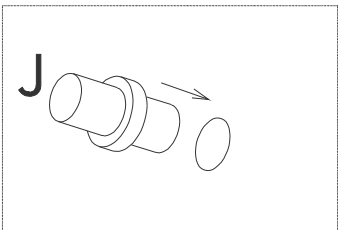

23

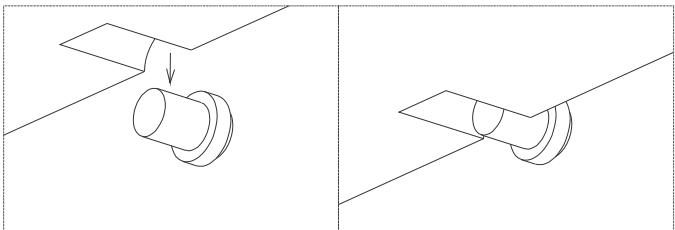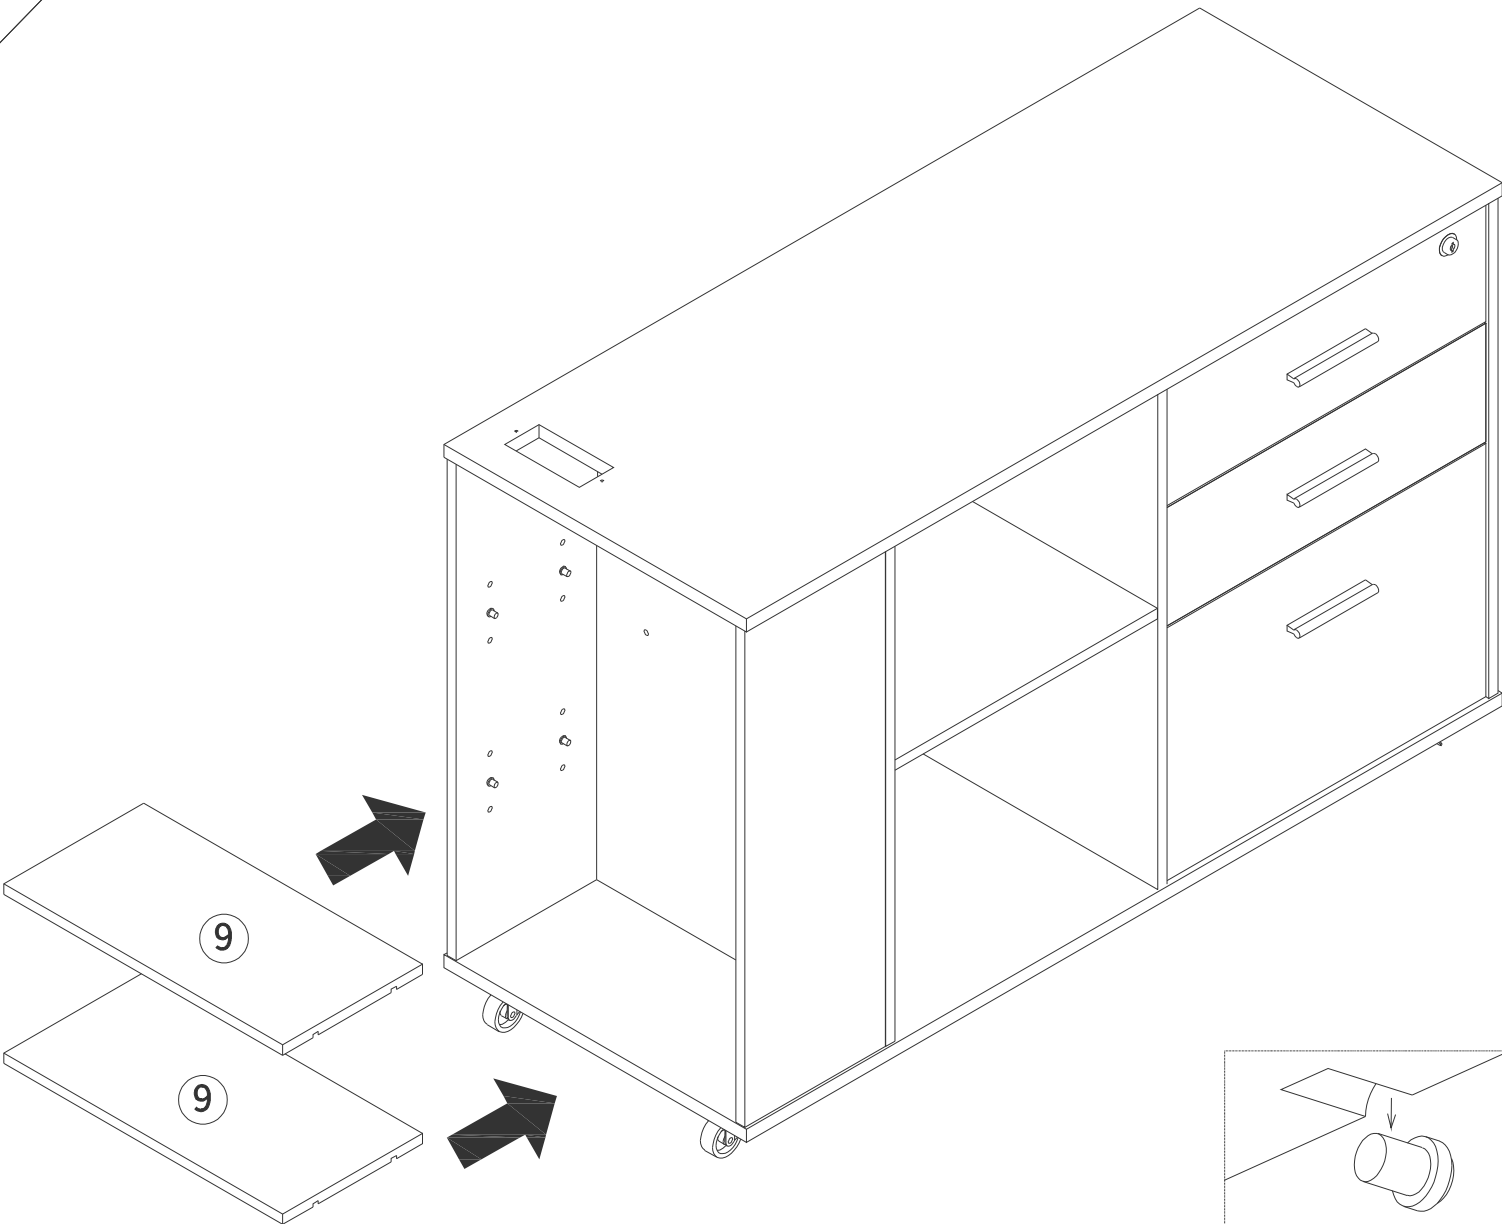

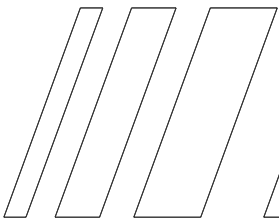



24

E M3.5X12




2 PCS

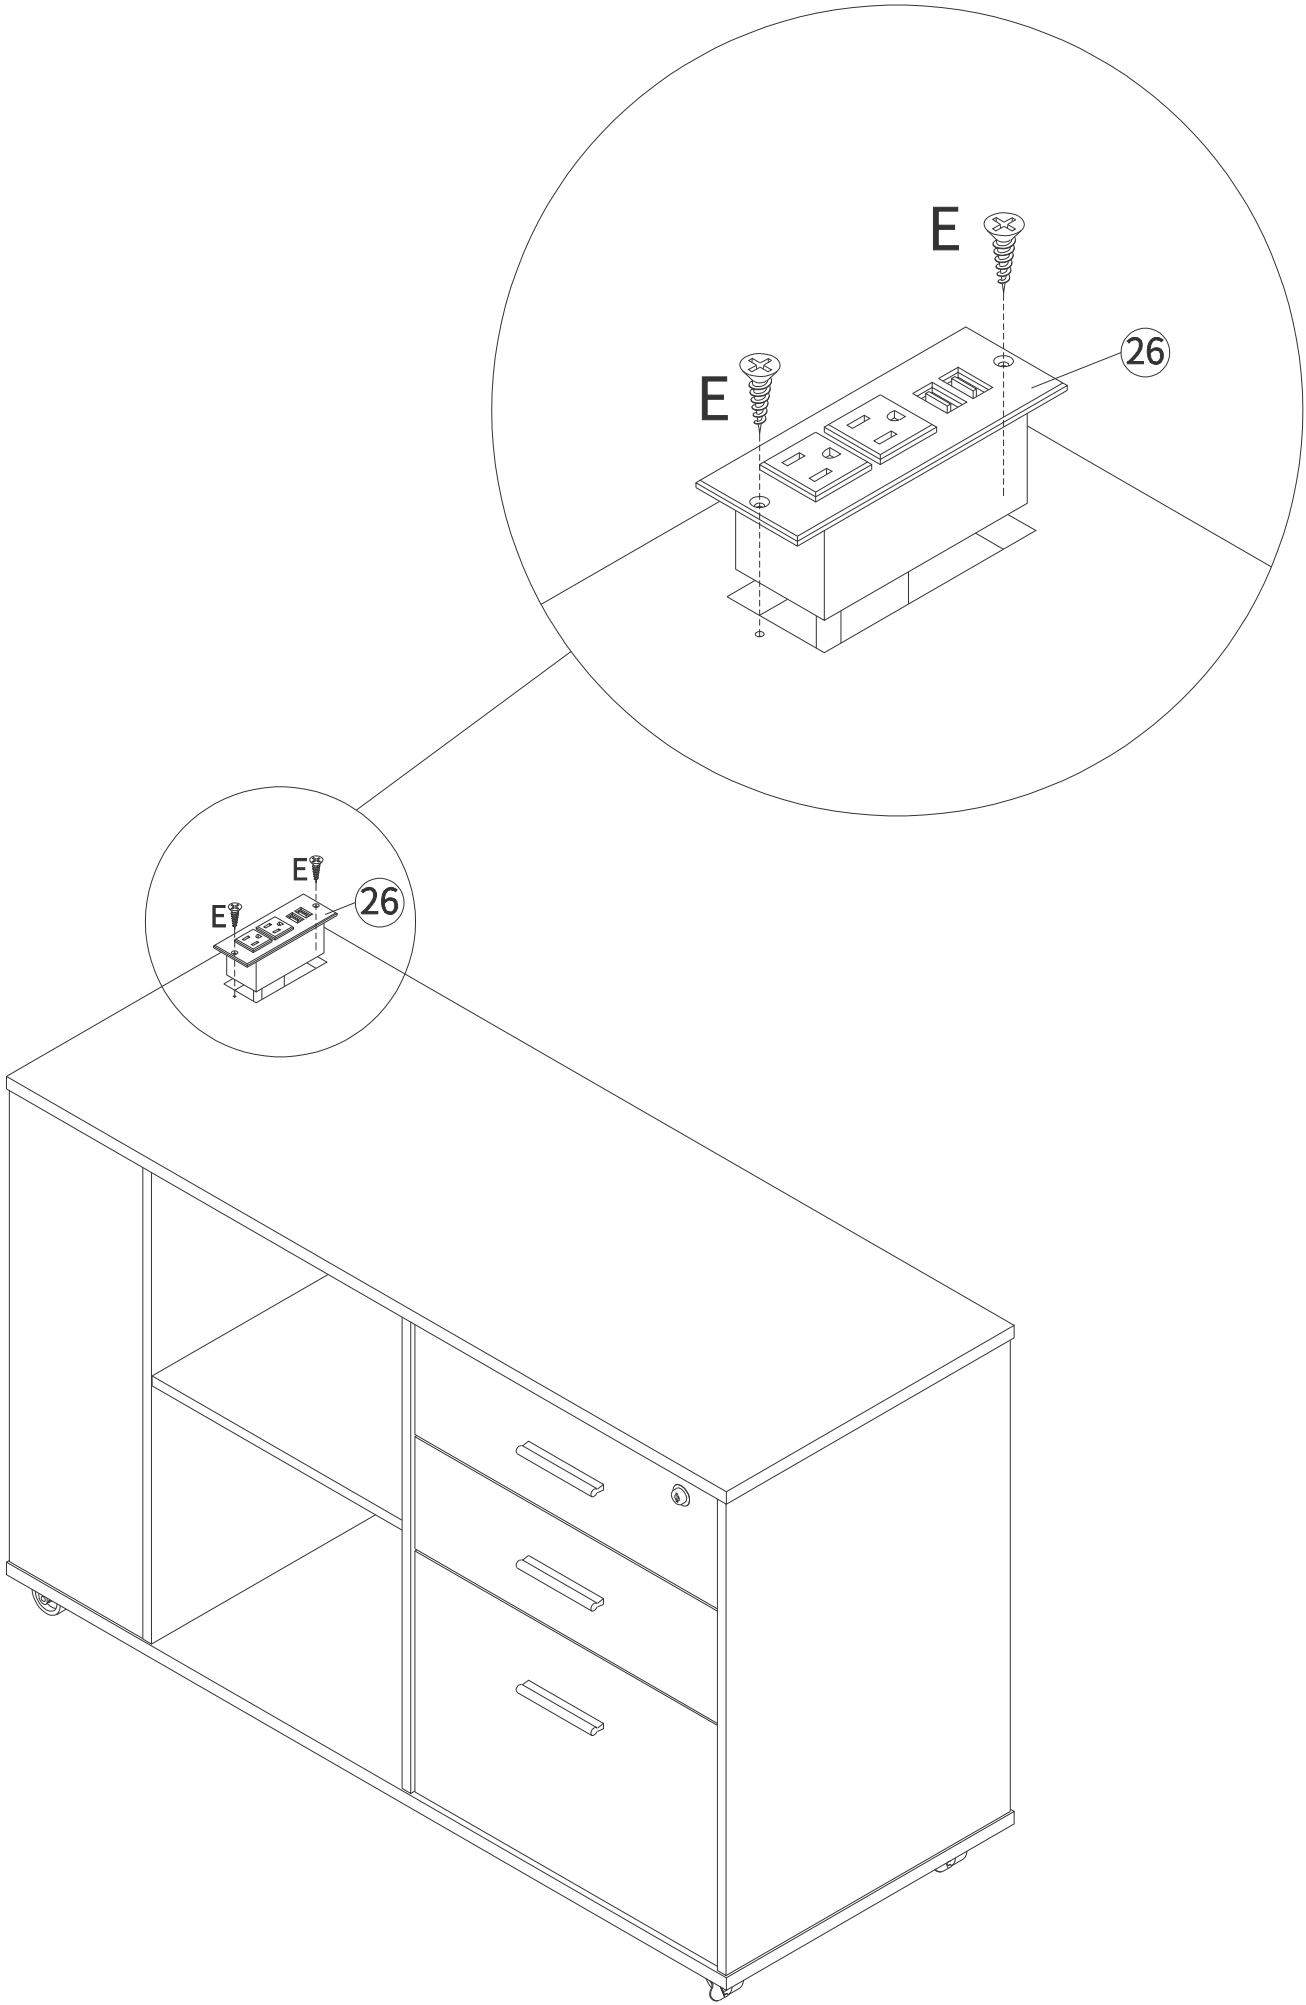

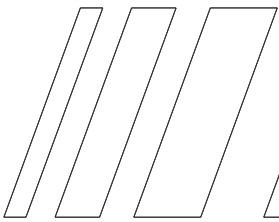

25

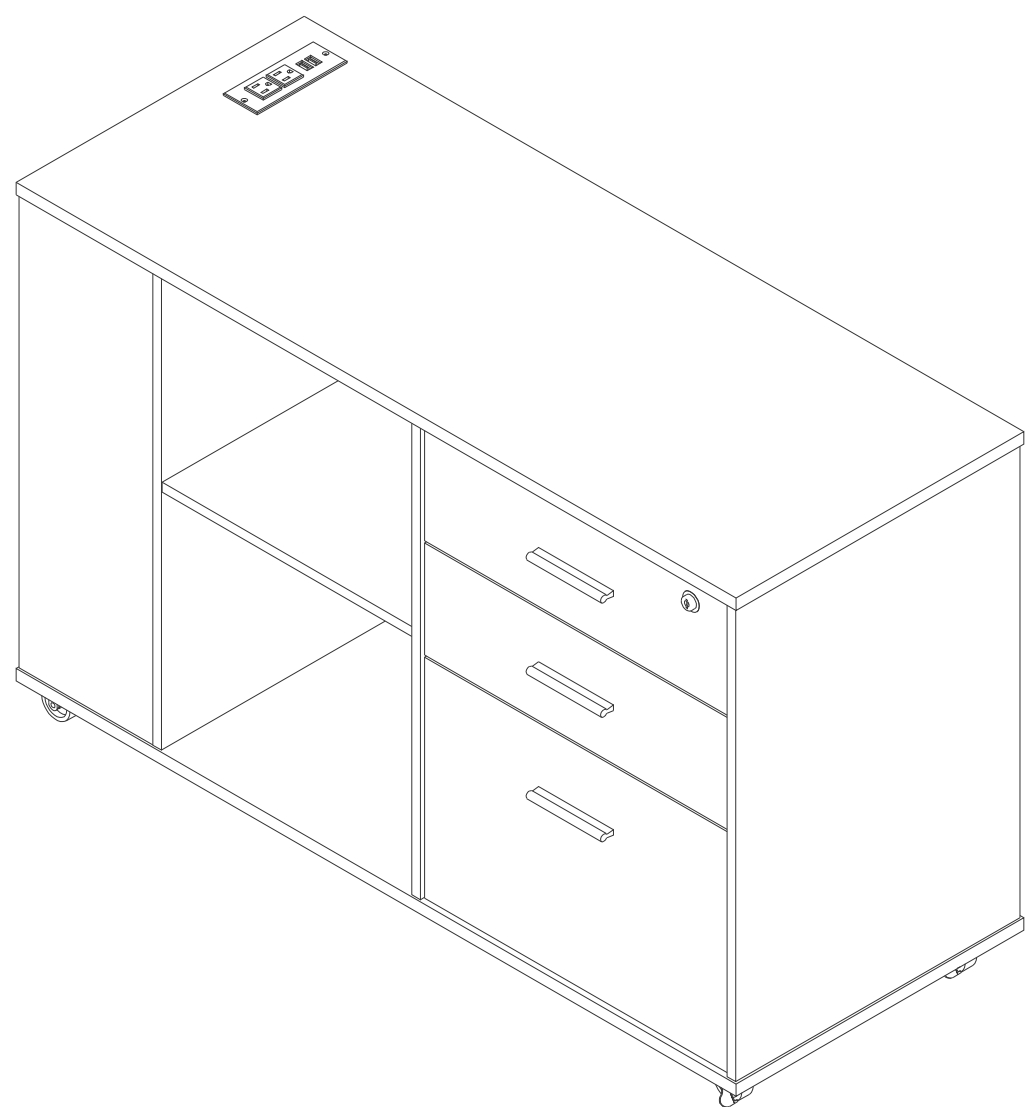

Installation Completed