


Assembly instructions

Product code: BW00378AAB

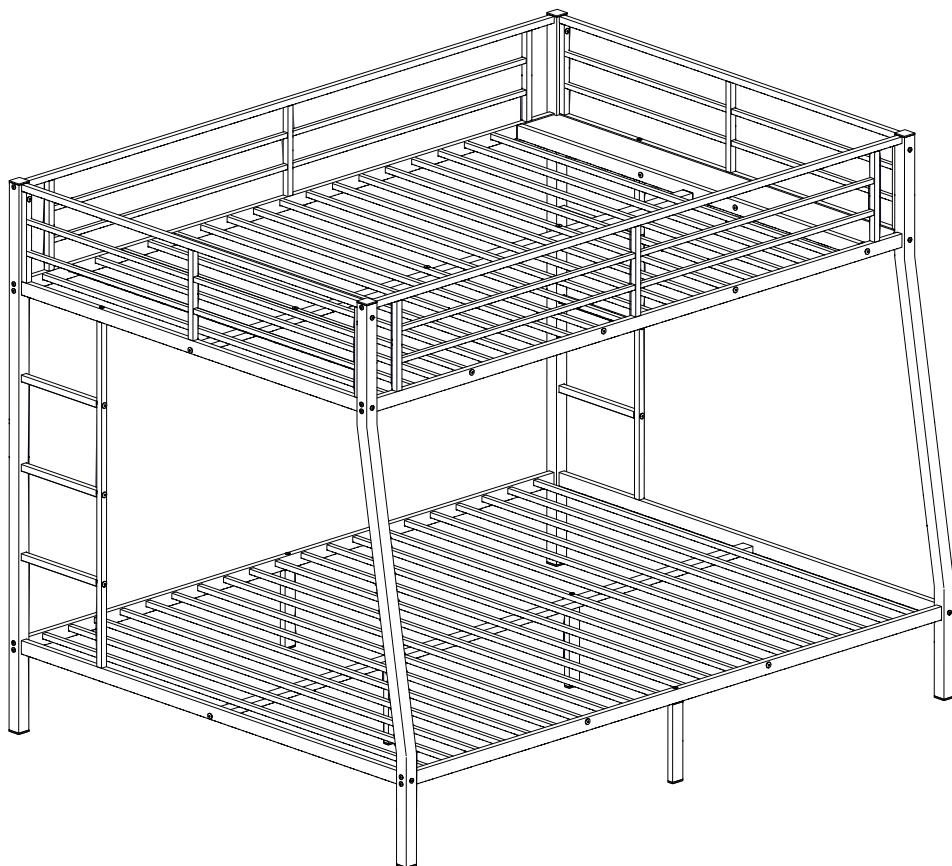

SAFETY WARNINGS AND GENERAL NOTES:

- 1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
 - 2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
 - 3. Do not allow children under 6 years of age to use the upper bunk.
 - 4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
 - 5. Do not allow horseplay on or under beds.
 - 6. Always prohibit jumping on the bed.
 - 7. Prohibit more than one person on upper bunk.
 - 8. Always use the ladder for entering and leaving the upper bunk.
 - 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
 - 10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
 - 11. Always use guardrails on both long sides of the upper bunk.
 - 12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- The use of water or sleep flotation mattresses is prohibited.
- 13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed ; for example, but not limited to, hooks, belts and jump ropes.
 - 14. Keep these instructions for future reference.
 - 15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
 - 16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
 - 17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Upper bed


Bed type	Length	Width	Thickness
Full Standard	74" - 75"	54 ½"	6" max

Bottom bed

Bed type	Length	Width	Thickness
Queen Standard	79" - 80"	60 ½"	8" max

- 18. SURFACE OF MATTRESS MUST BE AT LEAST 5"(127MM) BELOW THE UPPER EDGE OF GUARDRAILS.
- 19. Replacement Parts:
Replacement Parts, including additional guardrails, may be obtained from any of our (Shenzhen Yuefeng Zhiqi Technology Co., Ltd) dealers.








Component distribution preview

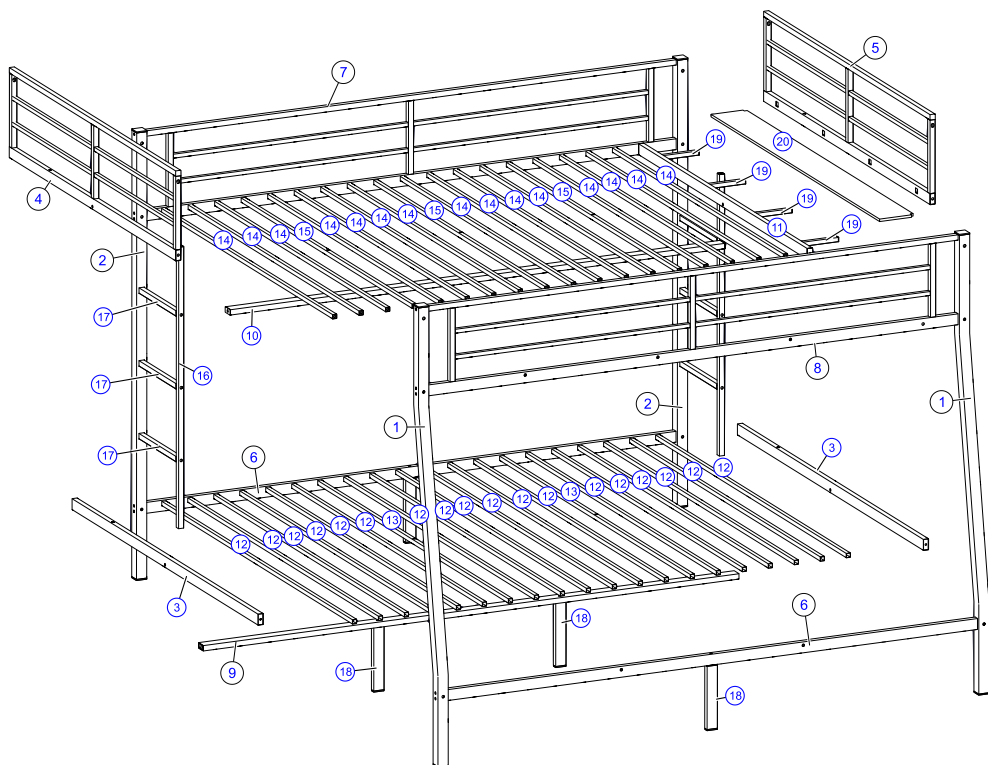


HARDWARE LIST



				
A	B	C	D	E
M8*55-41pcs	M8*35-12pcs	M8*30-13pcs	ΦM8*16-7 pcs	M8*15-6 pcs
				
T	Q	M	L	k
40*40F-4pcs	40*40FQ-4pcs	20*40-4pcs	M5*25-2pcs	2pcs

List of components


			 4-1pcs 			
1-2pcs	2-2pcs	3-2pcs	5-1pcs		6-2pcs	11-1pcs
					 9-1pcs 	
7-1pcs			8-1pcs		10-1pcs	
 	 	 	 			
12-18 pcs	13-2pcs	14-15 pcs	15-3pcs			
						
16-2pcs	17-6pcs	18-4pcs	19-4pcs	20-1pcs		




Step 1: Use hardware A, L and connect #2, #7, #6 and #18 together.

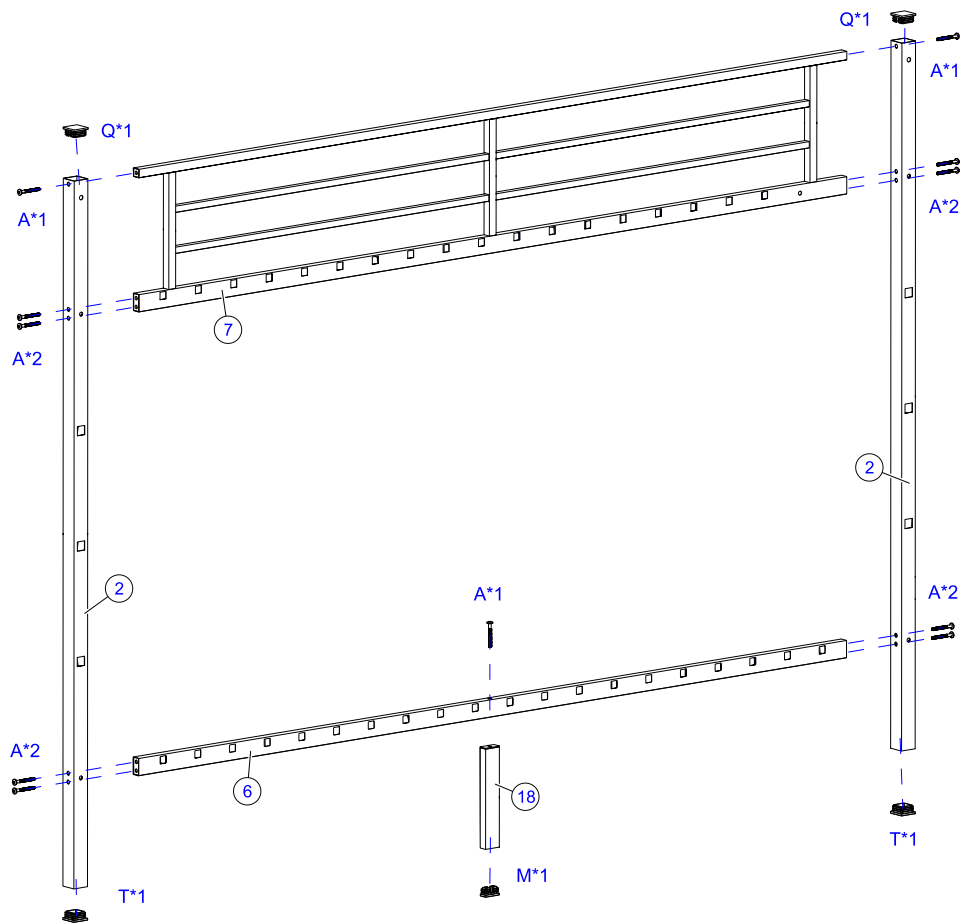


 2-2 pcs	 6-1 pcs	 7-1pcs	 T 40*40F-2pcs	 A M8*55-11pcs
		 18-1pcs	 Q 40*40FQ-2pcs	 M 20*40-1pcs

Step 2: Use hardware A and L to connect #1 and #8 together.

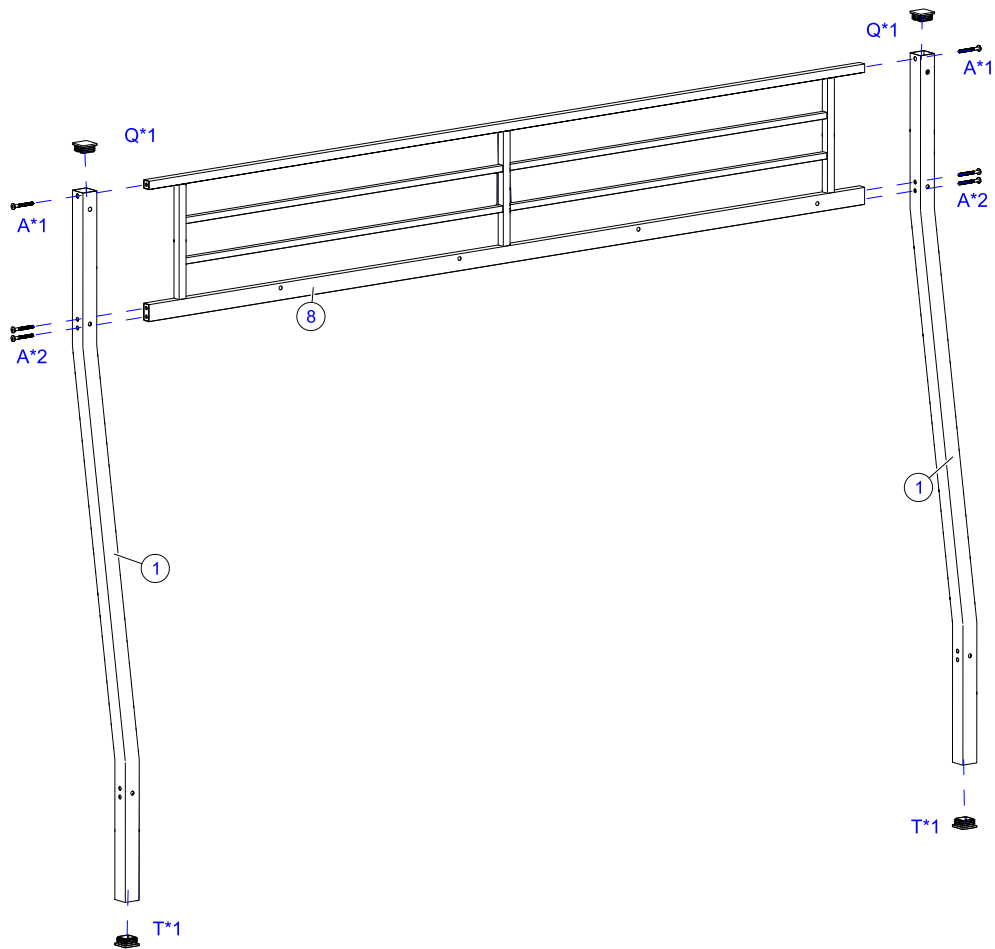


 1-2 pcs	 40*40F-2pcs	 A M8*55- 6 pcs
 8-1 pcs	 40*40FQ-2pcs	 L


Step 3: Use hardware A, B, L to connect #3 and #9 together.

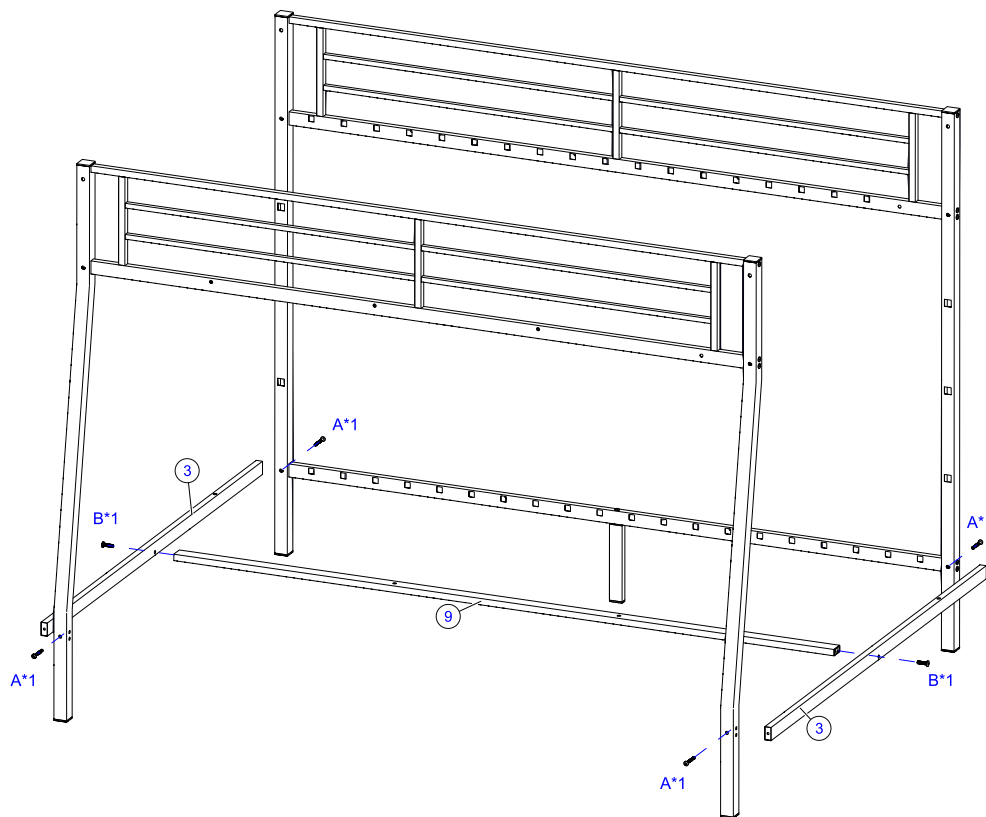



				
3-2pcs	9-1pcs	A M8*55- 4 pcs	B M8*35- 2 pcs	L

Step 4: Use #12 and #13 to insert into the corresponding square hole of #6 .

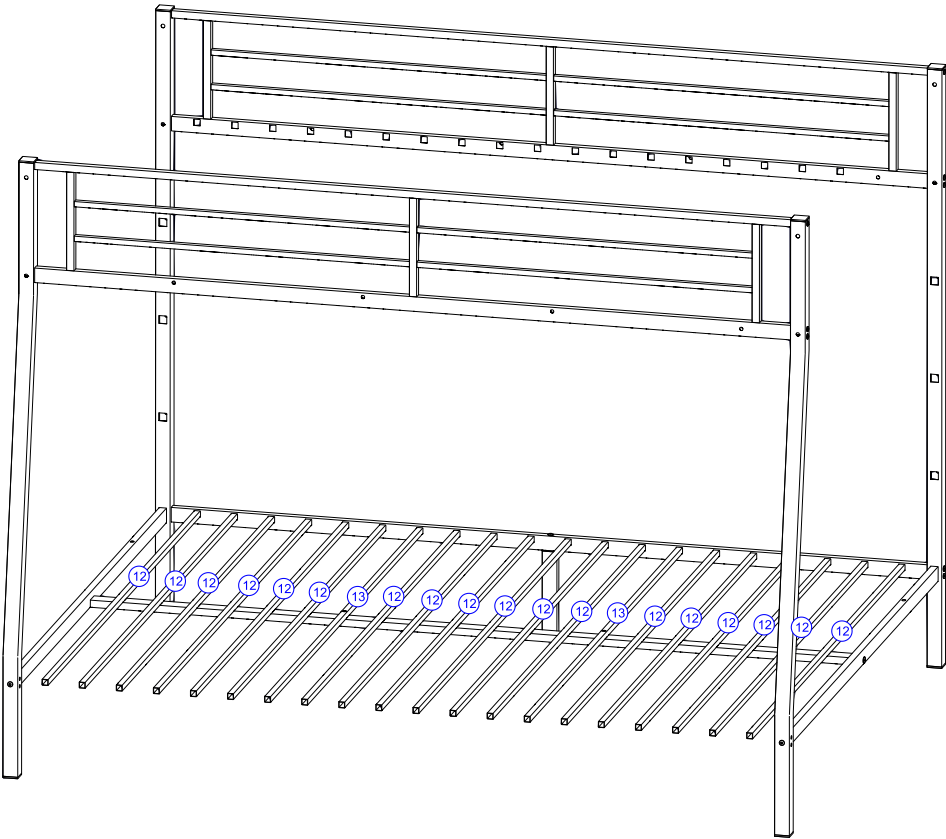

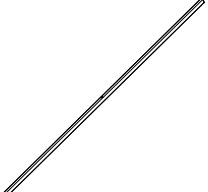  12-18 pcs	  13-2 pcs	
---	---	--

Step 5: Use hardware A, C, L to connect #6 and #13 together.

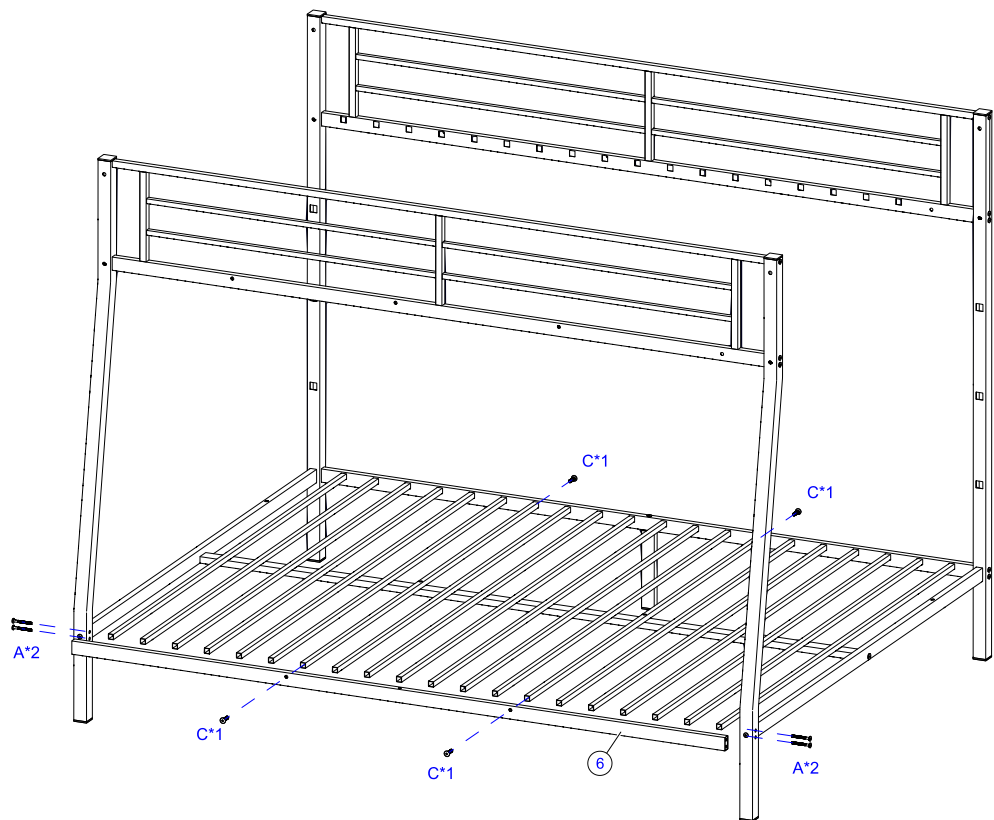

6-1pcs



A

M8*55- 4 pcs




C

M8*30-4 pcs




L

Step 6: Use hardware A, M, L to connect #18 together.

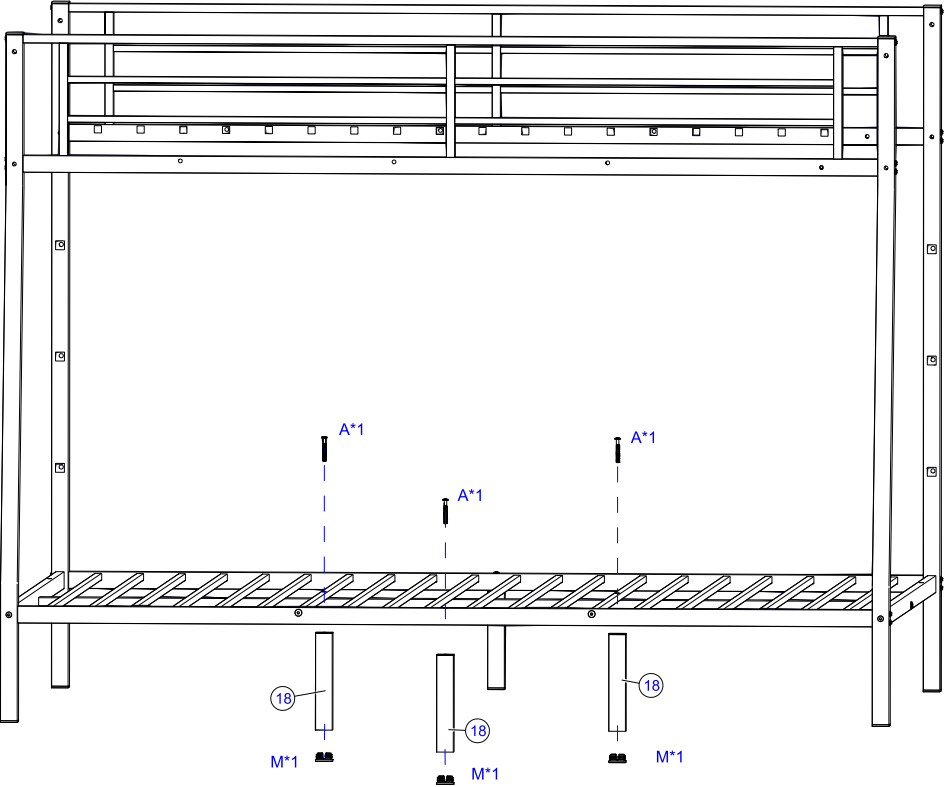


 18-3 pcs	 A M8*55- 3 pcs	 M 20*40-3pcs	 L
--------------	-----------------------	---------------------	-------

Step 7 : Insert #14 and #15 into the corresponding hole in order, and use hardware C and L to tighten the screws while inserting to prevent them from falling off.

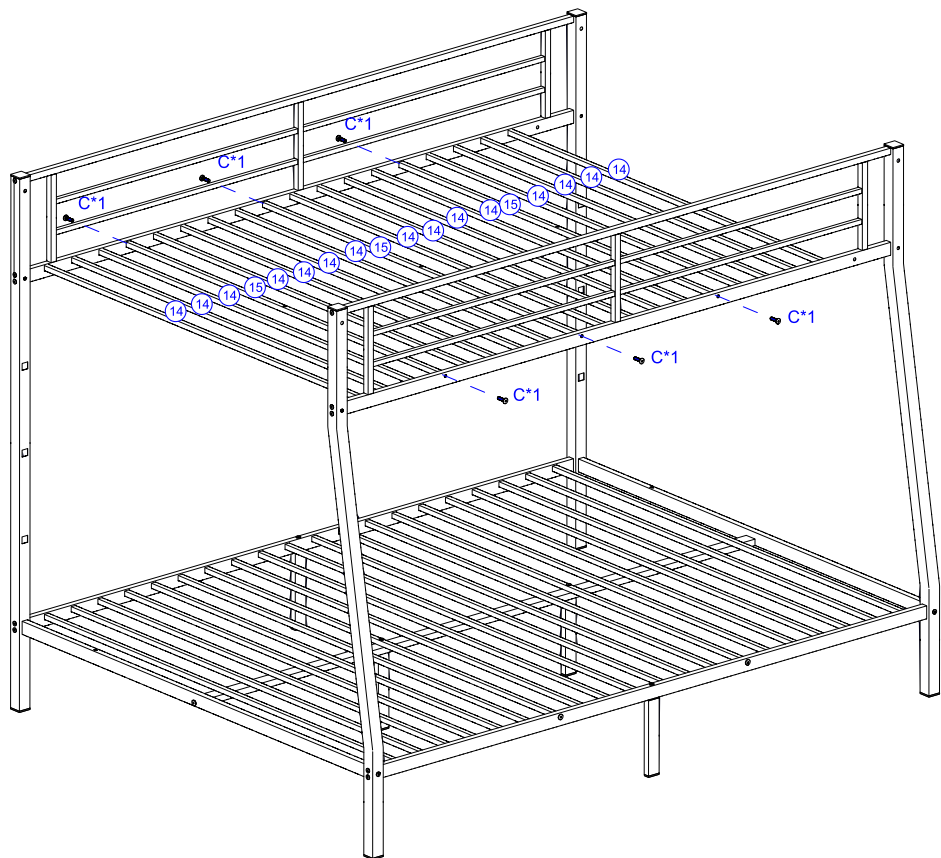


 14-15 pcs	 15-3 pcs	 C M8*30-6 pcs	 L
---	---	---	---

Step 8: Use hardware A, B, D, L to connect #4, #10, #11 together.

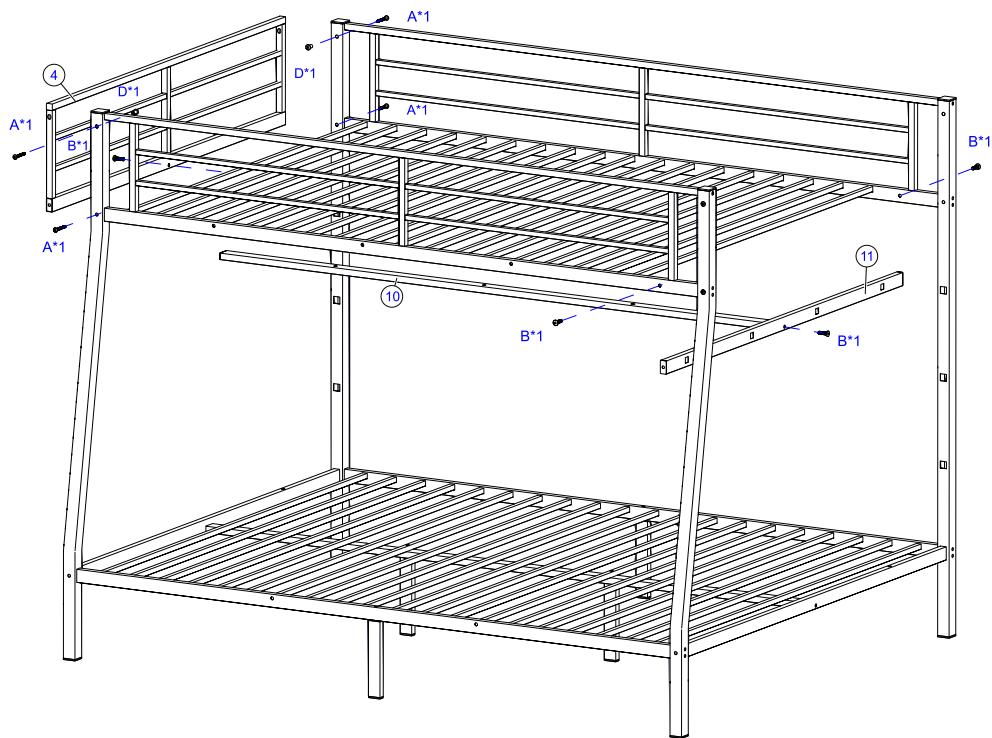

 4-1 pcs	 11-1 pcs	 B M8*35-4 pcs
 10-1 pcs	 A M8*55-4 pcs	 D ΦM8*16-2 pcs

Step 9: Use hardware C, D, L to connect #10, #15 together.

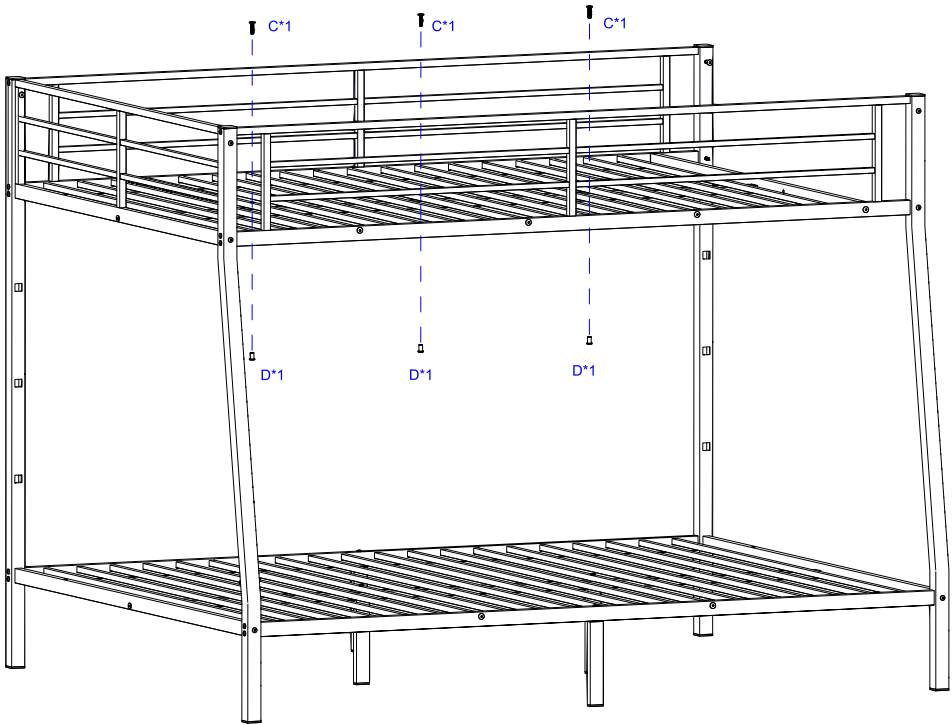

C

M8*30- 3 pcs




D



ΦM8*16- 3pcs




L

Step 10: Use hardware A, D, L to connect #5, #19, #20 together.

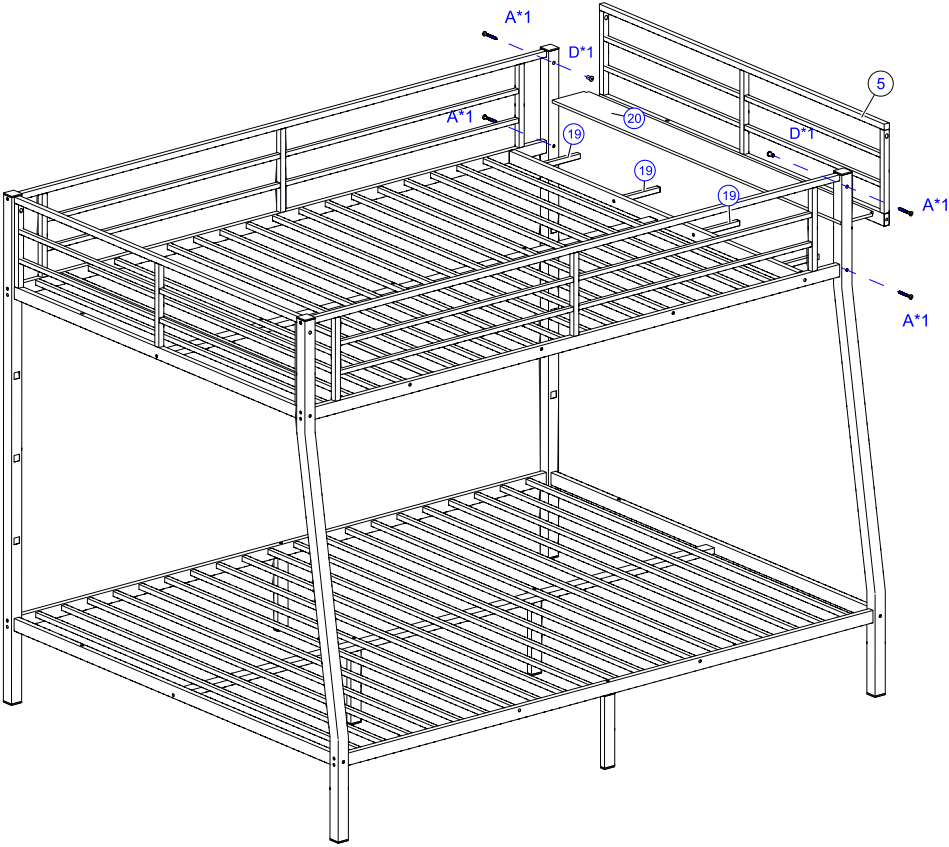

 5-1 pcs	 19-4 pcs	 L
 20-1 pcs	 A M8*55- 4 pcs	 D ΦM8*16-2 pcs



Step 11: Use hardware A, B, F to connect #16, #17 together.

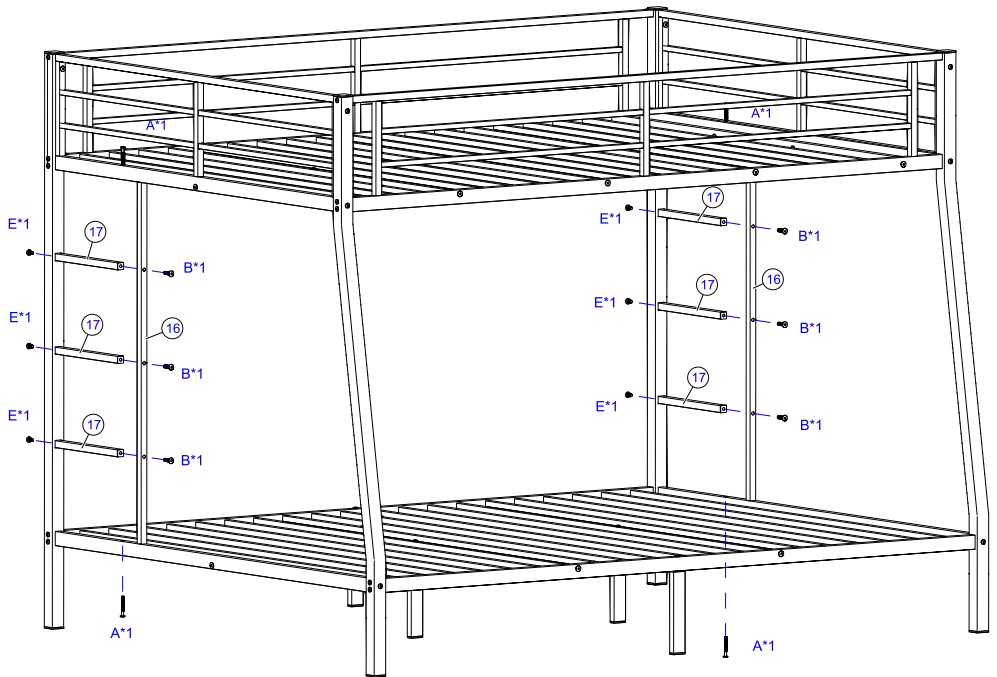

 16-2pcs	 17-6 pcs	 A M8*55-4 pcs	 B M8*35-6 pcs	 E M8*15-6pcs
---	---	--	--	--

Completed attic bed

Fix the wall, prevent movement,
selective installation

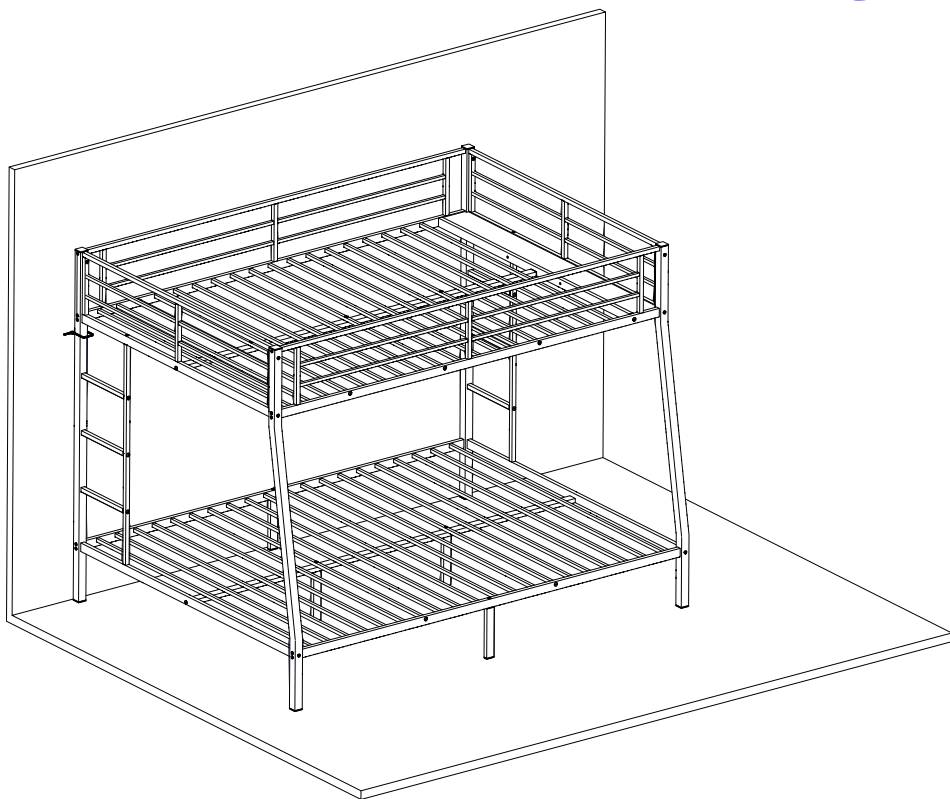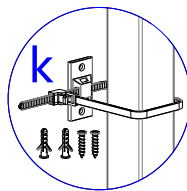

Note: Tighten all the steps before use,
thank you.



Recyclable garbage